


AKAI SERVICE MANUAL

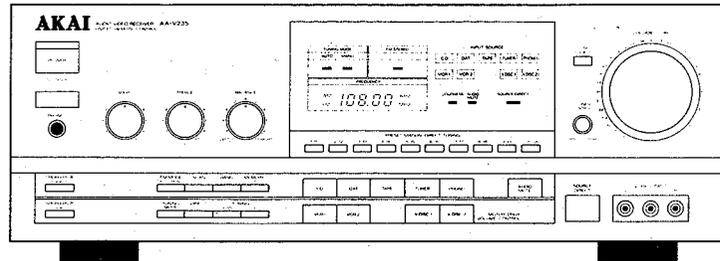

AUDIO VIDEO RECEIVER

MODEL AA-V235

SPECIFICATIONS


Amplifier section	
Power output (per channel)	
FTC (20 Hz to 20 kHz) . 60 W (8 ohms, 0.05%)	
Dynamic power output 80 W (8 ohms), 100 W	
(6 ohms), 125 W (4 ohms),	
120 W (2 ohms)	
Power bandwidth 10 Hz to 60 kHz/0.3%	
Total harmonic distortion . 0.03% (8 ohms, 1kHz)	
Phono max. input level 135 mV (MM)	
Frequency response 5 Hz to 100 kHz (+0 dB, -4 dB)	
Tone control	
Treble ±8 dB (10 kHz)	
Bass ±8 dB (100 Hz)	
Input sensitivity/Impedance	
Phono (MM) 2.0 mV/47 k ohms	
CD, Tape, etc 150 mV/47 k ohms	
V.Disc/VCR (Audio) 150 mV/47 k ohms	
V.Disc/VCR (Video) 1 Vp-p/75 ohms	
Output level/Impedance	
Tape rec out 150 mV/1 k ohms	
VCR (Audio) 150 mV/1 k ohms	
Monitor/VCR (Video) ... 1 Vp-p/75 ohms	
Damping factor 28.7 (8 ohms, 1 kHz)	
Residual noise 0.5 mV (8 ohms)	
S/N	
Phono (MM) 70 dB	
CD, Tape 90 dB (Source direct)	
Channel separation (IHF) . 60 dB (1 kHz)	
Required speaker impedance	
A or B 8 ohms to 16 ohms	
A and B 16 ohms	
Tuner section	
FM Tuner	
Tuning frequency range ... 87.5 MHz to 108.0 MHz	
Usable sensitivity 11.2 dBf	
Quieting sensitivity	
(IHF, S/N=50 dB) 16.2 dBf (Mono)/	
37.2 dBf (Stereo)	
Capture ratio 1.5 dB	
Selectivity (400 kHz) 60 dB	
Image rejection 85 dB	
IF rejection 90 dB	
Spurious rejection 80 dB	
AM suppression 60 dB	
S/N (IHF) 75 dB (Mono)/65 dB (Stereo)	
Harmonic distortion 0.1 % (Mono)/0.3 % (Stereo)	
Stereo separation (1 kHz) . 45 dB	
Frequency response 30 Hz to 15 kHz (±0.5 dB)	
AM Tuner	
Tuning frequency range ... 530 kHz to 1,610 kHz	
(For USA and Canada)	
531kHz to 1620kHz	
(For Europe)	
Usable sensitivity	
(AM Loop antenna) 300 μV/m	
Selectivity 25 dB	
Image rejection 45 dB	
IF rejection 35 dB	
S/N 40 dB	
T.H.D 1.0 %	
Power requirement 120 V, 60 Hz for USA and Canada	
220 V, 50Hz for Europe except UK	
Dimensions 425 (W) × 156 (H) × 368 (D)mm	
(16.7 × 6.1 × 14.5 inches)	
Weight 10.1 kg (22.2 lbs)	
Standard accessories	
FM antenna 1	
AM loop antenna 1	
FM antenna plug 1	
Remote control unit (RC-V235) 1	
Batteries for remote control unit (UM-3) 2	
Operator's manual 1	

* For improvement purposes, specifications and design are subject to change without notice.

★ SAFETY INSTRUCTIONS

PRECAUTIONS DURING SERVICING

1. Parts identified by the Δ (*) symbol parts are critical for safety. Replace only with parts number specified.
2. In addition to safety, other parts and assemblies are specified for conformance with such regulations as those applying to spurious radiation. These must also be replaced only with specified replacements.
Examples: RF converters, tuner units, antenna selector switches, RF cables, noise blocking capacitors, noise blocking filters, etc.
3. Use specified internal wiring. Note especially:
 - 1) Wires covered with PVC tubing
 - 2) Double insulated wires
 - 3) High voltage leads
4. Use specified insulating materials for hazardous live parts. Note especially:
 - 1) Insulation Tape
 - 2) PVC tubing
 - 3) Spacers (Insulating Barriers)
 - 4) Insulation sheets for transistors
 - 5) Plastic screws for fixing microswitch (especially in turntable)
5. When replacing AC primary side components (transformers, power cords, noise blocking capacitors, etc.), wrap ends of wires securely about the terminals before soldering.

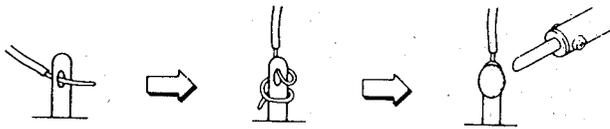

6. Observe that wires do not contact heat producing parts (heatsinks, oxide metal film resistors, fusible resistors, etc.).

7. Check that replaced wires do not contact sharp edged or pointed parts.
8. Also check areas surrounding repaired locations.
9. Use care that foreign objects (screws, solder droplets, etc.) do not remain inside the set.

SAFETY CHECK AFTER SERVICING

After servicing, make measurements of leakage-current or resistance in order to determine that exposed parts are acceptably insulated from the supply circuit. The leakage-current measurement should be done between accessible metal parts (such as chassis, ground terminal, microphone jacks, signal-input/output connectors, etc.) and the earth ground through a resistor of 1500 ohms paralleled with a 0.15 μ F capacitor, under the unit's normal working conditions. The leakage-current should be less than 0.5 mA rms AC. The resistance measurement should be done between accessible exposed metal parts and power cord plug prongs with the power switch (if included) "ON". The resistance should be more than 2.2 Mohms.

★ INFORMATION

SYMBOLS FOR PRIMARY DESTINATION

Alphabet indicates the destination of the units as listed below.

Symbols	Principal Destinations
A	USA
B	UK
C	Canada
E	Europe (except UK)
J	Japan
S	Australia
V	W. Germany only
U	Universal Area
Y*	Custom version

I. CONTROL

1-1 FRONT PANEL

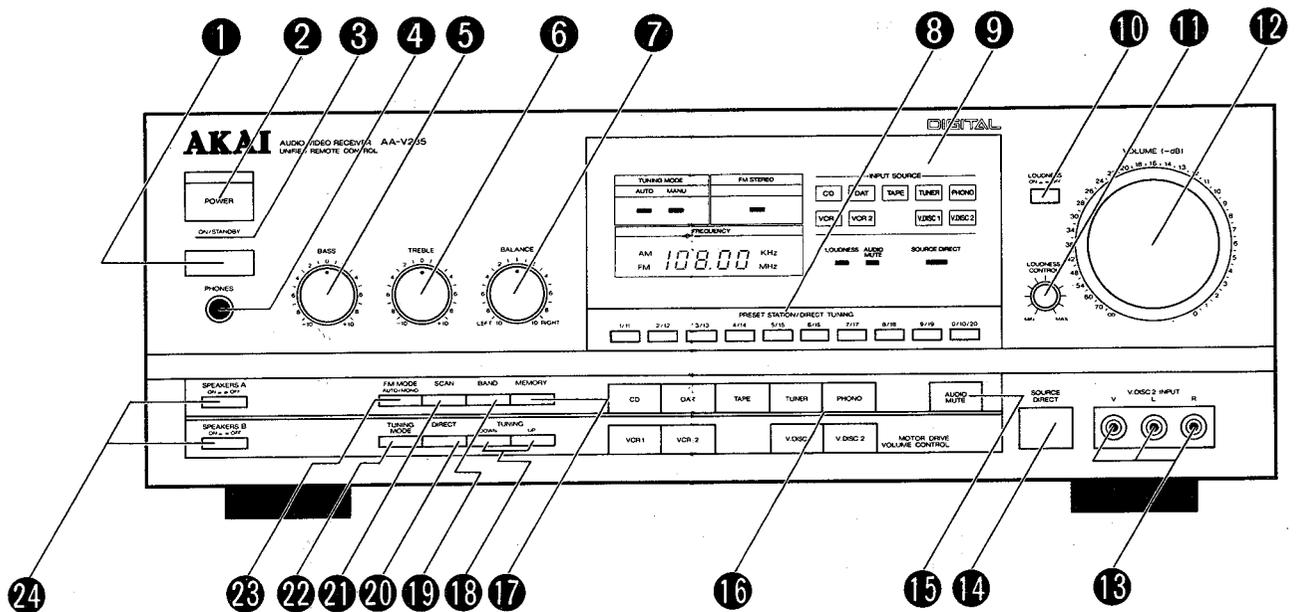


Fig. 1-1

- 1 Remote Sensor Window**
To receive the remote control signal from the RC-V235 provided remote control unit.
Keep away from strong light and direct sunlight as this may interfere with the remote control function.
- 2 POWER Button and Indicator**
To turn the power on and off.
The indicator will light when the power is on.
- 3 ON/STANDBY Indicator**
Tells you the power cord is connected to a household AC outlet.
- 4 PHONES Jack**
For connection of headphones.
- 5 BASS Tone Control**
To adjust the low note (bass) level.
When set to 0, the control is ineffective.
- 6 TREBLE Tone Control**
To adjust the high note (treble) level.
When set to 0, the control is ineffective.
- 7 BALANCE Control**
To adjust the left and right channel balance.
Normally set the control to 0.
- 8 PRESET STATION/DIRECT TUNING buttons**
To memorize and recall FM and AM stations and for direct tuning of stations.
- 9 FL (Fluorescent) Display and LED (Light Emitting Diode) Indicators**
Tell you what the receiver is doing.
- 10 LOUDNESS Switch (ON/OFF)**
To turn the loudness system on and off.
- 11 LOUDNESS Control (MIN/MAX)**
To increase or decrease the loudness effect.
- 12 VOLUME Control (-dB: minus decibel) and Indicator**
To adjust the volume level. The 0 dB (zero decibel) position is the maximum volume output of the receiver.
The indicator will light when the power is turned on.
The surround speaker level can be adjusted at the same time when the surround system is engaged.
- 13 V.DISC 2 Input Jacks (L: Left/R: Right/V: Video)**
For connection of video equipment for playback purposes.
- 14 SOURCE DIRECT Switch**
To select the playback operation mode. If you wish to use the BASS, TREBLE or BALANCE controls, set the switch to off.
- 15 AUDIO MUTE Button**
To instantly reduce the playback volume by 20 dB (1/10) from the level that the VOLUME control is set at.
- 16 INPUT Select Buttons (PHONO, TAPE, DAT, TUNER, CD, VCR 1, VCR 2, V.DISC 1, V.DISC 2)**
To select the audio or video source you wish to playback.
- 17 MEMORY Button**
To store tuned in stations at PRESET STATION button.
- 18 TUNING Control Button (UP/DOWN)**
To tune in stations manually or automatically.
- 19 BAND Button**
To select between the FM and AM band.
- 20 DIRECT Button**
To tune in a stations directly.
- 21 SCAN Button**
To start automatic preset station scanning.
- 22 TUNING MODE Button**
To select between the automatic or manual tuning modes.
- 23 FM MODE Button**
To select between the stereo and monaural mode during FM reception.
- 24 SPEAKERS A/B Switch (ON/OFF)**
To select the speaker system.
For headphone listening, set both switches to OFF. When using two pairs of speaker systems at the same time, set both switches to ON.

1-2 On the FL (Fluorescent) display and LED (Light Emittig Diode) Indicators

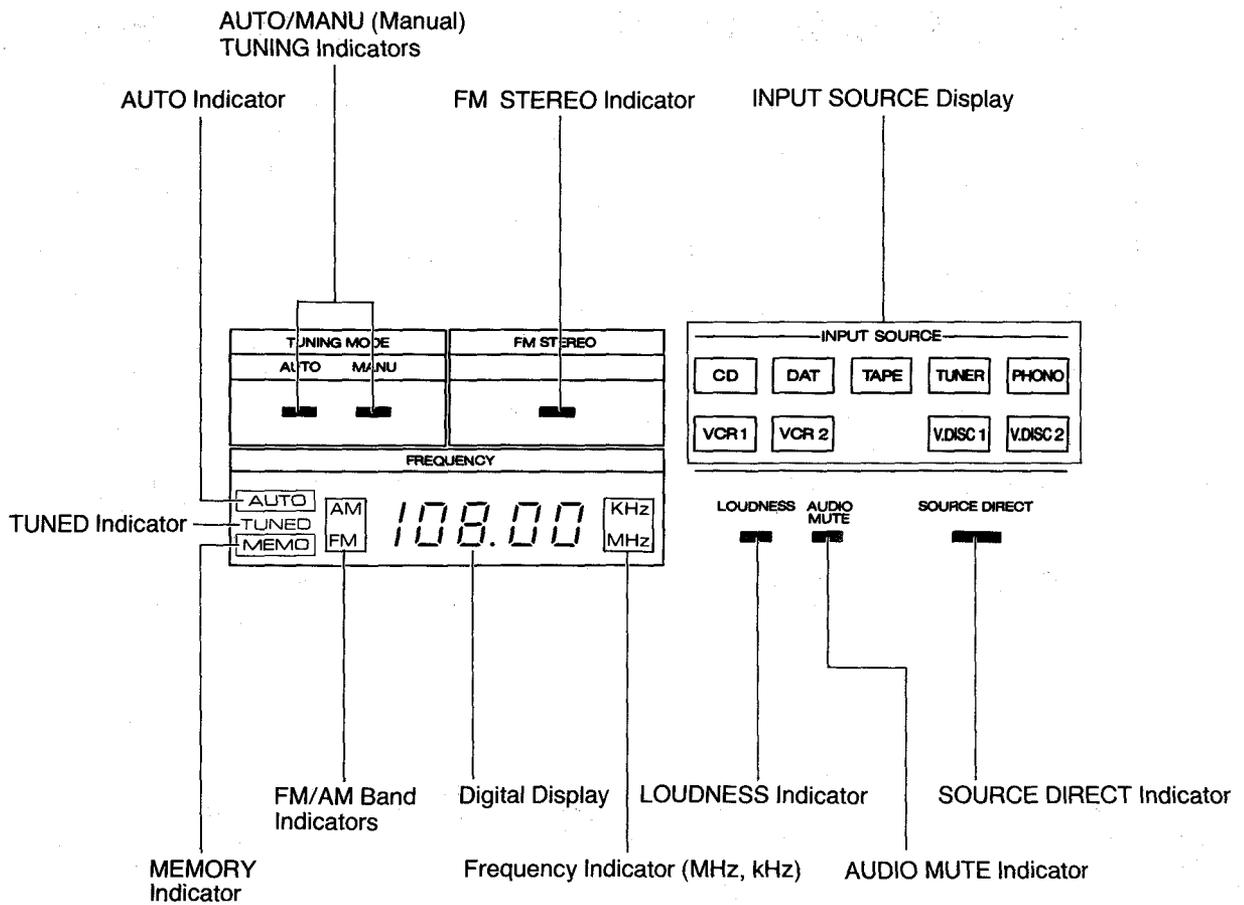


Fig. 1-2

1-3 REMOTE CONTROL UNIT

The remote control can be used to conveniently control all of the receiver's functions as well as basic control of Akai video cassette recorders and Mitsubishi TVs.

Transmitting window

POWER AUDIO Button

To turn the power of the receiver on and off.

POWER VIDEO Button

To turn the power of an Akai video cassette recorder on and off.

POWER TV Button

To turn the power of a Mitsubishi TV on and off.

CD Player Control Buttons

For control of an Akai CD player.

Tuner Control Buttons


For control of the receiver's tuner.

INPUT SOURCE Select Buttons

To select the audio or video source.

AUDIO MUTE Button

To turn the audio mute system on and off.

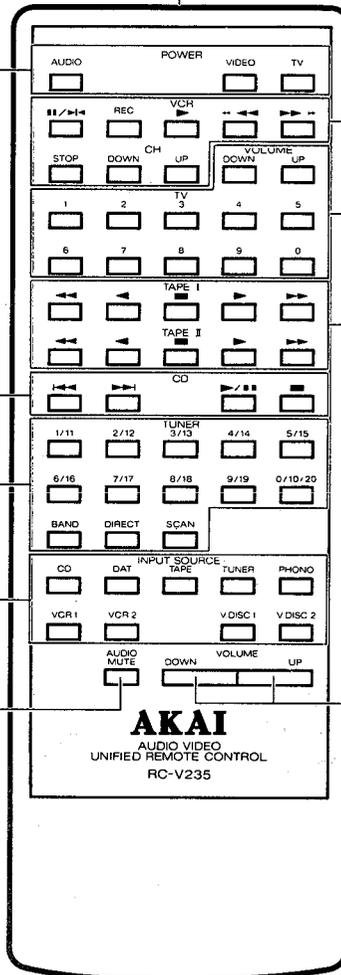

VCR (Video Cassette Recorder) Control Buttons

For control of an Akai Video cassette recorder.

TV Control Buttons

For control of a Mitsubishi TVs.

Tape Deck Control Buttons

For control of an Akai cassette deck.

VOLUME Control Buttons (UP/DOWN)


To adjust the playback volume.

Fig. 1-3


II. DISASSEMBLY

In case of trouble, etc, necessitating dismantling in the order shown in the photographs.
Reassemble in reverse order.


1. Removal of UPPER COVER

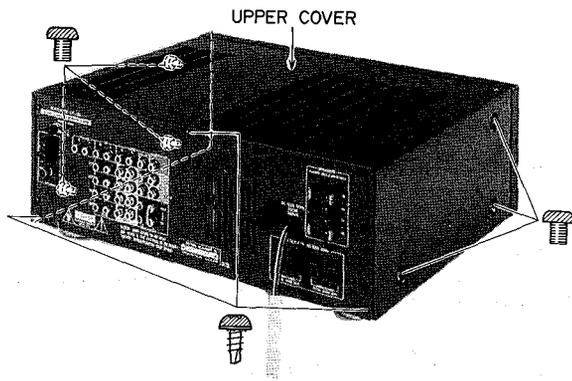


3. Removal of FRONT PANEL BLOCK

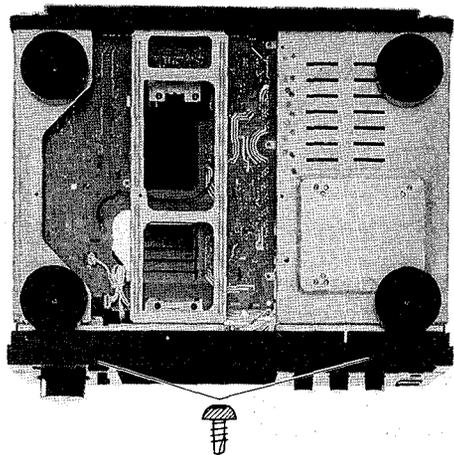

2. Removal of BOTTOM PLATE

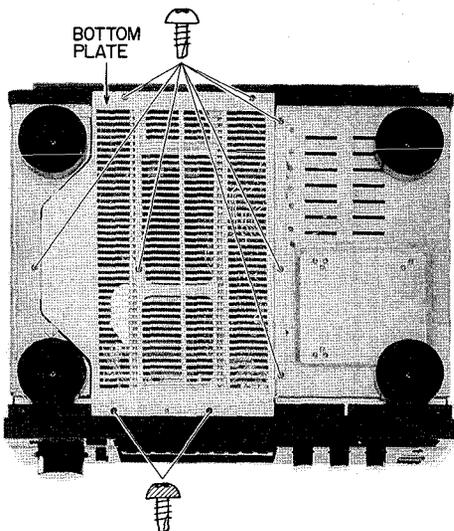

4.

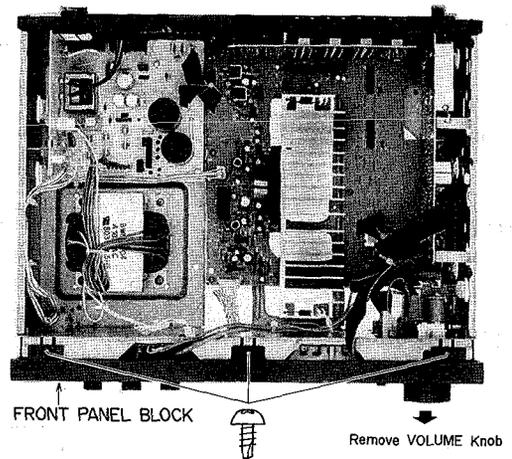

III. PRINCIPAL PARTS LOCATION

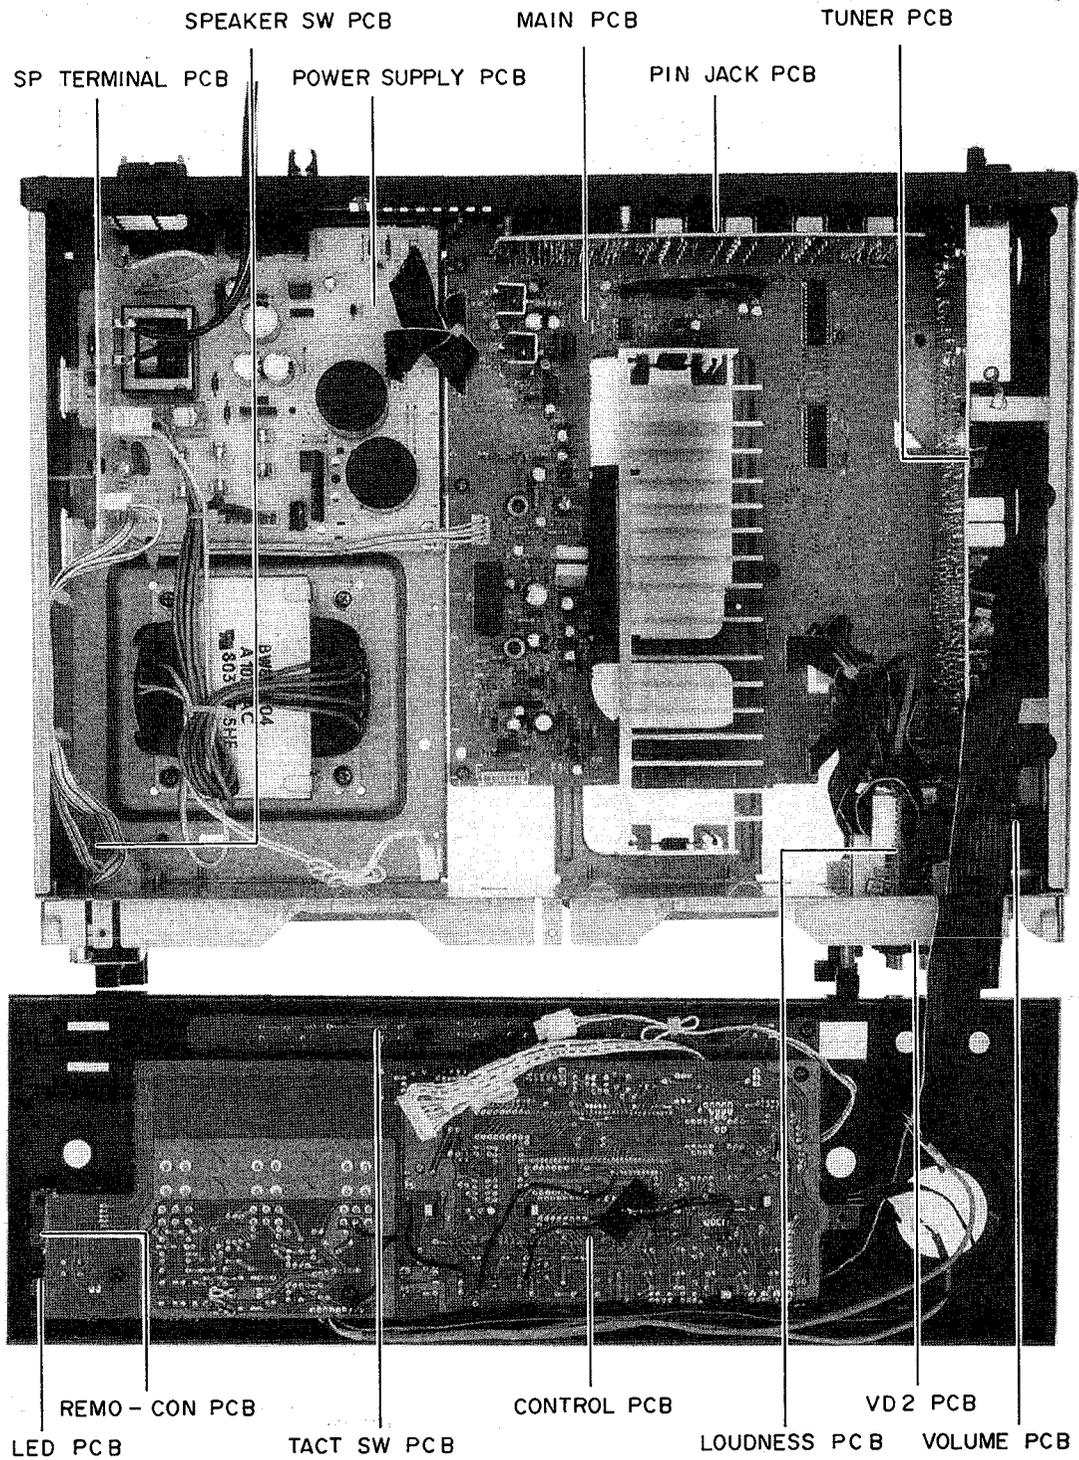


Fig. 3-1

IV. ELECTRIC ADJUSTMENT

4-1. INSTRUMENT CONNECTIONS

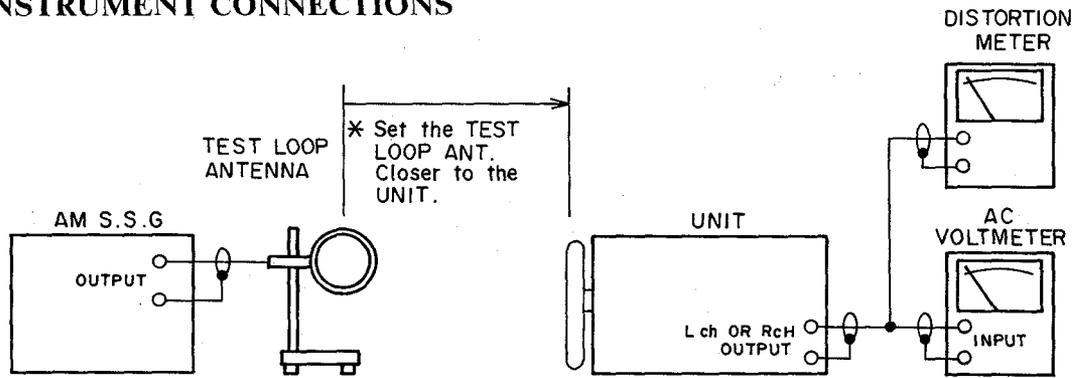


Fig. 4-1 Instrument Connections for AM Section Adjustment

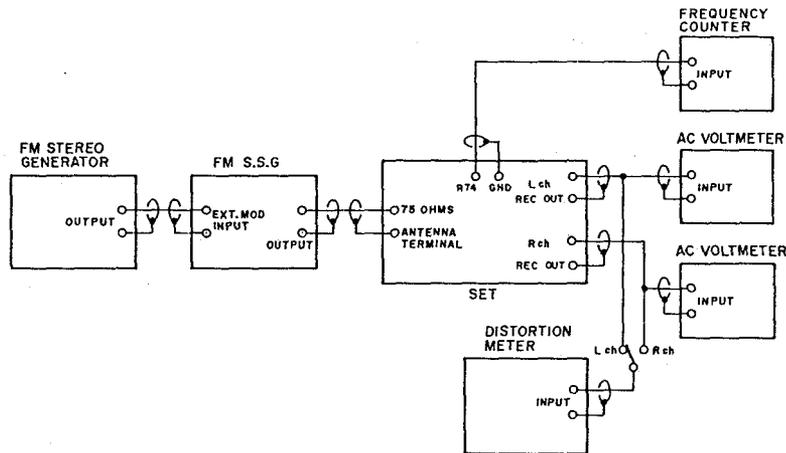


Fig. 4-2 Instrument Connection for FM Section Adjustment

4-2. HOW TO CALL THE PRESET TUNING FREQUENCY FOR THE ADJUSTMENT

Short the circuit momentarily two Jumper wires JW6 and JW7 on the TUNER PCB as shown Fig. 4-3, then Select required tuning frequency by pushing one of the PRESET STATION button on the FRONT PANELA.

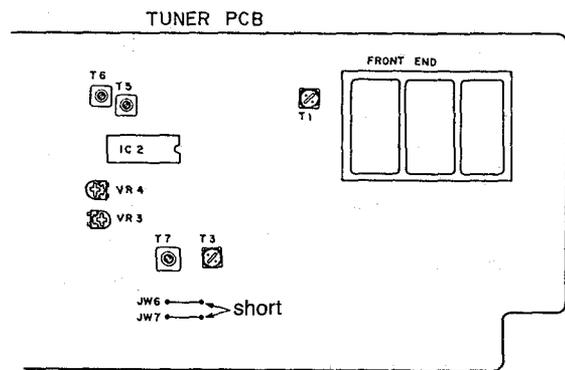


Fig. 4-3

*The internal tuning frequency preset memory is Sert as below.



PRESET STATION	1 ch	2 ch	3 ch	4 ch	5 ch	6 ch	7 ch	8 ch	9 ch	10 ch
A, C model	FM 88.00MHz	FM 90.00MHz	FM 98.00MHz	FM 100.00MHz	FM 106.00MHz	FM 108.00MHz	FM 95.70MHz	FM 107.70MHz	AM 530KHz	AM 600KHz
E model	FM 88.00MHz	FM 90.00MHz	FM 98.00MHz	FM 100.00MHz	FM 106.00MHz	FM 108.00MHz	FM 95.75MHz	FM 107.75MHz	AM 531KHz	AM 603KHz
PRESET STATION	11 ch	12 ch	13 ch	14 ch	15 ch	16 ch	17 ch	18 ch	19 ch	20 ch
A, C model	AM 1000KHz	AM 1400KHz	AM 800KHz	AM 1300KHz	AM 1610KHz	AM 1190KHz	FM 92.00MHz	FM 94.00MHz	FM 96.00MHz	FM 102.00MHz
E model	AM 999KHz	AM 1404KHz	AM 801KHz	AM 1305KHz	AM 1602KHz	AM 1197KHz	FM 89.30MHz	FM 90.60MHz	FM 90.90MHz	FM 96.50MHz

5-3. TUNER ADJUSTMENT

NOTES:

1. Set SSG to 75kHz deviation, 1kHz of each.
2. Confirm that the sensitivity margin between low and high range sensitivities are within 6dBμ, otherwise readjust low and high range sensitivity.
3. Tunes only noise without interference from broadcasting in step 3 (CENTER VOLTAGE).

STEP	ADJUSTMENT
1.	SSG Freq./Att
2.	Tuning freq.
3.	Test point, Adjustment part
4.	Result, Remarks

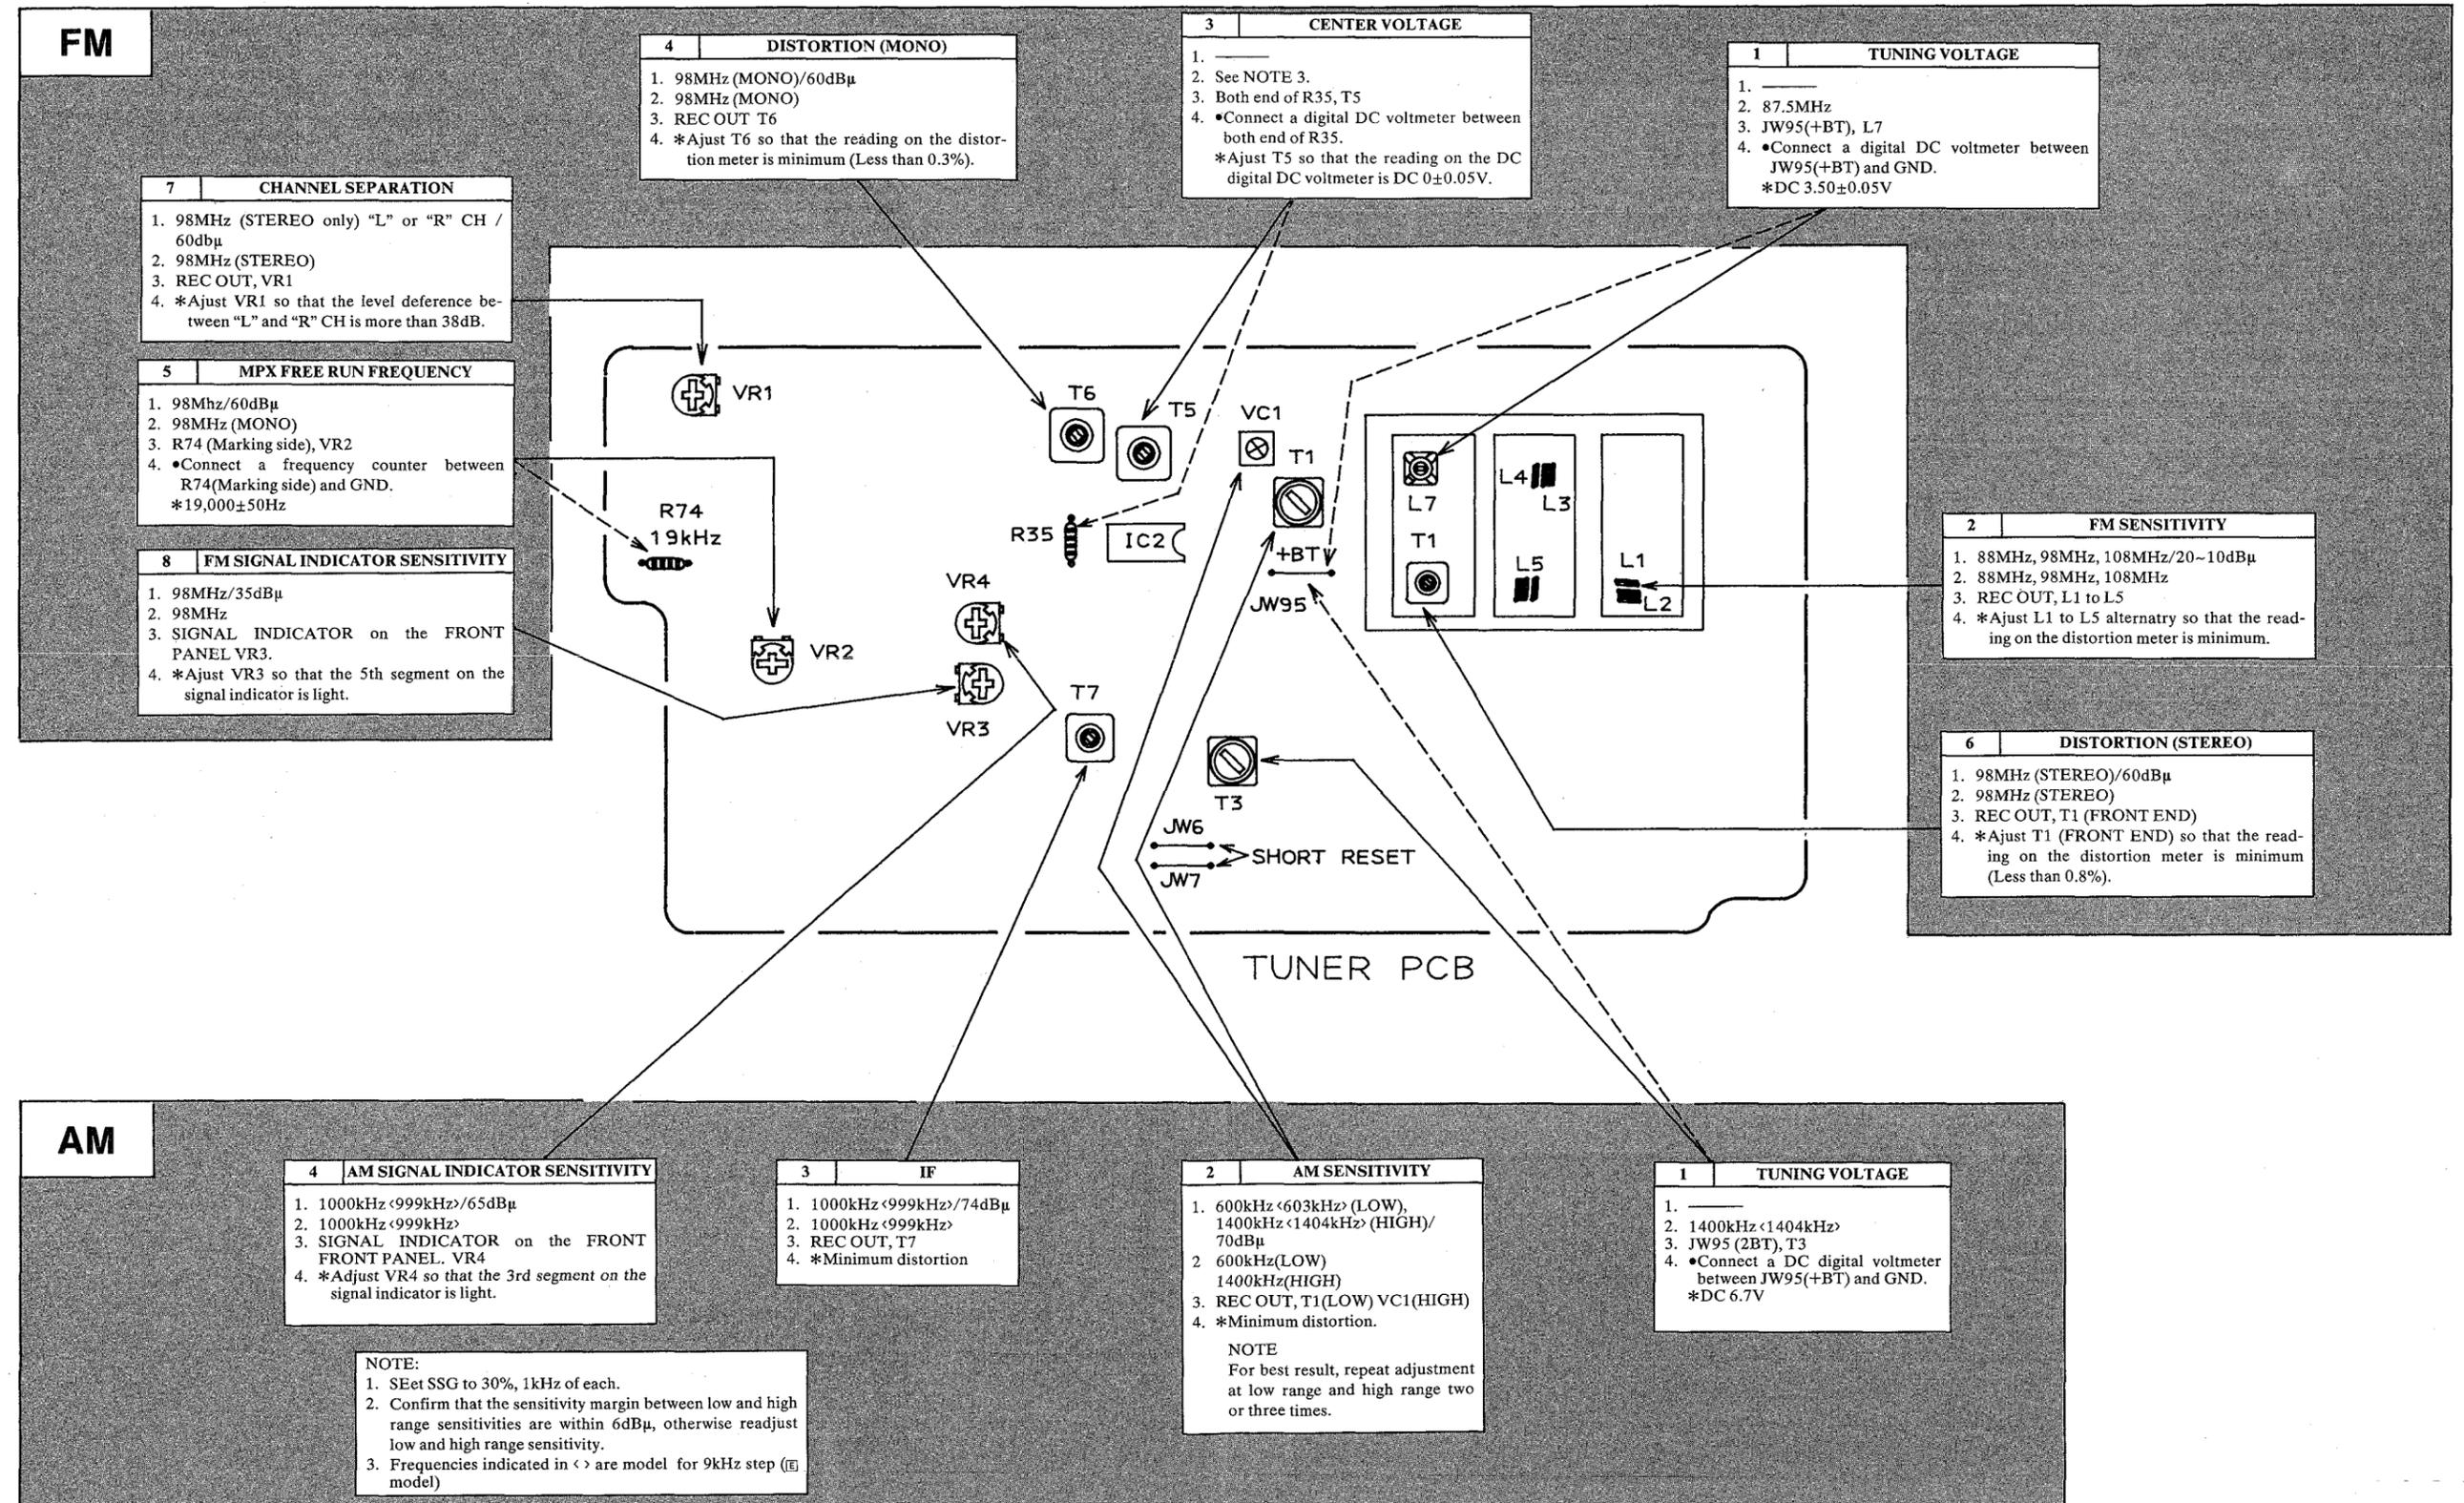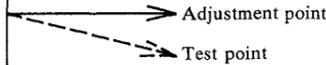

VI. PARTS LIST

ATTENTION

- When placing an order for parts, be sure to list Part No., Model No. and the description of each part. Otherwise, the non-delivery of the part or the delivery of a wrong part may result.
- Please make sure that Part No. is correct when ordering. If not, a part different from the one you ordered may be delivered.
- Since the parts shown in Parts List of Preliminary Service Manual may have been the subject of changes, please use this Parts List for all future reference.

HOW TO USE THIS PARTS LIST

- This Parts List lists those parts which are considered necessary for repairs. Other common parts, such as resistors and capacitors, are listed in the "Common List for Service Parts" from which these parts should be selected and stocked.
- The Recommended Spare Parts List shows those parts in the Parts List which are considered particularly important for service.
- Parts not shown in the Parts List and "Common List for Service Parts" will not in principle be supplied.
- How to read the Parts List.

a) Mechanism Block

2. HEAD BASE BLOCK

REF. NO.	PART NO.	DESCRIPTION
1	BH-T2023A320A	HEAD BASE BLOCK
2	HP-H2206A010A	HEAD R/P PR4-8FU C
3	ZS-477876	PAN20×03STL CMT
4	ZS-536488	BID20×08STL CMT
5	ZG-402895	SP CS ANGLE ADJUST

SP (Service Parts) Classification

This number corresponds with the individual parts index number in that figure.

b) PC Board

6. MAIN PC BOARD

REF. NO.	PART NO.	DESCRIPTION
IC1	EI-324536	IC HD14049BP
IC2	EI-336801	IC MB8841-564M
C1A	EC-338399	C MMY V 223M 250AC [U,E,B,S]
C1B	EC-350949	C MMY V 223M 250DC [J]
C1C	EC-338397	C MMY V 223M 125AC [C,A]
X1	EI-318384	OSC X'TAL NC-18C

Symbols for primary destination

[A]: AAL (U.S.A) [S]: SAA (Australia)
 [B]: BEAB (England) [U]: U/T (Universa Area)
 [C]: CSA (Canada) Area
 [E]: CEE (Europe) [V]: VDE (W. Germany)
 [J]: JPN (Japan) [Y]: Custom Version

SP (Service Parts) Classification

These reference symbols correspond with component symbols in the Schematic Diagrams.

The available PC Board Blocks are listed separately.

- When Part No. is known, Parts Index at end of Parts List can be used to locate where that part is shown in Parts List by its Reference No. listed at right of Part No.

WARNING

△(*) INDICATES SAFETY CRITICAL COMPONENTS. FOR CONTINUED SAFETY, REPLACE SAFETY CRITICAL COMPONENTS ONLY WITH MANUFACTURER'S RECOMMENDED PARTS.

AVERTISSEMENT

△(*) IL INDIQUE LES COMPOSANTS CRITIQUES DE SÉCURITÉ. POUR MAINTENIR LE DEGRÉ DE SÉCURITÉ DE L'APPAREIL, NE REMPLACER QUE DES PIÈCES RECOMMANDÉES PAR LE FABRICANT.

1. RECOMMENDED SPARE PARTS

We suggest you to stock the following Recommended Spare Part items listed below since they can cover most of the routine service.

Ref. No.	Part No.	Description	Ref. No.	Part No.	Description
			58	EJ-349061	TERMINAL PUSH YKD21-0025 P 8P [SPEAKER TERMINAL]
			59	EM-384374J	IND FL 8-BT-29ZAK CHARACTER
			60	*EQ-347611	RELAY POW G2R-1112PFD-V 1NO 12V
			61	EQ-382352J	RELAY POW G5R-2282P 2NO 24V
			62	*ER-318647	R FUSE H S10 ERD2FC 1/4W 4R7J
			63	*ER-356573	R SD ANTI-STATIC 1/2W 225K [C,A]
1	*BT-384281J	TRANS POW A1028S-CA [C,A]	64	ES-384302J	SW PUSH ESB-62 06-02 [LOUDNESS SW]
2	*BT-387992J	TRANS POW A1028S-E [E]	65	ES-383041J	SW PUSH ESB-62931 2-04-02N [SOURCE DIRECT SW]
3	*BT-384247J	TRANS POW A1029-AC [C,A]	66	ES-384346J	SW PUSH SPUL23 04-02 2THRPW N [SPEAKER SELECTOR SW]
4	*BT-387993J	TRANS POW A1029-E [E]	67	ES-349474	SW TACT SKHHAM004A [1/11]
5	ED-376111	D LED SE303AC INFRARED	68	ES-359172	SW TACT SKHHAP [POWER]
6	ED-384268J	D LED SLP-175D-50 RED [ON/STANDBY]	69	ET-381637J1	DETECTOR GP1U521X
7	ED-361885	D LED SLP-384C-51 GREEN [POWER]	70	ET-363953	TR DTA114TS
8	ED-367974	D LED SLV-31PC3 GREEN	71	ET-354415	TR DTA144ES
9	ED-385160J	D LED SLV-31VC3F RED	72	ET-360399	TR DTC114TS
10	*ED-330319	D SILICON DBA10B 100/1.0A	73	ET-370310	TR DTC144TS
11	*ED-349662	D SILICON DS135E-FA6 F10 100/1	74	ET-354094	TR DTC144WS
12	ED-348990	D SILICON H DS446	75	ET-349449	TR FET 2SK161 O,Y
13	ED-301911	D SILICON H DS448	76	ET-337759	TR FET 2SK246 GR
14	ED-307572	D SILICON H 1SS131	77	ET-308472	TR 2SA1115 E,F,G F05
15	ED-624903	D SILICON H 1S2473	78	ET-353899	TR 2SA1317 S,T,U
16	*ED-384278J	D SILICON RBV602 200/6.0A	79	ET-305463	TR 2SA970 GR,BL
17	ED-717990	D SILICON 1SS181	80	*ET-366365	TR 2SB1185 E,F
18	ED-349460-A	D VARACTOR SVC321SPA ABCD DBL	81	*ET-373210	TR 2SB1187 E,F
19	ED-349448	D VARACTOR 1SV147	82	ET-307195	TR 2SC2240 GR,BL
20	ED-310387	D ZENER H HZ12 B2	83	ET-338410	TR 2SC2878 A,B
21	ED-330218	D ZENER H HZ15-2L	84	ET-336869	TR 2SC2999 C,D
22	ED-346567	D ZENER H HZ16-1L	85	ET-360067	TR 2SC3330 T,U F05
23	ED-310607	D ZENER H HZ18 2	86	ET-349081	TR 2SC3383 S,T
24	ED-346594	D ZENER H HZ3 B3	87	ET-357878	TR 2SC3383 S2,T,U
25	ED-346627	D ZENER H HZ33 2	88	ET-356437	TR 2SC930 D2,E,F
26	ED-305704	D ZENER H HZ4 B2	89	ET-328265	TR 2SC930 F
27	ED-338333	D ZENER H HZ5 B2	90	*ET-366581	TR 2SD1762 E,F
28	ED-306316	D ZENER H HZ5 C2	91	ET-721755J	TR 2SD596
29	ED-337265	D ZENER H HZ6 C2	92	EV-384319J	VR ROTARY RK1631210 A104X2 [LOUDNESS CONTROL]
30	ED-318859	D ZENER H HZ9 C2	93	EV-384316J	VR ROTARY RK1631220 B103X2 [BASS]
31	*EF-601964	FUSE SEMKO T 250V 1.60A [E]	94	EV-384317J	VR ROTARY RK1631220 M254N254 [BALANCE]
32	*EF-668474	FUSE SEMKO T 250V 400MA [E]	95	EV-384328J	VR SPL RK16Y12MA B104X2 [MAIN VOLUME]
33	*EF-306957	FUSE TSC 125V 4.00A [C,A]	96	*EZ-358816	BATTERY LITHIUM BR2032-1HF
34	*EF-309391	FUSE TSC 125V 800MA [C,A]			
35	EH-344434	FILTER CE BFU450C4N 0.450MHZ			
36	EH-355568	FILTER CE SFE10.7MS2G-A			
37	EI-384264J	IC A1027 1271			
38	EI-353421	IC BA6229			
39	EI-361624	IC LA1265			
40	EI-343417	IC LB1294			
41	EI-384285J	IC LC7821			
42	EI-361622	IC LM7001			
43	*EI-384279J	IC MC7806CT			
44	EI-370973	IC M4068BP			
45	EI-346071	IC M5218L-21			
46	EI-349719	IC M5218P			
47	EI-344764	IC M5218P-21			
48	*EI-384381J	IC STK4201V			
49	EI-351849	IC UPC1235C			
50	EI-354080	IC UPC1237H			
51	EI-726144J	IC UPD6124G-536			
52	EI-376113	OSC CE CSB455EB			
53	EI-388110J	OSC CE CST4.19MG 4.194MHZ			
54	EI-344422	OSC X'TAL HC-18/U 7.200MHZ			
55	*EJ-384277J	SOCKET OUTLET M7037 2P			
56	*EJ-384283J	SOCKET OUTLET M7037-B 2X2P [C,A]			
57	EJ-359031	TERMINAL LEVER YKD31-0215 P 2P [ANTENNA TERMINAL]			

2. P.C BOARD BLOCK

Ref. No.	Part No.	Description
1	BA-A1029C020A	PC(#) MAIN BLK AA-V235
2A	BA-A1027C030C	PC(#) TUNER BLK AA-V235(C) [C,A]
2B	BA-A1027A030D	PC(#) TUNER BLK AA-V235(E) [E]
3	BA-F0131A010A	PC FRONTENDBLKFE31(U,C,A,S,E,B
4A	BA-A1029C040A	PC(#) CONTROL BLK AA-V235(C) [C,A]
4B	BA-A1029A040B	PC(#) CONTROL BLK AA-V235(E) [E]

PC (#) CONTROL BLK CONSISTS OF FOLLOWING P.C BOARD.

- * CONTROL P.C BOARD
- * TACT SW P.C BOARD
- * SPEAKER SW P.C BOARD
- * REMOCOM P.C BOARD
- * LED (A) P.C BOARD

PC (#) MAIN BLK CONSISTS OF FOLLOWING P.C BOARD.

- * MAIN P.C BOARD
- * LOUDNESS P.C BOARD
- * MAIN VOLUME P.C BOARD
- * VD2 P.C BOARD

PC (#) TUNER BLK CONSISTS OF FOLLOWING P.C BOARD.

- * TUNER P.C BOARD
- * PIN JACK P.C BOARD
- * SPEAKER TERMINAL (A) P.C BOARD
- * POWER SUPPLY P.C BOARD

3. MAIN P.C BOARD

Ref. No.	Part No.	Description
C21	EC-367048	C EC V CUT SME 101M 63.0DC
C28	EC-334005	C EC V CUT NP SM 331M 10DC
D1	ED-338333	D ZENER H HZ5 B2
D2	ED-348990	D SILICON H DS446
D3	ED-348990	D SILICON H DS446
D4	ED-301911	D SILICON H DS448
D5	ED-348990	D SILICON H DS446
D6	ED-346627	D ZENER H HZ33 2
D7	ED-346567	D ZENER H HZ16-1L
D8	ED-330218	D ZENER H HZ15-2L
D9	ED-346567	D ZENER H HZ16-1L
D10	ED-310387	D ZENER H HZ12 B2
D11	ED-337265	D ZENER H HZ6 C2
D12	ED-310607	D ZENER H HZ18 2
D13	ED-310387	D ZENER H HZ12 B2
D14	ED-348990	D SILICON H DS446
D15	ED-307572	D SILICON H 1SS131
D16	ED-307572	D SILICON H .1SS131
D17	ED-307572	D SILICON H 1SS131
D18	ED-307572	D SILICON H 1SS131
D19	ED-307572	D SILICON H 1SS131
D20	ED-307572	D SILICON H 1SS131
D21	ED-346594	D ZENER H HZ3 B3
FR1	*ER-318647	R FUSE H S10 ERD2FC 1/4W 4R7J
FR2	*ER-318647	R FUSE H S10 ERD2FC 1/4W 4R7J
FR3	*ER-318647	R FUSE H S10 ERD2FC 1/4W 4R7J
FR4	*ER-318647	R FUSE H S10 ERD2FC 1/4W 4R7J
FR5	*ER-318647	R FUSE H S10 ERD2FC 1/4W 4R7J
FR6	*ER-318647	R FUSE H S10 ERD2FC 1/4W 4R7J
IC1	EI-384285J	IC LC7821
IC2	EI-384285J	IC LC7821
IC3	EI-346071	IC M5218L-21
IC4	EI-346071	IC M5218L-21
IC5	EI-349719	IC M5218P
IC8	EI-353421	IC BA6229
IC9	*EI-384381J	IC STK4201V
IC10	EI-354080	IC UPC1237H
J3	SP-384291J	SOCKET 10N-AQ 10P
J5	SP-384291J	SOCKET 10N-AQ 10P
L1	EO-337880	COIL FIX 2 202AK-018 2R2K
RL1	EQ-382352J	RELAY POW G5R-2282P 2NO 24V
R28	ER-322787	R CB H S10 FS RDS 1/4W 100J
R35	ER-385159J	R CB H S12 FS RDS 1/2W 472J
R36	ER-322591	R CB H S10 FS RDS 1/4W 101J
R37	ER-322591	R CB H S10 FS RDS 1/4W 101J
R38	ER-333598	R CB H S15 FS RDS 1/2W 102J
R39	ER-333598	R CB H S15 FS RDS 1/2W 102J
R40	ER-345466	R CT W F09 PLATE 5W R22K
R45	ER-387974J	R OMF H S12 FS 1W 4R7J
R46	ER-387974J	R OMF H S12 FS 1W 4R7J
R53	ER-384297J	R CB H S12 FS RDS 1/2W 103J
R55	ER-384299J	R CB H S12 FS RDS 1/2W 391J
R59	ER-382940J	R OMF H S10 FS 1/2W 182J
R61	ER-382940J	R OMF H S10 FS 1/2W 182J
R62	ER-382940J	R OMF H S10 FS 1/2W 182J
R64	ER-382940J	R OMF H S10 FS 1/2W 182J
R68	ER-382934J	R OMF H S15 FS 2W 121J
R70	ER-382941J	R OMF H S10 FS 1/2W 392J
TR1	ET-307195	TR 2SC2240 GR,BL
TR2	ET-305463	TR 2SA970 GR,BL
TR3	*ET-366581	TR 2SD1762 E,F
TR4	*ET-366581	TR 2SD1762 E,F
TR5	*ET-366581	TR 2SD1762 E,F
TR6	*ET-366365	TR 2SB1185 E,F
TR7	*ET-366581	TR 2SD1762 E,F
TR8	*ET-373210	TR 2SB1187 E,F
TR9	*ET-373210	TR 2SB1187 E,F
TR10	ET-308472	TR 2SA1115 E,F,G F05
TR11	ET-308472	TR 2SA1115 E,F,G F05

4. LOUDNESS P.C BOARD

Ref. No.	Part No.	Description
IC101	EI-349719	IC M5218P
R107	ER-322591	R CB H S10 FS RDS 1/4W 101J
R108	ER-322591	R CB H S10 FS RDS 1/4W 101J
SW101	ES-383041J	SW PUSH ESB-62931 2-04-02N [SOURCE DIRECT SW]
SW102	ES-384302J	SW PUSH ESB-62 06-02 [LOUDNESS SW]
TR101	ET-338410	TR 2SC2878 A,B
VR101	EV-384319J	VR ROTARY RK1631210 A104X2 [LOUDNESS CONTROL]

5. MAIN VOLUME P.C BOARD

Ref. No.	Part No.	Description
VR201	EV-384328J	VR SPL RK16Y12MA B104X2 [MAIN VOLUME]

6. VD2 P.C BOARD

Ref. No.	Part No.	Description
J301	EJ-384303J	PIN J JPJ0872-01-111 GP 3P [VD2]
F1A	*EF-306957	FUSE TSC 125V 4.00A [C,A]
F1B	*EF-601964	FUSE SEMKO T 250V 1.60A [E]

7. TUNER P.C BOARD

Ref. No.	Part No.	Description
D1	ED-306316	D ZENER H HZ5 C2
D2	ED-307572	D SILICON H 1SS131
D3	ED-318859	D ZENER H HZ9 C2
D4	ED-349460-A	D VARACTOR SVC321SPA ABCD DBL
D5	ED-349460-A	D VARACTOR SVC321SPA ABCD DBL
D8	ED-307572	D SILICON H 1SS131
D10	ED-307572	D SILICON H 1SS131
D11	ED-307572	D SILICON H 1SS131
D12	ED-307572	D SILICON H 1SS131
D13	ED-307572	D SILICON H 1SS131
FL1	EH-355568	FILTER CE SFE10.7MS2G-A
FL2	EH-355568	FILTER CE SFE10.7MS2G-A
FL3	EH-344434	FILTER CE BFU450C4N 0.450MHZ
IC1	EI-361622	IC LM7001
IC2	EI-361624	IC LA1265
IC3	EI-351849	IC UPC1235C
L1	EO-366394	COIL FIX 1 TL-8 183J
L2	EO-366394	COIL FIX 1 TL-8 183J
R10	ER-355633	R OMF H S15 FS 1W 331J
R25	ER-306805	R CB H S15 FS RDS 1/2W 101J
R31	ER-327710	R CB H S10 FS RDS 1/4W 151J
R35	ER-333379	R CB H S10 FS RDS 1/4W 183J
R59	ER-327710	R CB H S10 FS RDS 1/4W 151J
TM1	EJ-359031	TERMINAL LEVER YKD31-0215 P 2P [ANTENNA TERMINAL]
TR1	ET-337759	TR FET 2SK246 GR
TR2	ET-349081	TR 2SC3383 S,T
TR3	ET-353899	TR 2SA1317 S,T,U
TR4	ET-353899	TR 2SA1317 S,T,U
TR10	ET-356437	TR 2SC930 D2,E,F
TR13	ET-349081	TR 2SC3383 S,T
TR14	ET-349081	TR 2SC3383 S,T
TR15	ET-354094	TR DTC144WS
TR16	ET-357878	TR 2SC3383 S2,T,U
TR17	ET-357878	TR 2SC3383 S2,T,U
TR18	ET-353899	TR 2SA1317 S,T,U
TR19	ET-360067	TR 2SC3330 T,U F05
T1	EO-337598	COIL VARI 2 25A-1353-01
T3	EO-363279	COIL OSC 2 A7NRS-9857X 150.0UH
T5	EO-363291	COIL DET 2 78-1128-01
T6	EO-361630	COIL DET 2 78-1126-02
T7	EO-353176	COIL IFT PEGK0008B-01 455.0KHZ
T7A	EH-344435	FILTER CE SFU450B9 0.450MHZ
VC1	EC-359065	C S-FIX H CTC-6U-020 4.3-20
VR1	EV-361673	R S-FIX H RH0615C 0.10W 334
VR2	EV-356576	R S-FIX H RH0615C 0.10W 472
VR3	EV-358829	R S-FIX H RH0615C 0.10W 223
VR4	EV-358829	R S-FIX H RH0615C 0.10W 223
X1	EI-344422	OSC X'TAL HC-18/U 7.200MHZ

8. PIN JACK P.C BOARD

Ref. No.	Part No.	Description
IC101	EI-344764	IC M5218P-21
IC102	EI-370973	IC M4066BP
IC103	EI-370973	IC M4066BP
J101	EJ-384270J	PIN J T6227-AACB 2P [PHONO]
J102	EJ-368244	PIN J T6087 6P [CD,VCR PLAY]
J103	EJ-382362J	PIN J T6027-AABB 4P [DAT,TAPE PLAY]
J104	EJ-368244	PIN J T6087 6P [V,DISC,VCR REC]
J105	EJ-382362J	PIN J T6027-AABB 4P [DAT,TAPE REC]
J106	EJ-384271J	PIN J T6087-AADB 6P [MONITOR OUT]
J107	EJ-382362J	PIN J T6027-AABB 4P [PROCESSOR]
R109	ER-327710	R CB H S10 FS RDS 1/4W 151J
R110	ER-327710	R CB H S10 FS RDS 1/4W 151J
TR101	ET-353899	TR 2SA1317 S,T,U
TR102	ET-353899	TR 2SA1317 S,T,U
TR103	ET-353899	TR 2SA1317 S,T,U
TR105	ET-370310	TR DTC144TS
TR106	ET-370310	TR DTC144TS

9. SPEAKER TERMINAL (A) P.C BOARD

Ref. No.	Part No.	Description
TM401	*EJ-384277J	SOCKET OUTLET M7037 2P
TM402	EJ-349061	TERMINAL PUSH YKD21-0025 P 8P [SPEAKER TERMINAL]

10. POWER SUPPLY P.C BOARD

Ref. No.	Part No.	Description
C503A	*EC-338411	C CE V FZ 103P 400AC [C,A]
C503B	*EC-389156J	C MMY V XE 472M 250AC [E]
C504	EC-389170J	C MMY V F12 MMHF 473K 400DC
C505	EC-381091J	C EC V S10 682M 56.0DC
C506	EC-381091J	C EC V S10 682M 56.0DC
C507	EC-370033	C EC V CUT SME 102M 35.0DC
C508	EC-370033	C EC V CUT SME 102M 35.0DC
C509	EC-383146J	C EC V CUT SME 102M 50.0DC
D501	*ED-330319	D SILICON DBA10B 100/1.0A
D502	*ED-349662	D SILICON DS135E-FA6 F10 100/1
D503	*ED-384278J	D SILICON RBV602 200/6.0A
D504	*ED-330319	D SILICON DBA10B 100/1.0A
D505	*ED-349662	D SILICON DS135E-FA6 F10 100/1
IC501	*EI-384279J	IC MC7806CT
RL501	*EQ-347611	RELAY POW G2R-1112PFD-V 1NO 12V
R504	*ER-356573	R SD ANTI-STATIC 1/2W 225K [C,A]
TM501	*EJ-384283J	SOCKET OUTLET M7037-B 2X2P [C,A]
TR501	ET-360399	TR DTC114TS
TR502	ET-360067	TR 2SC3330 T,U F05
T501A	*BT-384281J	TRANS POW A1028S-CA [C,A]
T501B	*BT-387992J	TRANS POW A1028S-E [E]

Ref. No.	Part No.	Description
F2A	*EF-309391	FUSE TSC 125V 800MA [C,A]
F2B	*EF-668474	FUSE SEMKO T 250V 400MA [E]
F3A	*EF-309391	FUSE TSC 125V 800MA [C,A]
F3B	*EF-668474	FUSE SEMKO T 250V 400MA [E]
F4A	*EF-309391	FUSE TSC 125V 800MA [C,A]
F4B	*EF-668474	FUSE SEMKO T 250V 400MA [E]

11. FRONT END P.C BOARD

Ref. No.	Part No.	Description
D1	ED-349448	D VARACTOR 1SV147
D2	ED-349448	D VARACTOR 1SV147
D4	ED-349448	D VARACTOR 1SV147
L1	EO-349461	COIL FIX 2 LINK
L2	EO-349462	COIL FIX 2 U147
L3	EO-349461	COIL FIX 2 LINK
L4	EO-349462	COIL FIX 2 U147
L6	EO-359056	COIL FIX 1 LAL03NA 2R2M
L7	EO-353687	COIL OSC 2 E525HN-110003
TR1	ET-349449	TR FET 2SK161 O,Y
TR2	ET-336869	TR 2SC2999 C,D
TR3	ET-328265	TR 2SC930 F
TR4	ET-349449	TR FET 2SK161 O,Y
T1	EO-337640	COIL IFT 119AC-15533X 10.7MHZ

12. CONTROL P.C BOARD

Ref. No.	Part No.	Description	Ref. No.	Part No.	Description
BT1	*EZ-358816	BATTERY LITHIUM BR2032-1HF	VR1	EV-384316J	VR ROTARY RK1631220 B103X2
D1	ED-624903	D SILICON H 1S2473			[BASS]
D2	ED-624903	D SILICON H 1S2473	VR2	EV-384316J	VR ROTARY RK1631220 B103X2
D3	ED-624903	D SILICON H 1S2473			[TREBLE]
D4	ED-624903	D SILICON H 1S2473	VR3	EV-384317J	VR ROTARY RK1631220 M254N254
D5	ED-624903	D SILICON H 1S2473			[BALANCE]
D6	ED-624903	D SILICON H 1S2473	X1	EI-388110J	OSC CE CST4.19MG 4.194MHZ
D7	ED-624903	D SILICON H 1S2473			
D8	ED-624903	D SILICON H 1S2473			
D9	ED-624903	D SILICON H 1S2473			
D10	ED-307572	D SILICON H 1SS131			
D11	ED-307572	D SILICON H 1SS131			
D12	ED-624903	D SILICON H 1S2473			
D13	ED-624903	D SILICON H 1S2473			
D14	ED-624903	D SILICON H 1S2473			
D15	ED-624903	D SILICON H 1S2473			
D16	ED-624903	D SILICON H 1S2473			
D17	ED-624903	D SILICON H 1S2473			
D18	ED-624903	D SILICON H 1S2473			
D19	ED-624903	D SILICON H 1S2473			
D20	ED-624903	D SILICON H 1S2473			
D21	ED-624903	D SILICON H 1S2473			
D22	ED-624903	D SILICON H 1S2473			
D23	ED-624903	D SILICON H 1S2473			
D24	ED-624903	D SILICON H 1S2473			
D25	ED-305704	D ZENER H HZ4 B2			
D26	ED-367974	D LED SLV-31PC3 GREEN			
D27	ED-367974	D LED SLV-31PC3 GREEN			
D28	ED-367974	D LED SLV-31PC3 GREEN			
D29	ED-367974	D LED SLV-31PC3 GREEN			
D30	ED-367974	D LED SLV-31PC3 GREEN			
D31	ED-385160J	D LED SLV-31VC3F RED			
D32	ED-385160J	D LED SLV-31VC3F RED			
D33	ED-367974	D LED SLV-31PC3 GREEN			
D34	ED-367974	D LED SLV-31PC3 GREEN			
D35	ED-367974	D LED SLV-31PC3 GREEN			
D36	ED-367974	D LED SLV-31PC3 GREEN			
D37	ED-367974	D LED SLV-31PC3 GREEN			
D38	ED-367974	D LED SLV-31PC3 GREEN			
D39	ED-367974	D LED SLV-31PC3 GREEN			
D40	ED-367974	D LED SLV-31PC3 GREEN			
		[C,A]			
D41	ED-367974	D LED SLV-31PC3 GREEN			
D42	ED-624903	D SILICON H 1S2473			
		[E]			
FL1	EM-384374J	IND FL 8-BT-29ZAK CHARACTER			
IC1	EI-384264J	IC A1027 1271			
IC2	EI-343417	IC LB1294			
IC3	EI-349719	IC M5218P			
IC4	EI-349719	IC M5218P			
P1	EJ-382690J	PLUG 174075-5 5P			
P2	EJ-382690J	PLUG 174075-5 5P			
P3	EJ-382690J	PLUG 174075-5 5P			
P4	EJ-384267J	PLUG 174711-5 5P			
R2	ER-322591	R CB H S10 FS RDS 1/4W 101J			
R3	ER-322591	R CB H S10 FS RDS 1/4W 101J			
SR1	EH-368950	COMP R RKC4BS 104J			
SR2	EH-384373J	COMP R RKC11BS 472J			
TS101	ES-359172	SW TACT SKHHAP			
		[POWER]			
TR1	ET-360399	TR DTC114TS			
TR2	ET-360399	TR DTC114TS			
TR3	ET-360399	TR DTC114TS			
TR4	ET-360399	TR DTC114TS			
TR5	ET-360399	TR DTC114TS			
TR6	ET-363953	TR DTA114TS			
TR7	ET-354415	TR DTA144ES			
TR8	ET-360399	TR DTC114TS			
TR9	ET-360399	TR DTC114TS			
TR10	ET-360067	TR 2SC3330 T,U F05			
TR11	ET-363953	TR DTA114TS			

13. TACT SW P.C BOARD

Ref. No.	Part No.	Description
TS101	ES-349474	SW TACT SKHHAM004A [1/11]
TS102	ES-349474	SW TACT SKHHAM004A [2/12]
TS103	ES-349474	SW TACT SKHHAM004A [3/13]
TS104	ES-349474	SW TACT SKHHAM004A [4/14]
TS105	ES-349474	SW TACT SKHHAM004A [5/15]
TS106	ES-349474	SW TACT SKHHAM004A [6/16]
TS107	ES-349474	SW TACT SKHHAM004A [7/17]
TS108	ES-349474	SW TACT SKHHAM004A [8/18]
TS109	ES-349474	SW TACT SKHHAM004A [9/19]
TS110	ES-349474	SW TACT SKHHAM004A [0/10/20]
TS111	ES-349474	SW TACT SKHHAM004A [REAR LEVEL UP]
TS112	ES-349474	SW TACT SKHHAM004A [REAR LEVEL DOWN]
TS113	ES-349474	SW TACT SKHHAM004A [SIMULATION ON/OFF]
TS114	ES-349474	SW TACT SKHHAM004A [SURROUND MODE]
TS115	ES-349474	SW TACT SKHHAM004A [VCR1]
TS116	ES-349474	SW TACT SKHHAM004A [TUNING UP]
TS117	ES-349474	SW TACT SKHHAM004A [TUNING DOWN]
TS118	ES-349474	SW TACT SKHHAM004A [DIRECT]
TS119	ES-349474	SW TACT SKHHAM004A [TUNING MODE]
TS120	ES-349474	SW TACT SKHHAM004A [V.DISC 2 CAMCORDER]
TS121	ES-349474	SW TACT SKHHAM004A [V.DISC 1 TV]
TS122	ES-349474	SW TACT SKHHAM004A [VCR2]
TS123	ES-349474	SW TACT SKHHAM004A [SOUND INSERT]
TS124	ES-349474	SW TACT SKHHAM004A [CD]
TS125	ES-349474	SW TACT SKHHAM004A [MEMORY]
TS126	ES-349474	SW TACT SKHHAM004A [BAND]
TS127	ES-349474	SW TACT SKHHAM004A [SCAN]
TS128	ES-349474	SW TACT SKHHAM004A [FM MODE AUTO/MONO]

14. SPEAKER SW P.C BOARD

Ref. No.	Part No.	Description
J201	EJ-369995	PHONE J 3P HLJ0540-410 GP 6.3 [PHONES9]
R201	ER-371591	R OMF H S15 FS 2W 221J
SW201	ES-384346J	SW PUSH SPUL23 04-02 2THRPW N [SPEAKER SELECTOR SW]


15. REMOCON P.C BOARD

Ref. No.	Part No.	Description
D301	ED-384268J	D LED SLP-175D-50 RED [ON/STANDBY]
PH301	ET-381637J1	DETECTOR GP1U521X

16. LED (A) P.C BOARD

Ref. No.	Part No.	Description
D401	ED-361885	D LED SLP-384C-51 GREEN [POWER]
D402	ED-361885	D LED SLP-384C-51 GREEN [POWER]

FINAL ASSEMBLY BLOCK

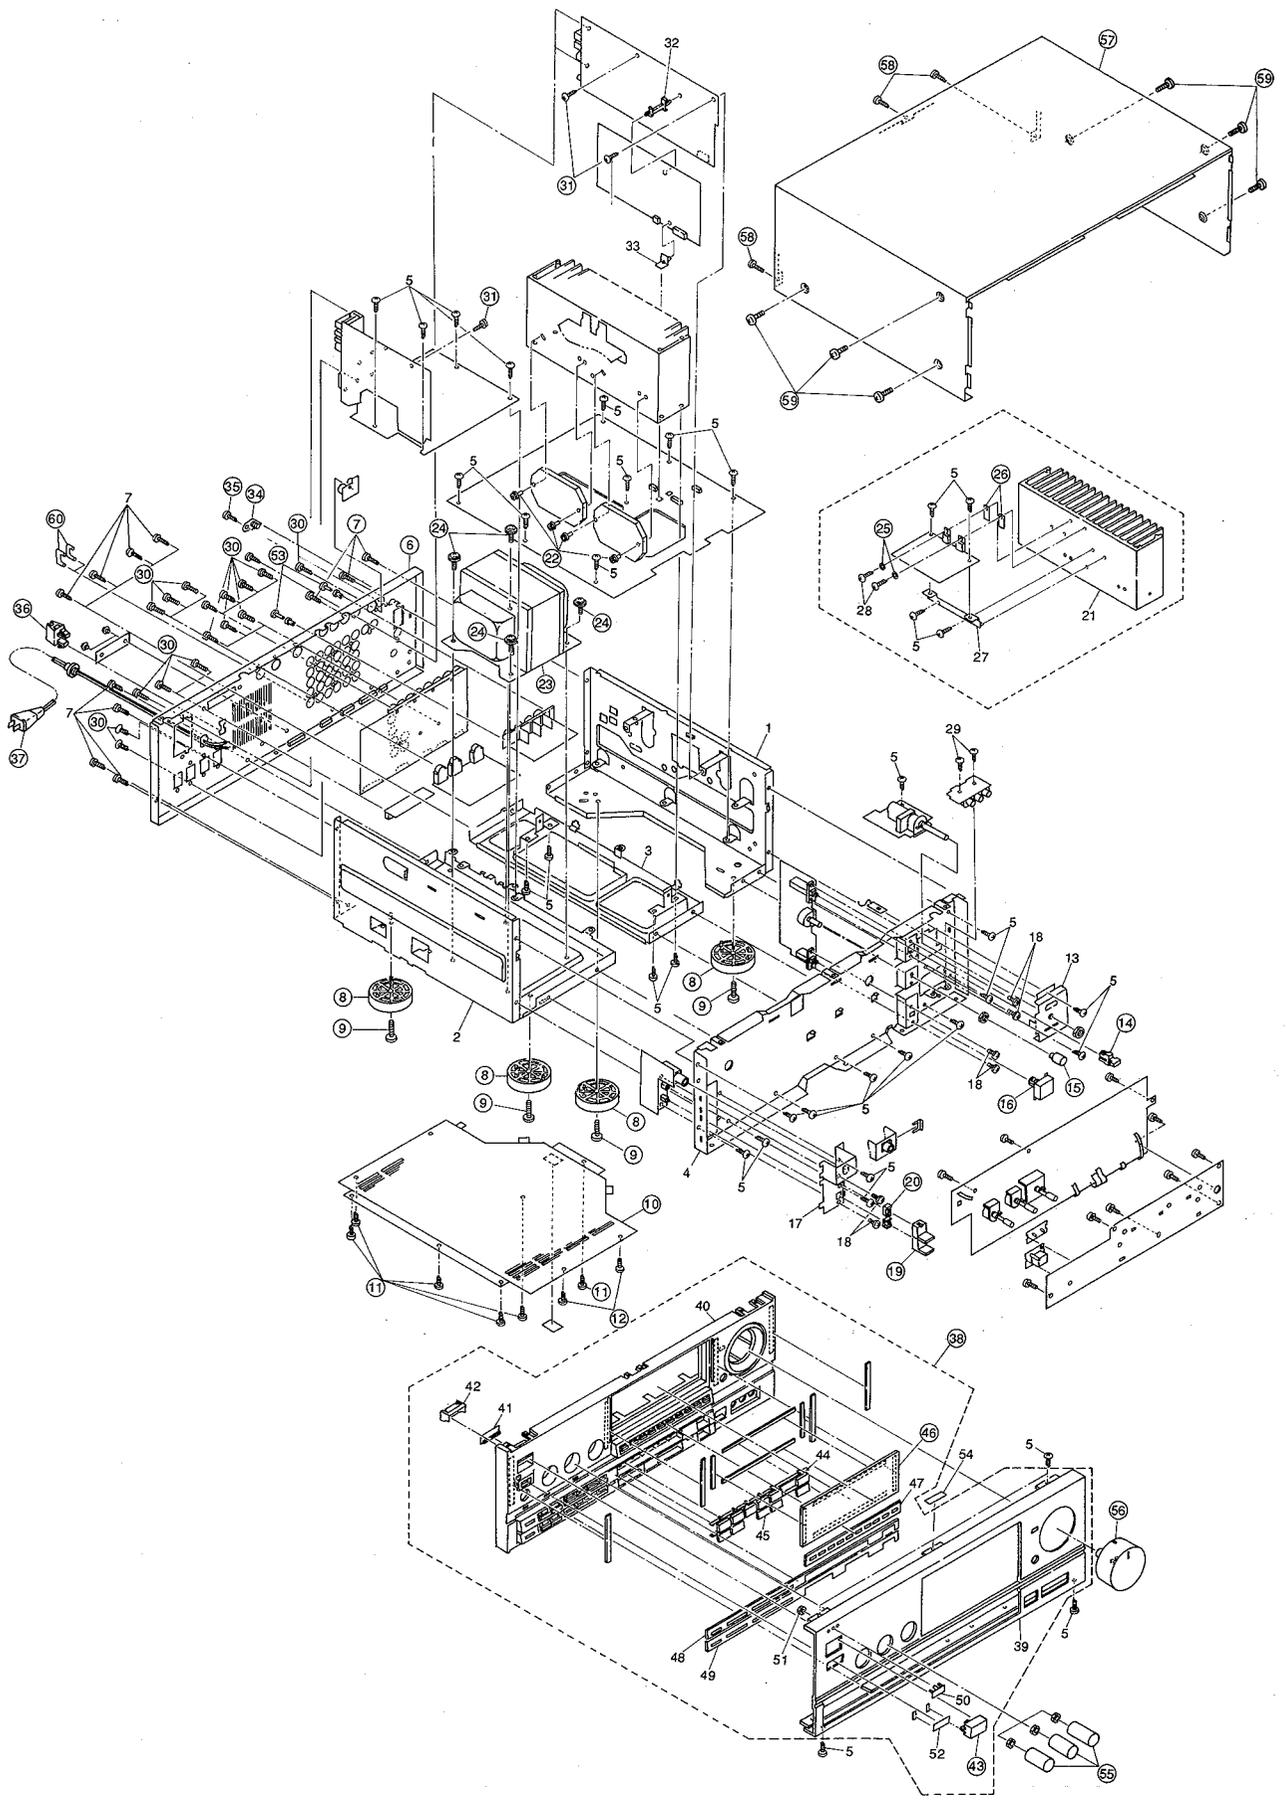

PARTS LIST

17. FINAL ASSEMBLY BLOCK

Ref. No.	Part No.	Description
5	ZS-447840	T2BR30X08STL CMT
6A	SP-384223J1	PANEL REAR AA-V235(A,C) [C,A]
6B	SP-388858J	PANEL REAR AA-V235(E) [E]
7	ZS-308846	T2BR30X08STL BZN PROJECTION
8	SA-379375	FOOT(N)
9	ZS-354055	ST BR30X12STL CMT
10	SP-384219J	BOTTOM PLATE
11	ZS-447840	T2BR30X08STL CMT
12	ZS-463353	T2BR30X08STL BNI
14	SK-384004J	KNOB PUSH
15	SK-384005J	KNOB VR
16	SK-384007J	KNOB DIRECT
18	ZS-422076	PAN30X05STL CMT
19	SK-384023J	KNOB SP
20	ZW-368205	FLEXIBLE RING 2414-0-0-086-01
22	ZS-384345J	+6T2 30X20STL CMT C070
23A	*BT-384247J	TRANS POW A1029-AC [C,A]
23B	*BT-387993J	TRANS POW A1029-E [E]
24	ZS-346742	ST BID40X08STL CMT CUP
25	ZW-632226	WASHER INSULATOR (BUSH M)
26	EZ-384327J	TR ACCE INSU. TC20AG-AV TO220
28	ZS-523664	T2BR30X10STL CMT
29	ZS-336351	T2BR30X08STL NI3
30	ZS-350934	PT BR30X08STL BNI
31	ZW-698308	RV NYL30X055 BL
34	EJ-329610	TERMINAL W/SCREW UB-0067 L 1P
35	ZS-308846	T2BR30X08STL BZN PROJECTION
36	SZ-362273	HOLDER ANTENNA (2)
37A	*EW-363827	AC CORD200 KP10WSPT2HB100 A UC [C,A]
37B	*EW-363853	AC CORD KP419LTCE B100 A EV [E]
38	BD-A1027C060C	PANEL FRONT BLK AA-V235-B
43	SK-384021J	KNOB POW B
46	SE-384012J1	IND PLATE(B)
50	SM-365756C	NAME PLATE AKAI(2)
51	ZW-653163	RING CS 280STL PKR
53	ZW-231030	RV NYL30X045 BL
55	SK-375362	KNOB BALANCE
56	SK-381023J1	KNOB VR B PART
57	SP-373246B	COVER UPPER-BLACK
58	ZS-308846	T2BR30X08STL BZN PROJECTION
59	ZS-341960	ST BID40X06STL BNI
60	EJ-369015	PLUG SHORT-PIN CNT31-0057

NOTE:

Parts will not be supplied if they are not listed in the parts list, even if they appear on the assembling illustrations with reference No.

18. ACCESSARY

Ref. No.	Part No.	Description
1A	AX-384260J	REMOCON RC-V235 [C,A]
1B	AX-388189J	REMOCON RC-V235E [E]
2	EJ-352118	SOCKET COAX PAL B2-714P-900
3	EE-359265	ANT LOOP LA-200A-A
4	EE-381076J	ANT DIPOLE (FM)

19. REMOCON RC-V235

Ref. No.	Part No.	Description
D1	ED-376111	D LED SE303AC INFRARED
D2	ED-717990	D SILICON 1SS181
D3	ED-717990	D SILICON 1SS181
D4	ED-717990	D SILICON 1SS181
D5	ED-717990	D SILICON 1SS181
IC1	EI-726144J	IC UPD6124G-536
Q1	ET-721755J	TR 2SD596
Z1	EI-376113	OSC CE CSB455EB
1	SC-726125J	CASE BATTERY RC-V235/335

INDEX

Part No.	Ref. No.	Part No.	Ref. No.	Part No.	Ref. No.	Part No.	Ref. No.
AX-384260J	18-1A	ED-349448	11-D4	EH-355568	1-36	EO-353176	7-T7
AX-388189J	18-1B	ED-349460-A	1-18	EH-355568	7-FL1	EO-353687	11-L7
BA-A1027A030D	2-2B	ED-349460-A	7-D4	EH-355568	7-FL2	EO-359056	11-L6
BA-A1027C030C	2-2A	ED-349460-A	7-D5	EH-368950	12-SR1	EO-361630	7-T6
BA-A1029A040B	2-4B	ED-349662	1-11	EH-384373J	12-SR2	EO-363279	7-T3
BA-A1029C020A	2-1	ED-349662	10-D502	EI-343417	1-40	EO-363291	7-T5
BA-A1029C040A	2-4A	ED-349662	10-D505	EI-343417	12-IC2	EO-366394	7-L1
BA-F0131A010A	2-3	ED-361885	1-7	EI-344422	1-54	EO-366394	7-L2
BD-A1027C060C	17-38	ED-361885	16-D401	EI-344422	7-X1	EQ-347611	1-60
BT-384247J	1-3	ED-361885	16-D402	EI-344764	1-47	EQ-347611	10-RL501
BT-384247J	17-23A	ED-367974	1-8	EI-344764	8-IC101	EQ-382352J	1-61
BT-384281J	1-1	ED-367974	12-D26	EI-346071	1-45	EQ-382352J	3-RL1
BT-384281J	10-T501A	ED-367974	12-D27	EI-346071	3-IC3	ER-306805	7-R25
BT-387992J	1-2	ED-367974	12-D28	EI-346071	3-IC4	ER-318647	1-62
BT-387992J	10-T501B	ED-367974	12-D29	EI-349719	1-46	ER-318647	3-FR1
BT-387993J	1-4	ED-367974	12-D30	EI-349719	3-IC5	ER-318647	3-FR2
BT-387993J	17-23B	ED-367974	12-D33	EI-349719	4-IC101	ER-318647	3-FR3
EC-334005	3-C28	ED-367974	12-D34	EI-349719	12-IC3	ER-318647	3-FR4
EC-338411	10-C503A	ED-367974	12-D35	EI-349719	12-IC4	ER-318647	3-FR5
EC-359065	7-VC1	ED-367974	12-D36	EI-351849	1-49	ER-318647	3-FR6
EC-367048	3-C21	ED-367974	12-D37	EI-351849	7-IC3	ER-322591	3-R36
EC-370033	10-C507	ED-367974	12-D38	EI-353421	1-38	ER-322591	3-R37
EC-370033	10-C508	ED-367974	12-D39	EI-353421	3-IC8	ER-322591	4-R107
EC-381091J	10-C505	ED-367974	12-D40	EI-354080	1-50	ER-322591	4-R108
EC-381091J	10-C506	ED-367974	12-D41	EI-354080	3-IC10	ER-322591	12-R2
EC-383146J	10-C509	ED-376111	1-5	EI-361622	1-42	ER-322591	12-R3
EC-389156J	10-C503B	ED-376111	19-D1	EI-361622	7-IC1	ER-322787	3-R28
EC-389170J	10-C504	ED-384268J	1-6	EI-361624	1-39	ER-327710	7-R31
ED-301911	1-13	ED-384268J	15-D301	EI-361624	7-IC2	ER-327710	7-R59
ED-301911	3-D4	ED-384278J	1-16	EI-370973	1-44	ER-327710	8-R109
ED-305704	1-26	ED-384278J	10-D503	EI-370973	8-IC102	ER-327710	8-R110
ED-305704	12-D25	ED-385160J	1-9	EI-370973	8-IC103	ER-333379	7-R35
ED-306316	1-28	ED-385160J	12-D31	EI-376113	1-52	ER-333598	3-R38
ED-306316	7-D1	ED-385160J	12-D32	EI-376113	19-Z1	ER-333598	3-R39
ED-307572	1-14	ED-624903	1-15	EI-384264J	1-37	ER-345466	3-R40
ED-307572	3-D15	ED-624903	12-D1	EI-384264J	12-IC1	ER-355633	7-R10
ED-307572	3-D16	ED-624903	12-D2	EI-384279J	1-43	ER-356573	1-63
ED-307572	3-D17	ED-624903	12-D3	EI-384279J	10-IC501	ER-356573	10-R504
ED-307572	3-D18	ED-624903	12-D4	EI-384285J	1-41	ER-371591	14-R201
ED-307572	3-D19	ED-624903	12-D5	EI-384285J	3-IC1	ER-382934J	3-R68
ED-307572	3-D20	ED-624903	12-D6	EI-384285J	3-IC2	ER-382940J	3-R59
ED-307572	7-D2	ED-624903	12-D7	EI-384381J	1-48	ER-382940J	3-R61
ED-307572	7-D8	ED-624903	12-D8	EI-384381J	3-IC9	ER-382940J	3-R62
ED-307572	7-D10	ED-624903	12-D9	EI-388110J	1-53	ER-382940J	3-R64
ED-307572	7-D11	ED-624903	12-D12	EI-388110J	12-X1	ER-382941J	3-R70
ED-307572	7-D12	ED-624903	12-D13	EI-726144J	1-51	ER-384297J	3-R53
ED-307572	7-D13	ED-624903	12-D14	EI-726144J	19-IC1	ER-384299J	3-R55
ED-307572	12-D10	ED-624903	12-D15	EJ-329610	17-34	ER-385159J	3-R35
ED-307572	12-D11	ED-624903	12-D16	EJ-349061	1-58	ER-387974J	3-R45
ED-310387	1-20	ED-624903	12-D17	EJ-349061	9-TM402	ER-387974J	3-R46
ED-310387	3-D10	ED-624903	12-D18	EJ-352118	18-2	ES-349474	1-67
ED-310387	3-D13	ED-624903	12-D19	EJ-359031	1-57	ES-349474	13-TS101
ED-310607	1-23	ED-624903	12-D20	EJ-359031	7-TM1	ES-349474	13-TS102
ED-310607	3-D12	ED-624903	12-D21	EJ-368244	8-J102	ES-349474	13-TS103
ED-318859	1-30	ED-624903	12-D22	EJ-368244	8-J104	ES-349474	13-TS104
ED-318859	7-D3	ED-624903	12-D23	EJ-369015	17-60	ES-349474	13-TS105
ED-330218	1-21	ED-624903	12-D24	EJ-369995	14-J201	ES-349474	13-TS106
ED-330218	3-D8	ED-624903	12-D42	EJ-382362J	8-J103	ES-349474	13-TS107
ED-330319	1-10	ED-717990	1-17	EJ-382362J	8-J105	ES-349474	13-TS108
ED-330319	10-D501	ED-717990	19-D2	EJ-382362J	8-J107	ES-349474	13-TS109
ED-330319	10-D504	ED-717990	19-D3	EJ-382690J	12-P1	ES-349474	13-TS110
ED-337265	1-29	ED-717990	19-D4	EJ-382690J	12-P2	ES-349474	13-TS111
ED-337265	3-D11	ED-717990	19-D5	EJ-382690J	12-P3	ES-349474	13-TS112
ED-338333	1-27	EE-359265	18-3	EJ-384267J	12-P4	ES-349474	13-TS113
ED-338333	3-D1	EE-381076J	18-4	EJ-384270J	8-J101	ES-349474	13-TS114
ED-346567	1-22	EF-306957	1-33	EJ-384271J	8-J106	ES-349474	13-TS115
ED-346567	3-D7	EF-306957	6-F1A	EJ-384277J	1-55	ES-349474	13-TS116
ED-346567	3-D9	EF-309391	1-34	EJ-384277J	9-TM401	ES-349474	13-TS117
ED-346594	1-24	EF-309391	10-F2A	EJ-384283J	1-56	ES-349474	13-TS118
ED-346594	3-D21	EF-309391	10-F3A	EJ-384283J	10-TM501	ES-349474	13-TS119
ED-346627	1-25	EF-309391	10-F4A	EJ-384303J	6-J301	ES-349474	13-TS120
ED-346627	3-D6	EF-601964	1-31	EM-384374J	1-59	ES-349474	13-TS121
ED-348990	1-12	EF-601964	6-F1B	EM-384374J	12-FL1	ES-349474	13-TS122
ED-348990	3-D2	EF-668474	1-32	EO-337598	7-T1	ES-349474	13-TS123
ED-348990	3-D3	EF-668474	10-F2B	EO-337640	11-T1	ES-349474	13-TS124
ED-348990	3-D5	EF-668474	10-F3B	EO-337880	3-L1	ES-349474	13-TS125
ED-348990	3-D14	EF-668474	10-F4B	EO-349461	11-L1	ES-349474	13-TS126
ED-349448	1-19	EH-344434	1-35	EO-349461	11-L3	ES-349474	13-TS127
ED-349448	11-D1	EH-344434	7-FL3	EO-349462	11-L2	ES-349474	13-TS128
ED-349448	11-D2	EH-344435	7-T7A	EO-349462	11-L4	ES-359172	1-68

INDEX

Part No.	Ref. No.	Part No.	Ref. No.	Part No.	Ref. No.	Part No.	Ref. No.
ES-359172	12-TS101	EV-358829	7-VR4				
ES-383041J	1-65	EV-361673	7-VR1				
ES-383041J	4-SW101	EV-384316J	1-93				
ES-384302J	1-64	EV-384316J	12-VR1				
ES-384302J	4-SW102	EV-384316J	12-VR2				
ES-384346J	1-66	EV-384317J	1-94				
ES-384346J	14-SW201	EV-384317J	12-VR3				
ET-305463	1-79	EV-384319J	1-92				
ET-305463	3-TR2	EV-384319J	4-VR101				
ET-307195	1-82	EV-384328J	1-95				
ET-307195	3-TR1	EV-384328J	5-VR201				
ET-308472	1-77	EW-363827	17-37A				
ET-308472	3-TR10	EW-363853	17-37B				
ET-308472	3-TR11	EZ-358816	1-96				
ET-328265	1-89	EZ-358816	12-BT1				
ET-328265	11-TR3	EZ-384327J	17-26				
ET-336869	1-84	SA-379375	17-8				
ET-336869	11-TR2	SC-726125J	19-1				
ET-337759	1-76	SE-384012J1	17-46				
ET-337759	7-TR1	SK-375362	17-55				
ET-338410	1-83	SK-381023J1	17-56				
ET-338410	4-TR101	SK-384004J	17-14				
ET-349081	1-86	SK-384005J	17-15				
ET-349081	7-TR2	SK-384007J	17-16				
ET-349081	7-TR13	SK-384021J	17-43				
ET-349081	7-TR14	SK-384023J	17-19				
ET-349449	1-75	SM-365756C	17-50				
ET-349449	11-TR1	SP-373246B	17-57				
ET-349449	11-TR4	SP-384219J	17-10				
ET-353899	1-78	SP-384223J1	17-6A				
ET-353899	7-TR3	SP-384291J	3-J3				
ET-353899	7-TR4	SP-384291J	3-J5				
ET-353899	7-TR18	SP-388858J	17-6B				
ET-353899	8-TR101	SZ-362273	17-36				
ET-353899	8-TR102	ZS-308846	17-7				
ET-353899	8-TR103	ZS-308846	17-35				
ET-354094	1-74	ZS-308846	17-58				
ET-354094	7-TR15	ZS-336351	17-29				
ET-354415	1-71	ZS-341960	17-59				
ET-354415	12-TR7	ZS-346742	17-24				
ET-356437	1-88	ZS-350934	17-30				
ET-356437	7-TR10	ZS-354055	17-9				
ET-357878	1-87	ZS-384345J	17-22				
ET-357878	7-TR16	ZS-422076	17-18				
ET-357878	7-TR17	ZS-447840	17-5				
ET-360067	1-85	ZS-447840	17-11				
ET-360067	7-TR19	ZS-463353	17-12				
ET-360067	10-TR502	ZS-523664	17-28				
ET-360067	12-TR10	ZW-231030	17-53				
ET-360399	1-72	ZW-368205	17-20				
ET-360399	10-TR501	ZW-632226	17-25				
ET-360399	12-TR1	ZW-653163	17-51				
ET-360399	12-TR2	ZW-698308	17-31				
ET-360399	12-TR3						
ET-360399	12-TR4						
ET-360399	12-TR5						
ET-360399	12-TR8						
ET-360399	12-TR9						
ET-363953	1-70						
ET-363953	12-TR6						
ET-363953	12-TR11						
ET-366365	1-80						
ET-366365	3-TR6						
ET-366581	1-90						
ET-366581	3-TR3						
ET-366581	3-TR4						
ET-366581	3-TR5						
ET-366581	3-TR7						
ET-370310	1-73						
ET-370310	8-TR105						
ET-370310	8-TR106						
ET-373210	1-81						
ET-373210	3-TR8						
ET-373210	3-TR9						
ET-381637J1	1-69						
ET-381637J1	15-PH301						
ET-721755J	1-91						
ET-721755J	19-Q1						
EV-356576	7-VR2						
EV-358829	7-VR3						

ABBREVIATIONS FOR SERVICE MANUAL

ABBREVIATION	EXPLANATION	ABBREVIATION	EXPLANATION
AFC	Auto Frequency Control	MEMO	MEMOry
AGC	Auto Gain Control	MI-COM	Micro-COMputer
ALC	Auto Level Control	MIN	MINimum
AM	Amplitude Modulation	MIX	MIXing
AMP	AMPlifier	MPX	MultiPleX
ANT	ANTenna	MW	Medium Wave (frequency)
BATT	BATTery	NC	No Connection
BLK	BLock	NFB	Negative Feed Back
BUFF	BUFFer	OSC	OSCillator
COMP	COMParator	PCB	Printed Circuit Board
DET	DETECT (DETECTOR)	PLL	Phase Locked Board
FLD		QD	Quadrature Detector
FM	Frequency Modulation	Rch	Right channel
FREQ	FREQuency	REF	REFerence
GND	GrouND	REG	REGulator
H	High	RF	Radio Frequency
HPF	High Pass Filter	SEG	SEGment
IF	Intermediate Frequency	SELE	SELEctor
IHF	Institute of High Fidelity	SENS	SENSitivity
IND	INDicator	SIG	SIGnal
I/O	In/Out	S/N	Signal to Noise Ratio
JW	Jumper Wire	SSG	Standard Signal Generator
L	Low	STD	STANdard
LCD	Liquid Crystal Display	SW	SWitch: Short Wave (frequency)
Lch	Left channel	THD	Total Harmonic Distortion
LED	Light Emitting Diode	TP	Test Point
LPF	Low Pass Filter	VCO	Voltage Controlled Oscillator
LW	Long Wave (Frequency)	VR	Variable Resistor
		X'TAL	Crystal

AKAI ELECTRIC CO., LTD.

12-14, 2-Chome, Higashi-Kojiya, Ohta-Ku, Tokyo, Japan
 SERVICE DEPARTMENT TEL: Tokyo(745)9884 TOKYO TELEX: J26261

Printed No. 881107-A1-1600 Printed Date: December 15, 1988

350 Printed in Japan


AKAI


MODEL AA-V235


SCHEMATIC DIAGRAM AND PC BOARDS

TABLE OF CONTENTS


1. BLOCK DIAGRAM.....	3
2. CONNECTION DIAGRAM.....	4
3. LOUDNESS PC BOARD, SPEAKER SW PC BOARD, POWER SUPPLY PC BOARD AND PIN JACK PC BOARD.....	5
4. MAIN PC BOARD SCHEMATIC DIAGRAM.....	6
5. MAIN PC BOARD AND VOLUME PC BOARD.....	7
6. CONTROL SCHEMATIC DIAGRAM.....	8
7. TACT SW PC BOARD AND CONTROL PC BOARD.....	9
8. TUNER SCHEMATIC DIAGRAM.....	10
9. TUNER PC BOARD.....	11
10. ICs.....	12

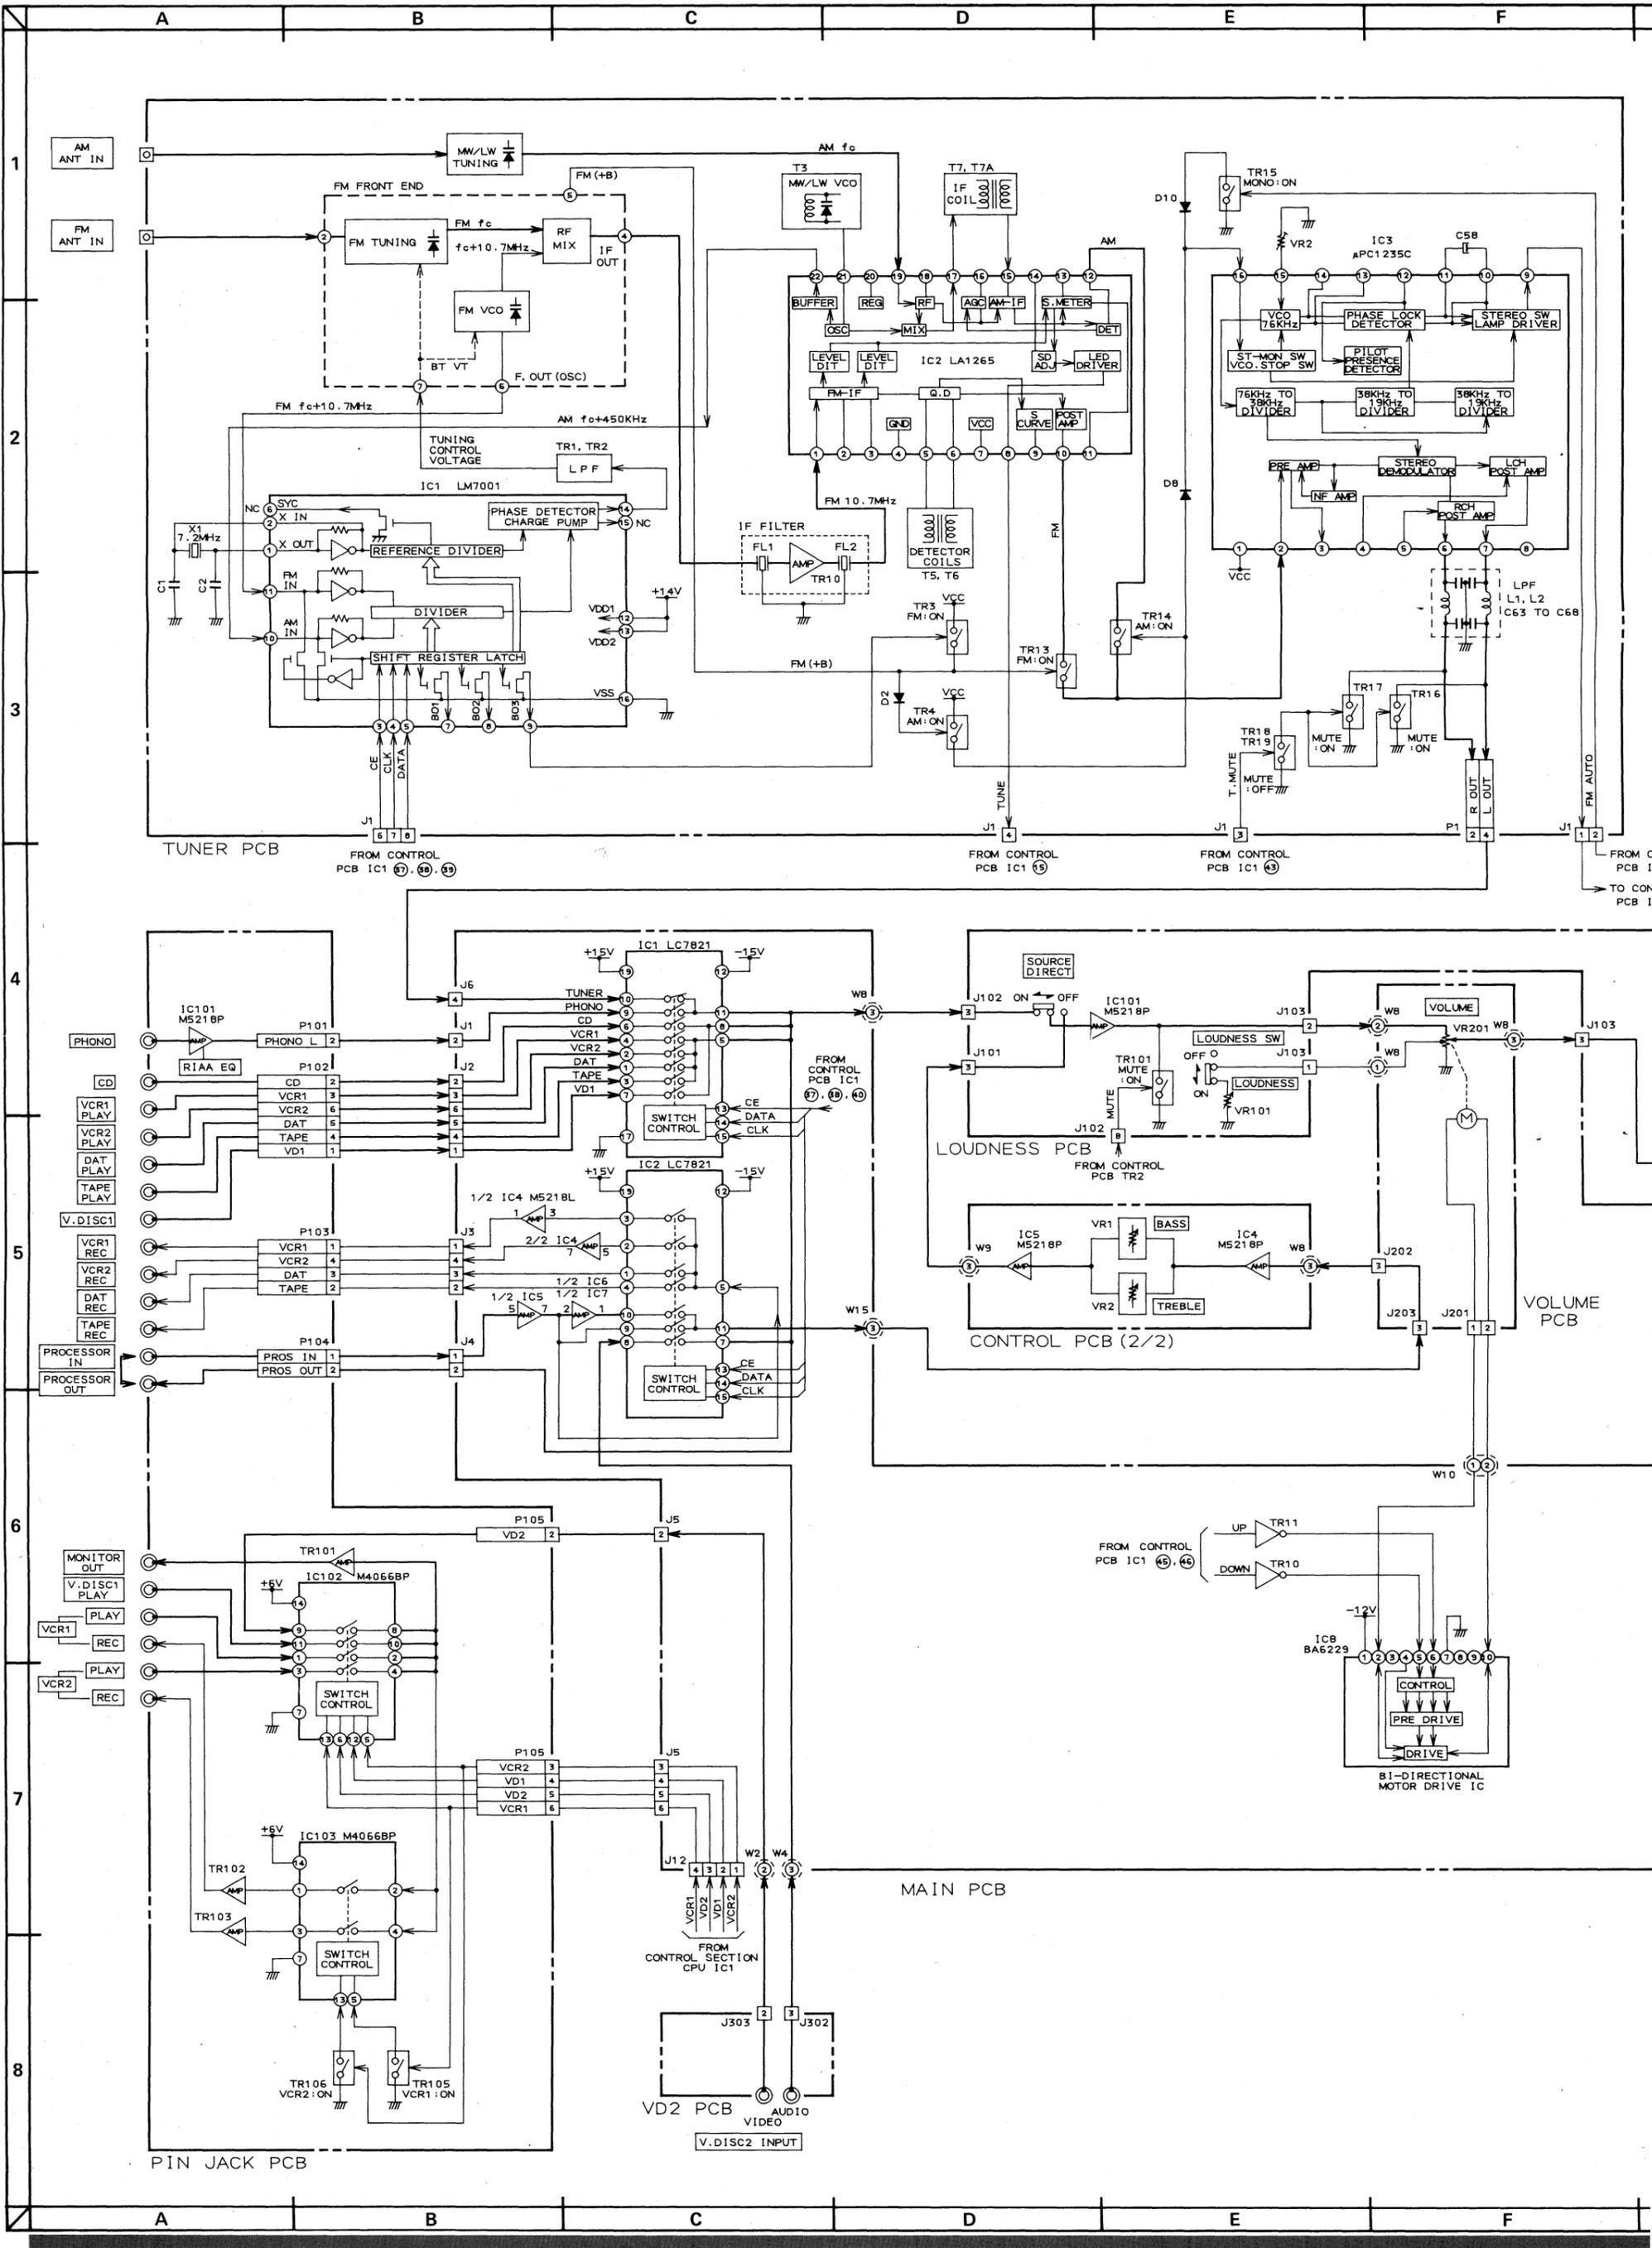

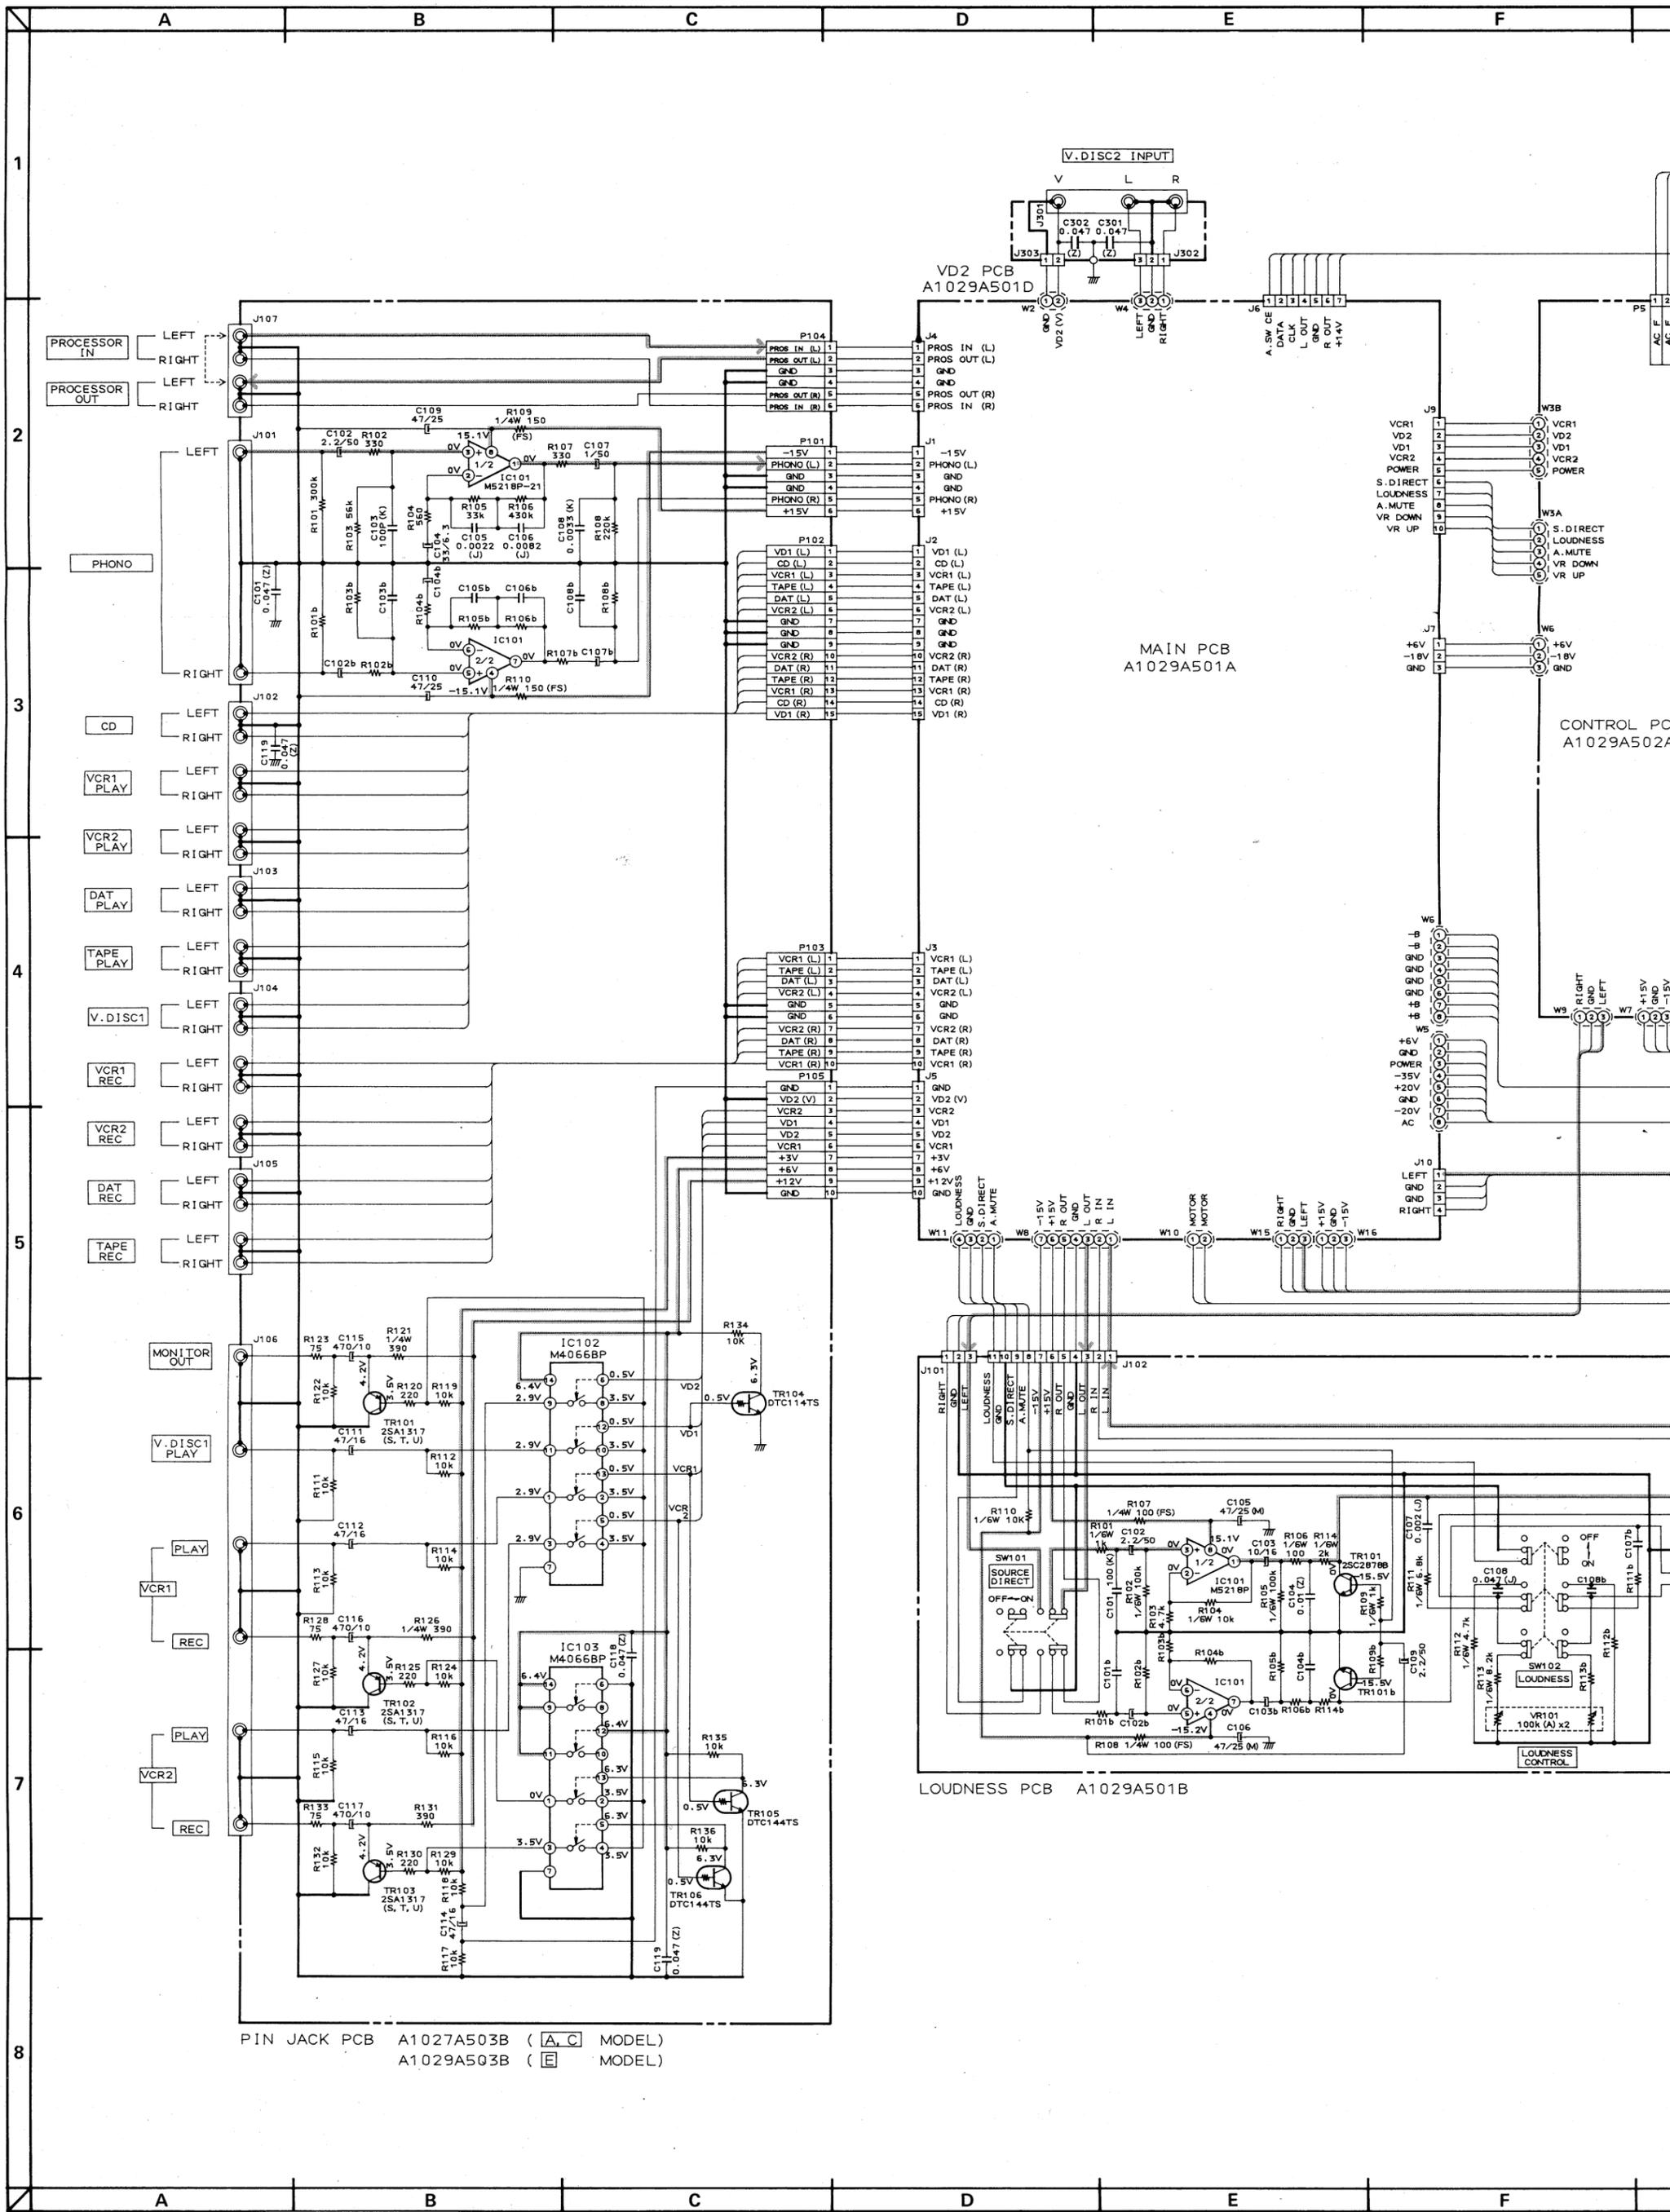

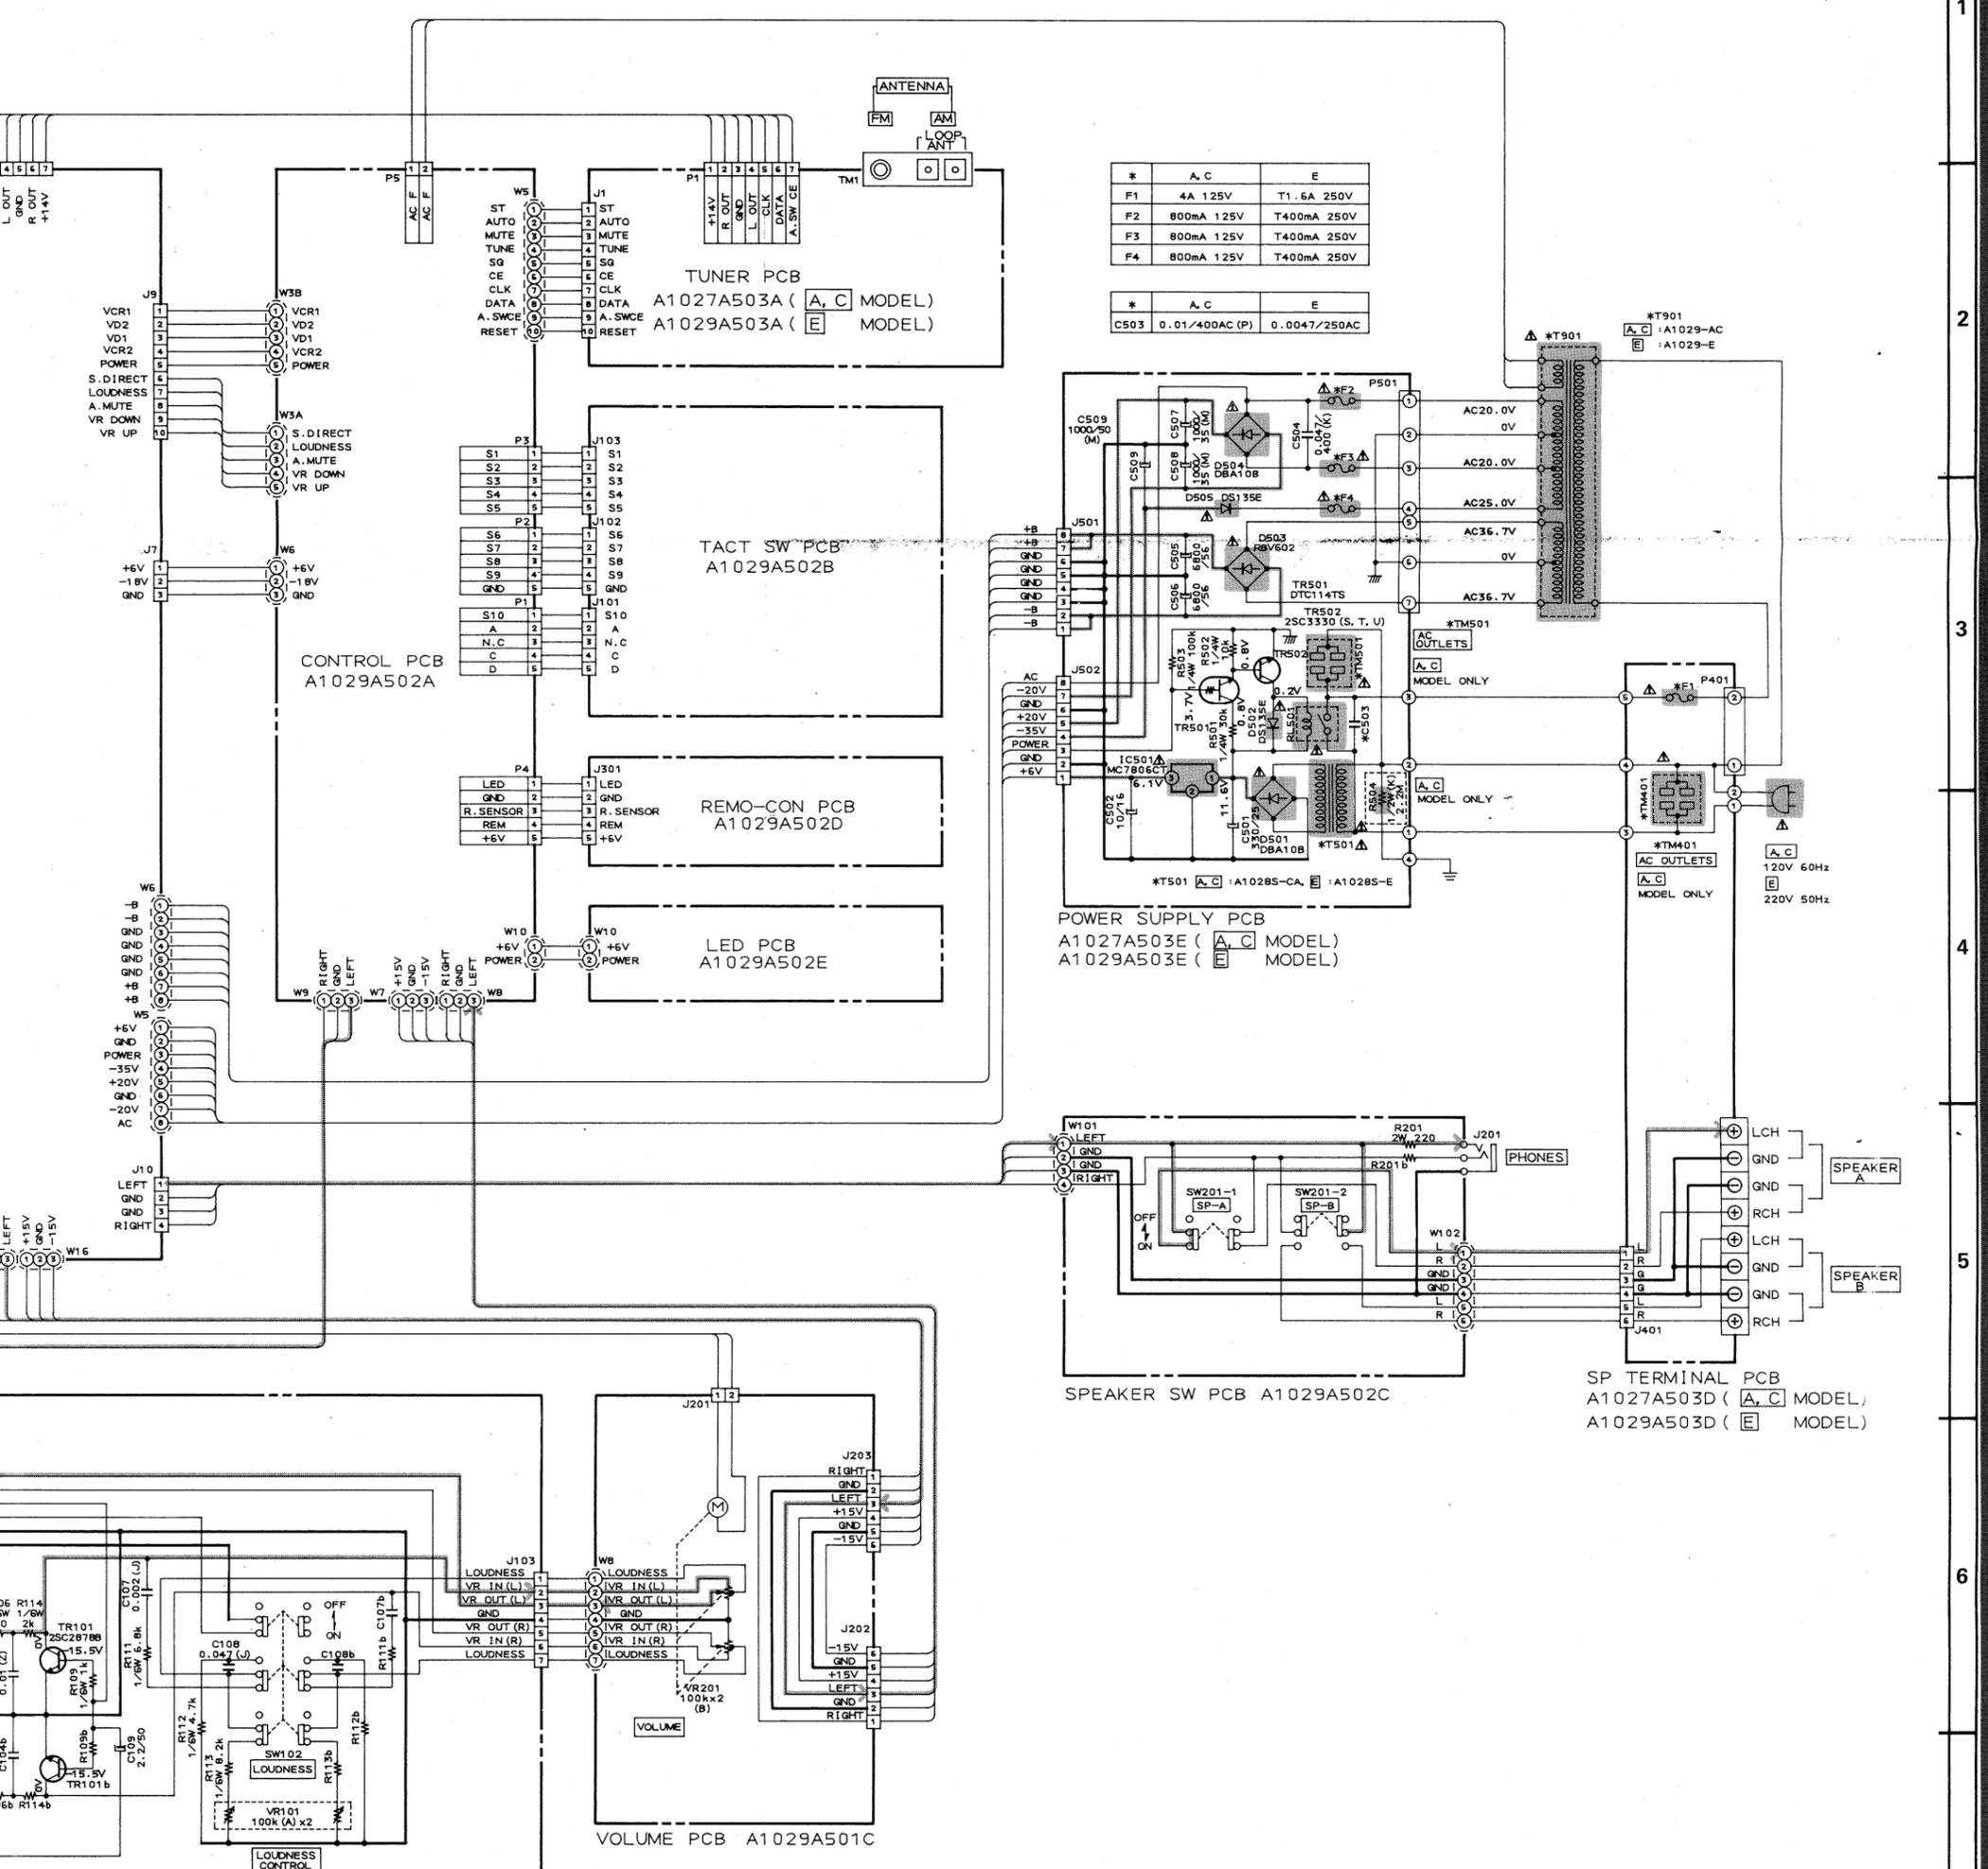



AA-V235
CONNECTION DIAGRAM
NO. 4-1 A102901M

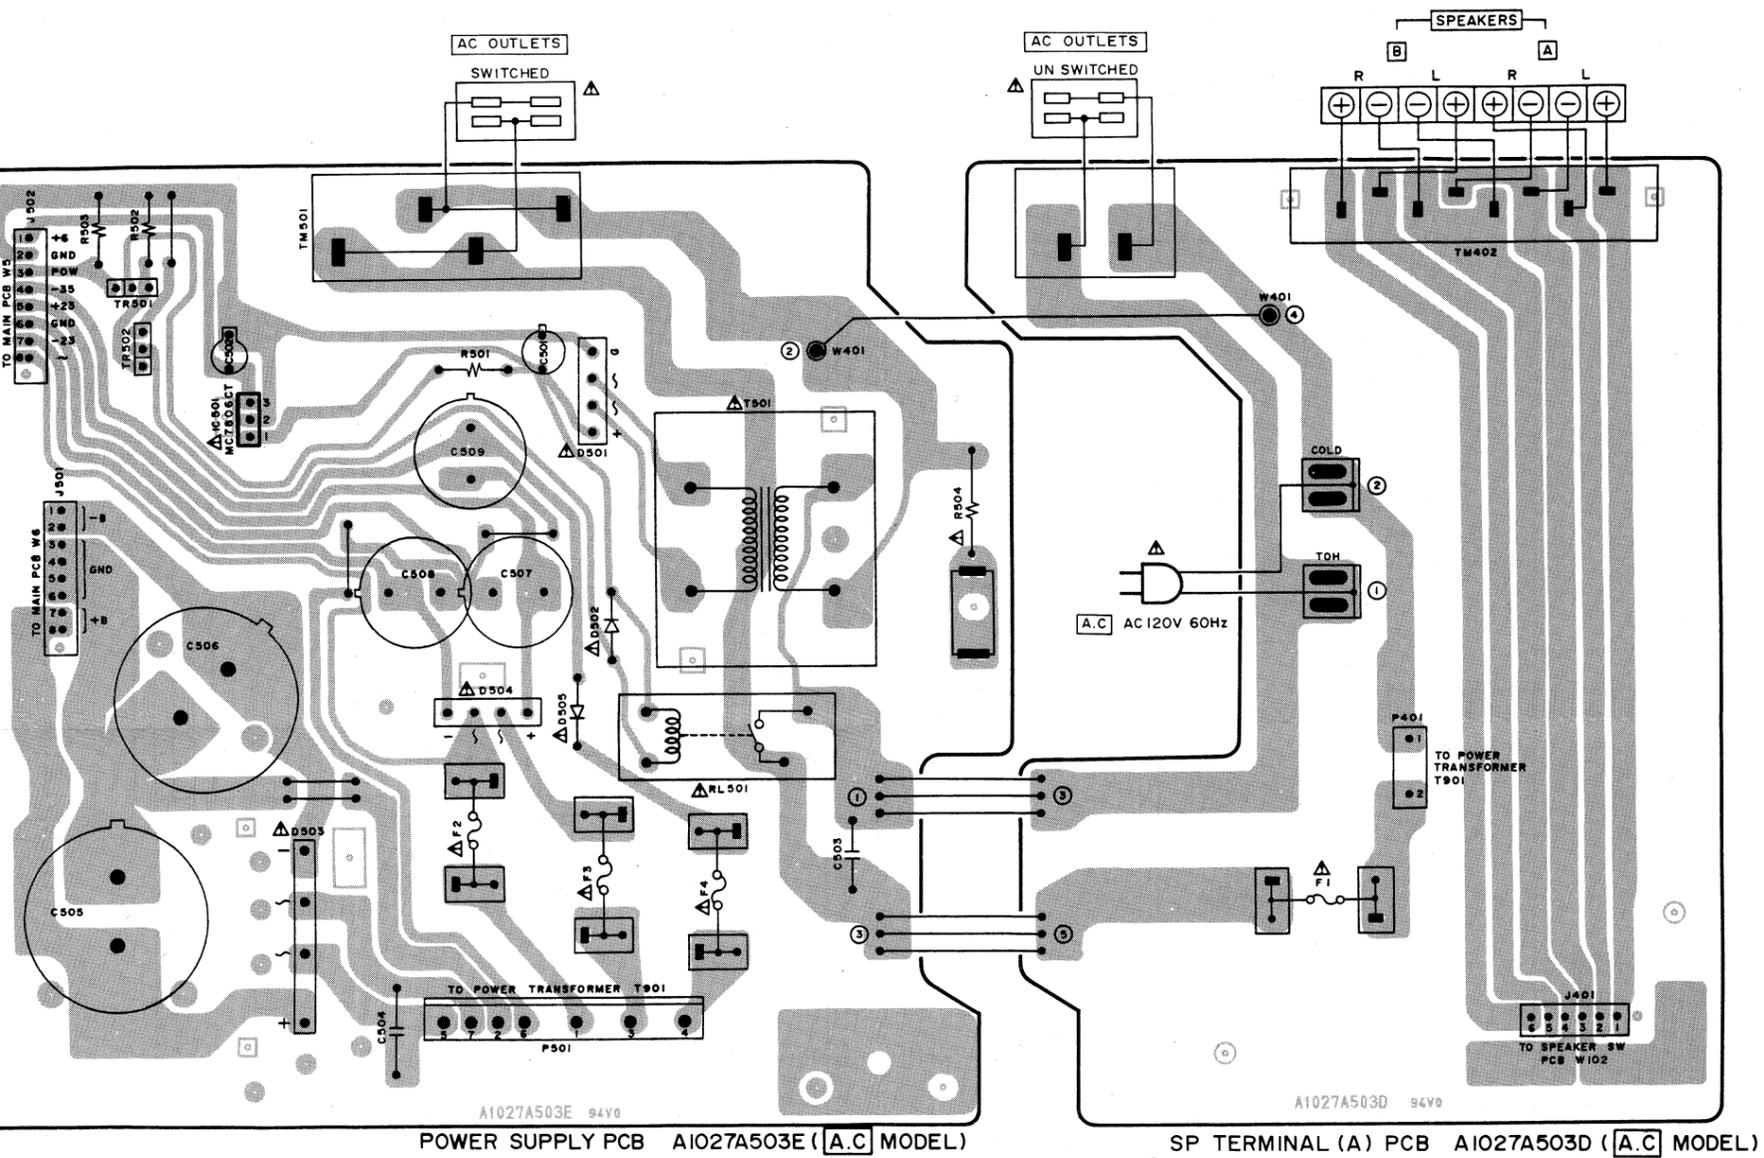

POWER SUPPLY PCB A1027A503E (A.C. MODEL)

SP TERMINAL (A) PCB A1027A503D (A.C. MODEL)


● NPN TRANSISTOR

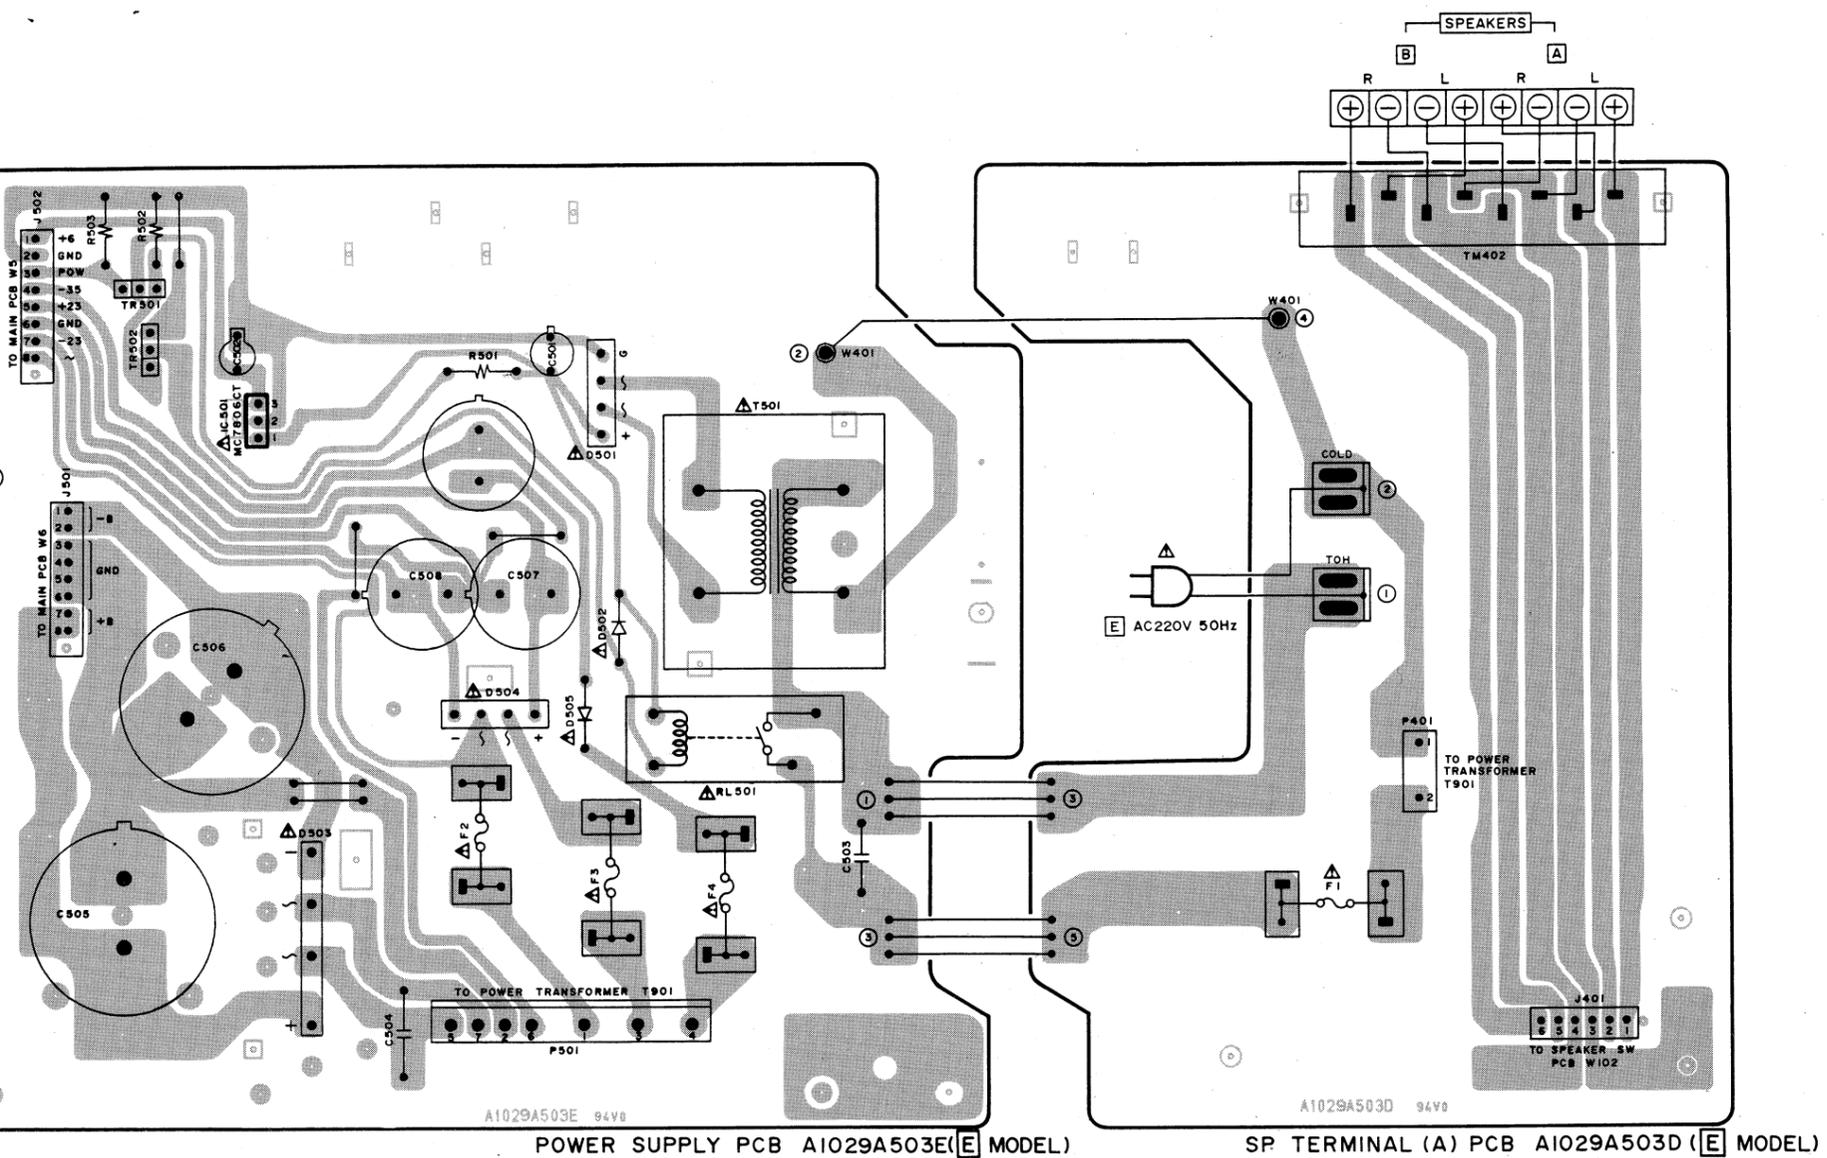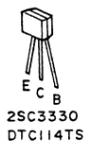


POWER SUPPLY PCB A1029A503E (E MODEL)

SP TERMINAL (A) PCB A1029A503D (E MODEL)


● NPN TRANSISTOR

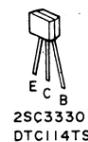

WARNING: Δ INDICATES SAFETY CRITICAL COMPONENTS FOR CONTINUED SAFETY. REPLACE SAFETY CRITICAL COMPONENTS ONLY WITH MANUFACTURER'S RECOMMENDED PARTS.
 AVERTISSEMENT: Δ IL INDIQUE LES COMPOSANTS CRITIQUES DE SÉCURITÉ. POUR MAINTENIR LE DEGRÉ DE SÉCURITÉ DE L'APPAREIL, NE REMPLACER QUE DES PIÈCES RECOMMANDÉES PAR LE FABRICANT

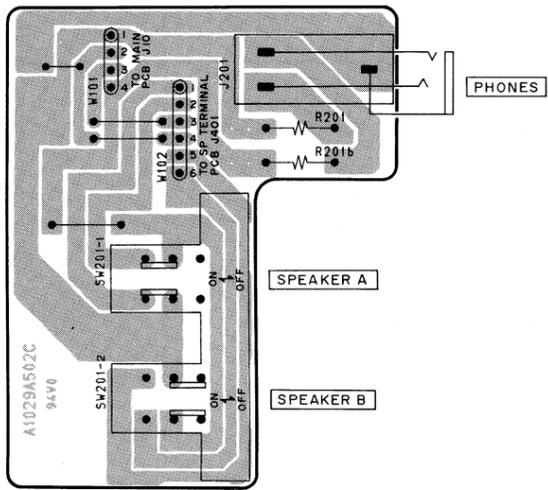


SPEAKER SW PCB
A1029A502C

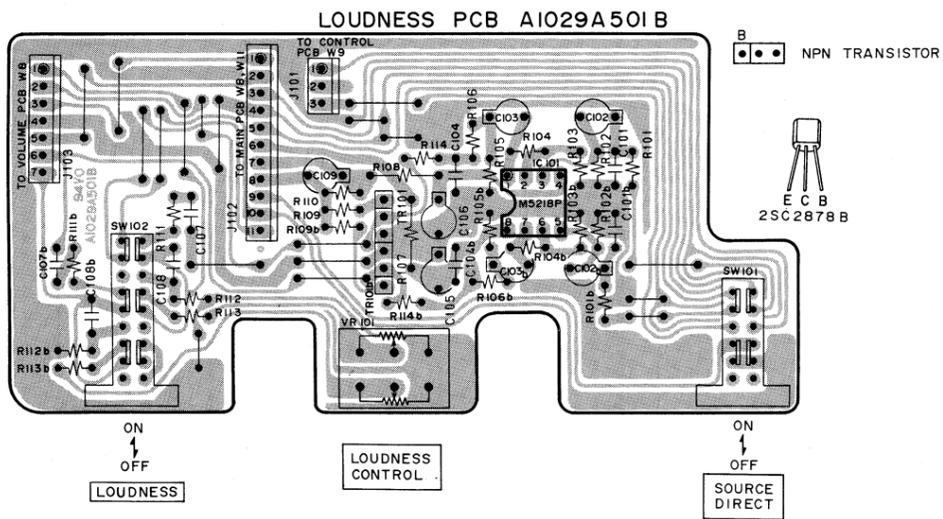


LOUDNESS PCB A1029A501B

NPB TRANSISTOR

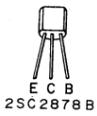


2SC2878 B

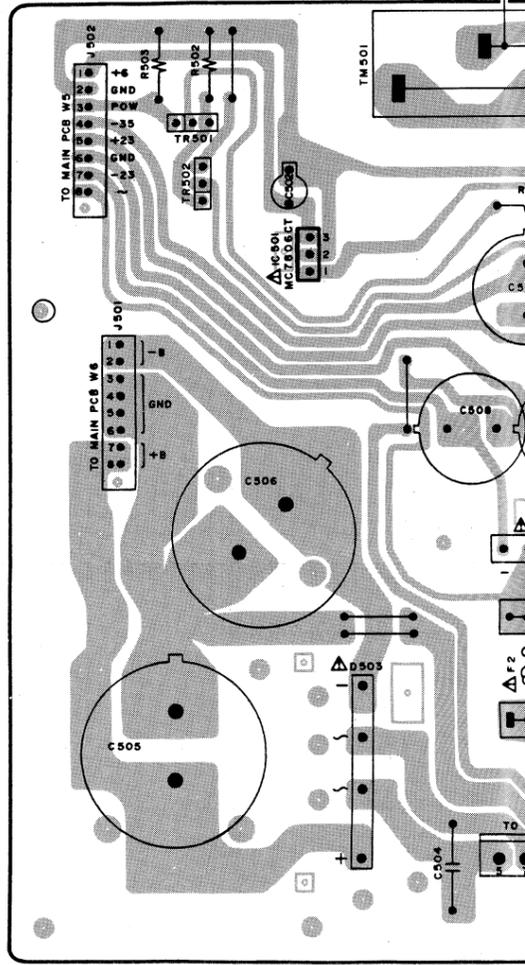


POWER

NPB TRANSISTOR

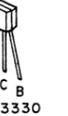

2SC3330
DTC114TS

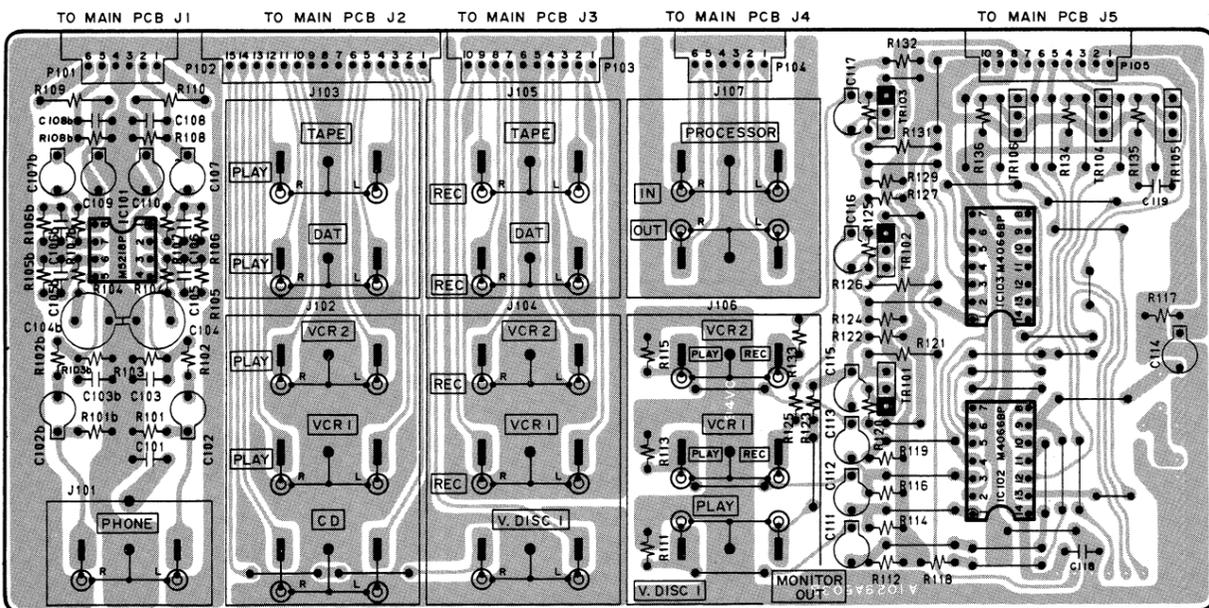


PIN JACK PCB A1027A503B (A, C MODEL)
A1029A503B (E MODEL)

PNP TRANSISTOR
NPB TRANSISTOR




2SA1317
DTC144TS

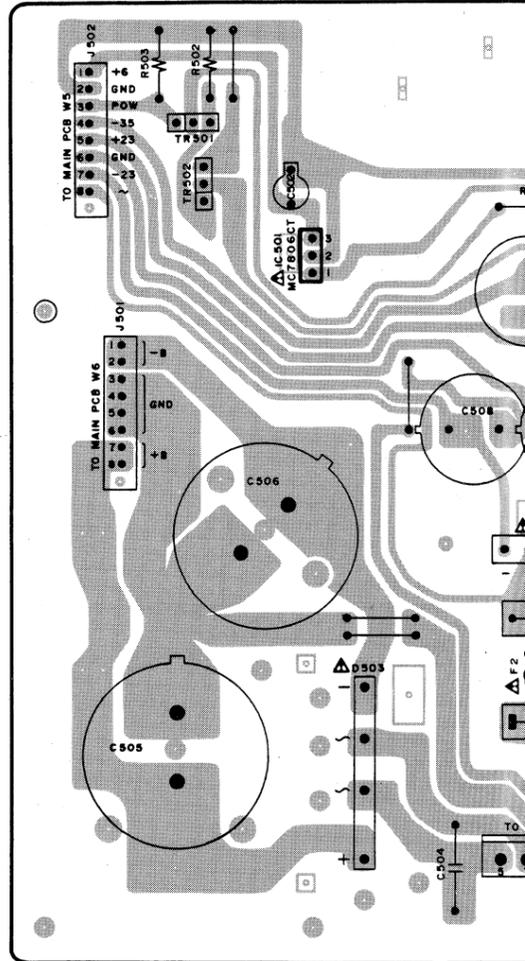

NPB TRANSISTOR



2SC3330
DTC114TS

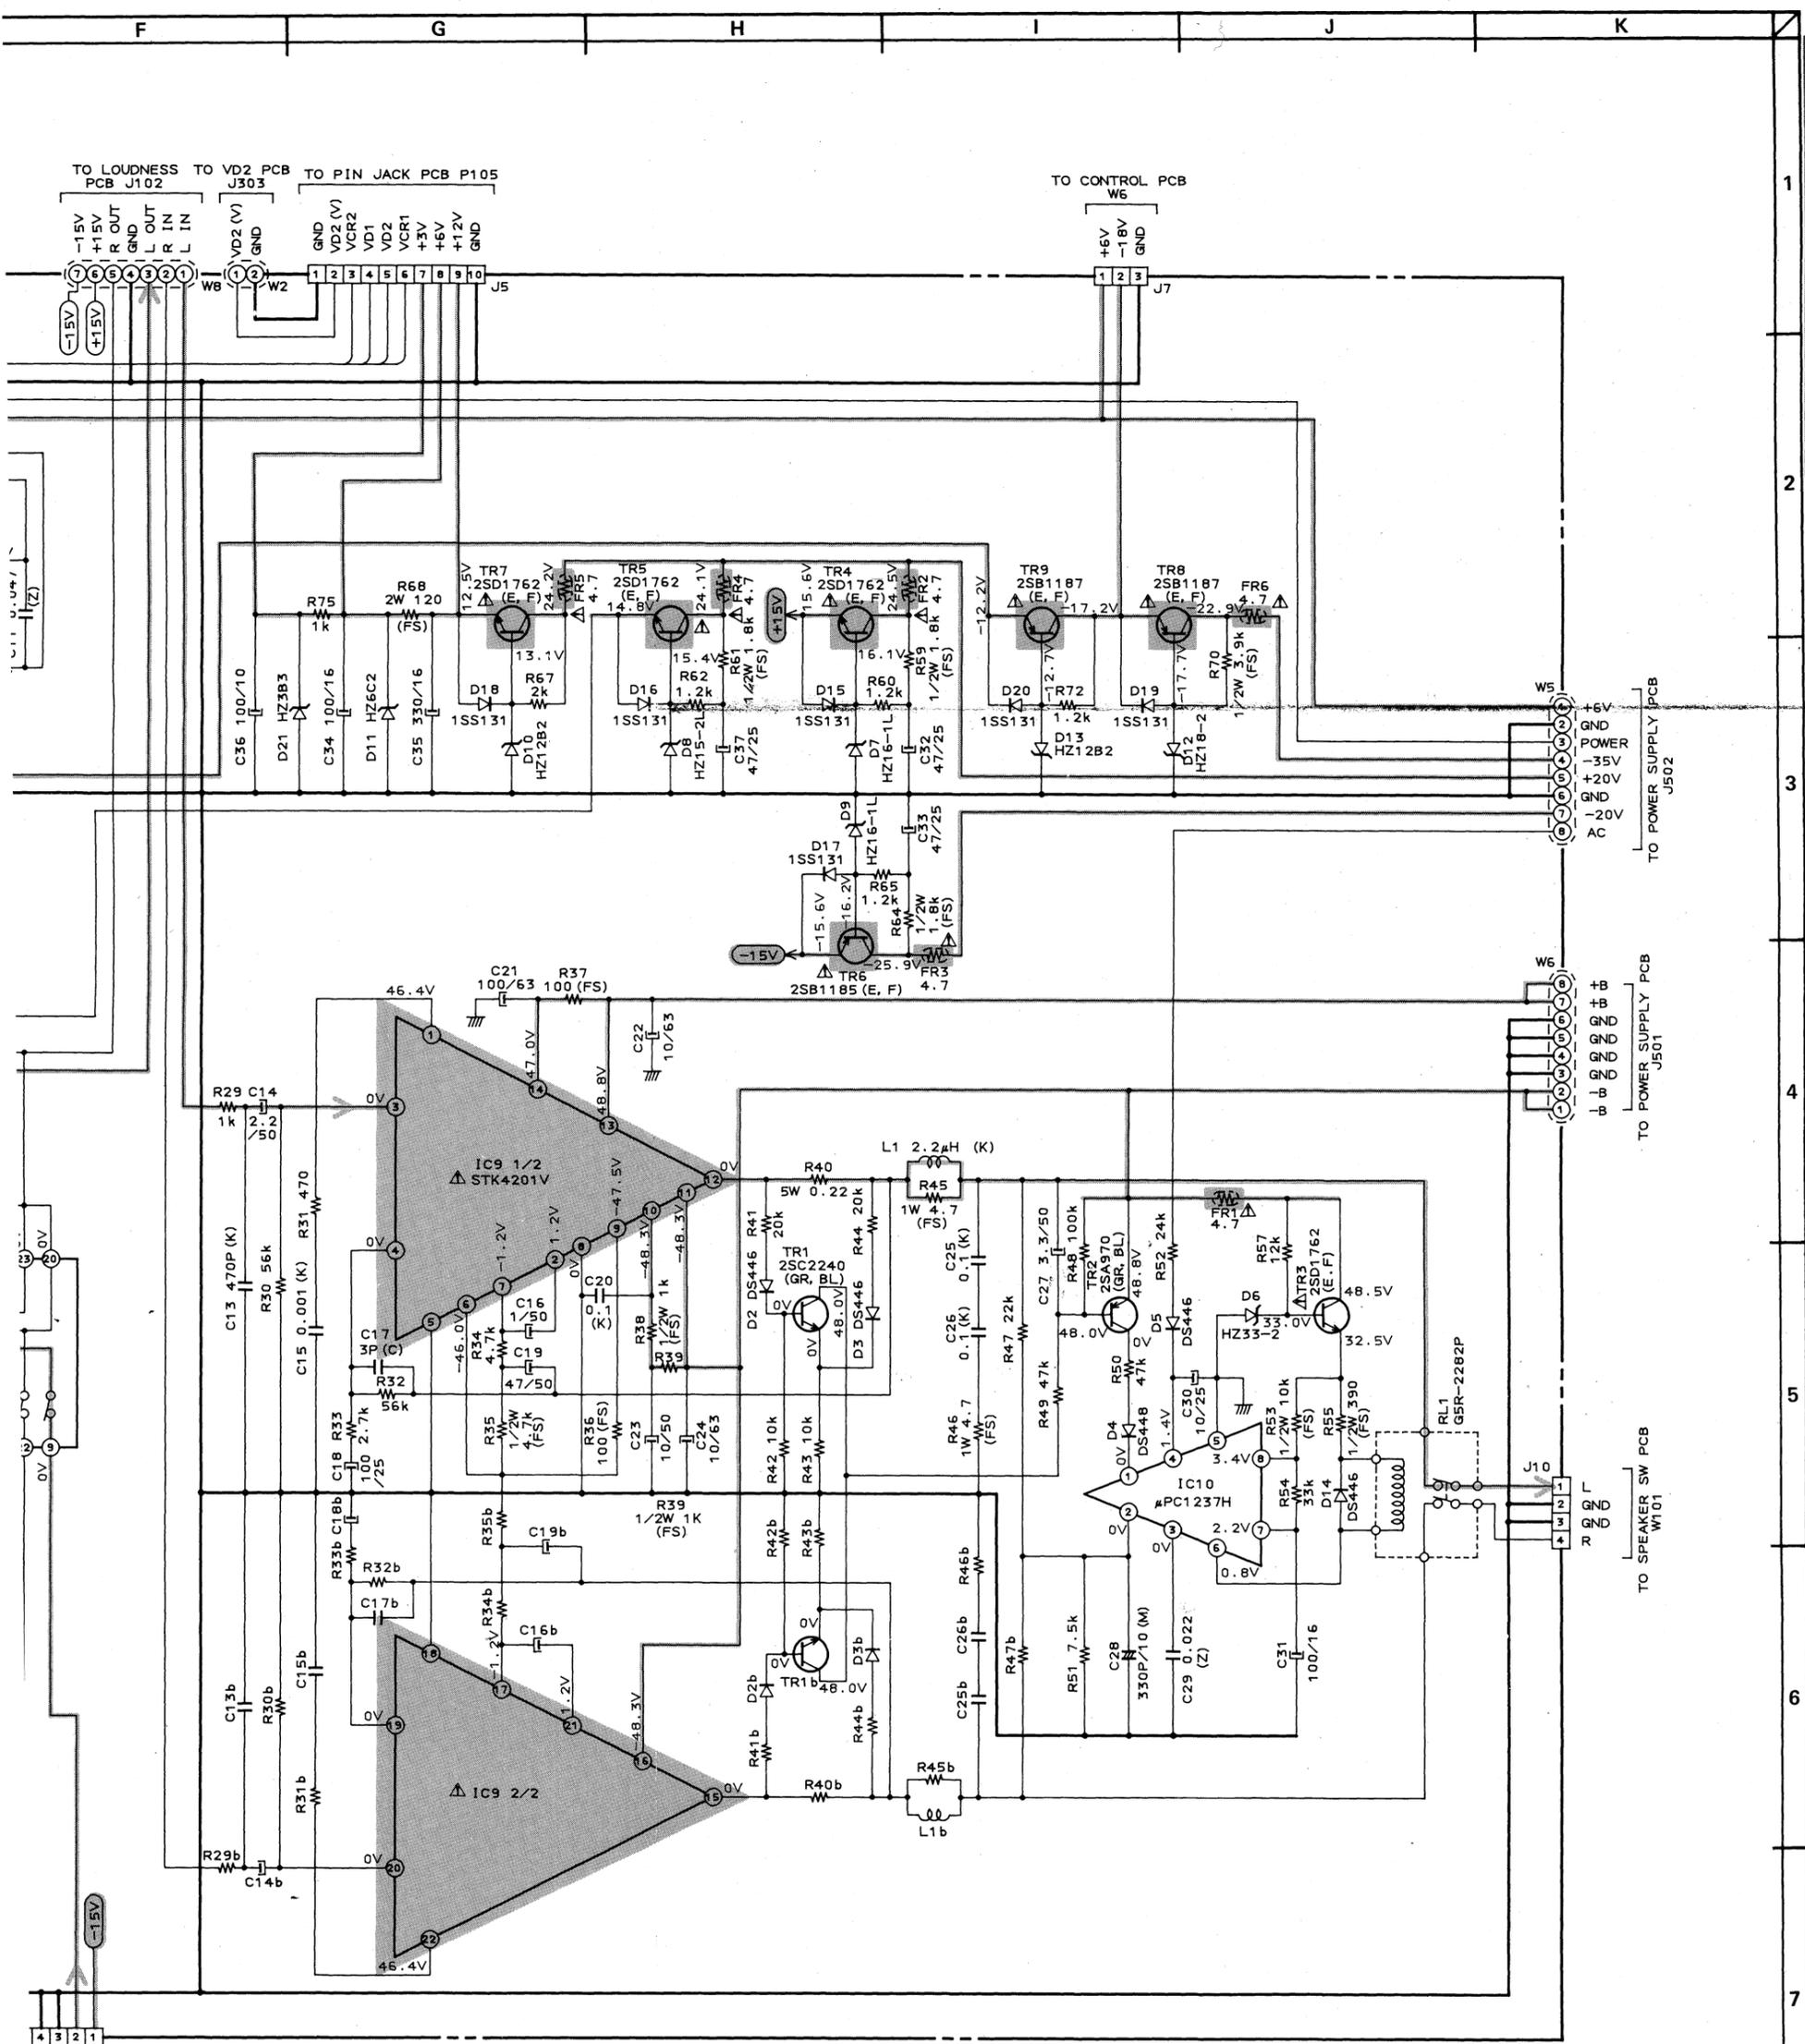

GND
 PHONO (L)
 -15V
 JACK PCB
 P101

— B (POWER SUPPLY) LINE
 — SIGNAL LINE


*INDICATED VOLTAGES ARE MEASURED IN PHONO MODE AND VOLUME IS SET TO MINIMUM.
 *INDICATED SIGNAL LINE IS IN PHONO MODE AND LEFT CHANNEL ONLY.

WARNING: Δ AND \blacksquare INDICATE SAFETY CRITICAL COMPONENTS FOR CONTINUED SAFETY. REPLACE SAFETY CRITICAL COMPONENTS ONLY WITH MANUFACTURER'S RECOMMENDED PARTS.
 AVERTISSEMENT: Δ ET \blacksquare , ILS INDIQUENT LES COMPOSTANTS CRITIQUES DE SÉCURITÉ. POUR MAINTENIR LE DEGRÉ DE SÉCURITÉ DE L'APPAREIL, NE REMPLACER QUE DES PIÈCES RECOMMANDÉES PAR LE FABRICANT.



NOTE
 UNLESS OTHERWISE SPECIFIED
 ALL RESISTORS IN OHMS 1/4W(J)
 ALL CAPACITORS IN μ F 50WV(M)

AA-V235
 MAIN PCB
 SCHEMATIC DIAGRAM
 NO.4-2 A102902M

1
2
3
4
5
6
7
8

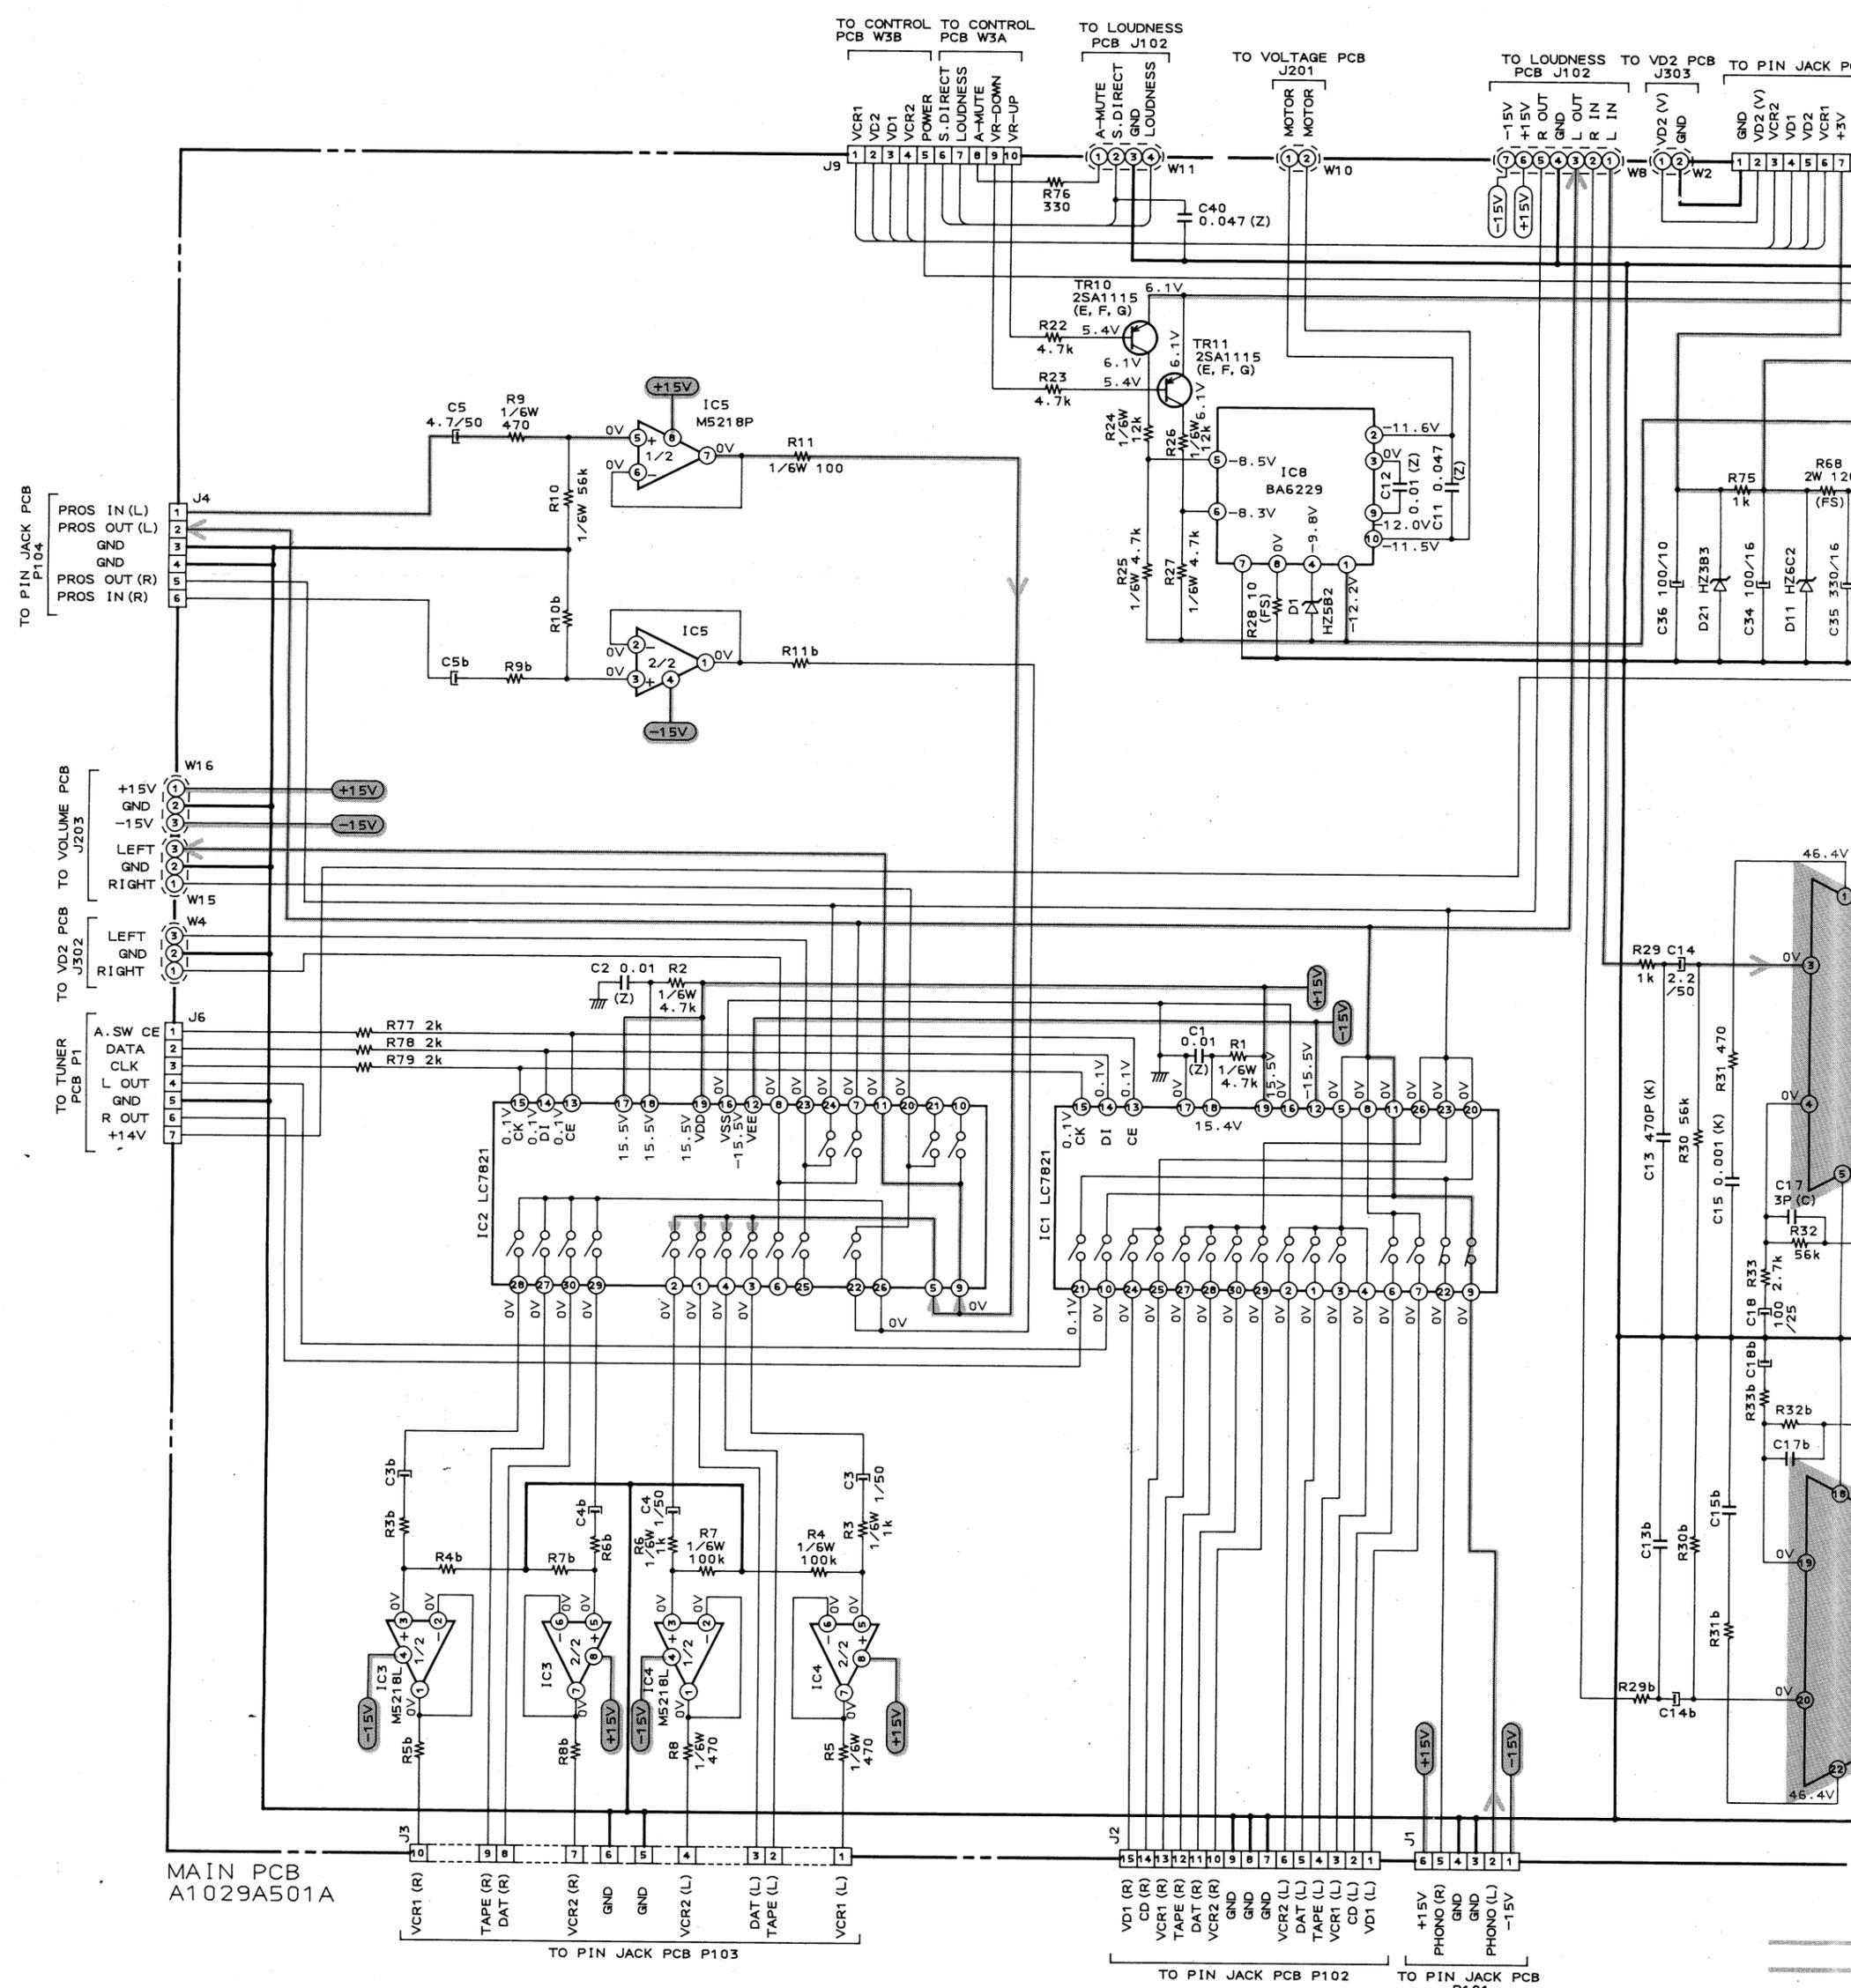



*INDICATED VOLTAGE AND VOLUME IS SET
*INDICATED SIGNAL LEFT CHANNEL ONLY

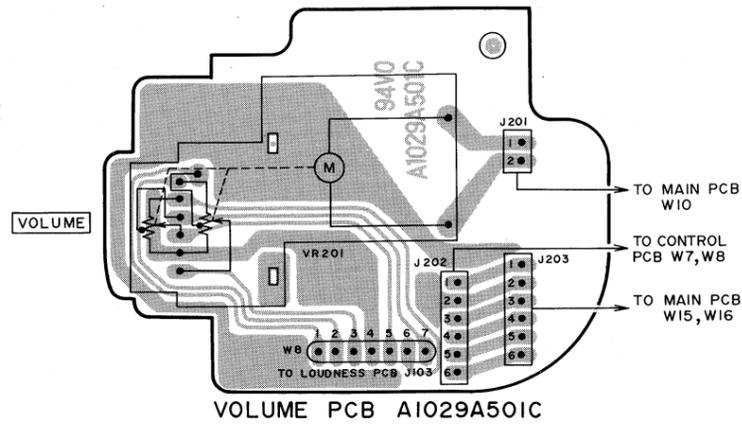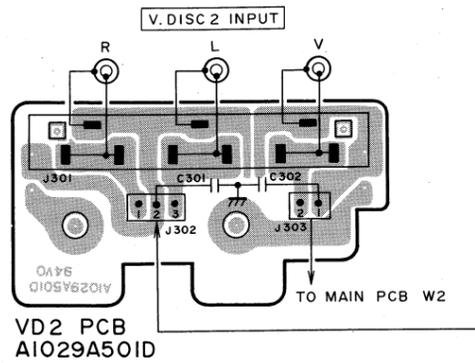

LOCATION OF COMPONENTS


IC's	TRANSISTOR's
IC 1.....A3	TR 1.....E6
IC 2.....C3	TR 1b.....F5
IC 3.....A4	TR 2.....F5
IC 4.....A4	TR 3.....F6
IC 5.....B5	TR 4.....B5
IC 8.....F1,2	TR 5.....B6
IC 9.....D5	TR 6.....B6
IC10.....F6	TR 7.....A6
	TR 8.....F2
	TR 9.....F2
	TR10.....F2
	TR11.....F2

CONNECTORS	
J 1.....A2	W 2.....A6
J 2.....A3	W 4.....F1
J 3.....A4	W 5.....A6
J 4.....A4	W 6.....B6
J 5.....A5,6	W 8.....E3
J 6.....E1	W10.....F2
J 7.....E2	W11.....F3
J 9.....F6	W15.....E3
J10.....D6	W16.....E3

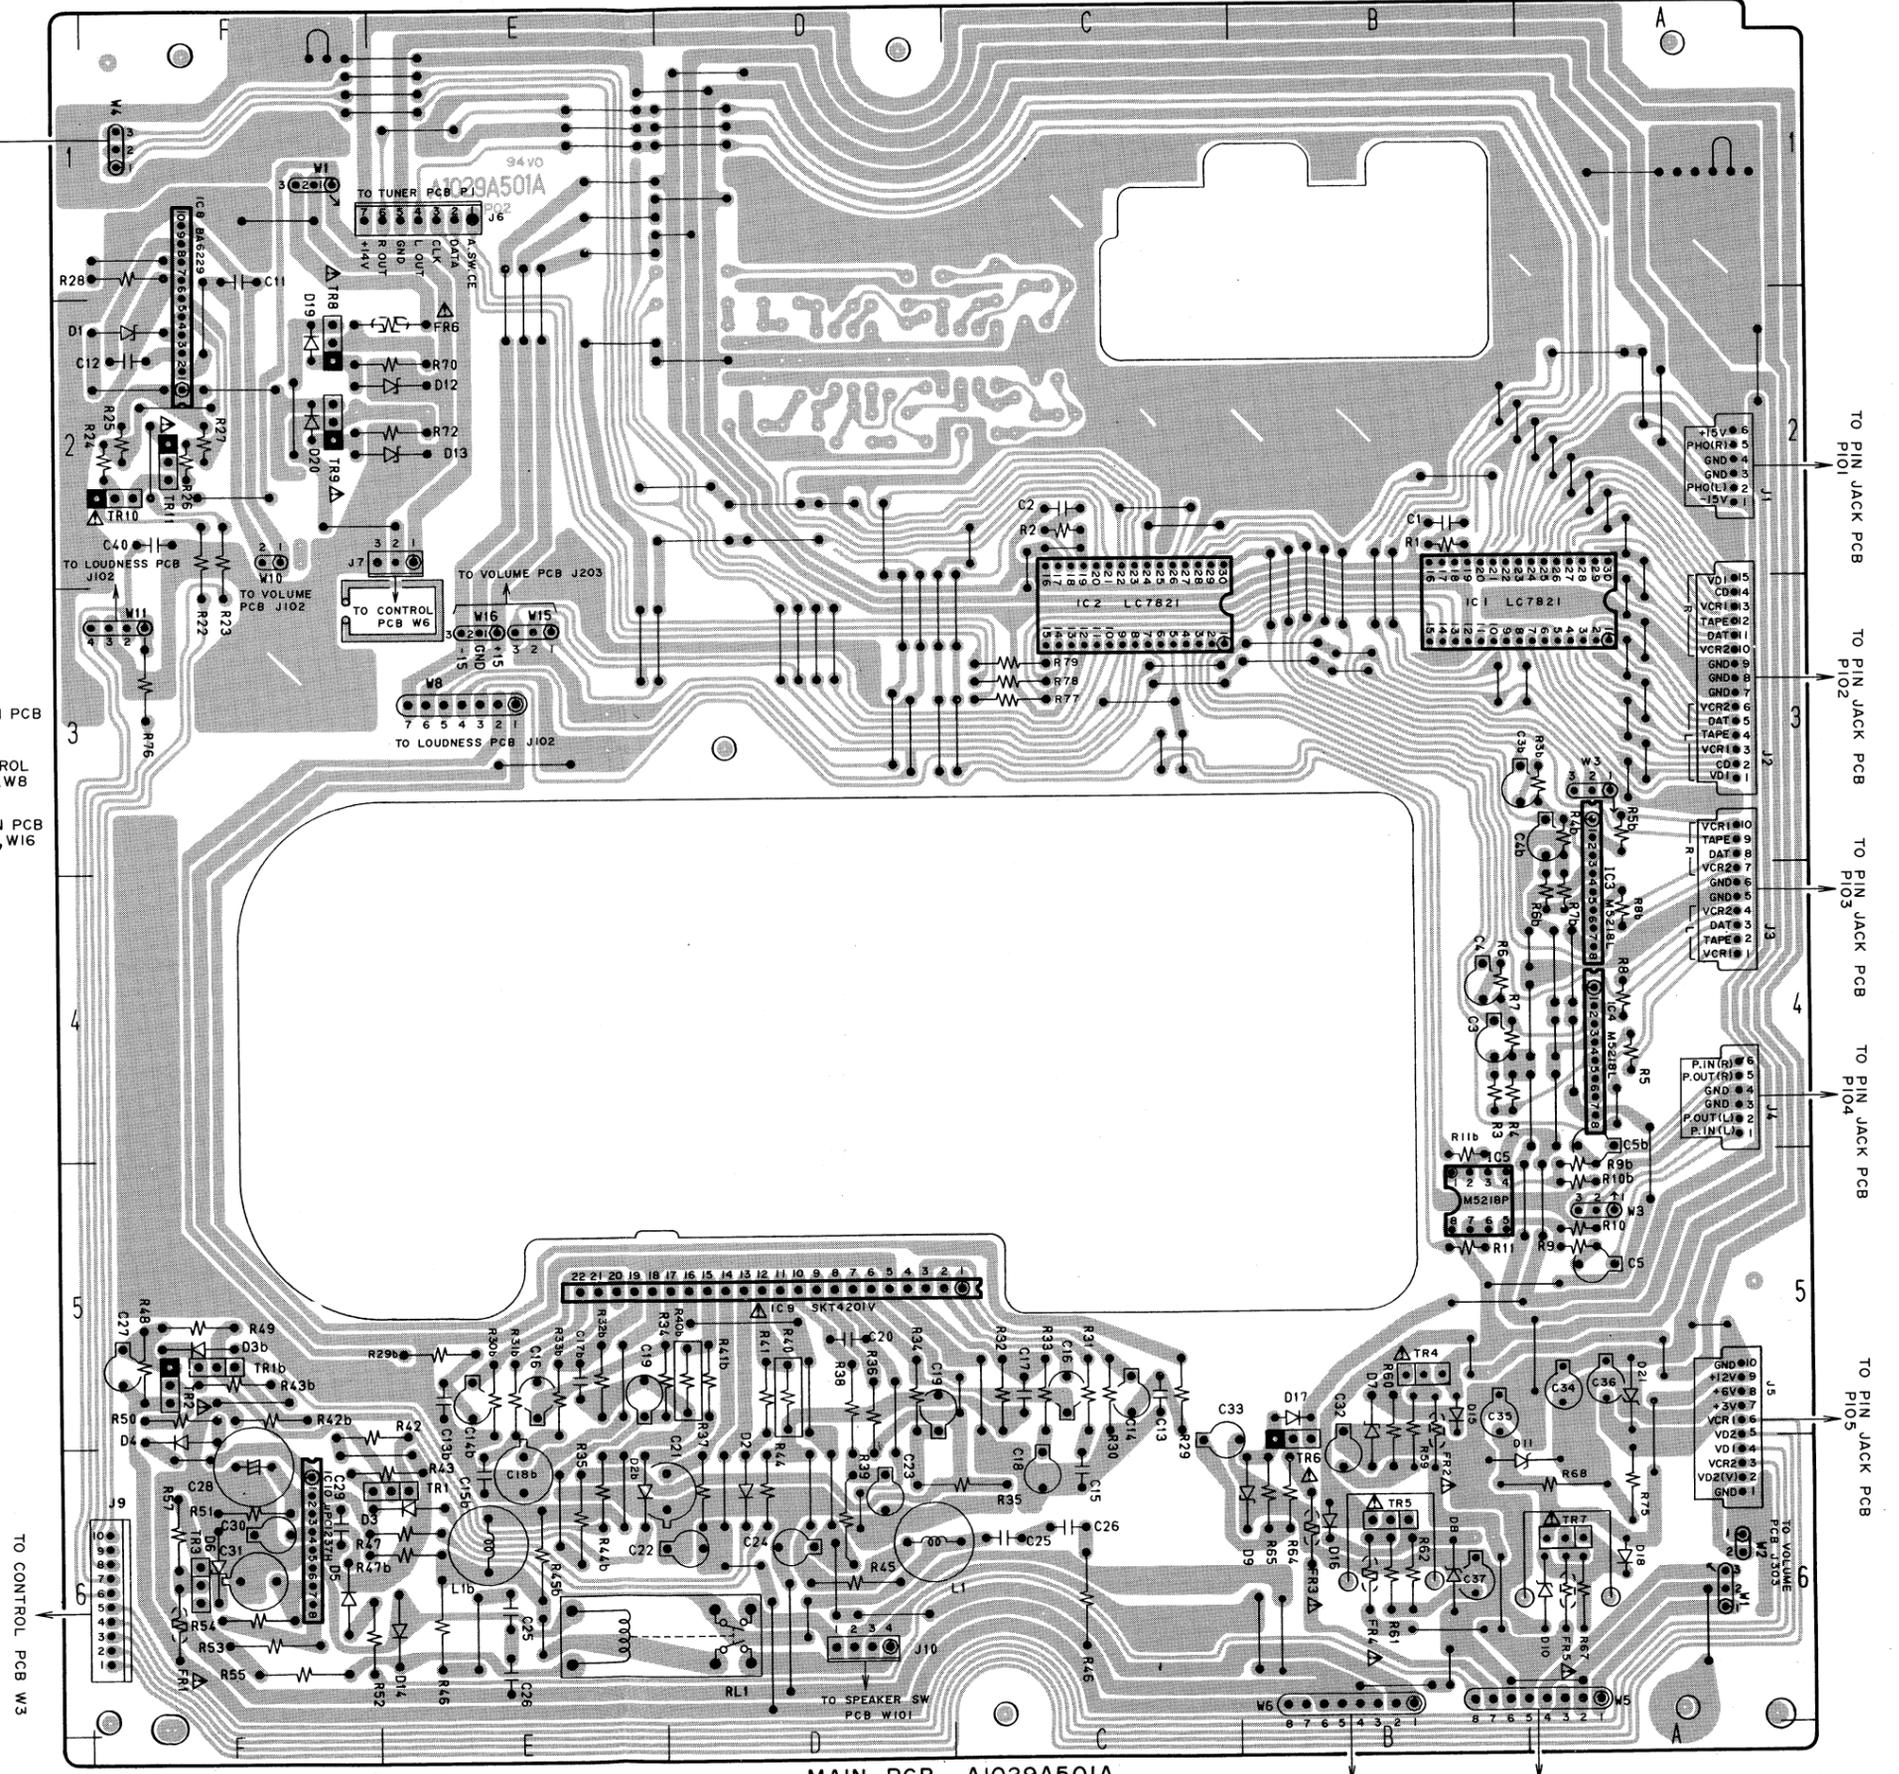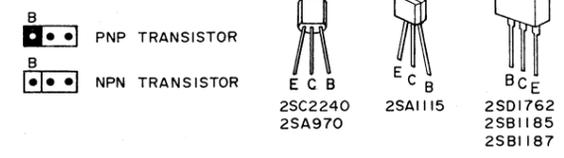

WARNING: Δ INDICATES SAFETY CRITICAL COMPONENTS FOR CONTINUED SAFETY. REPLACE SAFETY CRITICAL COMPONENTS ONLY WITH MANUFACTURER'S RECOMMENDED PARTS.

AVERTISSEMENT: Δ IL INDIQUE LES COMPOSANTS CRITIQUES DE SÉCURITÉ. POUR MAINTENIR LE DEGRÉ DE SÉCURITÉ DE L'APPAREIL, NE REMPLACER QUE DES PIÈCES RECOMMANDÉES PAR LE FABRICANT

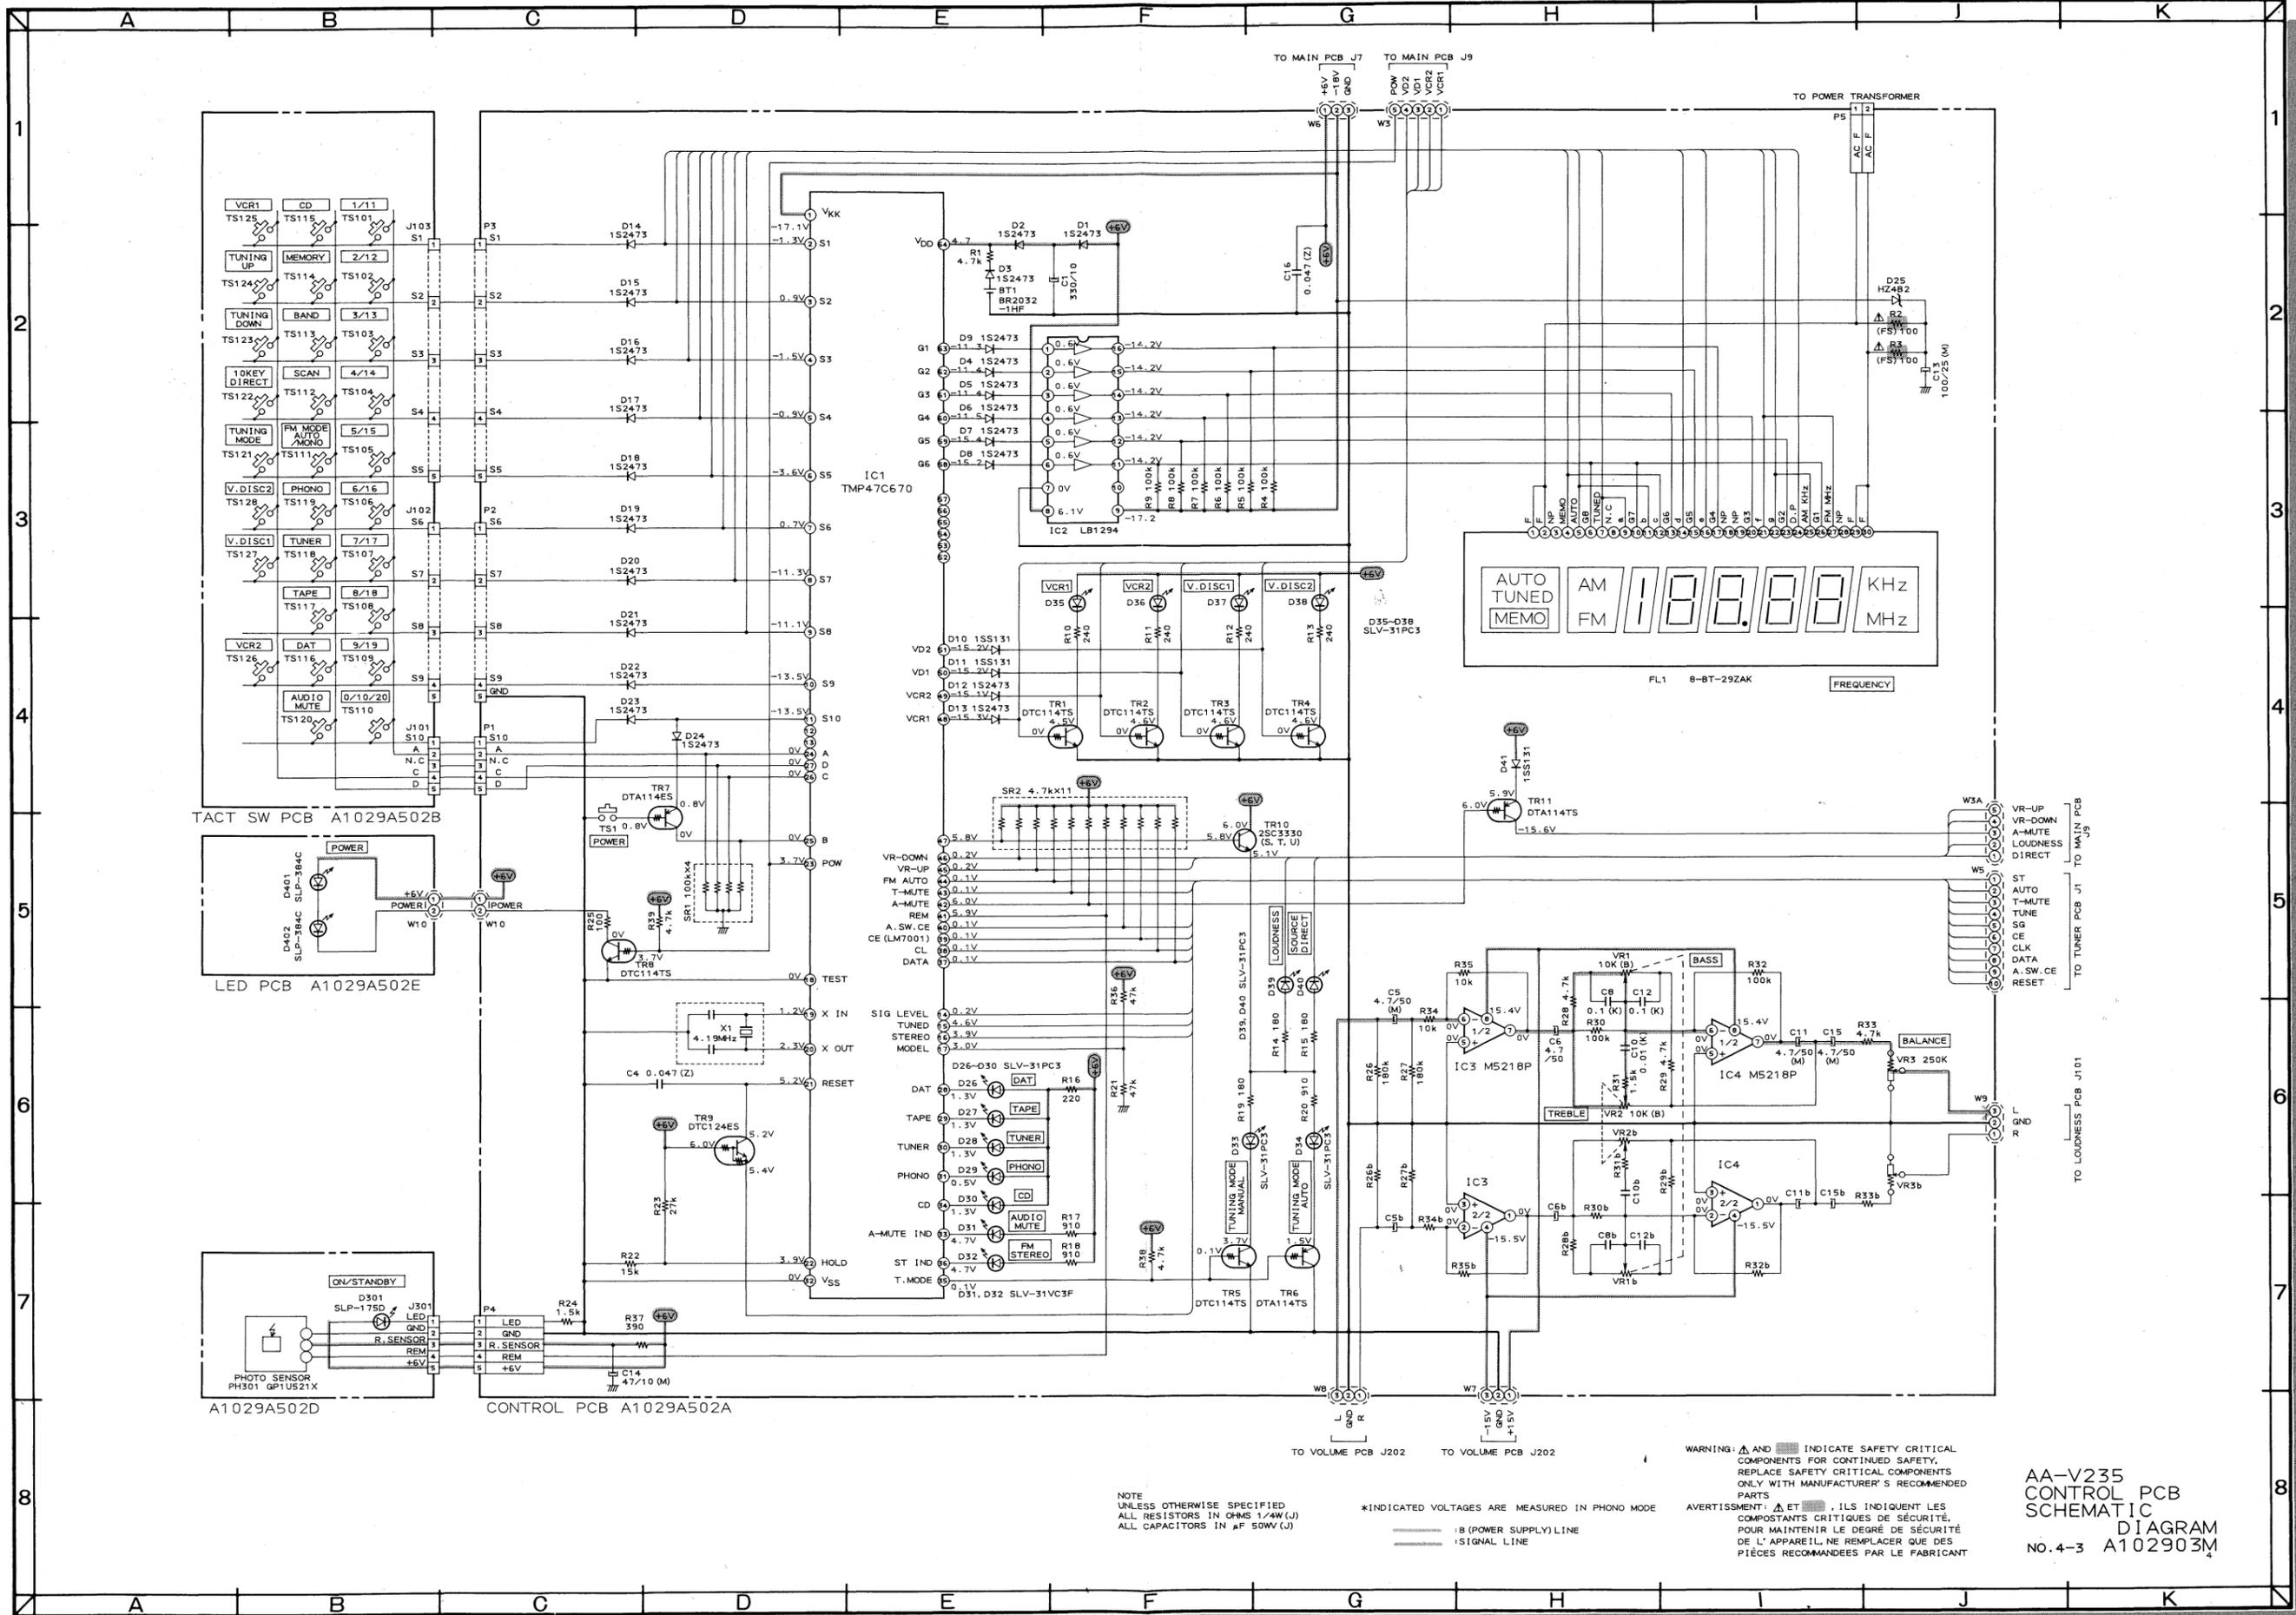


NOTE
UNLESS OTHERWISE SPECIFIED
ALL RESISTORS IN OHMS 1/4W(J)
ALL CAPACITORS IN μF 50WV(J)


*INDICATED VOLTAGES ARE MEASURED IN PHONO MODE
— B (POWER SUPPLY) LINE
— SIGNAL LINE

WARNING: ⚠ AND ■ INDICATE SAFETY CRITICAL COMPONENTS FOR CONTINUED SAFETY. REPLACE SAFETY CRITICAL COMPONENTS ONLY WITH MANUFACTURER'S RECOMMENDED PARTS
AVERTISSEMENT: ⚠ ET ■ ILS INDICENT LES COMPOSANTS CRITIQUES DE SÉCURITÉ, POUR MAINTENIR LE DEGRÉ DE SÉCURITÉ DE L'APPAREIL, NE REMPLACER QUE DES PIÈCES RECOMMANDÉES PAR LE FABRICANT


AA-V235
CONTROL PCB
SCHEMATIC
DIAGRAM
NO.4-3 A102903M

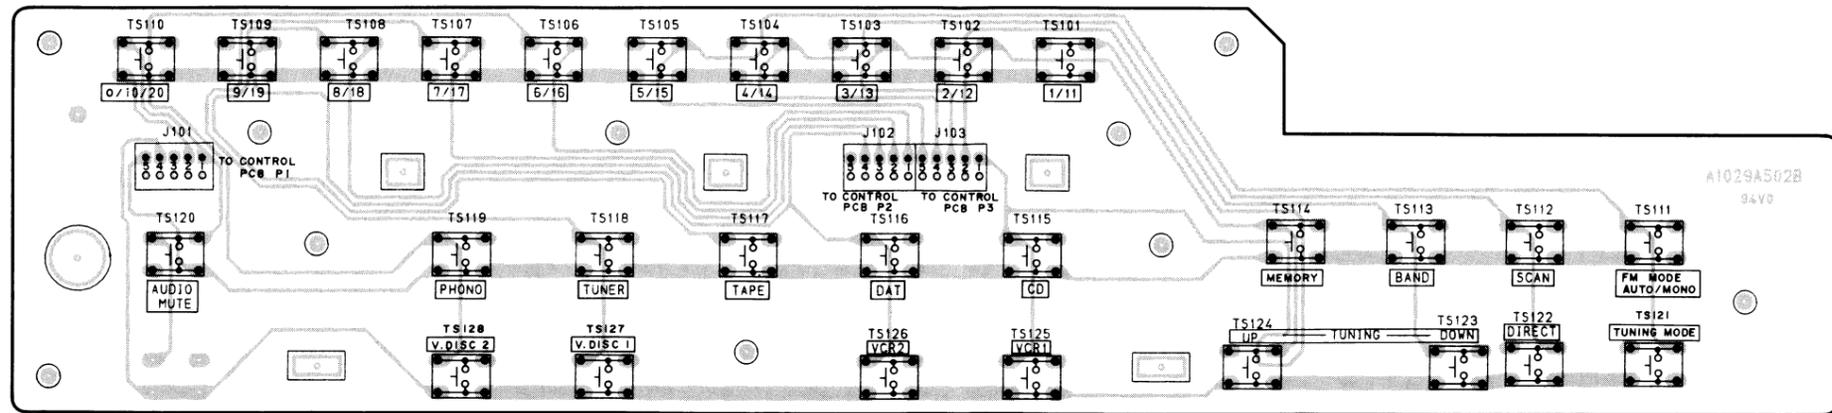


TACT SW PCB A1029A502B

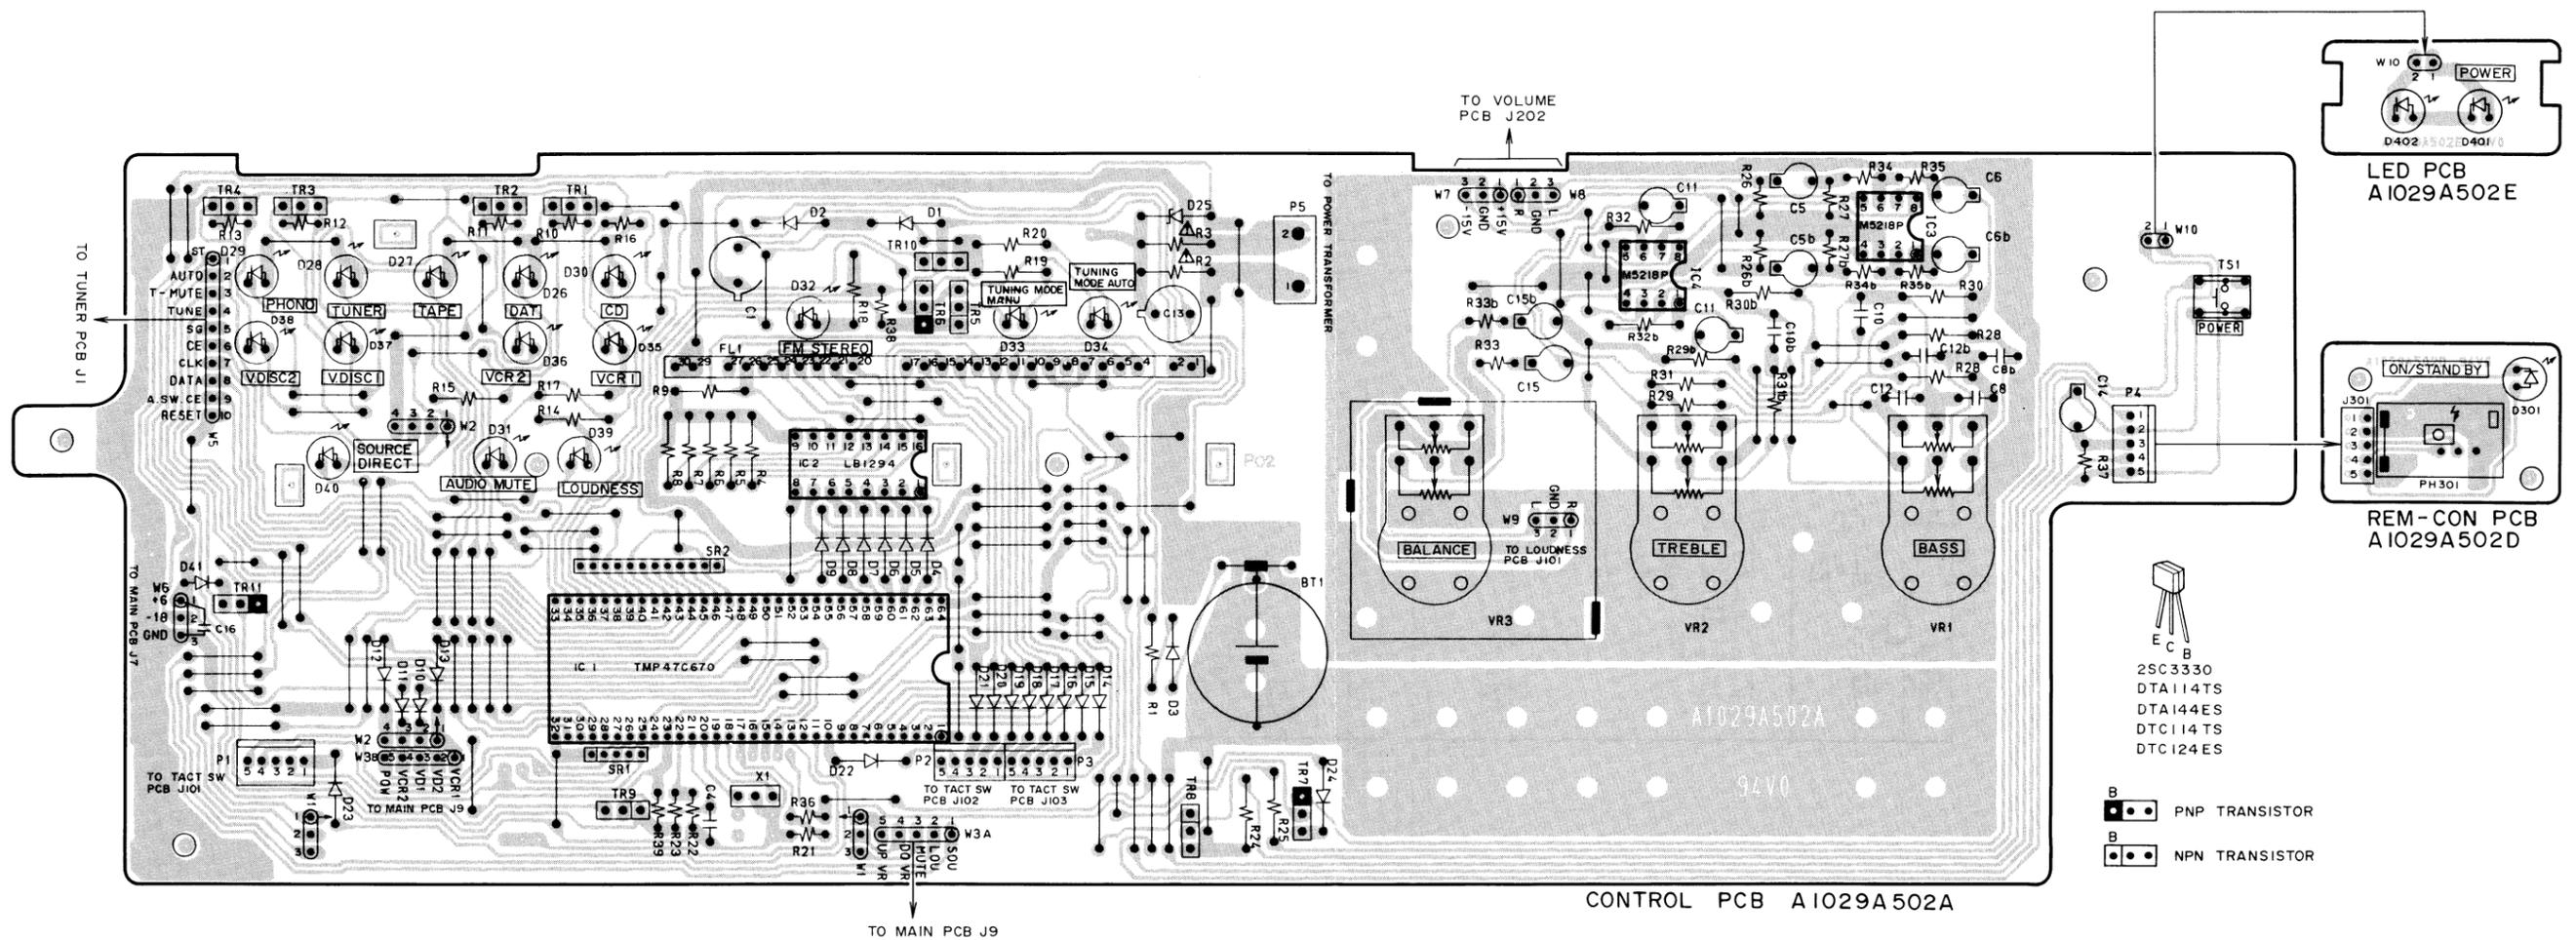


CONTROL PCB A1029A502A

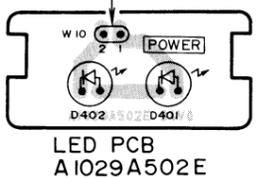

LED PCB A1029A502E

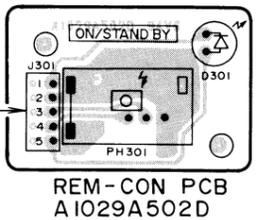


REM-CON PCB A1029A502D

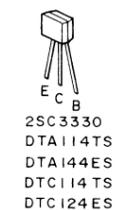


- 2SC3330
 - DTA114TS
 - DTA144ES
 - DTC114TS
 - DTC124ES
- PNP TRANSISTOR
 NPN TRANSISTOR

WARNING: INDICATES SAFETY CRITICAL COMPONENTS. FOR CONTINUED SAFETY, REPLACE SAFETY CRITICAL COMPONENTS ONLY WITH MANUFACTURER'S RECOMMENDED PARTS.




AVERTISSEMENT: INDIQUE LES COMPOSANTS CRITIQUES DE SÉCURITÉ. POUR MAINTENIR LE DEGRÉ DE SÉCURITÉ DE L'APPAREIL, NE REMPLACER QUE DES PIÈCES RECOMMANDÉES PAR LE FABRICANT.

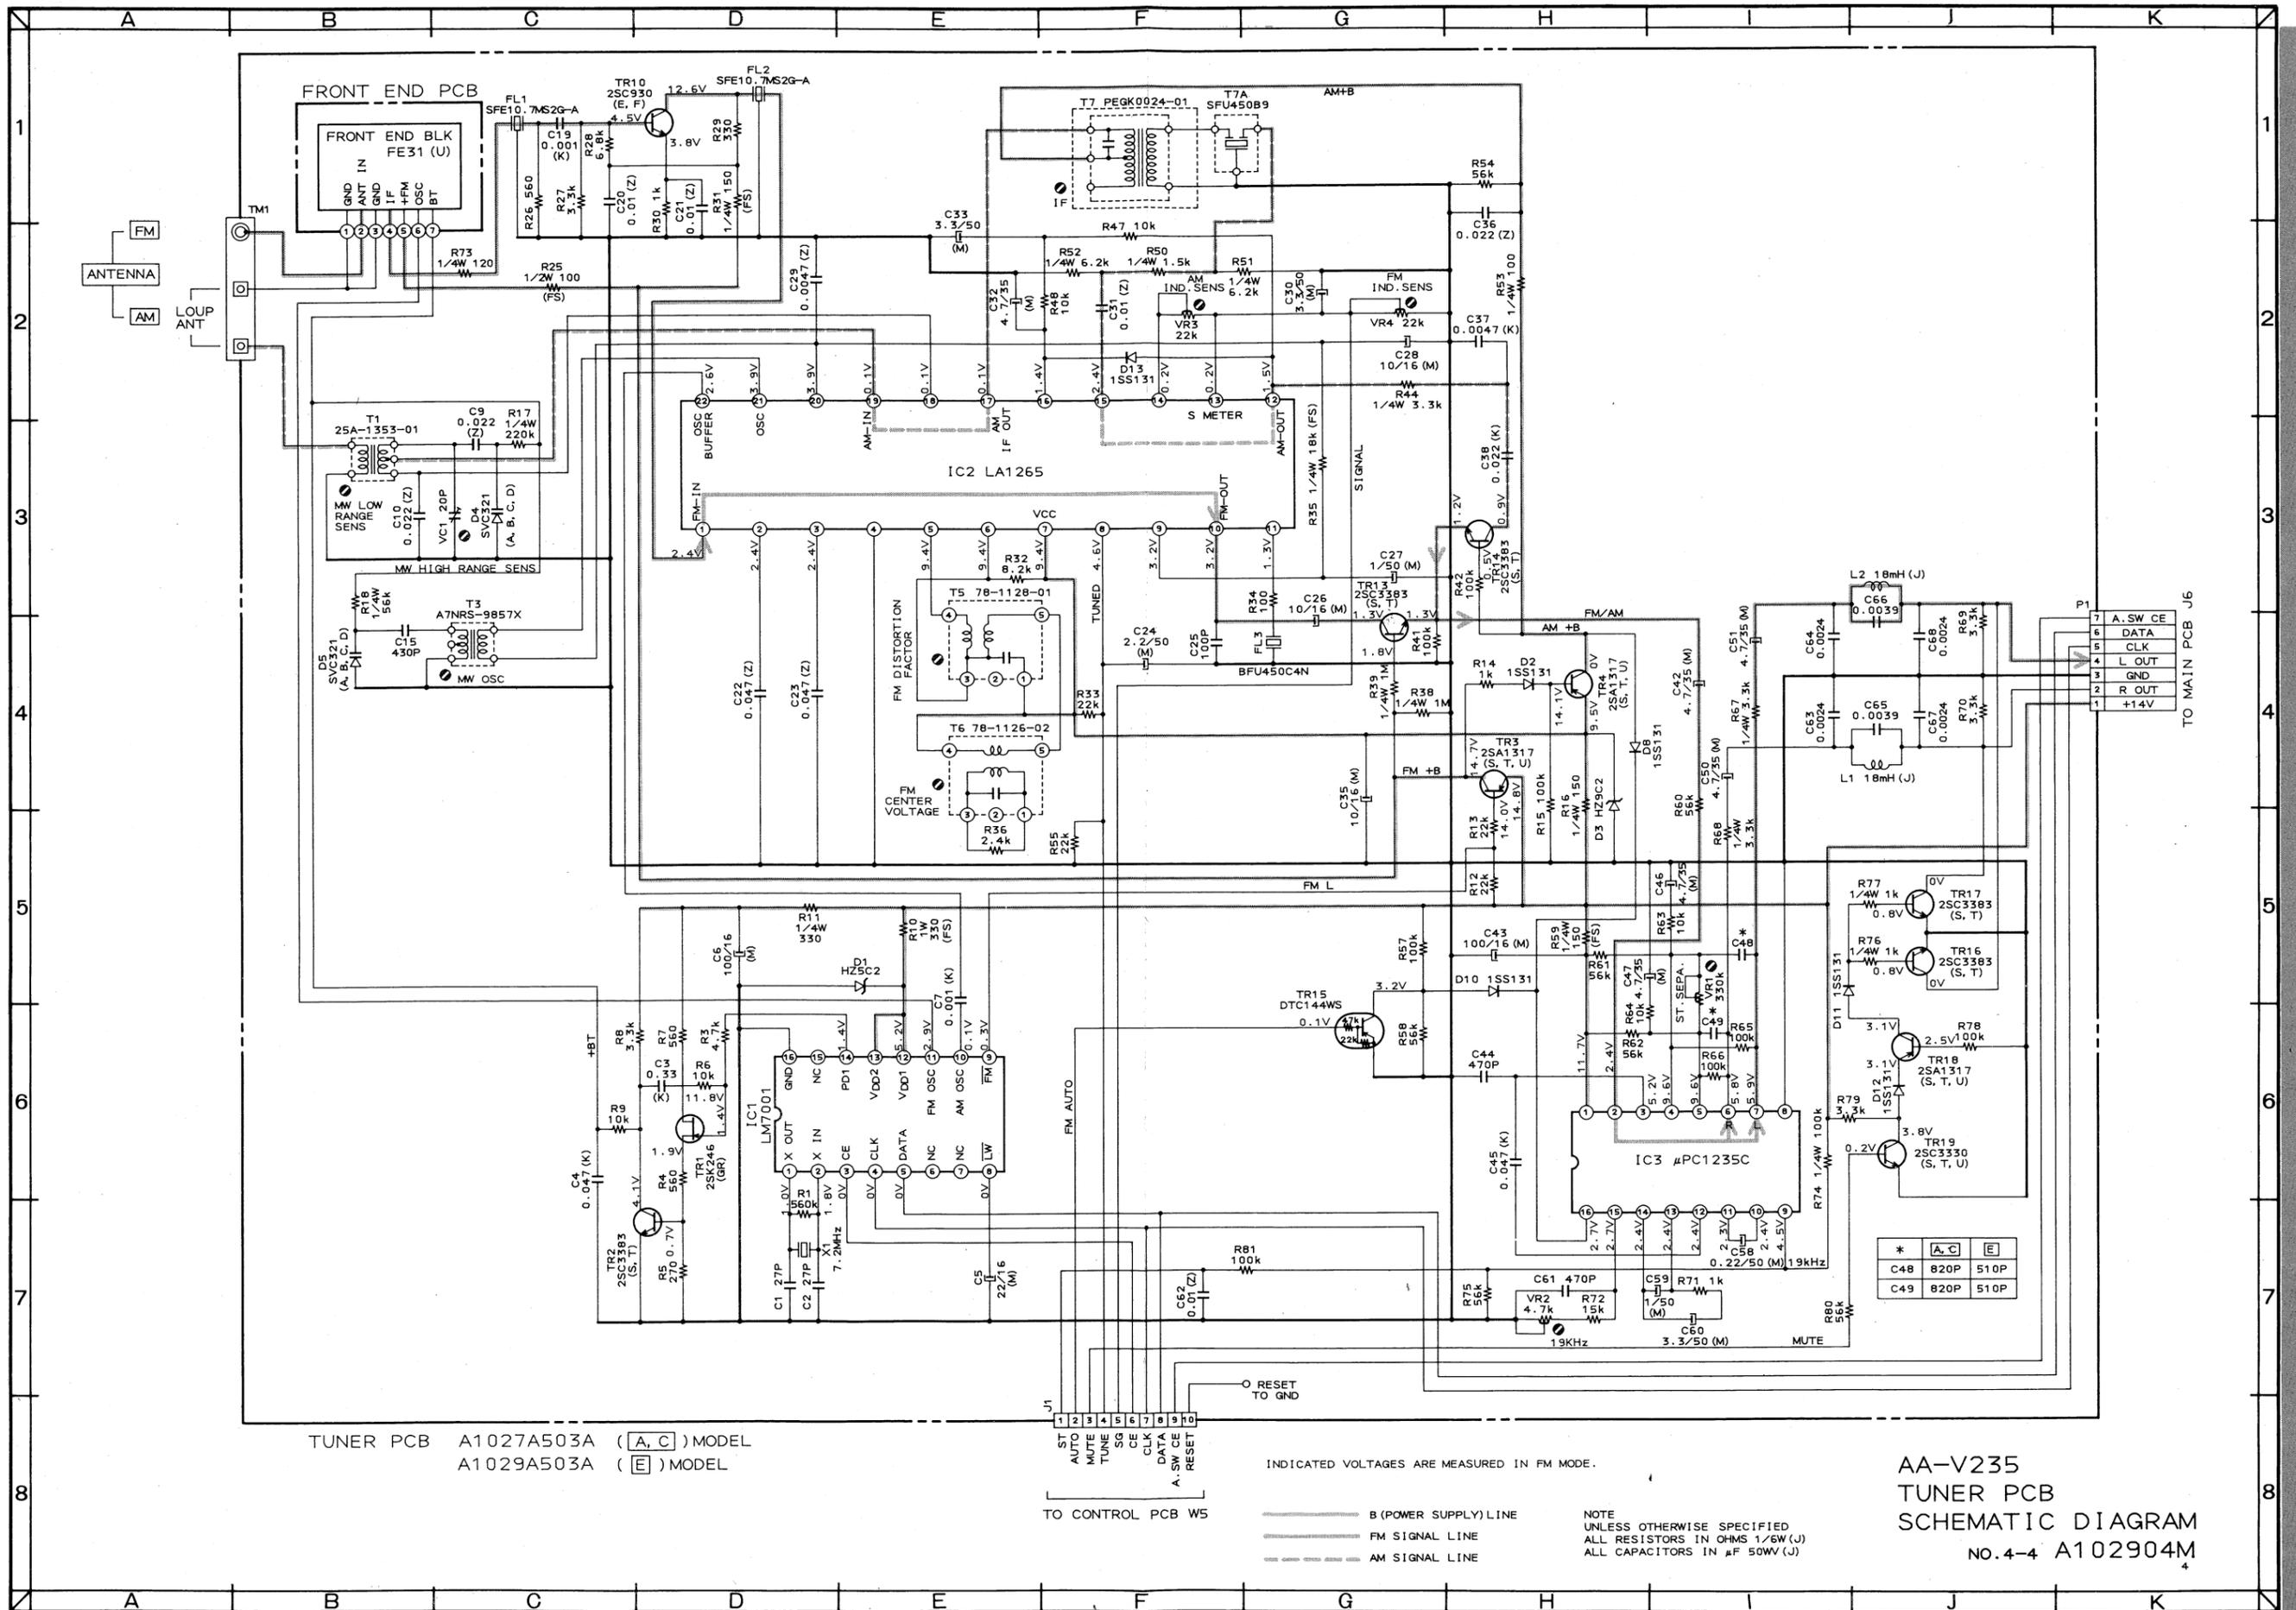

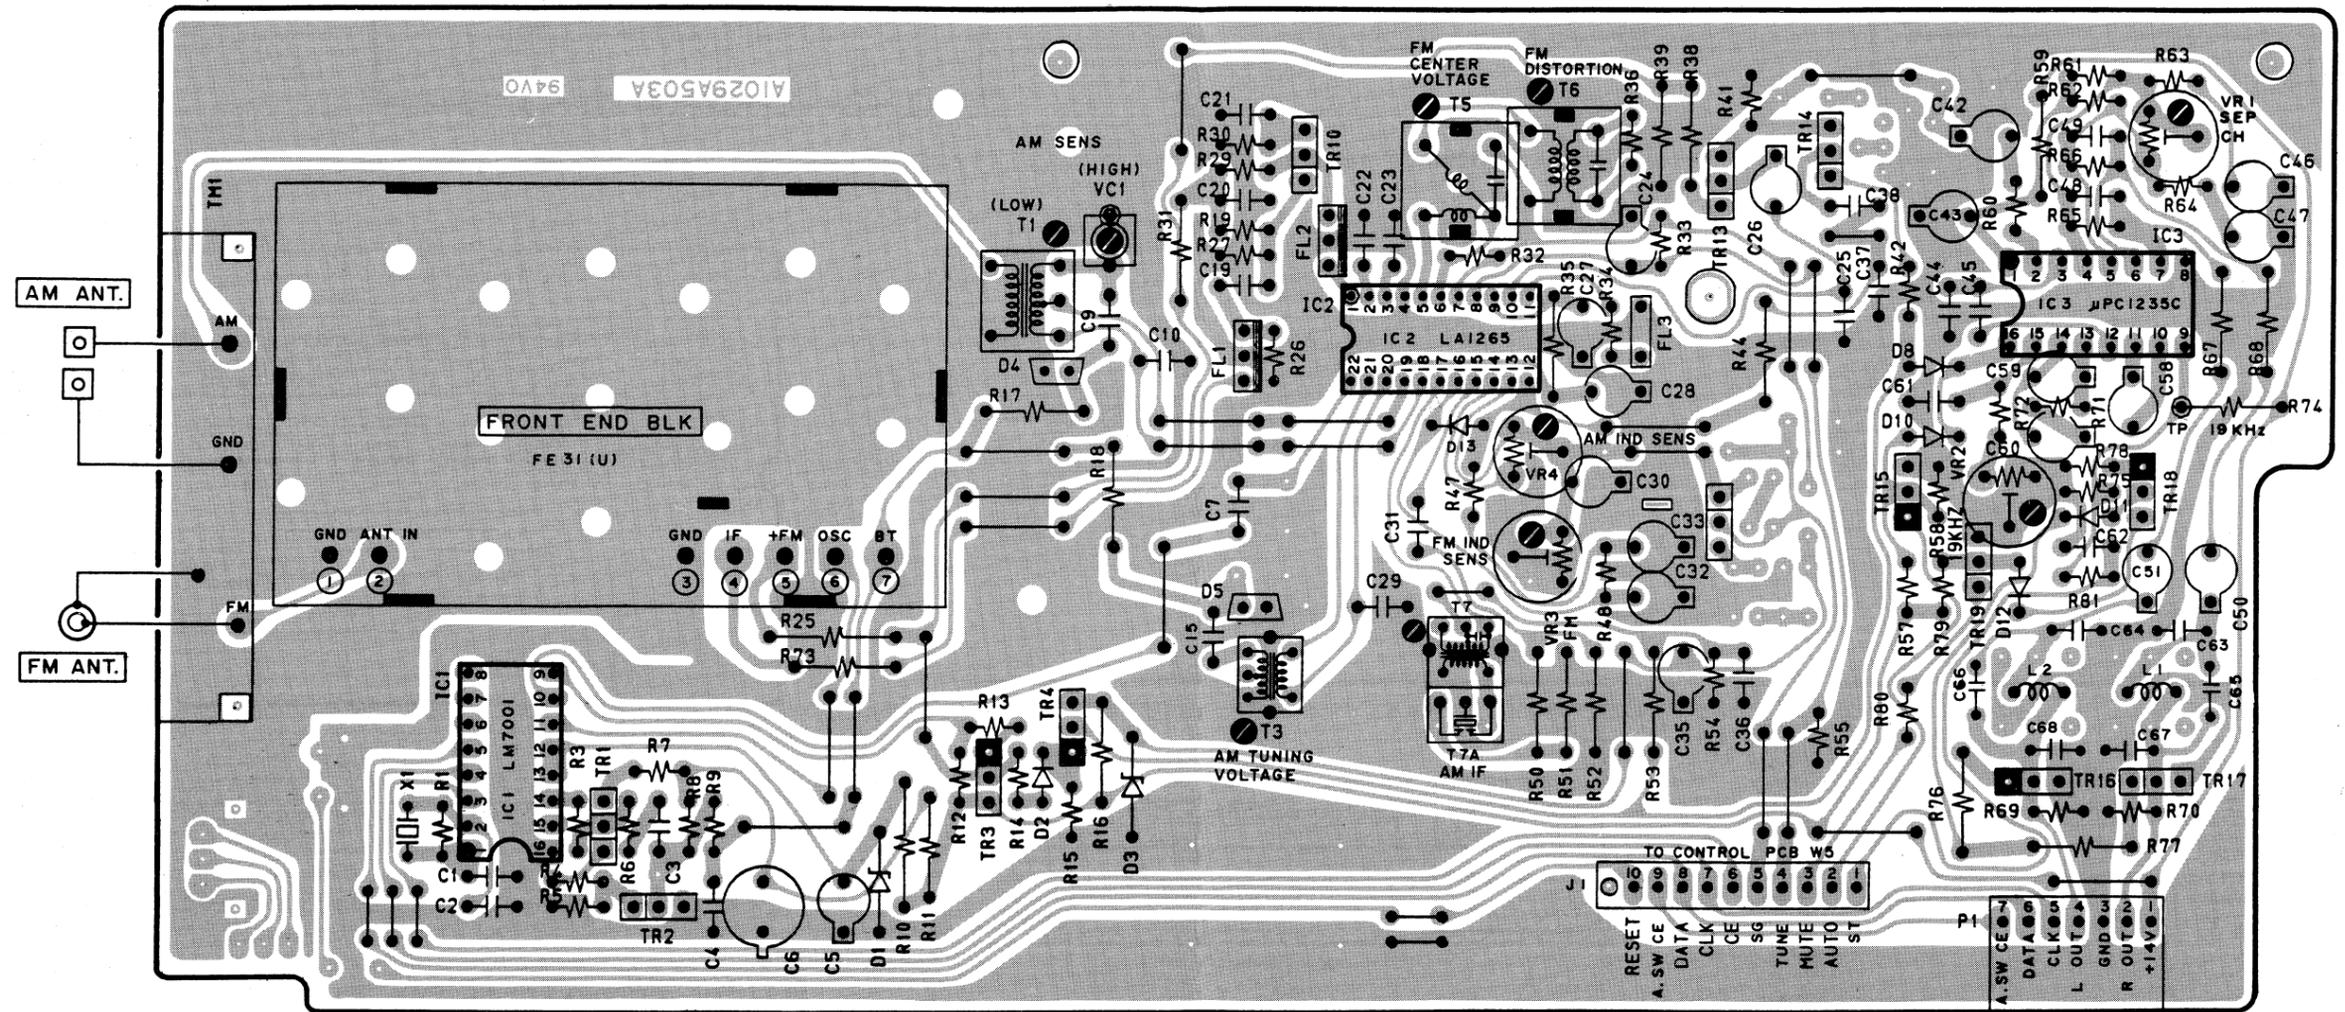


TUNER PCB AIO27A503A (A,C MODEL)
AIO29A503A (E MODEL)

TO MAIN PCB J6

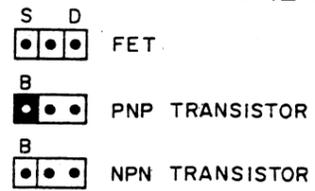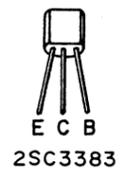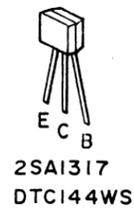


BA6229 (REVERSIBLE MOTOR DRIVER)

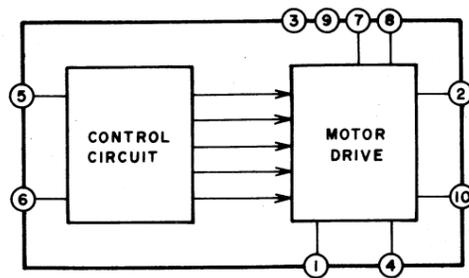


INPUT		OUTPUT		MODE
5	6	2	10	
H	H	L	L	BRAKE
L	H	L	H	CASSETTE & TAPE LOADING
H	L	H	L	CASSETTE & TAPE UNLOADING
L	L	OPEN	OPEN	STOP

M4066 (ANALOGUE SWITCH)

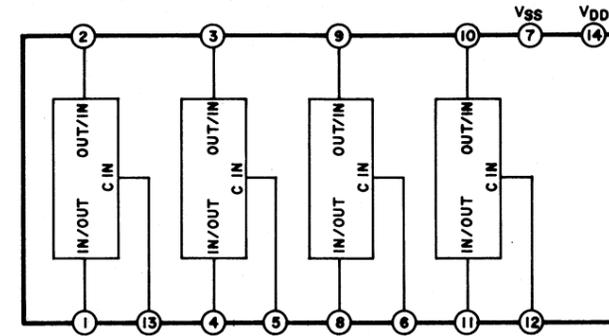


C IN	IMPEDANCE BETWEEN IN/OUT - OUT/IN
H	0.5 to 5×10^2 OHMS
L	MORE THAN 10^9 OHMS


LA1265 (AM FM DEMODULATOR)

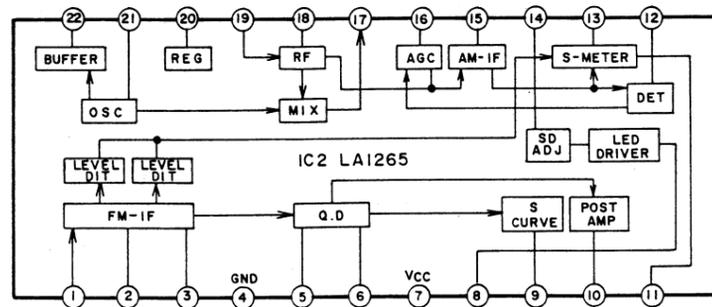


LB1294 (HEX DRIVER)

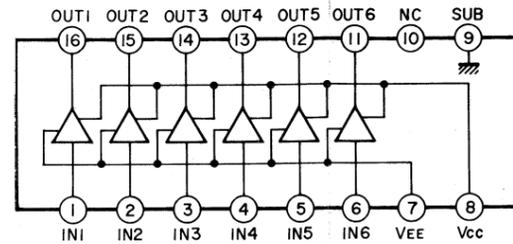


μPC1235C (STEREO MPX)

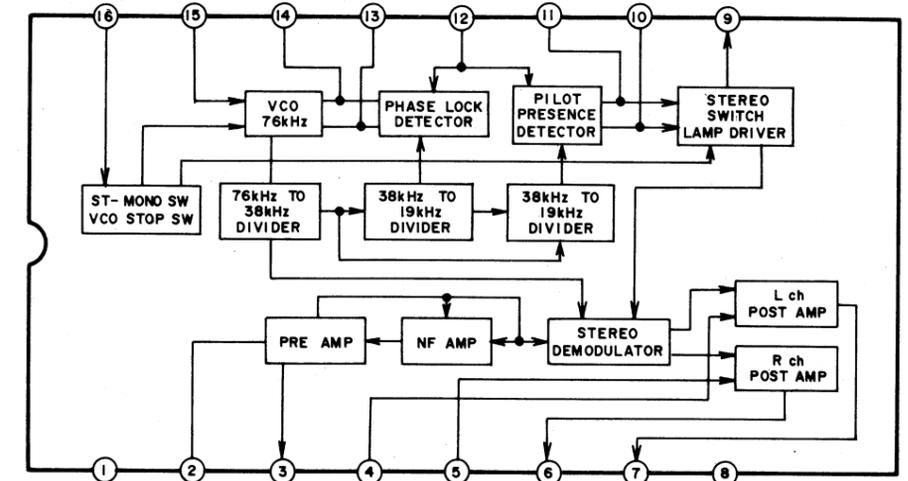

LC7821 (ANALOGUE FUNCTION SWITCH)

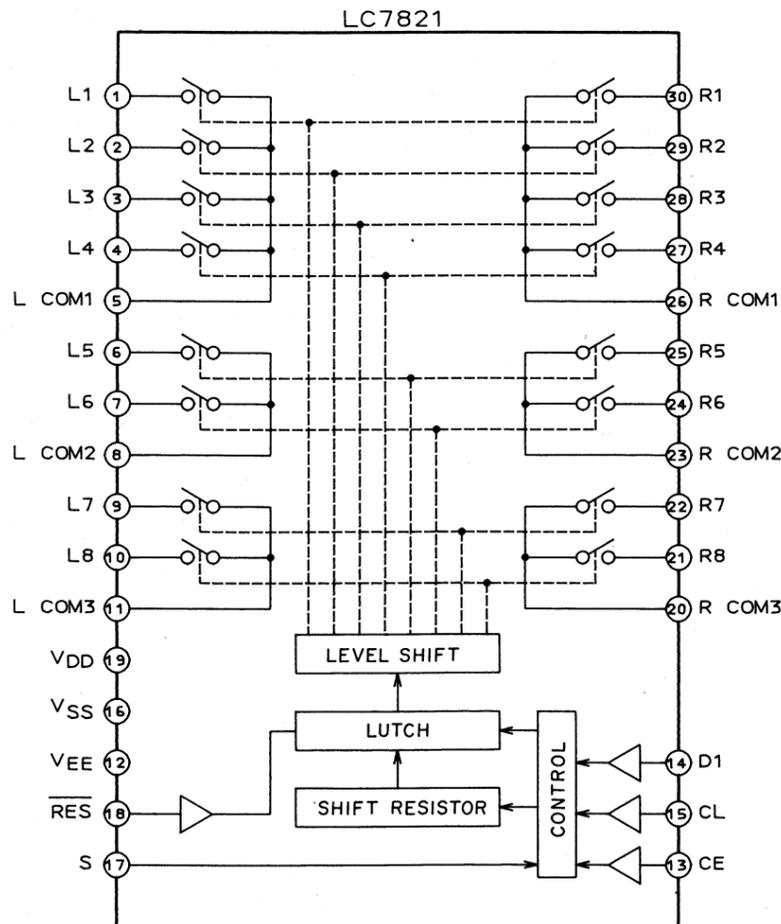

LM7001 (PLL SYNTHESIZER)

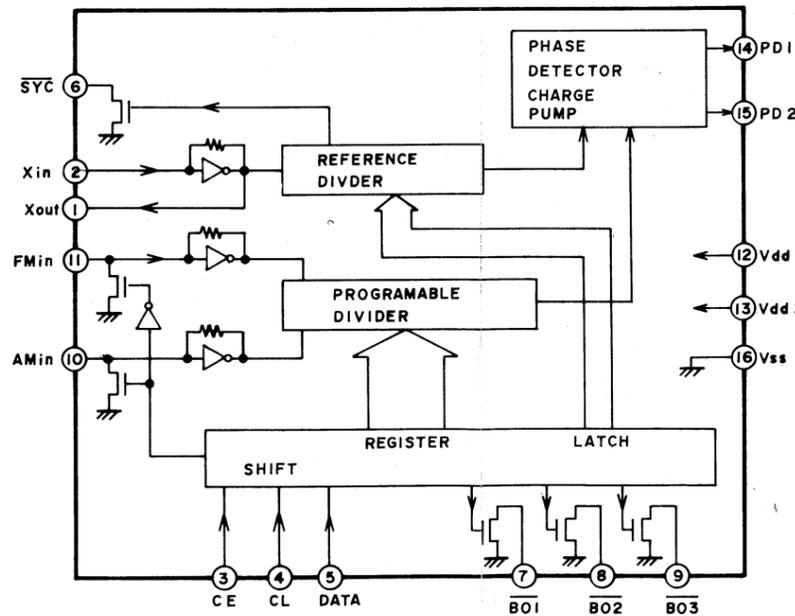

μPC1237H (STEREO POWER AMP. PROTECTOR)

