
Owner's Manual

Model VS60

STEREO POWER AMPLIFIER

audio research
HIGH DEFINITION®



3900 ANNAPOLIS LANE NORTH / PLYMOUTH, MINNESOTA 55447-5447 / PHONE: 763-577-9700 FAX: 763-577-0323

www.audioresearch.com

Model VS60

Section	Page No.
Preface	1
Packaging	1
Unpacking	1
Accessories	1
Warnings	1
Preparation for Use	1
Panel Controls	1
Use of Controls	1
Installation	2
Connections	2
Remote Turn-on Connections	3
Operating Procedure	3
Servicing	3
Output Tube Bias Adjustment	3
Cleaning	3
Disposal and Recycling Guidelines	4
Warranty Terms and Conditions	4
Specifications	4

Model VS60

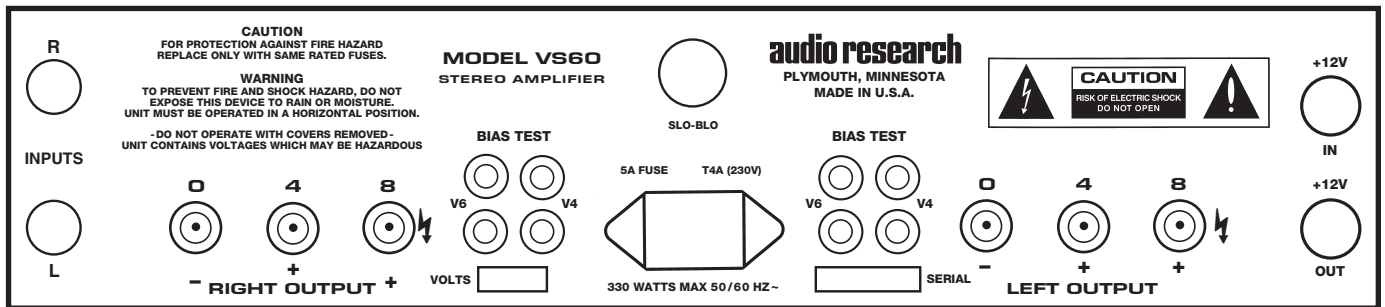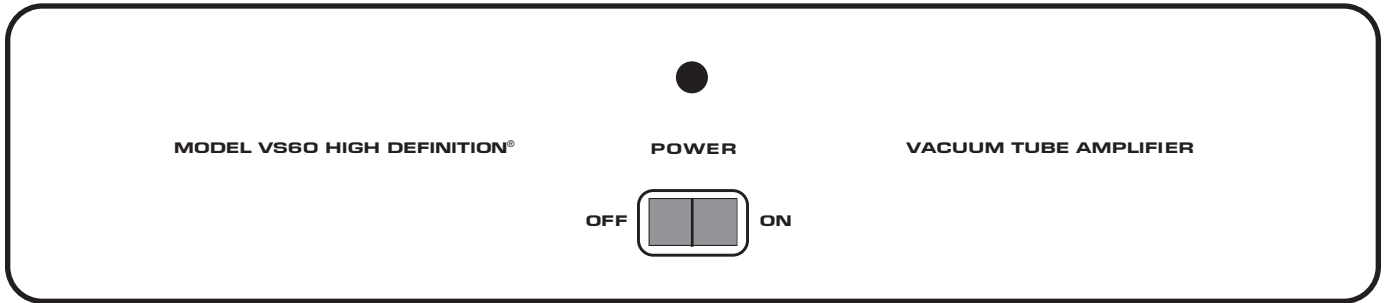

Model VS60

Preface

Please take time to carefully read and understand the following instructions before you install or attempt to operate this equipment. Becoming familiar with the product and its correct operating procedures will help assure you of maximum musical enjoyment and reliable operation. The effort you invest now will be well rewarded in the years ahead.

Packaging

Save all the packaging in a dry place. Your Audio Research amplifier is a precision electronic instrument and should be properly cartoned any time shipment is made. Because of its weight, it is highly probable that the unit will be damaged during shipment if repackaged in cartoning other than that designed for the unit.

You may not have occasion to return the unit to the factory for service, but if that should prove necessary, or other occasion to ship it occurs, the original packaging may save your investment from unnecessary damage, delay and expense.

Unpacking

The VS60 is packed in a heavy-duty carton with special foam inserts for maximum protection. Because of the weight of the unit and because it is a precision electronic instrument, it is necessary to take reasonable care during unpacking and preparation for use.

Open the carton with a small knife to carefully slit the taped edges of the top flaps. Fold the flaps to the sides and remove the tubes packed in foam blocks. Roll the unit in the carton upside down on a soft surface and lift the carton off and turn the unit right side up, then remove the foam inserts. Carefully remove the plastic wrap. Keep all foam inserts and store the carton system for future use.

Accessories

- 1 – Plastic screwdriver for bias adjustments
- User replaceable spare fuses include:
- 1 – 5 Amp MDQ slo-blo with 120V units or 100V units
 - 1 – T4A 250V slo-blo with 220V/240V units

Warnings

1. Do not touch hot tubes. Keep away from children.
2. To prevent fire or shock hazard, do not expose your VS60 to rain or moisture.
3. This unit contains voltages which can cause serious injury or death. Do not operate with covers removed. Refer servicing to your authorized Audio Research dealer or other qualified personnel.

4. The 14-gauge, 3-conductor detachable power cord on your VS60 is equipped with a standard 3-prong grounding plug. If used normally, it will provide a safe earth ground connection of the chassis. Refer to the section on "AC Power Connections" for detailed information.
5. For continued protection against fire hazard, replace fuses only with the same type and rating of fuses as specified.

Preparation for Use

Your VS60 amplifier is shipped with the vacuum tubes packed in foam blocks. These must be unpacked and installed before you attempt to operate the amplifier. Included are two matched pair of 6550 output tubes, and two 6H30 dual triodes used in the input stage. Proceed according to the following instructions.

1. Carefully remove each vacuum tube from its protective foam and match its location "V" number (written on the base of the tube) to the "V" number printed next to each socket. Firmly seat each tube in its matching socket, taking care to "key" the tube pins to the socket holes. Retain the foam blocks with other packing materials for possible future use.
2. If you are using the optional tube cover, be sure the VS60 is first turned off and then remove the top plate with the phillips screwdriver provided with the tube cover. Install the tube cover in place of the top plate, *using the new screws supplied.*

Panel Controls

The front panel has:

- 1 – Switch: 1 - Power line On-Off
- 1 – Indicator: 1 - Power "On" LED (Green)

Use of Controls

POWER-ON/OFF SWITCH: Initiates/terminates AC line power to the amplifier. Function indicated by green LED above switch.

Note: If you turn off the VS60 wait at least two minutes before turning it on again. This brief cool down period will reduce stress on the output tubes and potential damage to them.

Audio Research does *not* recommend leaving your VS60 "on" 24 hours a day as is the custom of some audiophiles to achieve maximum sonic performance on demand. While this is often recommended for solid-state equipment, Audio Research does not recommend this procedure for vacuum tube power amplifiers. (2,000 hours of tube life will pass by in 84 days!)

Model VS60

Installation

To insure normal component life and safe operation this unit ***must be operated only in a horizontal (upright) position.*** Adequate air flow and proper cooling thereby can occur only if there is no restriction ***below, behind and above*** the unit.

The four special non-marring elastomer feet provide adequate spacing only from a smooth, hard surface. ***Never operate the unit while it is sitting on a surface such as a rug or carpet.***

If the unit is to be operated in an enclosed equipment cabinet, an exhaust fan is desirable so as not to operate the VS60 in overheated ambient air. The "ambient" operating temperature should never exceed 120°F or 49°C. Improper installation will cause premature tube failure and will affect your warranty, as well as the service life of the unit.

It is normal for a vacuum tube power amplifier to run quite warm, and if used for prolonged periods, hot to the touch. All components within are, however, operated at safe, conservative levels and will not be improperly affected thereby, providing the requirements outlined above are adhered to.

Connections

The rear panel has:

- 2 – RCA input connectors (for single ended connection, L & R)
- 6 – Output binding posts (+) and (-), L & R, for 4 or 8 ohm speaker connection
- 1 – Power line cord inlet
- 1 – Power line fuse holder
- 2 – 12V remote start in and out jacks
- 4 – Pairs bias test jacks, one pair for each output tube

IMPORTANT: Use the best available speaker wires and interconnects. Audio Research cannot emphasize this enough. As better components and systems are developed, it becomes increasingly important to avoid the limitations of inferior system interconnections.

It is important sonically that your entire system be connected so that the audio signal arriving at the speakers has correct, or "absolute" polarity (i.e., non-inverted). Connect the black or "-" speaker terminal to the wire that connects to the "0" terminal on the VS60. Connect the red or "+" speaker terminal to the wire that connects to the "4" or "8" terminal on the VS60. and tighten the speaker terminals securely to ensure best sonic results.

MATCHING: It is important to use as close as possible an impedance match between the amplifier and speaker for optimum transfer of power to the speaker with minimum distortion. In the case of speaker systems with significant variations in impedance throughout the frequency spectrum, such as most electrostatic types, determine the best impedance match empirically for best overall sonic results.

Connect the VS60 input to the preamplifier or electronic crossover, using only the highest grade of audio interconnect cables. To avoid sonic degradation use the shortest practical length of cables.

AC POWER CONNECTIONS: It is essential that the VS60 amplifier be connected to a wall AC power receptacle, or a similar heavy-duty source. If it is connected to convenience receptacles on preamplifiers, etc., the full sonic capabilities of both the VS60 and the preamplifier may be compromised.

For the very best sonic performance on domestic 100 or 120 volt circuits, the VS60 should be connected to its own AC power circuit branch, protected by a 15 or 20 amp breaker. The preamplifier and other audio equipment should be connected to a different power circuit and breaker. Avoid the use of extension cords. If they must be used on a temporary basis, use 14-gauge or heavier cords.

The VS60 utilizes a compatible grounding system that generally does not require a "ground lifter" adapter plug on the AC power cord to minimize hum. The power cord on your VS60 has a standard three-prong grounding plug to provide maximum safety when it is connected to a grounded wall receptacle. If there is any question regarding the safety of grounding procedures, be certain to seek competent help with the installation.

If electronic crossovers or other AC powered equipment is used with the VS60 it may be necessary to use "ground lifter" adapters on the power plugs of that equipment to minimize system hum. Generally, the lowest hum is achieved when the only direct connection between audio common "ground" and true earth ground occurs in the preamplifier, through its grounded power cord. Other equipment in the system should have some form of isolation to prevent ground loops and associated hum.

Always place the power on-off switch on the panel of the VS60 in the "Off" position before connecting the power line cord to AC power.

Model VS60

Remote Turn-on Connections

The VS60 has a built-in 12VDC remote turn-on/off circuit for operation by a master control system in a home theater or large audio system. Use a 3.5mm (.140") diameter mono mini plug to connect to the +12V IN jack on the rear of the VS60. Two identical paralleled jacks are provided to allow chaining connections to control two or more VS60s or other equipment.

The +12V IN jack should be connected to the +12VDC output of the master control system, using a continuous +12VDC signal at 20mA per VS60 for the duration of amplifier on-time. Do not use a momentary or data pulse control signal.

The front power rocker switch on the VS60 must be off to use the remote turn-on. The front power rocker switch may still be used when the remote turn-on is connected, but the remote will not turn the VS60 off if the front power rocker switch is left on. The front power rocker switch will not turn the VS60 off if the remote system is on.

The +12VDC remote jacks have polarity protection, so they will not operate if a -12VDC signal is accidentally connected, or if the control wires are reversed. The 12V remote relay in the VS60 has click suppression to protect circuits in the master control system.

Operating Procedure

1. Make sure you have read and complied with the INSTALLATION AND CONNECTION instructions prior to attempting operation.
2. Make sure your VS60 is properly connected to a high-current power receptacle via the attached power cord (see AC POWER CONNECTIONS).
3. Your preamplifier should be "on" and muted and/or set at minimum gain.
4. Turn the Power switch from "Off" to "On." The green power LED indicator should glow immediately. Note: If the power indicator LED fails to light, turn the Power switch to "Off" and check the appropriate fuse for possible failure. An extra fuse for A. C. power is included with your VS60.
5. Your VS60 should now operate satisfactorily. However, a full stabilization or warm-up time of approximately one hour is recommended for best sonic performance.

Servicing

Because of its careful design and exacting standards of manufacture, your VS60 amplifier should normally require only minimal service to maintain its high level of performance.

CAUTION: The VS60 amplifier contains sufficient levels of voltage and current to be *lethal*. Do not tamper with a component or part inside the unit. Even with the power turned off, a charge remains in the energy storage capacitors for some time. Refer any needed service to your authorized Audio Research dealer or other qualified technician.

Replacement vacuum tubes may be obtained through your authorized retailer or directly from Audio Research Customer Service. For best performance, the 6550 output tubes should be matched pairs.

Additional questions regarding the operation, maintenance or servicing of your amplifier may be referred to Audio Research Customer Service at (763)-577-9700.

Output Tube Bias Adjustment

As shipped from the factory, the output "bias" adjustments are set for a nominal 60mA per 6550 tube. Under these idle conditions the tubes are each dissipating approximately 25 watts of their 48 watt rating (42 watt plate, 6 watt screen). This point of operation provides "enriched" Class AB₁, and will satisfy the most critical listener.

For best results, operate and adjust the VS60 at 120VAC. Adjustment must be made under zero-signal conditions after at least 15-20 minutes of uninterrupted stabilization time.

A digital voltmeter capable of accurate measurements with 0.1mVDC resolution is preferred for accurate adjustment (must have 3¹/₂ digit display). Use the plastic alignment tool provided to make the adjustment. The measurement points are banana test jacks at the rear of the VS60. Adjust the "bias" for an average voltage reading of 60mVDC (.060 Volt DC) between test jacks.

Cleaning

To maintain the new appearance of this unit, occasionally wipe the front panel and top cover with a soft, damp (not wet) cloth to remove dust. A mild, non-alkaline soap solution or dilute isopropyl alcohol may be used to remove fingerprints or similar smudges. Cleaners containing abrasives should *not* be used as they will damage the anodized finish of the front panel. A small, soft paint brush is effective in removing dust from bevels, the recessed nameplate and other features of the front panel.

Model VS60



Disposal and Recycling Guidelines

To dispose of this electronic product, do not place in landfill. In accordance with the European Union Waste Electrical and Electronic Equipment (WEEE) directive effective August 2005, this product may contain regulated materials which upon disposal require special reuse and recycling processing.

Limited Warranty

Audio Research Corporation products are covered by a 3-Year Limited Warranty or a 90-Day Limited Warranty (vacuum tubes). This Limited Warranty initiates from the date of purchase, and is limited to the original purchaser, or in the case of demonstration equipment, limited to the balance of warranty remaining after original shipment to the retailer or importer.

In the United States, the specific terms, conditions and remedies for fulfillment of this Limited Warranty are listed on the warranty card accompanying the product in its shipping carton, or may be obtained from the authorized retailer or from the Audio Research Customer Service Department. Outside the United States, the authorized importing retailer or distributor has accepted the responsibility for warranty of Audio Research products sold by them. The specific terms and remedies for fulfillment of the Limited Warranty may vary from country to country. Warranty service should normally be obtained from the importing retailer or distributor from whom the product was purchased.

In the unlikely event that technical service beyond the ability of the importer is required, Audio Research will fulfill the terms and conditions of the Limited Warranty. Such product must be returned at the purchaser's expense to the Audio Research factory, along with a photocopy of the dated purchase receipt for the product, a written description of the problem(s) encountered, and any information necessary for return shipment. The cost of return shipment is the responsibility of the purchaser.

Specifications

POWER OUTPUT: 50 watts per channel continuous from 20Hz to 20kHz. 1 kHz total harmonic distortion typically 1% at 50 watts, below .05% at 1 watt.

Approximate actual power available at "clipping" 52 watts (1kHz). (Note that actual power output is dependent upon both line voltage and "condition" i. e.: if power line has high distortion, maximum power will be affected adversely, although from a listening standpoint this is not very critical.)

POWER BANDWIDTH: (-3dB points) 12Hz to 50kHz.

FREQUENCY RESPONSE: (-3dB points at 1 watt) 1.0Hz to 70 kHz.

INPUT SENSITIVITY: 1.0V RMS Single-ended for rated output. (26dB gain into 8 ohms.)

INPUT IMPEDANCE: 100K ohms Single-ended.

OUTPUT TAPS: 8 ohms, 4 ohms.

OUTPUT POLARITY: Non-Inverting

OUTPUT REGULATION: Approximately 0.9dB 8 ohm load to open circuit (Damping factor approximately 11).

OVERALL NEGATIVE FEEDBACK: 13dB.

SLEW RATE: 5 volts/microsecond.

RISE TIME: 5 microseconds.

HUM & NOISE: Less than 0.2mV RMS – 100dB below rated output (IHF weighted, input shorted).

POWER SUPPLY ENERGY STORAGE: Approximately 166 joules.

POWER REQUIREMENTS: 105-125VAC 60Hz (210-250VAC 50Hz) 320 watts at rated output, 500 watts maximum, 200 watts at "idle"

REMOTE START: 12VDC at 17mA

TUBES REQUIRED: 2 – Matched pair 6550 – Power Output; 2 – 6H30 driver.

DIMENSIONS : 14" (35.6 cm) W x 7" (17.8 cm) H x 14" (35.6 cm) D. Rear connectors extend .88" beyond chassis.

WEIGHT: 32.4 lbs. (14.7 kg) Net; 35.7 lbs. (16.2 kg) Shipping.

Specifications subject to change without notice.

©2008 Audio Research Corporation.

