


# CD - 5500

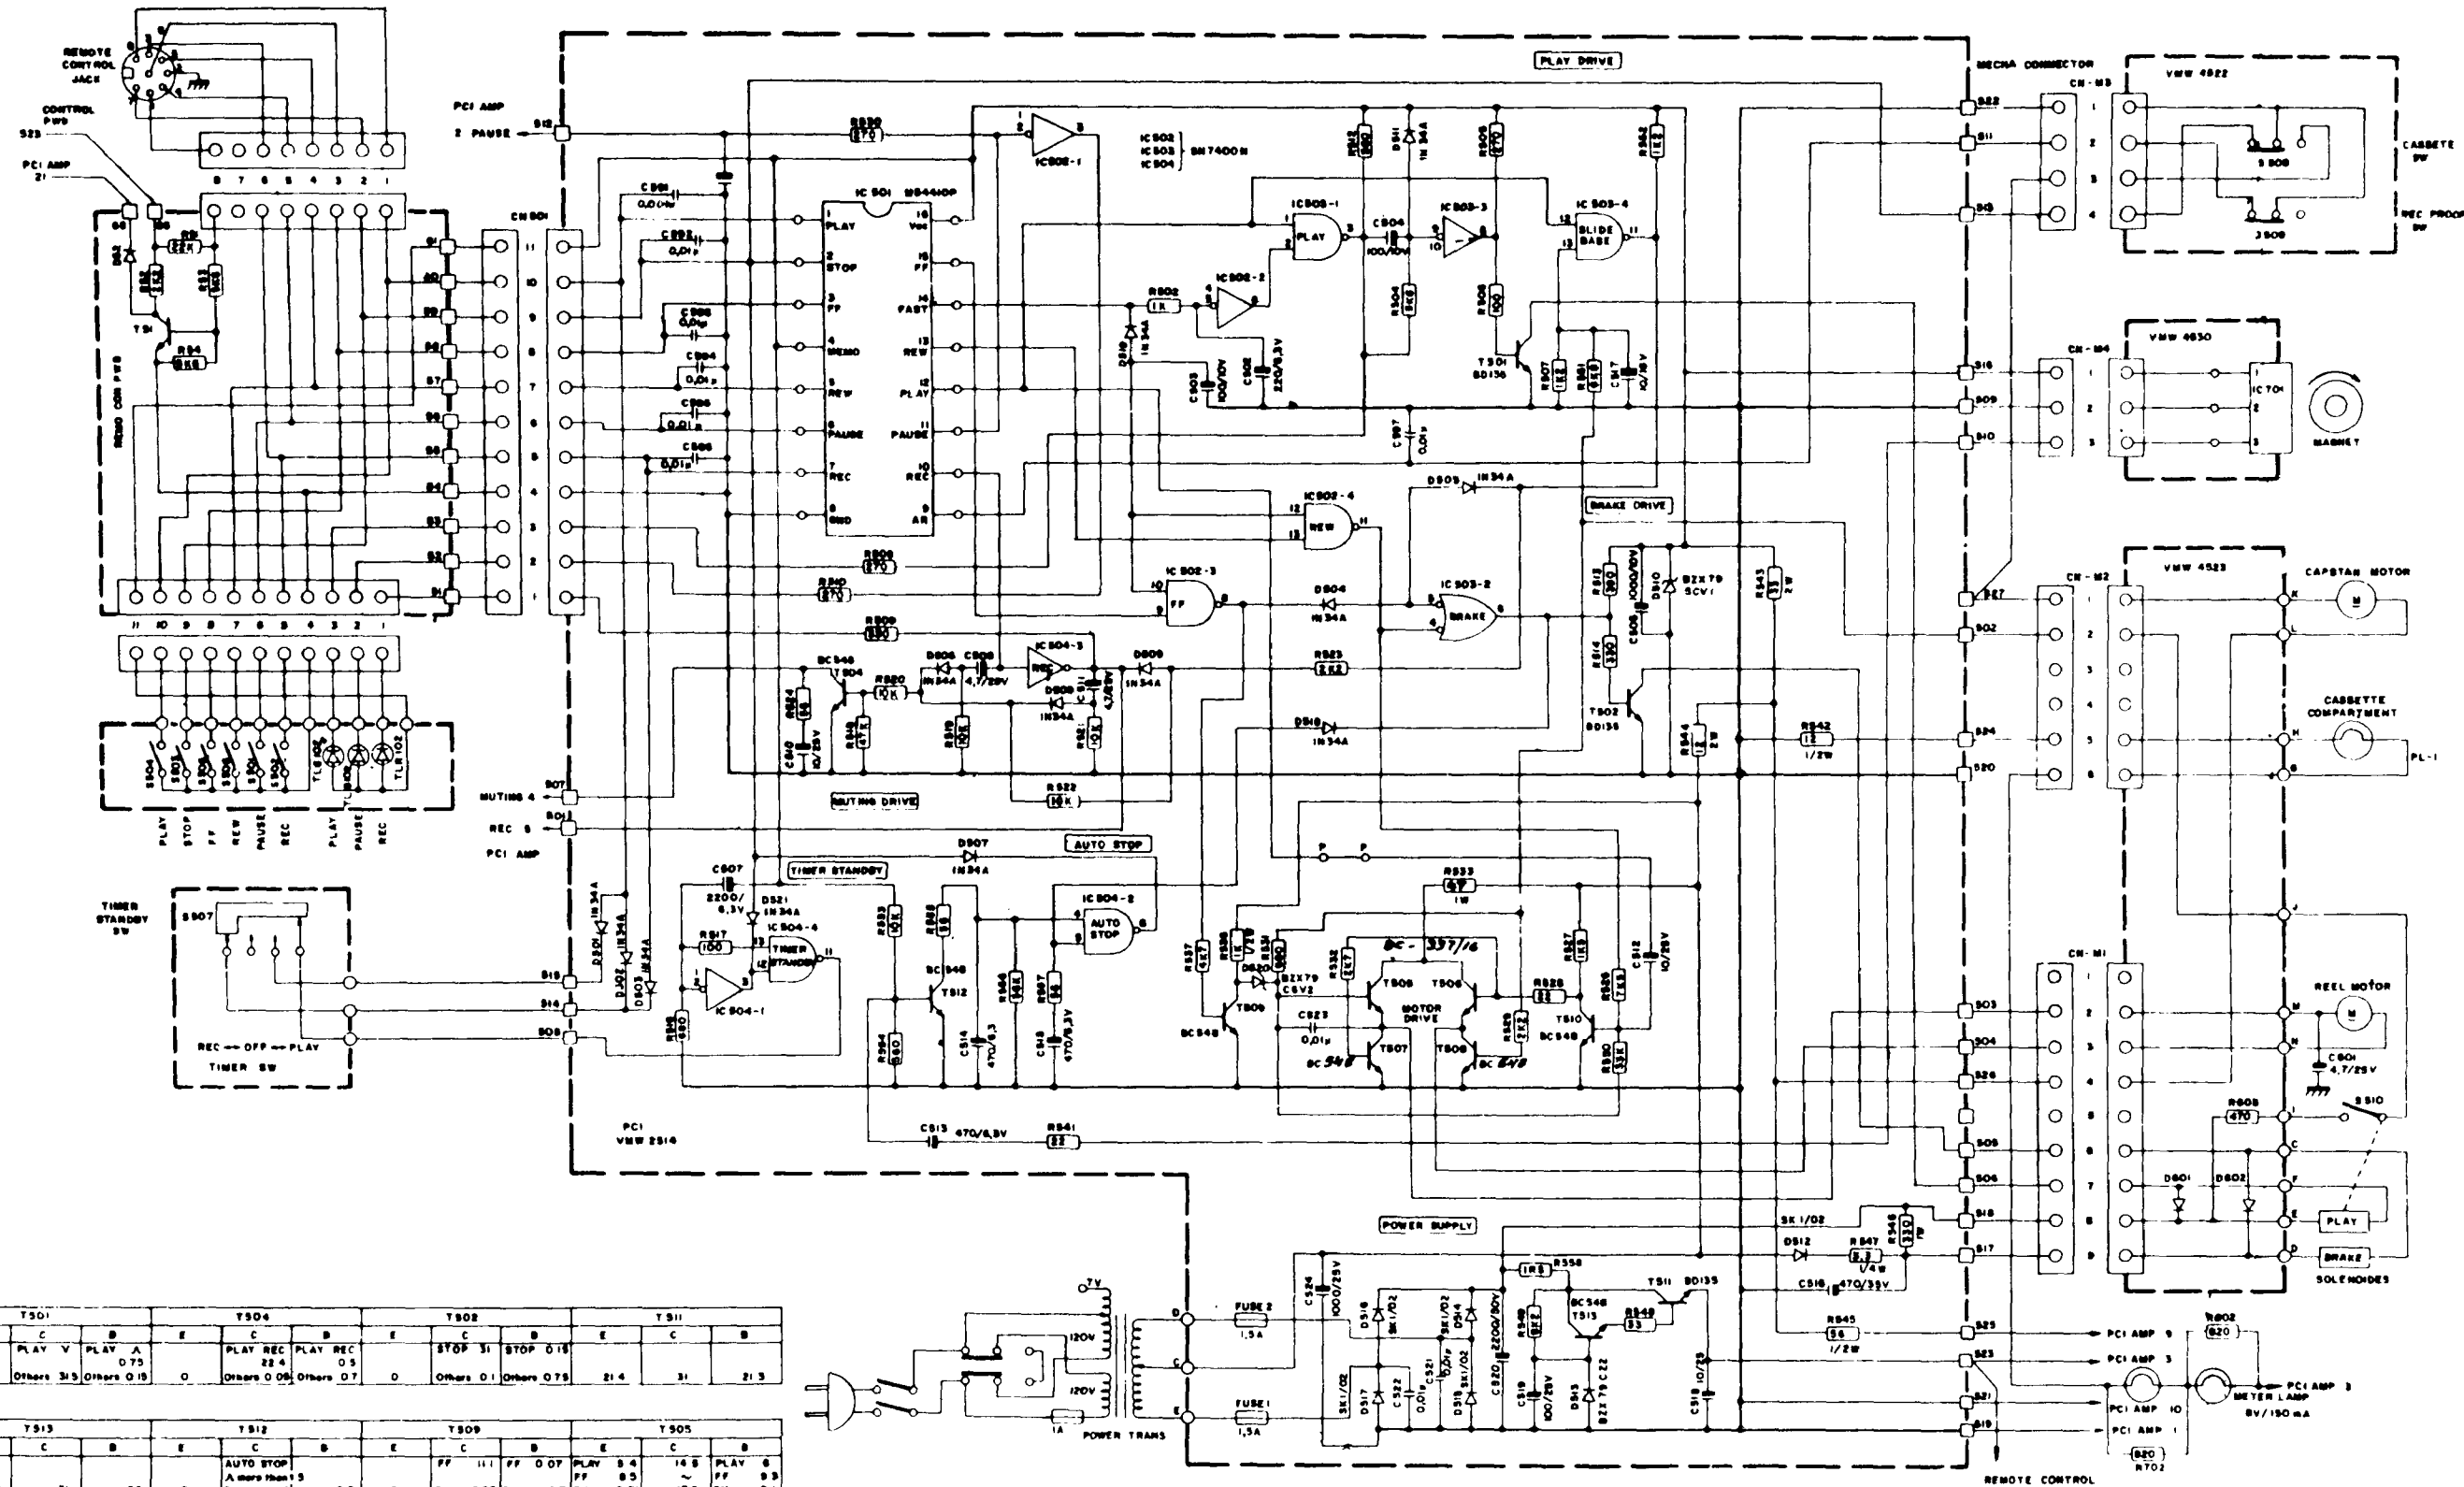

TS01			TS04			TS02			TS11		
E	C	B	E	C	B	E	C	B	E	C	B
PLAY V	PLAY A	0.75	PLAY REC	PLAY REC	0.5	STOP 31	STOP 0.15				
0	Others 3.15	Others 0.15	0	Others 0.05	Others 0.7	0	Others 0.1	Others 0.75	21.4	31	21.5

TS13			TS12			TS09			TS05		
E	C	B	E	C	B	E	C	B	E	C	B
			AUTO STOP			FF 111	FF 0.07	PLAY 9.4	14.8	PLAY 6	
21.4	31	22	0	Others 1.3	Others 0.3	0	Others 0.05	Others 0.7	Others 0.01	1.8	Others 0.1

TS07			TS06			TS08			TS10		
E	C	B	E	C	B	E	C	B	E	C	B
PLAY 5.4	REW 0.75	REW 9.2	14.15	REW 9.1		REW 9.1	PLAY FF		REW 8.8	REW 0.7	
0	Others 0.1	Others 0.07	Others 0.07	0	Others 0.07	0	Others 0.07	Others 0.1	Others 0.07	Others 0.7	Others 0.7

	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16
IC 501	AI PLAY operation 0	AI STOP operation 0	AI FF operation 0	AI REW operation 0	AI PAUSE operation 0	AI REC operation 0	Playback cassette 0	REC 5	PAUSE 5	PLAY 5	REW 5	FF and 3.8	REW 5	Others 0	Others 0	8
IC 502	Others 0.15	Others 4.5	Others 1	Others 3.8	0	Others 3.8	Others 0.15	Others 0.25	Others 3.8	Others 0.25	Others 0.15	Others 0.15	Others 0.15	Others 0.15	Others 0.15	8
IC 503	PLAY 5 and REW 0	Others 4	Others 5	Others 3.8	Others 1.7	Others 0.15	0	Others 0.1	Others 5	Others 5	Others 0.2	Others 0.1	Others 0.1	Others 0.1	Others 0.1	8
IC 504	0.9	0.9	3.4	Others 0.9	Others 0.8	Others 5	0	Others 5	Others 0.11	8	3.4	1.0	8			8