

Bang & Olufsen

Beocenter 2300

Type 2611, 2612, 2613, 2614,
2615, 2616, 2617, 2618,
2619, 2620

Beocenter 2300


Type 2611, 2612, 2613, 2614,
2615, 2616, 2617, 2618,
2619, 2620

Indklæbes i Serviceanvisningen Beosystem 2500 (3538775)
Paste into Service Manual Beosystem 2500 (3538775)
In Serviceanleitung Beosystem 2500 (3538776) einkleben
A coller le Manual d'entretien pour Beosystem 2500 (3538776)

3538787

5-91




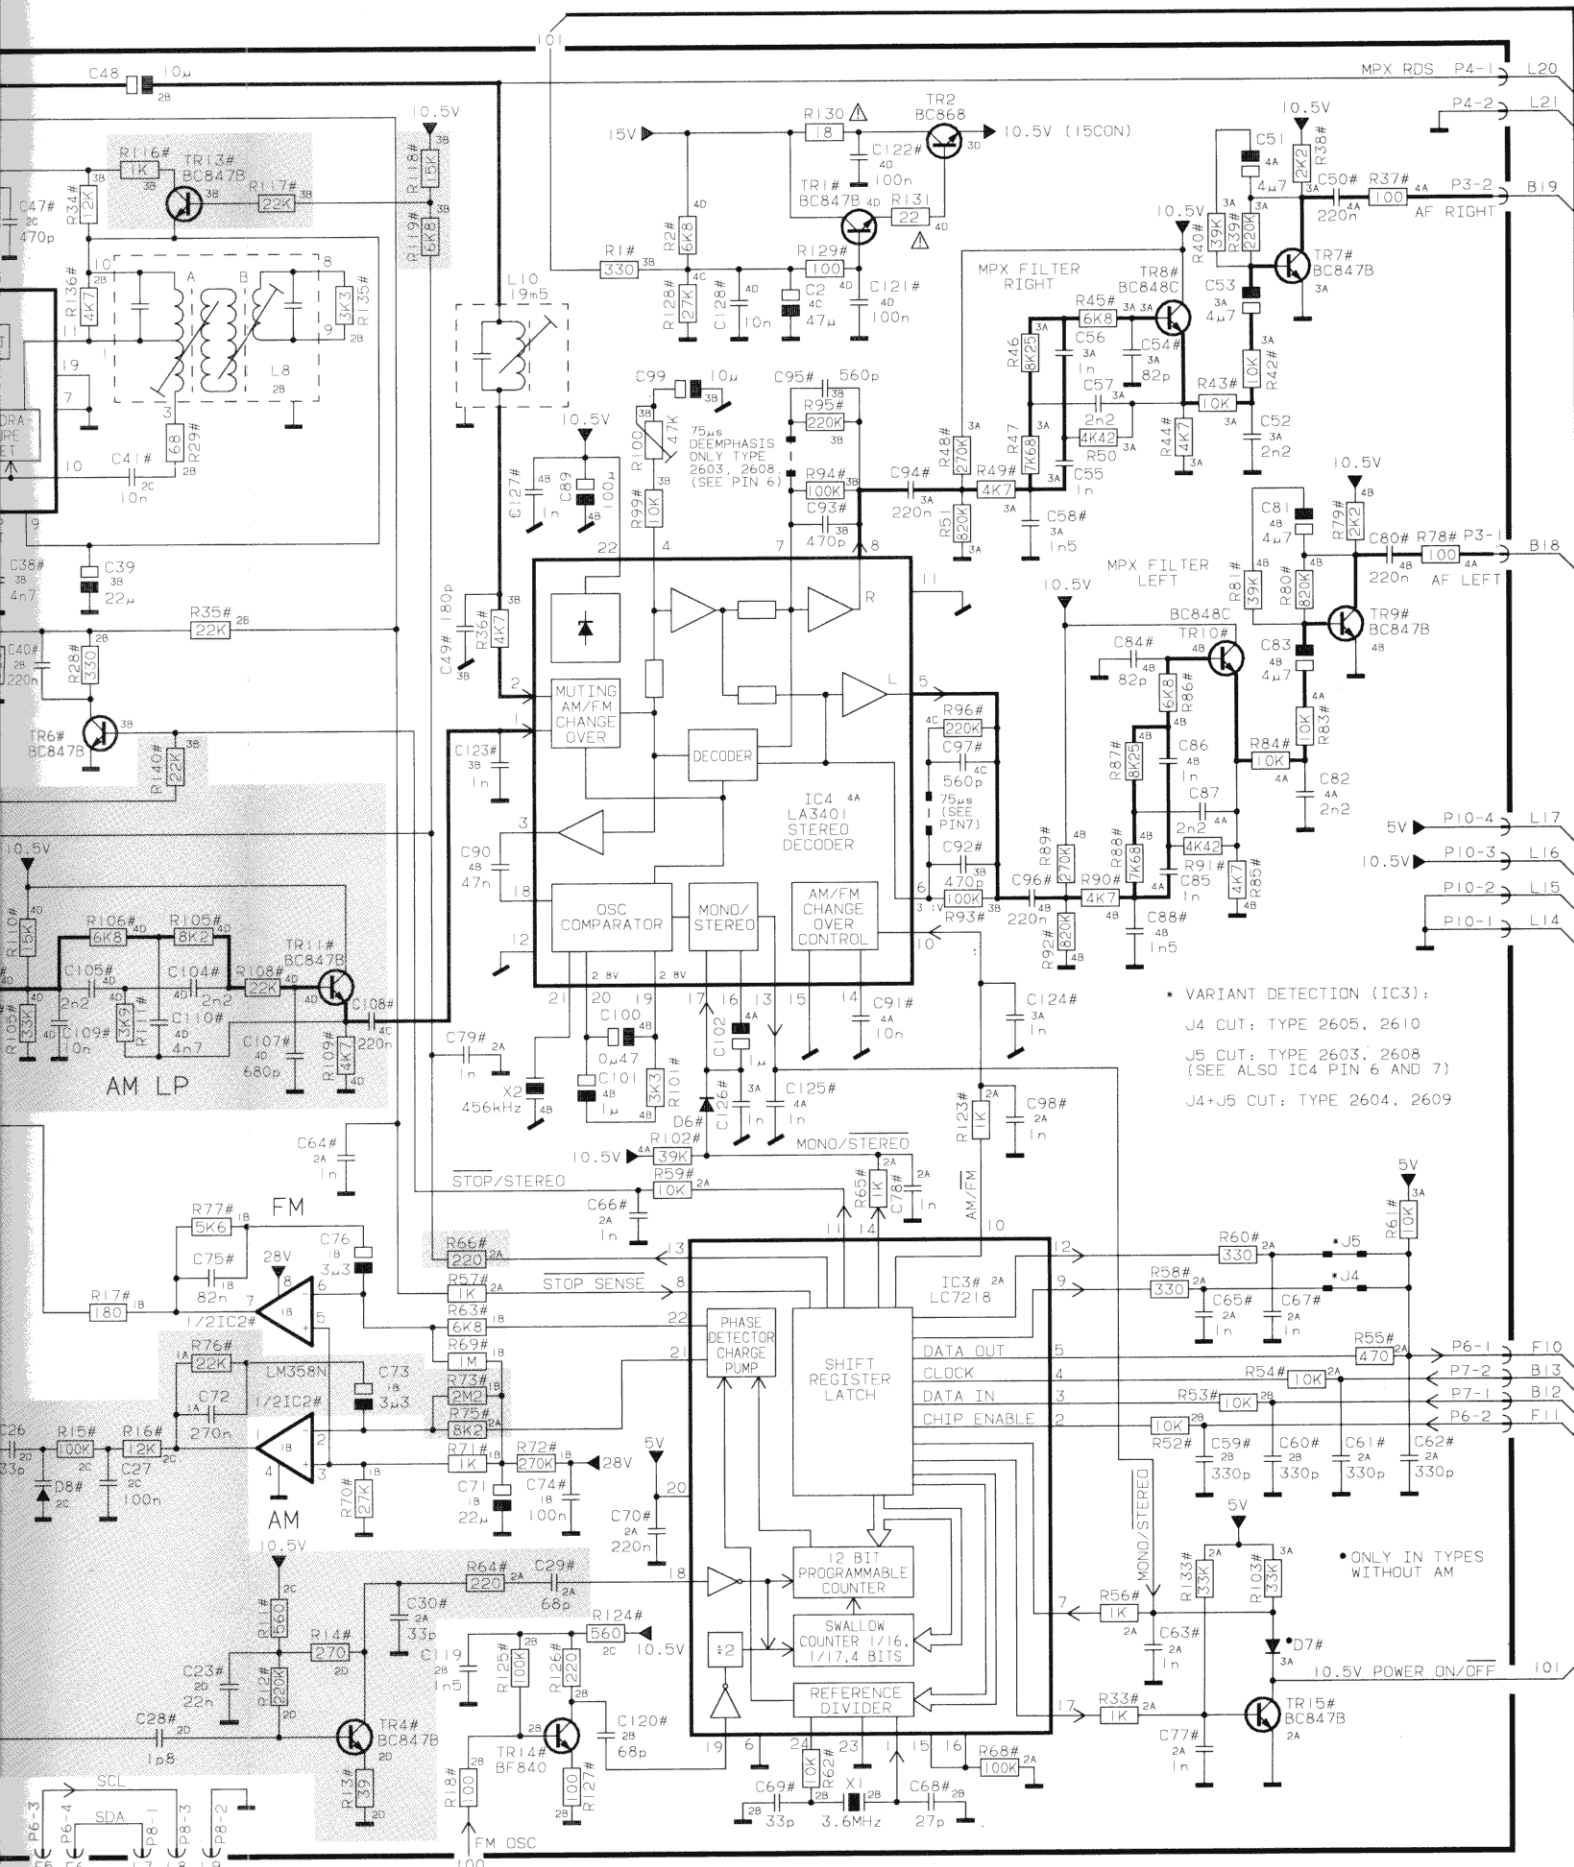


• VARIANT DETECTION (IC3):
 J4 CUT: TYPE 2605, 2610
 J5 CUT: TYPE 2603, 2608
 (SEE ALSO IC4 PIN 6 AND 7)
 J4+J5 CUT: TYPE 2604, 2609

• ONLY IN TYPES WITHOUT AM

DIAGRAM F MICROCOMPUTER

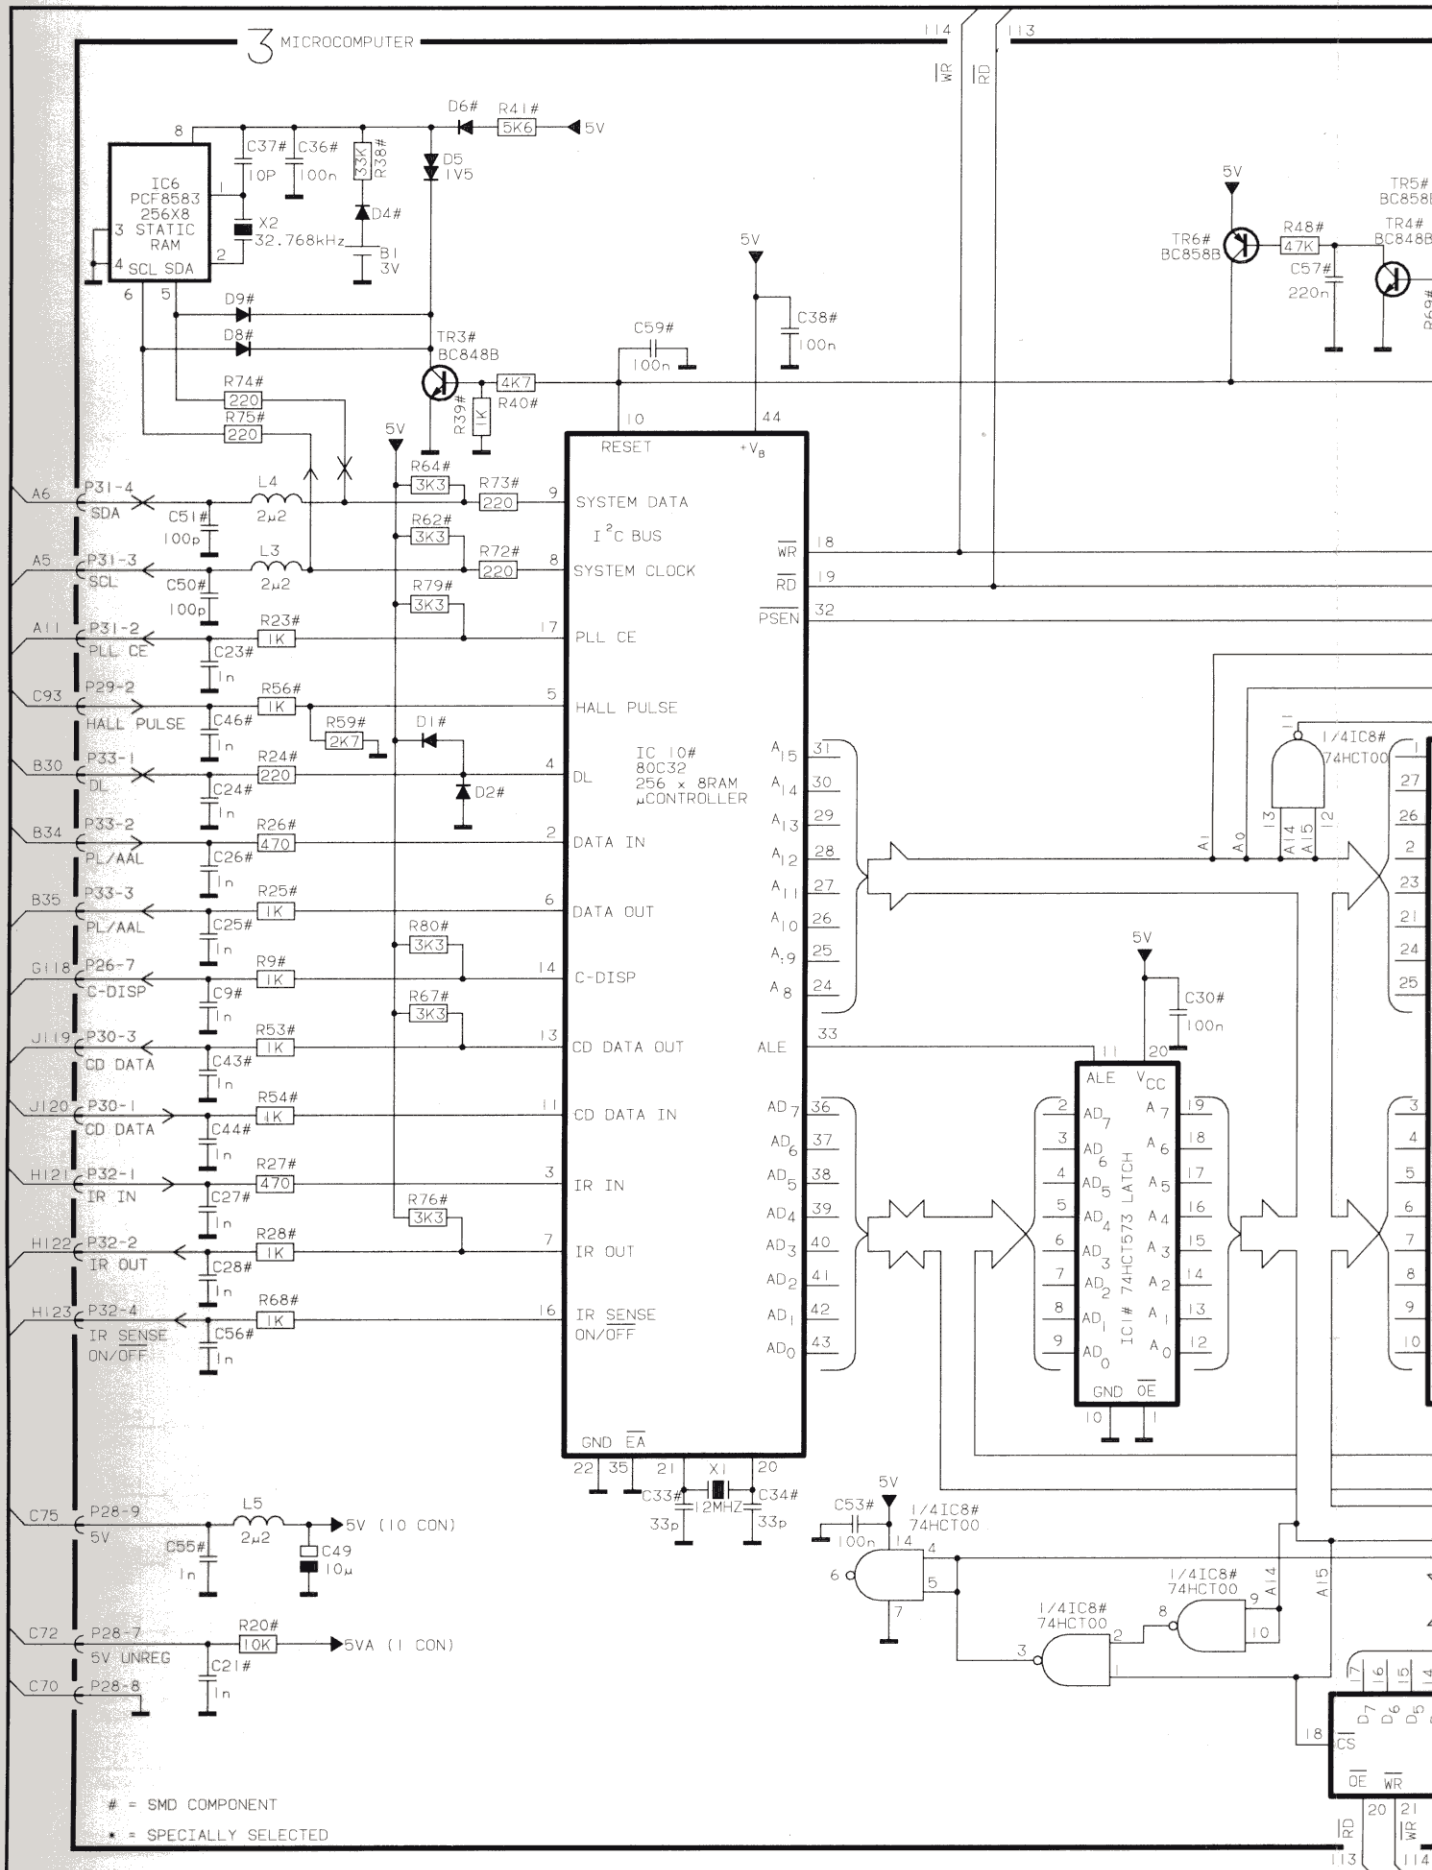

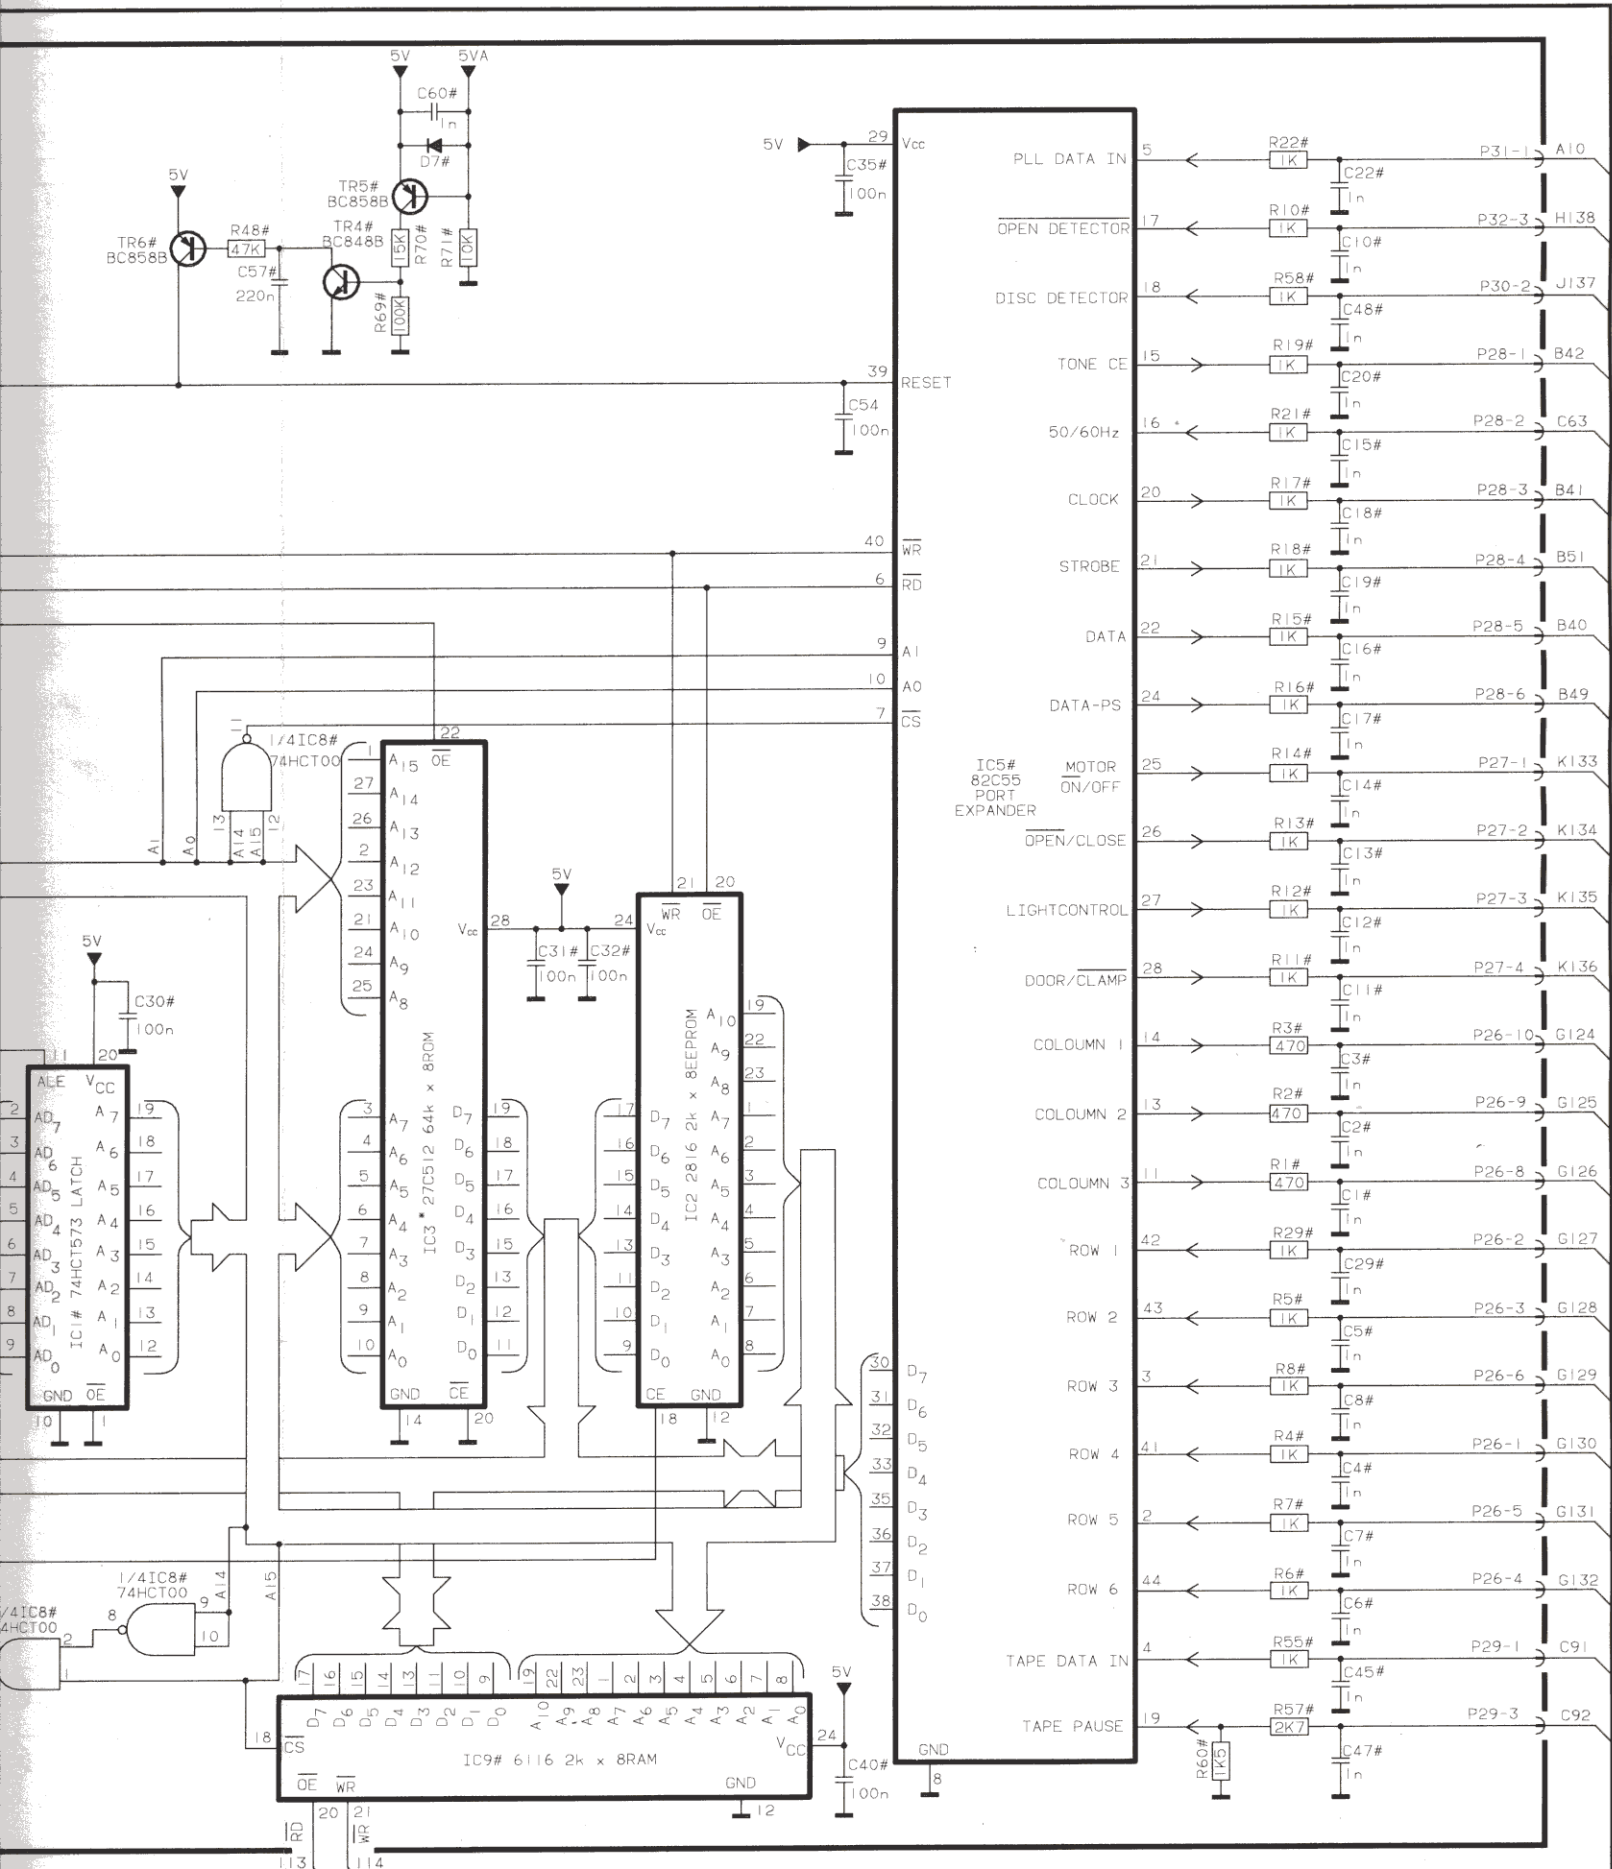


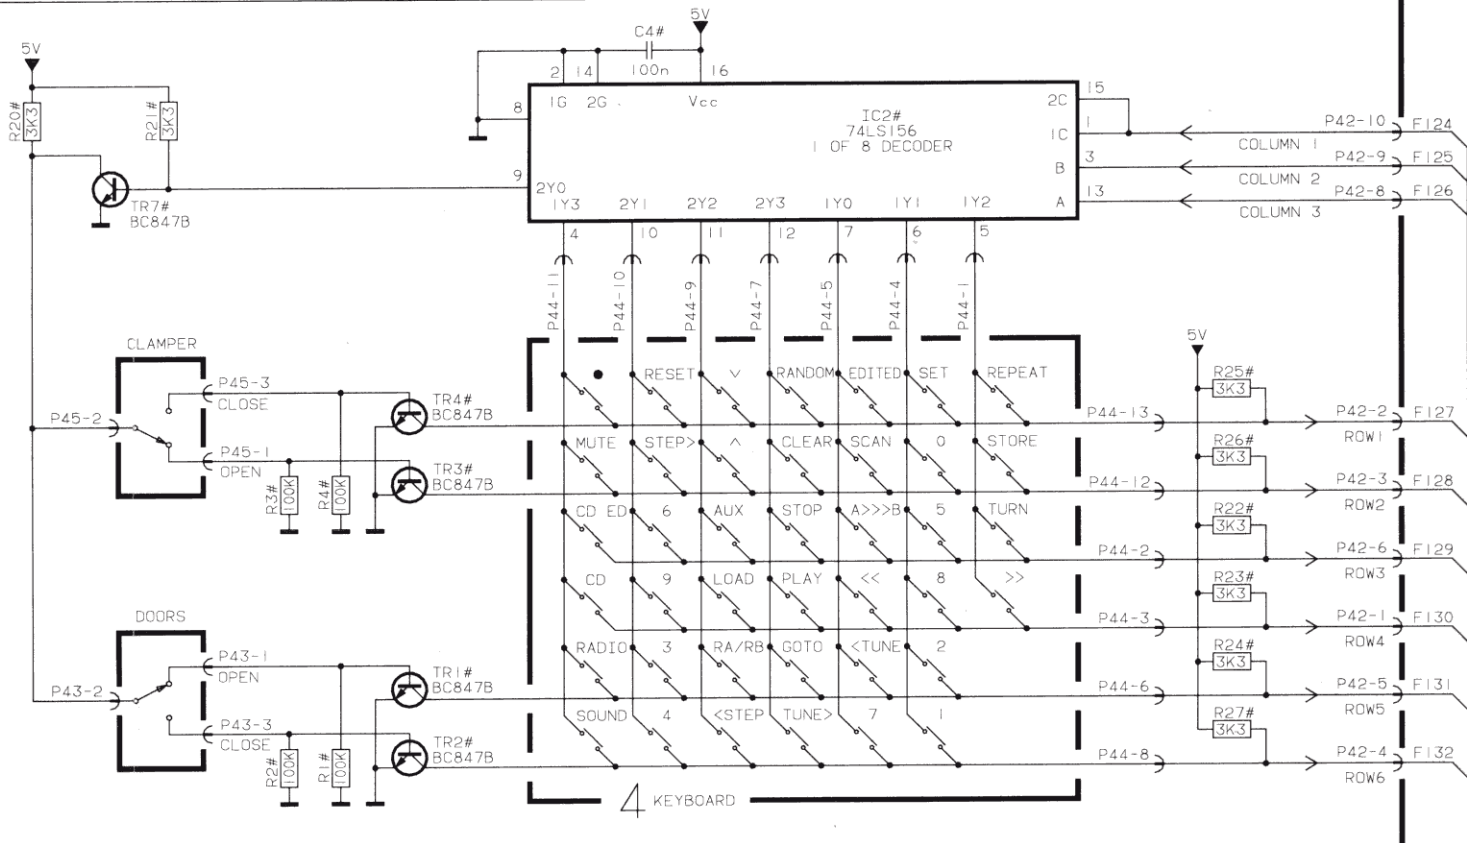


DIAGRAM G DISPLAY AND KEYBOARD

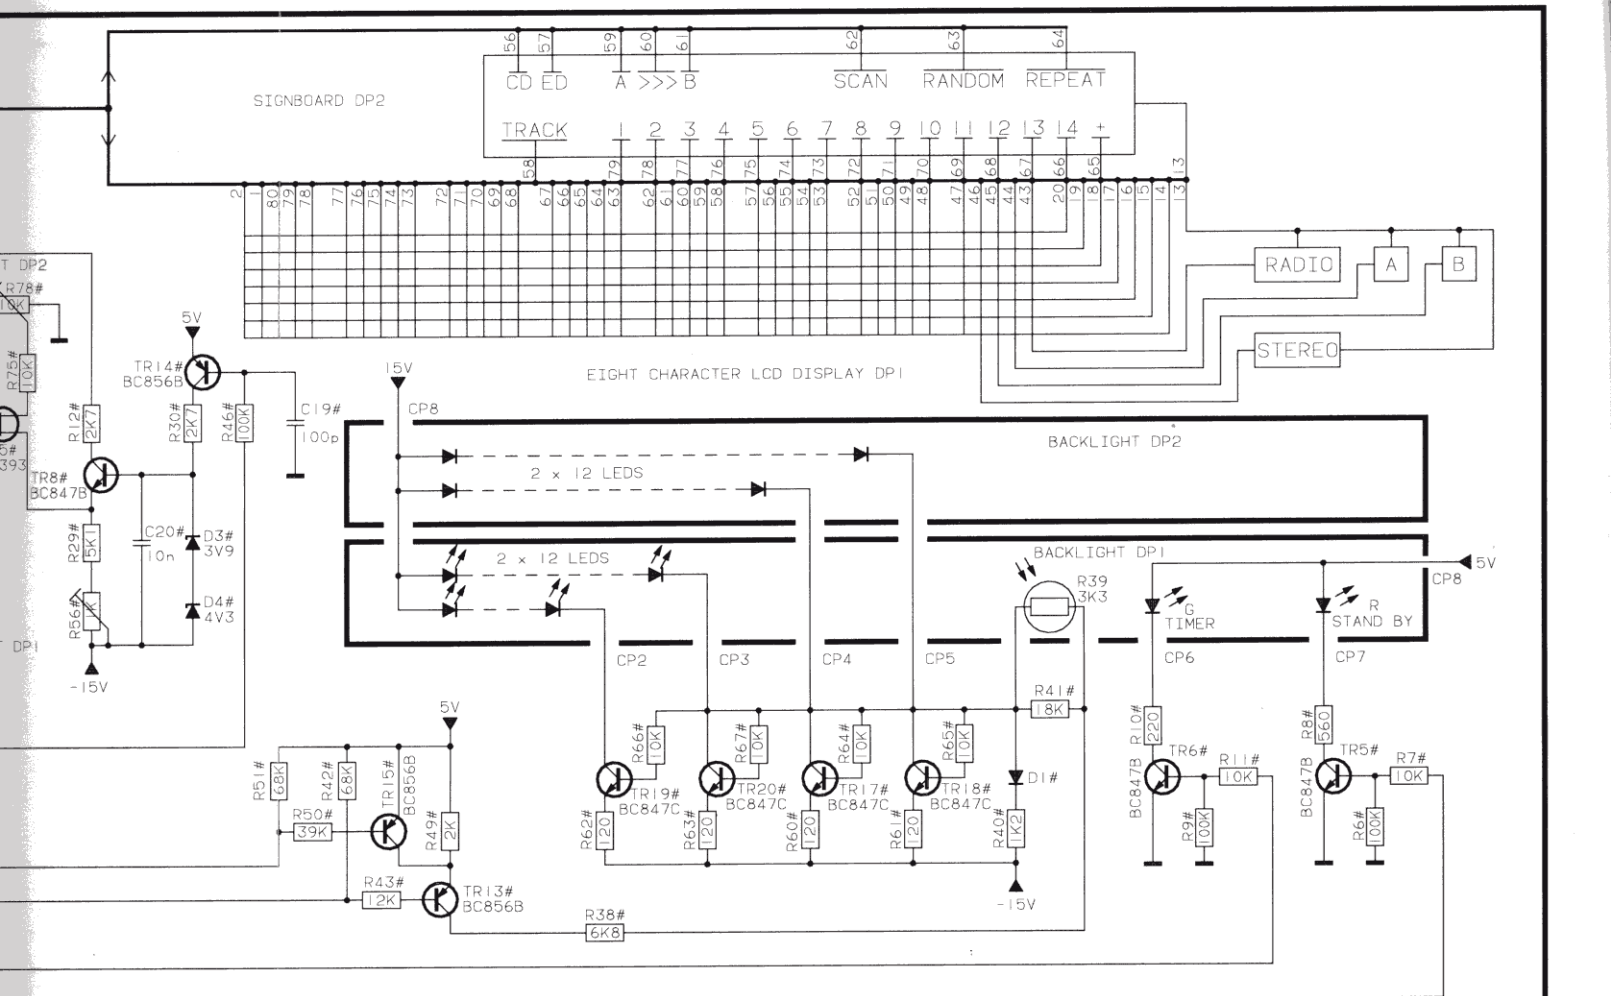