

# Bang & Olufsen



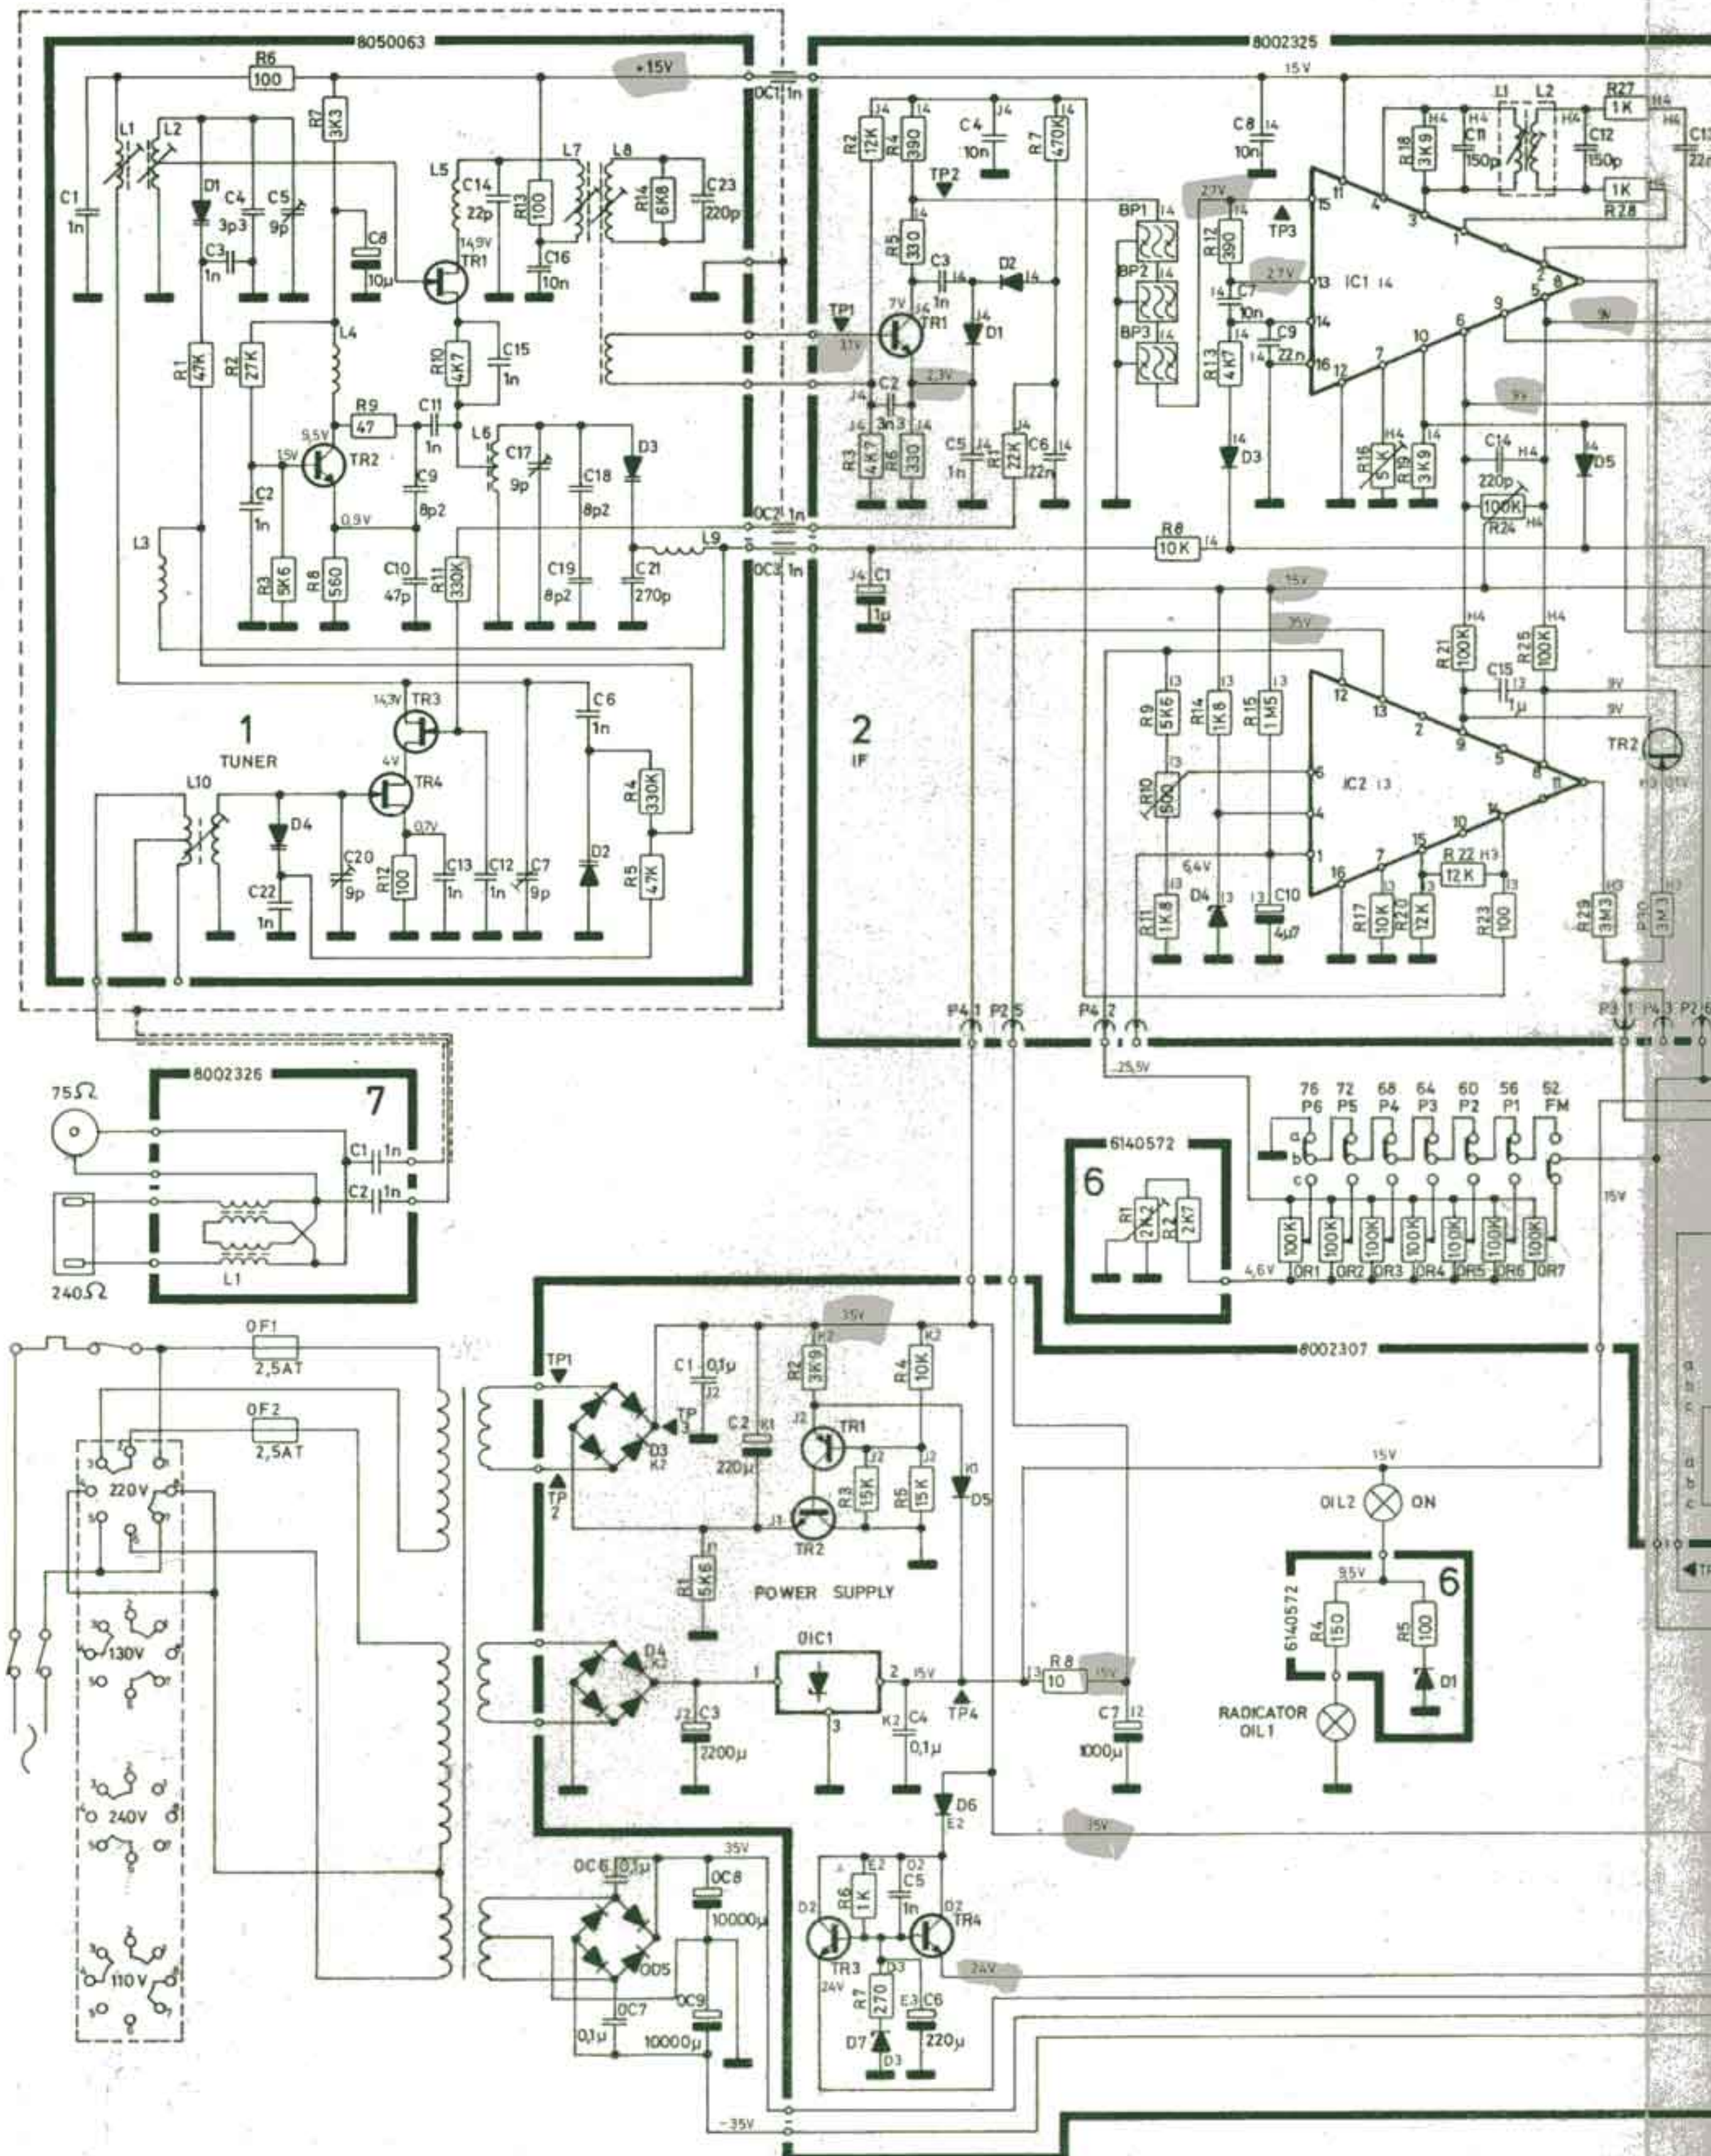



DIAGRAM 1

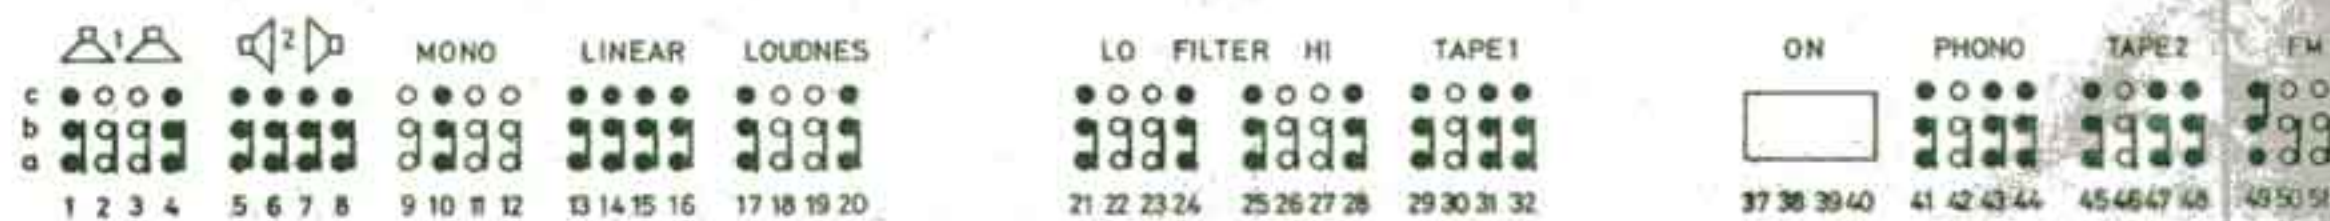

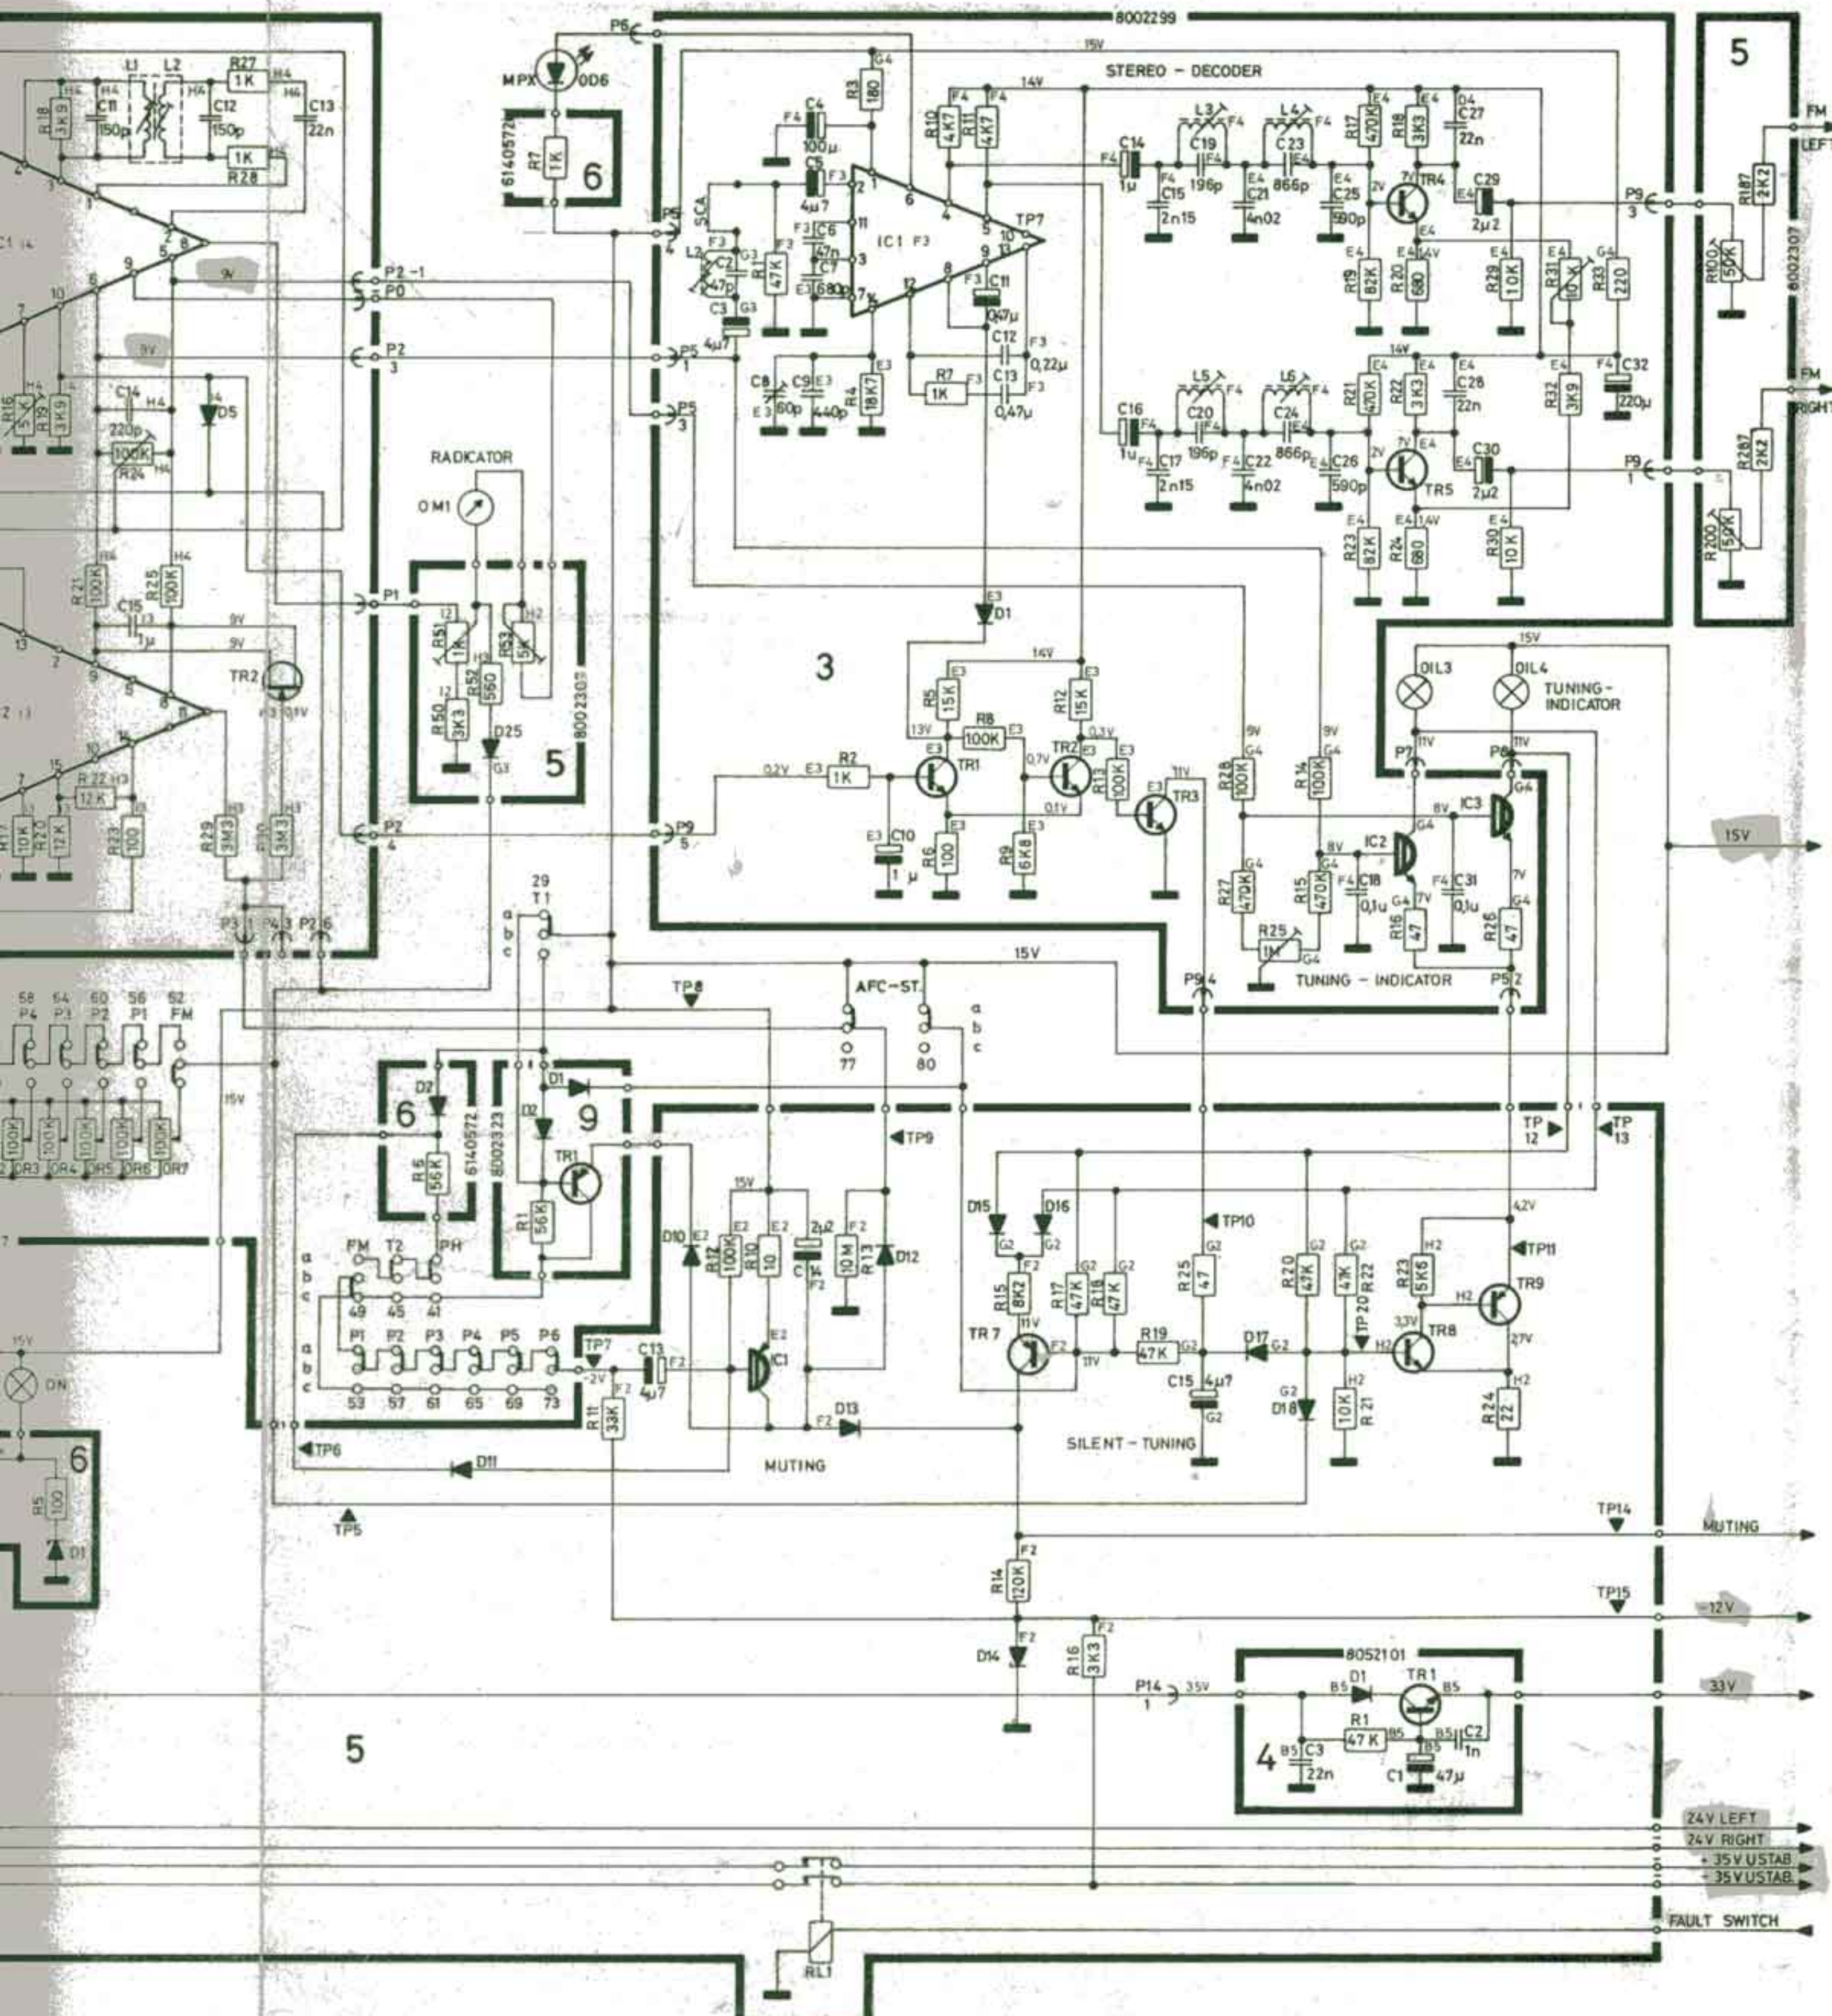


ON	PHONO	TAPE2	FM	P1	P2	P3	P4	P5	P6	AFC/ST
36 39 41	42 43 44	45 46 47 48	49 50 51 52	53 54 55 56	57 58 59 60	61 62 63 64	65 66 67 68	69 70 71 72	73 74 75 76	77 78 79 80

• 35V USTAB

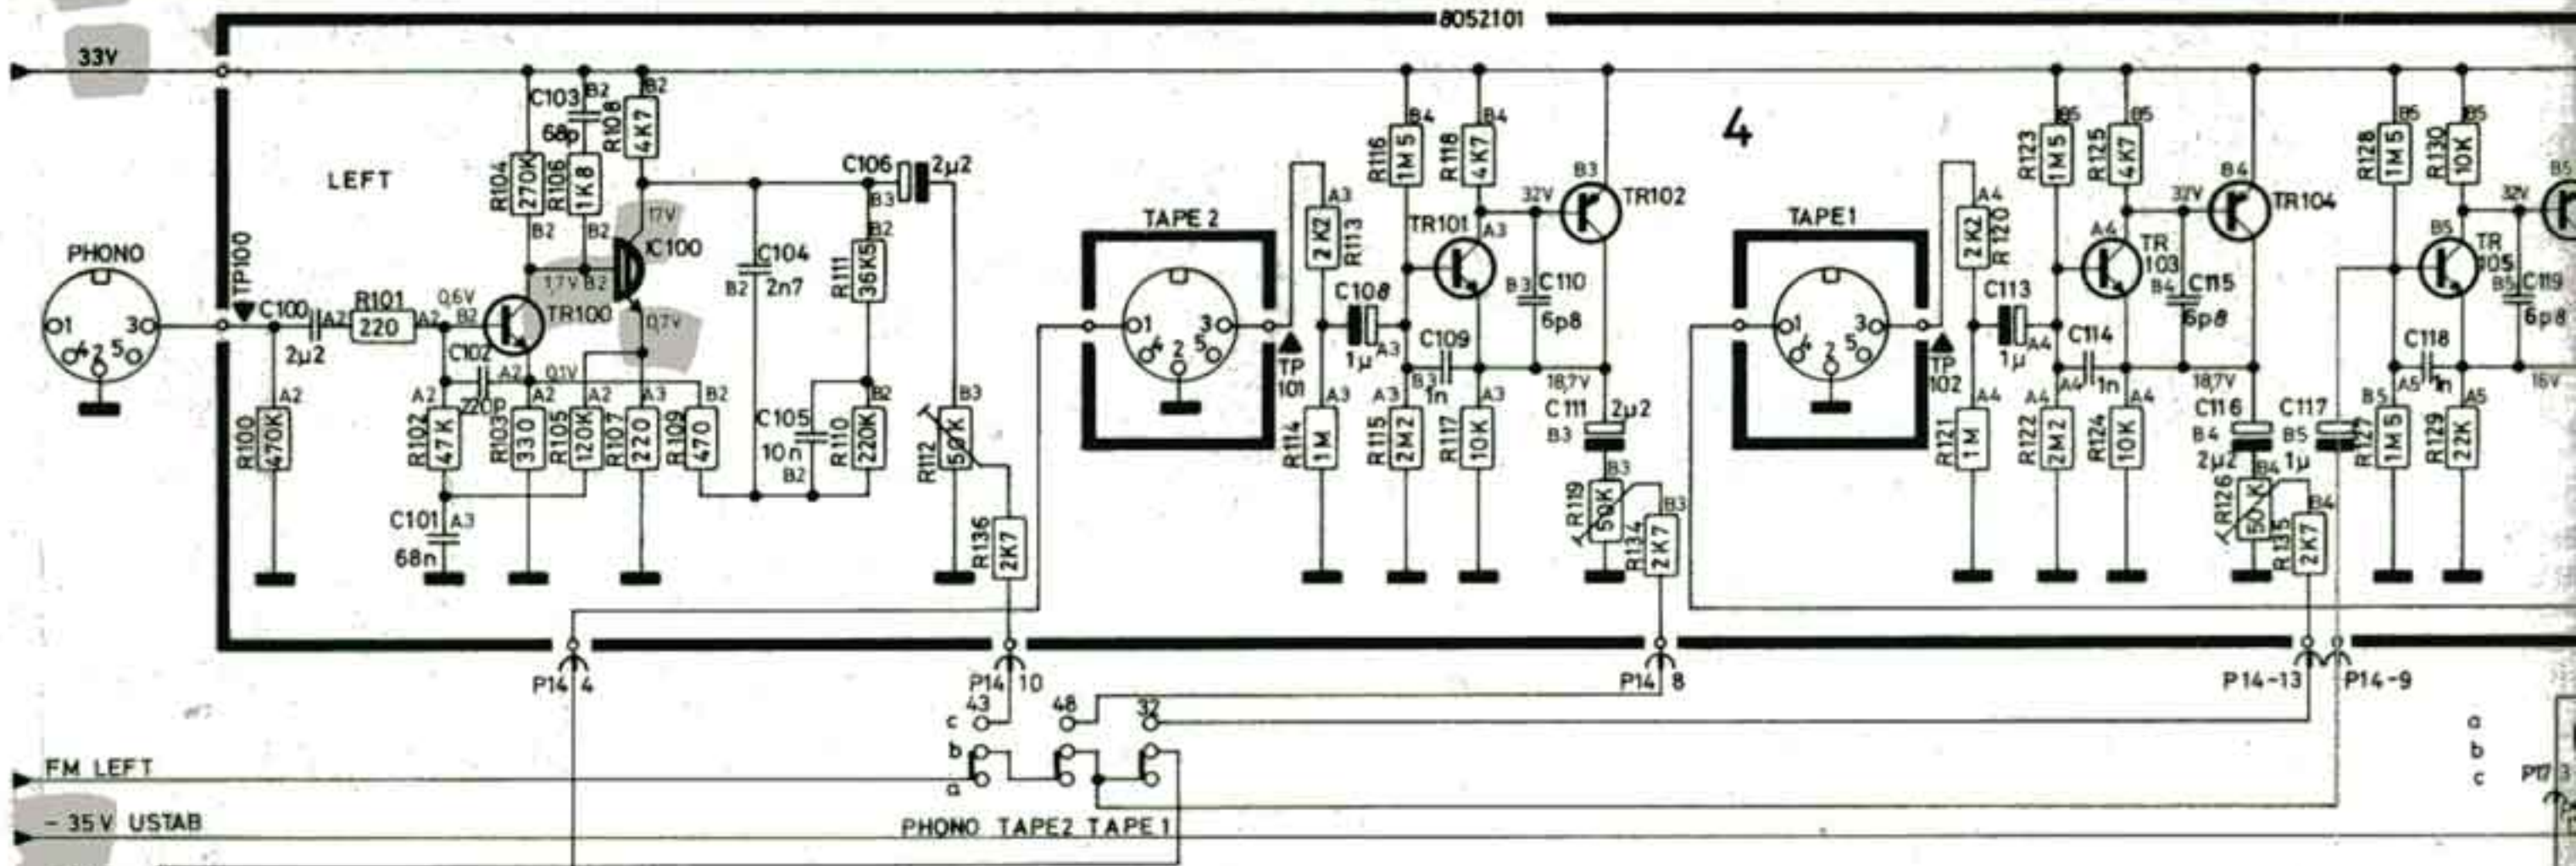

FM LEFT


- 35V USTAB

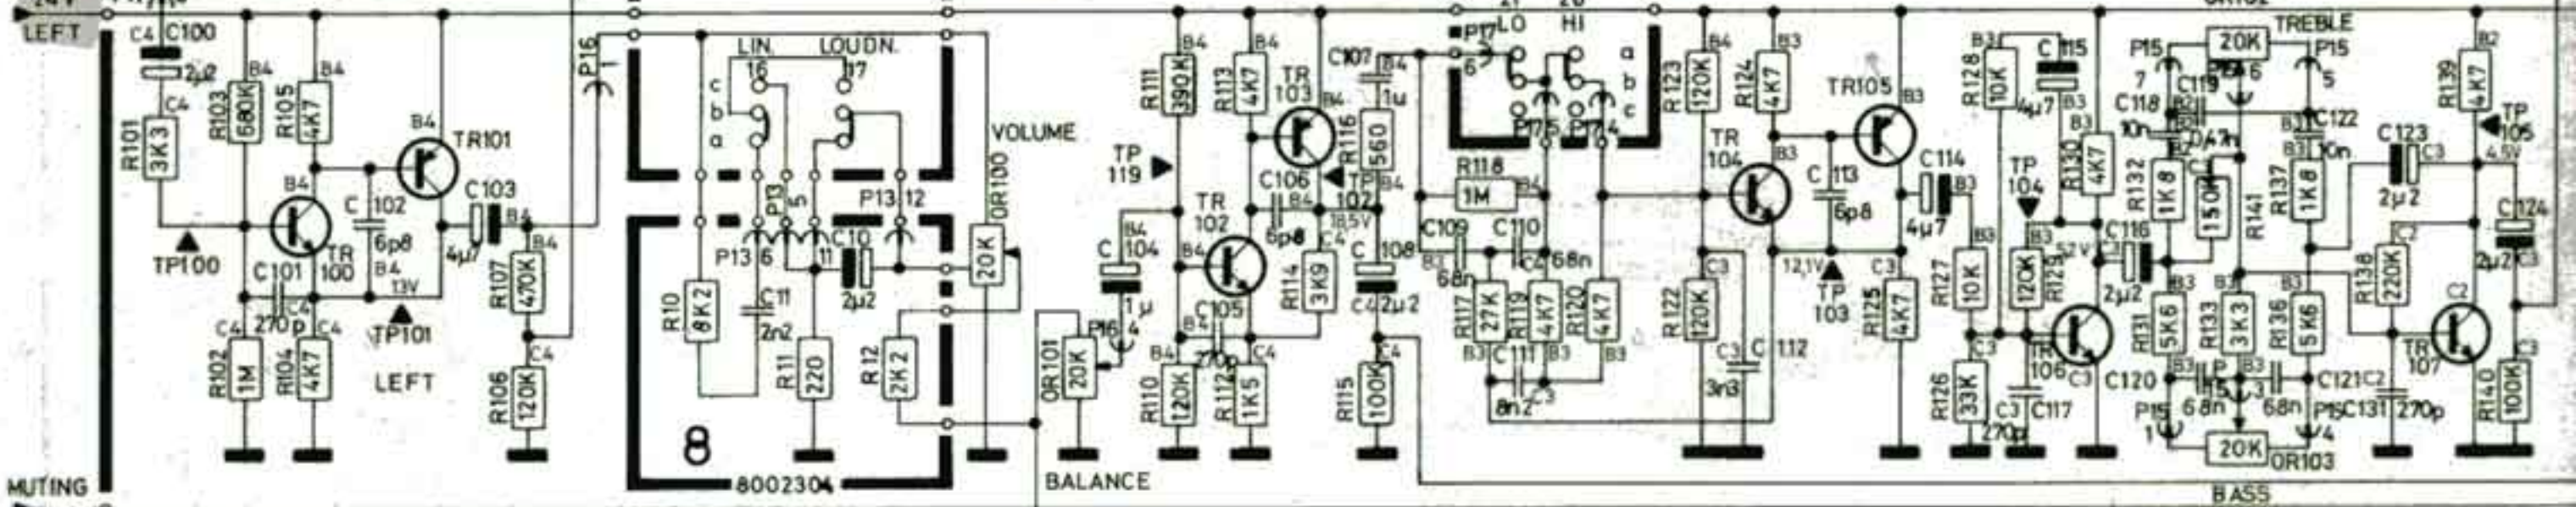

MUTING


FAULT - SWITCH

• 35V USTAB

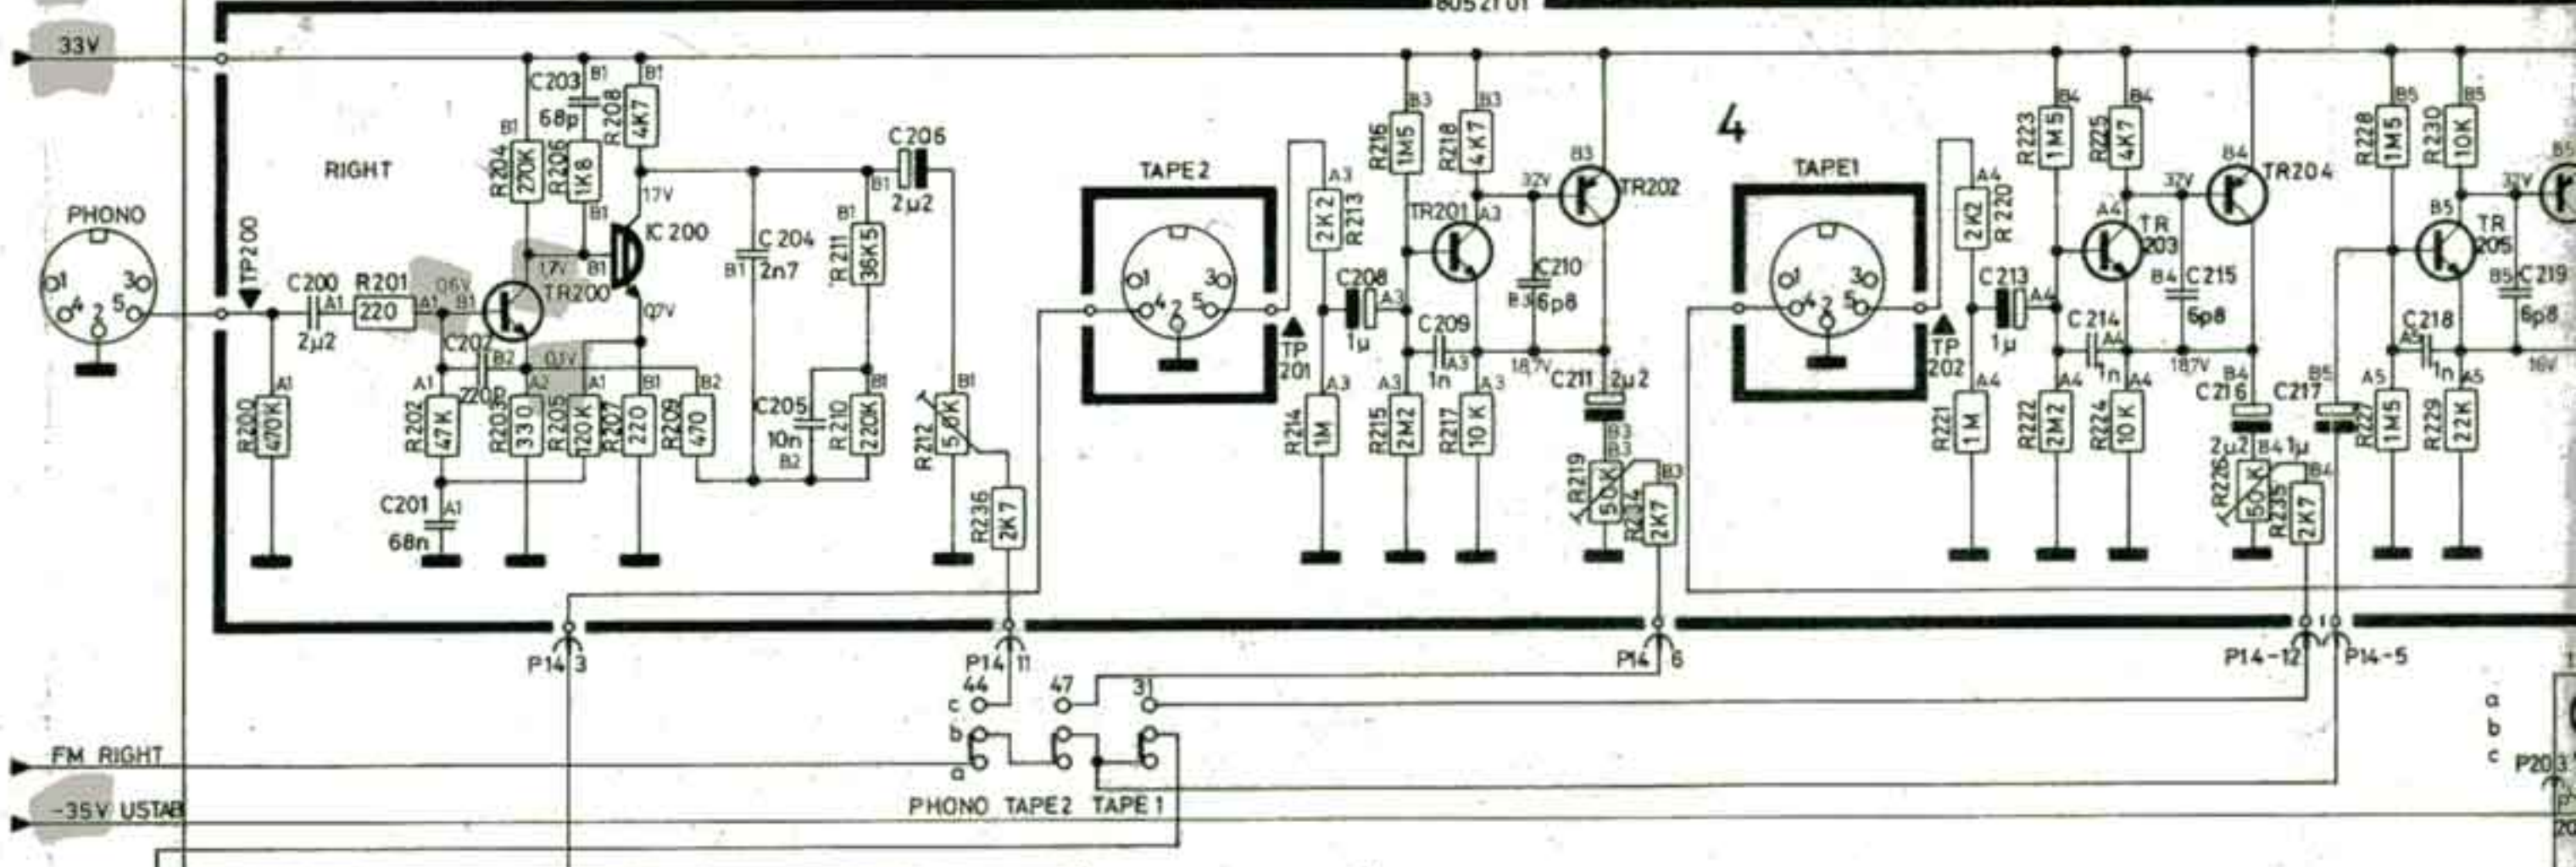

FM RIGHT

- 35V USTAB

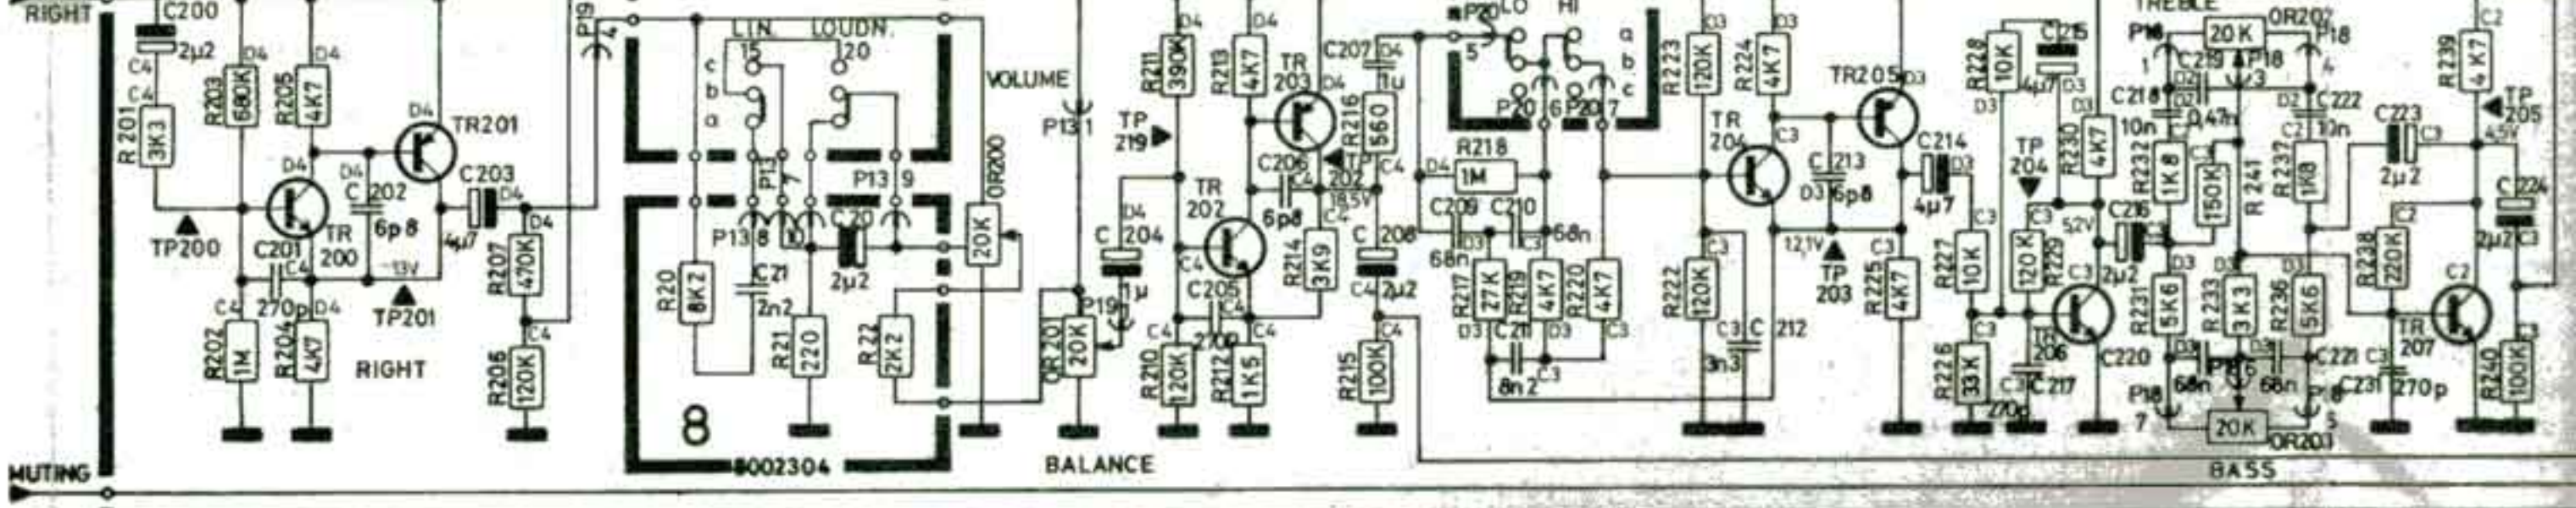

MUTING

