

Radio / Cassette

# Lübeck C30 Luxembourg C30


## Operating instructions



 **BLAUPUNKT**

---

Bitte aufklappen  
Open here  
Ouvrir s.v.p.  
Aprite la pagina  
Openslaan graag  
Öppna  
Por favor, abrir  
Favor abrir

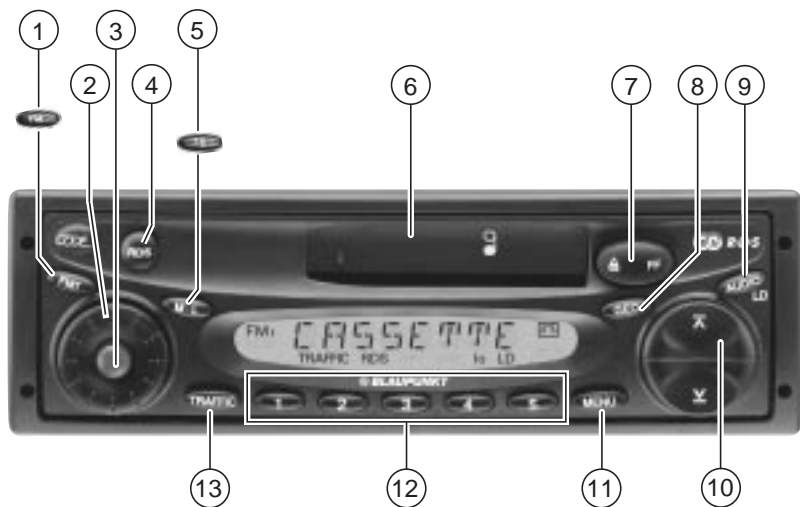

# CONTROLS

---

- ① **FM** button – selects the FM memory (on the Lübeck C30)  
**FMT** button – selects the FM memory and activates the Travelstore function (on the Luxembourg C30)
- ② Volume control
- ③ **ON** button – switches the unit on/off
- ④ **RDS** button – switches the RDS function on/off
- ⑤ **M•L** – selects the MW and LW frequency ranges (on the Luxembourg C30)  
**TS** – activates the Travelstore function (on the Lübeck C30)
- ⑥ Cassette compartment
- ⑦ Cassette eject  
**FF** button – fast forward
- ⑧ **GEO** button – sets balance and fader
- ⑨ **AUDIO** button – sets bass and treble  
**LD** button – switches the loudness function on/off
- ⑩ Arrow buttons
- ⑪ **MENU** button – opens the basic settings menu
- ⑫ Buttons **1 - 5**
- ⑬ **TRAFFIC** button – activates/deactivates traffic information standby

<b>Important information</b> .....	<b>16</b>	<b>Cassette mode</b> .....	<b>21</b>
Road safety .....	16	Cassette playback .....	21
Installation .....	16	Fast tape winding .....	21
Accessories .....	16	Fast forward .....	21
Guarantee .....	16	Stopping tape winding .....	21
International telephone hotline .....	16	Cassette eject .....	21
<b>Theft protection CODE</b> .....	<b>17</b>	Traffic information in cassette mode .....	21
Activating/deactivating the code .....	17	<b>Audio settings</b> .....	<b>22</b>
Entering the code .....	17	Bass settings .....	22
Code LED .....	17	Treble settings .....	22
<b>Switching on/off</b> .....	<b>18</b>	Loudness on/off .....	22
<b>Volume adjustment</b> .....	<b>18</b>	<b>Volume distribution settings</b> ..	<b>22</b>
Setting the power-on volume .....	18	Balance settings .....	22
Mute setting .....	18	Fader settings .....	22
<b>Radio mode</b> .....	<b>19</b>	<b>Technical data</b> .....	<b>23</b>
Switching on radio mode .....	19	Amplifier .....	23
RDS functions (AF, REG) .....	19	Tuner .....	23
Switching REG on/off .....	19	Cassette .....	23
Switching RDS function on/off .....	19	<b>Installation instructions</b> .....	<b>84</b>
Selecting the frequency range / memory .....	19		
Selecting the UKW (FM) memory .....	19		
Selecting the MW and LW memory ..	19		
Tuning into a station .....	20		
Automatic station search mode .....	20		
Sensitivity of the station search mode .....	20		
Storing stations .....	20		
Storing stations manually .....	20		
Storing stations automatically (Travelstore) .....	20		
Listening to preset stations .....	20		
<b>Traffic information reception</b> .	<b>21</b>		
Switching traffic information priority on/off .....	21		
Setting the traffic announcement volume .....	21		


# IMPORTANT INFORMATION

---

## **Important information**

Before using your car radio, please read these instructions carefully and familiarise yourself with the unit. Keep these instructions in your vehicle for later reference.

## **Road safety**

 Road safety has priority. Only operate your car radio if the road and traffic conditions allow you to do so. Familiarise yourself with the unit before setting off on your journey. You should always be able hear police, fire and ambulance sirens from afar. For this reason, you should set your car radio's volume to a suitable level.

## **Installation**

If you want to install your car radio yourself, read the installation and connection instructions that follow these operating instructions.

## **Accessories**

Only use accessories approved by Blaupunkt.

## **Guarantee**

The scope of the guarantee is orientated around the regulations in force within the country in which the unit was purchased.

Regardless of what the legal regulations may stipulate, Blaupunkt provides a twelve month guarantee.

If you have any questions regarding the guarantee, please contact your authorised Blaupunkt dealer.

The purchase receipt is accepted as proof of guarantee in all cases.

## **International telephone hotline**

If you have any questions regarding the operation of your car radio or if you require further information, please do not hesitate to call us!

The information hotline numbers are printed on the last page of these instructions.

## Theft protection CODE

As a way of protecting your car radio against theft, the system features a four digit code. You have to enter this number every time the unit is disconnected from your vehicle's electrical power supply. As a factory default, the code entry request function is deactivated. However, you have the option of activating this function.

The numerical code is printed on the pass card supplied with your unit.

### Note:

Never keep your radio's pass card in your vehicle!

### Activating/deactivating the code

In order to activate/deactivate the code request function, proceed as follows:

- ⇨ Press the **ON** button (3) to switch off the unit.
- ⇨ Press station buttons **1** and **4** (12) at the same time.
- ⇨ Keep these station buttons pressed while switching the unit on by pressing the **ON** button (3).
- ⇨ Keep station buttons **1** and **4** (12) pressed until "PUNKT" appears in the display.
- ⇨ Release the station buttons.

The code request function is now activated.

- ⇨ Follow the same procedure to deactivate the code request function.

### Note:

To prevent unauthorised persons from deactivating the code, you will have to

enter the code in order to deactivate the code request function.

### Entering the code

- ⇨ Switch on the unit.
- "CODE" appears in the display first of all and is followed by four zeros.
- ⇨ Keep pressing station button **1** (12) until the first number of your code appears in the display.
  - ⇨ Keep pressing station button **2** (12) until the second number of your code appears in the display.
  - ⇨ Keep pressing station button **3** (12) until the third number of your code appears in the display.
  - ⇨ Keep pressing station button **4** (12) until the fourth number of your code appears in the display.
  - ⇨ Once the correct code is displayed, press the **▲** or **▼** button (10).

### Note:

If the code is entered three times incorrectly, you will have to wait for a fixed time period. "WAIT 1 H" appears in the display. The unit must remain switched on during this hour.

### Code LED

In order to indicate that the unit is theft protected, you can set the **ON** button (3) to flash whilst the unit is switched off.

- ⇨ Keep pressing the **MENU** button (11) until "LED" appears in the display.
- ⇨ Press the **▼** button (10) to turn the LED on (ON) or off (OFF).
- ⇨ Press the **MENU** button (11).

## Switching on/off

There are various ways of switching the unit on/off.

- Switching on/off using the vehicle ignition.

If the unit is correctly connected to the vehicle's ignition, it will switch on/off simultaneously with the ignition.

You can also switch the unit on even if the ignition is off.

- ⇒ To do so, press button ③ until the unit turns on.

### Note:

To protect the vehicle battery, the unit will switch off automatically after one hour.

- Switching on/off using button ③.
- ⇒ To switch the unit on press button ③.
- ⇒ To switch the unit off press button ③ for longer than two seconds.

## Volume adjustment

The system volume can be adjusted in steps from 0 (off) to 66 (maximum).

- ⇒ To increase the system volume, turn the volume control ② to the right.
- ⇒ To decrease the system volume, turn the volume control ② to the left.

## Setting the power-on volume

You can set the unit's default power-on volume.

- ⇒ Keep pressing the **MENU** button ⑪ until "ON VOL" appears in the display.
- ⇒ Set the power-on volume using the **▲** and **▼** buttons ⑩.

If you set the power-on volume to 0: every time you turn the unit on, the power-on volume will be the same as the volume level that was set before the unit was last switched off.

### Risk of serious injury.

If the power-on volume is set to maximum, the volume level can be very high when the unit is switched on. If the volume was set to maximum before the unit was switched off and the power-on volume is set to 0, the volume level can be very high when the unit is switched on again.

- ⇒ Press the **MENU** button ⑪.

## Mute setting

This feature allows you to instantaneously reduce the system volume (mute).

- ⇒ Press button ③.



## Radio mode

This unit is equipped with an RDS radio receiver. Nearly all receivable FM stations transmit a signal that not only carries the programme but also additional information such as the station name. The station name appears in the display as soon as it is received.

### Switching on radio mode

If you are in cassette mode:

- ⇨ Press the cassette eject button (7).

### RDS functions (AF, REG)

The RDS functions – AF (Alternative Frequency) and REG (Regional) – extend your radio's range of functions.

- **AF:** If this RDS function is activated, the unit automatically carries out a background search for the best receivable frequency for the station that is currently set.
- **REG:** Some radio stations set aside some of their broadcasting time for regional programmes that provide different regional content. You can use the REG function to prevent the car radio from switching to alternative frequencies that are transmitting different programmes.

#### **Note:**

REG has to be additionally activated/deactivated in the unit's menu.

### Switching REG on/off

- ⇨ Keep pressing the **MENU** button (11) until "REG" appears in the display.

- ⇨ Press the **▲** or **▼** button (10) until "REG ON" or "REG OFF" appears in the display.
- ⇨ Press the **MENU** button (11) until the radio display appears in the display.

### Switching RDS function on/off

- ⇨ To use the RDS functions (AF and REG), press the **RDS** button (4).

The RDS functions are active when "RDS" lights up in the display. When the RDS functions are switched on, "REG ON" or "REG OFF" appears briefly in the display.

### Selecting the frequency range / memory

This unit can receive programmes broadcast over the UKW (FM), MW and LW frequency ranges (MW and LW are not available on the Lübeck C30). There are three preset memory levels for the FM range and one for each of the MW and LW ranges. Five stations can be stored on each memory level.

#### Selecting the UKW (FM) memory

- ⇨ Press the **FMT** or **FM** button (1) to switch between the various UKW memory levels.

#### Selecting the MW and LW memory

- ⇨ Press the **M•L** button (5) to switch between the MW and LW memory levels (not available on the Lübeck C30).

# RADIO MODE

---

## Tuning into a station

### Automatic station search mode

⇒ Press either the **Y** or **X** button (10).

The unit tunes into the next receivable station.

### Sensitivity of the station search mode

You can configure the radio to only receive stations with a strong reception or to also receive those with a weak reception.

⇒ Keep pressing the **MENU** button (11) until "SENS" appears in the display.

The display shows the currently set value for sensitivity. "SENS HI" means that the tuner is highly sensitive. "SENS LO" means it has a low sensitivity setting. If "SENS LO" is selected, "lo" lights up in the display.

⇒ Set the required sensitivity with the **X** and **Y** buttons (10).

⇒ Press the **MENU** button (11) until the radio display appears in the display.

## Storing stations

### Storing stations manually

⇒ Select the required memory: FM1, FM2 or FMT (only for FM).

⇒ Tune in the station.

⇒ Press one of the station buttons 1-5 (12) for longer than one second to store the station on that button.

## Storing stations automatically (Travelstore)

You can automatically store the five stations with the strongest reception in the region (only FM).

The stations are stored in the FMT memory.

### Note:

Stations that were previously stored in this memory are deleted in the process.

⇒ Keep the **FMT** button (1) pressed for longer than two seconds or briefly press the **TS** button (5) (only on the Lübeck C30).

The automatic station storing procedure begins. "T-STORE" appears in the display. After the process is completed, you will start hearing the station that is stored in FMT memory location 1.

## Listening to preset stations

⇒ Select the memory in which the station was stored.

⇒ Press the preset station button of the station you want to listen to.

## Traffic information reception

### Switching traffic information priority on/off

⇒ Press the **TRAFFIC** button (13).

Priority for traffic announcements is activated when "TRAFFIC" lights up in the display.

#### **Note:**

You will hear a warning sound:

- if you leave the reception area of a traffic information station that you are currently listening to.
- if you leave the reception area of a traffic information station that you are tuned into while listening to a cassette, and the subsequent automatic search cannot find a new traffic information station.
- if you tune the radio from a traffic information station to a station that does not broadcast traffic information.

If you hear the warning sound, you can either switch off traffic information priority or tune into a station that broadcasts traffic information.

### Setting the traffic announcement volume

- ⇒ Keep pressing the **MENU** button (11) until "TA VOL" appears in the display.
- ⇒ Set the required volume using the **▲** and **▼** buttons (10).
- ⇒ Press the **MENU** button (11) until the radio display appears in the display.

## Cassette mode

### Cassette playback

- If there is no cassette inserted in the unit:
- ⇒ Insert a cassette with the open edge on the right into the cassette compartment.

The side of the cassette that is uppermost is then played first of all. A cassette symbol lights up in the display.

### Fast tape winding

#### **Fast forward**

- ⇒ Press the **FF** button (7) (Fast Forward) until it engages.

#### **Stopping tape winding**

- ⇒ Slightly press the tape-winding button (7) and release the button.

Cassette playback will then be continued.

### Cassette eject

- ⇒ Press the **⏏** button (7) to eject the cassette from the cassette compartment.

### Traffic information in cassette mode

If the "TRAFFIC" function is active (priority for traffic information), the car radio will also be ready to receive traffic announcements even whilst you are listening to a cassette. If the unit receives a traffic announcement, cassette playback will be interrupted and you will hear the traffic announcement. For further details read the chapter on "Traffic information reception".

# AUDIO SETTINGS AND VOLUME DISTRIBUTION

---

## Audio settings

### Bass settings

⇒ To set the bass, press the **AUDIO** button (9).

“BASS” appears in the display.

⇒ Press the **▲** or **▼** button (10) to adjust the bass.

### Treble settings

⇒ To set the treble, press the **AUDIO** button (9).

“BASS” appears in the display.

⇒ Press the **AUDIO** button (9) again.

“TREBLE” appears in the display.

⇒ Press the **▲** or **▼** button (10) to adjust the treble.

### Loudness on/off

If loudness is activated, the bass and treble levels are aurally compensated, i.e. they are increased at low volume levels.

⇒ Press the **AUDIO** button (9) for approximately 2 seconds.

LD lights up in the display when loudness is switched on.

## Volume distribution settings

### Balance settings

⇒ To set the balance, press the **GEO** button (8).

“BAL” appears in the display.

⇒ Press the **▲** or **▼** button (10) to adjust the balance (right/left).

### Fader settings

⇒ To set the fader, press the **GEO** button (8).

“BAL” appears in the display.

⇒ Press the **GEO** button (8) again.

“FADER” appears in the display.

⇒ Press the **▲** or **▼** button (10) to adjust the fader (front/back).

## **Technical data**

### **Amplifier**

Output power: 4 x 25 watts sine  
in accordance with  
DIN 45 324  
at 14.4 V  
4 x 40 Watt max.  
power

### **Tuner**

Frequency ranges:

UKW (FM): 87.5 – 108 MHz

MW : 531 – 1602 kHz

LW : 153 – 279 kHz

FM transmission range:

20 - 16 000 Hz

### **Cassette**

Transmission range:

30 - 18 000 Hz

Subject to changes!

**Service-Nummern / Service numbers / Numéros du service après-vente / Numeri del servizio di assistenza / Servicenummers / Telefonnummer för service / Números de servicio / Número de serviço**

	Tel.:	Fax:
Deutschland	0 18 05 00 02 25	0 51 21 49 40 02
Belgique / België	0 25 25 54 44	0 25 25 54 48
France	014 010 70 07	014 010 73 20
Nederland	023 565 63 48	023 565 63 31
Great Britain	018 958 383 66	018 958 383 94
Danmark	44 89 83 60	44 89 86 44
Sverige	08 750 15 00	08 750 18 10
Norge	66 81 70 00	66 81 71 57
Suomi	094 359 91	094 359 92 36
Österreich	01-6 10 39-0	01-6 10 39-391
Ελλάς	015 762 241	015 769 473
Česká republika	026 130 04 41	026 130 05 14
USA	800-266 25 28	708-681 71 88
Singapore	006 535 054 47	006 535 053 12
Slovensko	042 175 873 212	042 175 873 229

**Blaupunkt-Werke GmbH**  
**Bosch Gruppe**

