

DENON

BLU-RAY DISC / DVD VIDEO TRANSPORT

DVD-2500BT

OPERATING INSTRUCTIONS

BEDIENUNGSANLEITUNG

MODE D'EMPLOI

ISTRUZIONI PER L'USO


INSTRUCCIONES DE OPERACION

GEBRUIKSAANWIJZING


BRUKSANVISNING

Introduction

SAFETY PRECAUTIONS



CAUTION
RISK OF ELECTRIC SHOCK
DO NOT OPEN




CAUTION:
TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK). NO USER-SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.

The lightning flash with arrowhead symbol, within an equilateral triangle, is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.

The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

WARNING:
TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, DO NOT EXPOSE THIS APPLIANCE TO RAIN OR MOISTURE.

CLASS 1 LASER PRODUCT LUOKAN 1 LASERLAITE KLASS 1 LASERAPPARAT

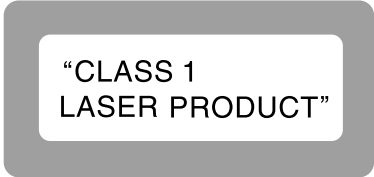

- ADVARSEL:** USYNLIG LASERSTRÅLING VED ÅBNING, NÅR SIKKERHEDSAFBRYDERE ER UDE AF FUNKTION. UNDGA UDSAETTELSE FOR STRÅLING.
- VAROITUS:** LAITTEEN KÄYTTÄMINEN MUULLA KUINTÄSSÄ KÄYTTÖOHJEESSA MAINITULLA TAVALLA SAATTAÄ ALTISTAA KÄYTTÄJÄN TURVALLISUUSLUOKAN 1 YLITTÄVÄLLE NÄKYMÄMTÖMÄLLE LASERSÄTEILYLLE. OM APPARATEN ANVÄNDS PÅ ANNAT SÄTT ÄN I DENNA BRUKSANVISNING SPECIFICERATS, KAN ANVÄNDAREN UTSÄTTAS FÖR OSYNLIG LASERSTRÅLNING SOM ÖVERSKRIDER GRÄNSEN FÖR LASERKLASS 1.
- WARNING:** OM APPARATEN ANVÄNDS PÅ ANNAT SÄTT ÄN I DENNA BRUKSANVISNING SPECIFICERATS, KAN ANVÄNDAREN UTSÄTTAS FÖR OSYNLIG LASERSTRÅLNING SOM ÖVERSKRIDER GRÄNSEN FÖR LASERKLASS 1.



ATTENZIONE: QUESTO APPARECCHIO E' DOTATO DI DISPOSITIVO OTTICO CON RAGGIO LASER. L'USO IMPROPRIO DELL'APPARECCHIO PUO' CAUSARE PERICOLOSE ESPOSIZIONI A RADIAZIONI!

- DECLARATION OF CONFORMITY**
We declare under our sole responsibility that this product, to which this declaration relates, is in conformity with the following standards: EN60065, EN55013, EN55020, EN61000-3-2 and EN61000-3-3. Following the provisions of 2006/95/EC and 2004/108/EC Directive.
- ÜBEREINSTIMMUNGSERKLÄRUNG**
Wir erklären unter unserer Verantwortung, daß dieses Produkt, auf das sich diese Erklärung bezieht, den folgenden Standards entspricht: EN60065, EN55013, EN55020, EN61000-3-2 und EN61000-3-3. Entspricht den Verordnungen der Direktive 2006/95/EC und 2004/108/EC.
- DECLARATION DE CONFORMITE**
Nous déclarons sous notre seule responsabilité que l'appareil, auquel se réfère cette déclaration, est conforme aux standards suivants: EN60065, EN55013, EN55020, EN61000-3-2 et EN61000-3-3. D'après les dispositions de la Directive 2006/95/EC et 2004/108/EC.
- DICHIARAZIONE DI CONFORMITÀ**
Dichiariamo con piena responsabilità che questo prodotto, al quale la nostra dichiarazione si riferisce, è conforme alle seguenti normative: EN60065, EN55013, EN55020, EN61000-3-2 e EN61000-3-3. In conformità con le condizioni delle direttive 2006/95/EC e 2004/108/EC. QUESTO PRODOTTO E' CONFORME AL D.M. 28/08/95 N. 548
- DECLARACIÓN DE CONFORMIDAD**
Declaramos bajo nuestra exclusiva responsabilidad que este producto al que hace referencia esta declaración, está conforme con los siguientes estándares: EN60065, EN55013, EN55020, EN61000-3-2 y EN61000-3-3. Siguiendo las provisiones de las Directivas 2006/95/EC y 2004/108/EC.
- EENVORMIGHEIDSVERKLARING**
Wij verklaren uitsluitend op onze verantwoordelijkheid dat dit product, waarop deze verklaring betrekking heeft, in overeenstemming is met de volgende normen: EN60065, EN55013, EN55020, EN61000-3-2 en EN61000-3-3. Volgens de bepalingen van de Richtlijnen 2006/95/EC en 2004/108/EC.
- ÖVERENSSTÄMMELSESINTYG**
Härmed intygas helt på eget ansvar att denna produkt, vilken detta intyg avser, uppfyller följande standarder: EN60065, EN55013, EN55020, EN61000-3-2 och EN61000-3-3. Enligt stadgarna i direktiv 2006/95/EC och 2004/108/EC.

DENON EUROPE
Division of D&M Germany GmbH
An der Landwehr 19, Nettetal,
D-41334 Germany

CAUTION:
To completely disconnect this product from the mains, disconnect the plug from the wall socket outlet. The mains plug is used to completely interrupt the power supply to the unit and must be within easy access by the user.

VORSICHT:
Um dieses Gerät vollständig von der Stromversorgung abzutrennen, ziehen Sie bitte den Stecker aus der Wandsteckdose. Der Netzstecker wird verwendet, um die Stromversorgung zum Gerät völlig zu unterbrechen; er muss für den Benutzer gut und einfach zu erreichen sein.

PRECAUTION:
Pour déconnecter complètement ce produit du courant secteur, débranchez la prise de la prise murale. La prise secteur est utilisée pour couper complètement l'alimentation de l'appareil et l'utilisateur doit pouvoir y accéder facilement.

ATTENZIONE:
Per scollegare completamente questo prodotto dalla rete di alimentazione elettrica, scollegare la spina dalla relativa presa a muro. La spina di rete viene utilizzata per interrompere completamente l'alimentazione all'unità e deve essere facilmente accessibile all'utente.

PRECAUCIÓN:
Para desconectar completamente este producto de la alimentación eléctrica, desconecte el enchufe del enchufe de la pared. El enchufe de la alimentación eléctrica se utiliza para interrumpir por completo el suministro de alimentación eléctrica a la unidad y debe de encontrarse en un lugar al que el usuario tenga fácil acceso.

WAARSCHUWING:
Om de voeding van dit product volledig te onderbreken moet de stekker uit het stopcontact worden getrokken. De netstekker wordt gebruikt om de stroomtoevoer naar het toestel volledig te onderbreken en moet voor de gebruiker gemakkelijk bereikbaar zijn.


FÖRSIKTIGHETSÅTT:
Koppla loss stickproppen från eluttaget för att helt skilja produkten från nätet. Stickproppen används för att helt bryta strömförsörjningen till apparaten, och den måste vara lättillgänglig för användaren.

CAUTION:
USE OF CONTROLS OR ADJUSTMENTS OR PERFORMANCE OF PROCEDURES OTHER THAN THOSE SPECIFIED HEREIN MAY RESULT IN HAZARDOUS RADIATION EXPOSURE. THIS PRODUCT SHOULD NOT BE ADJUSTED OR REPAIRED BY ANYONE EXCEPT PROPERLY QUALIFIED SERVICE PERSONNEL.

Introduction

☐ **NOTE ON USE / HINWEISE ZUM GEBRAUCH / OBSERVATIONS RELATIVES A L'UTILISATION / NOTE SULL'USO / NOTAS SOBRE EL USO / ALVORENS TE GEBRUIKEN / OBSERVERA ANGÅENDE ANVÄNDNINGEN**

Introduction

 <ul style="list-style-type: none"> Avoid high temperatures. Allow for sufficient heat dispersion when installed in a rack. Vermeiden Sie hohe Temperaturen. Beachten Sie, dass eine ausreichende Belüftung gewährleistet wird, wenn das Gerät auf ein Regal gestellt wird. Eviter des températures élevées. Tenir compte d'une dispersion de chaleur suffisante lors de l'installation sur une étagère. Evitate di esporre l'unità a temperature elevate. Assicuratevi che vi sia un'adeguata dispersione del calore quando installate l'unità in un mobile per componenti audio. Evite altas temperaturas. Permite la suficiente dispersión del calor cuando está instalado en la consola. Vermijd hoge temperaturen. Zorg er bij installatie in een audiorack voor, dat de door het toestel geproduceerde warmte goed kan worden afgevoerd. Undvik höga temperaturer. Se till att det finns möjlighet till god värmeavledning vid montering i ett rack. 	 <ul style="list-style-type: none"> Keep the unit free from moisture, water, and dust. Halten Sie das Gerät von Feuchtigkeit, Wasser und Staub fern. Protéger l'appareil contre l'humidité, l'eau et la poussière. Tenete l'unità lontana dall'umidità, dall'acqua e dalla polvere. Mantenga el equipo libre de humedad, agua y polvo. Laat geen vochtigheid, water of stof in het apparaat binnendringen. Utsätt inte apparaten för fukt, vatten och damm. 	 <ul style="list-style-type: none"> Do not let foreign objects into the unit. Lassen Sie keine fremden Gegenstände in das Gerät kommen. Ne pas laisser des objets étrangers dans l'appareil. Non inserite corpi estranei all'interno dell'unità. No deje objetos extraños dentro del equipo. Laat geen vreemde voorwerpen in dit apparaat vallen. Se till att främmande föremål inte tränger in i apparaten. 	<p>CAUTION:</p> <ul style="list-style-type: none"> The ventilation should not be impeded by covering the ventilation openings with items, such as newspapers, tablecloths, curtains, etc. No naked flame sources, such as lighted candles, should be placed on the unit. Observe and follow local regulations regarding battery disposal. Do not expose the unit to dripping or splashing fluids. Do not place objects filled with liquids, such as vases, on the unit. <p>ACHTUNG:</p> <ul style="list-style-type: none"> Die Belüftung sollte auf keinen Fall durch das Abdecken der Belüftungsöffnungen durch Gegenstände wie beispielsweise Zeitungen, Tischtücher, Vorhänge o. Ä. behindert werden. Auf dem Gerät sollten keinerlei direkte Feuerquellen wie beispielsweise angezündete Kerzen aufgestellt werden. Bitte beachten Sie bei der Entsorgung der Batterien die örtlich geltenden Umweltbestimmungen. Das Gerät sollte keiner tropfenden oder spritzenden Flüssigkeit ausgesetzt werden. Auf dem Gerät sollten keine mit Flüssigkeit gefüllten Behälter wie beispielsweise Vasen aufgestellt werden.
 <ul style="list-style-type: none"> Handle the power cord carefully. Hold the plug when unplugging the cord. Gehen Sie vorsichtig mit dem Netzkabel um. Halten Sie das Kabel am Stecker, wenn Sie den Stecker herausziehen. Manipuler le cordon d'alimentation avec précaution. Tenir la prise lors du débranchement du cordon. Manneggiare il cavo di alimentazione con attenzione. Tenete ferma la spina quando scollegate il cavo dalla presa. Maneje el cordón de energía con cuidado. Sostenga el enchufe cuando desconecte el cordón de energía. Hanteer het netsnoer voorzichtig. Houd het snoer bij de stekker vast wanneer deze moet worden aan- of losgekoppeld. Hantera nätkabeln varsamt. Håll i kabeln när den kopplas från el-uttaget. 	 <ul style="list-style-type: none"> Unplug the power cord when not using the unit for long periods of time. Wenn das Gerät längere Zeit nicht verwendet werden soll, trennen Sie das Netzkabel vom Netzstecker. Débrancher le cordon d'alimentation lorsque l'appareil n'est pas utilisé pendant de longues périodes. Scollegate il cavo di alimentazione quando prevedete di non utilizzare l'unità per un lungo periodo di tempo. Desconecte el cordón de energía cuando no utilice el equipo por mucho tiempo. Neem altijd het netsnoer uit het stopcontact wanneer het apparaat gedurende een lange periode niet wordt gebruikt. Koppla loss nätkabeln om apparaten inte kommer att användas i lång tid. 	 <ul style="list-style-type: none"> Do not let insecticides, benzene, and thinner come in contact with the unit. Lassen Sie das Gerät nicht mit Insektiziden, Benzin oder Verdünnungsmitteln in Berührung kommen. Ne pas mettre en contact des insecticides, du benzène et un diluant avec l'appareil. Assicuratevi che l'unità non entri in contatto con insetticidi, benzolo o solventi. No permita el contacto de insecticidas, gasolina y diluyentes con el equipo. Voorkom dat insecticiden, benzeen of verfverdunder met dit toestel in contact komen. Se till att insektsmedel på spraybruk, bensen och thinner kommer i kontakt med apparatens hölje. 	<p>ATTENTION:</p> <ul style="list-style-type: none"> La ventilation ne doit pas être gênée en recouvrant les ouvertures de la ventilation avec des objets tels que journaux, rideaux, tissus, etc. Aucune flamme nue, par exemple une bougie, ne doit être placée sur l'appareil. Veillez à respecter les lois en vigueur lorsque vous jetez les piles usagées. L'appareil ne doit pas être exposé à l'eau ou à l'humidité. Ne pas poser d'objet contenant du liquide, par exemple un vase, sur l'appareil. <p>ATTENZIONE:</p> <ul style="list-style-type: none"> Le aperture di ventilazione non devono essere ostruite coprendole con oggetti, quali giornali, tovaglie, tende e così via. Non posizionate sull'unità fiamme libere, come ad esempio candele accese. Prestate attenzione agli aspetti legati alla tutela dell'ambiente nello smaltimento delle batterie. L'apparecchiatura non deve essere esposta a gocciolii o spruzzi. Non posizionate sull'unità alcun oggetto contenente liquidi, come ad esempio i vasi. <p>PRECAUCIÓN:</p> <ul style="list-style-type: none"> La ventilación no debe quedar obstruida por haberse cubierto las aperturas con objetos como periódicos, manteles, cortinas, etc. No debe colocarse sobre el aparato ninguna fuente inflamable sin protección, como velas encendidas. A la hora de deshacerse de las pilas, respete la normativa para el cuidado del medio ambiente. No exponer el aparato al goteo o salpicaduras cuando se utilice. No colocar sobre el aparato objetos llenos de líquido, como jarras.
 <ul style="list-style-type: none"> Do not obstruct the ventilation holes. Decken Sie den Lüftungsbereich nicht ab. Ne pas obstruer les trous d'aération. Non coprite i fori di ventilazione. No obstruya los orificios de ventilación. De ventilatieopeningen mogen niet worden geblokkeerd. Täpp inte till ventilationsöppningarna. 	<p>* (For apparatuses with ventilation holes)</p>  <ul style="list-style-type: none"> Do not obstruct the ventilation holes. Decken Sie den Lüftungsbereich nicht ab. Ne pas obstruer les trous d'aération. Non coprite i fori di ventilazione. No obstruya los orificios de ventilación. De ventilatieopeningen mogen niet worden geblokkeerd. Täpp inte till ventilationsöppningarna. 	 <ul style="list-style-type: none"> Never disassemble or modify the unit in any way. Versuchen Sie niemals das Gerät auseinander zu nehmen oder zu verändern. Ne jamais démonter ou modifier l'appareil d'une manière ou d'une autre. Non smontate né modificate l'unità in alcun modo. Nunca desarme o modifique el equipo de ninguna manera. Dit toestel mag niet gedemonteerd of aangepast worden. Ta inte isär apparaten och försök inte bygga om den. 	<p>WAARSCHUWING:</p> <ul style="list-style-type: none"> De ventilatie mag niet worden belemmerd door de ventilatieopeningen af te dekken met bijvoorbeeld kranten, een tafelkleed, gordijnen, enz. Plaats geen open vlammen, bijvoorbeeld een brandende kaars, op het apparaat. Houd u steeds aan de milieuoorschriften wanneer u gebruikte batterijen wegdoet. Stel het apparaat niet bloot aan druppels of spatten. Plaats geen voorwerpen gevuld met water, bijvoorbeeld een vaas, op het apparaat. <p>OBSERVERA:</p> <ul style="list-style-type: none"> Ventilationen bör inte förhindras genom att täcka för ventilationsöppningarna med föremål såsom tidningar, bordsdukar, gardiner osv. Inga blottade brandkällor, såsom tända ljus, får placeras på apparaten. Tänk på miljöaspekterna när du bortskaffar batterier. Apparaten får inte utsättas för vätska. Placera inte föremål fyllda med vätska, t.ex. vaser, på apparaten.

Introduction

Introduction

A NOTE ABOUT RECYCLING:

This product's packaging materials are recyclable and can be reused. Please dispose of any materials in accordance with the local recycling regulations.
 When discarding the unit, comply with local rules or regulations.
 Batteries should never be thrown away or incinerated but disposed of in accordance with the local regulations concerning battery disposal.
 This product and the supplied accessories, excluding the batteries, constitute the applicable product according to the WEEE directive.

HINWEIS ZUM RECYCLING:

Das Verpackungsmaterial dieses Produktes ist zum Recyceln geeignet und kann wieder verwendet werden. Bitte entsorgen Sie alle Materialien entsprechend der örtlichen Recycling-Vorschriften.
 Beachten Sie bei der Entsorgung des Gerätes die örtlichen Vorschriften und Bestimmungen.
 Die Batterien dürfen nicht in den Hausmüll geworfen oder verbrannt werden; bitte entsorgen Sie die Batterien gemäß der örtlichen Vorschriften.
 Dieses Produkt und das im Lieferumfang enthaltene Zubehör (mit Ausnahme der Batterien!) entsprechen der WEEE-Direktive.

UNE REMARQUE CONCERNANT LE RECYCLAGE:

Les matériaux d'emballage de ce produit sont recyclables et peuvent être réutilisés. Veuillez disposer des matériaux conformément aux lois sur le recyclage en vigueur.
 Lorsque vous mettez cet appareil au rebut, respectez les lois ou réglementations en vigueur.
 Les piles ne doivent jamais être jetées ou incinérées, mais mises au rebut conformément aux lois en vigueur sur la mise au rebut des piles.
 Ce produit et les accessoires inclus, à l'exception des piles, sont des produits conformes à la directive DEEE.

NOTA RELATIVA AL RICICLAGGIO:

I materiali di imballaggio di questo prodotto sono riutilizzabili e riciclabili. Smaltire i materiali conformemente alle normative locali sul riciclaggio.
 Per lo smaltimento dell'unità, osservare le normative o le leggi locali in vigore.
 Non gettare le batterie, né incenerirle, ma smaltirle conformemente alla normativa locale sui rifiuti chimici.
 Questo prodotto e gli accessori inclusi nell'imballaggio sono applicabili alla direttiva RAEE, ad eccezione delle batterie.

ACERCA DEL RECICLAJE:

Los materiales de embalaje de este producto son reciclables y se pueden volver a utilizar. Disponga de estos materiales siguiendo los reglamentos de reciclaje de su localidad.
 Cuando se deshaga de la unidad, cumpla con las reglas o reglamentos locales.
 Las pilas nunca deberán tirarse ni incinerarse. Deberá disponer de ellas siguiendo los reglamentos de su localidad relacionados con los desperdicios químicos.
 Este producto junto con los accesorios empaquetados es el producto aplicable a la directiva RAEE excepto pilas.

EEN AANTEKENING MET BETREKKINGTOT DE RECYCLING:

Het inpakmateriaal van dit product is recycleerbaar en kan opnieuw gebruikt worden. Er wordt verzocht om zich van elk afvalmateriaal te ontdoen volgens de plaatselijke voorschriften.
 Volg voor het wegdoen van de speler de voorschriften voor de verwijdering van wit- en bruingoed op.
 Batterijen mogen nooit worden weggegooid of verbrand, maar moeten volgens de plaatselijke voorschriften betreffende chemisch afval worden verwijderd.
 Op dit product en de meegeleverde accessoires, m.u.v. de batterijen is de richtlijn voor afgedankte elektrische en elektronische apparaten (WEEE) van toepassing.

OBSERVERA ANGÅENDE ÅTERVINNING:

Produktens emballage är återvinningsbart och kan återanvändas. Kassera det enligt lokala återvinningsbestämmelser.
 När du kasserar enheten ska du göra det i överensstämmelse med lokala regler och bestämmelser.
 Batterier får absolut inte kastas i soporna eller brännas. Kassera dem enligt lokala bestämmelser för kemiskt avfall.
 Denna apparat och de tillbehör som levereras med den uppfyller gällande WEEE-direktiv, med undantag av batterierna.



Pb

Contents

Introduction

Features 1

Important 2

Power Supply 2

Warning 2

Installation Location 2

Cautions on Installation 2

Cautions on Handling 3

Dew Warning 3

Avoid the Hazards of Electrical Shock and Fire 3

Before Using 3

Supplied Accessories 3

Trademark Information 3

About Discs 4

 Disc Handling 4

 Cleaning Discs 4

 Playable Discs and Files 4

 Unplayable Discs 5

 Colour Systems 5

 Region Codes 5

 Structure of Disc/SD Memory Card Contents 5

 Symbols Used in this Operating Instructions 5

About the Remote Control 6

 Loading the Batteries 6

 Using a Remote Control 6

 Setting this Unit not React to Other DENON's DVD Player's Remote Control 6

 Changing the Signal Code of a Remote Control 6

Part Names and Functions 7

 Front Panel 7

 Rear Panel 7

 Remote Control 8

 Front Panel Display 9

 Adjusting the Brightness of the Display 9

 Examples of Displays during Operation 9

Connections

 Connecting to a Display Device with HDMI Cable 10

 Connecting to a Display Device and an Amplifier/Receiver with HDMI Cable 10

 HDMI Output Mode and Actual Output Signals 10

 Audio Setting 11

 Connecting the AC Cord 11

Playback

Direct Playback 12

Operations Using Disc Menu, Title Menu, and Popup Menu 13

Playing Back a VR mode DVD-RW/-R 13

Pause 13

Resume Playback 14

Fast Forward / Fast Reverse Playback 14

Slow Forward Playback 14

Step by Step Playback 14

Dialog Speed 15

Repeat Playback 15

 A-B Repeat 15

Programme Playback 16

Random Playback 16

Zoom 17

Camera Angle 17

Search 17

On-Screen Display 18

Selecting the Format of Audio and Video 20

 Selecting Audio Streams/Channels 20

 Selecting Subtitle Language 21

 Adjusting the Picture 21

 Virtual Surround 22

 Pure Direct Mode 22

 Setting the BD Audio Mode 22

Playing Back an MP3, Windows Media™ Audio, JPEG and DivX® File 23

 Kodak Picture CD 25

Reading the SD Memory Card 25

Function Setup

 Using the Setup Menu 27

Quick 27

Custom 27

Initialize 33

Others

Troubleshooting 34

Language Code 35

Specifications 36

Features

- **HDMI (High-Definition Multimedia Interface)**
You can enjoy clearer video output when connecting this unit to a display device with an HDMI-compatible port.
- **Dialog Speed**
Playback in slightly faster speed while keeping the sound output.
Dialog speed is available only on discs recorded in the Dolby Digital format.
- **Still/Fast/Slow/Step Playback**
Various playback modes are available including still pictures, fast forward/reverse, slow motion and step frames.
- **Still Mode**
The resolution of pictures while in the still (pause) mode can be adjusted.
- **Random Playback for audio CD, MP3, JPEG, and Windows Media™ Audio**
This unit can shuffle the playback order of tracks/files.
- **Programme Playback for audio CD, MP3, JPEG, and Windows Media™ Audio**
You can programme the playback order of tracks/files in a desired order.
- **BD/DVD Menus in a Desired Language**
You can display BD/DVD menus in a desired language, if available on a BD/DVD.
- **Auto Power Off**
The power turns off automatically if there is no activity at the unit or its remote control for more than 30 minutes (refer to page 33).
- **Subtitles in a Desired Language**
You can select a desired language for subtitles if that language is available on the BD/DVD and DivX®.
- **Selecting a Camera Angle**
You can select a desired camera angle if a disc contains sequences recorded from different angles.
- **Choices for Audio Language and Sound Mode**
You can select a desired audio language and sound mode if different languages and modes are available on a disc.
- **Ratings Control (Parental Lock)**
You can set the control level to limit playback of discs which may not be suitable for children.
- **Automatic Detection of Discs**
This unit automatically detects if a loaded disc is BD, DVD, audio CD, MP3, JPEG, Windows Media™ Audio or DivX®.

Introduction

●On-Screen Display

Information about the current operation can be displayed on a screen, allowing you to confirm the currently active functions (such as programme playback) using the remote control.

●Dimmer

The brightness of the front panel display can be adjusted.

●Screen Saver

The screen saver programme starts if there is no activity at the unit or its remote for more than 5 minutes. The brightness of the display is darkened by 75%. The programme is deactivated when there is any activity.

●Picture Control

Picture control adjusts the picture quality of the specific display.

●Search

Chapter search: Search for a desired chapter.

Title search: Search for a desired title.

Track search: Search for a desired track/file.

Time search: Search for a desired time point or a title or a track/file.

●Repeat

Chapter: Repeated playback of a chapter of the disc.

Title: Repeated playback of a title of the disc.

Track: Repeated playback of a track/file of the disc.

All: Repeated playback of the entire disc.
(not available for BD, DVD-video)

A-B: Repeated playback of a part between two points.

Group: Repeated playback of a folder of the MP3/JPEG/Windows Media™ Audio/DivX® disc being played back is possible.

●Zoom

x1.2, x1.5, x2.0, x4.0 magnified image can be displayed. (not available for BD)

●Marker

Electric reference points designated by user can be called back.

●Resume Playback

User can resume playback from the point at which the playback has been stopped even if the power is turned off.

●Bit Rate Indication

The bit rate (the amount of video data currently being read) can be displayed during the playback of video contents. (not available for BD)

●DRC (Dynamic Range Control)

Use this procedure to set the dynamic range of the output signals when playing back DVD/BD recorded in Dolby Digital/Dolby Digital Plus/Dolby TrueHD.

●Displaying a JPEG picture

Kodak Picture CD can be played back. Still images stored in JPEG format on DVD-RW/-R, CD-RW/-R or SD Memory Card can also be played back.

●Playing Back Windows Media™ Audio File

You can enjoy Windows Media™ Audio files which are recorded on DVD-RW/-R, CD-RW/-R or SD Memory Card.

●Playing Back an MP3 File

You can enjoy MP3 files which are recorded on DVD-RW/-R, CD-RW/-R or SD Memory Card.

●Playing Back DivX® File

You can enjoy DivX® files which are recorded on DVD-RW/-R or CD-RW/-R.

- Official DivX® Certified product

- Plays all versions of DivX® video (including DivX® 6) with standard playback of DivX® media files.

●Playing Back the Contents in SD Memory Card

- You can playback MP3, Windows Media™ Audio, or JPEG stored in an SD Memory Card.

- You can store picture-in-picture commentary, subtitles or other extras for BD-ROM Profile 1.1 files in an SD Memory Card and playback with the BD-ROM.

●BD-J Application

- With some BD that supports Java applications (BD-J), you can enjoy interactive function (e.g., game).

Important

Use only discs marked with logos listed on page 4.

Power Supply

The main power supply is engaged when the main plug is plugged in a 230V \sim , 50Hz AC outlet. To operate the unit, press <ON/STANDBY> to turn on the unit.

Warning

To avoid fire or electric shock, do not expose this unit to rain or moisture.

WARNING:
LIVE PARTS INSIDE.
DO NOT REMOVE ANY SCREWS.

Introduction

Installation Location

For safety and optimum performance of this unit:

- Do not stand the unit up vertically. Install the unit in a horizontal and stable position. Do not place anything directly on top of the unit. Do not place the unit directly on top of the TV.
- Shield it from direct sunlight and keep it away from sources of intense heat. Avoid dusty or humid places. Avoid places with insufficient ventilation for proper heat dissipation. Do not block the ventilation holes on the sides of the unit. Avoid locations subject to strong vibration or strong magnetic fields.
- Be sure to remove a disc and unplug the AC cord from the outlet before carrying the unit.

Non-use periods - Turn off the unit when it is not in use. Unplug the unit from the household AC outlet if it is not to be used for a long time. Unplug the unit during lightning storms.

Please read this operating instructions carefully before using the unit, and keep it for future reference.

Cautions on Installation

Noise or disturbance of the picture may be generated if this unit or any other electronic equipment using microprocessors is used near a tuner or TV.


If this happens, take the following steps:

- Install this unit as far as possible from the tuner or TV.
- Set the antenna wires from the tuner or TV away from this unit's AC cord and input/output connection cords.
- Noise or disturbance tends to occur particularly when using indoor antennas or 300 Ω /ohms feeder wires. We recommend using outdoor antennas and 75 Ω /ohms coaxial cables.

Note

- For heat dispersal, do not install this equipment in a confined space such as a book case or similar unit.

Introduction

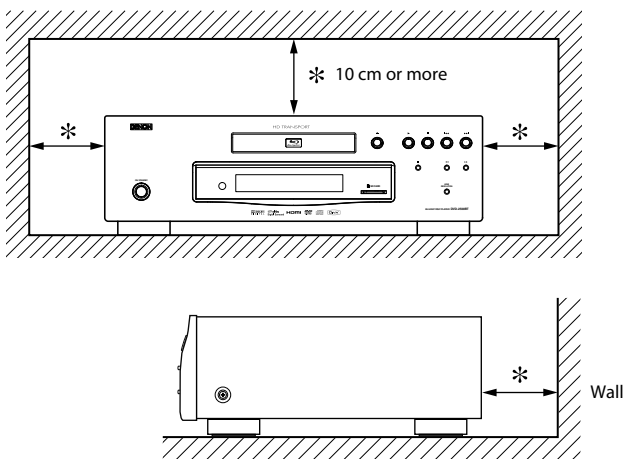

Cautions on Handling

● Before turning the power switch on

Check once again that all connections are correct and that there are no problems with the connection cables.

● Power is supplied to some of the circuitry even when the unit is set to the standby mode. When traveling or leaving home for long periods of time, be sure to unplug the power cord from the power outlet.

● Sufficiently ventilate the place of installation

If the unit is left in a room full of the smoke from cigarettes, etc., for long periods of time, the surface of the optical pickup could get dirty, in which case it will not be able to read the signals properly.

● About condensation

If there is a major difference in temperature between the inside of the unit and the surroundings, condensation (dew) may form on the operating parts inside the unit, causing the unit not to operate properly.

If this happens, let the unit sit for an hour or two with the power turned off and wait until there is little difference in temperature before using the unit.

● Cautions on using mobile phones

Using a mobile phone near this unit may result in noise. If so, move the mobile phone away from this unit when it is in use.

● Moving the unit

Turn off the power and unplug the power cord from the power outlet.

Next, disconnect the connection cables to other system units before moving the unit.

● Note that the illustrations in these instructions may differ from the actual unit for explanation purposes.

Dew Warning

Moisture condensation may occur inside the unit when it is moved from a cold place to a warm place, or after heating a cold room or under conditions of high humidity. Do not use the unit at least for 2 hours until its inside is dry.

Avoid the Hazards of Electrical Shock and Fire

- Do not handle the AC cord with wet hands.
- Do not pull on the AC cord when disconnecting it from AC wall outlet. Grasp it by the plug.
- If, by accident, water is spilled on this unit, unplug the AC cord immediately and take the unit to our authorised service centre for servicing.

Before Using

Pay attention to the following before using this unit:

● Moving the unit.

To prevent short-circuits or damaged wires in the connection cables, always unplug the power supply cord and disconnect the connection cables between all other audio components when moving the unit.

● Store the operating instructions in a safe place.

After reading the operating instructions, store them in a safe place as they could come in handy in the future.

● Whenever <ON/STANDBY> is in the STANDBY state, the unit is still connected to AC line voltage.

Please be sure to unplug the cord when you leave home for, say, a vacation.

● Note that the illustrations in these instructions may differ from the actual unit for explanation purposes.

The serial number of this product may be found on the back of the unit. No others have the same serial number as yours. You should record the number and other vital information here and retain this book as a permanent record of your purchase to aid identification in case of theft.

Date of Purchase	
Dealer Purchase from	
Dealer Address	
Dealer Phone No.	
Model No.	
Serial No.	

 
Introduction

Supplied Accessories


Please check to make sure the following items are included with the main unit in the carton.

remote control (RC-1091)

“R6P” (AA) batteries x2




AC cord

 

operating instructions



 service station list



Trademark Information



HDMI, the HDMI logo and High-Definition Multimedia Interface are trademarks or registered trademarks of HDMI Licensing LLC.



Manufactured under license from Dolby Laboratories. Dolby and the double-D symbol are trademarks of Dolby Laboratories.



Manufactured under license under U.S. Patent #'s: 5,451,942; 5,956,674; 5,974,380; 5,978,762; 6,487,535 & other U.S. and worldwide patents issued & pending. “DTS” and “DTS Digital Surround” are registered trademarks and the DTS logos and Symbol are trademarks of DTS, Inc. © 1996-2007 DTS, Inc. All Rights Reserved.

Introduction



Java and all other trademarks and logos are trademarks or registered trademarks of Sun Microsystems, Inc. in the United States and/or other countries.



DivX, DivX Certified, and associated logos are trademarks of DivX, Inc. and are used under license.



Windows Media and the Windows logo are trademarks or registered trademarks of Microsoft Corporation in the United States and/or other countries.

"Blu-ray Disc" and  are trademarks.

 is a trademark of DVD Format/Logo Licensing Corporation.



is trademark of Eastman Kodak Company.

About Discs

Disc Handling

- Handle the discs so that fingerprints and dust do not adhere to the surfaces of the discs.
- Always store the disc in its protective case when it is not used.
- Note that discs with special shapes cannot be played on this product. Do not attempt to play back such discs, as they may damage the unit.














Cleaning Discs



- When a disc becomes dirty, clean it with a cleaning cloth. Wipe the disc from the centre to out. Do not wipe in a circular motion.
- Do not use solvents such as benzene, thinner, commercially available cleaners, detergent, abrasive cleaning agents or antistatic spray intended for analogue records.

Playable Discs and Files

This unit is compatible to play back the following discs. To play back a BD or DVD, make sure that it meets the requirements for region codes and colour systems as described on page 5.

You can play back discs that have the following logos on the disc. Other disc types are not guaranteed to play back.

Playable discs	Logos
Blu-ray Disc - BD-video - BD-RE(ver.2.1) (Recorded in BDMV format) - BD-R(ver.1.1) (Recorded in BDMV format) (Uncloned discs may not be played back.)	
DVD-video	 
DVD-RW (Finalised discs only)	 
DVD-R DVD-R DL (Finalised discs only)	 
CD-DA (audio CD)	
CD-RW	 
CD-R	 
Kodak Picture CD	
DTS - CD (5.1 Music Disc)	—

Playable files	Logos	Media
MP3	—	DVD-RW/-R CD-RW/-R
Windows Media™ Audio		SD Memory Card (including SDHC) miniSD Card microSD Card
JPEG	—	
DivX®		DVD-RW/-R CD-RW/-R

Introduction


Note

- Discs containing the DivX® files with the DivX® GMC (Global Motion Compensation) playback feature, which is DivX® supplemental function, cannot be played back on this unit.
- This unit cannot play back the disc contents protected by Windows Media™ Digital Rights Management (DRM).
- "WMA" (Windows Media™ Audio) is an audio codec developed by Microsoft® in the United States of America.

Readable cards	Playable files / data
SD Memory Card (8MB - 2GB)	MP3, Windows Media™ Audio, JPEG, Picture-in-picture commentary, subtitles or other extras for BD-ROM Profile 1.1
SDHC Memory Card (4GB)	
miniSD Card (8MB - 2GB)	
microSD Card (8MB - 2GB)	

Note for SD Memory Cards

- Do not remove the SD Memory Card or turn off the unit while the contents of the card is in playback. It may result in malfunction or loss of the card's data.
- Please keep the SD Memory Cards in their cases when you are not using them.
- Do not try to open or modify the card.
- Do not touch the terminal surface with your fingers or any metals.
- Do not attach additional labels or stickers to cards.
- Do not remove the label of the SD Memory Cards.
- This unit supports SD Memory Card with FAT12/FAT16 file system, and SDHC Memory Card with FAT32 file system.
- This unit may not read the SD Memory Cards formatted on computer. If that is the case, please reformat the SD Memory Cards on this unit and try again.
- This unit does not supports mini SDHC and micro SDHC Memory Card.
- For miniSD Card and microSD Card adapter is necessary.

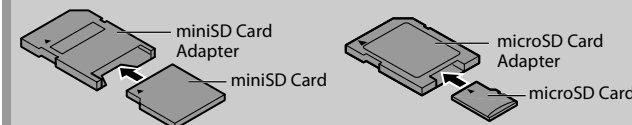

- Portions of this product are protected under copyright law and are provided under license by ARIS/SOLANA/4C.

Introduction

Unplayable Discs

The following discs will not play back on this unit.

- BD-RE Ver.1.0 (BD-disc with cartridge)
- BD-R Ver.1.2 (HTL 4x or LTH 2x)
- BD-RE/-R recorded in BDAV format
- BD contains MP3/ Windows Media™ Audio/ JPEG/ DivX® files
- BD/DVD hybrid disc (e.g., Total Hi Def hybrid disc)
- BD-video that does not include "B" on its region code.
- DVD-video that does not include either "2" nor "ALL" on its region code.
- DVD-ROM/RAM (For DVD-ROM discs, data files in DivX® 3.11, 4.x, 5.x and 6 can be played)
- DVD-RW/-R recorded in non-compatible recording format
- CD-ROM (Data files in DivX® 3.11, 4.x, 5.x and 6 can be played)
- CDV (Only the audio part can be played)
- CD-G (Only the audio signals can be output)
- CompactDisc-Interactive (CD-I)
- Video Single Disc (VSD)
- Video CD, Super Video CD
- Super audio CD (Only the sound on the CD layer can be heard. The sound on the high-density super audio CD layer cannot be heard.)
- DVD-audio
- HD DVD
- Disc with recording area less than 55mm in diameter
- Unauthorised disc (Pirated disc)
- Unfinalised disc

Colour Systems

BD and DVD are recorded in different colour systems throughout the world. The most common colour system, used primarily in the U.K. and other EU countries, is PAL. This unit uses the PAL system. However, it is also possible to play back BD and DVD using other colour systems, such as NTSC.


Region Codes

This unit has been designed to play back BD with region B and DVD-video with region 2. You cannot play back BD or DVD-video that are labelled for other regions. Look for the symbols on the right on your BD or DVD-video. If these region symbols do not appear on your BD or DVD-video, you cannot play back the disc in this unit. The letter or number inside the globe refers to region of the world. A BD or DVD-video labelled for a specific region can only play back on the unit with the same region code.



Structure of Disc/SD Memory Card Contents


The contents of BD / DVD are generally divided into titles. Titles may be further subdivided into chapters.

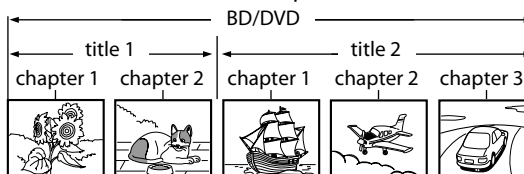

Audio CDs are divided into tracks.



Data discs or SD Memory Cards containing MP3/Windows Media™ Audio/JPEG/DivX® are divided into folders, and the folders are subdivided into files.

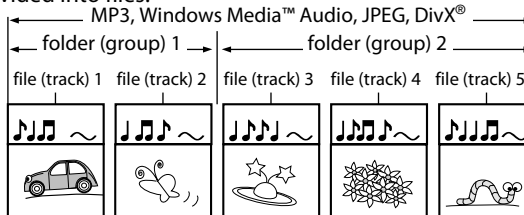

Introduction

Symbols Used in this Operating Instructions

To specify for which media type each function is, we put the following symbols at the beginning of each item to operate.

Symbol	Description
BD-V	Description refers to BD-video and BD-RE (ver. 2.1)/BD-R (ver. 1.1) recorded in BDMV mode
DVD-V	Description refers to DVD-video and DVD-RW/-R recorded in video mode
DVD-VR	Description refers to DVD-RW/-R recorded in VR mode
CD	Description refers to audio CD and DTS-CD
MP3	Description refers to DVD-RW/-R, CD-RW/-R and SD Memory Card with MP3 files
WMA	Description refers to DVD-RW/-R, CD-RW/-R and SD Memory Card with Windows Media™ Audio files
JPEG	Description refers to DVD-RW/-R, CD-RW/-R and SD Memory Card with JPEG files
DivX®	Description refers to DVD-RW/-R and CD-RW/-R with DivX® files

If you do not find any of the symbols listed above under the function heading, the operation is applicable to all media.

About the button names in this explanation

- < > : Buttons on the main unit
- [] : Buttons on the remote control

Button name only:


Buttons on the main unit and remote control

Introduction


About the Remote Control

Loading the Batteries

① Open the battery compartment cover.

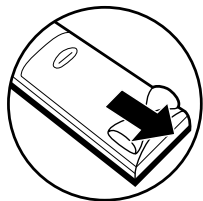

② Insert two "R6P" (AA) batteries, with each one oriented correctly.

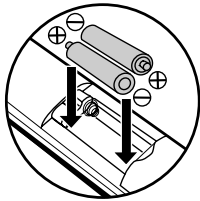

③ Close the cover.


Cautions on Batteries

- Use "R6P" (AA) batteries in this remote control.
- Replace the batteries with new ones approximately once a year, though this depends on the frequency with which the remote control is used.
- If the remote control does not operate within a close proximity of the main unit, replace the batteries with new ones, even if less than a year has passed.
- The included batteries serve only for verifying operation. Replace them with new batteries as soon as possible.
- When inserting the batteries, be careful to do so in the proper direction, following the ⊕ and ⊖ marks in the remote control's battery compartment.
- To prevent damage or battery fluid leakage:
 - Do not mix a new battery with an old one.
 - Do not mix two different types of batteries such as alkaline and manganese.
 - Do not short-circuit, disassemble, heat or dispose of batteries in flames.
- Remove the batteries when not planning to use the remote control for a long period of time.
- If the batteries should leak, carefully wipe off the fluid from the inside of the battery compartment, then insert new batteries.

Using a Remote Control

Keep in mind the following when using the remote control:

- Make sure that there are no obstacles between the remote control and infrared sensor window on the unit.
- Remote operation may become unreliable if strong sunlight or fluorescent light is shining on infrared sensor window of the unit.
- Remote control for different devices can interfere with each other. Avoid using remote control for other equipment located close to the unit.
- Replace the batteries when you notice a fall off in the operating range of the remote control.
- The maximum operable ranges from the unit are as follows.
 - **Line of sight:** approx. 7m
 - **Either side of the centre:** approx. 7m within 30°

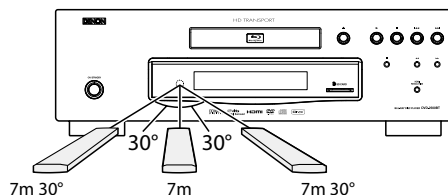

Setting this Unit not React to Other DENON's DVD Player's Remote Control

If you have other DENON's DVD players around this unit, this unit reacts to the commands you made for DVD players through its remote control. To avoid this situation, you can set this unit not react to other DENON's DVD player's remote control.

- 1) In stop mode, press [SETUP].
 - 2) Press [7],[8],[9],[2].
 - 3) Press [SETUP].
 - "Only Attached Remocon" will be displayed on the upper right corner of the screen and this unit only react to the commands from this unit's remote control.
- To set back to default, press [7],[8],[9],[1] at step 2. "Normal Remocon" will be displayed on the upper right corner of the screen and this unit react to both the commands from this unit's remote control and the other DENON's DVD players' remote control.

Note

- The setting remains after you turn off this unit or unplug the AC cord.
- If you try to operate this unit with the other DENON's DVD players' remote control, some of the operation may not be available depending on the manufactured year or type of the remote control.


Introduction

Changing the Signal Code of a Remote Control

To avoid the other DENON's BD players responding the remote signal of this unit, you can change the signal code of the remote control. If the signal code of the remote control does not match to the signal code of the unit, you cannot control the unit with the remote control.

Change the signal code of the unit

- 1) In stop mode, press [SETUP].
- 2) Use [◀/▶] to select **CUS TOM**, then press [ENTER].
- 3) Use [◀/▶] to select **Other**, then press [ENTER].
- 4) Use [△/▽] to select "Remote Control Setting".
- 5) Press [ENTER] to select "DENON1" or "DENON2".

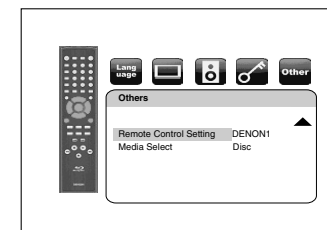

6) Press [SETUP] to exit.

- At this point the new signal code of the unit is effective. Please change the signal code of the remote control to match to the signal code of the unit with following procedure.

Change the signal code of the remote control

Set to "DENON1":

Press and hold [RETURN], and press [3], [2], [1].


Set to "DENON2":

Press and hold [RETURN], and press [1], [2], [3].


- If the signal code does not match, the signal code of the remote control will be displayed on the front panel display.
- The default setting and the setting after you change the batteries is "DENON1".

Part Names and Functions

Front Panel

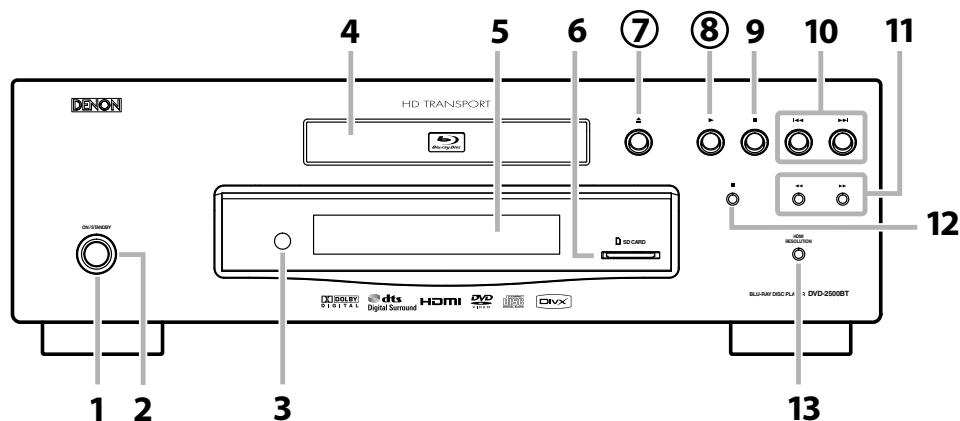

Rear Panel

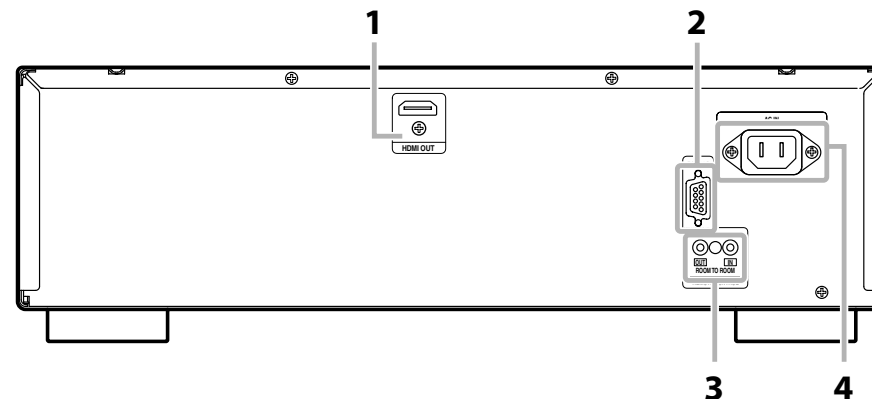

The unit can also be turned on by pressing the buttons with circled numbers.


- 1. ON/STANDBY button**
Press to turn the unit on or off.
- 2. Power indicator**
This indicator lights up in green when the power is on, and lights up in red in standby mode.
- 3. Infrared sensor window**
Receive signals from your remote control so that you can control the unit from a distance.
- 4. Disc tray**
Place a disc when opening the disc tray.
- 5. Display**
Refer to "Front Panel Display" on page 9.
- 6. SD CARD slot**
Insert an SD Memory Card, and play back the contents in it.
- 7. ▲ (OPEN/CLOSE) button**
Press to open or close the disc tray.
- 8. ► (PLAY) button**
Press to start or resume playback.
- 9. ■ (STOP) button**
Press to stop playback.
- 10. ◀◀ / ▶▶ (SKIP DOWN/UP) button**
Press to skip down/up titles/chapters/tracks/file.
- 11. ◀◀ / ▶▶ (FAST FORWARD/REVERSE) button**
During playback, press to fast forward / fast reverse the playback. When playback is in pause, press to slow forward the playback.
- 12. || (STILL/PAUSE) button**
Press to pause playback.
- 13. HDMI RESOLUTION button**
Press to set the HDMI jack's video signal output mode.

- 1. HDMI OUT jack**
Use an HDMI cable to connect to a display with an HDMI jack.
- 2. CONTROL CONNECTOR (RS-232C)**
Control terminal for system extension.
- 3. ROOM TO ROOM OUT / IN jacks**
Connecting the DENON Satellite Remote Control to these jacks enables you to operate more than one DENON components with one remote control.
- 4. AC IN Terminal**
Use the AC cord to connect to the AC outlet.

Note

- Do not touch the inner pins of the jacks on the rear panel. Electrostatic discharge may cause permanent damage to the unit.

Remote Control

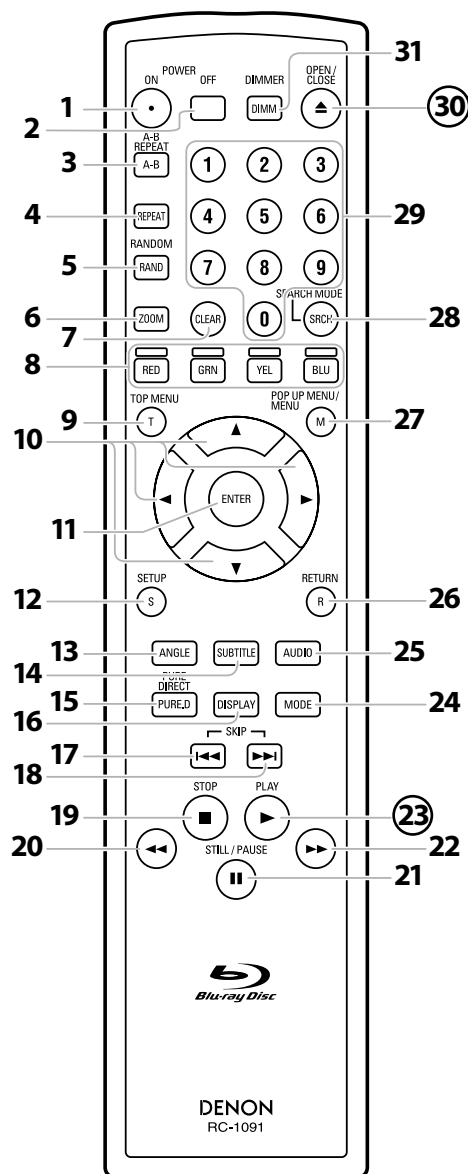

The unit can also be turned on by pressing the buttons with circled numbers.

- 1. POWER ON button**
 - Press to turn the unit on.
- 2. POWER OFF button**
 - Press to turn the unit off.
- 3. A-B REPEAT button**
 - Press to mark a segment between A and B for A-B repeat playback.
- 4. REPEAT button**
 - Press to select the repeat mode.
- 5. RANDOM button**
 - Press to display the random playback screen for shuffling the playback order of tracks/files.
- 6. ZOOM button**
 - During playback, press to enlarge the picture on the screen.
- 7. CLEAR button**
 - Press to clear the information once entered, to clear the marker settings, or to cancel the programming for CD, etc.
- 8. RED/GRN/YEL/BLU button**
 - Press to select item on some BD menus.
- 9. TOP MENU button**
 - Press to display the top menu.
- 10. Cursor Δ / ∇ / \triangleleft / \triangleright buttons**
 - Press to select items or settings.
- 11. ENTER button**
 - Press to confirm or select menu items.
- 12. SETUP button**
 - Press to display the setup menu.
- 13. ANGLE button**
 - Press to access various camera angles on the disc.
 - Press to rotate the JPEG/Kodak Picture images clockwise by 90 degrees.
- 14. SUBTITLE button**
 - Press to display the subtitle menu.
- 15. PURE DIRECT button**
 - Press to stop output of front panel display.
- 16. DISPLAY button**
 - Press to display the On-Screen display menu.
- 17. SKIP $\triangleleft\triangleleft$ button**
 - During playback, press to return to the beginning of the current title, chapter, track or file.
- 18. SKIP $\triangleright\triangleright$ button**
 - During playback, press to skip the next chapter, track or file.
- 19. STOP \blacksquare button**
 - Press to stop playback.
 - Press to exit from the title menu.

20. REW $\triangleleft\triangleleft$ button

- During playback, press to fast reverse the playback.

21. STILL/PAUSE \parallel button

- Press to pause playback.
- When playback is in pause, press repeatedly to forward the playback step by step.

22. FFW $\triangleright\triangleright$ button

- During playback, press to fast forward the playback.
- When playback is in pause, press to slow forward the playback.

23. PLAY \triangleright button

- Press to start playback or resume playback.

24. MODE button

- During playback, press to display the picture adjustment menu, and rapid playback.
- During the JPEG playback, press to display menus for changing the visual effect for switching the image or changing the size of the image.
- In stop mode with BD inserted, press to display a menu for setting the BD audio mode.
- In stop mode with BD or DVD inserted, press to display a menu for setting the virtual surround.
- In stop mode with audio CD, or disc with MP3, Windows Media™ Audio, JPEG files inserted, press to display menus for programme and random playback.

25. AUDIO button

- Press to display the audio menu.

26. RETURN button

- Press to return to the previously displayed menu screen.

27. POP UP MENU / MENU button

- Press to display the pop-up menu/disc menu/file list.
- Press to change "Original" and "Playlist" on the TV screen.

28. SEARCH MODE button

- Press to display the search menu.

29. Number buttons

- Press to enter the title/chapter/track/file numbers.

30. OPEN/CLOSE \blacktriangle button

- Press to open or close the disc tray.


31. DIMMER button

- Press to adjust the brightness of the front panel display.

Note

- [ZOOM] and [RANDOM] are not available for BD.

Front Panel Display

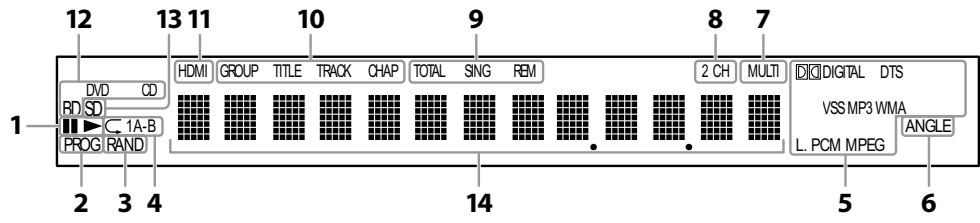

- 1. **▶** : Appears when playing back a disc.
- ||** : Appears when playback is paused.
- 2. Appears during programme playback.
- 3. Appears during random playback.
- 4. Appears during repeat playback.
- 5. These indicate the format being decoded.
 - This is not a indication of the recorded format or the format that will be output.
- 6. Appears when playing back a multi angle disc.
- 7. Appears when playing back a multi-channel audio disc.
- 8. Appears when playing back a 2-channel audio disc.
- 9. Indicates the time display mode.
 - TOTAL : Appears when displaying the total remain/elapsed time of audio CD.
 - SING : Appears when sound data is being played or sound data is highlighted in programme menu.
 - REM : Appears when displaying remaining time.
- 10. These indicate the type of the different sections of the currently playing disc.
- 11. Appears when HDMI video or audio signals are being output.
 - Does not appear when HDMI connection is not verified.
- 12. Indicates the type of the currently playing disc.
- 13. Appears when inserting an SD Memory Card.
- 14. Appears various type of information on the disc, the elapsed playing time, etc.

Adjusting the Brightness of the Display

You can adjust the brightness of the display by pressing **[DIMMER]** repeatedly. The brightness changes as bright → dimmer → auto each time you press **[DIMMER]**. If you select auto, the display gets dimmer during playback.

Note

- **[DIMMER]** is not available when the setup menu is displayed.

Examples of Displays during Operation

Display	Description
POWER-ON	Power on
POWER-OFF	Standby mode
OPEN	Tray open
CLOSE	Tray is closing
LOADING	Loading the disc
NO DISC	No disc inserted
NO SD MEMORY	No SD Memory Card inserted
-----	This unit cannot read the disc or SD Memory Card inserted.
STOP	Stop mode.
480.i	HDMI output mode (480i) is selected.
576.i	HDMI output mode (576i) is selected.
480.P	HDMI output mode (480p) is selected.
576.P	HDMI output mode (576p) is selected.
720.P	HDMI output mode(720p) is selected.
1080.i	HDMI output mode(1080i) is selected.
1080.P	HDMI output mode(1080p) is selected.
1080.P24	HDMI output mode(1080p24 frame) is selected.
Normal	Pure direct mode is set to pure direct off.
Display Off	Pure direct mode is set to front panel display off.
P00 01	The total number of the track that has been registered for the programme playback and track number currently selected.
P00 F001-0002	The total number of the files that has been registered for the programme playback and folder/file number currently selected.
P00 ROOT-0002	When the root folder is selected "ROOT" is displayed.
ALL CLEAR	"All Clear" for programme playback setting is selected.

Note


- When playing back the disc that contains more than 100 titles, display of the chapter and time on the front panel display will be moved a few dots to the right.

Connections

Connecting to a Display Device with HDMI Cable

Connecting this unit to device with an HDMI jack using an HDMI cable enables digital transfer of both digital video signals and multi-channel audio signals.

After making the connection, please make HDMI settings on setup menu according to your display device. Refer to pages 28-30.

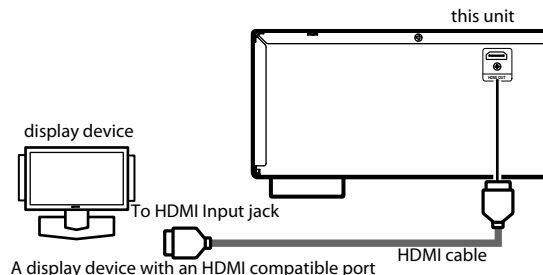


Cables not included.

Please purchase the necessary cables at your local store.

Connecting to a Display Device and an Amplifier/Receiver with HDMI Cable

Connecting this unit to display device and an amplifier/receiver with an HDMI jack using HDMI cables enables digital surround sound with high quality video.

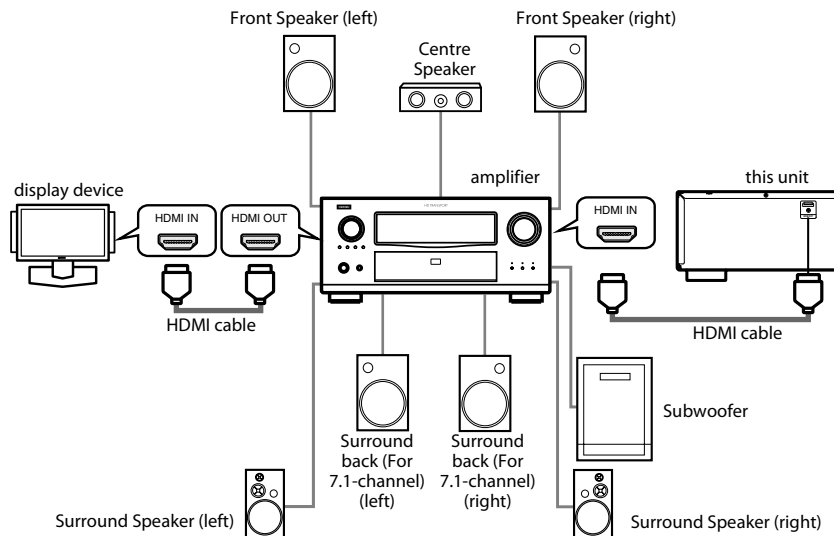

Cables not included.

Please purchase the necessary cables at your local store.

HDMI Output Mode and Actual Output Signals

Press <HDMI RESOLUTION> to select the HDMI output mode. HDMI video resolution changes as following.

Front Panel Display	HDMI Video Resolution
480.i ^{*1} 576.i	480 Interlaced 576 Interlaced
Press <HDMI RESOLUTION> ↓	
480.P ^{*1} 576.P	480 Progressive 576 Progressive
Press <HDMI RESOLUTION> ↓	
720.P	720 Progressive
Press <HDMI RESOLUTION> ↓	
1080.i	1080 Interlaced
Press <HDMI RESOLUTION> ↓	
1080.P	1080 Progressive
Press <HDMI RESOLUTION> ↓	
1080.P24	1080 Progressive 24 frame
Press <HDMI RESOLUTION>	

*1 "480i" or "480p" will be displayed only when an NTSC disc or a 1080p/24 frame material is being played back.

Note

- After you select a HDMI output mode, the supported HDMI video resolution will be output. If the connected display device does not support the selected HDMI video resolution, the unit will output the next available resolution.
- During BD playback, <HDMI RESOLUTION> is not available.
- Video and audio signals may be distorted temporarily when switching to/from the HDMI output mode.
- You can also change the HDMI output mode from "HDMI Video Resolution" in the "Video" menu on the setup menu. Refer to page 29.
- In order to get natural and high quality film reproduction of 24-frame film material, select "1080p24". (The connected device must also be compatible with the 1080p24 frame input.)
- It is recommended to use High Speed HDMI Cable (also known as HDMI category 2 cable) for better compatibility.
- If the disc contains 1080p24 frame material, 60-frame image will be output unless "1080p24" is selected.

Connections

Audio Setting

When using HDMI connections make the "HDMI Audio Out" settings in the "Audio" menu on the setup menu according to the specifications of the device or monitor to be connected.

Device to be connected	"HDMI Audio Out" setting	Output HDMI audio signal
Device compatible with DTS, DTS-HD, Dolby Digital, Dolby Digital Plus or Dolby TrueHD decoding	HDMI Multi(Normal)	Dolby Digital, Dolby Digital Plus, Dolby TrueHD, DTS, or DTS-HD bitstream are output from HDMI OUT. Make the speaker settings on the connected AV amplifier, etc.
Device compatible with 3 or more channels of audio inputs (not DTS, DTS-HD, Dolby Digital, Dolby Digital Plus or Dolby TrueHD compatible)	HDMI Multi(LPCM)	Multi-channel audio signals are output from the HDMI terminal. Make the speaker settings with the speaker setting items appear after you select "HDMI Multi(LPCM)". Refer to page 30.
Device compatible with 2-channel audio input or device not compatible with audio input	HDMI 2ch	Down-mixed 2-channel audio signals are output from HDMI OUT.

Audio signals output from HDMI OUT

Disc type	Audio recording format	"HDMI Audio Out" setting		
		HDMI Multi(Normal)	HDMI Multi(LPCM)	HDMI 2ch
BD-video	Dolby Digital	Dolby Digital*1	Multi LPCM	2ch Downmix LPCM
	Dolby Digital Plus	Dolby Digital Plus*1	Multi LPCM*2	2ch Downmix LPCM
	Dolby TrueHD	Dolby TrueHD*1	Multi LPCM*3	2ch Downmix LPCM
	DTS	DTS*1	Multi LPCM	2ch Downmix LPCM
	DTS-HD	DTS-HD*1	Multi LPCM*4	2ch Downmix LPCM
	LPCM	Multi LPCM	Multi LPCM	2ch Downmix LPCM
DVD-video	Dolby Digital	Dolby Digital	Multi LPCM	2ch Downmix LPCM
	DTS	DTS	Multi LPCM	2ch Downmix LPCM
	LPCM	Multi LPCM	Multi LPCM	2ch Downmix LPCM
	MPEG	MPEG	Multi LPCM	2ch Downmix LPCM
DivX®	Dolby Digital	Dolby Digital	Multi LPCM	2ch Downmix LPCM
	MP3/MP2	2ch LPCM	2ch LPCM	2ch LPCM
audio CD/ MP3/Windows Media™ Audio		2ch LPCM	2ch LPCM	2ch LPCM
DTS-CD		DTS	Multi LPCM	2ch Downmix LPCM

*1 If "BD Audio Mode" is set to "Mix Audio Output" audio will be output as multi LPCM. Refer to page 22.

*2 Outputs audio signals decoded from independent substream.

*3 Outputs audio signals decoded from Dolby Digital stream.

Connections

*4 Outputs audio signals decoded from DTS core stream.

- If the connected device is not compatible with the HDMI BITSTREAM, audio will be output as Multi LPCM or 2ch Downmix LPCM depending on the capability of the connected device, even if you select "HDMI Multi(Normal)" in "HDMI Audio Out" setting. Refer to page 30.

Copyright protection system

To play back the digital video images of a BD/DVD via an HDMI connection, it is necessary that both the unit and the display device (or an AV amplifier) support a copyright protection system called HDCP (high-bandwidth digital content protection system). HDCP is copy protection technology that comprises data encryption and authentication of the connected AV device. This unit supports HDCP. Please read the operating instructions of your display device (or AV amplifier) for more information.


* HDMI: High-Definition Multimedia Interface

Note

- When using HDCP-incompatible display device, the image will not be viewed properly.
- Among the devices that support HDMI, some devices can control other devices via the HDMI jack, this unit cannot be controlled by another device via the HDMI jack.
- The audio signals from the HDMI jack (including the sampling frequency, the number of channels and bit length) maybe limited by the device that is connected.
- Among the monitors that support HDMI, some do not support audio output (e.g, projectors). In connections with device such as this unit, audio signals are not output from the HDMI output jack.

Connecting the AC Cord

After you made all necessary connections, connect the AC cord to the AC IN. Then connect the AC cord to the AC outlet.

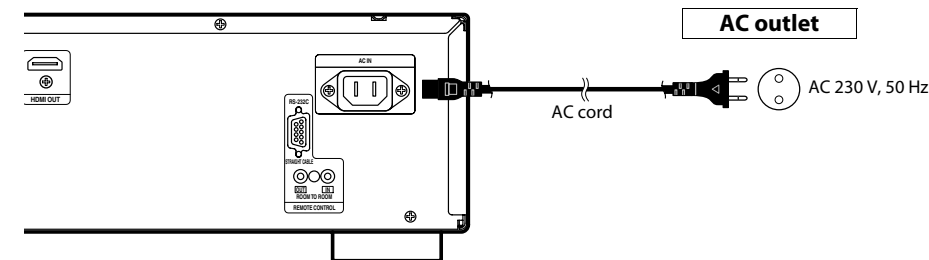


Supplied cables used in this connection are as follows:

- AC cord x 1


Note

- Insert the plugs securely. Incomplete connections will result in the generation of noise.

Playback

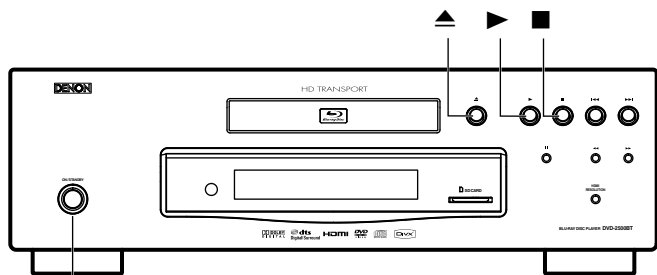


<ON/STANDBY>

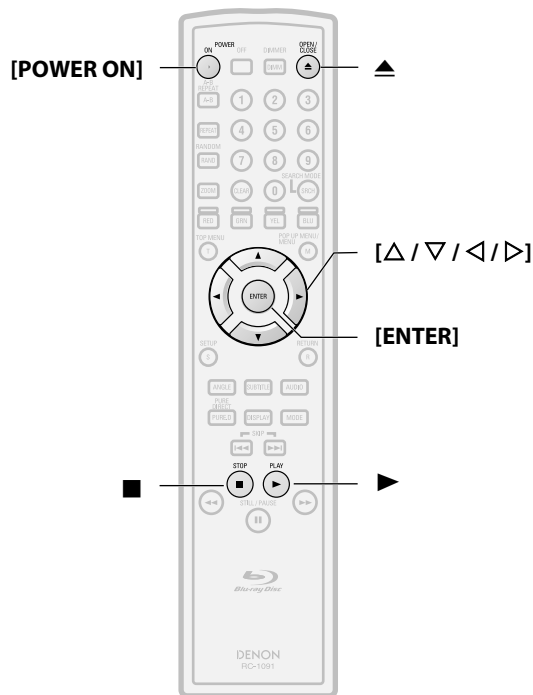

Direct Playback

BD-V DVD-V DVD-VR CD

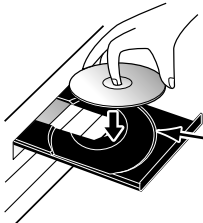- 1 Press <ON/STANDBY> or [POWER ON].
- 2 Turn on the display device and select the HDMI input on the device.
- 3 Press ▲ to open the disc tray.
- 4 Place the disc on the disc tray with its label side facing up.
 

Align the disc to the disc tray guide.

- 5 Press ▲ to close the disc tray.

It may take a while to load the disc.

Some discs may start playback automatically.

- 6 Press ► to start playback.

For many of BD-video and DVD-video, a menu screen may appear. In this case, use [Δ / ▽ / ◁ / ▷] to select the desired item, then press [ENTER].

- 7 Press ■ once to stop playback temporarily. Refer to "Resume Playback" on page 14.



To eject the disc:
Press ▲ to open the disc tray, then remove the disc before turning off the unit.

Note

- ⏸ may appear at the top-right on the screen when the operation is prohibited by the disc or this unit.
- During the playback of 2-layered disc, pictures may stop for a moment. This happens when the 1st layer switches to the 2nd layer. This is not a malfunction.
- The operation may vary when you play back BD/DVD with disc menu. Refer to the manual accompanying the disc for details.

About the button names in this explanation
 < >: Buttons on the main unit
 [] : Buttons on the remote control
Button name only:
 Buttons on the main unit and remote control

Playback

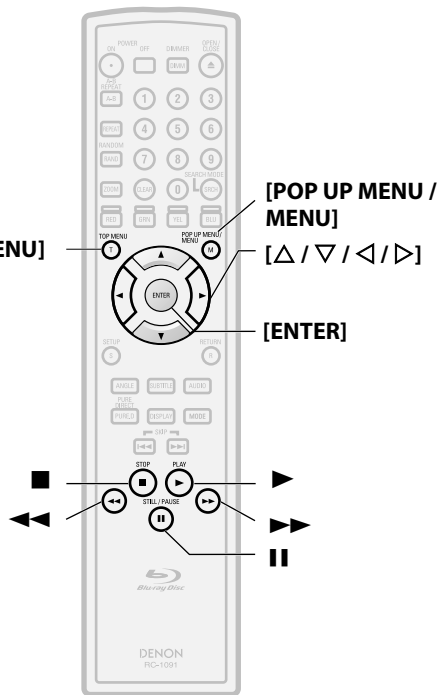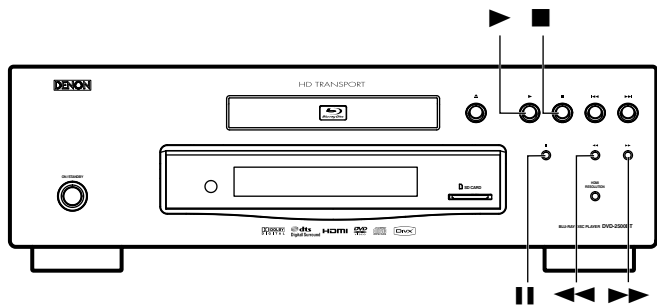

About the button names in this explanation
 < >: Buttons on the main unit
 [] : Buttons on the remote control
Button name only:
 Buttons on the main unit and remote control

Operations Using Disc Menu, Title Menu, and Pop-up Menu

BD-V DVD-V
 Many of BD and DVD disc contains Disc menu (DVD), Title menu (BD/DVD) or Pop-up menu (BD-video) which describes the contents of the disc, or a disc menu, which guides you through the available functions in the disc. The contents of the menus may differ depending on the discs.

Disc menu (DVD)
 1) Press [POP UP MENU / MENU].
 • The disc menu will appear.
 2) Use [Δ / ▽ / ◀ / ▶] to select an item, then press [ENTER].

Title menu (BD/DVD)
 1) Press [TOP MENU].
 2) Use [Δ / ▽ / ◀ / ▶] to select an item, then press [ENTER].

Pop-up menu (BD-video)
 • This is a special feature available for some BD. When you press [POP UP MENU / MENU], a menu pops out on the screen while the contents still play back.
 1) **During BD playback, press [POP UP MENU / MENU].**
 2) Use [Δ / ▽ / ◀ / ▶] to select an item, then press [ENTER].


Note
 • If the feature is not available, Ⓞ may appear on the TV screen.
 • Contents of menus and corresponding menu operations may vary among discs. Refer to the manual accompanying the disc for details.

Playback

Playing Back a VR mode DVD-RW/-R

DVD-VR
 When you are playing back a VR mode DVD-RW/-R, you can choose “Original” or “Playlist” if the disc contains a “Playlist”.

- 1) In stop mode, press [POP UP MENU / MENU] to call up the BD/DVD menu.
- 2) Use [◀ / ▶] to select “Original” or “Playlist”.

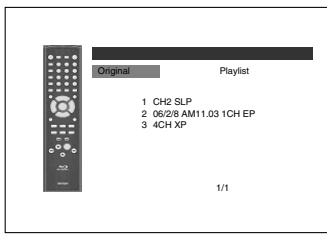


- 3) Use [Δ / ▽] to select desired title, then press [ENTER].

Note
 • “Original” is the title which is actually recorded on the disc.
 • Playlist is edited version of the Original.
 • BD/DVD menu varies depending on discs.
 • If the disc does not contain Playlist, Playlist will not be displayed on the BD/DVD menu.

Pause

- 1) **During playback, press [II].**
 Playback will be paused.

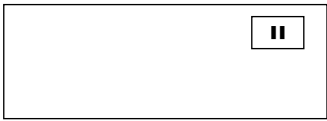

- 2) Press [▶] to return to normal playback.

Note
 • For BD, DVD and DivX®, set “Still Mode” to “Field” in the “Video” menu if pictures in the pause mode are blurred (refer to page 29).


Playback

Playback

Resume Playback

1) During playback, press ■.

- Resume message will appear on the screen.

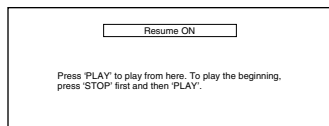

<Example : BD>

2) Press ►.

In a few seconds, playback will resume from the point at which it stopped last. To cancel the resume playback and start playing back the disc from the beginning, press ■ again while the playback is stopped.

Note


- For MP3, JPEG or Windows Media™ Audio, playback will resume from the beginning of the current file.
- The resume information will be saved even when the power is turned off.
- If you unplug the AC cord, open the disc tray or press ■ again in stop mode, the resume information will be cleared.
- Resume playback may not be available for the BD that supports Java applications (BD-J).

Fast Forward / Fast Reverse Playback

BD-V DVD-V DVD-VR CD MP3 WMA

DivX®

1) During playback, press ◀◀ or ▶▶ repeatedly to select a desired forward or reverse speed.

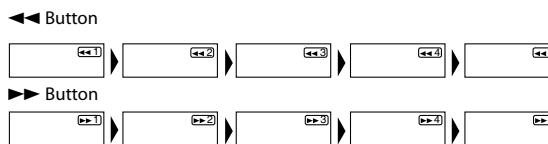

2) Press ► to return to normal playback.

- For BD and DVD, speed changes in 5 different levels. For audio CD, MP3, Windows Media™ Audio, and DivX®, speed changes in 3 different levels.
- For audio CD, MP3 and Windows Media™ Audio, sound will be output at any speed of fast forward and reverse search.

Note

- For MP3 and Windows Media™ Audio, fast forward/fast reverse search between different files are not available.
- For audio CD, fast forward/fast reverse search between different titles are not available during the programme playback.
- For some DivX® files, fast forward/fast reverse search may not function.

Slow Forward Playback

BD-V DVD-V DVD-VR DivX®

1) During playback, press II.

2) Press ►►.

- Slow motion playback will begin and sound will be muted.

3) Press ►► repeatedly to select a desired speed.

- Slow forward speed changes in 3 different levels.



4) Press ► to return to normal playback.

Note

- Set "Still Mode" to "Field" in the "Video" menu if pictures in the slow playback mode are blurred (refer to page 29).
- Slow reverse is not available.

Step by Step Playback

BD-V DVD-V DVD-VR DivX®

1) During playback, press II.



- Playback will pause and sound will be muted. The disc advances frame by frame each time II is pressed.



2) Press ► to return to normal playback.

Note

- Set "Still Mode" to "Field" in the "Video" menu if pictures in the pause mode are blurred (refer to page 29).
- Only step by step forward is available.

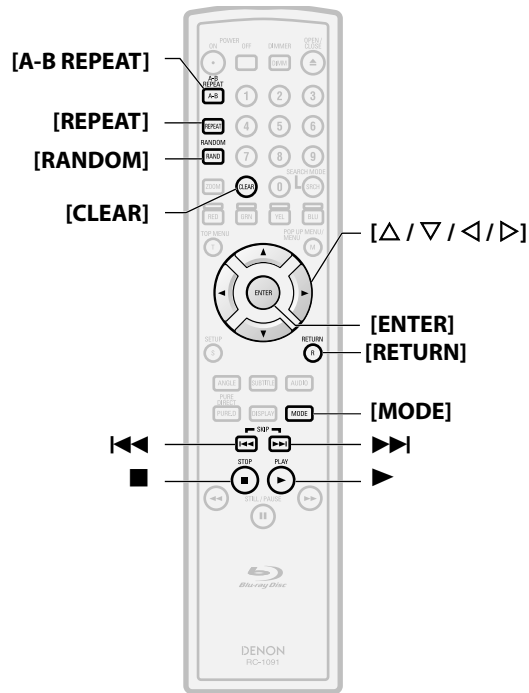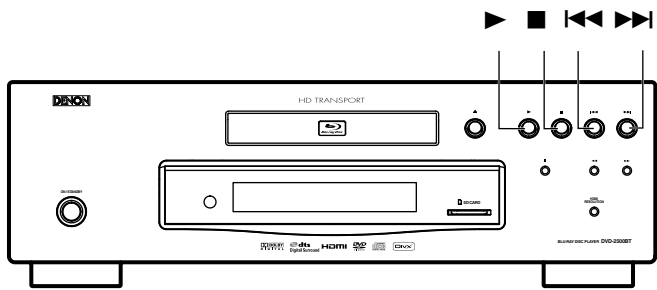

About the button names in this explanation
 < >: Buttons on the main unit
 [] : Buttons on the remote control
Button name only:
 Buttons on the main unit and remote control

Dialog Speed

BD-V DVD-V DVD-VR

This function plays back approximately at 1.3 times of normal playback while keeping the sound output. This function is available only on discs recorded in the Dolby Digital format.

1) During playback, press [MODE] repeatedly until the dialog speed setting appears.



2) Press [ENTER] or [◀/▶] to switch ♪♪ (x1.3), or off.
 "Off" : Plays back in normal speed.

"♪♪" : Plays back approximately at 1.3 times of normal playback.

3) Press ▶ to return to normal playback.

Note

- Every time you press ■, the setting will be turned "Off".
- Subtitle can be viewed during this function.
- Picture control, and audio language setting cannot be changed during this function.
- Virtual surround does not function during this function.
- This function may not work at some points on a disc.
- During this function, 2ch LPCM sound will be output.

Repeat Playback

Available repeat function may vary depending on the discs.

1) During playback, press [REPEAT] repeatedly until desired repeat mode appears on the screen.

The following repeat modes are available.

Repeat mode	Available media
Chapter repeat The current chapter will be played back repeatedly.	BD-V DVD-V DVD-VR
Title repeat The current title will be played back repeatedly.	BD-V DVD-V DVD-VR
Track repeat The current track or file will be played back repeatedly.	CD MP3 WMA JPEG DivX®
Group repeat The current folder will be played back repeatedly.	MP3 WMA JPEG DivX®
All repeat All titles, tracks or files in the media will be played back repeatedly.	DVD-VR CD MP3 WMA JPEG DivX®

A-B Repeat

BD-V DVD-V DVD-VR CD DivX®

Desired section can be played back repeatedly.

- 1) Press [A-B REPEAT] at the desired starting point A.
- 2) Press [A-B REPEAT] at the desired ending point B.
 - The repeat sequence begins.
- 3) Press [A-B REPEAT] to exit the sequence.

Playback

Note

- The chapter/title/track/group repeat setting will be cleared when moving to other chapter, title, track/file or folder.
- Repeat playback does not function during A-B repeat playback.
- Repeat chapter/title is not available with some scenes.
- A-B Repeat can only be set within the current title or current track/file.
- A-B Repeat is not available with some scenes.
- To cancel the A point which was set, press **[CLEAR]**.
- A-B Repeat playback does not function during chapter, title, track, group or all repeat playback.
- For some DivX® files, A-B Repeat playback may not function.

Programme Playback


CD **MP3** **WMA** **JPEG**

You can programme the disc to play back in your desired order.

1) In stop mode, press [MODE].

- The programme screen will appear.

2) Use [Δ / ▽] to select a track/file, then press [ENTER].

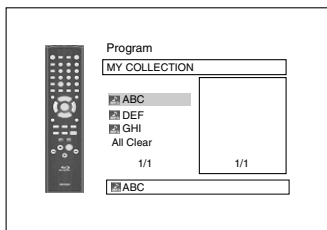

<Example : MP3>

- For MP3, Windows Media™ Audio, and JPEG, use [Δ / ▽] to select a folder, then press **[ENTER]** first, and then use [Δ / ▽] to select a track/file, then press **[ENTER]**.
- Press **[CLEAR]** to erase the last track/file of the programme.
- Select "All Clear" at the bottom of the list to erase all the tracks/files in the programme.
- The programmed track/file is displayed in the right hand screen.
- If the entire programme cannot be displayed on the screen, "▼" or "▲" appears.
- Use [**<** / **>**] to go back forward between the hierarchy of folders.
- If eight or more tracks/files were set in a programme, use the **[<< / >>]** to see all the tracks/files.

3) Press ► to start programme playback.

- Programme playback will start.

Note

- During the programme playback, press **■** once to set the resume point, and then press **►** to resume the programme playback from where **■** was pressed (audio CD) or from beginning of the file where **■** was pressed (MP3, Windows Media™ Audio, or JPEG).
- During the programme playback, press **■** twice to display the programme screen. To go back to the normal programme playback, press **[RETURN]** to exit from the programme screen, then press **►**.
- Your programme is still stored until either the disc tray is open or power is turned off.
- Up to 99 tracks/files can be entered.
- To repeat the current track/file in the programme, press **[REPEAT]** repeatedly until "**↺** Track" appears during playback. To repeat the entire programme press **[REPEAT]** repeatedly until "**↺** All" appears during playback.
- Even if an inserted disc contains mixed MP3, JPEG and Windows Media™ Audio files, programme function allows 99 files in combination of MP3, JPEG and Windows Media™ Audio files.
- The current selected number on the front panel display blinks while setting the programme playback.
- "F***" is displayed in the front panel display while selecting the folder. (*** is folder number.), and file is displayed as "_****" after the folder indication.
- Playback from a desired track/ file and random playback are not available during programme playback.


Playback

Random Playback

CD **MP3** **WMA** **JPEG**

This function shuffles the play back order of tracks/files.

1) In stop mode, press [RANDOM].


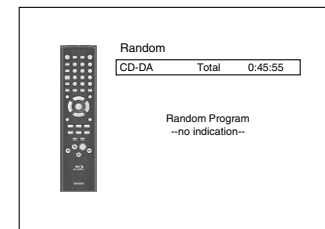


<Example: audio CD>

2) Press ► to start random playback.

Note

- During the random playback, press **■** once to set the resume point, and then press **►** to resume the random playback from where **■** was pressed (audio CD) or from beginning of the file where **■** was pressed (MP3, Windows Media™ Audio, or JPEG).
- During the random playback, press **■** twice to display the random playback screen. To cancel the random playback, press **[RANDOM]** when the random playback screen is displayed.
- To repeat the current track/file in the random selection, press **[REPEAT]** repeatedly until "**↺** Track" appears during playback. To repeat the entire random selection press **[REPEAT]** repeatedly until "**↺** All" appears during playback.
- You cannot go back to the previous track/file during random playback.
- For a disc containing mixed MP3, JPEG and Windows Media™ Audio files, random playback of those files will be performed.
- "RAND" is displayed on the front panel display.

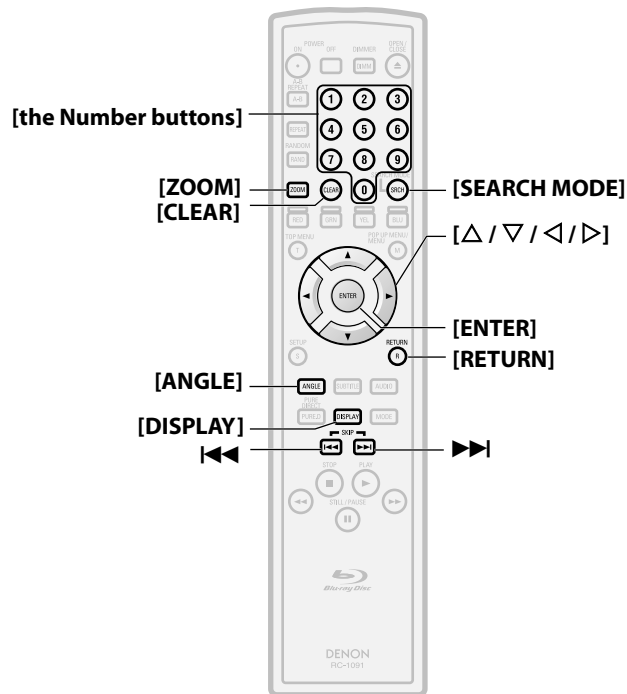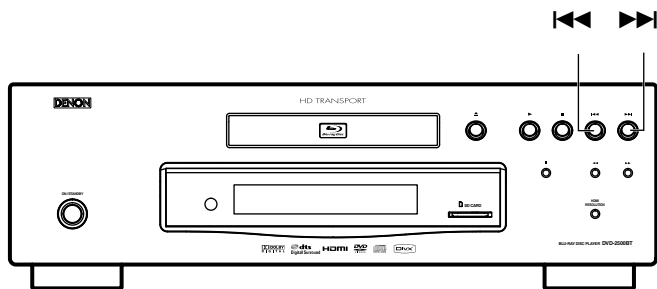

About the button names in this explanation

< >: Buttons on the main unit
 [] : Buttons on the remote control unit


Button name only:
 Buttons on the main unit and remote control unit

Zoom


DVD-V **DVD-VR** **JPEG** **DivX®**

This function allows you to enlarge the video image and to pan through the zoomed image.

- 1) Press **[ZOOM]** during playback.
 - Playback will continue.
- 2) Press **[ZOOM]** repeatedly to select a desired zoom factor: **X1.2, X1.5, X2.0, X4.0** or off.
 - "X4.0" zoom is not available for JPEG and DivX®.

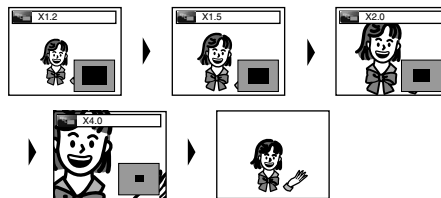

- 3) Use **[Δ / ▽ / ◀ / ▶]** to move the zoomed picture across the screen.

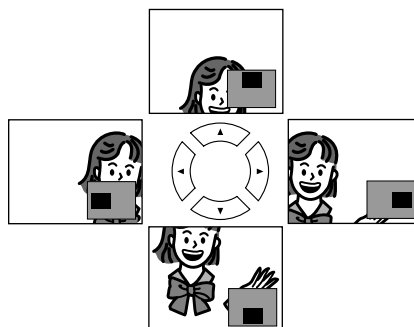


- 4) Press **[ZOOM]** to exit zoom mode.

Note

- For BD, zoom function is not available.
- Zoom function does not work while disc menu is shown.
- Navigation screen is not available on JPEG.
- You cannot pan through the zoomed picture on some JPEG files.
- For some DVD, "X4.0" zoom is not available.
- For DivX® files with small image, zoom function is not available.
- For DivX®, depending on the size of the image, some zoom factor may not be available.


Camera Angle

BD-V **DVD-V**

Some BD and DVD contain scenes which have been shot simultaneously from various angles. You can change the camera angle when  appears on the screen.


 
- 1) Press **[ANGLE]** during playback.
 - The selected angle will be displayed on the display bar at the top of the screen.
- 2) Use **[Δ / ▽]** to select your desired angle.

Note

 
- If the "Angle Icon" setting is "Off" in the "Others" menu,  will not appear. Refer to page 33.

Search

Using  





- 1) Press  to skip to the next chapter, track or file during playback. To go back to the previous chapter, track or file, press  twice in quick successions.

Note

- If title contains no chapters,   changes the title.

Using **[SEARCH MODE]**

1. By using the **[SEARCH MODE]**, you can select following search options.

Search mode	Available media
 Title / Chapter search	BD-V DVD-V DVD-VR
 Track Search	CD MP3 WMA JPEG DivX®
 Time Search	BD-V DVD-V DVD-VR CD DivX®
 Marker Search	BD-V DVD-V DVD-VR CD

Playback**1) Select a type of search by pressing [SEARCH MODE].**

- Every time you press [SEARCH MODE], type of search changes.

2) Enter the desired chapter, track, file, title number or time to search for using [the Number buttons].

- Chapter, title, track or time search will start.

E.g.

 
- For the disc with less than 10 titles, press the title number directly.
- For discs with 10 or more but less than 100 title, to play back a single-digit title, press [0] first, then the title number (e.g. for title 3, press [0], [3]). To play back a double-digit title, press the title number.
- For discs with 100 or more titles, to play back a single or a double-digit title, press [0] first, then the title number (e.g. for title 3, press [0], [0], [3] and for title 26, press [0], [2], [6]). To play back a triple-digit title, press the title number.

Note

- During programme and random playback, search functions are not available except the search using [◀◀/▶▶].
- Time search function is available only in the same track, file or title.
- For some DivX® files, time search may not function.
- For BD, chapter and time search are available only during playback.

■ Marker search

This feature allows you to assign a specific point on a title or track to be called back later.

1) During playback, press [SEARCH MODE] repeatedly until marker setting appears.**2) Use [◀/▶] to select a marker number (1-9).****3) When the disc reaches the point you want to set a marker, press [ENTER].**

- The title or track and elapsed playback time will appear on the screen.

4) Press [SEARCH MODE] or [RETURN] to exit.**5) To return to the marker later, call the marker setting by pressing [SEARCH MODE] repeatedly during playback or in stop mode, and use [◀/▶] to choose a desired marker, then press [ENTER].****Note**

- Opening the disc tray, turning off the power or selecting "AC" at step 2 and pressing [ENTER] will erase all markers.
- To clear a marker, use [◀/▶] to select the marker number to be cleared and press [CLEAR].
- You can mark up to 9 points.
- For BD-video, marker search between different titles is not available.
- For BD, you can return to the maker only during playback.

Playback**On-Screen Display**

You can check information about the current disc by pressing [DISPLAY].

To call the On-Screen Display, press [DISPLAY] during playback. Each time you press [DISPLAY], the information changes. Depending on the media, available information varies.

BD-V

OFF → Title/Chapter information → Title information(elapsed time) → Title information(remaining time) → HDMI information → OFF

DVD-V DVD-VR

OFF → Chapter information (elapsed time) → Chapter information (remaining time) → Title information (elapsed time) → Title information (remaining time) → Bit rate information → HDMI information → OFF

CD

OFF → Track information (elapsed time) → Track information (remaining time) → Disc information* (elapsed time) → Disc information* (remaining time) → HDMI information → OFF
(*not available during the programme/random playback)

MP3 JPEG

OFF → File name information → File information (elapsed time*) → HDMI information → OFF
(*not available for JPEG)

WMA



OFF → File name information → Tag information (title name) → Tag information (artist name) → File information (elapsed time) → HDMI information → OFF

DivX®

OFF → File name information → File information (elapsed time) → File information (remaining time) → HDMI information → OFF

- For audio CD, MP3, Windows Media™ Audio and JPEG, during the programme or random playback, the indication will be displayed after the track/file information.


Playback

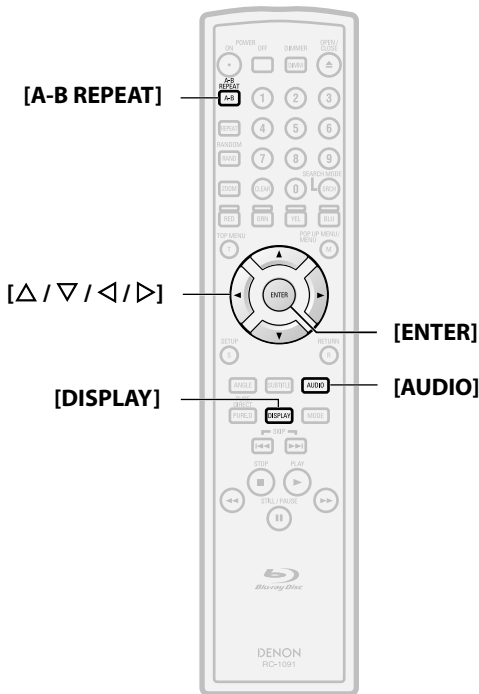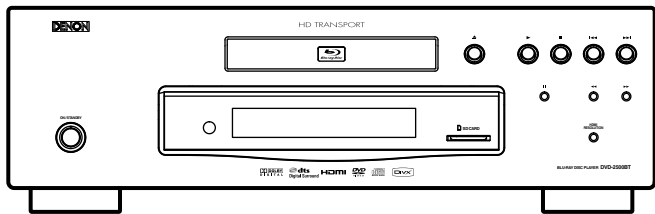


About the button names in this explanation
 < >: Buttons on the main unit
 [] : Buttons on the remote control
Button name only:
 Buttons on the main unit and remote control

Playback

■ Chapter information

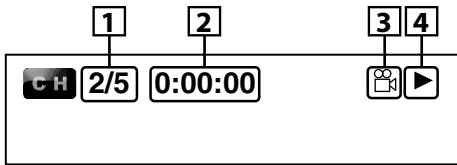


<Title / Chapter information for BD>

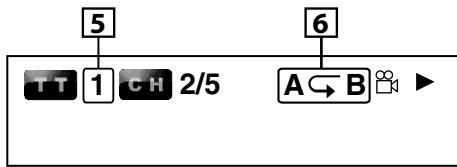


1. Current chapter number/total number of chapters
2. Elapsed time/remaining time of the current chapter
3. Indicates that the multi camera angle images are available on the scene
4. Current playback status
5. Current title number
6. Current repeat setting (Only when repeat setting is active) (C: Chapter repeat, T: Title repeat, AB : A-B repeat)

■ Title information

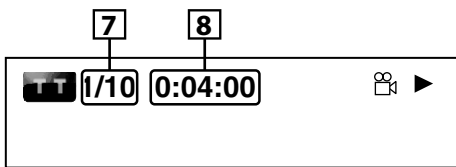


7. Current title number/total number of titles
8. Elapsed time/remaining time of the current title

■ Bit rate information

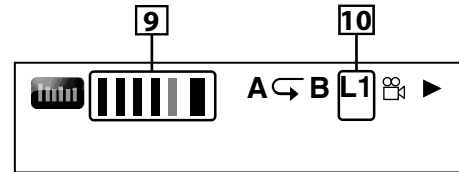


<For VR mode DVD-RW/-R>

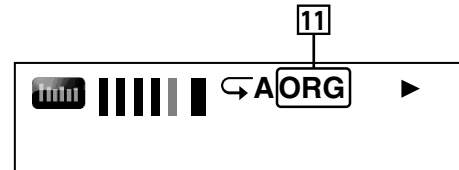


9. Bit rate (the amount of video data currently being read)
10. Layer number (Only for 2-layered discs) (L0: Layer 0 is played back. L1: Layer 1 is played back)
11. Type of title (ORG: original, PL: playlist)

■ Track/File information

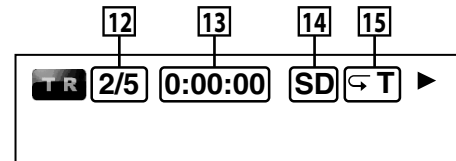

12. Current track (file) number/total number of track (file)
13. Elapsed time/remaining time of the current track (file)
14. Indication of SD Memory Card playback
15. Current repeat setting (Only when repeat setting is active) (T: Track/file repeat, G: Group repeat, A: All repeat)


■ Disc information

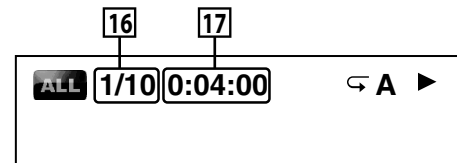

16. Current track number/Total number of tracks
17. Elapsed time/remaining time of the current disc

Playback

■ File name information

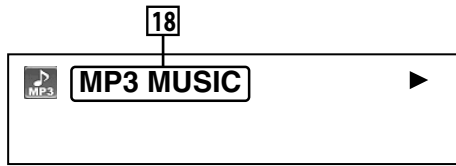

18. Media icon and File name

- : MP3 file : Windows Media™ Audio file
- : JPEG file : DivX® file

■ Tag information




[DISPLAY]



19. Title name based on tag information of current Windows Media™ Audio file

20. Artist name based on tag information of current Windows Media™ Audio file

■ HDMI information

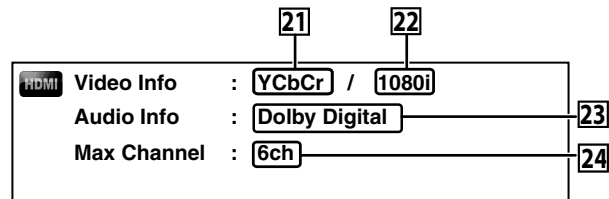

- 21. HDMI video format
- 22. Resolution of the HDMI output image
- 23. HDMI audio format
- 24. Maximum numbers of audio channels that can be accepted by the connected device

Selecting the Format of Audio and Video


Selecting Audio Streams/Channels



Some BD and DVD contain multiple audio streams. Those are often in different audio languages or audio formats. For BD, available audio varies depending on the "BD Audio Mode" setting. Refer to page 22 for more information.

■ BD-V

- 1) During playback, press [AUDIO].
- 2) Use [Δ / ▽] to select "Primary" or "Secondary" audio to set, then press [ENTER].

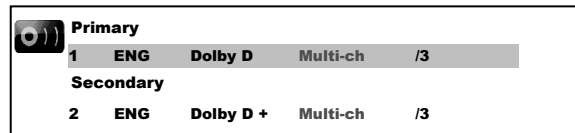

"Primary" : Sets the audio for the main picture.

 
"Secondary" : Sets the audio for the sub-picture.

• In order to listen to the secondary audio, the "BD Audio Mode" must be set to "Mix Audio Output". Refer to page 22.

- 3) Use [Δ / ▽] to select your desire audio stream/channel.
- 4) Press [AUDIO] to exit.

■ DVD-V DVD-VR CD DivX

- 1) During playback, press [AUDIO].
- 2) Use [Δ / ▽] to select your desired audio stream/channel.



• For audio CD, you can select following options.

"Stereo" : Both right and left channels are active (stereo)

"L-ch" : Only left channel is active

"R-ch" : Only right channel is active



- 3) Press [AUDIO] to exit.

Note

- For a VR mode DVD-RW/-R with MTS (Multi-channel Television Sound) system, you can switch between "1.Main" (main audio), "1. Sub" (sub audio), and "1.Main/Sub" (main and sub audio).
- The sound mode cannot be changed during playback of discs not recorded in multiple sound.
- Some discs allow to change audio language setting on the disc menu. (Operation varies between discs. Refer to the manual accompanying the disc.)
- Pressing [AUDIO] may not work on some discs with multiple audio Streams/Channels (e.g. DVD which allow to change audio setting on the disc menu).
- If you choose a language that has a 3-letter-language code, the code will be displayed every time you change the Audio Language setting. If you choose any other Languages, "---" will be displayed instead (refer to page 35).
- Audio Language selection cannot be made during dialog speed (refer to page 15).
- If the disc has no audio language, "Not Available" will be displayed.
- For discs with DivX® files, only MP3, MP2 or Dolby Digital audio is displayed. Other audio will be displayed with "---".
- For DTS-CD(5.1 music disc), selecting audio streams or channels is not available.

Playback

Playback

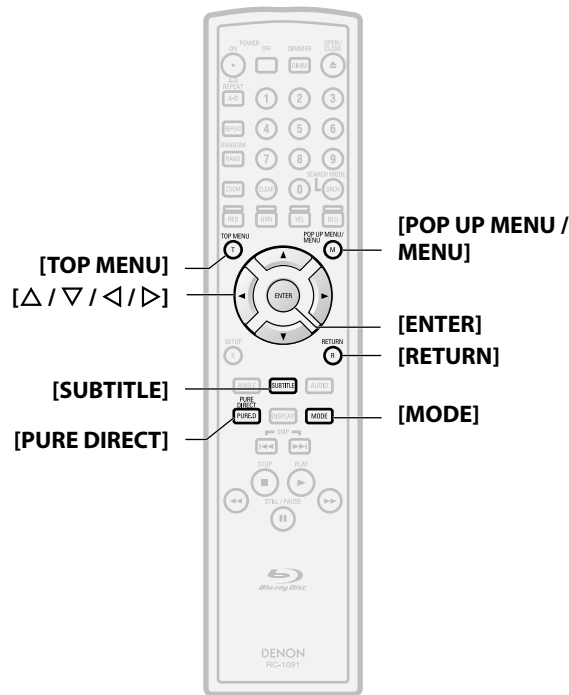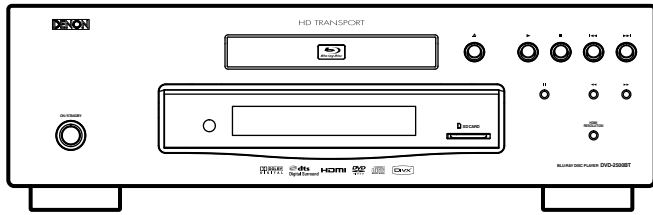

About the button names in this explanation
 < >: Buttons on the main unit
 [] : Buttons on the remote control
Button name only:
 Buttons on the main unit and remote control

Playback

 
Selecting Subtitle Language

BD-V **DVD-V** **DivX®**

BD, DVD-video and DivX® may have subtitles in 1 or more languages. Available subtitle languages can be found on the disc case. You can switch subtitle languages anytime during playback.

BD-V

- 1) During playback, press [SUBTITLE].
- 2) Use [Δ / ▽] to select "Primary Subtitle", "Secondary Subtitle" or "Subtitle Style", then press [ENTER].



- "Primary Subtitle": Sets the subtitle for the main picture.
 - "Secondary Subtitle": Sets the subtitle for the sub-picture.
 - "Subtitle Style": Sets style of the subtitle.
- 3) Use [Δ / ▽] to select your desired subtitle.
 - 4) Press [SUBTITLE] to exit.

DVD-V **DivX®**

- 1) During playback, press [SUBTITLE].
- 2) Use [Δ / ▽] to select your desired subtitle.



- 3) Press [SUBTITLE] to exit.

Note

- Some discs will only allow you to change the subtitle from the disc menu. Press [TOP MENU] or [POP UP MENU / MENU] to display the disc menu.
- If 4 digit language code appears in the subtitle menu, refer to the "Language Code" on page 35.
- If the disc has no subtitle language or subtitle style, "Not Available" will be displayed.
- For DivX®, the screen only displays the number of subtitle languages.

Adjusting the Picture

BD-V **DVD-V** **DVD-VR** **DivX®**

You can adjust the picture quality.

- 1) During playback, press [MODE] repeatedly until the picture adjustment menu appears.



- 2) Use [Δ / ▽] to select a item to be adjusted, then use [◀ / ▶] to adjust the setting
- 3) Press [RETURN] repeatedly to exit.

Item	Description	Adjustment range (*:default)
Contrast	Adjusts the difference between the bright and dark parts of the picture	-7 to +7 (0*)
Brightness	Adjusts the brightness of the picture.	0 to +15 (0*)
Sharpness	Adjusts the sharpness of the picture.	-6 to +6 (0*)
Gamma Correction	Changes the amount of gamma correction to adjust overall brightness of a picture. Make dark/bright section easier to see	0 to +5 (0*)
Color	Adjusts the balance between the green and red.	-7 to +7 (0*)

Playback

Item	Description	Adjustment range (*:default)
Noise Reduction	Reduces the noise of the playback picture.	Off*
		+1: Execute MPEG noise reduction witch reduce the block noise and mosquito noise on the subtitle on movie.
		+2: Execute 3D noise reduction witch detect and delete the noise by comparing each picture frames.
		+3: Execute both MPEG noise reduction and 3D noise reduction.

Note

 
- The setting remains even you turn off the unit.
- You cannot adjust the setting during the dialog speed playback.
- For BD, noise reduction is not effective.

Virtual Surround

BD-V **DVD-V** **DVD-VR**

You can enjoy stereo phonic virtual space through your existing 2-channel stereo system.

- 1) In stop mode, press [MODE] repeatedly until the virtual surround setting appears.



- 2) Use [Δ / ▽] to select "1" (Natural effect), "2" (Emphasised effect) or "Off".

- 3) Press [RETURN] to exit.

Note

- Select virtual surround "Off" or lower the volume if the sound is distorted.
- This function cannot be used during dialog speed (refer to page 15).
- For the virtual surround, audio signal will always be 2-channel LPCM.

Pure Direct Mode

By selecting the pure direct mode, you can shut down the circuitry of the front panel.

- 1) Press [PURE DIRECT] repeatedly to select your desired pure direct mode.

- Each time you press [PURE DIRECT], the pure direct mode changes as "Normal" → "Display Off" → "Normal". The modes will be displayed on the front panel display.

"Normal" : Pure direct mode is off.



"Display Off" : Front panel display will be turned off.

Note

- The "Display Off" mode goes back to "Normal" mode if you turn off this unit.

Playback

Setting the BD Audio Mode

BD-V

BD audio mode is to choose between two ways; you could output the secondary and interactive audio accompanied by the primary audio or you could output the primary audio only. Depending on the setting of the mode, Dolby Digital, DTS, Dolby Digital Plus, Dolby TrueHD, or DTS-HD output changes between multi LPCM and bitstream.

- 1) In stop mode with BD inserted, press [MODE].
- 2) Use [Δ / ▽] to select desired setting.

BD Audio Mode

"Mix Audio Output" : The Dolby Digital, DTS, Dolby Digital Plus, Dolby TrueHD or DTS-HD format will be converted to Multi LPCM. If it is available, secondary and interactive audio it will be output with primary audio.


"HD Audio Output" : Dolby Digital, DTS, Dolby Digital Plus, Dolby TrueHD, or DTS-HD will be output in a full stream. Please refer to page 11 for output audio signals. In this mode secondary or interactive audio will not be output.

- The secondary audio is the audio for the sub picture (Director's comment etc.) and the interactive audio is the audio for the interactive application (Button click sounds etc.).

- 3) Press [RETURN] to exit.

- You can also set the BD Audio Mode from the setup menu. Refer to page 30.

Playback


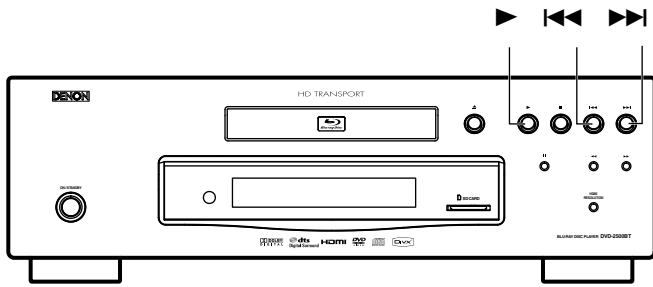


Playback

Playing Back an MP3, Windows Media™ Audio, JPEG and DivX® File

- MP3
- WMA
- JPEG
- DivX®

- 1** Insert a DVD-RW/-R or CD-RW/-R with MP3, Windows Media™ Audio, JPEG, DivX® files.
 - The file list will appear on the screen.
 - If file list does not appear automatically, press [POP UP MENU / MENU].
 - Press [POP UP MENU / MENU] to exit and resume the file list.
- 2** Use [Δ / ▽] to select a desired folder or file, then press [ENTER]. Use [◀ / ▶] to go back and forward between the hierarchies.
 - If you press [ENTER] on the files playback will start.

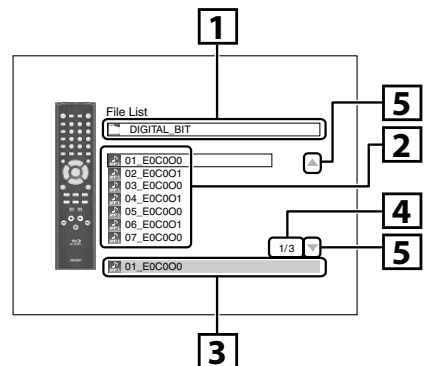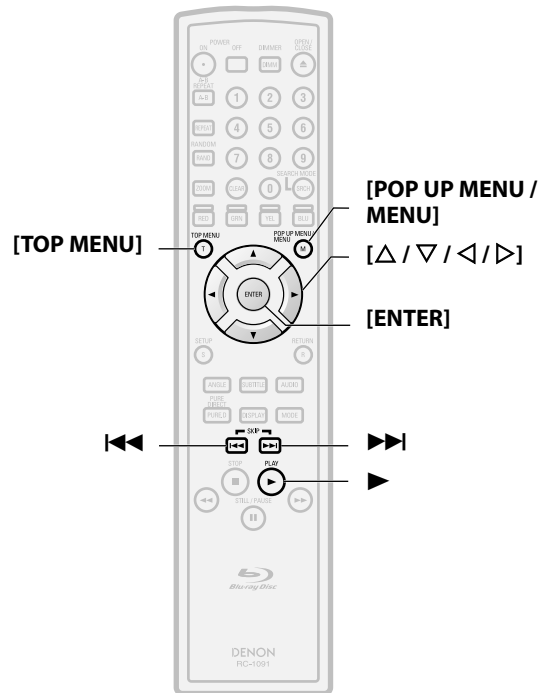

1. **Current folder name.** (Disc or SD Memory Card name will be displayed for the top of the hierarchies.)
2. **List of the file/folder names in the current folder/disc.**
3. **Selected file/folder name.**
4. **Current page / total page number**
5. **Indication of previous/next page**
 - Use [◀◀ / ▶▶] to go back and forward between the pages.
 - Press [TOP MENU] to return to the first item.

- Icons:**
- : Folders
 - : MP3 files
 - : Windows Media™ Audio files
 - : JPEG files
 - : DivX® files

It is recommended that files to be played back in this unit are recorded under the following specifications:

- <MP3 / Windows Media™ Audio>**
- Sampling frequency : 44.1 kHz or 48 kHz
 - Constant bit rate : 112 kbps - 320 kbps (MP3), 48 kbps - 192 kbps (Windows Media™ Audio)
- <JPEG>**
- Upper limit : 2,560 x 1,900 dots (sub sampling is 4:4:4)
5,120 x 3,840 dots (sub sampling is up to 4:2:2)
 - Lower limit : 32 x 32 dots
 - File size of image maximum : 12 MB
- <DivX®>**
Official DivX® Certified product
- Playable codec of AVI files : DivX® 3.x, DivX® 4.x, DivX® 5.x, DivX® 6.0
 - Maximum size of image : 720 x 480 @30 fps, 720 x 576 @25 fps
 - Sampling frequency of audio : 8 kHz - 48 kHz
 - Audio type : MPEG1 audio layer 3 (MP3), MPEG1 audio layer 2, Dolby Digital

Note

- The system can recognise up to 255 folders/999 files for CD, 999 folders/9999 files for DVD and SD Memory Card.
- The name of folder and file can be displayed up to 28 characters. Unrecognisable characters will be replaced with asterisks.
- The 9th and deeper hierarchies cannot be displayed for CD and the 10th and deeper hierarchies cannot be displayed for DVD and SD Memory Card.
- Files whose extension is other than "mp3(MP3)", ".wma(Windows Media™ Audio)", ".jpg / .jpeg(JPEG)" or ".avi / .divx" will not be listed.
- Some unplayable folders or files may be listed due to the recording status.
- High-resolution JPEG files take longer to be displayed.
- Progressive JPEG files (JPEG files saved in progressive format) cannot be played back on this unit.
- This unit recognises up to 8 characters of file name in the SD Memory Card. Characters after 9th will not be displayed.

About the button names in this explanation


< >: Buttons on the main unit
[] : Buttons on the remote control

Button name only:
Buttons on the main unit and remote control

To Play Back the DivX® Subtitle Created by the User.

The subtitle created by the user can be displayed during DivX® playback.

- 1) After selecting the DivX® file, the "Subtitle List" will appear when "DivX Subtitle" is set to anything other than "Off". (Refer to page 28.)
- 2) Use [△ / ▽] to select the desired extension of the subtitle file you want to display, then press [ENTER].

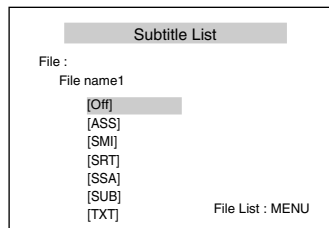

DivX® with the subtitle starts playback. The subtitle cannot be displayed when the setting is "Off".

- If there is more than one extension, the extension selection appears in the subtitle list.



- If you insert a DVD-RW/-R, CD-RW/-R with DivX® files that are mixed with MP3/Windows Media™ Audio/JPEG files, the playback media selection screen will be displayed. Use [△ / ▽] to select your desired media to play back then press [ENTER].



- Press [TOP MENU] to call up the playback media selection screen in stop mode.

Hint for the purchased or rental official DivX® Certified product

- When you purchased or rented a DivX® file through the official site of DivX® video which is called DivX® Video-On-Demand (VOD) services, a registration code is required every time you get the new file from the DivX® VOD services. Refer to "DivX(R) VOD" on page 33.
- Some DivX® VOD files are restricted with the limited playable times (you cannot play them back beyond the limit). If your DivX® VOD file has such limit, the playback confirmation screen will appear.
- Use [◀ / ▶] to select "Yes" if you want to play back the file, or to select "No" if you do not wish to play it back. Then, press [ENTER] to confirm the selection.
- You cannot play back the DivX® VOD files, of which rental period has been expired. In such case, press [POP UP MENU / MENU] and select other files that can be played back.
- You cannot play back the DivX® VOD files obtained with different registration codes on this unit. Press [POP UP MENU / MENU] and select other files that can be played back.
- You cannot playback the DivX® file that has the resolution which this unit does not support. This unit does not support the DivX® files that have the image size that exceeds 720 x 480 @ 30fps or 720 x 576 @ 25fps.

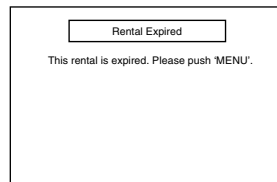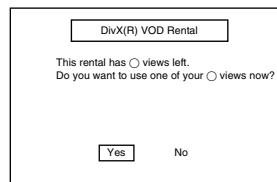

What is DivX®?

- DivX® is a codec (compression/decompression) that can compress images to a very small amount of data. The software can compress video data from almost any devices to the size that can be sent on the Internet without compromising visual quality of the images.
- A file with an extension of ".avi" and ".divx" is called an DivX® file. All files with the DivX® extension are recognised as MPEG4.
- For more information for DivX®, please visit <http://www.divx.com>.


Note for DivX®

- Even if the file has an extension of either ".avi" and ".divx", this unit cannot play it back if it is recorded in the format other than DivX®.
- It may take a while for audio and images to be output after you inserted a disc and pressed ▶.
- When playing back the files recorded in high bit rates, the images can be interrupted in some occasions.
- Although DivX® logo has been obtained for this unit, it may not be able to play back some data, depending on the characteristics, bit rates, or audio format settings, etc.
- A DivX® file whose file size exceeds 2 GB cannot be played back.
- If a large-sized DivX® file is selected, it may take awhile to start the playback (over 20 seconds sometimes).
- If you try to playback the DivX® file that has the screen resolution which this unit does not support, the playback will be stopped and error message will appear.
- Some DivX® files cannot be played back on this unit due to the configuration and characteristics of the disc, or due to the condition of recording and authoring software.
- Multi-session burn DivX® DVD cannot be played back on this unit.

Note for DivX® Subtitle

- To utilise this function, the following conditions must meet.
 - "DivX Subtitle" must be activated in "Language" setting. (Refer to "DivX Subtitle" on page 28.)
 - Playback file and the subtitle file must have the same name.
 - Playback file and the subtitle file must locate in the same folder.
 - Only the subtitle files with the following extensions are supported; .smi (.SMI), .srt (.SRT), .sub (.SUB), .ass (.ASS), .ssa (.SSA), .txt (.TXT). (.sub (.SUB) and .txt (.TXT) files may not be recognised.)
 - The subtitles that exceeds the playback time of the DivX® file will not be displayed.

Playback


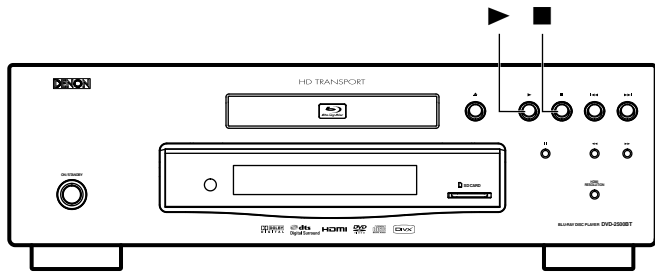


Playback

Reading the SD Memory Card

MP3 **WMA** **JPEG**

You can play back the MP3, Windows Media™ Audio and JPEG files in an SD Memory Card. With the SD Memory Card, you can also enjoy the special additional contents for BD-ROM Profile 1.1 which can be downloaded from the internet. You can store the contents on an SD Memory Card via computer and play them back with the BD-video. For more information about the special additional contents, please refer to the instruction book that came with the disc.

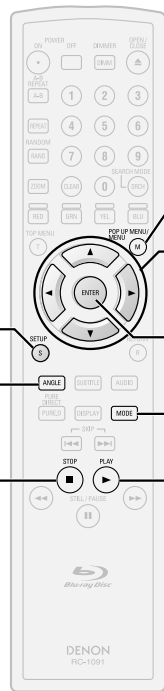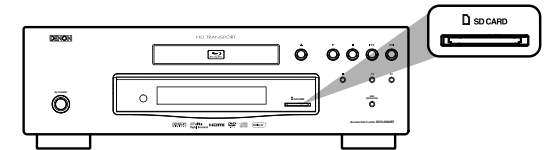


- [POP UP MENU / MENU]
- [Δ / ▽ / ◀ / ▶]
- [SETUP]
- [ENTER]
- [ANGLE]
- [MODE]
-

Kodak Picture CD

JPEG

This unit can also run JPEG files stored on Kodak Picture CD. You can enjoy picture images on the television set by playing back the Picture CD. This unit confirms to ver.7.0 of Kodak Picture CD. For details of Kodak Picture CD, contact a shop that provides developing service of Kodak Inc.


1 When Kodak Picture CD is inserted in this unit, Kodak Picture CD menu appear automatically on the screen.

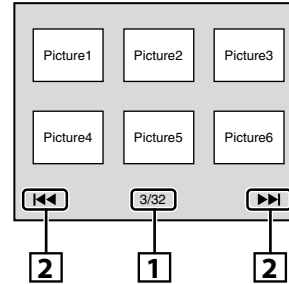

- 1.** Current track number/the total number of tracks
- 2.** Indication of previous/next page
 - In stop mode, press [POP UP MENU / MENU] to call Kodak Picture CD menu.
- 2** Use [Δ / ▽ / ◀ / ▶] to select a desired track to be played back, then press ▶ or [ENTER].
 - An image will be played back from the selected track and go to the next one in turn.
- 3** Press ■ to stop playback.

Setting the media mode

- 1** Press [SETUP] in stop mode.
- 2** Use [◀ / ▶] to select **CUSTOM**, then press [ENTER].
- 3** Use [◀ / ▶] to select **Other**, then press [ENTER].
- 4** Use [Δ / ▽] to select "Media Select".
- 5** Press [ENTER] repeatedly to select "SD Memory".

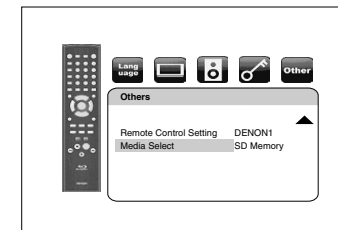

- This will set the unit to "SD Memory" mode. To play back the contents in any discs, exit "SD Memory" mode by selecting "Disc".

6 Press [SETUP] to exit.

Tips for JPEG/Kodak Picture Playback


- Every press on [ANGLE] will turn the image clockwise by 90 degrees when an image is displayed.
- To change the visual effect for switching the playback image, press [MODE] once, then use [Δ / ▽] or [ENTER] to switch between "Cut In/Out" and "Fade In/Out". The size change may have no effect on some files (e.g. files with a small picture size).
- To change the size of the playback image, during the JPEG/Kodak Picture playback. Press [MODE] twice, then use [Δ / ▽ / ◀ / ▶] or [ENTER] to switch between "Normal" (100%) and "Small" (93%). The size change may have no effect on some files (e.g. files with a small picture size).

About the button names in this explanation
 < >: Buttons on the main unit
 [] : Buttons on the remote control
Button name only:
 Buttons on the main unit and remote control

Playback

■ Inserting the SD Memory Card and playback

- 1 Insert an SD Memory Card into the SD CARD slot until it clicks with the label facing up.
File list will appear.

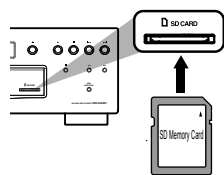

- 2 Follow the step 2 in “Playing Back an MP3, Windows Media™ Audio, JPEG and DivX® File” on page 23.

■ Removing the SD Memory Card

- 1 In stop mode, push the SD Memory Card and then slowly remove your finger.

- 2 Grasp the card and pull it out from the SD CARD slot.



Compatible Cards:

- SD Memory Card (8MB - 2GB)
- SDHC Memory Card (4GB)
- miniSD Card (8MB - 2GB)
- microSD Card (8MB - 2GB)
- For miniSD Card and microSD Card, adapter will be required.

Note

- Do not remove the card during its playback.
- This unit supports SD Memory Card with FAT12/FAT16 file system, and SDHC Memory Card with FAT32 file system.
- Do not delete the folders or files in the SD Memory Card with your computer. This unit might not read the SD Memory Card.
- This unit recognises up to 8 characters of file name in the SD Memory Card. Characters after 9th will not be displayed.

Function Setup

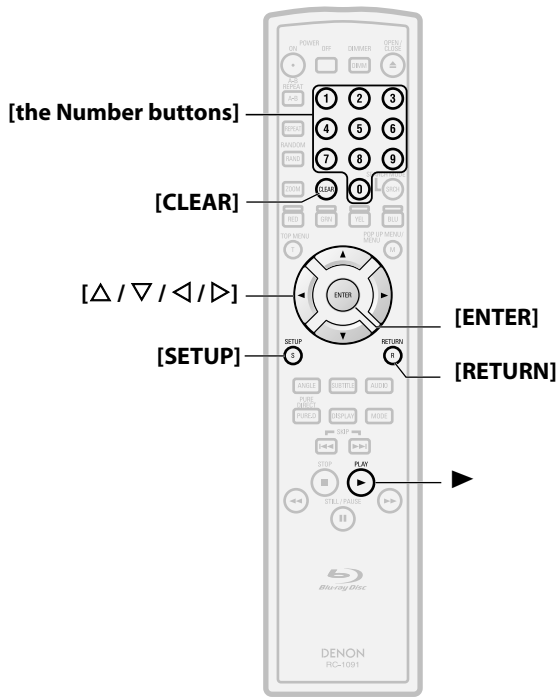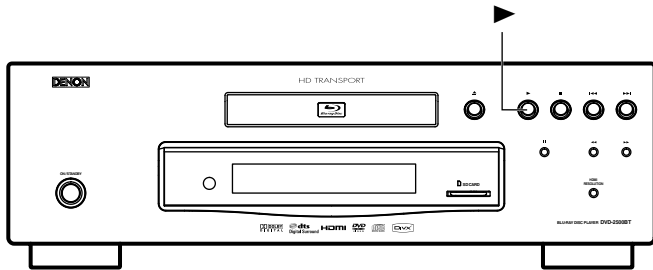

About the button names in this explanation
 < >: Buttons on the main unit
 [] : Buttons on the remote control
Button name only:
 Buttons on the main unit and remote control

Using the Setup Menu


In the setup menu you can change the setting for audio, video, language, etc. You cannot change the setting during playback.

Quick

Quick setting menu contains setting items extracted from custom setting menu which may be used frequently.

1 Press [SETUP] in stop mode.

2 Use [◀ / ▶] to select **QUICK**, then press [ENTER].

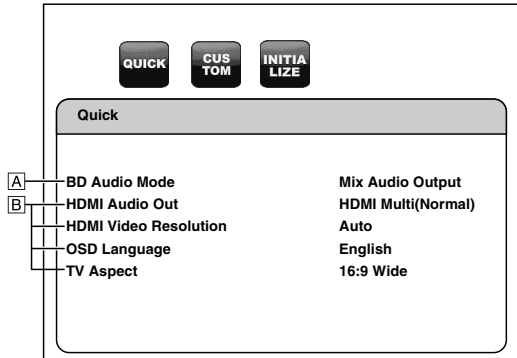

3 Use [Δ / ▽] to select setting items.

4 Follow the procedure below depending on the setting items.
For setting item A:
 Press [ENTER] repeatedly to change options.
For setting item B:
 1) Press [ENTER].
 2) Use [Δ / ▽] to select options, then press [ENTER].
 • Use [◀] or [RETURN] to go back to the previous screen.

5 Press [SETUP] to exit.

Custom

Custom menu contains all the setting items.

1 Press [SETUP] in stop mode.

2 Use [◀ / ▶] to select **CUS TOM**, then press [ENTER].


3 Use [◀ / ▶] to select your desired setting category, then press [ENTER].
 Lang usage: Language [TV icon]: Video [Speaker icon]: Audio [Ratings icon]: Ratings
 Other: Others
 • For "Ratings", follow the procedure on page 32.

4 Use [Δ / ▽] to select setting items.
 • The setting items which are not available with current situation of this unit will be displayed in grey and you cannot select the items.


5 Follow the procedure below depending on the setting items.
For setting item A:
 Press [ENTER] repeatedly to change options.
 • For "DivX(R) VOD", press [ENTER] to display your registration code.
For setting item B:
 1) Press [ENTER].
 2) Use [Δ / ▽] to select options, then press [ENTER].
 • Use [◀] or [RETURN] to go back to the previous screen.


6 Press [SETUP] to exit.

Function Setup
Language

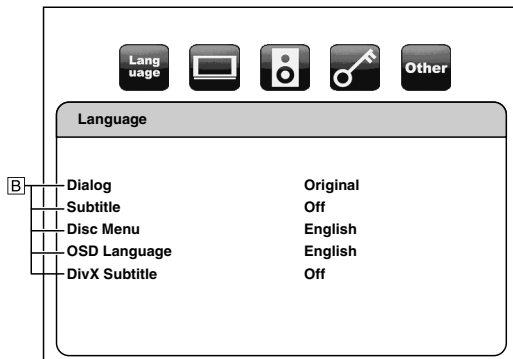


• For how to select the setting items and options, refer to the “Custom” on page 27.

Setting items	Options
Dialog Sets the language for audio.	Original*/English/German/French/Italian/Spanish/Dutch/Swedish/Russian/Chinese/Japanese/Korean/Danish/Finnish/Norwegian/Icelandic/Hungarian/Romanian/Turkish/Greek/Irish/Portuguese/Polish/Czech/Slovak/Bulgarian/Other
Subtitle Sets the language for subtitle.	Off*/English/German/French/Italian/Spanish/Dutch/Swedish/Russian/Chinese/Japanese/Korean/Danish/Finnish/Norwegian/Icelandic/Hungarian/Romanian/Turkish/Greek/Irish/Portuguese/Polish/Czech/Slovak/Bulgarian/Other
Disc Menu Sets the language for disc menu.	English*/German/French/Italian/Spanish/Dutch/Swedish/Russian/Chinese/Japanese/Korean/Danish/Finnish/Norwegian/Icelandic/Hungarian/Romanian/Turkish/Greek/Irish/Portuguese/Polish/Czech/Slovak/Bulgarian/Other
OSD Language  Sets the language for OSD (on-screen display).	English*/Deutsch/Français/Italiano/Español/Nederlands/Svenska
DivX Subtitle Sets the language for DivX® Subtitle.	Off*/English/German/French/Italian/Spanish/Dutch/Swedish


- Settings with (*) are the default.
- Quick menu consists of the setting menus frequently used, and they are accompanied with  mark.
- If you select “Other”, enter the 4-digit number code for the desired language (refer to the “Language Code” list on page 35). Only the languages supported by the disc can be selected.

Function Setup


Video

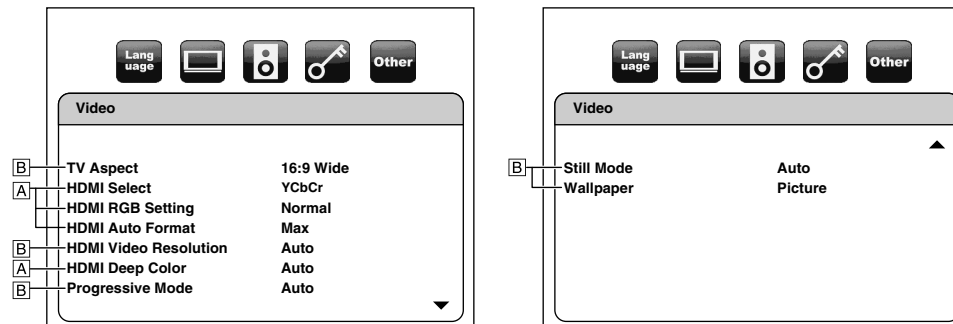

• For how to select the setting items and options, refer to the “Custom” on page 27.


Setting items	Options
TV Aspect  Sets a picture size according to aspect ratio of the connected display device.	16:9 Wide*: Select this when a wide-screen TV is connected. Disc recorded in wide screen format is played over the entire screen. 4:3 Pan & Scan: Select this to play back the disc recorded in wide screen format with 4:3 TV in the pan & scan mode (with the sides of the picture cut off). Discs which pan & scan is not specified are played in the letter box mode. 4:3 Letter Box: Select this to play back the disc recorded in wide screen format with 4:3 TV in the letter box mode. (with black strips at the top and bottom). 4:3 Squeeze Auto: When playing 4:3 images, the picture is displayed in the centre of the 16:9 screen with a 4:3 aspect ratio. 4:3 Squeeze On: The picture is displayed in the centre of the 16:9 TV screen with a 4:3 aspect ratio, regardless of the original image size.
HDMI Select Select an HDMI output mode between “YCbCr” and “RGB”.	YCbCr*: Component format video signals and audio signals are output from the HDMI OUT. RGB: RGB format video signals and audio signals are output from the HDMI OUT.

Function Setup

Setting items	Options
HDMI RGB Setting Sets the digital RGB image range (data range) output from the HDMI OUT.	Normal*: Output as "16 (black)" to "235 (white)".
	Enhanced: Output as "0 (black)" to "246 (white)". Depending on the TV you are using, the black colours may seem to stand out when using HDMI connections. If so, set to "Enhanced".
HDMI Auto Format Make the setting of the "Auto" for "HDMI Video Resolution".	Max*: The maximum resolution that can be input to the connected HDMI device is detected and the HDMI output resolution is selected automatically.
	Panel: The number of pixels of the connected HDMI device's panel is detected and the HDMI output resolution is selected automatically.
HDMI Video Resolution  Sets the HDMI video resolution.	Auto*: HDMI video resolution will be selected automatically depending on the connected HDMI device.
	480i/576i
	480p/576p
	720p
	1080i
	1080p
	1080p24: Gives a natural and high quality film reproduction of 24-frame film material. The connected display device has to be compatible with 1080p24 frame input.
HDMI Deep Color Sets whether output the picture from HDMI with the Deep Colour or not.	Auto*: The picture through the HDMI will be output with Deep Colour if the connecting device supports deep colour.
	Off: The picture through the HDMI will be output without Deep Colour.
Progressive Mode Sets the optimum progressive mode for the image material.	Auto*: The progressive mode will detect 24-frame film material (movies) and automatically select appropriate progressive mode.
	Video: Suited for playing video material discs (TV shows or animation).


Function Setup

Setting items	Options
Still Mode Adjusts picture resolution and quality in still mode.	Auto*: Automatically selects the best resolution setting ("Frame" or "Field") based on the data characteristics of the pictures.
	Field: Stabilises the pictures, although the picture quality may become coarse due to the limited amount of data. Select "Field" when the pictures are still unstable even if "Auto" is selected.
	Frame: Displays relatively motionless pictures in higher resolution. "Frame" improves the picture quality, although it may unbalance the pictures due to alternate output of two field data.
Wallpaper Sets the picture to be displayed on the screen for stop mode or audio playback mode.	Picture*
	Blue
	Black
	Gray



- Settings with (*) are the default.
- Quick menu consists of the setting menus frequently used, and they are accompanied with  mark.
- For "HDMI RGB Setting", select "Enhanced" if the black-white contrast is not clear. The setting is effective only for HDMI RGB output.
- If you set to "1080p24" for the "HDMI Video Resolution", and the contents of the disc is not compatible for 1080p24 frame, 1080p60 frame will be output if it is an NTSC disc, and 1080p50 frame will be output if it is a PAL disc.
- An individual picture on the screen is called as "Frame", which consists of two separate images called as "Field". Some pictures may be blurred at the auto setting in "Still Mode" due to their data characteristics.
- If the picture is not output properly to the display device because of the "HDMI Video Resolution" setting, press and hold ► on the front panel for more than 5 seconds. The "HDMI Video Resolution" setting will be switched to "Auto" automatically.
- For "TV Aspect", 4:3 squeeze function is not available during BD playback.

Function Setup

Audio

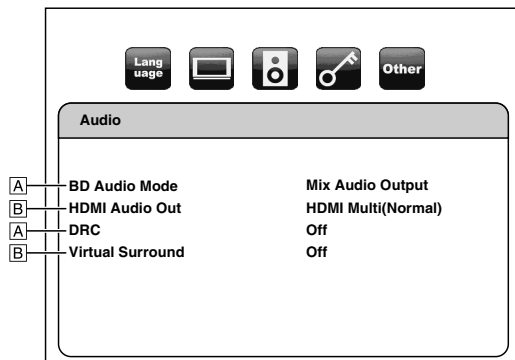

  
• For how to select the setting items and options, refer to the “Custom” on page 27.

Setting items	Options
BD Audio Mode  For BD, select whether to output the secondary and interactive audio with primary audio if it is available (audio will be output in a multi LPCM format.) or only the primary audio (audio will be output in bitstream.).	Mix Audio Output*: Output the secondary and interactive audio with primary audio if it is available (audio will be output in a multi LPCM format.). HD Audio Output: Output only the primary audio (audio will be output in bitstream.).
HDMI Audio Out  Sets the audio format for the audio output from the HDMI OUT.	HDMI Multi(Normal)*: The multi-channel audio signals are output from the HDMI OUT with a bitstream or LPCM. HDMI Multi(LPCM): The multi-channel audio signals are output from the HDMI OUT with a LPCM. • Refer to page 11 for setting options. HDMI 2ch: The audio signals are output from the HDMI OUT with a downmixed to 2-channels.
DRC Sets whether to compress the range of sound volume (Dynamic Range Control) when Dolby Digital audio is played back.	On Off*

Function Setup


Setting items	Options
Virtual Surround Sets to create a surround effect in a system with 2 speakers connected.	Off*: Virtual surround is set to off. 1 : A natural surround effect in a system with 2 speakers connected. 2 : A stronger surround effect in a system with 2 speakers connected than "1".

- Settings with (*) are the default.
- Quick menu consists of the setting menus frequently used, and they are accompanied with  mark.
- The default of the “BD Audio Mode” is “Mix Audio Output”. If you want to output only the high quality primary audio, set “BD Audio Mode” to “HD Audio Output”.

Function Setup
Speaker Setting

This unit allows you to enjoy multi-channel surround sound such as 5.1-channel / 7.1-channel surround.

<Example of basic layout with 7.1ch surround system>

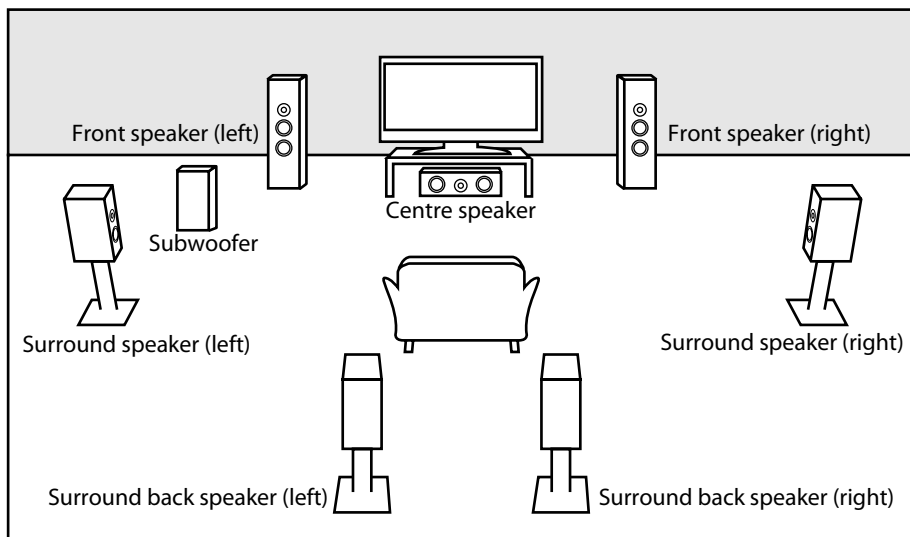

To make the most of its feature, set up your speakers appropriately by referring to the table below. Speaker setting options are available in Setup → Quick → HDMI Audio Out → HDMI Multi(LPCM) or Setup → Custom → Audio → HDMI Audio Out → HDMI Multi(LPCM).

How to navigate through the "HDMI Multi(LPCM)" setting

1) Use [△ / ▽] to select the menu item.

2) Use [△ / ▽] to select setting items.

• Use [RETURN] to go back to the previous screen.

3) Use [◀ / ▶] to select desired options. (Except for "Test Tone" and "Default".)

For "Test Tone":

Use [◀ / ▶] to select "Manual" or "Auto", then press [ENTER].

• The test tone will be output. If you select "Manual", use [△ / ▽] to select desired speaker, then use [◀ / ▶] to adjust the volume. If you select "Auto", use [◀ / ▶] to adjust the volume of the speaker that output the test tone.

• If you want to stop the test tone, press [RETURN].

For "Default":

Press [ENTER] to reset the "Delay Time" setting to the default.

4) Press [SETUP] to exit.

Function Setup

Menu	Setting items	Options	Descriptions
Speaker Configuration Select the desired speaker to set. Then change the setting appropriately by referring to the descriptions.	Front	Large*	Large: For the large speakers with strong low frequency reproduction capabilities.
		Small	
	Center	Large*	Small: For the small speakers which do not provide strong bass sound
		Small	
	Subwoofer	On*	You cannot change the setting of "Subwoofer". If connected device is not compatible with subwoofer, "Subwoofer" will be displayed in grey.
	Surround	Large*	
Small			
Surround Back	Large*		
	Small		
Channel Level Test or set the volume for each speaker.	Test Tone: "Test Tone" is the test tone which can be output from the speakers so that you can adjust the volume for each speaker.	Off*	Select "Off" to deactivate the "Test Tone" feature. Select "Manual", then press [ENTER] to manually set the volume for the desired speaker. Select "Auto", then press [ENTER] to automatically output the test tone from each speaker.
		Manual	
		Auto	
Front Lch	0 dB to -12 dB (0 dB*)	If you have selected "Manual" in "Test Tone", select the desired speaker to set and adjust the volume for the selected speaker. If you have selected "Auto" in "Test Tone", adjust the volume while the desired speaker is outputting the test tone.	
Center	0 dB to -12 dB (0 dB*)		
Front Rch	0 dB to -12 dB (0 dB*)		
Surround Rch	0 dB to -12 dB (0 dB*)		
Surround Back Rch	0 dB to -12 dB (0 dB*)		
Surround Back Lch	0 dB to -12 dB (0 dB*)		
Surround Lch	0 dB to -12 dB (0 dB*)		
Subwoofer	0 dB to -12 dB (0 dB*)		

Function Setup


Function Setup


Menu	Setting items	Options	Descriptions
Delay Time This is a parameter for optimizing the timing at which the sound is output from the speakers according to their distance from the listening position.	Distance	Feet	Set the desired measure system. This measure system will be used for "Delay Time" setting. Press [ENTER] to switch the setting.
		Meters*	
	Front (L/R)	0m-18m (3.6m*) (0ft - 60ft (12ft*))	Select the distance from the listening point to the speaker to get the ideal delay time.
	Center	0m-18m (3.6m*) (0ft - 60ft (12ft*))	
	Surround (L/R)	0m-18m (3.0m*) (0ft - 60ft (10ft*))	
	Surround Back (L/R)	0m-18m (3.0m*) (0ft - 60ft (10ft*))	
Default		Select "Default", then press [ENTER], to reset the "Delay Time" setting to the default.	

- Settings with (*) are the default.
- For "Speaker Configuration", if you set "Front" to "Small", you cannot set "Center", "Surround" and "Surround Back" to "Large".
- For "Speaker Configuration", if you set "Surround" to "Small", you cannot set "Surround Back" to "Large".
- For "Delay Time", the difference between the value of the "Front (L/R)", "Surround (L/R)" and "Surround Back (L/R)" setting cannot exceed 4.5m (15 ft), and the difference between the value of the "Front (L/R)" and "Center" setting cannot exceed 1.5m (5 ft).
- For "Delay Time", the value of the "Center", "Surround (L/R)" and "Surround Back (L/R)" setting cannot exceed the value of the "Front (L/R)" setting.
- For "Delay Time", the setting of "Center", "Surround (L/R)" and "Surround Back (L/R)" will be changed automatically to the setting value of the "Front (L/R)". (e.g., If the "Front (L/R)" is set to 18m (60ft), the setting of "Center", "Surround (L/R)" and "Surround Back (L/R)" will be changed to 18m (60ft) as well.)

 **Ratings**

Ratings control allows you to set a limit, which prevents your children from viewing inappropriate materials. Playback will stop if the ratings exceed the levels you set, and it will require you to enter a password before the disc will play back.

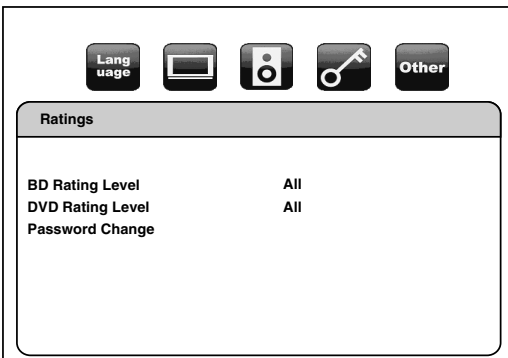

- 1) Use [◀/▶] to select  then press [ENTER].
- 2) Press [the Number buttons] to enter your 4-digit password.
For the first time use: Press [the Number buttons] to enter any 4-digit number (except for 4737), then press [ENTER]. That number will be used as the password from the second time. Record your password in case you forget it.
 - If you forgot the password, enter [4], [7], [3], [7]. The password will be cleared and rating level will be set to "All".
 - While you input the password, press [CLEAR] to clear the number, then re-enter the password.

Proceed to A – C

A) BD Rating Level

- 1) Use [△ / ▽] to select "BD Rating Level", then press [ENTER].
- 2) Use [△ / ▽] to select your desired option, then press [ENTER].
 "All" : To release the limitation.
 "Age Setting" : To set the age limitation.
 - After selecting "Age Setting", use [the Number buttons] to enter the age from 0 – 254. (e.g. for age 15, press [0],[1],[5])
- 3) Press [SETUP] to exit.

B) DVD Rating Level

- 1) Use [△ / ▽] to select "DVD Rating Level", then press [ENTER].
- 2) Use [△ / ▽] to select a desired level, then press [ENTER].
- 3) Press [SETUP] to exit.


RATING EXPLANATIONS	
• All	: Parental control is inactive; all discs can play back.
• 8 [Adult]	: DVD software of any grades (adult/general/children) can be played back.
• 7 [Nc-17]	: No one under 17 admitted.
• 6 [R]	: Restricted; under 17 requires accompanying parent or adult guardian.
• 5 [Pgr]	: Parental guidance recommended.
• 4 [Pg13]	: Unsuitable for children under 13.
• 3 [Pg]	: Parental guidance suggested.
• 2 [G]	: General audience.
• 1 [Kid Safe]	: Suitable for children.

C) Password Change

- 1) Use [△ / ▽] to select "Password Change", then press [ENTER].
- 2) Enter a new 4-digit password, then press [ENTER].
- 3) Press [SETUP] to exit.

Function Setup

Other Others

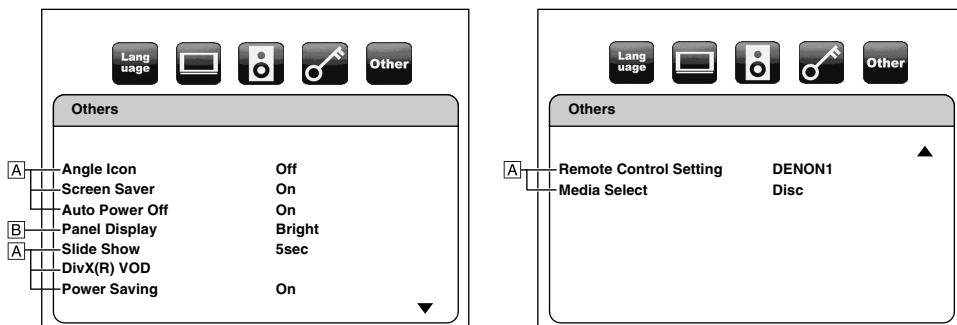

• For how to select the setting items and options, refer to the “Custom” on page 27.


Setting items	Options
Angle Icon	On: The angle icon appears on the screen when playback the scene with various angle. Off*: The angle icon disappears on the screen.
Screen Saver	On*: If this unit is left with no activity for more than 5 minutes, the screen saver will be activated. Off: Sets off the screen saver.
Auto Power Off	On*: If this unit is left with no activity for more than 30 minutes, this unit turns off automatically. Off: Sets off the auto power off.
Panel Display Sets the brightness of the front panel display.	Bright*: Front panel display gets brighter. Dimmer: Front panel display gets darker. Auto: Front panel display gets darker during playback.
Slide Show Sets the display time for the still picture (in JPEG format) playback	5sec* 10sec
DivX(R) VOD Provide DivX® VOD registration code.	For more information about DivX® VOD visit www.divx.com/vod

Function Setup

Setting items	Options
Power Saving Lower the power consumption for standby mode by denying the command from RS-232C during standby mode.	On*: Denies the command from RS-232C when the power is off. Off: Accepts the command from RS-232C when the power is off.
Remote Control Setting Changing the signal code of a remote control. (Refer to page 6)	DENON1* DENON2
Media Select Select the media to playback.	Disc*: Select this when you play back a disc. SD Memory: Select this when you play back a SD Memory Card.

INITIALIZE Initialize

Initialise the setting or SD Memory Card.

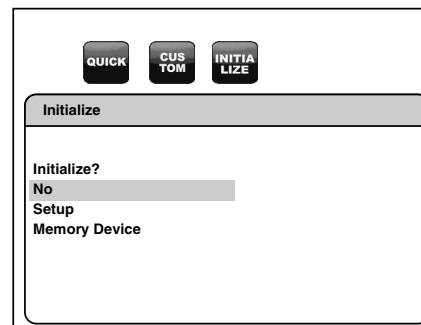

- 1) Press [SETUP] in stop mode.
- 2) Use [◀/▶] to select “Initialize”, then press [ENTER].
- 3) Use [△/▽] to select a desired option, then press [ENTER].
 “No” :Exit without any initialization.
 “Setup” :Reset the SETUP setting to the factory default.
 “Memory Device” :Initialises the SD Memory Card. After confirmation message appears, use [△/▽] to select “Yes”, then press [ENTER].
- 4) Press [ENTER]. (For “Setup” and “Memory Device” only)
- 5) Press [SETUP] to exit.

Note
• The setting for “Ratings” will not be reset.

Others

Troubleshooting

If the unit does not perform properly when operated as instructed in this Operating Instruction, check the unit, consulting the following checklist.

Problem	Solution	Page	Problem	Solution	Page
No power	<ul style="list-style-type: none"> - Check if the AC cord is properly connected. - Unplug the AC cord once, and wait for 5-10 seconds and then plug it in again. 	- -	The unit does not respond to some operating commands during playback	<ul style="list-style-type: none"> - Operations may not be permitted by the disc. Refer to the instructions of the disc. 	12
No sound or picture	<ul style="list-style-type: none"> - Check if the connected display device is turned on. - Check the HDMI connection. (Check the status of the HDMI related indications.) - Check whether the connected display device or other device supports HDCP. (This unit will not output a video signal unless the other device supports HDCP.) - Check whether the output format of this unit (HDMI FORMAT) matches the supported input format of other connected device. - Check if the "HDMI Deep Color" is set to "Auto". If it is the case, set it to "Off". 	- 10 11 10,28,29 29	The unit cannot read BD/DVD/CD	<ul style="list-style-type: none"> - Condensation ? (Let sit 1 or 2 hours) - You are attempting to play a disc other than one with one of the marks on page 4. - Wipe the dirt off the disc or replace the disc. 	3 4 4
Distorted picture	<ul style="list-style-type: none"> - Sometimes a small amount of picture distortion may appear. This is not a malfunction. 	-	Angle does not switch	<ul style="list-style-type: none"> - The angle cannot be switched for BD/DVD which do not contain multiple angles. In some cases multiple angles are only recorded for specific scenes. 	17
Completely distorted picture or black/white picture with BD/DVD	<ul style="list-style-type: none"> - Make sure the disc is compatible with this unit. 	4	Playback does not start when the title is selected	<ul style="list-style-type: none"> - Check the "Ratings" setting. 	32
No sound or distorted sound	<ul style="list-style-type: none"> - Adjust the volume. - Check that the speakers are connected correctly. - Check the HDMI connections. - Check the "Audio" settings. 	- 10 10 30	The password for rating level has been forgotten	<ul style="list-style-type: none"> - Enter the default password "4737", then your forgotten password will be cleared. 	32
Picture freezes momentarily during playback	<ul style="list-style-type: none"> - Check the disc for fingerprints/scratches and clean with a soft cloth wiping from centre to edge. - Clean the disc. 	4 4			
Disc cannot be played back	<ul style="list-style-type: none"> - Clean the disc. - Ensure the disc label is facing up. - Check if the disc is defective by trying another disc. - Cancel the ratings control or change the control level. - Insert a correct disc that can be played back on this unit. 	4 12 - 32 4			
SD Memory Card cannot be read.	<ul style="list-style-type: none"> - The format of the card does not match to this unit or the card is not compatible. 	-			
No return to start-up screen when disc is removed	<ul style="list-style-type: none"> - Reset this unit by turning it off, then on again. 	-			
The unit does not respond to the remote control	<ul style="list-style-type: none"> - Aim the remote control directly at infrared sensor window on the front of the unit. - Reduce the distance to infrared sensor window. - Replace the batteries in the remote control. - Re-insert the batteries with their polarities (+/- signs) as indicated. - Make the signal code of the remote control match to the signal code of the unit. 	6 - 6 6 6			
Buttons do not work or the unit stops responding	<ul style="list-style-type: none"> - To completely reset the unit, unplug the AC cord from the AC outlet for 5-10 seconds. 	-			

Note

- Some functions are not available in specific modes, but this is not a malfunction. Read the description in this Operating Instructions for details on correct operations.
- Some functions are prohibited on some discs.

Language Code

Language	Code
A-B	
Abkhazian	4748
Afar	4747
Afrikaans	4752
Albanian	6563
Amharic	4759
Arabic	4764
Armenian	5471
Assamese	4765
Aymara	4771
Azerbaijani	4772
Bashkir	4847
Basque	5167
Bengali;Bangla	4860
Bhutani	5072
Bihari	4854
Bislama	4855
Breton	4864
Bulgarian [BUL]	4853
Burmese	5971
Byelorussian	4851
C-E	
Cambodian	5759
Catalan	4947
Chinese [CHI]	7254
Corsican	4961
Croatian	5464
Czech [CZE]	4965
Danish [DAN]	5047
Dutch [DUT]	6058
English [ENG]	5160

Language	Code
Esperanto	5161
Estonian	5166
F-H	
Faroese	5261
Fiji	5256
Finnish [FIN]	5255
French [FRE]	5264
Frisian	5271
Galician	5358
Georgian	5747
German [GER]	5051
Greek [GRE]	5158
Greenlandic	5758
Guarani	5360
Gujarati	5367
Hausa	5447
Hebrew	5569
Hindi	5455
Hungarian [HUN]	5467
I-K	
Icelandic [ICE]	5565
Indonesian	5560
Interlingua	5547
Interlingue	5551
Inupiak	5557
Irish [IRI]	5347
Italian [ITA]	5566
Japanese [JPN]	5647
Javanese	5669
Kannada	5760
Kashmiri	5765
Kazakh	5757

Language	Code
Kinyarwanda	6469
Kirghiz	5771
Kirundi	6460
Korean [KOR]	5761
Kurdish	5767
L-N	
Laothian	5861
Latin	5847
Latvian;Lettish	5868
Lingala	5860
Lithuanian	5866
Macedonian	5957
Malagasy	5953
Malay	5965
Malayalam	5958
Maltese	5966
Maori	5955
Marathi	5964
Moldavian	5961
Mongolian	5960
Nauru	6047
Nepali	6051
Norwegian [NOR]	6061
O-R	
Occitan	6149
Oriya	6164
Oromo(Afan)	6159
Panjabi	6247
Pashto;Pushto	6265
Persian	5247
Polish [POL]	6258
Portuguese [POR]	6266

Language	Code
Quechua	6367
Rhaeto-Romance	6459
Romanian [RUM]	6461
Russian [RUS]	6467
S	
Samoan	6559
Sangho	6553
Sanskrit	6547
Scots Gaelic	5350
Serbian	6564
Serbo-Croatian	6554
Sesotho	6566
Setswana	6660
Shona	6560
Sindhi	6550
Singhalese	6555
Siswat	6565
Slovak [SLO]	6557
Slovenian	6558
Somali	6561
Spanish [SPA]	5165
Sundanese	6567
Swahili	6569
Swedish [SWE]	6568
T	
Tagalog	6658
Tajik	6653
Tamil	6647
Tatar	6666
Telugu	6651
Thai	6654
Tibetan	4861

Language	Code
Tigrinya	6655
Tonga	6661
Tsonga	6665
Turkish [TUR]	6664
Turkmen	6657
Twi	6669
U-Z	
Ukrainian	6757
Urdu	6764
Uzbek	6772
Vietnamese	6855
Volapuk	6861
Welsh	4971
Wolof	6961
Xhosa	7054
Yiddish	5655
Yoruba	7161
Zulu	7267

Note

- If you choose a language that has a 3-letter-language code (written in bracket), the code will be displayed every time you change the audio or subtitle language setting on pages 20 - 21. If you choose any other languages, '---' will be displayed instead.

Specifications

SIGNAL SYSTEM

NTSC/PAL colour

APPLICABLE DISCS

- (1) BD/DVD-video Discs
1-layer 12cm single-sided discs, 2-layer 12cm single-sided discs, 2-layer 12cm double-sided discs
(1 layer per side)
1-layer 8cm single-sided discs, 2-layer 8cm single-sided discs, 2-layer 8cm double-sided discs
(1 layer per side)
- (2) BD-RE / BD-R (Recorded in BDMV format)
1-layer 12cm single-sided discs, 2-layer 12cm single-sided discs
1-layer 8cm single-sided discs, 2-layer 8cm single-sided discs
- (3) DVD-R
1-layer 12cm single-sided discs, 2-layer 12cm single-sided discs
1-layer 8cm single-sided discs, 2-layer 8cm single-sided discs
- (4) DVD-RW
1-layer 12cm single-sided discs
1-layer 8cm single-sided discs
- (5) Compact discs (audio CD)
12cm discs, 8cm discs
- (6) CD-RW/-R
12cm discs, 8cm discs

APPLICABLE MEMORY CARDS

- (1) SD Memory Card
- (2) SDHC Memory Card
- (3) miniSD Card
- (4) microSD Card

HDMI OUTPUT

Output jack: 19-pin HDMI terminal, 1 set
HDMI ver. 1.3a (Deep Colour, Dolby Digital Plus, Dolby TrueHD, DTS-HD)

POWER SUPPLY

AC 230V, 50Hz

POWER CONSUMPTION

30W (Standby: 0.8W)

MAXIMUM EXTERNAL DIMENSIONS

W: 434mm
H : 139mm
D : 391mm
(including protruding parts)

MASS

9.2 kg

REMOTE CONTROL

RC-1091
Infrared pulse type
Supply: DC 3V, 2 R6P/AA batteries
External dimensions:
W: 52mm
H : 227mm
D : 30mm
Mass: 171g (included batteries)

- For purposes of improvement, specifications and design are subject to change without notice.

Printed in China
541 110021 306D

DENON
TOKYO, JAPAN
www.denon.com

Denon Brand Company, D&M Holdings Inc.
E5J01ED/E5J03ED/E5J05ED / 1VMN25893C ★★