





- S301 POWER - OFF
- S302 REAR - OFF
- S303 REAR - OFF
- S304 FUNCTION - TAPE
- S305 REC/PLAY - PLAY
- S306 REC/PLAY - NORMAL
- S307 TAPE - NORMAL
- S308 TAPE - NORMAL

