


Schaltbuchse für Kopfhörer
EARPHONE JACK WITH
SPEAKER CUT OFF SWITCH
DOUILLE INTERRUPTION
ECOUTEUR - HP

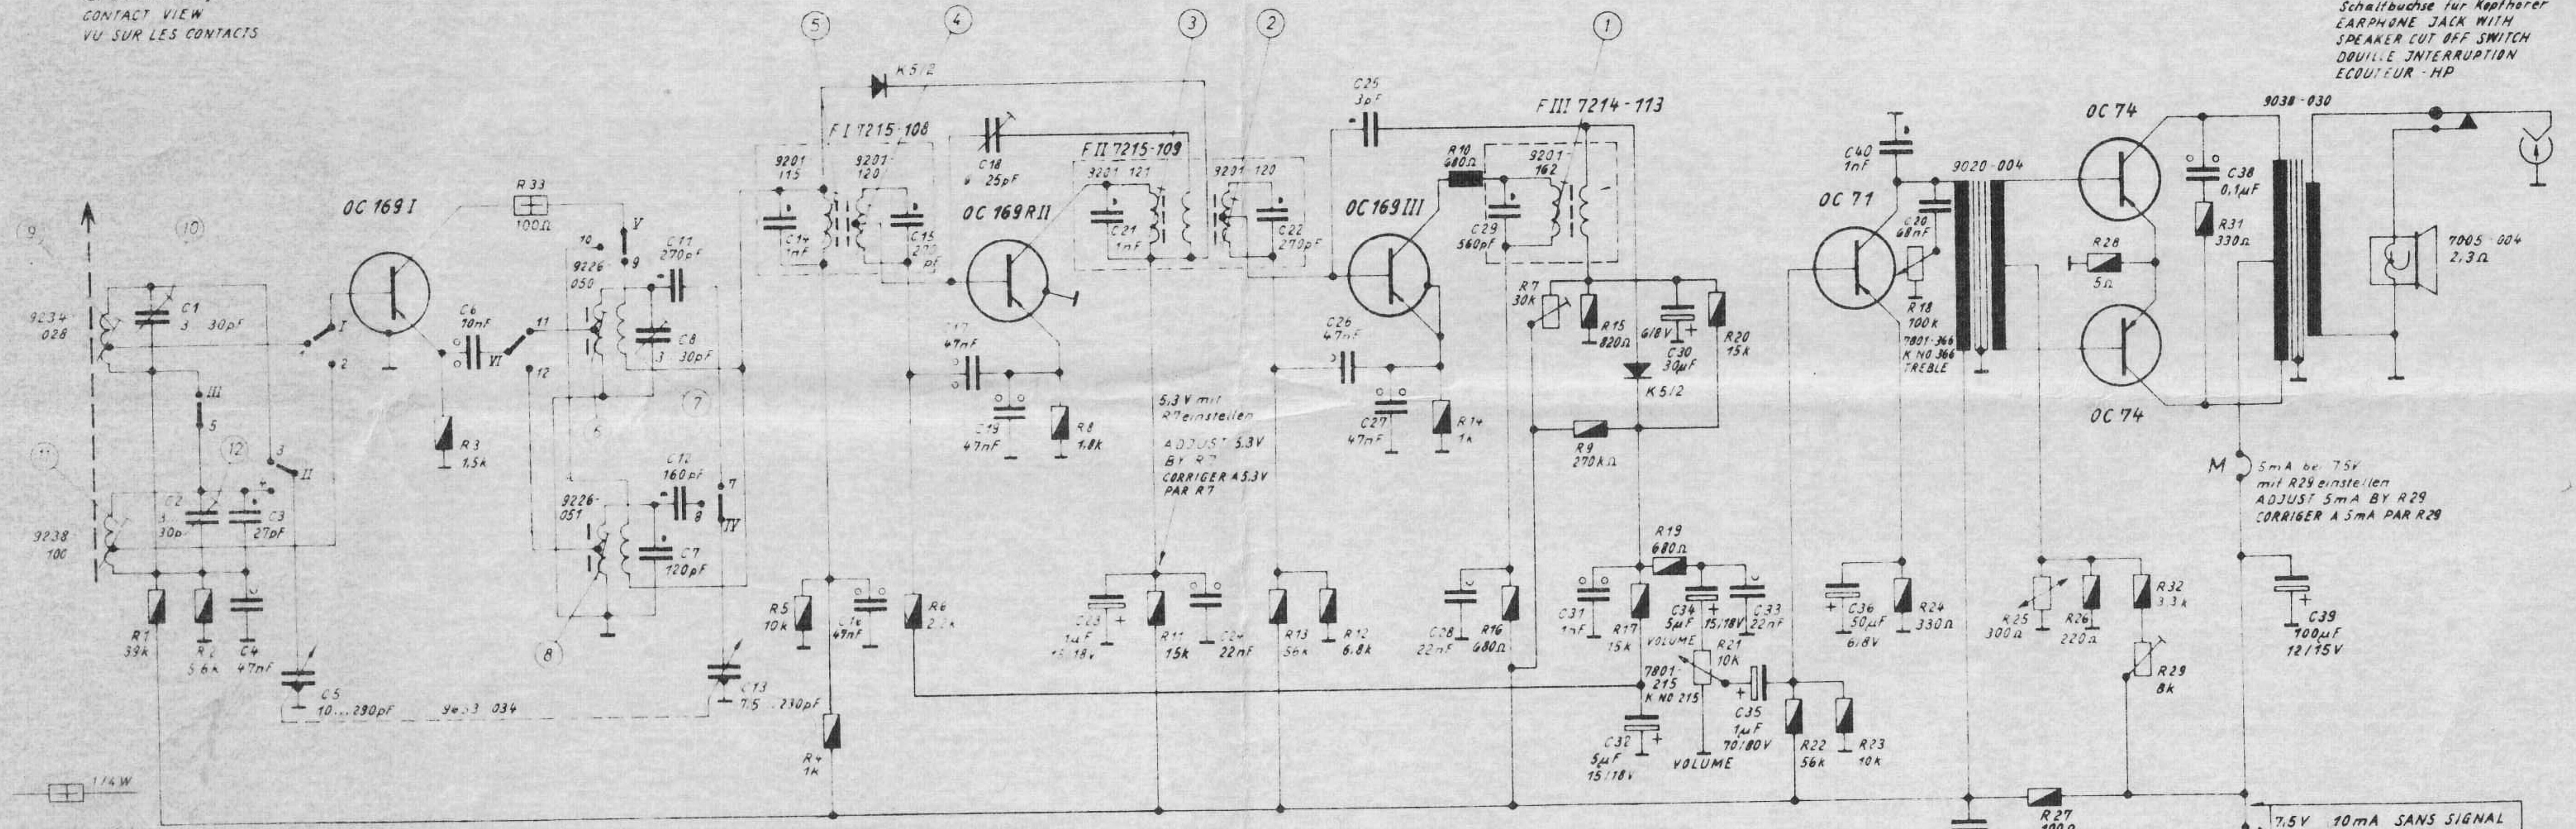

Anderungen vorbehalten

ALTERATIONS RESERVED

MODIFICATIONS RÉSERVÉES

C	2, 1	4, 3	5	6	7, 8	11, 12	13	14	16	15, 17	18, 19	23, 21	24	22	26	25, 27	28	29	31	32	30, 34	35, 33	36, 40	20, 37	38	39										
R	1, 2			3	33			5	4	6		8	11		13	12			14, 10	16	7, 9	15	17	19	21	20, 22	23	24	18	25	27	26	28	29	32	31

Music-Boy Transistor 200