


# JVC

## SERVICE MANUAL

### CD RECEIVER

### KD-S621

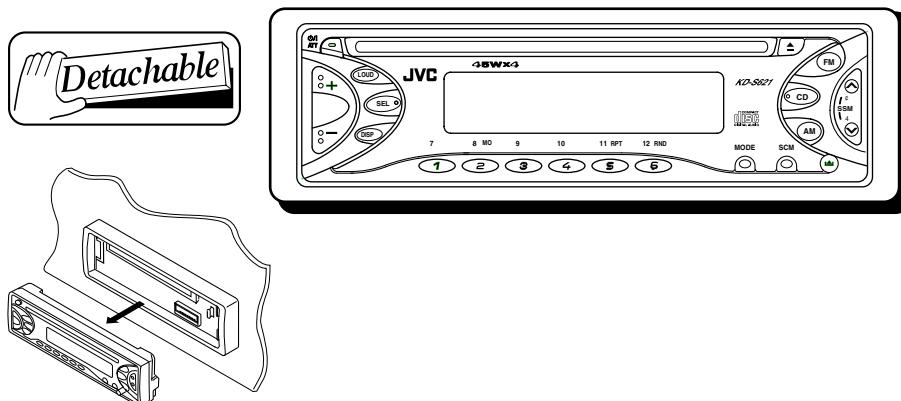

**COMPACT  
disc**  
DIGITAL AUDIO

#### Area Suffix

E ----- Continental Europe  
EX ----- Central Europe

## Contents

|                                     |      |                                   |         |
|-------------------------------------|------|-----------------------------------|---------|
| Safety precaution .....             | 1-2  | Flow of functional                |         |
| Preventing static electricity ..... | 1-3  | operation unit TOC read .....     | 1-12    |
| Disassembly method .....            | 1-4  | Maintenance of laser pickup ..... | 1-14    |
| Adjustment method .....             | 1-11 | Replacement of laser pickup ..... | 1-14    |
|                                     |      | Description of major ICs .....    | 1-15~26 |

# Preventing static electricity

## 1.Grounding to prevent damage by static electricity

Electrostatic discharge (ESD), which occurs when static electricity stored in the body, fabric, etc. is discharged, can destroy the laser diode in the traverse unit (optical pickup). Take care to prevent this when performing repairs.

## 2.About the earth processing for the destruction prevention by static electricity


Static electricity in the work area can destroy the optical pickup (laser diode) in devices such as CD players. Be careful to use proper grounding in the area where repairs are being performed.

### 2-1 Ground the workbench

Ground the workbench by laying conductive material (such as a conductive sheet) or an iron plate over it before placing the traverse unit (optical pickup) on it.

### 2-2 Ground yourself

Use an anti-static wrist strap to release any static electricity built up in your body.

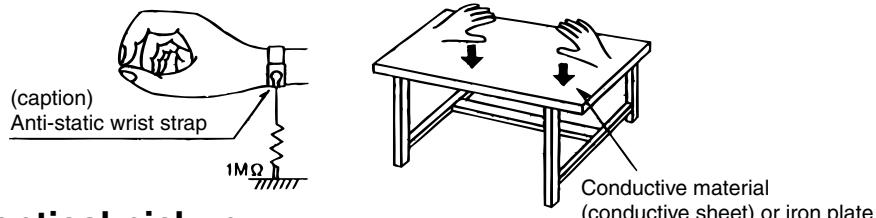

## 3. Handling the optical pickup

1. In order to maintain quality during transport and before installation, both sides of the laser diode on the replacement optical pickup are shorted. After replacement, return the shorted parts to their original condition. (Refer to the text.)
2. Do not use a tester to check the condition of the laser diode in the optical pickup. The tester's internal power source can easily destroy the laser diode.


## 4.Handling the traverse unit (optical pickup)

1. Do not subject the traverse unit (optical pickup) to strong shocks, as it is a sensitive, complex unit.
2. Cut off the shorted part of the flexible cable using nippers, etc. after replacing the optical pickup. For specific details, refer to the replacement procedure in the text. Remove the anti-static pin when replacing the traverse unit. Be careful not to take too long a time when attaching it to the connector.
3. Handle the flexible cable carefully as it may break when subjected to strong force.
4. It is not possible to adjust the semi-fixed resistor that adjusts the laser power. Do not turn it

## Attention when traverse unit is decomposed

\*Please refer to "Disassembly method" in the text for pick-up and how to detach the substrate.

- 1.Solder is put up before the card wire is removed from connector on the CD substrate as shown in Figure.  
(When the wire is removed without putting up solder, the CD pick-up assembly might destroy.)
- 2.Please remove solder after connecting the card wire with when you install picking up in the substrate.

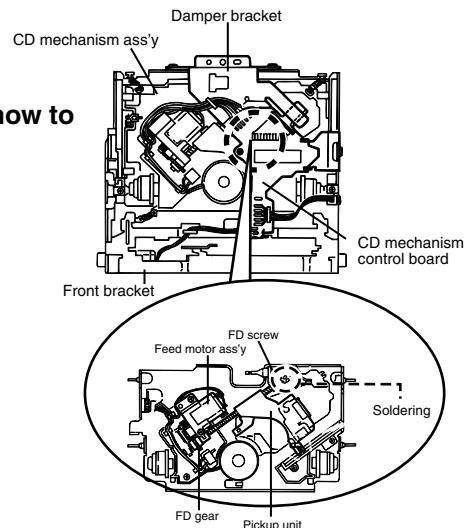

## Disassembly method

### <Main body>

#### ■ Removing the front panel assembly (See Fig.1)

1. Press the eject button in the lower right part of the front panel. Remove the front panel assembly from the body.

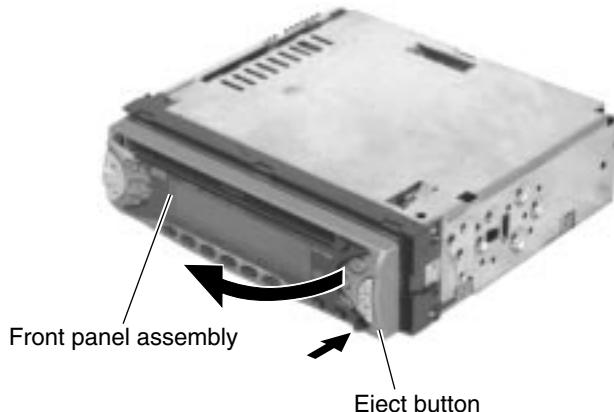


Fig.1

#### ■ Removing the front chassis assembly (See Fig.2 and 3)

- Prior to performing the following procedure, remove the front panel assembly.

1. Release the four joint tabs **a** on both sides of the front chassis assembly and remove the front chassis assembly toward the front.

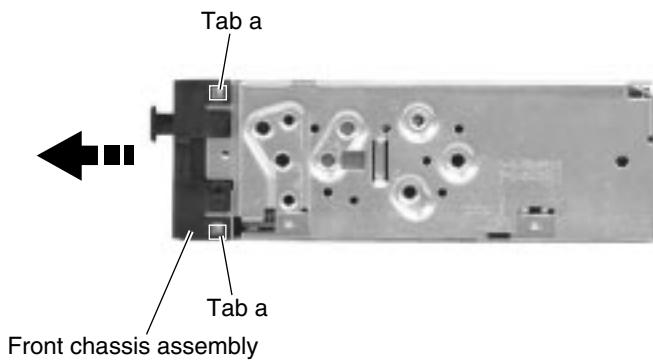


Fig.2

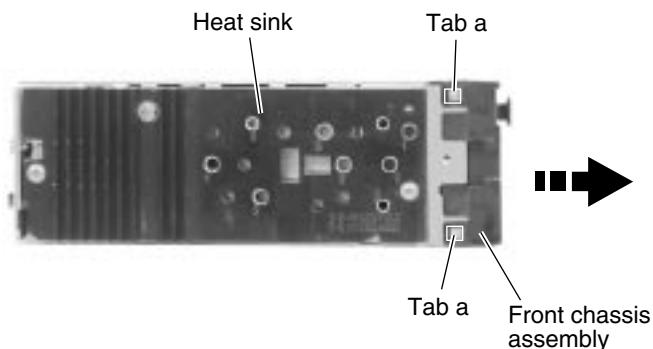


Fig.3

## ■Removing the heat sink (See Fig.4)

1. Remove the three screws **A** on the left side of the body.

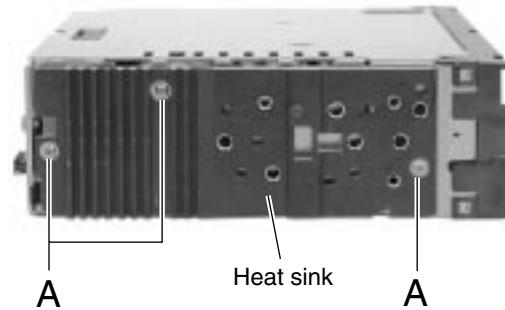


Fig.4

## ■Removing the bottom cover (See Fig.5 and 6)

- Prior to performing the following procedure, remove the front panel assembly, the front chassis assembly and the heat sink.

1. Turn over the body and unjoint the five joints **b** with the bottom cover and the body using a screwdriver.

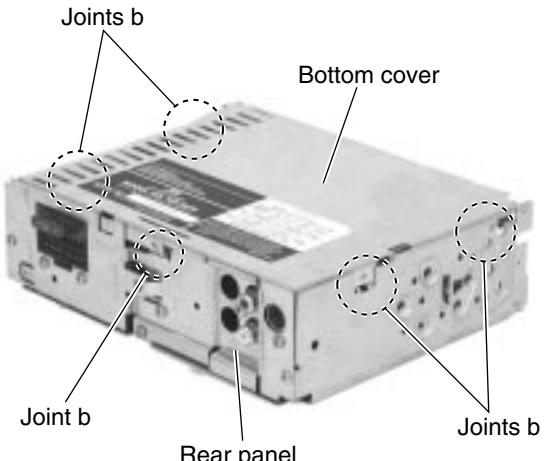


Fig.5

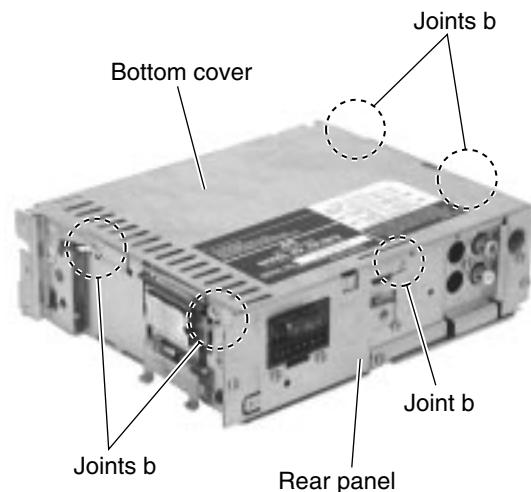


Fig.6

## ■ Removing the main board (See Fig.7 and 8)

- Prior to performing the following procedure, remove the front panel assembly, the front chassis assembly, the heat sink and the bottom cover.

1. Remove the screw **B**, the four screws **C** and the three screws **D** attaching the rear bracket on the back of the body. Remove the rear panel.
2. Remove the two screws **E** attaching the main board on the bottom of the body. Disconnect connector CN501 on the main board in the direction of the arrow.

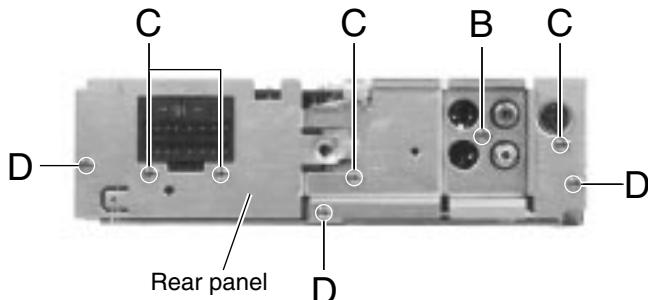


Fig.7

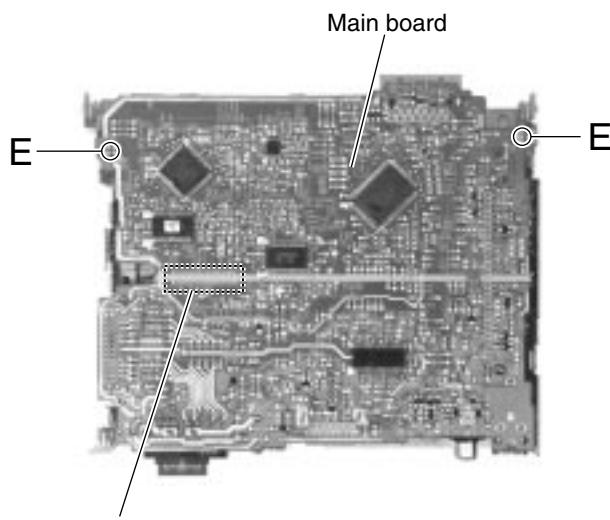


Fig.8

## ■ Removing the CD mechanism section (See Fig.9)

- Prior to performing the following procedure, remove the front panel assembly, the front chassis assembly, the heat sink, the bottom cover and the main board.

1. Remove the three screws **F** attaching the cassette mechanism section on the back of the top chassis.

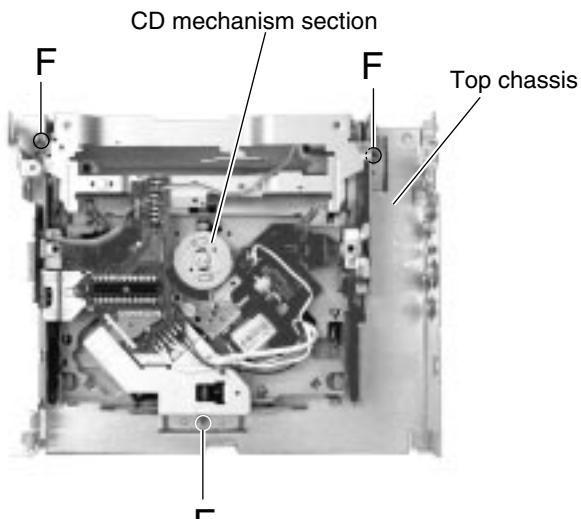


Fig.9

## ■Removing the control switch board (See Fig.10 to 12)

- Prior to performing the following procedure, remove the front panel assembly.

- Remove the four screws **G** attaching the rear cover on the back of the front panel assembly.
- Unjoint the nine joints **c** with the front panel and the rear cover.
- Remove the control switch board on the back of the front panel.

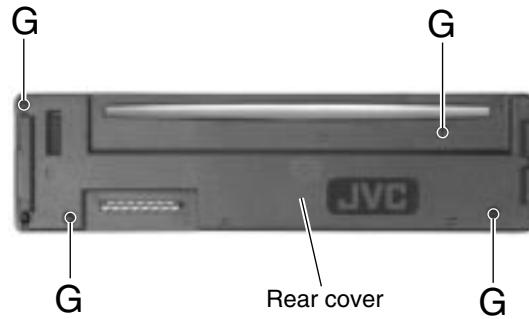


Fig.10

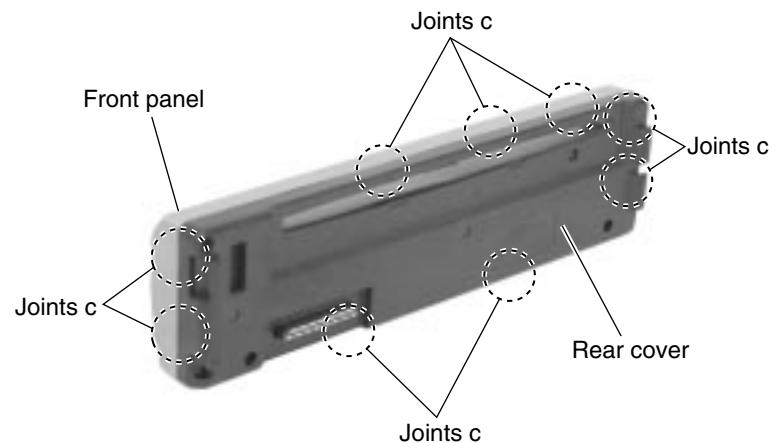


Fig.11

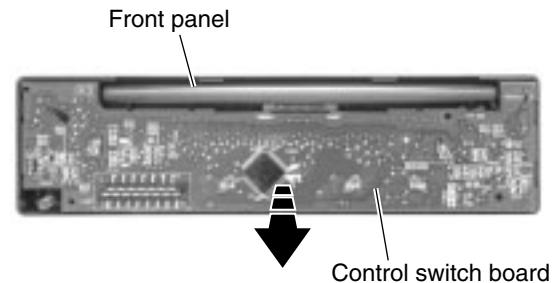


Fig.12

## ■ Removing the CD mechanism control board (See Fig.1 and 2)

Unsolder the part f and g on the CD mechanism control board.

Remove the stator fixing the CD mechanism control board and the damper bracket (To remove the stator smoothly, pick up the center part).

Remove the screw F attaching the CD mechanism control board.

Remove the CD mechanism control board in the direction of the arrow while releasing it from the two damper bracket slots i and the front bracket slot j.

Disconnect the flexible wire from connector on the pickup unit.

**ATTENTION:** Turn the FD gear in the direction of the arrow to move the entire pickup unit to the appropriate position where the flexible wire of the CD mechanism unit can be disconnected easily (Refer to Fig.2).

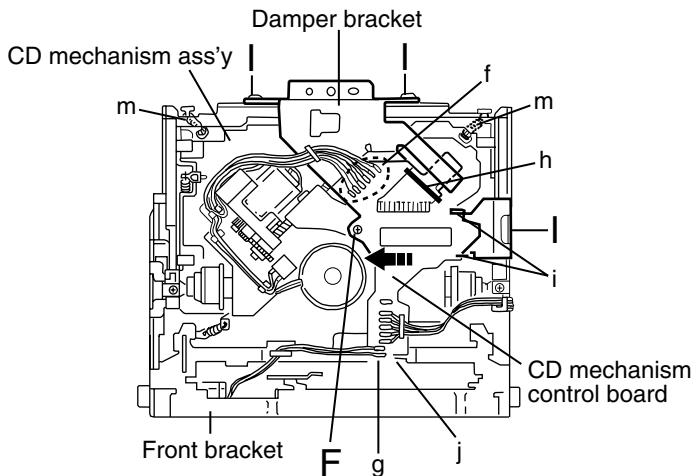


Fig.1

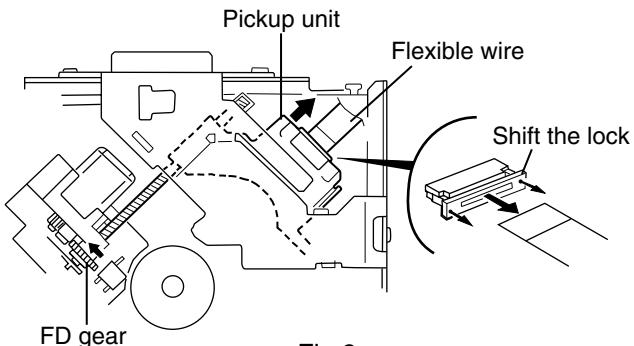


Fig.2

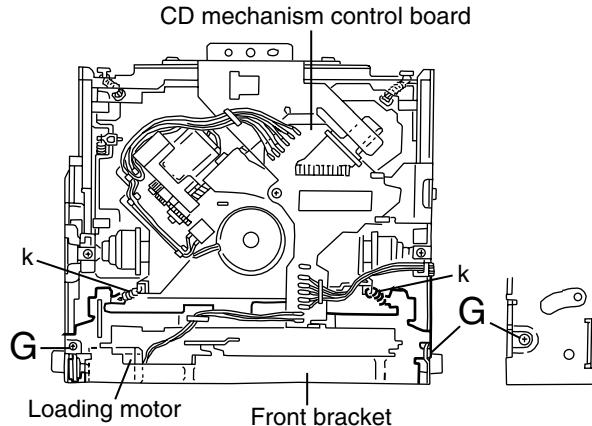


Fig.3

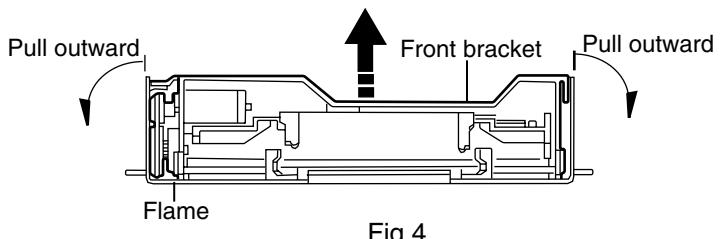


Fig.4

## ■ Removing the loading motor (See Fig.3 to 5)

- Prior to performing the following procedure, remove the CD mechanism control board.

- Remove the two springs k attaching the CD mechanism ass'y and the front bracket.
- Remove the two screws G and the front bracket while pulling the flame outward.
- Remove the belt and the screw H from the loading motor.

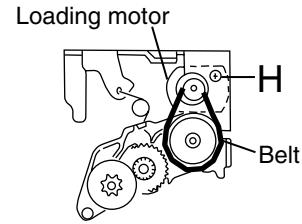


Fig.5

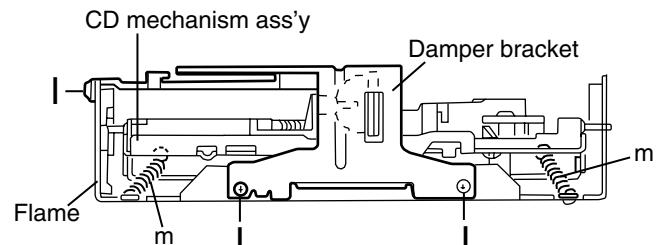


Fig.6

## ■ Removing the CD mechanism ass'y (See Fig.1, 6 to 9)

- Prior to performing the following procedure, remove the CD mechanism control PWB and the front bracket (loading motor).

- Remove the three screws I and the damper bracket.
- Raise the both sides fix arms and move the fix plates in the direction of the arrow to place the four shafts I as shown in Fig.8 and 9.
- Remove the CD mechanism ass'y and the two springs m attaching the flame.
- Remove the two screws J and both sides rear damper brackets from the dampers. Detach the CD mechanism ass'y from the left side to the right side.

**ATTENTION:** The CD mechanism ass'y can be removed if only the rear damper bracket on the left side is removed.

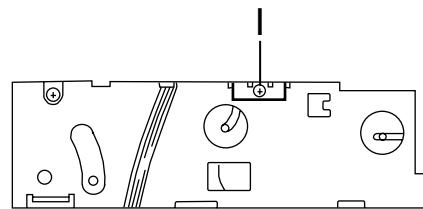


Fig.7

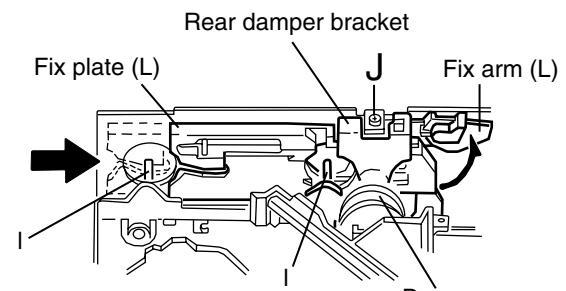


Fig.8

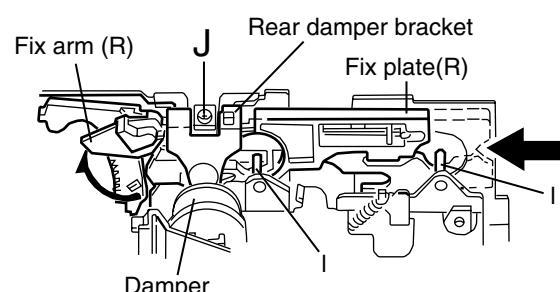


Fig.9

## ■ Removing the feed motor ass'y (See Fig.10)

- Prior to performing the following procedure, remove the CD mechanism control board, the front bracket (loading motor) and the CD mechanism ass'y.

- Remove the two screws K and the feed motor ass'y.

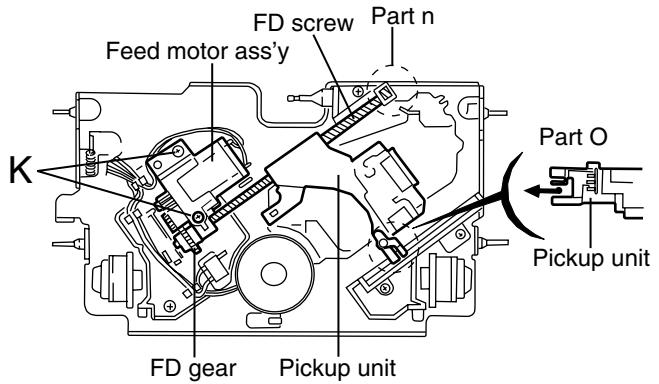


Fig.10

## ■ Removing the pickup unit (See Fig.10 and 11)

- \*Prior to performing the following procedure, remove the CD mechanism control board, the front bracket (loading motor), the CD mechanism ass'y and the feed motor ass'y.

- Detach the FD gear part of the pickup unit upward. Then remove the pickup unit while pulling out the part n of the FD screw.

**ATTENTION:** When reattaching the pickup unit, reattach the part o of the pickup unit, then the part n of the FD screw.

- Remove the screw L attaching the nut push spring plate and the pickup mount nut from the pickup unit. Pull out the FD screw.

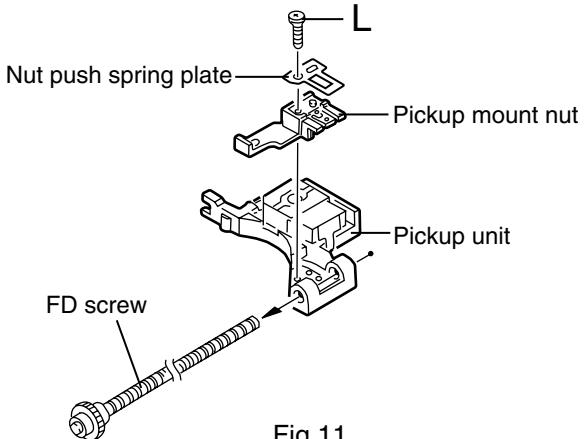


Fig.11

## ■ Removing the spindle motor (See Fig.12 and 13)

- Prior to performing the following procedure, remove the CD mechanism control board, the front bracket (loading motor), the CD mechanism ass'y and the feed motor ass'y.

- Turn up the CD mechanism ass'y and remove the two springs p on both sides of the clamper arms. Open the clamper arm upward.

- Turn the turn table, and remove the two screws M and the spindle motor.

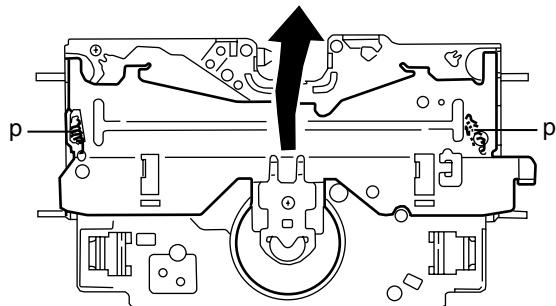


Fig.12

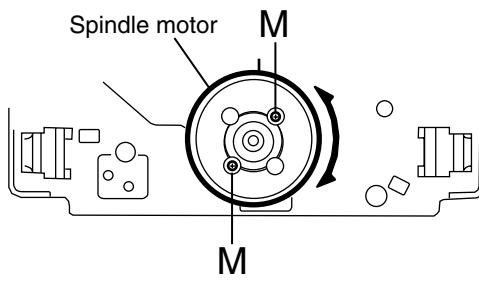


Fig.13

# Adjustment method

## ■ Test instruments required for adjustment

1. Digital oscilloscope (100MHz)
2. AM Standard signal generator
3. FM Standard signal generator
4. Stereo modulator
5. Electric voltmeter
6. Digital tester
7. Tracking offset meter
8. Test Disc JVC :CTS-1000
9. Extension cable for check  
EXTGS004-26P×1

## ■ Standard volume position

Balance and Bass & Treble volume : Indication "0"  
Loudness : OFF

## ■ Frequency Band

FM 87.5MHz ~ 108.0MHz  
MW 522kHz ~ 1620 kHz  
LW 144kHz ~ 279kHz


## ■ Dummy load

Exclusive dummy load should be used for AM, and FM. For FM dummy load, there is a loss of 6dB between SSG output and antenna input. The loss of 6dB need not be considered since direct reading of figures are applied in this working standard.


## ■ Standard measuring conditions

Power supply voltage DC14.4V(10.5~16V)  
Load impedance 4 Ω (2 Speakers connection)  
Line out load impedance 20k Ω  
Output Level Line out 2.0V (Vol. MAX)


## ■ How to connect the extension cable for adjusting

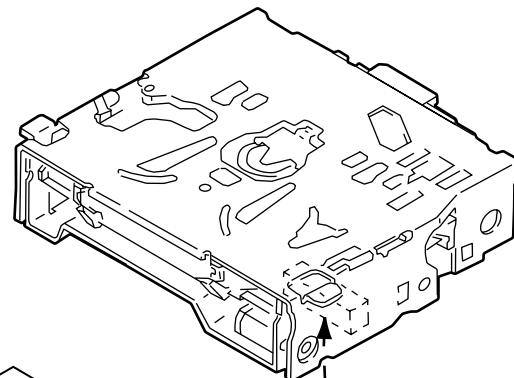


\* The cardboard is cut in a suitable size.  
uses for the insulation stand of mechanism.

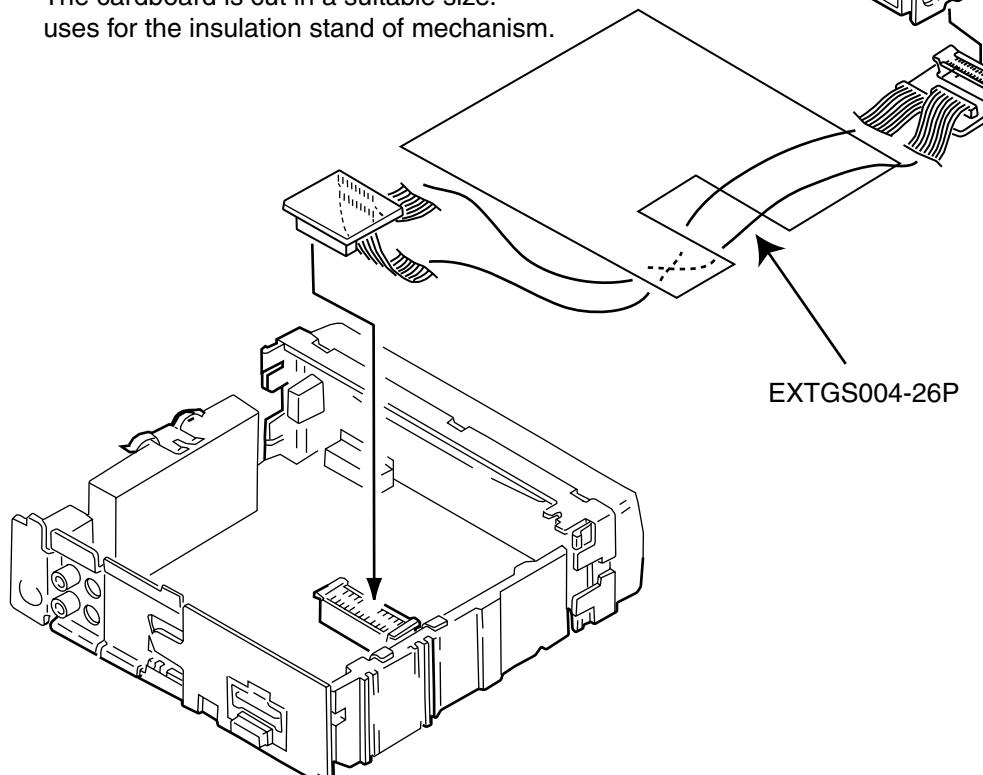


## Flow of functional operation until TOC read

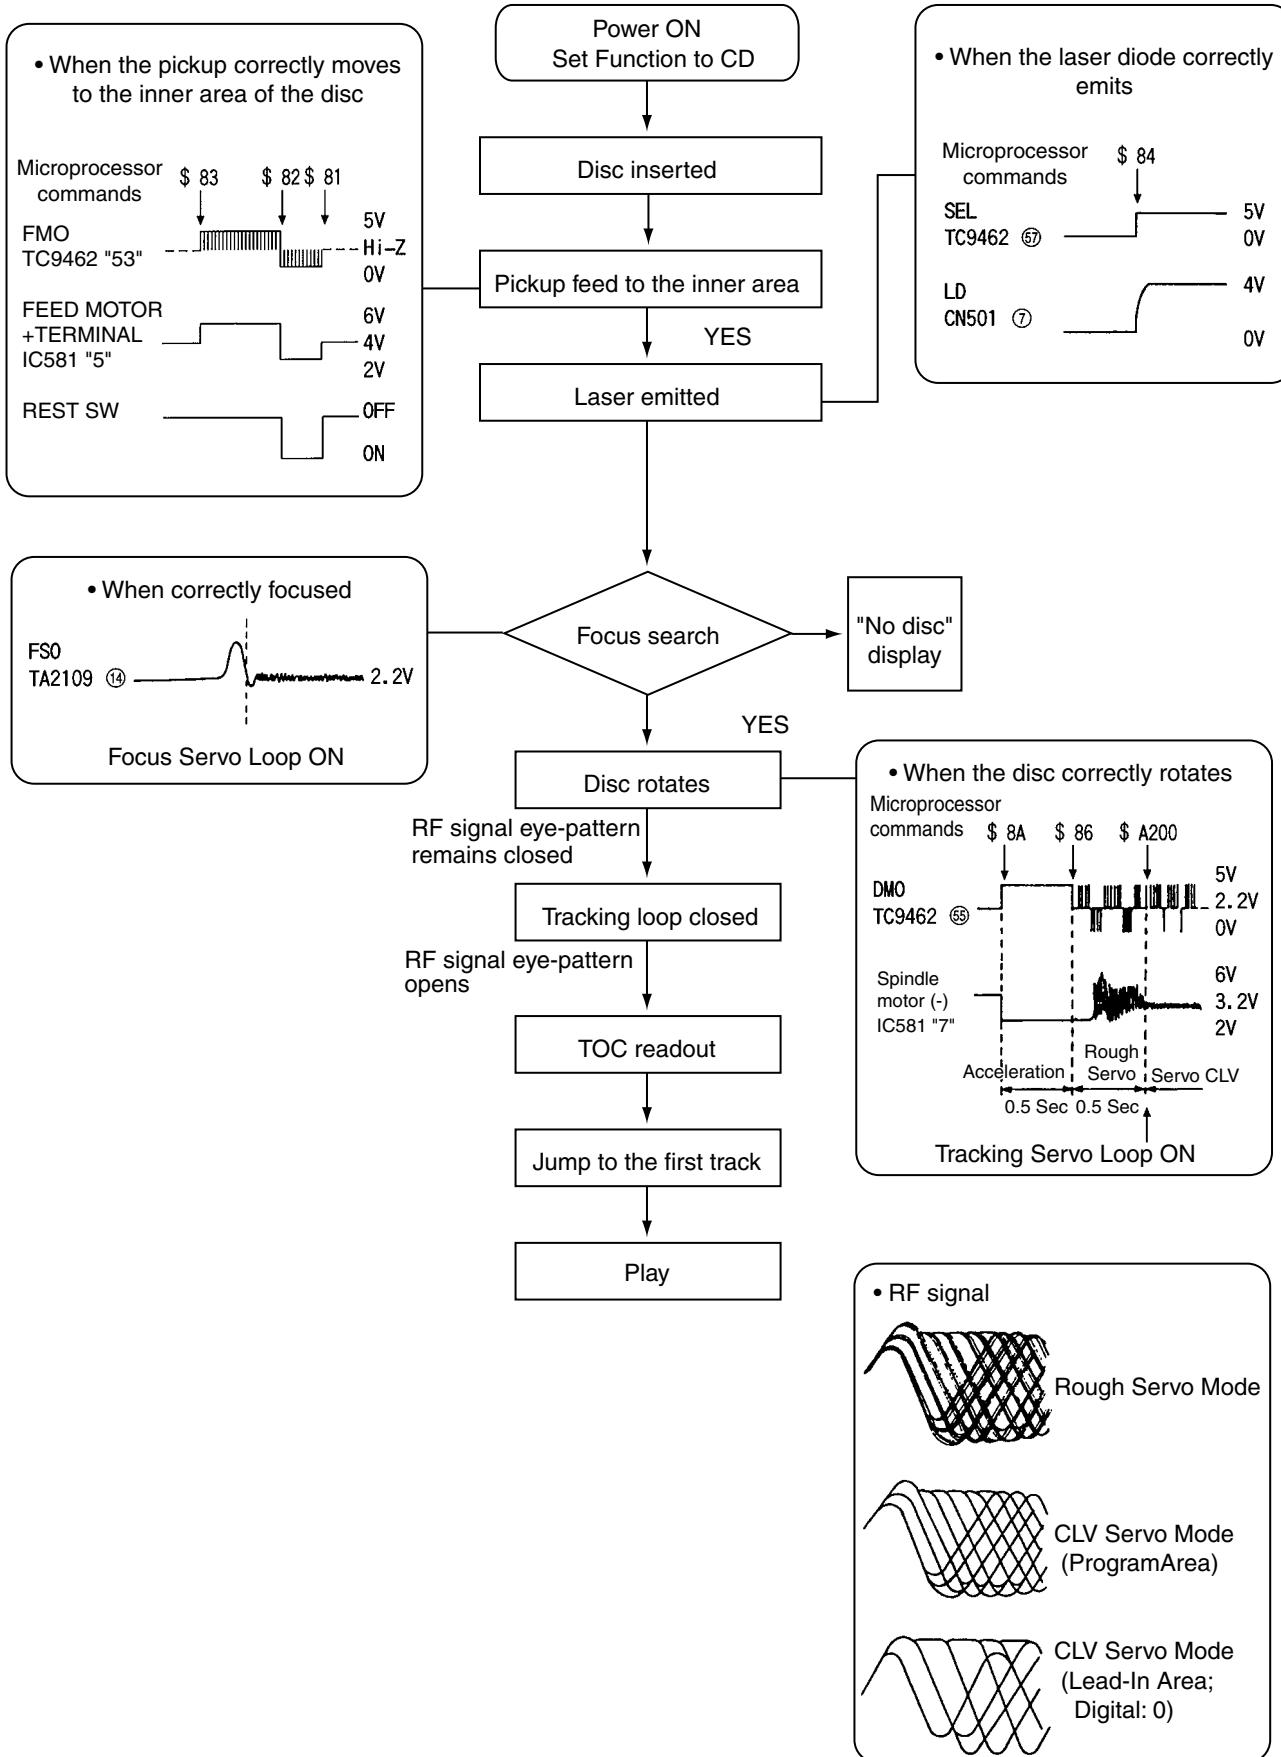


## ■ Feed Section

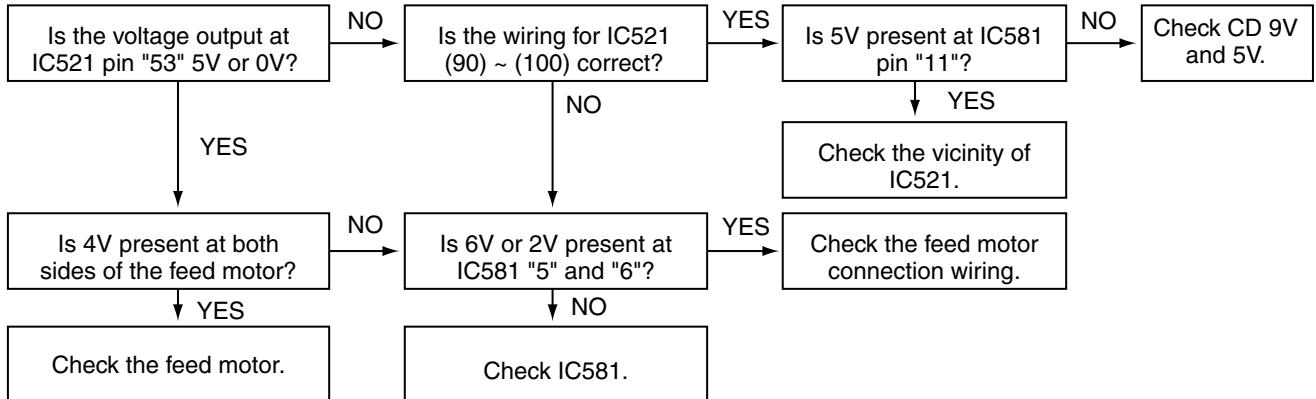


## ■ Focus Section

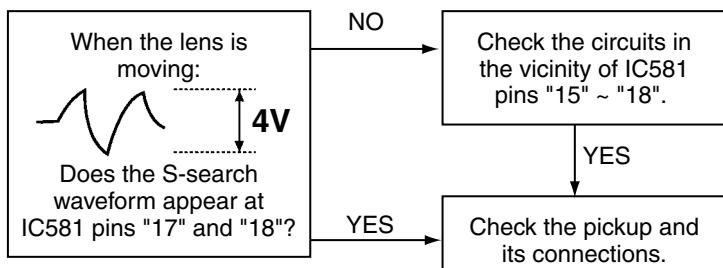

## ■ Spindle Section

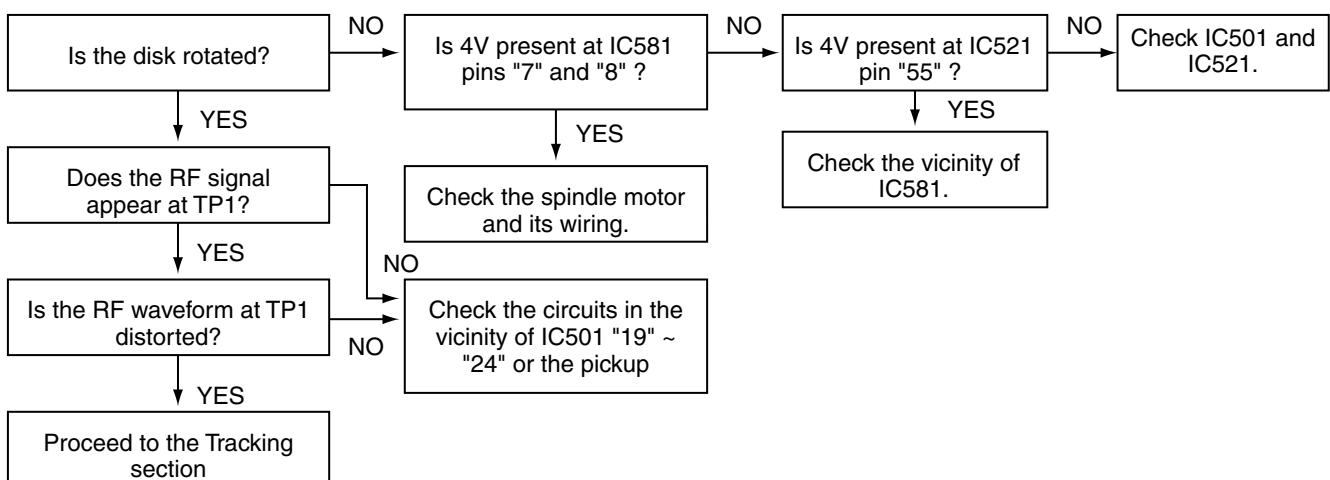

## ■ Tracking Section

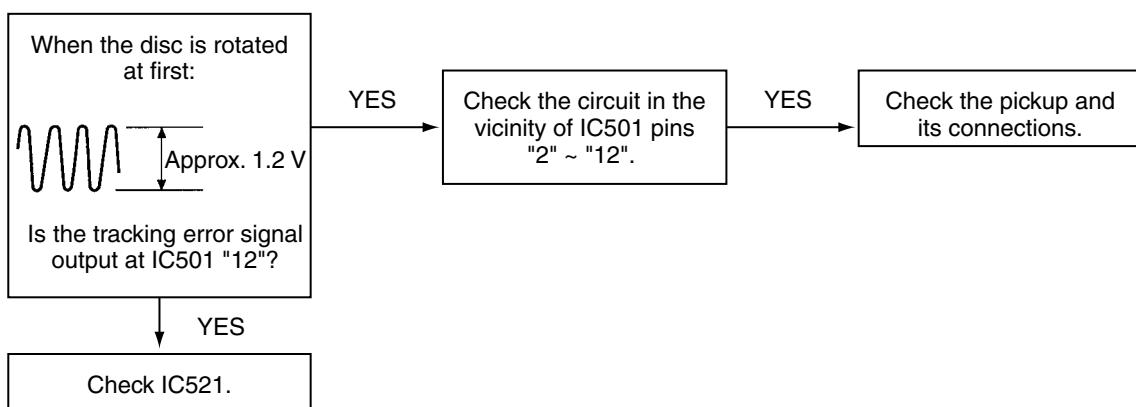

## Maintenance of laser pickup


(1) Cleaning the pick up lens

Before you replace the pick up, please try to clean the lens with a alcohol soaked cotton swab.

(2) Life of the laser diode

When the life of the laser diode has expired, the following symptoms will appear.

- (1) The level of RF output (EFM output:amplitude of eye pattern) will be low.

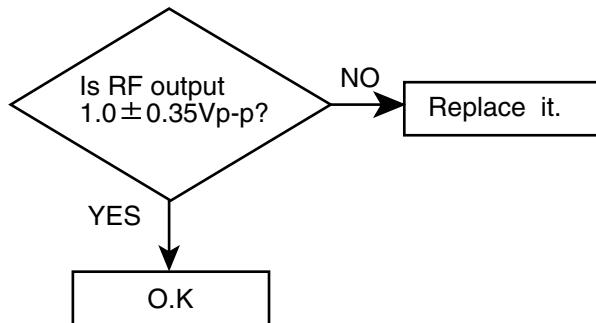

## Replacement of laser pickup

(3) Semi-fixed resistor on the APC PC board

The semi-fixed resistor on the APC printed circuit board which is attached to the pickup is used to adjust the laser power. Since this adjustment should be performed to match the characteristics of the whole optical block, do not touch the semi-fixed resistor.

If the laser power is lower than the specified value, the laser diode is almost worn out, and the laser pickup should be replaced.

If the semi-fixed resistor is adjusted while the pickup is functioning normally, the laser pickup may be damaged due to excessive current.

Turn off the power switch and, disconnect the power cord from the ac outlet.

Replace the pickup with a normal one.(Refer to "Pickup Removal" on the previous page)

Plug the power cord in, and turn the power on. At this time, check that the laser emits for about 3seconds and the objective lens moves up and down.  
Note: Do not observe the laser beam directly.

Play a disc.


Check the eye-pattern at TP1.

Finish.


# Description of major ICs

## ■ HA13164A(IC901) : Regulator

### 1. Pin layout

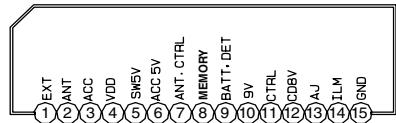

### 2. Block diagram

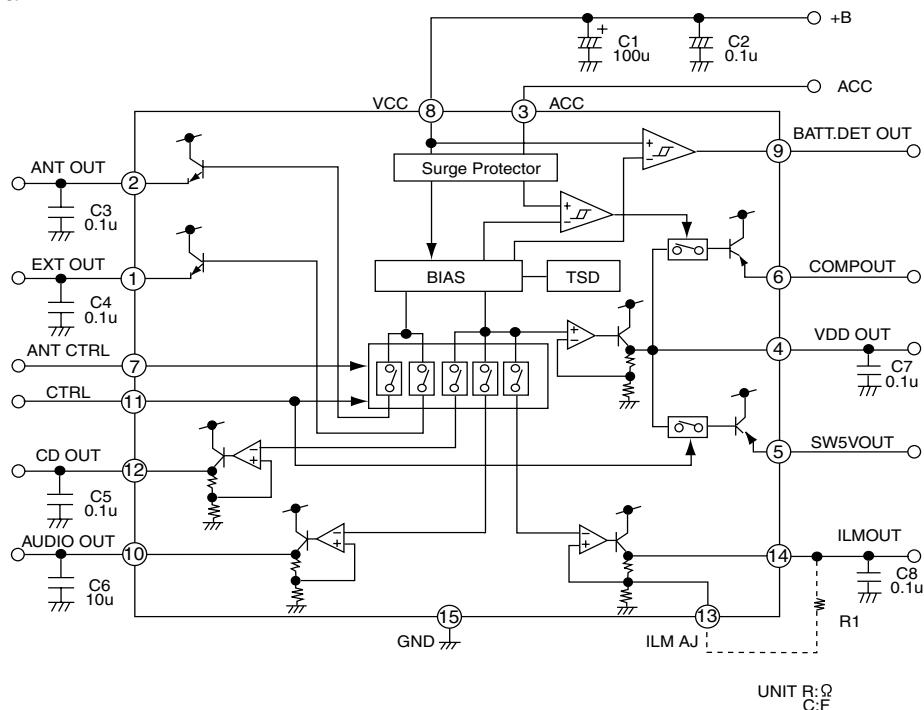

### 3. Pin function


| Pin No. | Symbol   | Function   |
|---------|----------|--|
| 1       | EXT      | Output voltage is VCC-1 V when M or H level applied to CTRL pin.                 |
| 2       | ANT      | Output voltage is VCC-1 V when M or H level to CTRL pin and H level to ANT-CTRL. |
| 3       | ACC      | Connected to ACC.  |
| 4       | VDD      | Regular 5.7V.  |
| 5       | SW5V     | Output voltage is 5V when M or H level applies to CTRL pin.                      |
| 6       | ACC5V    | Output for ACC detector.   |
| 7       | ANT CTRL | L:ANT output OFF , H:ANT output ON   |
| 8       | MEMORY   | Connected to VCC.  |
| 9       | BATT DET | Low battery detect.  |
| 10      | 9V       | Output voltage is 9V when M or H level applied to CTRL pin.                      |
| 11      | CTRL     | L:BIAS OFF, M:BIAS ON, H:CD ON   |
| 12      | CD8V     | Output voltage is 8V when H level applied to CTRL pin.                           |
| 13      | AJ       | Adjustment pin for ILM output voltage.   |
| 14      | ILMI     | Output voltage is 10V when M or H level applies to CTRL pin.                     |
| 15      | GND      | Connected to GND.  |

■ AN8806SB-W (IC501) : RF & Servo amp.

1. Pin layout

|            |    |    |        |
|------------|----|----|--------|
| PD         | 1  | 36 | PDAC   |
| LD         | 2  | 35 | PDBD   |
| LDON       | 3  | 34 | PDF    |
| LDP        | 4  | 33 | PDE    |
| VCC        | 5  | 32 | PDER   |
| RF-        | 6  | 31 | PDFR   |
| RF OUT     | 7  | 30 | TBAL   |
| RF IN      | 8  | 29 | FBAL   |
| C.AGC      | 9  | 28 | EF-    |
| ARF 10     |    | 27 | EF OUT |
| C.ENV 11   |    | 26 | TE-    |
| C.EA 12    |    | 25 | TE OUT |
| CS BDO 13  |    | 24 | CROSS  |
| BDO 14     |    | 23 | TE BPF |
| CS BRT 15  |    | 22 | VDET   |
| OFTR 16    |    | 21 | LD OFF |
| /NRFDET 17 |    | 20 | VREF   |
| GND        | 18 | 19 | ENV    |

2. Block diagram

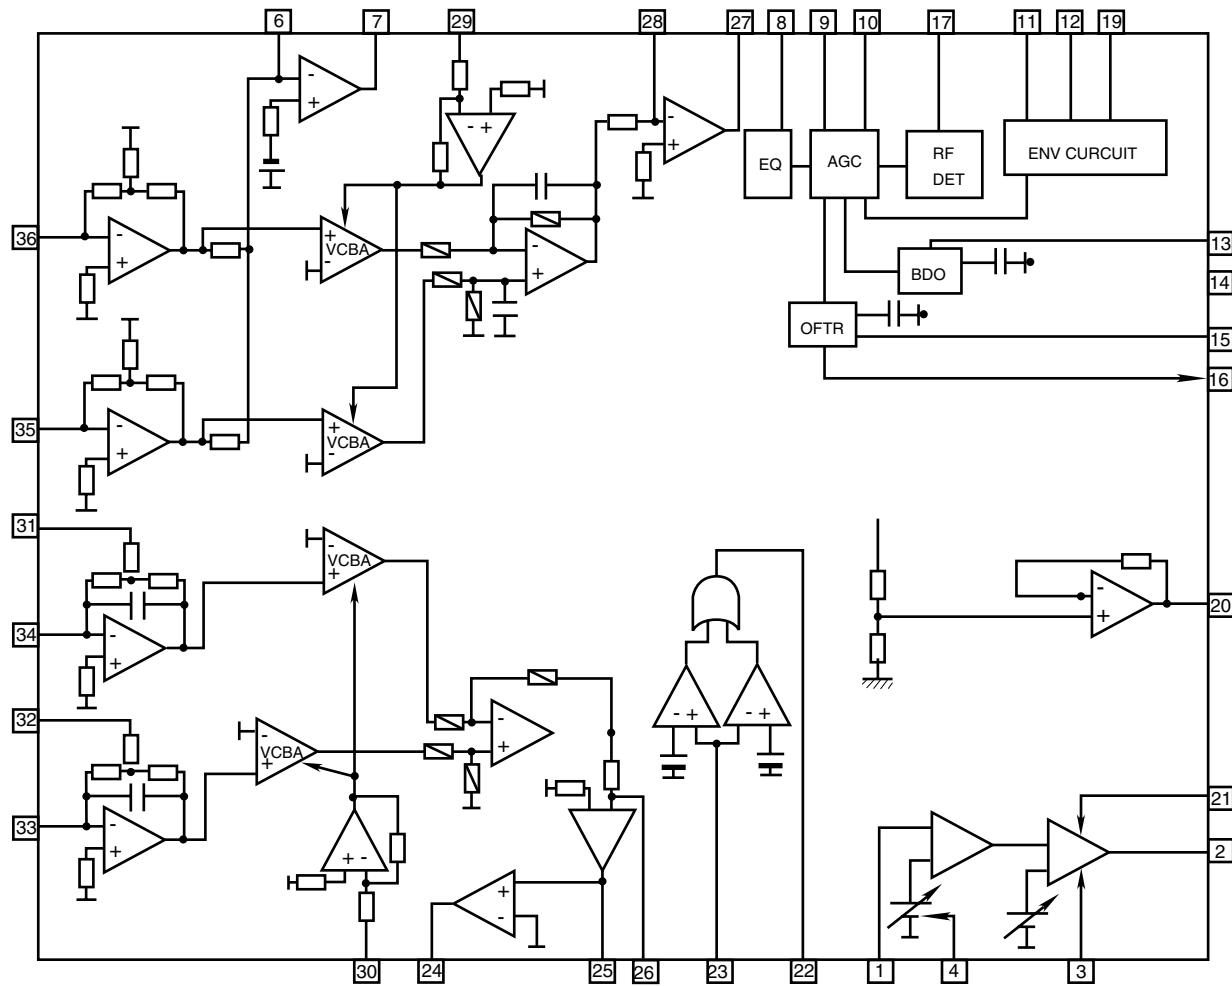


## 3. Pin function

AN8806SB-W


| Pin No. | Symbol  | I/O | Function  |
|---------|---------|-----|---|
| 1       | PD      | I   | APC amp . Input terminal  |
| 2       | LD      | O   | APC amp . Output terminal   |
| 3       | LD ON   | I   | LD ON/OFF control terminal  |
| 4       | LDP     | --  | Connect to GND  |
| 5       | VCC     | --  | Power supply  |
| 6       | RF-     | I   | RF amp . Reversing input terminal                                       |
| 7       | RF OUT  | O   | RFamp . Output terminal   |
| 8       | RF IN   | I   | AGC input terminal  |
| 9       | C.AGC   | I/O | AGC loop filter connection terminal                                     |
| 10      | ARF     | O   | ARF output terminal   |
| 11      | C.ENV   | I/O | RF detection capacity connection terminal                               |
| 12      | C.EA    | I/O | HPF-amp capacity connection terminal                                    |
| 13      | CS BDO  | I/O | Capacity connection terminal for RF discernment side envelope detection |
| 14      | BDO     | O   | BDO output terminal   |
| 15      | CS BRT  | I/O | Capacity connection terminal for RF discernment side envelope detection |
| 16      | OFTR    | O   | OFTR output terminal  |
| 17      | /NRFDET | O   | RFDET output terminal   |
| 18      | GND     | --  | Connect to GND  |
| 19      | ENV     | O   | 3TENV output terminal   |
| 20      | VREF    | O   | VREF output terminal  |
| 21      | LD OFF  | --  | APC OFF control terminal  |
| 22      | VDET    | O   | VDET output terminal  |
| 23      | TE BPF  | I   | VDET input terminal   |
| 24      | CROSS   | O   | CROSS output terminal   |
| 25      | TE OUT  | O   | TE amp . Output terminal  |
| 26      | TE-     | I   | FE amp . Reversing input terminal                                       |
| 27      | FE OUT  | O   | FE amp . output terminal  |
| 28      | FE-     | I   | FE amp . Reversing input terminal                                       |
| 29      | FBAL    | I   | F.BAL control terminal  |
| 30      | TBAL    | I   | T.BAL control terminal  |
| 31      | PDFR    | I/O | I-V amp conversion resistance adjustment terminal                       |
| 32      | PDER    | I/O | I-V amp conversion resistance adjustment terminal                       |
| 33      | PDF     | I   | I-V amp input terminal  |
| 34      | PDE     | I   | I-V amp input terminal  |
| 35      | PD BD   | I   | I-V amp input terminal  |
| 36      | PD AC   | I   | I-V amp input terminal  |

## ■ LA4743K(IC321):Power AMP

## 1. Block diagram

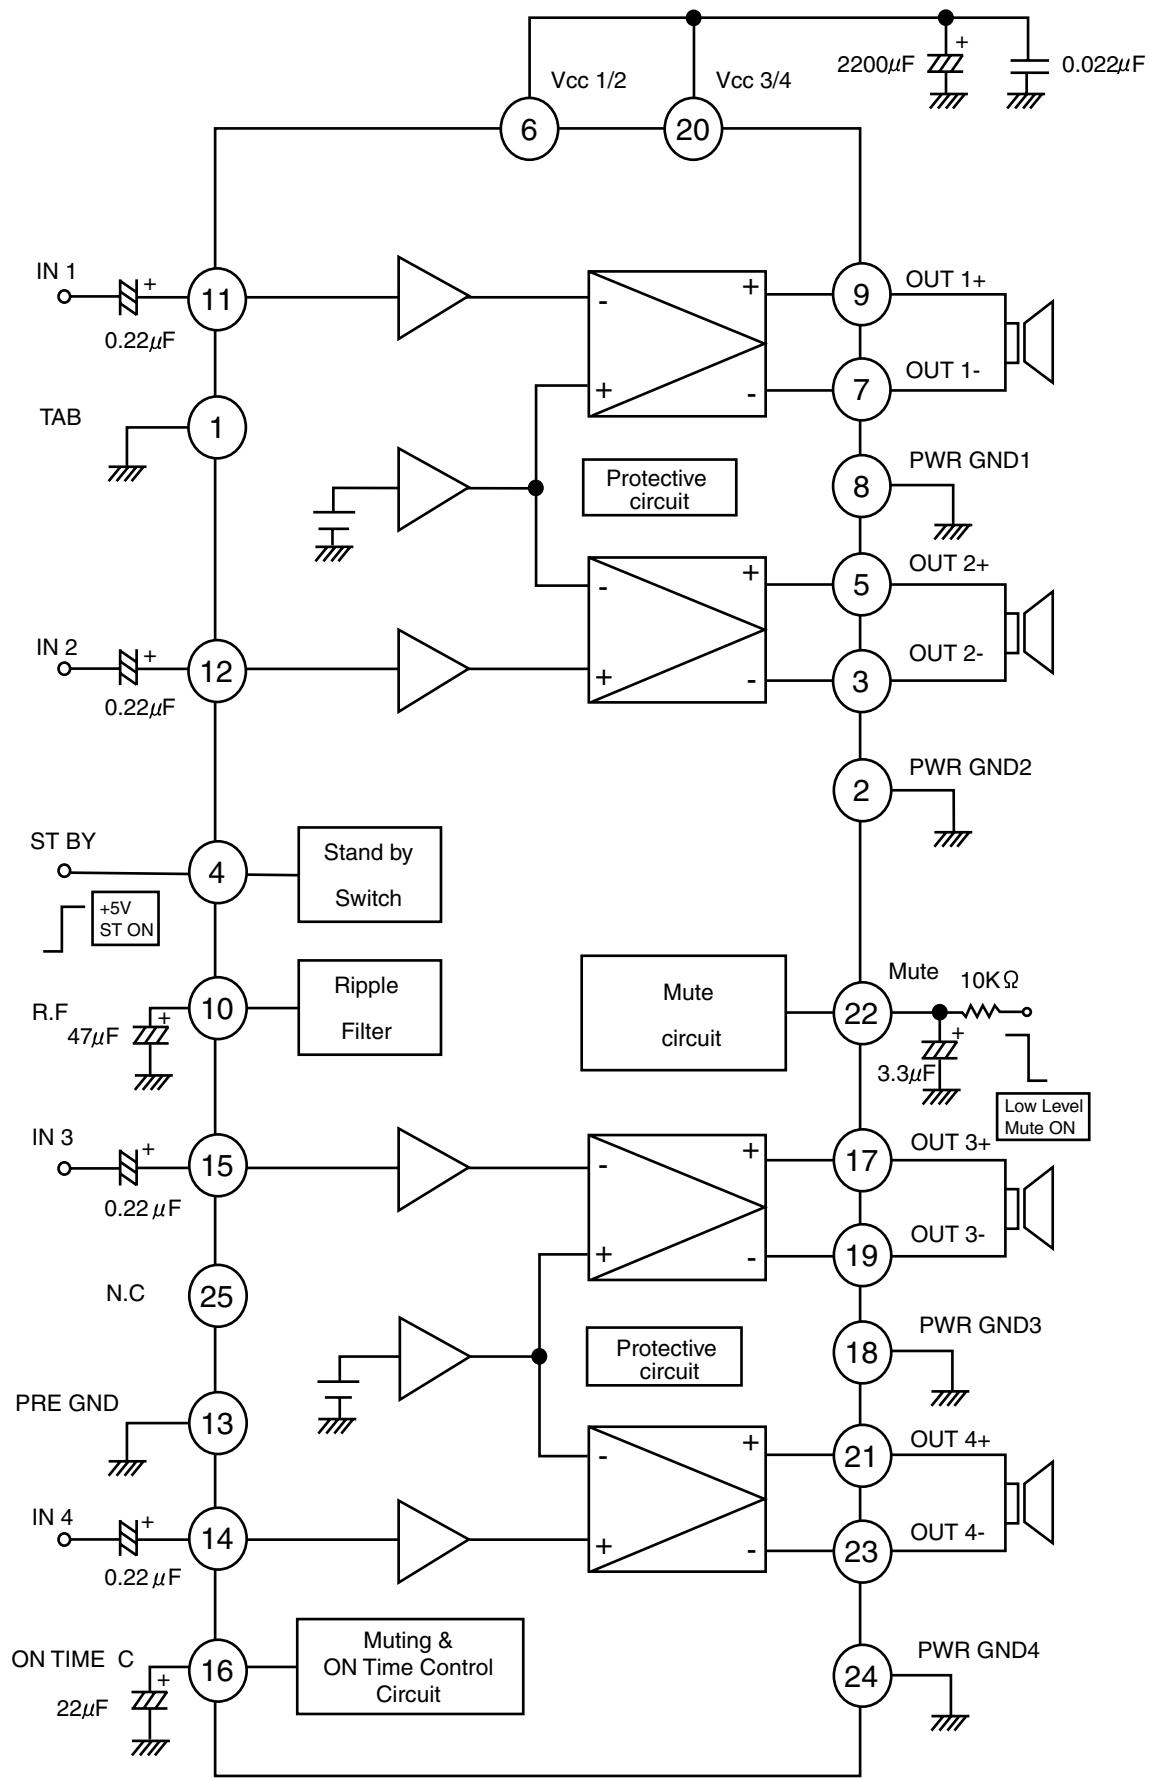

## 2.Terminal layout

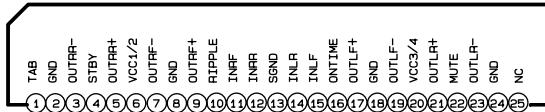


## 3.Pin function

LA4743K

| Pin No. | Symbol | Function                 |
|---------|--------|--------------------------|
| 1       | TAB    | Header of IC             |
| 2       | GND    | Power GND                |
| 3       | OUTRR- | Output(-) for front Rch  |
| 4       | STBY   | Stand by input           |
| 5       | OUTRR+ | Output (+) for front Rch |
| 6       | VCC1/2 | Power input              |
| 7       | OUTRF- | Output (-) for rear Rch  |
| 8       | GND    | Power GND                |
| 9       | OUTRF+ | Output (+) for rear Rch  |
| 10      | RIPPLE | Ripple filter            |
| 11      | INRF   | Rear Rch input           |
| 12      | INRR   | Front Rch input          |
| 13      | SGND   | Signal GND               |
| 14      | INLR   | Front Lch input          |
| 15      | INLF   | Rear Lch input           |
| 16      | ONTIME | Power on time control    |
| 17      | OUTLF+ | Output (+) for rear Lch  |
| 18      | GND    | Power GND                |
| 19      | OUTLF- | Output (-) for rear Lch  |
| 20      | VCC3/4 | Power input              |
| 21      | OUTLR+ | Output (+) for front     |
| 22      | MUTE   | Muting control input     |
| 23      | OUTLR- | Output (-) for front     |
| 24      | GND    | Power GND                |
| 25      | NC     | Non connection           |

## ■ LA6567H-X(IC541):CD DRIVE

## 1.Pin layout &amp; blockdiagram

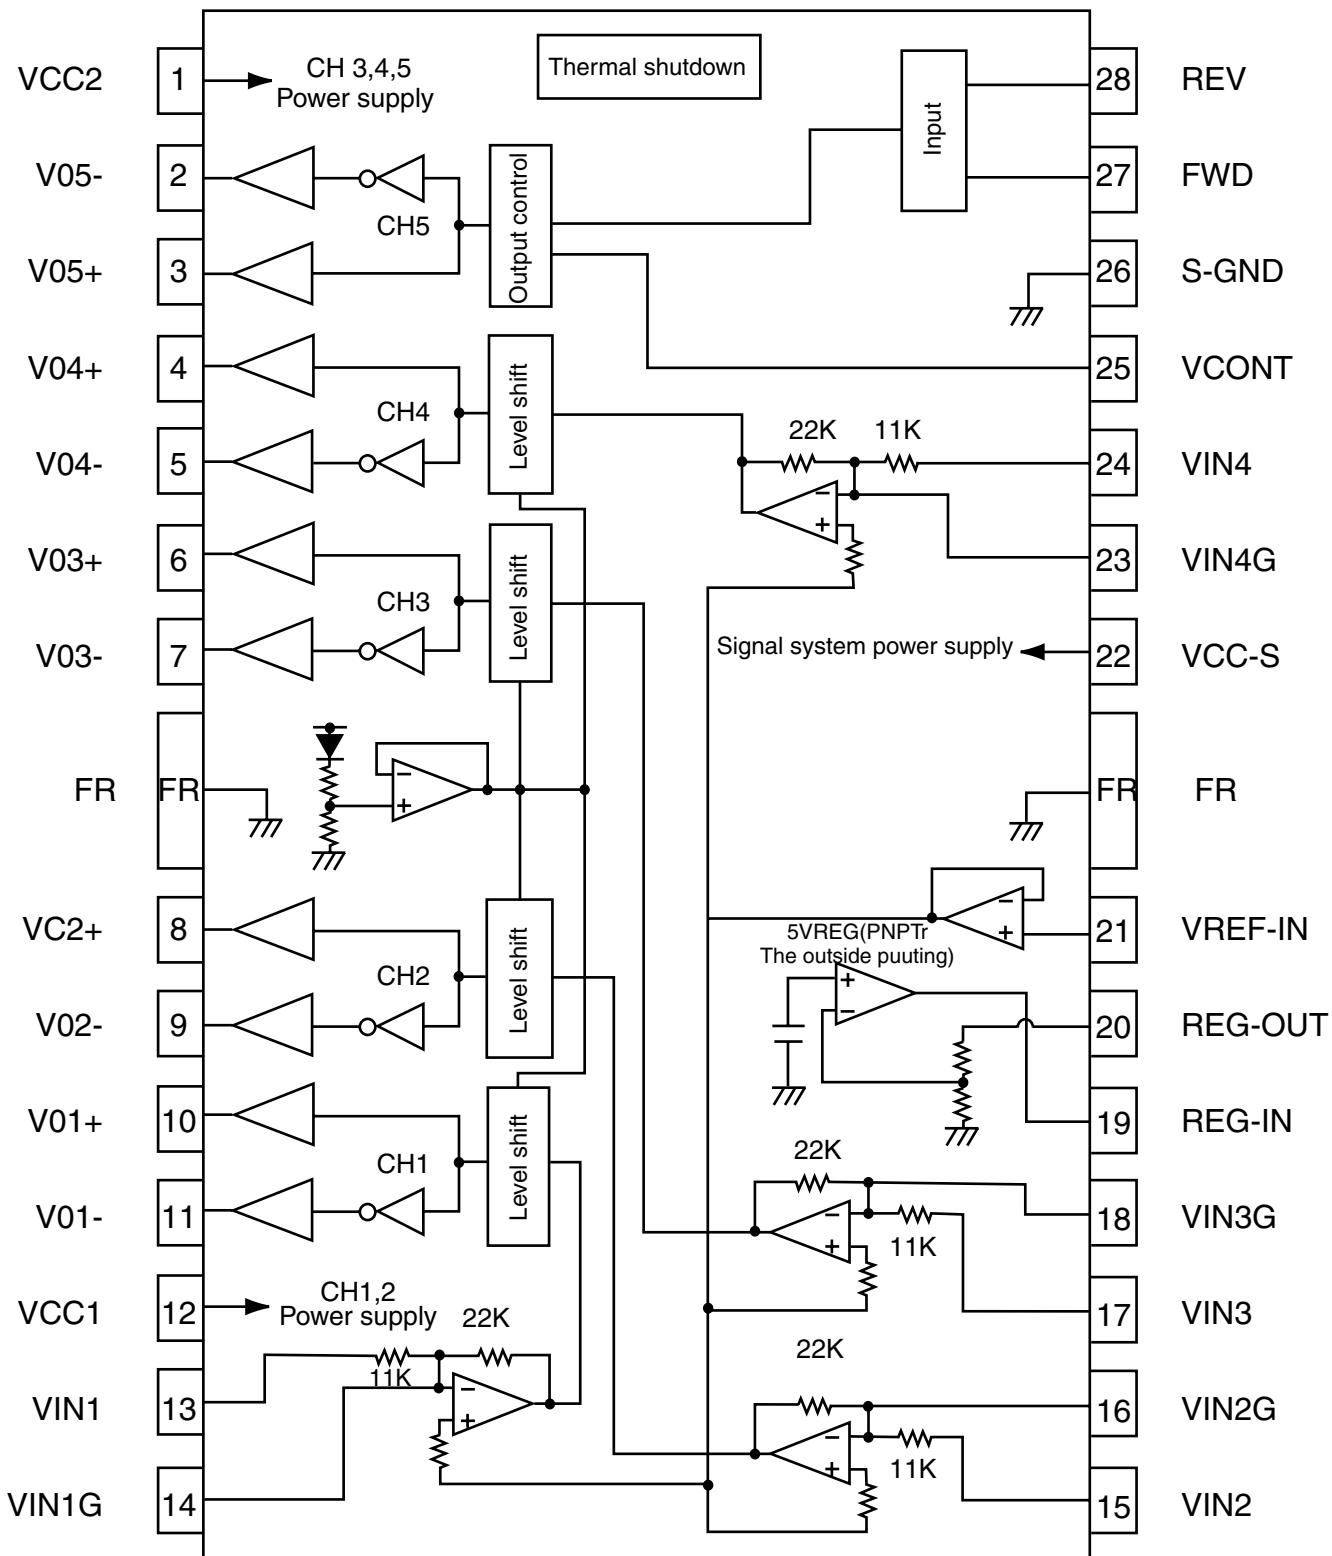

## 2. Pin function

LA6567H-X(2/2)


| Pin no. | Symbol  | Function  |
|---------|---------|---|
| 1       | VCC2    | CH3,4,5 Power supply( It is short with VCC1,VCC-S)                            |
| 2       | V05-    | Loading output(-)   |
| 3       | V05+    | Loading terminal (+)  |
| 4       | V04+    | CH4 Output terminal(+)  |
| 5       | V04-    | CH4 Output terminal(-)  |
| 6       | V03+    | CH3 Output terminal(+)  |
| 7       | V03-    | CH3 Output terminal(-)  |
| 8       | V02+    | CH2 Output terminal(+)  |
| 9       | V02-    | CH2 Output terminal(-)  |
| 10      | V01+    | CH1 Output terminal(+)  |
| 11      | V01-    | CH1 Output terminal(-)  |
| 12      | VCC1    | CH1,2(BTL) Power supply(It is short with VCC-S,VCC2)                          |
| 13      | VIN1    | CH1 Input terminal  |
| 14      | VIN1G   | CH1 Input terminal(For gain adjustment)                                       |
| 15      | VIN2    | CH2 Input terminal  |
| 16      | VIN2G   | CH2 Input terminal(For gain adjustment)                                       |
| 17      | VIN3    | CH3 Input terminal  |
| 18      | VIN3G   | CH3 Input terminal(For gain adjustment)                                       |
| 19      | REG-IN  | Regulator terminal(Outside putting PNP base)                                  |
| 20      | REG-OUT | Regulator terminal(Outside putting PNP collector)                             |
| 21      | VREF-IN | Standard voltage input terminal   |
| 22      | VCC-S   | Signal system power supply(It is short with VCC1,VCC2)                        |
| 23      | VIN4G   | CH4 Input terminal(For gain adjustment)                                       |
| 24      | VIN4    | CH4 Input terminal  |
| 25      | VCONT   | 5CH(VLO) Output voltage set terminal  |
| 26      | S-GND   | Signal system GND   |
| 27      | FWD     | 5CH(VLO)Signal output switch terminal(FWD),Input of logic of loading part     |
| 28      | REV     | 5CH(VLO)Signal output switch terminal(REV),<br>Input of logic of loading part |

\* Frame(FR)at the center becomes system GND.

\* Please be short-circuited on the outside and use the terminal of the power supply system  
and three terminals of VCC-S, VCC1,VCC2.

## ■ LC72366-9A73 (IC801) : System CPU

### 1. Pin layout

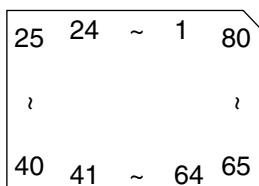


### 2. Pin function

| Pin No. | Symbol       | I/O | Function                                |
|---------|--------------|-----|---|
| 1       | XIN          | I   | Crystal oscillator input port           |
| 2       | TEST2        | I   | Connect to ground                       |
| 3       | J-BUS SI     | -   | No use                                  |
| 4       | J-BUS SO     | -   | No use                                  |
| 5       | J-BUS SCK    | -   | No use                                  |
| 6       | J-BUS I/O    | -   | No use                                  |
| 7       | SUBQ         | I/O | CD LSI subcode data input               |
| 8       |              | -   | No use                                  |
| 9       | SQCK         | I/O | CD LSI subcode clock                    |
| 10      | RESET        | I   | Micon reset pin                         |
| 11      | LCD SI       | -   | No use                                  |
| 12      | LCD SO       | O   | LCD driver data output                  |
| 13      | LCD SCK      | O   | LCD driver clock signal                 |
| 14      | LCD CE       | O   | LCD driver chip enable port             |
| 15      | FM ILLUMI    | -   | No use                                  |
| 16      | AM ILLUMI    | -   | No use                                  |
| 17      | CD ILLUMI    | -   | No use                                  |
| 18      | DIMMER OUT   | -   | No use                                  |
| 19      | LM0          | O   | CD loading motor output                 |
| 20      | LM1          | O   | CD loading motor output                 |
| 21      |              | -   | No use                                  |
| 22      |              | -   | No use                                  |
| 23      |              | -   | No use                                  |
| 24      | KS2          | O   | Output for initial setting diode matrix |
| 25      | KS1          | O   | Output for initial setting diode matrix |
| 26      | KS0          | O   | Output for initial setting diode matrix |
| 27      | DETACH       | I   | Front panel detect                      |
| 28      | K2           | -   | No use                                  |
| 29      | K1           | I   | Input for initial setting diode matrix  |
| 30      | K0           | I   | Input for initial setting diode matrix  |
| 31      | Vdd          | -   | 5V power supply port (+B)               |
| 32      | SW2          | I   | CD mechanism detect switch              |
| 33      | CD LSI RESET | O   | CD LSI reset                            |
| 34      | MCLK         | O   | CD LSI command clock signal             |
| 35      | MDATA        | O   | CD LSI command data output              |
| 36      | MLD          | O   | CD LSI command load signal              |
| 37      |              | -   | No use                                  |
| 38      |              | -   | No use                                  |
| 39      | SCL          | O   | E.volume clock output                   |
| 40      | SDA          | O   | E.volume data output                    |

| Pin No. | Port Name   | I/O | Function   |
|---------|-------------|-----|--|
| 41      | CD ON       | -   | CD 8V supply on  |
| 42      | RELAY       | -   | 5V power control   |
| 43      | BLKCK       | I   | Sub-code/block/clock signal output   |
| 44      | BEEP        | -   | No use   |
| 45      | SW4         | I   | CD mechanism detect switch   |
| 46      | SW1         | I   | CD mechanism detect switch   |
| 47      | SW3         | I   | CD mechanism detect switch   |
| 48      | REST        | I   | CD pickup rest position  |
| 49      | FLOCK       | I   | Focus lock signal output Active:Low  |
| 50      | TLOCK       | I   | Tracking lock signal output Active :low  |
| 51      | CD SENSE    | I   | CD LSI sense signal  |
| 52      | STATUS      | I   | CD LDI status signal   |
| 53      | P.SAVES2    | I   | power save 2:+B detect   |
| 54      | SD/ST       | I   | Station detection,Stereo signal input H:SD   |
| 55      | REMOCON     | I   | Remocon input  |
| 56      | J BUS INT   | -   | No use   |
| 57      | BAND        | O   | FM/AM band selection   |
| 58      | MONO        | -   | FM mono selection  |
| 59      | IFRQ/AGC    | O   | During FM auto search,IF request output H after SD detected. During AM<br>suto search,AGC output |
| 60      | MUTE        | O   | Muting switch  |
| 61      | LEVEL       | I   | Level meter input  |
| 62      | S.METER     | I   | S meter input  |
| 63      | KEY CHANGE  | -   | Control to GND   |
| 64      | KEY2        | I   | Key 2 input port   |
| 65      | KEY1        | I   | Key 1 input port   |
| 66      | KEY0        | I   | Key 0 input port   |
| 67      | P.SAVE1     | I   | Power save 1,ACC power detection   |
| 68      | SENSE       | I   | Voltage sensor port  |
| 69      |             | -   | No use   |
| 70      | FM IF COUNT | I   | FM frequency detecting   |
| 71      | NC          | -   | No use   |
| 72      | NC          | -   | No use   |
| 73      | Vdd         | -   | 5V power supply (+B)   |
| 74      | AM OSC      | I   | No use   |
| 75      | FM OSC      | I   | FM limited signal input  |
| 76      | VSS         | -   | Ground port for power supply   |
| 77      | NC          | -   | No use   |
| 78      | E0          | O   | Error signal output port for PLL   |
| 79      | TEST1       | -   | Test port for LSI, To connect ground   |
| 80      | XOUT        | O   | 4.5MHz crystal oscillator output   |

## ■ LC75823W (IC601) : LCD driver

### 1. Pin Layout & Symbol

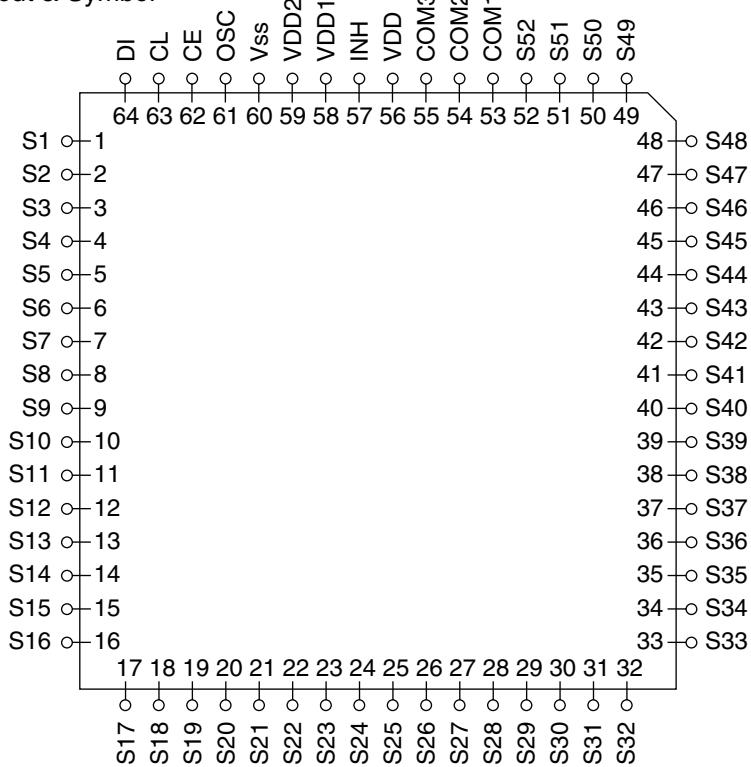

### 2. Pin Function


| Pin No.  | Symbol          | I/O | Function  |
|----------|-----------------|-----|---|
| 1 to 52  | S1 to S52       | O   | Segment output pins used to display data transferred by serial data input.  |
| 53 to 55 | COM1 to COM3    | O   | Common driver output pins. The frame frequency is given by : $t_0 = (f_{osc}/384)\text{Hz}$ .   |
| 56       | VDD             | --  | Power supply connection. Provide a voltage of between 4.5 and 6.0V.   |
| 57       | INH             | I   | Display turning off input pin.<br>INT="L" (V <sub>ss</sub> ) ----- off (S1 to S52, COM1 to COM3="L")<br>INT="H" (V <sub>DD</sub> )----- on<br>Serial data can be transferred in display off mode. |
| 58       | VDD1            | I   | Used for applying the LCD drive 2/3 bias voltage externally.<br>Must be connected to VDD2 when a 1/2 bias drive scheme is used.   |
| 59       | VDD2            | I   | Used for applying the LCD drive 1/3 bias voltage externally.<br>Must be connected to VDD1 when a 1/2 bias drive scheme is used.   |
| 60       | V <sub>ss</sub> | --  | Power supply connection. Connect to GND.  |
| 61       | OSC             | I/O | Oscillator connection.<br>An oscillator circuit is formed by connecting an external resistor and capacitor at this pin.   |
| 62       | CE              | I   | Serial data interface connection to the controller. CE : Chip enable  |
| 63       | CL              | I   | CL : Sync clock   |
| 64       | DI              |     | DI : Transfer data  |

## ■ TEA6320T-X (IC301) : E.volume

1.Pin layout


|       |    |       |
|-------|----|-------|
| SDA   | 1  | 32    |
| GND   | 2  | 31    |
| OUTLR | 3  | 30    |
| OUTLF | 4  | 29    |
| TL    | 5  | 28    |
| B2L   | 6  | 27    |
| B1L   | 7  | 26    |
| IVL   | 8  | 25    |
| ILL   | 9  | 24    |
| QSL   | 10 | 23    |
| IDL   | 11 | 22    |
| MUTE  | 12 | 21    |
| ICL   | 13 | CD-CH |
| IMO   | 14 | ICR   |
| IBL   | 15 | TAPE  |
| IAL   | 16 | TUNER |

2.Block diagram

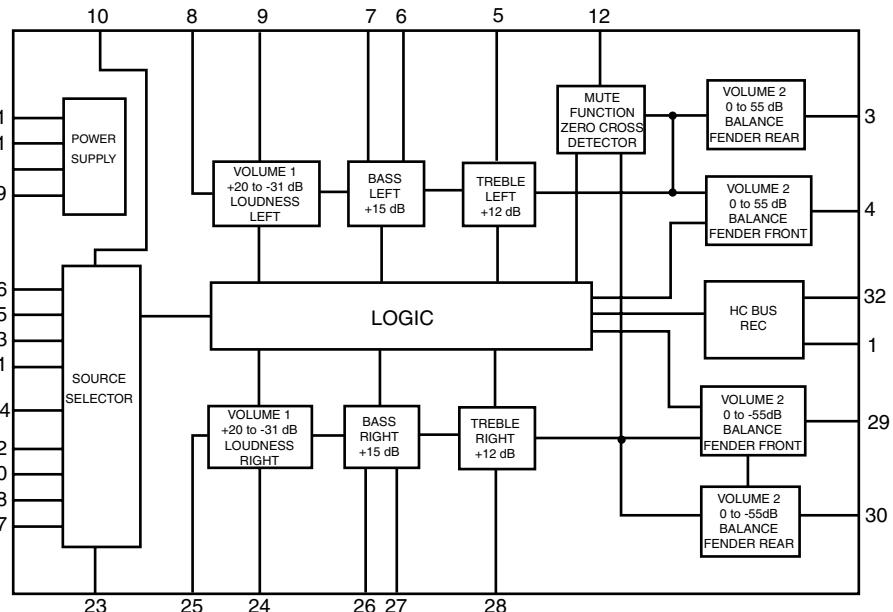


3.Pin functions

| Pin No. | Symbol | I/O | Functions  | Pin No. | Symbol | I/O | Functions   |
|---------|--------|-----|--|---------|--------|-----|---|
| 1       | SDA    | I/O | Serial data input/output.  | 17      | IAR    | I   | Input A right source.   |
| 2       | GND    | -   | Ground.  | 18      | IBR    | I   | Input B right source.   |
| 3       | OUTLR  | O   | output left rear.  | 19      | CAP    | -   | Electronic filtering for supply.  |
| 4       | OUTLF  | O   | output left front.   | 20      | ICR    | I   | Input C right source.   |
| 5       | TL     | I   | Treble control capacitor left channel or input from an external equalizer. | 21      | Vref   | -   | Reference voltage (0.5Vcc)  |
| 6       | B2L    | -   | Bass control capacitor left channel or output to an external equalizer.    | 22      | IDR    | -   | Not used  |
| 7       | B1L    | -   | Bass control capacitor left channel.                                       | 23      | QSR    | O   | Output source selector right channel.                                       |
| 8       | IVL    | I   | Input volume 1. left control part.   | 24      | ILR    | I   | Input loudness right channel.   |
| 9       | ILL    | I   | Input loudness. left control part.   | 25      | IVR    | I   | Input volume 1. right control part.   |
| 10      | QSL    | O   | Output source selector. left channel.                                      | 26      | B1R    | -   | Bass control capacitor right channel  |
| 11      | IDL    | -   | Not used   | 27      | B2R    | O   | Bass control capacitor right channel or output to an external equalizer.    |
| 12      | MUTE   | -   | Not used   | 28      | TR     | I   | Treble control capacitor right channel or input from an external equalizer. |
| 13      | ICL    | I   | Input C left source.   | 29      | OUTRF  | O   | Output right front.   |
| 14      | IMO    | -   | Not used   | 30      | OUTRR  | O   | Output right rear.  |
| 15      | IBL    | I   | Input B left source.   | 31      | Vcc    | -   | Supply voltage.   |
| 16      | IAL    | I   | Input A left source.   | 32      | SCL    | I   | Serial clock input.   |

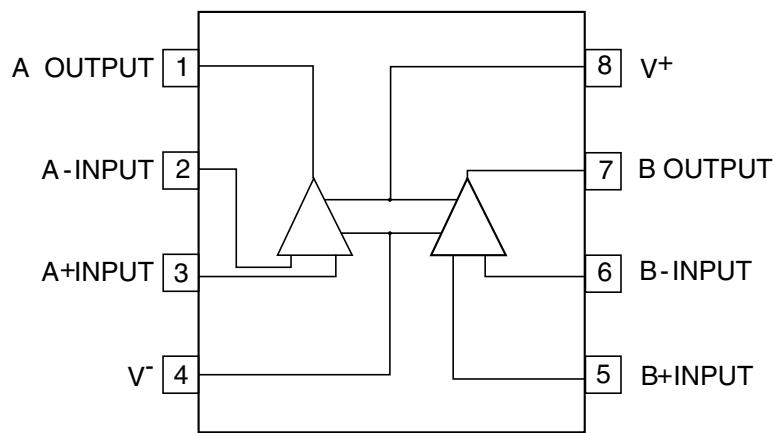**■ NJM4565M-WE (IC151) : Ope. amp**

## Block diagram

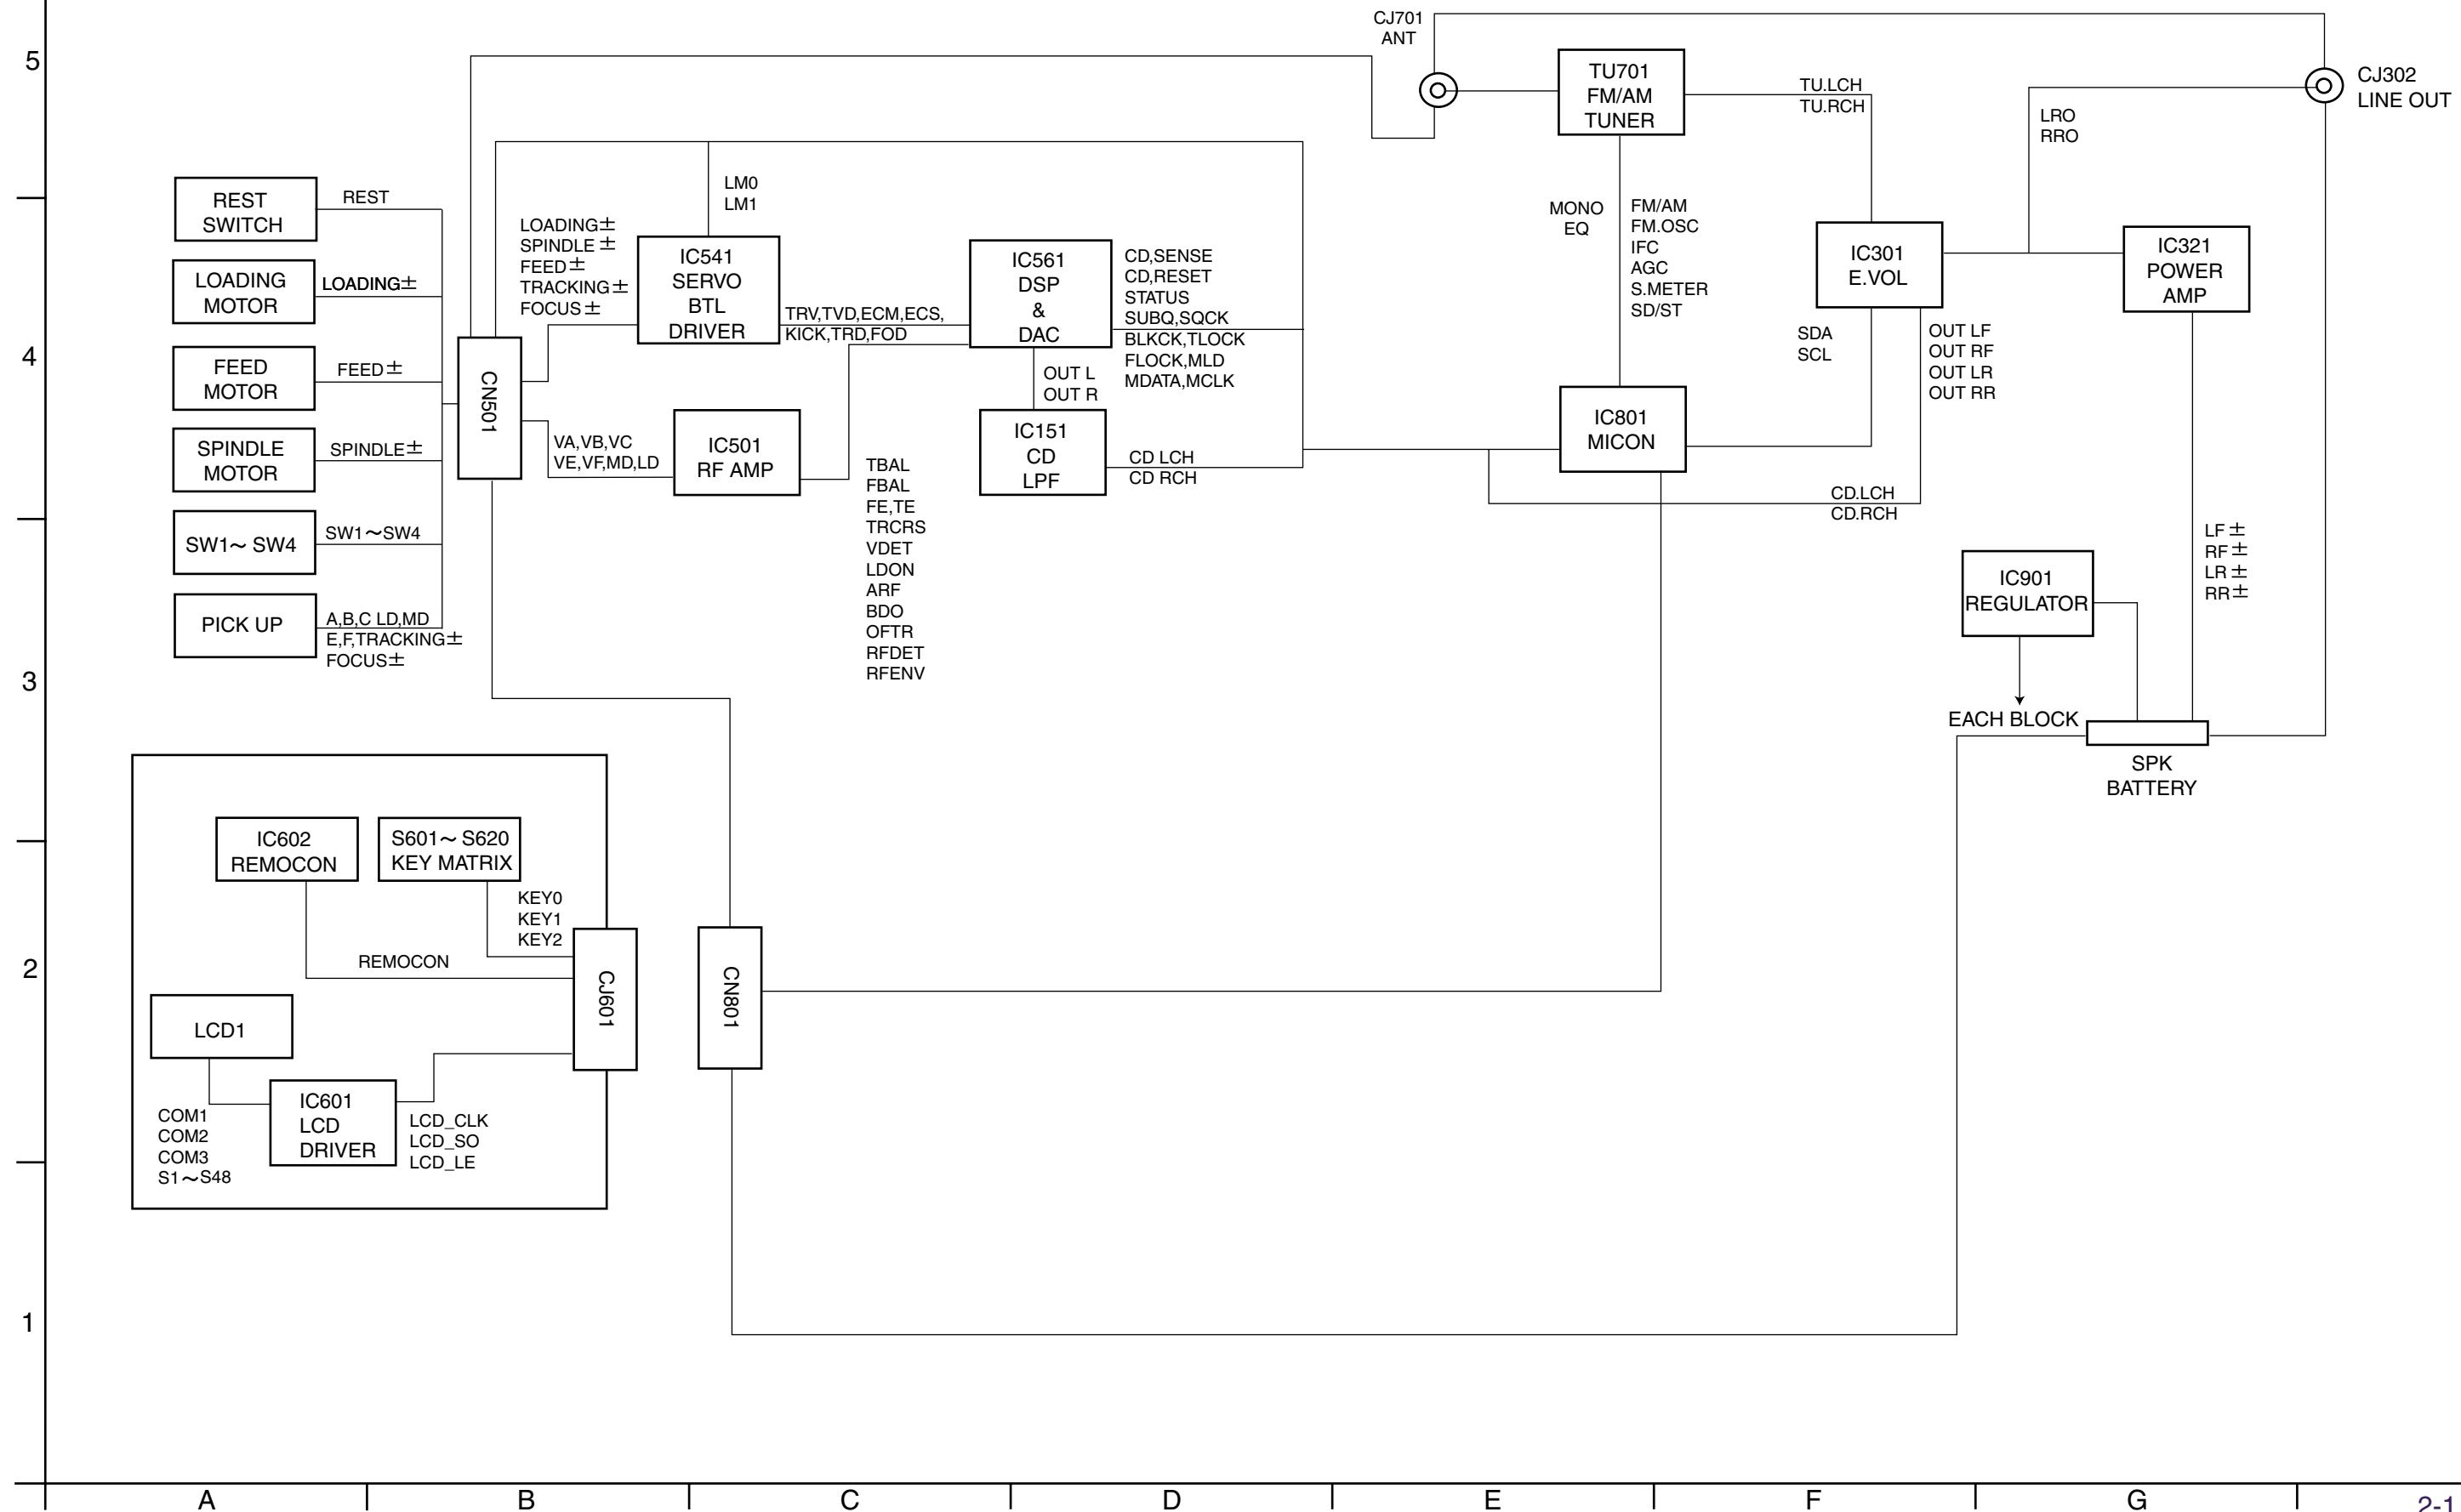


## Standard schematic diagrams


KD-S621

KD-S621


## ■ Main amp section

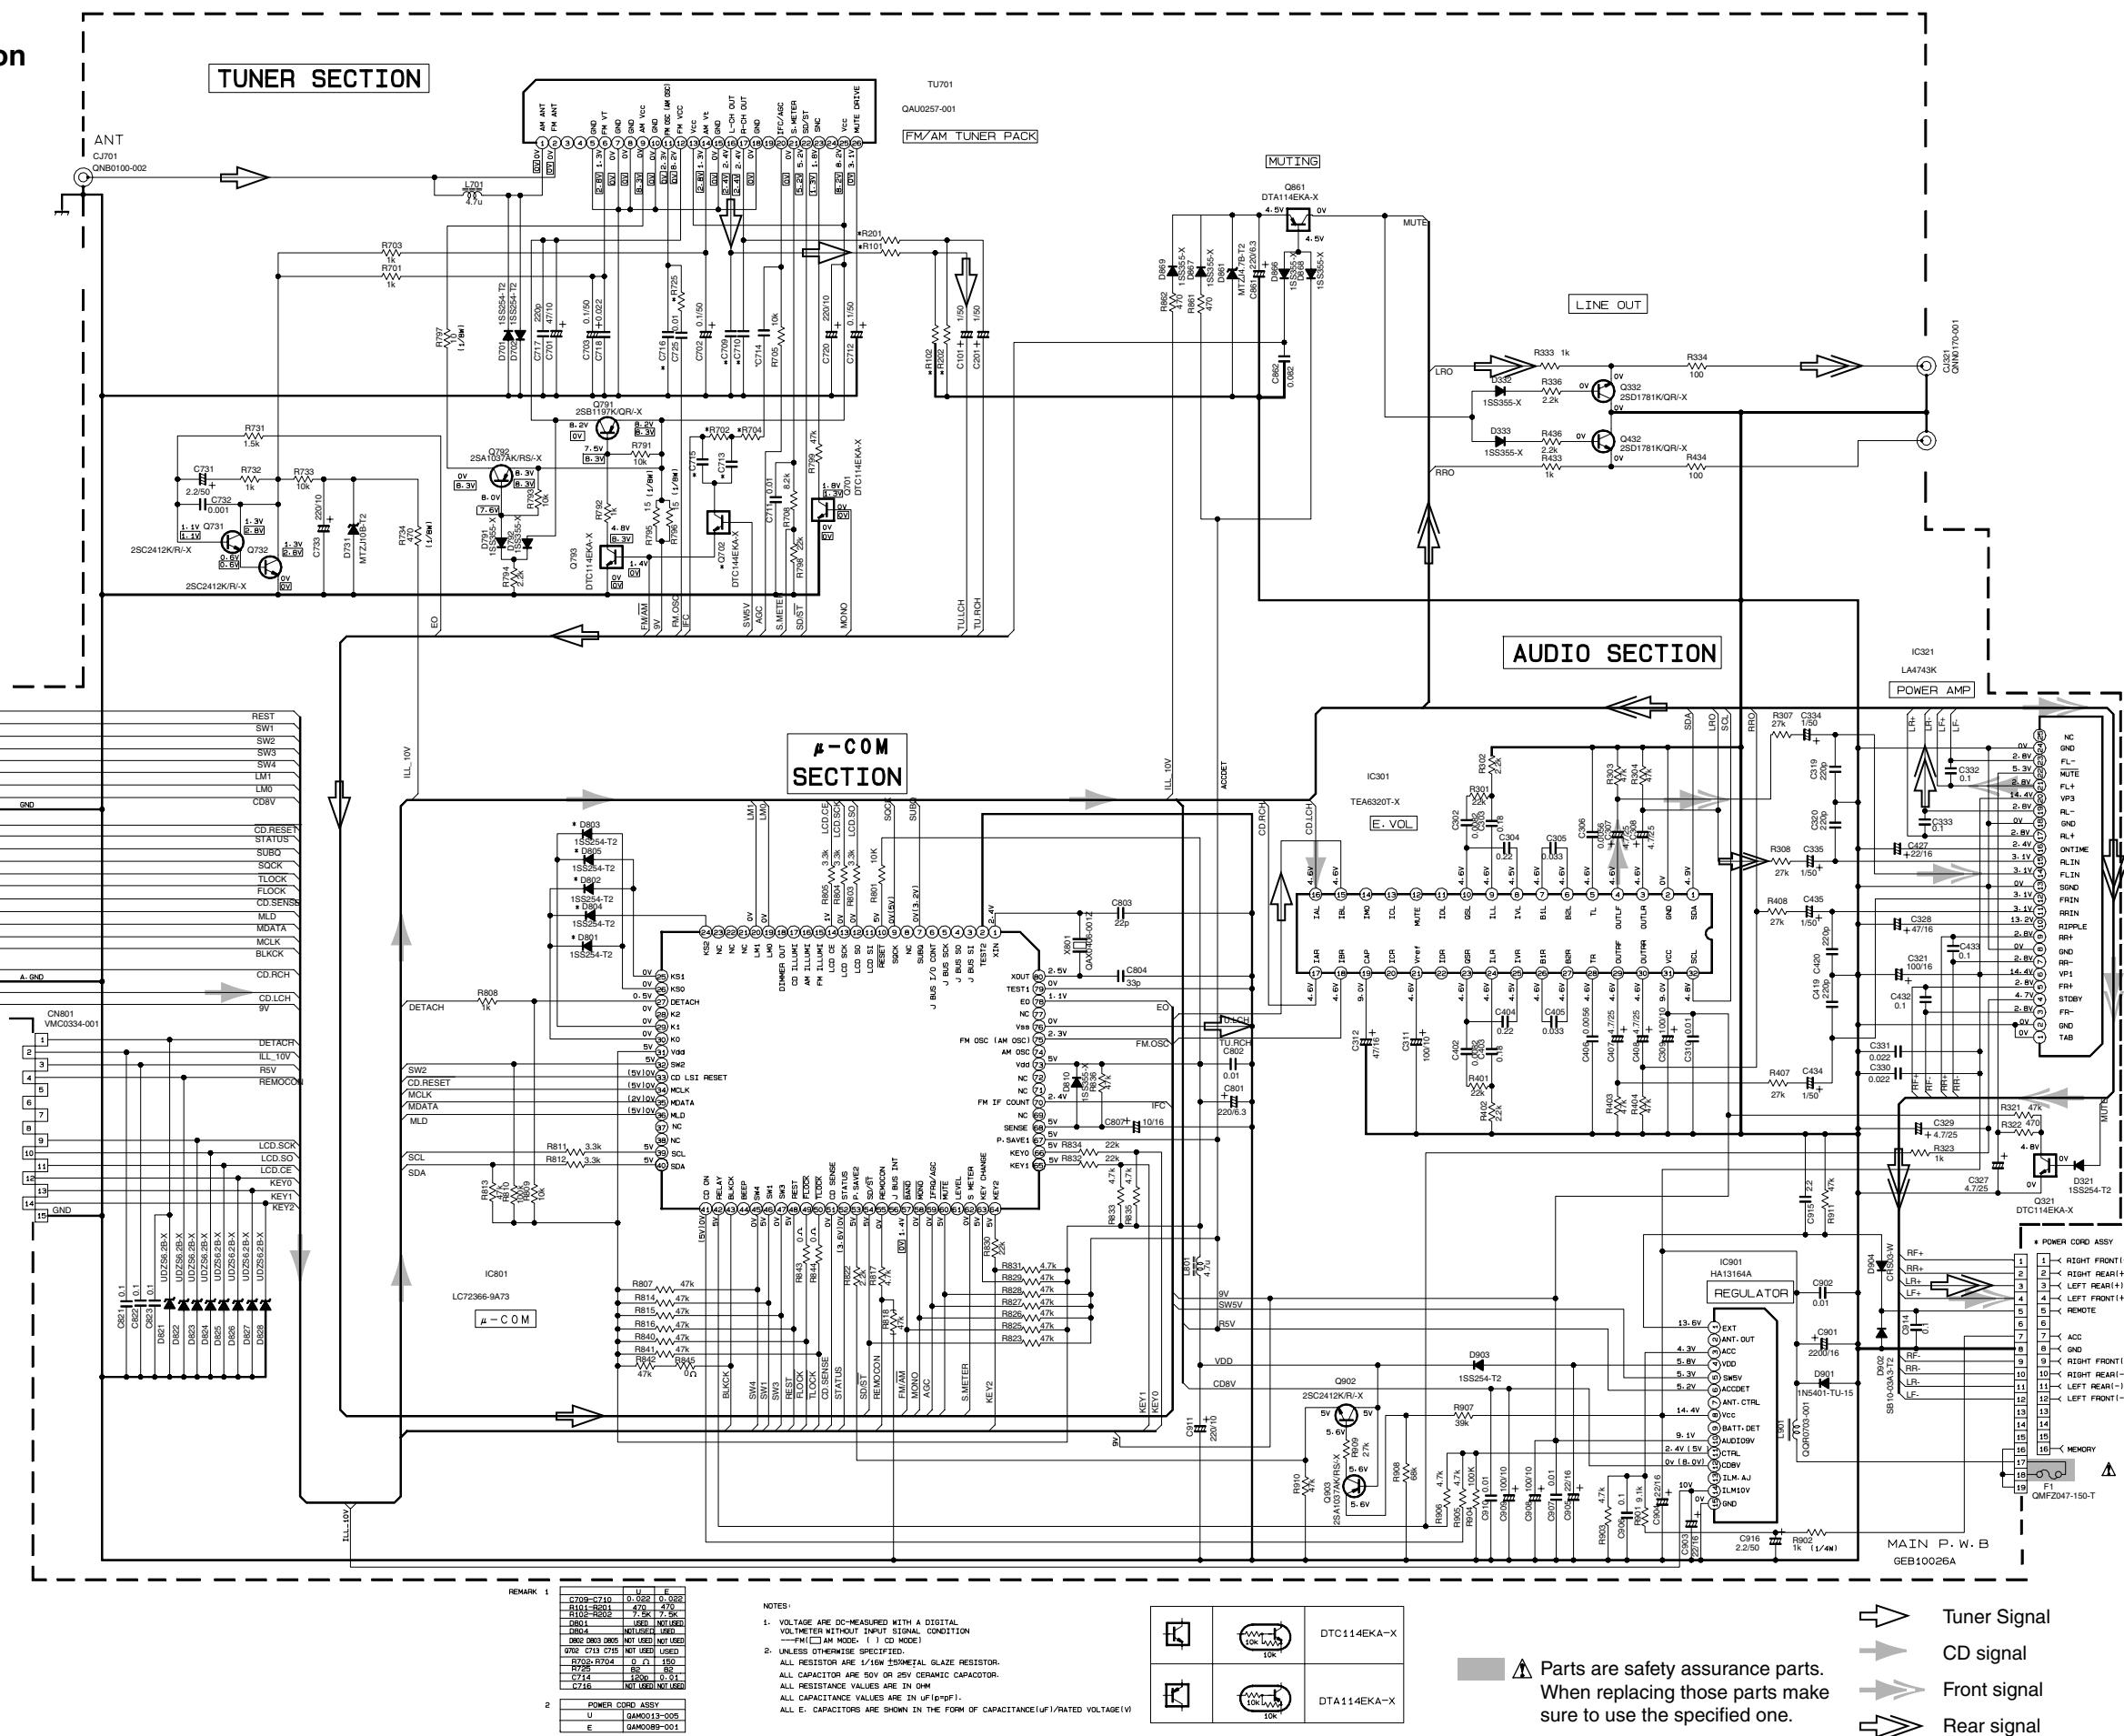

## ■ CD servo & control section

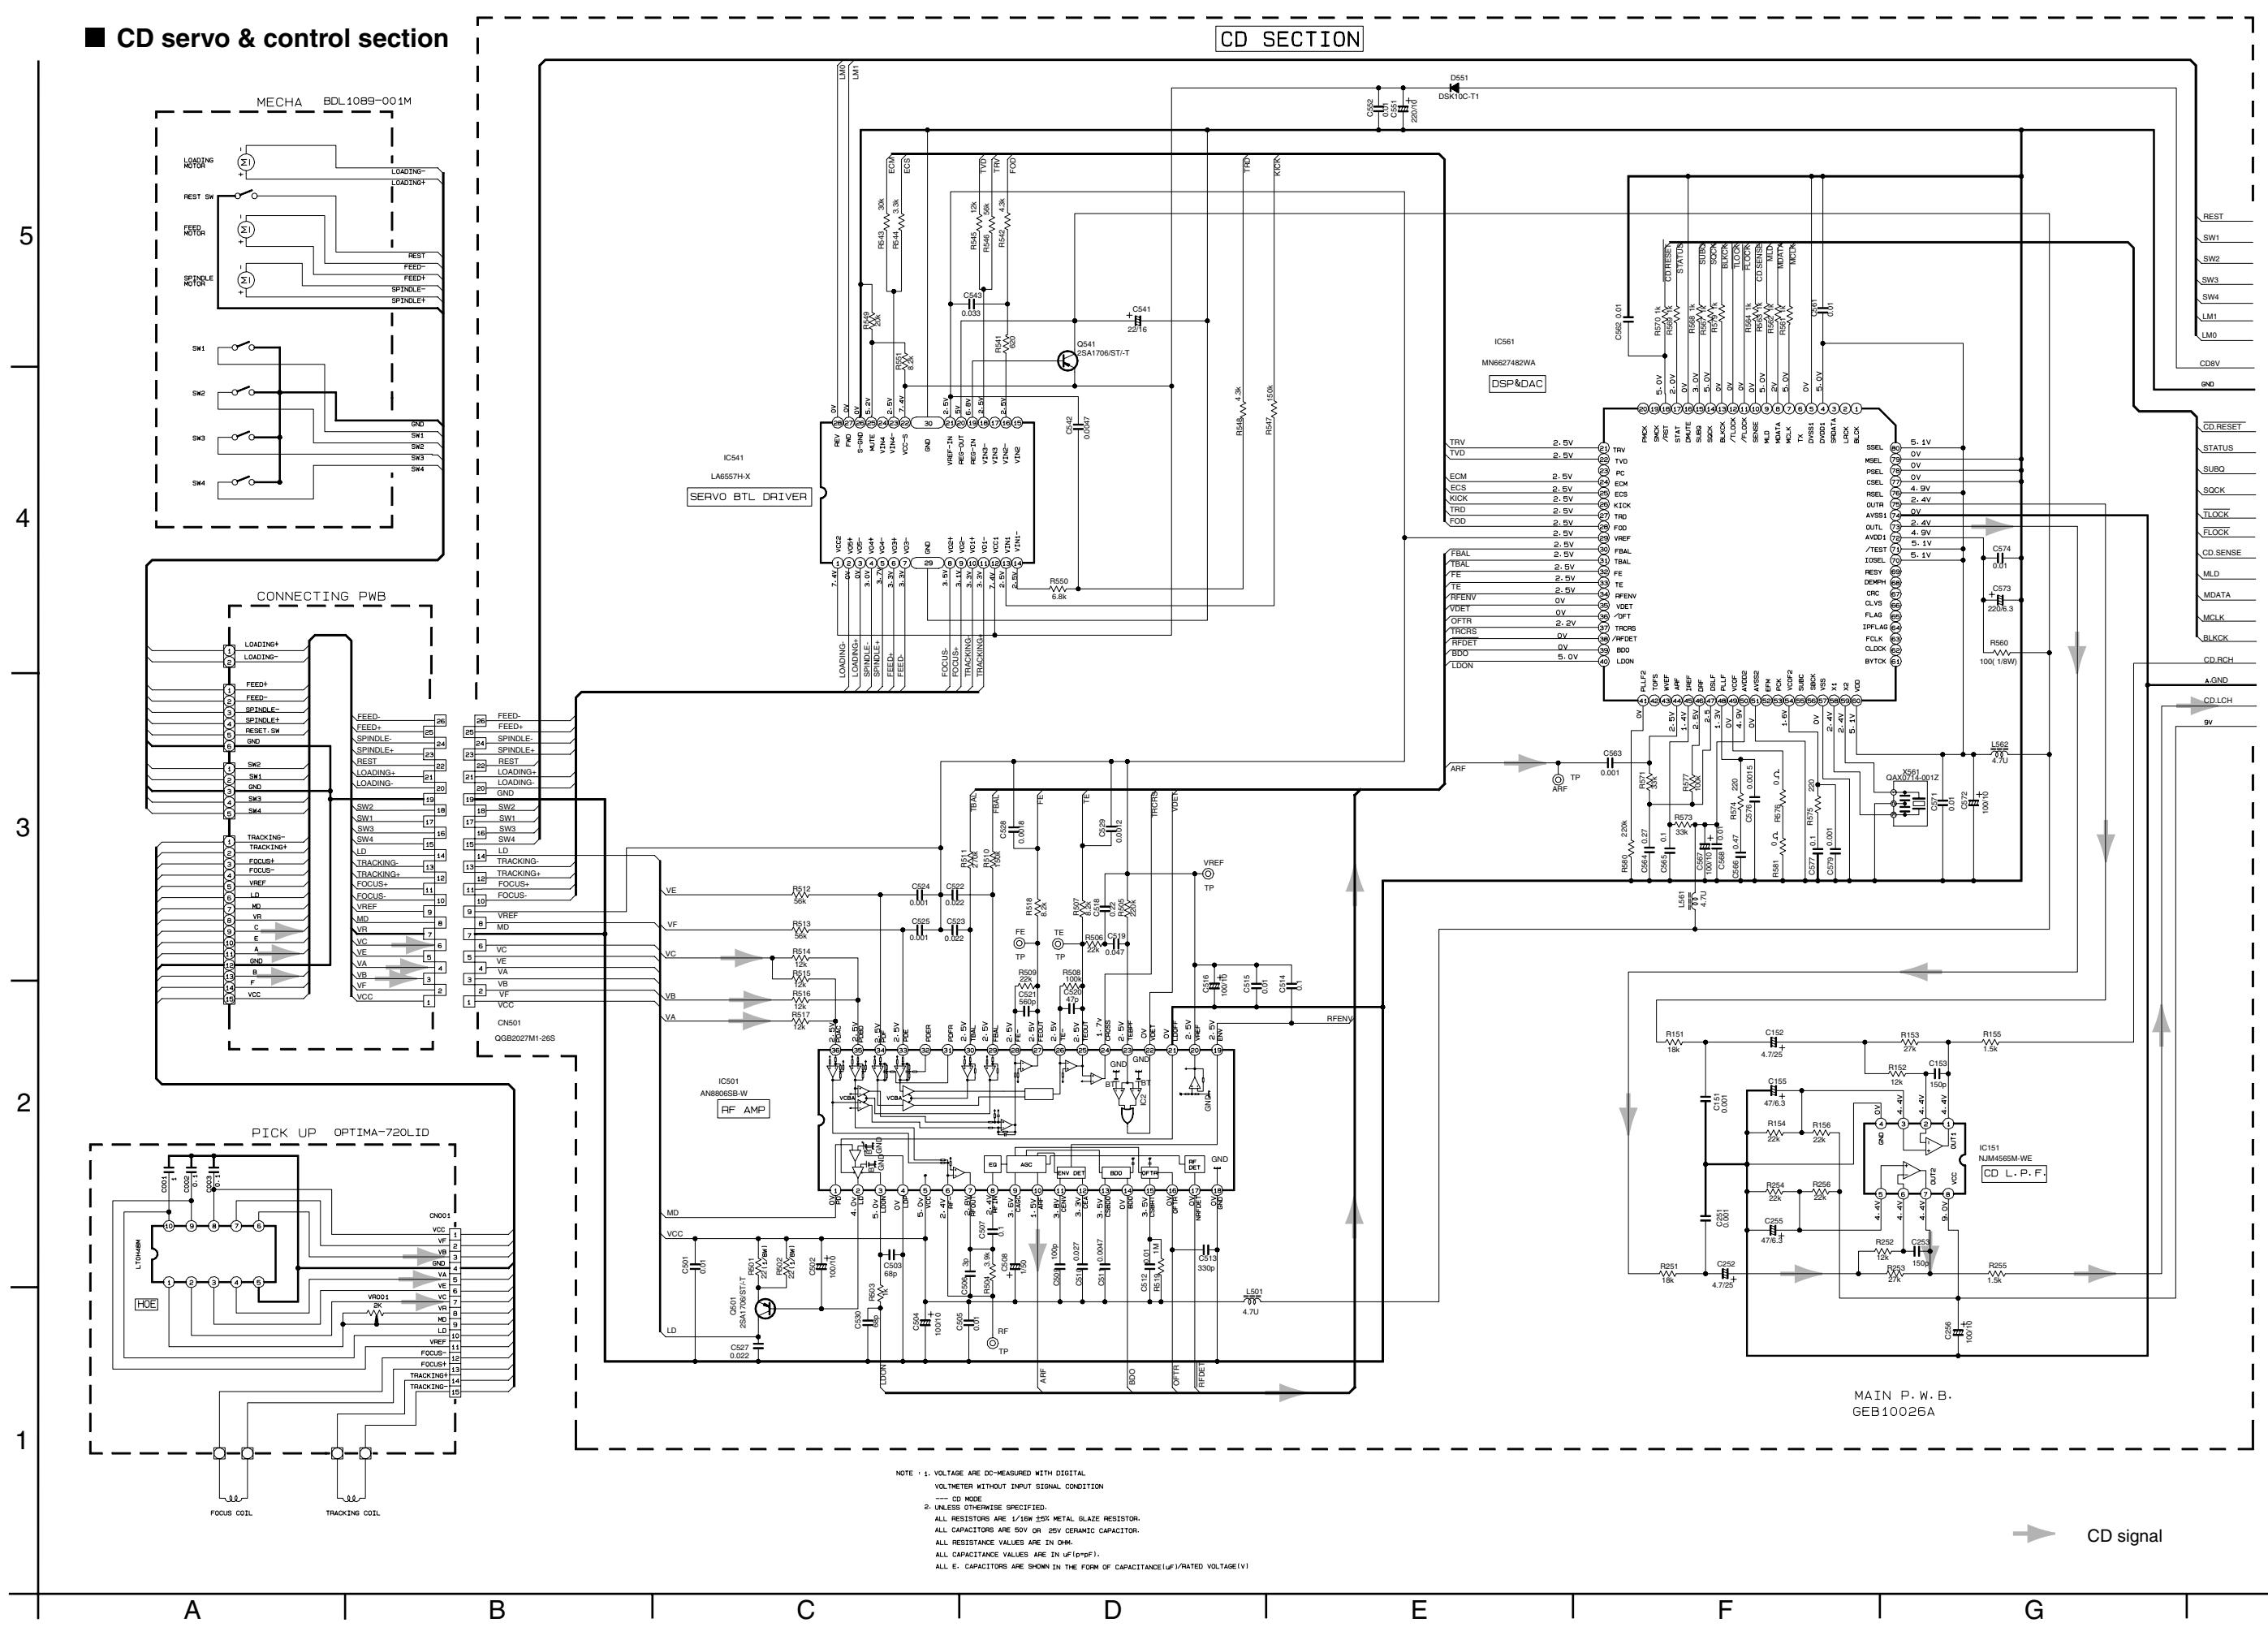

## ■ LCD & key control section

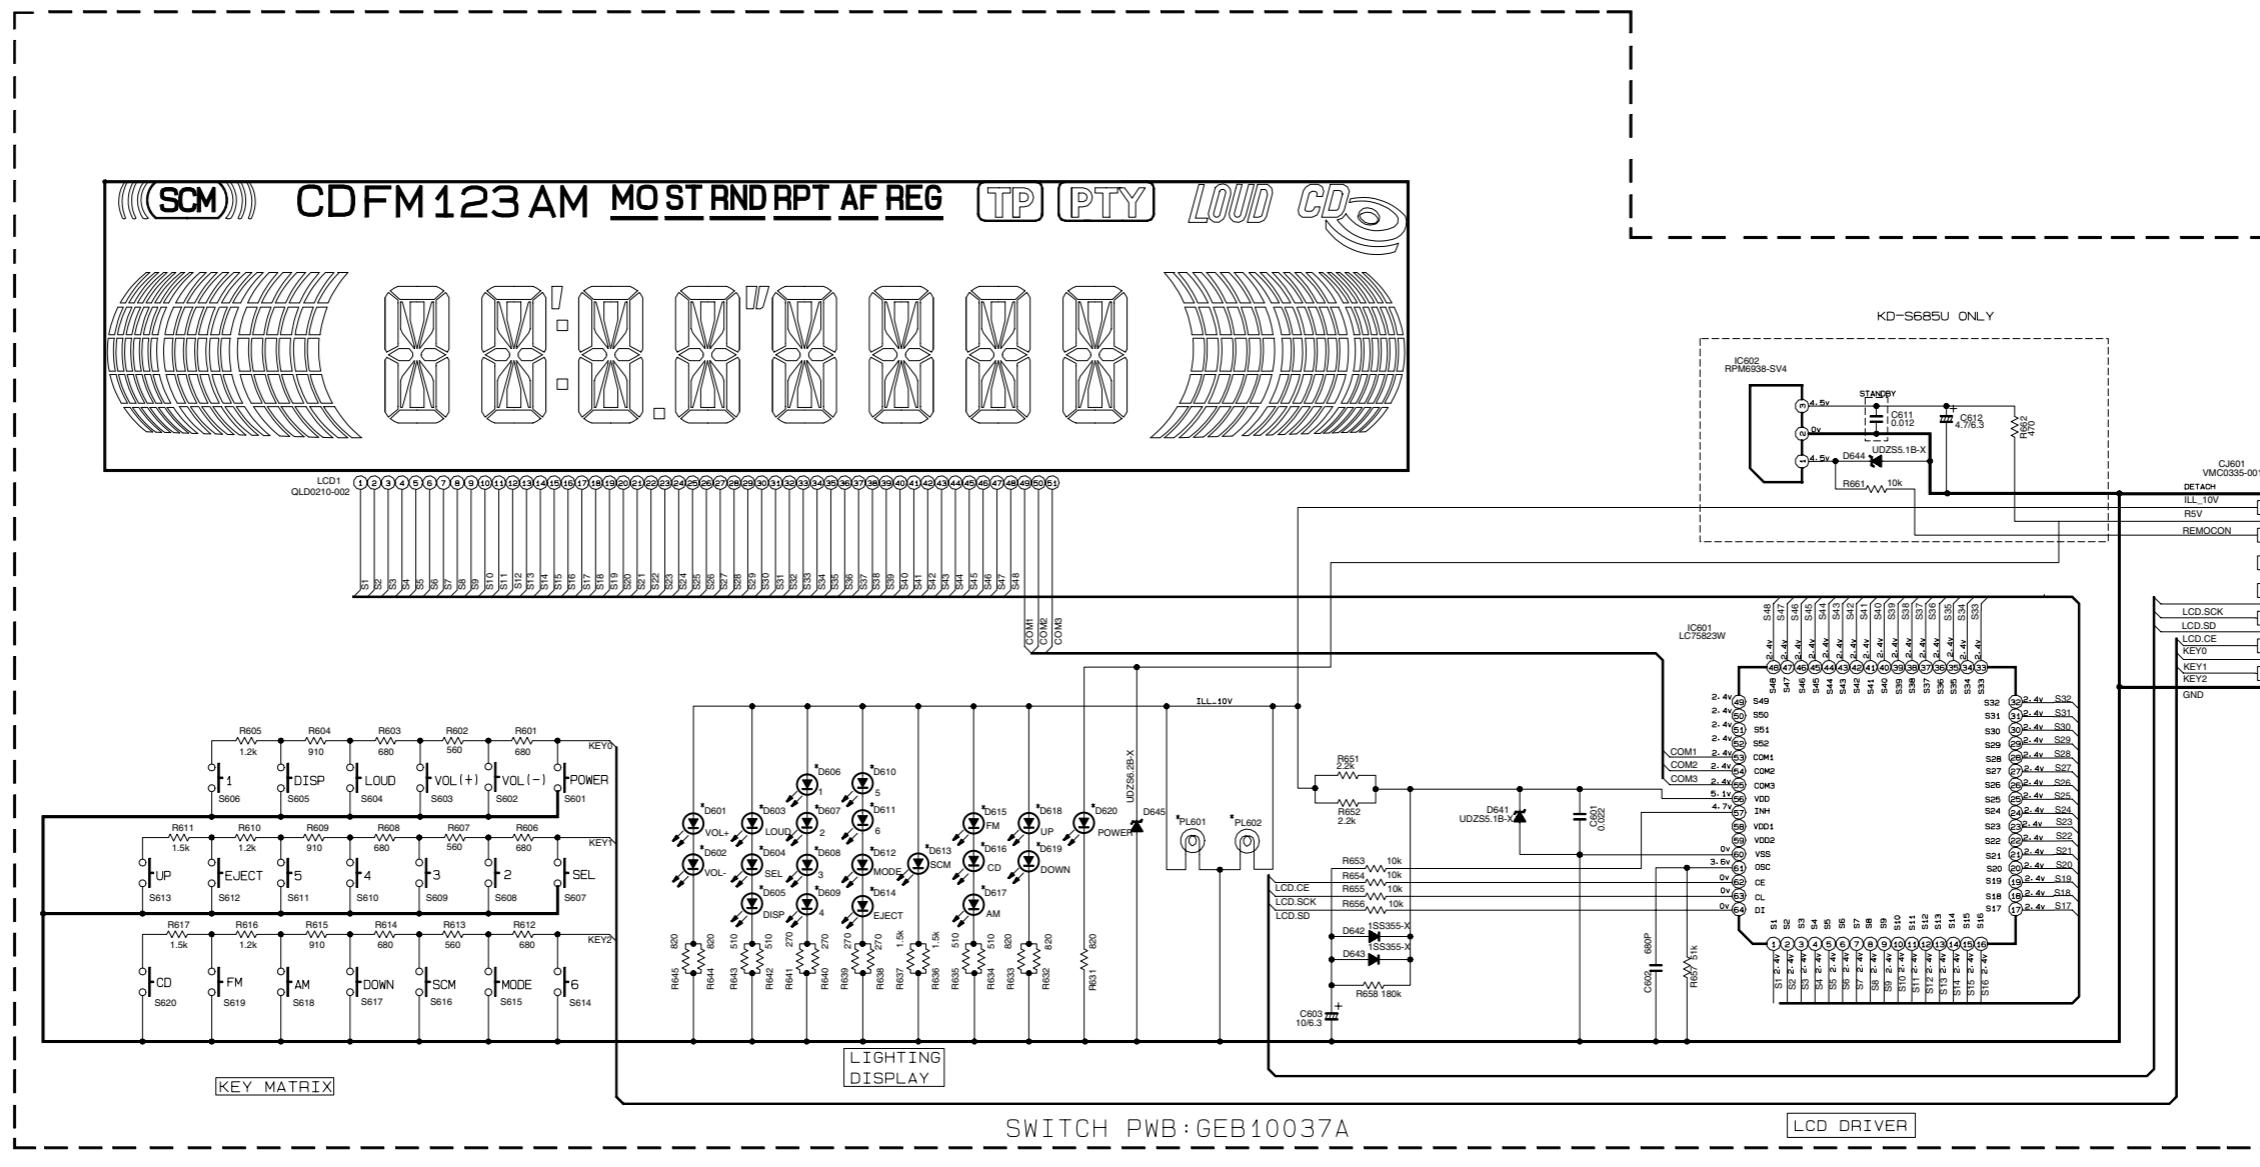

| X NOTE:   |  |
|-----------|--|
| PL651     | KD-968U/KD-968U/KD-92E<br>QLL033-003 (U) |
| PL602     | QLL056-001 (E)                           |
| D601-D612 | LNJ3080801/1-S/X                         |
| D614-D619 |  |
| D613      | SM-310VT/JK/-X                           |
| D620      | SM-310LTMN/-X                            |
| S601-S620 | NW0066-001X                              |


**NOTES**

1. VOLTAGES ARE DC-MEASURED WITH A DIGITAL VOLT METER  
WITHOUT INPUT SIGNALS.

2. UNLESS OTHERWISE SPECIFIED  
1/2 WATT METAL-OXIDE RESISTOR.  
ALL CAPACITORS ARE 10V OR 25V CERAMIC CAPACITOR.  
ALL RESISTANCE VALUES ARE IN OHM.  
ALL CAPACITANCE VALUES ARE IN  $\mu$ F(P-PF).  
ALL E-CAPACITORS ARE IN THE FORM OF CAPACITANCE ( $\mu$ F)/RATED VOLTAGE(V).

# Exploded view of general assembly and parts list

Block No. M 1 M M

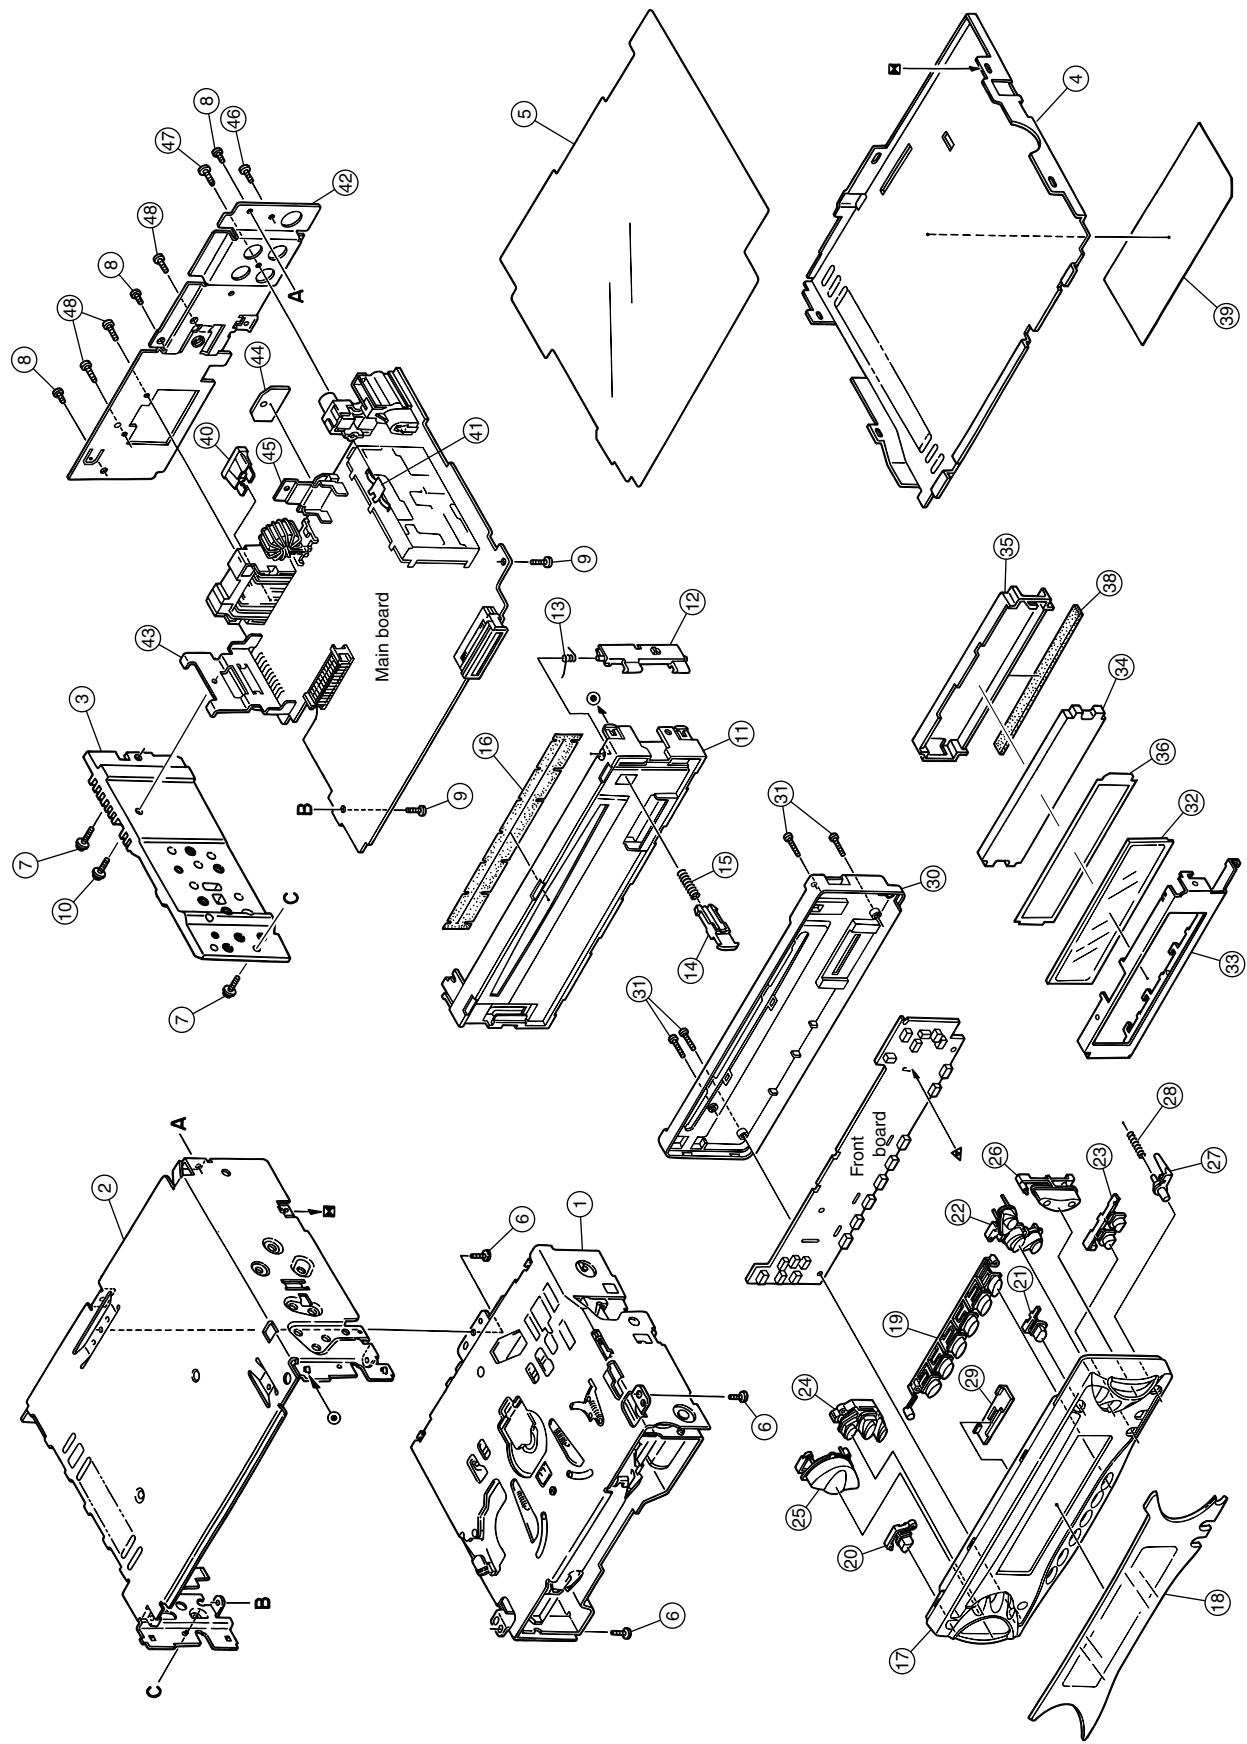

## ■ Parts list (General assembly)

Block No. M1MM

| △ | Item | Parts number  | Parts name     | Q'ty | Description        | Area |
|---|------|---------------|----------------|------|--------------------|------|
| △ | 1    | -----         | CD MECHA       | 1    | TN-CCD1001Z        |      |
|   | 2    | FSJC1029-404  | TOP CHASSIS    | 1    |                    |      |
|   | 3    | FSMH3001-202  | SIDE PANEL     | 1    |                    |      |
|   | 4    | FSKM3011-002  | BOTTOM COVER   | 1    |                    |      |
| △ | 5    | FSMA3004-203  | INSULATOR      | 1    |                    |      |
|   | 6    | QYSDST2604Z   | SCREW          | 3    | CHASSIS+MECHA BKT  |      |
|   | 7    | FSKZ4005-001  | SCREW          | 2    | CHASSIS+SIDE PANEL |      |
|   | 8    | QYSDST2604Z   | SCREW          | 3    | CHASSIS+REAR BKT   |      |
|   | 9    | QYSDST2606Z   | SCREW          | 2    | CHASSIS+MAIN PWB   |      |
|   | 10   | FSKZ4005-001  | SCREW          | 1    | SIDE PANEL+IC BKT  |      |
|   | 11   | FSJC2013-013  | FRONT CHASSIS  | 1    |                    |      |
|   | 12   | FSKS3010-001  | LOCK LEVER     | 1    |                    |      |
|   | 13   | FSKW4005-003  | TORSION SPRING | 1    | FOR LOCK LEVEL     |      |
|   | 14   | FSXP3026-002  | RLS KNOB       | 1    |                    |      |
|   | 15   | FSKW3002-015  | COMP. SPRING   | 1    |                    |      |
|   | 16   | FSPK3009-002  | BLIND          | 1    |                    |      |
|   | 17   | GE10037-001A  | FRONT PANEL    | 1    |                    |      |
|   | 18   | GE30300-008A  | FINDER ASSY    | 1    |                    |      |
|   | 19   | GE20119-001A  | PRESET BUTTON  | 1    |                    |      |
| △ | 20   | GE30304-001A  | POWER BUTTON   | 1    |                    |      |
|   | 21   | GE30305-001A  | EJECT BUTTON   | 1    |                    |      |
|   | 22   | GE20131-001A  | D FUNC BUTTON  | 1    | FM/CD/AM           |      |
|   | 23   | GE30307-001A  | SND FTN BUTTON | 1    |                    |      |
|   | 24   | GE20130-001A  | PUSH BUTTON    | 1    |                    |      |
|   | 25   | GE20118-001A  | +/- BUTTON     | 1    |                    |      |
|   | 26   | GE20120-001A  | UP/DOWN BUTTON | 1    |                    |      |
|   | 27   | GE30306-001A  | DETACH BUTTON  | 1    |                    |      |
|   | 28   | FSKW3002-012  | COMP. SPRING   | 1    | FOR DETACH BUTTON  |      |
|   | 29   | GE30117-001A  | LIGHT LENS     | 1    |                    |      |
|   | 30   | GE10038-001A  | REAR COVER     | 1    |                    |      |
|   | 31   | VKZ4777-001   | MINI SCREW     | 4    | FRONT+REAR         |      |
|   | 32   | QLD0210-002   | LCD            | 1    |                    |      |
|   | 33   | GE30302-002A  | LCD CASE       | 1    |                    |      |
|   | 34   | FSJK3035-001  | LCD LENS       | 1    |                    |      |
| △ | 35   | FSKS3022-003  | LENS CASE      | 1    |                    |      |
|   | 36   | FSYH4078-002  | LIGHTING SHEET | 1    |                    |      |
|   | 38   | QNZ0442-001   | RUBBER CONNE   | 1    |                    |      |
|   | 39   | GE30348-002A  | NAME PLATE     | 1    |                    |      |
|   | 40   | QMFZ047-150-T | FUSE           | 1    |                    |      |
|   | 41   | VMA4652-001SS | EARTH PLATE    | 1    |                    |      |
|   | 42   | FSKM3010-020  | REAR BRACKET   | 1    |                    |      |
|   | 43   | FSKL4024-001  | IC BRACKET     | 1    |                    |      |
|   | 44   | GE40104-001B  | HEAT SINK      | 1    |                    |      |
|   | 45   | GE40103-001A  | REGULATOR BKT  | 1    |                    |      |
|   | 46   | QYSDST2606Z   | SCREW          | 1    | FOR ANT            |      |
|   | 47   | QYSDSF3006Z   | SCREW          | 1    | LINE OUT           |      |
|   | 48   | QYSDST2606Z   | SCREW          | 3    | 16P & TR BRACK     |      |


# CD mechanism assembly and parts list

## Grease

- ★ G-31SA
- ※ G-31SA(Bottom side)
- RX-405

TN-CCD1001Z-136J

Block No. M B M M

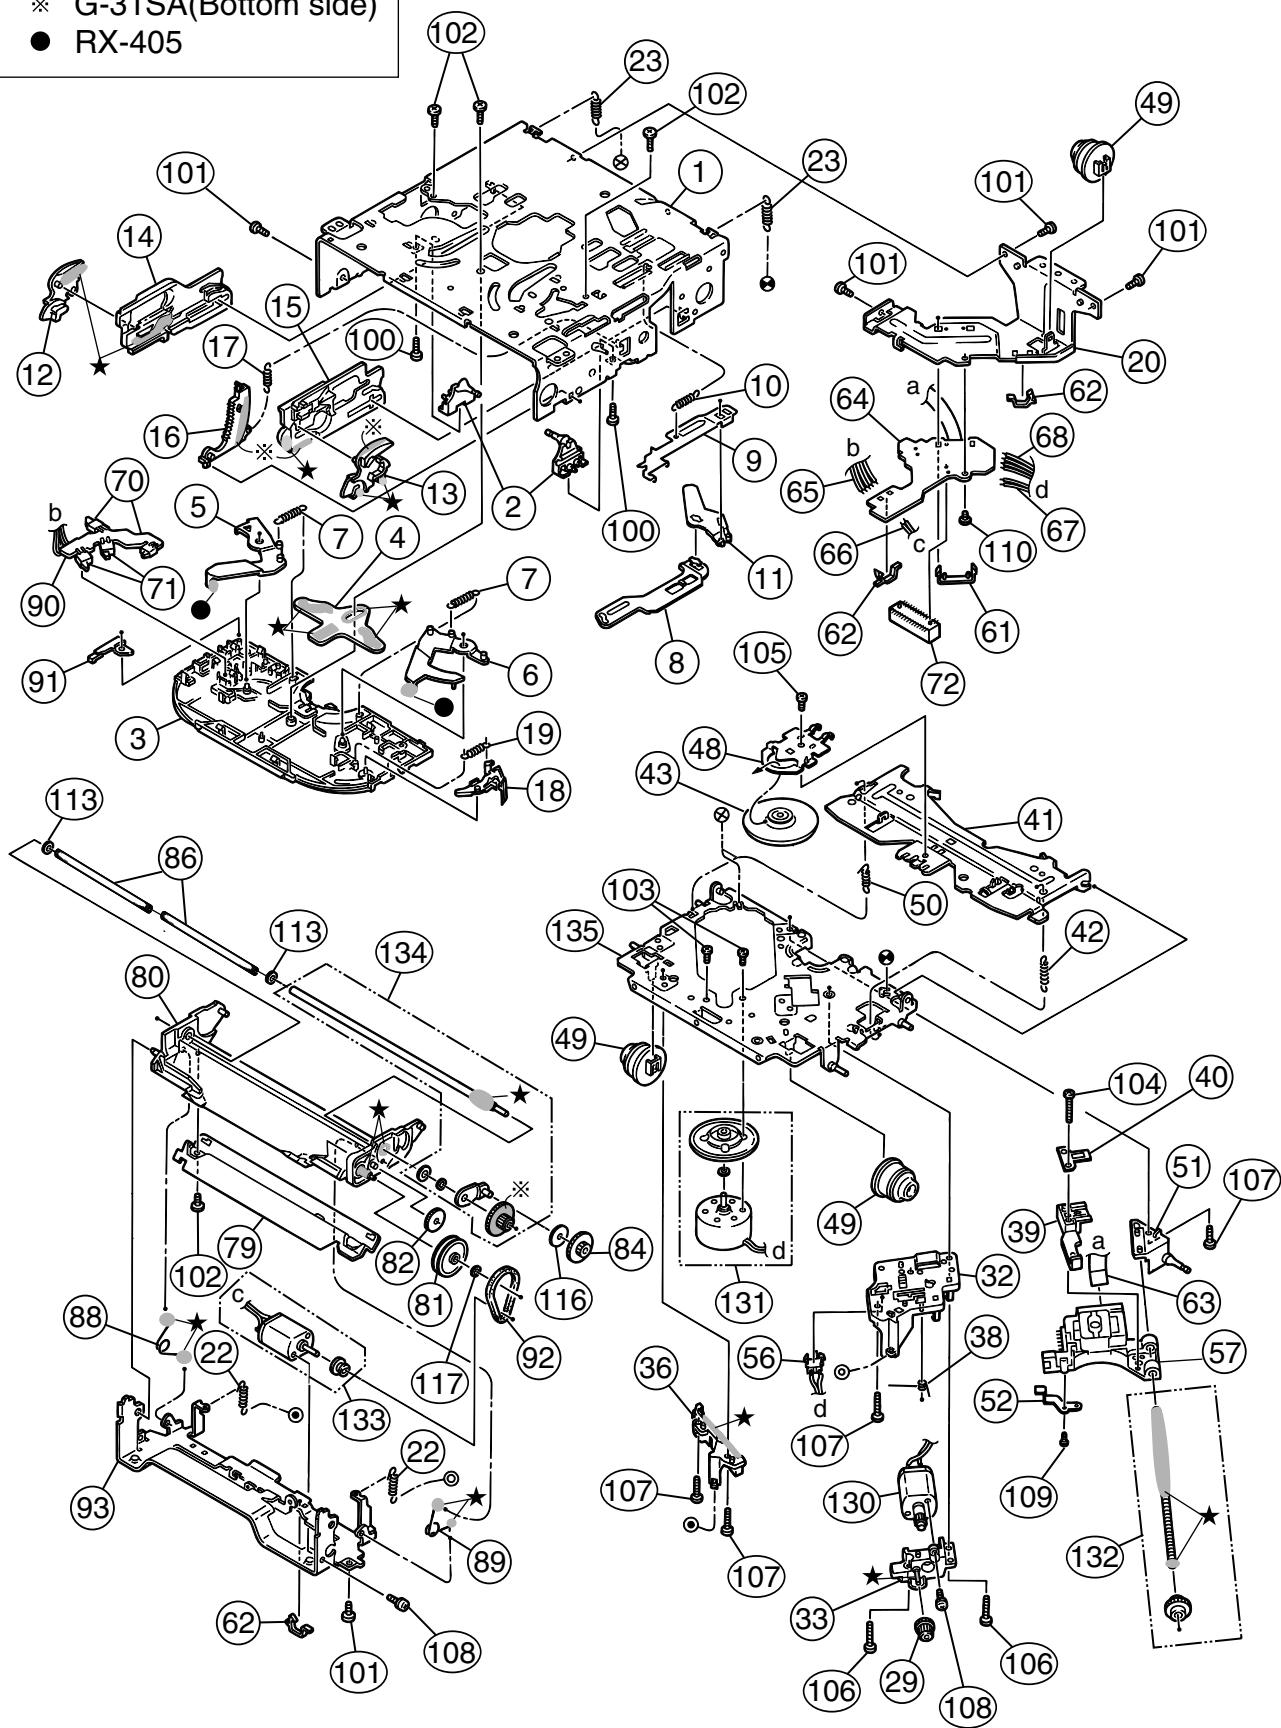

## ■ Parts list (CD mechanism)

Block No. MBMM

| ▲ | Item | Parts number | Parts name      | Q'ty | Description | Area |
|---|------|--------------|-----------------|------|-------------|------|
|   | 1    | 30310101T    | FRAME           | 1    |             |      |
|   | 2    | 30310103T    | DANPER PIN      | 2    |             |      |
|   | 3    | 30310107T    | UPPER PLATE     | 1    |             |      |
|   | 4    | 30310108T    | SEL STOP PLATE  | 1    |             |      |
|   | 5    | 30310142T    | SEL ARM (L)L    | 1    |             |      |
|   | 6    | 30310143T    | SEL ARM (R)L    | 1    |             |      |
|   | 7    | 30310145T    | S ARM SPRING(L) | 2    |             |      |
|   | 8    | 30310112T    | TRIG LEVER      | 1    |             |      |
|   | 9    | 30310155T    | TRIG PL(Z)      | 1    |             |      |
|   | 10   | 30310115T    | TRIG PL SPRING  | 1    |             |      |
|   | 11   | 30310116T    | TRIG ARM        | 1    |             |      |
|   | 12   | 30310134T    | FIX ARM (L)B    | 1    |             |      |
|   | 13   | 30310159T    | FIX ARM (R)Z    | 1    |             |      |
|   | 14   | 30310150T    | FIX PL (L)Z     | 1    |             |      |
|   | 15   | 30310156T    | FIX PL (R) Z    | 1    |             |      |
|   | 16   | 30310138T    | LDG GR (6)B     | 1    |             |      |
|   | 17   | 30310122T    | LDG GEAR (6)SP  | 1    |             |      |
|   | 18   | 30310148T    | S.L ARM(N)      | 1    |             |      |
|   | 19   | 30310125T    | S.L ARM SPRING  | 1    |             |      |
|   | 20   | 30310149T    | REAR DAM BKT(Z) | 1    |             |      |
|   | 22   | 30310151T    | HUNG UP SP (FZ) | 2    |             |      |
|   | 23   | 30310129T    | HUNG UP SP (R)  | 2    |             |      |
|   | 29   | 30300510T    | PU GEAR(B)      | 1    |             |      |
|   | 32   | 30310544T    | F.M.BASE(Z)     | 1    |             |      |
|   | 33   | 30310547T    | FD GR BLK(Z)    | 1    |             |      |
|   | 36   | 30310546T    | PU GUIDE(Z)     | 1    |             |      |
|   | 38   | 30310533T    | THRUST SPR(M)   | 1    |             |      |
|   | 39   | 30310548T    | PU M NUT(Z)     | 1    |             |      |
|   | 40   | 30310512T    | NUT PUSH SPR PL | 1    |             |      |
|   | 41   | 30310558T    | CLP ARM(Z)      | 1    |             |      |
|   | 42   | 30310514T    | CLP ARM SPRING  | 1    |             |      |
|   | 43   | 30310552T    | CLAMPER(Z)      | 1    |             |      |
|   | 48   | 30310557T    | CLAMPER PLATE(Z | 1    |             |      |
|   | 49   | 30310524T    | DAMPER (J)      | 3    |             |      |
|   | 50   | 30310525T    | CLP ARM SPR (L) | 1    |             |      |
|   | 51   | 30310545T    | F SCREW GUIDE(Z | 1    |             |      |
|   | 52   | 30310556T    | PU G.SP PLT(Z)  | 1    |             |      |
|   | 56   | 64180405T    | DET SW          | 1    | ESE11SF4    |      |
|   | 57   | OPTIMA-720L1 | C.D PICK (CAR)  | 1    |             |      |
|   | 61   | 30311035T    | FPC HOLDER(Z)   | 1    |             |      |
|   | 62   | 19501403T    | WIRE CLAMPER    | 3    |             |      |
|   | 63   | 30311037T    | PICK UP FPC(Z)  | 1    |             |      |
|   | 64   | 30311036T    | CONNECT.PCB(Z-J | 1    |             |      |
|   | 65   | 30311038T    | WIRE (5P-Z)     | 1    |             |      |
|   | 66   | 30311039T    | WIRE (LD-Z)     | 1    |             |      |
|   | 67   | 30311040T    | WIRE (FD-Z)     | 1    |             |      |
|   | 68   | 30311041T    | WIRE (RS-Z)     | 1    |             |      |
|   | 70   | 64180402T    | DET SWITCH      | 2    | ESE22MH1    |      |

## ■ Parts list (CD mechanism)

Block No. MBMM

| Item | Parts number | Parts name      | Q'ty | Description  | Area |
|------|--------------|-----------------|------|--------------|------|
| 71   | 64180403T    | DET SWITCH      | 2    | ESE22MH3     |      |
| 72   | 68150232T    | CONNECTOR       | 1    | TKC-W26X-C1  |      |
| 79   | 30311105T    | SOPPORT PLATE   | 1    |              |      |
| 80   | 30311138T    | GR MT BLK(N)    | 1    |              |      |
| 81   | 30311109T    | LDG GEAR (2)    | 1    |              |      |
| 82   | 30311110T    | LDG GEAR (3)    | 1    |              |      |
| 84   | 30311112T    | LDG GEAR (5)    | 1    |              |      |
| 86   | 30311136T    | LDG ROLLER      | 2    |              |      |
| 88   | 30311118T    | L.P SPRING (L)  | 1    |              |      |
| 89   | 30311119T    | L.P SPRING (R)  | 1    |              |      |
| 90   | 30311123T    | SW PCB          | 1    |              |      |
| 91   | 30311124T    | SW ACTUATOR     | 1    |              |      |
| 92   | 30311129T    | LDG BELT        | 1    |              |      |
| 93   | 30311140T    | FRONT BRKT (J)  | 1    |              |      |
| 100  | 9C0620503T   | C B TAP SCREW   | 2    | M2X5         |      |
| 101  | 9C2020401T   | C SCREW TS.G    | 5    | M2X4         |      |
| 102  | 9C4320403T   | C B TAP SCREW   | 4    | M2X4         |      |
| 103  | 9C0117223T   | SCREW           | 2    | M1.7X2.2     |      |
| 104  | 9C0917703T   | C TAP SCREW S3  | 1    | M1.7X7       |      |
| 105  | 9C0320201T   | C TAP SCREW S3  | 1    | M2X2         |      |
| 106  | 9C4920013T   | C TAP SCREW S3  | 2    | M2X10        |      |
| 107  | 9C4920603T   | C TAP SCREW B3  | 4    | M2X6         |      |
| 108  | 9P0220031T   | TAMS SCREW      | 2    | M2X3         |      |
| 109  | 9C0314203T   | C TAP SCREW     | 1    | M1.4X2       |      |
| 110  | 9C0420253    | C TAP SCREW     | 1    | M2X2.5       |      |
| 113  | 9W0330276    | NW BLUE         | 2    | 2.9X5X0.3    |      |
| 116  | 9W0725030T   | LUMILAR W       | 1    | 2.3X9.8X0.25 |      |
| 117  | 9W0640030T   | WASHER          | 1    | 1.4X3.2X0.4  |      |
| 130  | 303105310T   | FEED MO ASSY    | 1    |              |      |
| 131  | 303105311T   | SPINDLE MO ASSY | 1    |              |      |
| 132  | 303105312T   | FEED SCREW ASSY | 1    |              |      |
| 133  | 303111301T   | LDG MOTOR ASSY  | 1    |              |      |
| 134  | 303111302T   | RDG RLR SFT ASY | 1    |              |      |
| 135  | 303105502T   | T.T.BASE ASSY   | 1    |              |      |

## ■ Electrical parts list (Main board)

Block No. 01

| ▲ | Item  | Parts number | Parts name  | Remarks       | Area | ▲ | Item  | Parts number | Parts name  | Remarks        | Area |
|---|-------|--------------|-------------|---------------|------|---|-------|--------------|-------------|----------------|------|
|   | C 101 | QERF1HM-105Z | E CAPACITOR | 1.0MF 20% 50V |      |   | C 516 | QEJK1AM-107Z | E CAPACITOR | 100MF 20% 10V  |      |
|   | C 151 | NCB31HK-102X | C CAPACITOR |               |      |   | C 518 | NCB31AK-224X | C CAPACITOR |                |      |
|   | C 152 | QEJK1EM-475Z | E CAPACITOR | 4.7MF 20% 25V |      |   | C 519 | NCB31EK-473X | C CAPACITOR |                |      |
|   | C 153 | NDC31HJ-151X | C CAPACITOR |               |      |   | C 520 | NDC31HJ-470X | C CAPACITOR |                |      |
|   | C 155 | QEJK0JM-476Z | E CAPACITOR | 47MF 20% 6.3V |      |   | C 521 | NCS31HJ-561X | C CAPACITOR |                |      |
|   | C 201 | QERF1HM-105Z | E CAPACITOR | 1.0MF 20% 50V |      |   | C 522 | NCB31HK-223X | C CAPACITOR |                |      |
|   | C 251 | NCB31HK-102X | C CAPACITOR |               |      |   | C 523 | NCB31HK-223X | C CAPACITOR |                |      |
|   | C 252 | QERF1EM-475Z | E CAPACITOR | 4.7MF 20% 25V |      |   | C 524 | NCB31HK-102X | C CAPACITOR |                |      |
|   | C 253 | NDC31HJ-151X | C CAPACITOR |               |      |   | C 525 | NCB31EK-223X | C CAPACITOR |                |      |
|   | C 255 | QERF0JM-476Z | E CAPACITOR | 47MF 20% 6.3V |      |   | C 527 | NCB31EK-223X | C CAPACITOR |                |      |
|   | C 256 | QERF1AM-107Z | E CAPACITOR | 100MF 20% 10V |      |   | C 528 | NCB31HK-182X | C CAPACITOR |                |      |
|   | C 302 | NCB31HK-822X | C CAPACITOR |               |      |   | C 529 | NCB31HK-122X | C CAPACITOR |                |      |
|   | C 303 | NCB21CK-184X | C CAPACITOR |               |      |   | C 530 | NDC31HJ-680X | C CAPACITOR |                |      |
|   | C 304 | NCB21CK-224X | C CAPACITOR |               |      |   | C 541 | QERF1CM-226Z | E CAPACITOR | 22MF 20% 16V   |      |
|   | C 305 | NCB21HK-333X | C CAPACITOR |               |      |   | C 542 | NCB31HK-472X | C CAPACITOR |                |      |
|   | C 306 | NCB31HK-562X | C CAPACITOR |               |      |   | C 543 | NCB31EK-333X | C CAPACITOR |                |      |
|   | C 307 | QERF1EM-475Z | E CAPACITOR | 4.7MF 20% 25V |      |   | C 551 | QERF1AM-227Z | E CAPACITOR | 220MF 20% 10V  |      |
|   | C 308 | QERF1EM-475Z | E CAPACITOR | 4.7MF 20% 25V |      |   | C 552 | NCB31EK-103X | C CAPACITOR |                |      |
|   | C 309 | QEJK1AM-107Z | E CAPACITOR | 100MF 20% 10V |      |   | C 561 | NCB31EK-103X | C CAPACITOR |                |      |
|   | C 310 | NCB31HK-103X | C CAPACITOR |               |      |   | C 562 | NCB31EK-103X | C CAPACITOR |                |      |
|   | C 311 | QEJK1AM-107Z | E CAPACITOR | 100MF 20% 10V |      |   | C 563 | NCB31HK-102X | C CAPACITOR |                |      |
|   | C 312 | QEJK1CM-476Z | E CAPACITOR | 47MF 20% 16V  |      |   | C 564 | NCB21CK-274X | C CAPACITOR |                |      |
|   | C 319 | NCS31HJ-221X | C CAPACITOR |               |      |   | C 565 | NCB31EK-104X | C CAPACITOR |                |      |
|   | C 320 | NCS31HJ-221X | C CAPACITOR |               |      |   | C 566 | NCB31AK-474X | C CAPACITOR |                |      |
|   | C 321 | QERF1CM-107Z | E CAPACITOR | 100MF 20% 16V |      |   | C 567 | QERF1AM-107Z | E CAPACITOR | 100MF 20% 10V  |      |
|   | C 327 | QEJK1EM-475Z | E CAPACITOR | 4.7MF 20% 25V |      |   | C 568 | NCB31EK-103X | C CAPACITOR |                |      |
|   | C 328 | QEJK1CM-476Z | E CAPACITOR | 47MF 20% 16V  |      |   | C 571 | NCB31EK-103X | C CAPACITOR |                |      |
|   | C 329 | QEJK1EM-475Z | E CAPACITOR | 4.7MF 20% 25V |      |   | C 572 | QEJK1AM-107Z | E CAPACITOR | 100MF 20% 10V  |      |
|   | C 330 | NCB31HK-223X | C CAPACITOR |               |      |   | C 573 | QERF1AM-227Z | E CAPACITOR | 220MF 20% 10V  |      |
|   | C 331 | NCB31HK-223X | C CAPACITOR |               |      |   | C 574 | NCB31EK-103X | C CAPACITOR |                |      |
|   | C 332 | NCB31EK-104X | C CAPACITOR |               |      |   | C 576 | NCB31HK-152X | C CAPACITOR |                |      |
|   | C 333 | NCB31EK-104X | C CAPACITOR |               |      |   | C 577 | NCB31EK-104X | C CAPACITOR |                |      |
|   | C 334 | QERF1HM-105Z | E CAPACITOR | 1.0MF 20% 50V |      |   | C 579 | NCB31HK-102X | C CAPACITOR |                |      |
|   | C 335 | QERF1HM-105Z | E CAPACITOR | 1.0MF 20% 50V |      |   | C 701 | QERF1AM-476Z | E CAPACITOR | 47MF 20% 10V   |      |
|   | C 402 | NCB31HK-822X | C CAPACITOR |               |      |   | C 702 | QEJK1HM-104Z | E CAPACITOR | .10MF 20% 50V  |      |
|   | C 403 | NCB21CK-184X | C CAPACITOR |               |      |   | C 703 | QERF1HM-104Z | E CAPACITOR | .10MF 20% 50V  |      |
|   | C 404 | NCB21CK-224X | C CAPACITOR |               |      |   | C 709 | NCB31EK-223X | C CAPACITOR |                |      |
|   | C 405 | NCB21HK-333X | C CAPACITOR |               |      |   | C 710 | NCB31EK-223X | C CAPACITOR |                |      |
|   | C 406 | NCB31HK-562X | C CAPACITOR |               |      |   | C 711 | NCB31EK-103X | C CAPACITOR |                |      |
|   | C 407 | QERF1EM-475Z | E CAPACITOR | 4.7MF 20% 25V |      |   | C 712 | QEJK1HM-104Z | E CAPACITOR | .10MF 20% 50V  |      |
|   | C 408 | QERF1EM-475Z | E CAPACITOR | 4.7MF 20% 25V |      |   | C 713 | NDC31HJ-101X | C CAPACITOR |                |      |
|   | C 419 | NCS31HJ-221X | C CAPACITOR |               |      |   | C 714 | NCB31HK-103X | C CAPACITOR |                |      |
|   | C 420 | NCS31HJ-221X | C CAPACITOR |               |      |   | C 715 | NDC31HJ-151X | C CAPACITOR |                |      |
|   | C 427 | QEJK1CM-226Z | E CAPACITOR | 22MF 20% 16V  |      |   | C 717 | NCS31HJ-221X | C CAPACITOR |                |      |
|   | C 432 | NCB31EK-104X | C CAPACITOR |               |      |   | C 718 | NCB31EK-223X | C CAPACITOR |                |      |
|   | C 433 | NCB31EK-104X | C CAPACITOR |               |      |   | C 720 | QERF1AM-227Z | E CAPACITOR | 220MF 20% 10V  |      |
|   | C 434 | QERF1HM-105Z | E CAPACITOR | 1.0MF 20% 50V |      |   | C 725 | NCB31EK-103X | C CAPACITOR |                |      |
|   | C 435 | QERF1HM-105Z | E CAPACITOR | 1.0MF 20% 50V |      |   | C 731 | QERF1HM-225Z | E CAPACITOR | 2.2MF 20% 50V  |      |
|   | C 501 | NCB31EK-103X | C CAPACITOR |               |      |   | C 732 | NCB31HK-102X | C CAPACITOR |                |      |
|   | C 502 | QEJK1AM-107Z | E CAPACITOR | 100MF 20% 10V |      |   | C 733 | QERF1AM-227Z | E CAPACITOR | 220MF 20% 10V  |      |
|   | C 503 | NDC31HJ-680X | C CAPACITOR |               |      |   | C 801 | QEJK0JM-227Z | E CAPACITOR | 220MF 20% 6.3V |      |
|   | C 504 | QEJK1AM-107Z | E CAPACITOR | 100MF 20% 10V |      |   | C 802 | NCB31EK-103X | C CAPACITOR |                |      |
|   | C 505 | NCB31EK-103X | C CAPACITOR |               |      |   | C 803 | NDC31HJ-220X | C CAPACITOR |                |      |
|   | C 506 | NDC31HJ-3R0X | C CAPACITOR |               |      |   | C 804 | NDC31HJ-330X | C CAPACITOR |                |      |
|   | C 507 | NCB31EK-104X | C CAPACITOR |               |      |   | C 807 | QERF1CM-106Z | E CAPACITOR | 10MF 20% 16V   |      |
|   | C 508 | QEJK1HM-105Z | E CAPACITOR | 1.0MF 20% 50V |      |   | C 821 | NCB31EK-104X | C CAPACITOR |                |      |
|   | C 509 | NDC31HJ-101X | C CAPACITOR |               |      |   | C 822 | NCB31EK-104X | C CAPACITOR |                |      |
|   | C 510 | NCB31EK-273X | C CAPACITOR |               |      |   | C 823 | NCB31EK-104X | C CAPACITOR |                |      |
|   | C 511 | NCB31HK-472X | C CAPACITOR |               |      |   | C 861 | QEJK0JM-227Z | E CAPACITOR | 220MF 20% 6.3V |      |
|   | C 512 | NCB31HK-103X | C CAPACITOR |               |      |   | C 862 | NCB31EK-823X | C CAPACITOR |                |      |
|   | C 513 | NDC31HJ-331X | C CAPACITOR |               |      |   | C 901 | QEZ0337-228  | E CAPACITOR | 2200MF         |      |
|   | C 514 | NCB31EK-104X | C CAPACITOR |               |      |   | C 902 | NCB31HK-103X | C CAPACITOR |                |      |
|   | C 515 | NCB31EK-103X | C CAPACITOR |               |      |   | C 903 | QEJK1CM-226Z | E CAPACITOR | 22MF 20% 16V   |      |

## ■ Electrical parts list (Main board)

Block No. 01

| ▲ | Item  | Parts number  | Parts name      | Remarks       | Area | ▲ | Item  | Parts number   | Parts name      | Remarks | Area |
|---|-------|---------------|-----------------|---------------|------|---|-------|----------------|-----------------|---------|------|
|   | C 904 | QERF1CM-226Z  | E CAPACITOR     | 22MF 20% 16V  |      |   | Q 701 | DTC114EKA-X    | TRANSISTOR      |         |      |
|   | C 905 | QERF1CM-226Z  | E CAPACITOR     | 22MF 20% 16V  |      |   | Q 702 | DTC144EKA-X    | TRANSISTOR      |         |      |
|   | C 906 | NCB31EK-104X  | C CAPACITOR     |               |      |   | Q 731 | 2SC1623/5-6/-X | TRANSISTOR      |         |      |
|   | C 907 | NCB31HK-103X  | C CAPACITOR     |               |      |   | Q 732 | 2SC1623/5-6/-X | TRANSISTOR      |         |      |
|   | C 908 | QERF1AM-107Z  | E CAPACITOR     | 100MF 20% 10V |      |   | Q 791 | 2SB1197K/QR-X  | TRANSISTOR      |         |      |
|   | C 909 | QERF1AM-107Z  | E CAPACITOR     | 100MF 20% 10V |      |   | Q 792 | 2SA812/5-6/-X  | TRANSISTOR      |         |      |
|   | C 910 | NCB31HK-103X  | C CAPACITOR     |               |      |   | Q 793 | DTC114EKA-X    | TRANSISTOR      |         |      |
|   | C 911 | QERF1AM-227Z  | E CAPACITOR     | 220MF 20% 10V |      |   | Q 861 | DTA114EKA-X    | DIGI TRANSISTOR |         |      |
|   | C 914 | NCB31EK-104X  | C CAPACITOR     |               |      |   | Q 902 | 2SC1623/5-6/-X | TRANSISTOR      |         |      |
|   | C 915 | NCB11CK-225X  | C CAPACITOR     |               |      |   | Q 903 | 2SA812/5-6/-X  | TRANSISTOR      |         |      |
|   | C 916 | QERF1HM-225Z  | E CAPACITOR     | 2.2MF 20% 50V |      |   | R 101 | NRSA63J-471X   | MG RESISTOR     |         |      |
|   | CJ321 | QNN0170-001   | PIN JACK (REEL) |               |      |   | R 102 | NRSA63J-752X   | MG RESISTOR     |         |      |
|   | CJ701 | QNBO100-002   | ANT TERMINAL    |               |      |   | R 151 | NRSA63J-183X   | MG RESISTOR     |         |      |
|   | CN501 | QGB2027M1-26S | CONNECTOR       |               |      |   | R 152 | NRSA63J-123X   | MG RESISTOR     |         |      |
|   | CN801 | VMC0334-001   | CONNECTOR       |               |      |   | R 153 | NRSA63J-273X   | MG RESISTOR     |         |      |
|   | CN901 | QNZ0002-001   | CONNECTOR       |               |      |   | R 154 | NRSA63J-223X   | MG RESISTOR     |         |      |
|   | D 321 | 1SS254-T2     | SI DIODE        |               |      |   | R 155 | NRSA63J-152X   | MG RESISTOR     |         |      |
|   | D 332 | 1SS355-X      | DIODE           |               |      |   | R 156 | NRS181J-223X   | MG RESISTOR     |         |      |
|   | D 333 | 1SS355-X      | DIODE           |               |      |   | R 201 | NRSA63J-471X   | MG RESISTOR     |         |      |
|   | D 551 | DSK10C-T1     | DIODE           |               |      |   | R 202 | NRSA63J-752X   | MG RESISTOR     |         |      |
|   | D 701 | 1SS254-T2     | SI DIODE        |               |      |   | R 251 | NRSA63J-183X   | MG RESISTOR     |         |      |
|   | D 702 | 1SS254-T2     | SI DIODE        |               |      |   | R 252 | NRSA63J-123X   | MG RESISTOR     |         |      |
|   | D 731 | MTZJ10B-T2    | Z DIODE         |               |      |   | R 253 | NRSA63J-273X   | MG RESISTOR     |         |      |
|   | D 791 | 1SS355-X      | DIODE           |               |      |   | R 254 | NRSA63J-223X   | MG RESISTOR     |         |      |
|   | D 792 | 1SS355-X      | DIODE           |               |      |   | R 255 | NRSA63J-152X   | MG RESISTOR     |         |      |
|   | D 804 | 1SS254-T2     | SI DIODE        |               |      |   | R 256 | NRS181J-223X   | MG RESISTOR     |         |      |
|   | D 810 | 1SS355-X      | DIODE           |               |      |   | R 301 | NRSA63J-223X   | MG RESISTOR     |         |      |
|   | D 821 | UDZS6.2B-X    | SI DIODE        |               |      |   | R 302 | NRSA63J-222X   | MG RESISTOR     |         |      |
|   | D 822 | UDZS6.2B-X    | SI DIODE        |               |      |   | R 303 | NRSA63J-473X   | MG RESISTOR     |         |      |
|   | D 823 | UDZS6.2B-X    | SI DIODE        |               |      |   | R 304 | NRSA63J-473X   | MG RESISTOR     |         |      |
|   | D 824 | UDZS6.2B-X    | SI DIODE        |               |      |   | R 307 | NRSA63J-273X   | MG RESISTOR     |         |      |
|   | D 825 | UDZS6.2B-X    | SI DIODE        |               |      |   | R 308 | NRSA63J-273X   | MG RESISTOR     |         |      |
|   | D 826 | UDZS6.2B-X    | SI DIODE        |               |      |   | R 321 | NRS181J-473X   | MG RESISTOR     |         |      |
|   | D 827 | UDZS6.2B-X    | SI DIODE        |               |      |   | R 322 | NRS181J-471X   | MG RESISTOR     |         |      |
|   | D 828 | UDZS6.2B-X    | SI DIODE        |               |      |   | R 323 | NRS181J-102X   | MG RESISTOR     |         |      |
|   | D 861 | MTZJ4.7B-T2   | Z DIODE         |               |      |   | R 333 | NRSA63J-102X   | MG RESISTOR     |         |      |
|   | D 866 | 1SS355-X      | DIODE           |               |      |   | R 334 | NRSA63J-101X   | MG RESISTOR     |         |      |
|   | D 867 | 1SS355-X      | DIODE           |               |      |   | R 336 | NRSA63J-222X   | MG RESISTOR     |         |      |
|   | D 868 | 1SS355-X      | DIODE           |               |      |   | R 401 | NRSA63J-223X   | MG RESISTOR     |         |      |
|   | D 869 | 1SS355-X      | DIODE           |               |      |   | R 402 | NRSA63J-222X   | MG RESISTOR     |         |      |
|   | D 901 | 1N5401-TU-15  | DIODE           |               |      |   | R 403 | NRSA63J-473X   | MG RESISTOR     |         |      |
|   | D 902 | SB10-03A3-T2  | SB DIODE        |               |      |   | R 404 | NRSA63J-473X   | MG RESISTOR     |         |      |
|   | D 903 | 1SS254-T2     | SI DIODE        |               |      |   | R 407 | NRSA63J-273X   | MG RESISTOR     |         |      |
|   | D 904 | CRS03-W       | SB DIODE        |               |      |   | R 408 | NRSA63J-273X   | MG RESISTOR     |         |      |
|   | IC151 | NJM4565M-WE   | IC              |               |      |   | R 433 | NRSA63J-102X   | MG RESISTOR     |         |      |
|   | IC301 | TEA6320T-X    | IC              |               |      |   | R 434 | NRSA63J-101X   | MG RESISTOR     |         |      |
|   | IC321 | LA4743K       | IC              |               |      |   | R 436 | NRSA63J-222X   | MG RESISTOR     |         |      |
|   | IC501 | AN8806SB-W    | IC              |               |      |   | R 501 | NRS181J-220X   | MG RESISTOR     |         |      |
|   | IC541 | LA6567H-X     | IC              |               |      |   | R 502 | NRS181J-220X   | MG RESISTOR     |         |      |
|   | IC561 | MN6627482WA   | IC              |               |      |   | R 503 | NRS181J-102X   | MG RESISTOR     |         |      |
|   | IC801 | LC72366-9A73  | IC              |               |      |   | R 504 | NRSA63J-392X   | MG RESISTOR     |         |      |
|   | IC901 | HA13164A      | IC              |               |      |   | R 505 | NRSA63J-224X   | MG RESISTOR     |         |      |
|   | L 501 | QQL231K-4R7Y  | INDUCTOR        |               |      |   | R 506 | NRSA63J-223X   | MG RESISTOR     |         |      |
|   | L 561 | QQL231K-4R7Y  | INDUCTOR        |               |      |   | R 507 | NRSA63J-822X   | MG RESISTOR     |         |      |
|   | L 562 | QQL231K-4R7Y  | INDUCTOR        |               |      |   | R 508 | NRSA63J-104X   | MG RESISTOR     |         |      |
|   | L 701 | QQL231K-4R7Y  | INDUCTOR        |               |      |   | R 509 | NRSA63J-223X   | MG RESISTOR     |         |      |
|   | L 801 | QQL231K-4R7Y  | INDUCTOR        |               |      |   | R 510 | NRSA63J-154X   | MG RESISTOR     |         |      |
|   | L 901 | QQR0703-001   | CHOKE COIL      |               |      |   | R 511 | NRSA63J-274X   | MG RESISTOR     |         |      |
|   | Q 321 | DTC114EKA-X   | TRANSISTOR      |               |      |   | R 512 | NRSA63J-563X   | MG RESISTOR     |         |      |
|   | Q 332 | 2SD1781K/QR-X | TRANSISTOR      |               |      |   | R 513 | NRSA63J-563X   | MG RESISTOR     |         |      |
|   | Q 432 | 2SD1781K/QR-X | TRANSISTOR      |               |      |   | R 514 | NRSA63J-123X   | MG RESISTOR     |         |      |
|   | Q 501 | 2SA1706/ST-T  | TRANSISTOR      |               |      |   | R 515 | NRSA63J-123X   | MG RESISTOR     |         |      |
|   | Q 541 | 2SA1706/ST-T  | TRANSISTOR      |               |      |   | R 516 | NRSA63J-123X   | MG RESISTOR     |         |      |

## ■ Electrical parts list (Main board)

Block No. 01

| Item  | Parts number | Parts name  | Remarks | Area | Item  | Parts number | Parts name  | Remarks | Area |
|-------|--------------|-------------|---------|------|-------|--------------|-------------|---------|------|
| R 517 | NRSA63J-123X | MG RESISTOR |         |      | R 814 | NRSA63J-473X | MG RESISTOR |         |      |
| R 518 | NRSA63J-822X | MG RESISTOR |         |      | R 815 | NRSA63J-473X | MG RESISTOR |         |      |
| R 519 | NRSA63J-105X | MG RESISTOR |         |      | R 816 | NRSA63J-473X | MG RESISTOR |         |      |
| R 541 | NRS181J-621X | MG RESISTOR |         |      | R 817 | NRS181J-472X | MG RESISTOR |         |      |
| R 542 | NRSA63J-432X | MG RESISTOR |         |      | R 818 | NRS181J-473X | MG RESISTOR |         |      |
| R 543 | NRSA63J-303X | MG RESISTOR |         |      | R 822 | NRSA63J-222X | MG RESISTOR |         |      |
| R 544 | NRSA63J-332X | MG RESISTOR |         |      | R 823 | NRSA63J-473X | MG RESISTOR |         |      |
| R 545 | NRSA63J-123X | MG RESISTOR |         |      | R 825 | NRS181J-473X | MG RESISTOR |         |      |
| R 546 | NRSA63J-563X | MG RESISTOR |         |      | R 826 | NRSA63J-473X | MG RESISTOR |         |      |
| R 547 | NRSA63J-154X | MG RESISTOR |         |      | R 827 | NRSA63J-473X | MG RESISTOR |         |      |
| R 548 | NRSA63J-432X | MG RESISTOR |         |      | R 828 | NRSA63J-473X | MG RESISTOR |         |      |
| R 549 | NRSA63J-203X | MG RESISTOR |         |      | R 829 | NRS181J-473X | MG RESISTOR |         |      |
| R 550 | NRSA63J-682X | MG RESISTOR |         |      | R 830 | NRS181J-223X | MG RESISTOR |         |      |
| R 551 | NRSA63J-822X | MG RESISTOR |         |      | R 831 | NRS181J-472X | MG RESISTOR |         |      |
| R 560 | NRS181J-101X | MG RESISTOR |         |      | R 832 | NRS181J-223X | MG RESISTOR |         |      |
| R 561 | NRSA63J-102X | MG RESISTOR |         |      | R 833 | NRS181J-472X | MG RESISTOR |         |      |
| R 562 | NRSA63J-102X | MG RESISTOR |         |      | R 834 | NRS181J-223X | MG RESISTOR |         |      |
| R 563 | NRSA63J-102X | MG RESISTOR |         |      | R 835 | NRS181J-472X | MG RESISTOR |         |      |
| R 564 | NRSA63J-102X | MG RESISTOR |         |      | R 836 | NRSA63J-473X | MG RESISTOR |         |      |
| R 567 | NRSA63J-102X | MG RESISTOR |         |      | R 840 | NRSA63J-473X | MG RESISTOR |         |      |
| R 568 | NRSA63J-102X | MG RESISTOR |         |      | R 841 | NRSA63J-473X | MG RESISTOR |         |      |
| R 569 | NRSA63J-102X | MG RESISTOR |         |      | R 842 | NRSA63J-473X | MG RESISTOR |         |      |
| R 570 | NRSA63J-102X | MG RESISTOR |         |      | R 843 | NRSA63J-0R0X | MG RESISTOR |         |      |
| R 571 | NRS181J-333X | MG RESISTOR |         |      | R 844 | NRSA63J-0R0X | MG RESISTOR |         |      |
| R 573 | NRSA63J-333X | MG RESISTOR |         |      | R 845 | NRSA63J-0R0X | MG RESISTOR |         |      |
| R 574 | NRSA63J-221X | MG RESISTOR |         |      | R 861 | NRS181J-471X | MG RESISTOR |         |      |
| R 575 | NRSA63J-221X | MG RESISTOR |         |      | R 862 | NRS181J-471X | MG RESISTOR |         |      |
| R 576 | NRSA63J-0R0X | MG RESISTOR |         |      | R 901 | NRSA63J-912X | MG RESISTOR |         |      |
| R 577 | NRSA63J-104X | MG RESISTOR |         |      | R 902 | QRZ0125-102X | C RESISTOR  | 1.0K 1W |      |
| R 579 | NRSA63J-102X | MG RESISTOR |         |      | R 903 | NRSA63J-472X | MG RESISTOR |         |      |
| R 580 | NRSA63J-224X | MG RESISTOR |         |      | R 904 | NRSA63J-104X | MG RESISTOR |         |      |
| R 581 | NRSA63J-0R0X | MG RESISTOR |         |      | R 905 | NRSA63J-472X | MG RESISTOR |         |      |
| R 701 | NRSA63J-102X | MG RESISTOR |         |      | R 906 | NRSA63J-472X | MG RESISTOR |         |      |
| R 702 | NRSA63J-151X | MG RESISTOR |         |      | R 907 | NRSA63J-393X | MG RESISTOR |         |      |
| R 703 | NRSA63J-102X | MG RESISTOR |         |      | R 908 | NRSA63J-683X | MG RESISTOR |         |      |
| R 704 | NRSA63J-151X | MG RESISTOR |         |      | R 909 | NRSA63J-273X | MG RESISTOR |         |      |
| R 705 | NRSA63J-103X | MG RESISTOR |         |      | R 910 | NRSA63J-473X | MG RESISTOR |         |      |
| R 708 | NRSA63J-822X | MG RESISTOR |         |      | R 911 | NRS181J-473X | MG RESISTOR |         |      |
| R 725 | NRSA63J-820X | MG RESISTOR |         |      | TU701 | QAU0257-001  | TUNER       |         |      |
| R 731 | NRS181J-152X | MG RESISTOR |         |      | X 561 | QAX0714-001Z | C RESONATOR |         |      |
| R 732 | NRSA63J-102X | MG RESISTOR |         |      | X 801 | QAX0406-001Z | CRYSTAL     |         |      |
| R 733 | NRSA63J-103X | MG RESISTOR |         |      |       |              |             |         |      |
| R 734 | NRS181J-471X | MG RESISTOR |         |      |       |              |             |         |      |
| R 791 | NRSA63J-103X | MG RESISTOR |         |      |       |              |             |         |      |
| R 792 | NRSA63J-102X | MG RESISTOR |         |      |       |              |             |         |      |
| R 793 | NRSA63J-103X | MG RESISTOR |         |      |       |              |             |         |      |
| R 794 | NRSA63J-222X | MG RESISTOR |         |      |       |              |             |         |      |
| R 795 | NRS181J-150X | MG RESISTOR |         |      |       |              |             |         |      |
| R 796 | NRS181J-150X | MG RESISTOR |         |      |       |              |             |         |      |
| R 797 | NRS181J-100X | MG RESISTOR |         |      |       |              |             |         |      |
| R 798 | NRSA63J-223X | MG RESISTOR |         |      |       |              |             |         |      |
| R 799 | NRSA63J-473X | MG RESISTOR |         |      |       |              |             |         |      |
| R 801 | NRS181J-103X | MG RESISTOR |         |      |       |              |             |         |      |
| R 803 | NRS181J-332X | MG RESISTOR |         |      |       |              |             |         |      |
| R 804 | NRS181J-332X | MG RESISTOR |         |      |       |              |             |         |      |
| R 805 | NRS181J-332X | MG RESISTOR |         |      |       |              |             |         |      |
| R 807 | NRS181J-473X | MG RESISTOR |         |      |       |              |             |         |      |
| R 808 | NRS181J-102X | MG RESISTOR |         |      |       |              |             |         |      |
| R 809 | NRS181J-103X | MG RESISTOR |         |      |       |              |             |         |      |
| R 810 | NRSA63J-104X | MG RESISTOR |         |      |       |              |             |         |      |
| R 811 | NRSA63J-332X | MG RESISTOR |         |      |       |              |             |         |      |
| R 812 | NRSA63J-332X | MG RESISTOR |         |      |       |              |             |         |      |
| R 813 | NRSA63J-473X | MG RESISTOR |         |      |       |              |             |         |      |

## ■ Electrical parts list (Front board)

Block No. 02


| ▲ | Item  | Parts number    | Parts name      | Remarks     | Area |
|---|-------|-----------------|-----------------|-------------|------|
|   | C 601 | NCB31HK-223X    | C CAPACITOR     |             |      |
|   | C 602 | NCS31HJ-681X    | C CAPACITOR     |             |      |
|   | C 603 | NBE20JM-106X    | TS E CAP SVB20J |             |      |
|   | CJ601 | VMC0335-001     | CONNECTOR       |             |      |
|   | D 601 | LNJ308G81/1-3/X | LED             | VOL+ G LED  |      |
|   | D 602 | LNJ308G81/1-3/X | LED             | VOL- G LED  |      |
|   | D 603 | LNJ308G81/1-3/X | LED             | LOUD G LED  |      |
|   | D 604 | LNJ308G81/1-3/X | LED             | SEL G LED   |      |
|   | D 605 | LNJ308G81/1-3/X | LED             | DISP G LED  |      |
|   | D 606 | LNJ308G81/1-3/X | LED             | 1 G LED     |      |
|   | D 607 | LNJ308G81/1-3/X | LED             | 2 G LED     |      |
|   | D 608 | LNJ308G81/1-3/X | LED             | 3 G LED     |      |
|   | D 609 | LNJ308G81/1-3/X | LED             | 4 G LED     |      |
|   | D 610 | LNJ308G81/1-3/X | LED             | 5 G LED     |      |
|   | D 611 | LNJ308G81/1-3/X | LED             | 6 G LED     |      |
|   | D 612 | LNJ308G81/1-3/X | LED             | MODE G LED  |      |
|   | D 613 | SML-310VT/JK/-X | LED             | SCM R LED   |      |
|   | D 614 | LNJ308G81/1-3/X | LED             | EJECT G LED |      |
|   | D 615 | LNJ308G81/1-3/X | LED             | FM G LED    |      |
|   | D 616 | LNJ308G81/1-3/X | LED             | CD G LED    |      |
|   | D 617 | LNJ308G81/1-3/X | LED             | AM G LED    |      |
|   | D 618 | LNJ308G81/1-3/X | LED             | UP G LED    |      |
|   | D 619 | LNJ308G81/1-3/X | LED             | DOWN G LED  |      |
|   | D 620 | SML-310LT/MN/-X | LED             | POWER R LED |      |
|   | D 641 | UDZS5.1B-X      | Z DIODE         |             |      |
|   | D 642 | 1SS355-X        | DIODE           |             |      |
|   | D 643 | 1SS355-X        | DIODE           |             |      |
|   | D 645 | UDZS6.2B-X      | SI DIODE        |             |      |
|   | IC601 | LC75823W        | IC              |             |      |
|   | PL601 | QLL0056-001     | PILOT LAMP      |             |      |
|   | PL602 | QLL0056-001     | PILOT LAMP      |             |      |
|   | R 601 | NRSA63J-681X    | MG RESISTOR     |             |      |
|   | R 602 | NRSA63J-561X    | MG RESISTOR     |             |      |
|   | R 603 | NRSA63J-681X    | MG RESISTOR     |             |      |
|   | R 604 | NRSA63J-911X    | MG RESISTOR     |             |      |
|   | R 605 | NRSA63J-122X    | MG RESISTOR     |             |      |
|   | R 606 | NRSA02J-681X    | MG RESISTOR     |             |      |
|   | R 607 | NRSA02J-561X    | MG RESISTOR     |             |      |
|   | R 608 | NRSA02J-681X    | MG RESISTOR     |             |      |
|   | R 609 | NRSA02J-911X    | MG RESISTOR     |             |      |
|   | R 610 | NRSA63J-122X    | MG RESISTOR     |             |      |
|   | R 611 | NRSA63J-152X    | MG RESISTOR     |             |      |
|   | R 612 | NRSA63J-681X    | MG RESISTOR     |             |      |
|   | R 613 | NRSA63J-561X    | MG RESISTOR     |             |      |
|   | R 614 | NRSA63J-681X    | MG RESISTOR     |             |      |
|   | R 615 | NRSA63J-911X    | MG RESISTOR     |             |      |
|   | R 616 | NRSA63J-122X    | MG RESISTOR     |             |      |
|   | R 617 | NRSA63J-152X    | MG RESISTOR     |             |      |
|   | R 631 | NRSA02J-821X    | MG RESISTOR     |             |      |
|   | R 632 | NRSA02J-821X    | MG RESISTOR     |             |      |
|   | R 633 | NRSA02J-821X    | MG RESISTOR     |             |      |
|   | R 634 | NRSA02J-511X    | MG RESISTOR     |             |      |
|   | R 635 | NRSA02J-511X    | MG RESISTOR     |             |      |
|   | R 636 | NRSA02J-152X    | MG RESISTOR     |             |      |
|   | R 637 | NRSA02J-152X    | MG RESISTOR     |             |      |
|   | R 638 | NRSA02J-221X    | MG RESISTOR     |             |      |
|   | R 639 | NRSA02J-221X    | MG RESISTOR     |             |      |
|   | R 640 | NRSA02J-221X    | MG RESISTOR     |             |      |
|   | R 641 | NRSA02J-221X    | MG RESISTOR     |             |      |
|   | R 642 | NRSA02J-511X    | MG RESISTOR     |             |      |
|   | R 643 | NRSA02J-511X    | MG RESISTOR     |             |      |
|   | R 644 | NRSA02J-821X    | MG RESISTOR     |             |      |
|   | R 645 | NRSA02J-821X    | MG RESISTOR     |             |      |

| ▲ | Item  | Parts number | Parts name  | Remarks | Area |
|---|-------|--------------|-------------|---------|------|
|   | R 651 | NRSA63J-222X | MG RESISTOR |         |      |
|   | R 652 | NRSA63J-222X | MG RESISTOR |         |      |
|   | R 653 | NRSA63J-103X | MG RESISTOR |         |      |
|   | R 654 | NRSA63J-103X | MG RESISTOR |         |      |
|   | R 655 | NRSA63J-103X | MG RESISTOR |         |      |
|   | R 656 | NRSA63J-103X | MG RESISTOR |         |      |
|   | R 657 | NRSA63J-513X | MG RESISTOR |         |      |
|   | R 658 | NRSA63J-184X | MG RESISTOR |         |      |
|   | S 601 | NSW0066-001X | TACT SWITCH | POWER   |      |
|   | S 602 | NSW0066-001X | TACT SWITCH | VOL-    |      |
|   | S 603 | NSW0066-001X | TACT SWITCH | VOL+    |      |
|   | S 604 | NSW0066-001X | TACT SWITCH | LOUD    |      |
|   | S 605 | NSW0066-001X | TACT SWITCH | DISP    |      |
|   | S 606 | NSW0066-001X | TACT SWITCH | 1       |      |
|   | S 607 | NSW0066-001X | TACT SWITCH | SELECT  |      |
|   | S 608 | NSW0066-001X | TACT SWITCH | 2       |      |
|   | S 609 | NSW0066-001X | TACT SWITCH | 3       |      |
|   | S 610 | NSW0066-001X | TACT SWITCH | 4       |      |
|   | S 611 | NSW0066-001X | TACT SWITCH | 5       |      |
|   | S 612 | NSW0066-001X | TACT SWITCH | EJECT   |      |
|   | S 613 | NSW0066-001X | TACT SWITCH | UP      |      |
|   | S 614 | NSW0066-001X | TACT SWITCH | 6       |      |
|   | S 615 | NSW0066-001X | TACT SWITCH | MODE    |      |
|   | S 616 | NSW0066-001X | TACT SWITCH | SCM     |      |
|   | S 617 | NSW0066-001X | TACT SWITCH | DOWN    |      |
|   | S 618 | NSW0066-001X | TACT SWITCH | AM      |      |
|   | S 619 | NSW0066-001X | TACT SWITCH | FM      |      |
|   | S 620 | NSW0066-001X | TACT SWITCH | CD      |      |

# Packing materials and accessories parts list

Block No. M 3 M M

Block No. M 5 M M

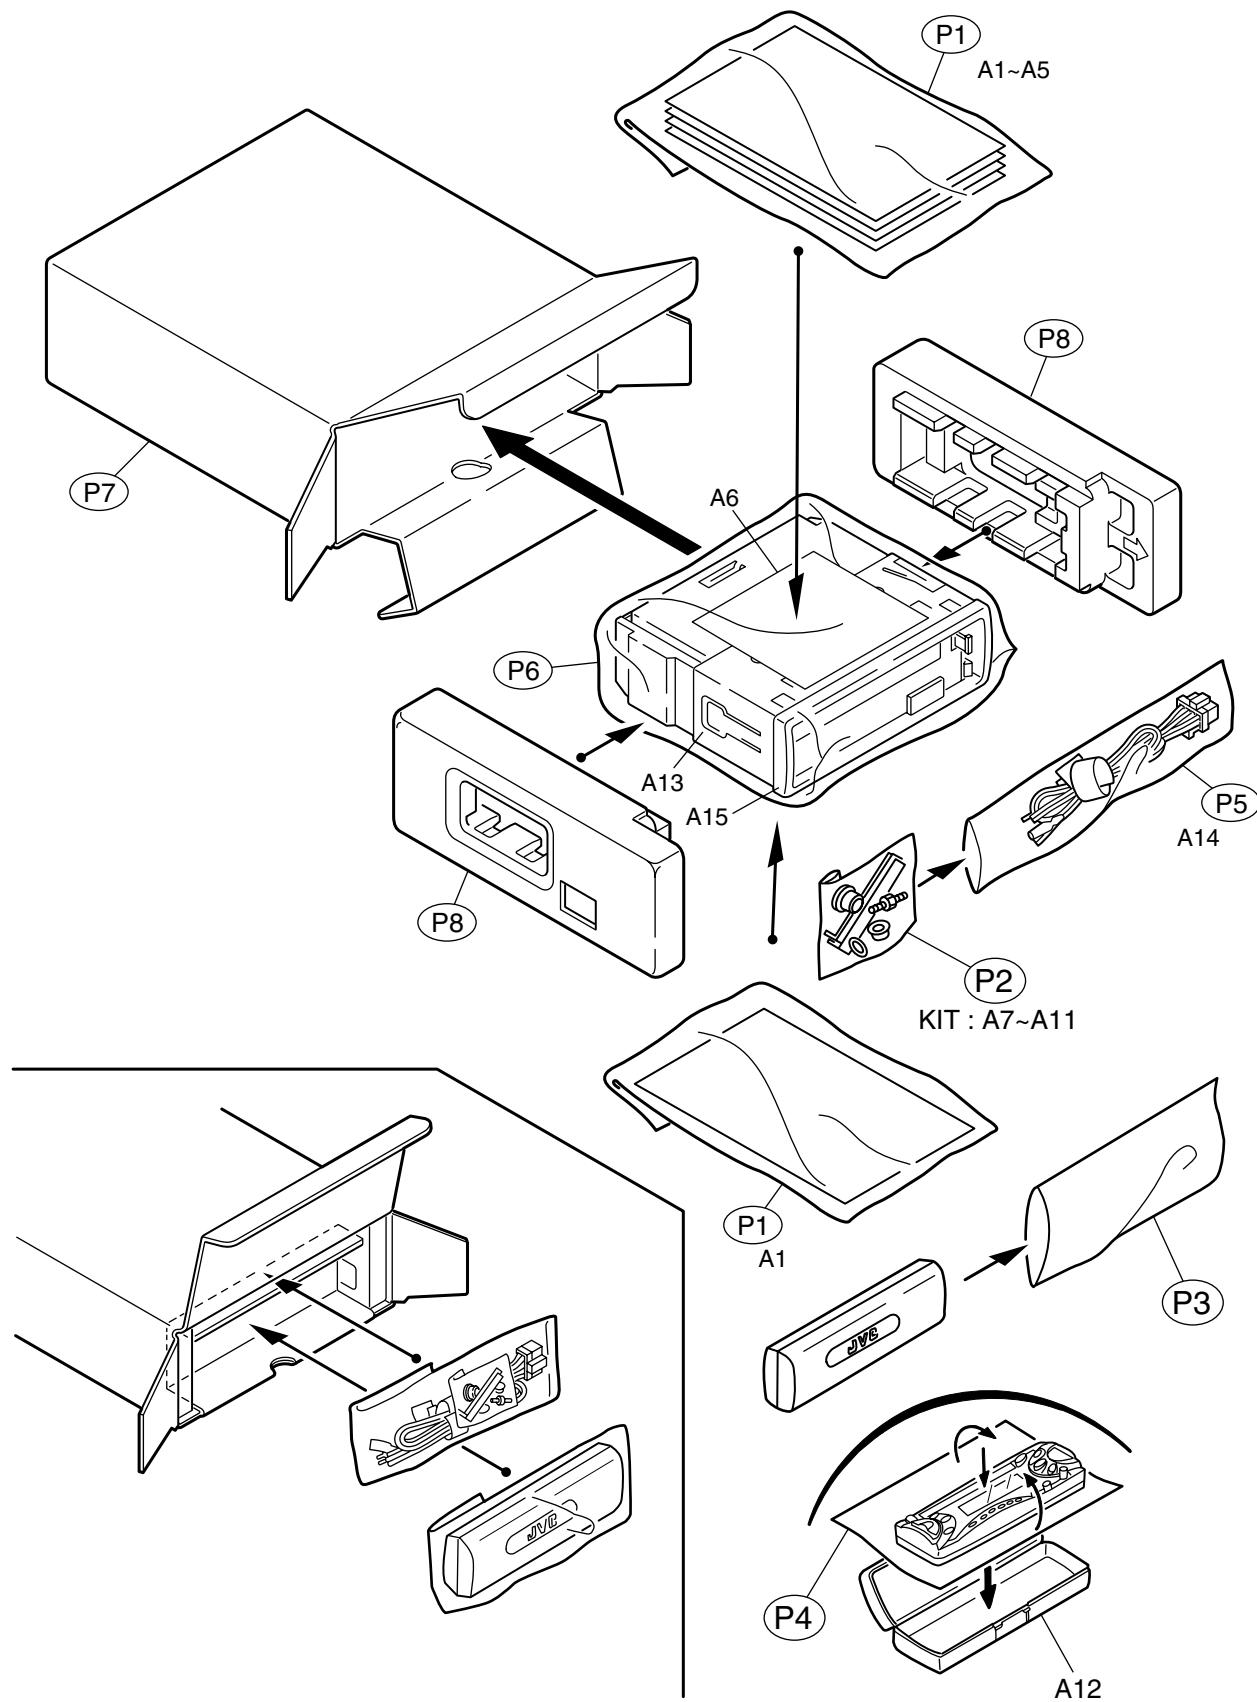

**■ Parts list (Packing)****Block No. M3MM**

| <b>▲</b> | <b>Item</b> | <b>Parts number</b> | <b>Parts name</b> | <b>Q'ty</b> | <b>Description</b> | <b>Area</b> |
|----------|-------------|---------------------|-------------------|-------------|--------------------|-------------|
|          | P 1         | FSPG4002-001        | POLY BAG          | 2           | FOR INST BOOK      |             |
|          | P 2         | QPA00801205         | POLY BAG          | 1           | FOR SCREW KIT      |             |
|          | P 3         | QPA01003003         | POLY BAG          | 1           | FOR HARD CASE      |             |
|          | P 4         | FSYH4036-068        | SHEET             | 1           |                    |             |
|          | P 5         | QPA01003003         | POLY BAG          | 1           | FOR CORD ASSY      |             |
|          | P 6         | QPC03004315P        | POLY BAG          | 1           | FOR SET            |             |
|          | P 7         | GE30407-017A        | CARTON            | 1           |                    |             |
|          | P 8         | GE10036-001A        | EPS CUSHION       | 2           |                    |             |

**■ Parts list (Accessories)****Block No. M5MM**

| <b>▲</b> | <b>Item</b> | <b>Parts number</b> | <b>Parts name</b> | <b>Q'ty</b> | <b>Description</b> | <b>Area</b> |
|----------|-------------|---------------------|-------------------|-------------|--------------------|-------------|
|          | A 1         | GET0066-001A        | INST BOOK         | 1           | ENG, GER, FRE, DUT |             |
|          | A 2         | GET0066-002A        | INST BOOK         | 1           | SPA, ITA, SWE, FIN | E           |
|          | A 3         | GET0066-003A        | INSTALL MANUAL    | 1           | ENG, GER, FRE, DUT |             |
|          | A 4         | GET0066-004A        | INSTALL MANUAL    | 1           | SPA, ITA, SWE, FIN | E           |
|          | A 5         | BT-54013-2          | W.CARD            | 1           |                    |             |
|          | A 6         | LV40978-001A        | CAUTION SHEET     | 1           |                    |             |
|          | A 7         | VKZ4027-202         | PLUG NUT          | 1           |                    |             |
|          | A 8         | VKH4871-001SS       | MOUNT BOLT        | 1           |                    |             |
|          | A 9         | VKZ4328-001         | LOCK NUT          | 1           |                    |             |
|          | A 10        | WNS5000Z            | WASHER            | 1           |                    |             |
|          | A 11        | FSKL4010-002        | HOOK              | 2           |                    |             |
|          | A 12        | FSJB3001-30C        | HARD CASE         | 1           |                    |             |
|          | A 13        | FSKM2004-202        | MOUNTING SLEEVE   | 1           |                    |             |
|          | A 14        | QAM0089-001         | 16P CORD ASSY     | 1           |                    |             |
|          | A 15        | FSJD2034-001        | TRIM PLATE        | 1           |                    |             |
|          | KIT         | KDGS717K-SCREW1     | SCREW PARTS KIT   | 1           | A7~A11             |             |



VICTOR COMPANY OF JAPAN, LIMITED

MOBILE ELECTRONICS DIVISION

PERSONAL & MOBILE NETWORK BUSINESS UNIT. 10-1,1Chome,Ohwatari-machi,Maebashi-city,371-8543,Japan