



TRANSISTOR CONNECTION (BOTTOM VIEW)

H001-008
 H401-404
 H409-412
 H501-506
 H601-604
 H701-706
 H801-805

E: EMITTER
 C: COLLECTOR
 B: BASE

H801
 HT403314 A
 HD2000413
 S18-01-02

H802-805
 HT309452 A
 25C945 0or R

H808
 HD3002309
 WZ071

TUNER TAPE 2 DISCRETE
 PHONO AUX MONO MARI-MATRIX
 SELECTOR POSITION MODE POSITION
 REMOTE LOCAL
 REMOTE CONTROL POSITION

ALL SWITCHES VIEWED FROM
 FRONT AND SHOWN IN EXTREME
 CLOCKWISE POSITION SOO PHONO,
 SOO2 MONO, AND SOO3 REMOTE