

 
marantz®

MODEL CC3000 USER GUIDE

5 DISC CD CHANGER

CLASS 1 LASER PRODUCT
LUOKAN 1 LASERLAITE
KLASS 1 LASERAPPARAT





ENGLISH:

CAUTION!

Use of controls or adjustments or performance of procedures other than those specified herein may result in hazardous radiation exposure.

SUOMI:

VAROITUS!

Laitteen käyttäminen muulla kuin tässä käyttöohjeessa mainitulla tavalla saattaa altistaa käyttäjän turvallisuusluokan 1 ylittävälle näkymättömälle laseräteilylle.

SVENSKA:

WARNING!

Om apparaten används på annat sätt än vad som beskrivs i denna bruksanvisning kan användaren utsättas för osynlig laserstrålning som överstiger gränsen för laserklass 1.


WARNING FOR LASER RADIATION

CAUTION: INVISIBLE LASER RADIATION WHEN OPEN. DO NOT STARE INTO BEAM.

DANGER: INVISIBLE LASER RADIATION WHEN OPEN. AVOID DIRECT EXPOSURE TO BEAM.

VARO!: AVATTAESSA JA SUOJALUKITUS OHITETTAESSA OLET ALTTIINANAKYMÄTTÖMÄLLE LASERSÄTEILYLLE
ÄLÄ KATSO SÄTEESEEN.

WARNING! : OSYNLIG LASERSTRÅLNING NÄR DENNA DEL ÄR ÖPPNAD OCH SPÄRREN ÄR URKOP PLAD. BETRAKTA EJ

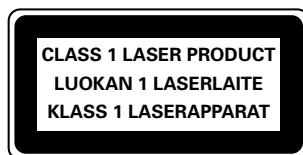

FITTING A MAINS PLUG *(U.K. only)*

This apparatus is fitted with an approved 13 Amp plug. To change a fuse in this type of plug proceed as follows:

- Remove fuse cover and fuse.
- Fix new fuse which should be a BS1362 5A, A.S.T.A. or BSI approved type.
- Refit the fuse cover.

If the fitted plug is not suitable for your socket outlets, it should be cut off and an appropriate plug fitted in its place.

If the mains plug contains a fuse, this should have a value of 5A. If a plug without a fuse is used, the fuse at the distribution board should not be greater than 5A.

NOTE

The severed plug must be disposed to avoid a possible shock hazard should it be inserted into a 13A socket elsewhere.

HOW TO CONNECT A PLUG

The wires in the mains lead are coloured in accordance with the following code: BLUE – “NEUTRAL” (“N”) and BROWN – “LIVE” (“L”). As these colours may not correspond with the colour markings identifying the terminals in your plug, proceed as follows:

- The BLUE wire must be connected to the terminal which is marked with the letter “N” or coloured BLACK.
- The BROWN wire must be connected to the terminal which is marked with the letter “L” or coloured RED.
- Do *not* connect either wires to the earth terminal in the plug which is marked by the letter “E” or by the safety earth symbol or coloured green or green-and-yellow.

Before replacing the plug cover, make certain that the cordgrip is clamped over the sheath of the lead – not simply over the two wires.

English	6	English
Français	19	Français
Español	32	Español
Deutsch	45	Deutsch
Nederlands	58	Nederlands
Italiano	71	Italiano
Svenska	84	Svenska
Dansk	97	Dansk
Português	110	Português

ENGLISH

WARRANTY

For warranty information, contact your local Marantz distributor.

RETAIN YOUR PURCHASE RECEIPT

Your purchase receipt is your permanent record of a valuable purchase. It should be kept in a safe place to be referred to as necessary for insurance purposes or when corresponding with Marantz.

IMPORTANT

When seeking warranty service, it is the responsibility of the consumer to establish proof and date of purchase. Your purchase receipt or invoice is adequate for such proof.

FOR U.K. ONLY

This undertaking is in addition to a consumer's statutory rights and does not affect those rights in any way.

FRANÇAIS

GARANTIE

Pour des informations sur la garantie, contactez le distributeur local Marantz.

CONSERVER L'ATTESTATION D'ACHAT

L'attestation d'achat est la preuve permanente d'un achat de valeur. La conserver en lieu sûr pour s'y reporter aux fins d'obtention d'une couverture d'assurance ou dans le cadre de correspondances avec Marantz.

IMPORTANT

Pour l'obtention d'un service couvert par la garantie, il incombe au client d'établir la preuve de l'achat et d'en corroborer la date. Le reçu ou la facture constituent des preuves suffisantes.

DEUTSCH

GRANTIE

Bei Garantiefragen wenden Sie sich bitte an Ihren Marantz-Händler.

HEBEN SIE IHRE QUITTUNG GUT AUF

Die Quittung dient Ihnen als bleibende Unterlage für Ihre wertvolle Anschaffung. Das Aufbewahren der Quittung ist wichtig, da die darin enthaltenen Angaben für Versicherungszwecke oder bei Korrespondenz mit Marantz angeführt werden müssen.

WICHTIG!

Bei Garantifragen muß der Kunde eine Kaufunterlage mit Kaufdatum vorlegen. Ihre Quittung oder Rechnung ist als Unterlage ausreichend.

NEDERLANDS

GRANTIE

Voor inlichtingen omtrent garantie dient u zich te wenden tot uw plaatselijke Marantz-handelaar.

UW KWITANTIE, KASSABON E.D. BEWAREN

Uw Kwitantie, kassabon e.d. vormen uw bewijs van aankoop van een waardevol artikel en dienen op een veilige plaats bewaard te worden voor evt. verwijzing, b.v. in verband met verzekering of bij correspondentie met Marantz.

BELANGRIJK

Bij een evt. beroep op de garantie is het de verantwoordelijkheid van de consument een gedateerd bewijs van aankoop te tonen. Uw kassabon of factuur is zijn voldoende bewijs.

ITALIANO

CONDIZIONI DI GARANZIA

L'apparecchio è garantito per 365 giorni dalla data di acquisto comprovata da un documento attestante il nominativo del rivenditore e la data di vendita. La garanzia sarà prestata con la sostituzione o riparazione gratuita delle parti difettose.

Non sono coperti da garanzia difetti derivanti da uso improprio, errata installazione, manutenzione effettuata da personale non autorizzato o, comunque, da circostanze che non passano riferirsi a difetti di funzionamento dell'apparecchio.

Sono inoltre esclusi dalla garanzia gli interventi inerenti l'installazione e l'allacciamento agli impianti di alimentazione.

Gli apparecchi verranno riparati presso i nostri Centri di Assistenza. La spesa ed i rischi di trasporto sono a carico del cliente.

La casa costruttrice declina ogni responsabilità per danni diretti o indiretti provocati dalla inosservanza delle prescrizioni di installazione, uso e manutenzione dettagliate nel presente manuale.

Per informazioni sull'abbonamento al servizio Assistenza postgaranzia e per conoscere l'indirizzo dei Centri Assistenza Marantz rivolgetevi al nostro servizio consumatori (telefono 1678-20026 - numero verde).

PORTUGUÊS

GARANTIA

Para informações sobre a garantia, contactar o distribuidor Marantz local.

GUARDAR O RECIBO DE COMPRA

O recibo é o registo permanente da compra que fez. Deve ser guardado num local seguro, para ser apresentado em questões relacionadas com o seguro ou para quando tiver de contactar a Marantz.

IMPORTANTE

Quando procurar assistência técnica ao abtigo da garantia, é da responsabilidade do consumidor estabelecer a prova e data de compra. O recibo é prova adequada.

ESPAÑOL

GARANTÍA

Para información sobre las Condiciones de Garantía, sírvase consultar el Certificado que encontrará en le interior del embalaje del equipo.

CONSERVE EL COMPROBANTE DE LA COMPRA

La factura es el comprobante de la adquisición de un producto valioso. Consérvela en lugar seguro para poder consultarla en caso necesario.

IMPORTANTE

Para disponer de servicios cubiertos por la garantía, el usuario deberá acreditar la fecha y el lugar de adquisición del equipo. La factura o recibo de la compra constituyen un comprobante válido a tal efecto.

SVENSKA

GARANTI

Angående garanti, kontakta din lokala Marantz handlare.

SPAR KVITTOT

Kvittot är din Inköpshandling över Inköp av en värdefull vara. Det ska placeras på ett säkert ställe och hänvlsas till vid försäkringsfrågor eller vid korrespondens med Marantz.

VIKTIGT

När garantiservice åberopas är det konsumentens ansvar att visa datum för inköp. Ditt kvitto eller din faktura är ett tillfredsställande bevis.

DANSK

GARANTI

Kontakt Deres lokale Marantz-forhandler angående garanti-information.

GEM DERES KØBSNOTA

Deres købsnota er et vigtigt bevis for købet. Opbevar den et sted, så De senere kan finde den, hvis den skal bruges i forbindelse med forsikringssspørgsmål eller kontakt til Marantz.

VIKTIGT

Når man henvender sig for at få service under garantien, er det kundens ansvar at kunne fremlægge bevis for køb og købsdato. Købsnota eller faktura er tilstrækkelig til et sådant bevis.

CONTENTS

English

Introduction	6
Installation	6 - 7
Functional Overview	8 - 10
Playback	11 - 15
Programming	15
Edit	16 - 17
Additional Information	17 - 18
Troubleshooting	18

INTRODUCTION**Thank you for selecting the Marantz CC3000 Compact Disc Changer.**

A Compact Disc Changer of the state-of-the-art Marantz, the CC 3000 combines supreme playback quality with a high degree of user-friendliness by offering the following possibilities:

- **able to play CD-RW disc;**
- changing CDs during play;
- quick access to a particular CD by means of QUICK PLAY;
- storing 40 tracks from different CDs in any desired order in the changer memory;
- storing the required recording time and playing time in the EDIT mode.

Power Supply Setting

- Check that the type plate on the rear of your changer indicates the correct supply voltage.
- If your mains supply voltage is different, consult your dealer or our Service Organisation.

INSTALLATION**Sitting the Compact Disc Changer****Free standing**


- Always position the changer horizontally on a flat, firm surface.
- Allow a free space of at least 3 cm above the changer so as not to interfere with the cooling of the changer.


In an audio rack

- The changer can be sited in any desired position.

Stacked

- Site the changer preferably at the bottom or at the top.
- Never position the changer directly on top of a high-power amplifier, as such an amplifier gives off a substantial amount of heat.

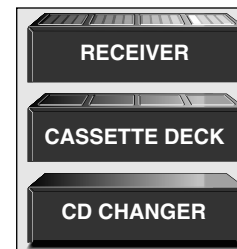

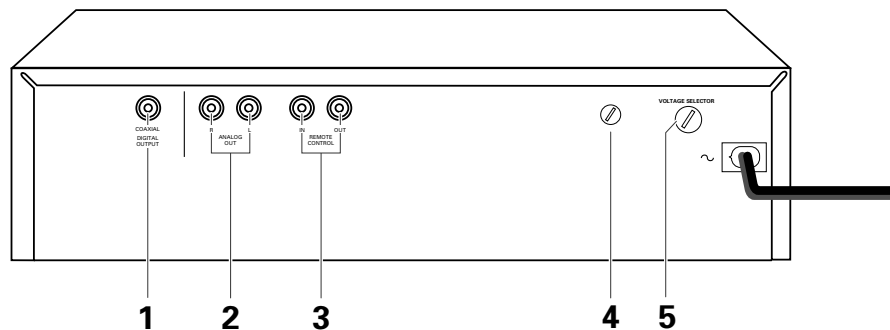

Connections

1 Digital Out

This output supplies digital signal and can therefore only be connected to an input which is suitable for this signal. Use here a lead with one cinch plug on either end.

Never connect this socket to a non-digital input of an amplifier, such as AUX, CD, TAPE, PHONO etc!

2 Analog Out

For the connecting cable to the amplifier.

- Insert a red plug into the 'R' socket and the other plug into the 'L' socket.
- Insert the two other plugs into the corresponding sockets of the CD or AUX input of your amplifier. You can also use the TUNER or TAPE IN connection, but never the PHONO input!

3 Remote Control


For connecting up the equipment when you are incorporating the changer in a HiFi system with its own remote control system.

4 Main Fuse Holder ("K" version only)

5 Voltage Selector ("K" version only)

FUNCTIONAL OVERVIEW

English

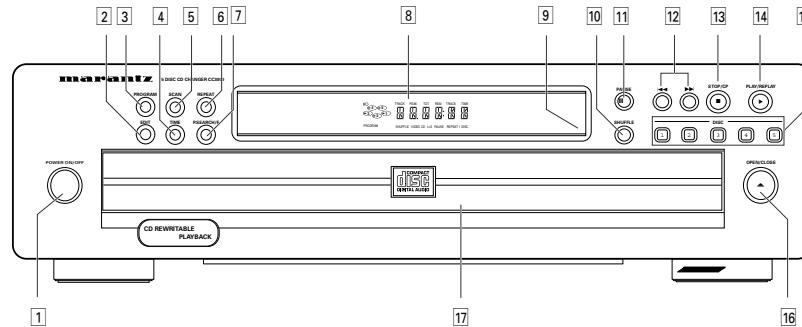

1 POWER-ON/ OFF

Switching on and off.

2 EDIT

Activating the EDIT function when making a recording.

3 PROGRAM

Opening the memory when compiling a program.

4 TIME

Selecting the information you want to see on the display.

5 SCAN

Automatically playing the beginning of each track.

6 REPEAT

Repeating play.

7 FADER

Fading in and out during play.

PEAK SEARCH

Searching the loudest passage (peak) on a CD or in a program when making a tape recording.

8 DISPLAY

Informs you about the functioning of the player.

9 I(nfra) R(ed) SENSOR

Receives the signals from the remote control.

10 SHUFFLE

Playing in random order.

11 PAUSE II

Interrupting play.

12 ◀▶▶▶

- Selecting another track during play.
- Selecting a track to start play with.
- Selecting tracks when compiling a program.
- Fast search to a particular passage during play.
- Selecting the recording mode during edit.
- Selecting the recording time during edit.

13 STOP ■

- Stopping play.
- Cancel a Program, Peak Search or Edit.

14 PLAY ▶

- Starting play.
- Returning to the beginning of a track.

15 CD DIRECT PLAY

- Selecting another CD during play.
- Selecting a CD to start play with.
- Selecting CDs when compiling a Program, Peak Search or Edit.

16 OPEN/CLOSE

Opening and closing the CD compartment.


17 CD CAROUSEL TRAY

18 QUICK PLAY

Immediate playing of a particular CD.

19 LOAD


Rotating the turntable in the CD compartment when inserting CDs.

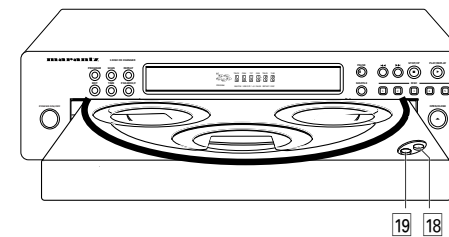

FUNCTIONAL OVERVIEW

English

Remote Control

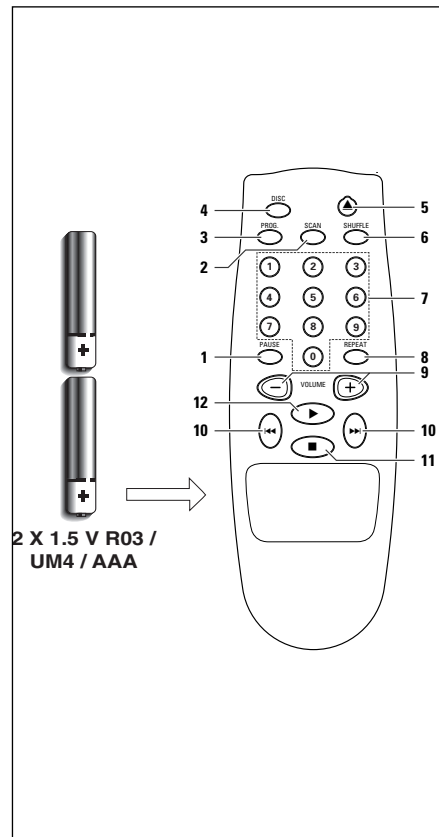

- 1 PAUSE**
 - Interrupting play.
- 2 SCAN**
 - Automatically playing the beginning of each track.
- 3 PROG.**
 - Opening the memory when compiling a program.
- 4 DISC**
 - Selecting another CD during play.
 - Selecting a CD to start play with.
 - Selecting CDs when compiling a Program, Peak Search or Edit.
- 5 TRAY OPEN**
 - Opening and closing the CD compartment.
- 6 SHUFFLE**
 - Playing in random order.
- 7 0-9 DIGIT KEYS**
 - Selecting another track.
 - Selecting a track to start play with.
 - Selecting tracks when compiling a program.
- 8 REPEAT**
 - Repeating play.
- 9 - VOLUME +**
 - Adjusting the sound level when the changer is connected via the ANALOG or DIGITAL OUT output to an amplifier or HiFi system without its own remote control. Also for adjusting the sound level on the headphones.
- 10 PREV. / NEXT**
 - Selecting another track during play.
 - Selecting a track to start play with.
 - Selecting tracks when compiling a program.
 - Fast search to a particular passage during play.
 - Selecting the recording mode during edit.
 - Selecting the recording time during edit.

- 11 STOP**
 - Stopping play.
 - Cancel a Program, Peak Search or Edit.
- 12 PLAY**
 - Starting play.
 - Returning to the beginning of a track.

The life of the batteries of the remote control is around one year. For replacement only use batteries of the type R03, UM4 or AAA.

FUNCTIONAL OVERVIEW

English

Display



- Lights up when the changer receives a command from the remote control.



1 - 5 CD number indicator

- Lights up when you switch the changer on.
- Indicates the number of CDs in the CD compartment.
- Indicates what CD is being played (CD number flashes).

PROGRAM

- Flashes when a program is being compiled.
- Lights up when a program is being played.

TRACK

- Indicates:
 - what track is being played;
 - the number of tracks on a CD or in a program.

PEAK

- Flashes when the loudest passage (peak) on a CD or in a program is being searched.
- Lights up when the loudest passage (peak) has been found.

TRACK TIME

- Indicates the elapsed playing time of the track being played.

REM(aining) TRACK TIME

- Indicates the remaining playing time of the track being played.

TOT(al) REM(aining) TIME

- Indicates the remaining playing time of a CD.

TOT(al) TIME

- Indicates the total playing time of a CD.

SHUFFLE

- Lights up when the tracks are played in random order.

PAUSE

- Lights up when play is interrupted.

REPEAT 1

- Lights up when you repeat a track.

REPEAT DISC

- Lights up when you repeat a CD.

REPEAT

- Lights up when you repeat all CDs or a program from them.

Display messages:

READ – Lights up when a CD's contents list is being scanned.

no d i s c – Lights up when there are no CDs in the CD compartment.

w r o n g t r a c k – Lights up when you select a non-existent track number.

s e l e c t d i s c – Lights up when you try to activate a function for which you must first select a CD number.

i n s e r t d i s c – Lights up when you give a play command while the CD compartment is empty.

CD E D S T O P – Lights up if you try to activate a function for which you must first stop play.

N O R M A L – Lights up when the player is put into the EDIT mode.

PLAYBACK


Inserting the CDs

NOTE!

Use only audio CD; audio CD-R or audio CD-RW.



- Press **POWER-ON/OFF** to switch the changer on.
- The changer will now start CD detection to check how many CDs there are in the CD compartment. The turntable will rotate slowly until all positions (1 - 5) in the CD compartment have been checked.
- The position which is being checked is always shown on the display (DISC X).
- After CD detection the 1 - 5 CD number indicator will show the number of CDs in the CD compartment.
- Open the CD compartment by pressing **OPEN/CLOSE**.
- **OPEN** lights up.
- Insert the CDs, **printed side up**; use the **LOAD** button to rotate the turntable in the CD compartment.
- Close the compartment by pressing **OPEN/CLOSE**.
- **CLOSE** lights up. The changer will start CD detection again.

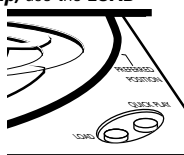

NOTE!

- CD detection may never be interrupted. If, during detection, you press any button, then the changer will stop detection and the display will give an incorrect indication of the number of CDs in the CD compartment.
- **Always** remove all CDs from the CD compartment if you want to transport the changer.

Normal Playback (PLAY ►)

- The display shows the number of the current CD.




- Press **PLAY ►** to start playback.
- The CD number indicator (1-5) always shows what CD is being played (► ① ② ③ ④ ⑤ flashes).
- The track being played and its elapsed playing time are shown under TRACK and TRACK TIME. See 'CALLING UP INFORMATION ON THE DISPLAY' if you wish to see other information on the display.



- Play will stop after all CDs have been played.
- Press **POWER-ON/OFF** to switch the changer off.

Quick Play

- Use the **PREFERRED POSITION** in the CD compartment if you wish to insert only one CD and then start play by pressing the **QUICK PLAY** button. Play will then start immediately with the inserted CD.

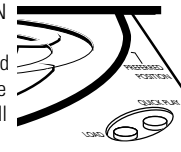

English

NOTE!


- You can also press **PLAY ►** immediately after inserting the CDs; the compartment then closes automatically and play starts from the first available CD.
- You can interrupt playback by pressing **PAUSE ||**. **PAUSE** then lights up. Press **PLAY ►** or **PAUSE ||** to restart.
- If you press **PLAY ►** during play, the current track will start again from the beginning.
- You can stop playback by pressing **STOP ■**.
- If you press **OPEN/CLOSE** during play, the CD compartment will open while play continues. The three CDs outside the changer may now be changed without playback being interrupted.

PLAYBACK

English

Selecting Another Track During Play (◀◀ ▶▶)

 - Press ▶▶ or ◀◀ (*less than 0.5 seconds*) until the desired track number appears under TRACK.



- The music stops and a moment later the selected track begins to play.

WRONG TRACK: lights up when you select a non-existent track number.

Selecting Another CD During Play (CD DIRECT PLAY)

- Key in the desired CD number.
- The music stops and a moment later the selected CD begins to play.

no DISC lights up when there is no CD in the selected CD compartment.

You can also select the number by using the **DISC** button on the remote control.

Searching For A Passage During Play (◀◀ ▶▶)

- Hold ◀◀ down to search backwards to the beginning.
- Hold ▶▶ down to search forwards to the end.

The searching speed is determined by how long a key is pressed:

- the first 2 seconds fairly slowly, with sound;
- then at the maximum speed, with attenuated sound.

If you reach the end of the last track and release ▶▶, play will resume a few seconds before the end of the CD.

Starting With A Particular CD (CD DIRECT PLAY)

- Key in the required CD number.
- If the CD compartment was open, it will now close.
- Play starts from the selected CD.

no DISC lights up when there is no CD in the selected CD compartment.

You can also select the number by using the **DISC** button on the remote control.

Starting With A Particular Track (CD DIRECT PLAY, ◀◀ ▶▶ and PLAY ▶)

- First select the number of the required CD using **CD DIRECT PLAY** or **DISC** on the remote control.
- If the CD compartment was open, it will now close.
- Then select the (track) number by using ▶▶ or ◀◀ (*press less than 0.5 seconds*).
- Press **PLAY ▶**.
- Play starts from the selected track.

WRONG TRACK: lights up when you select a non-existent track number.

no DISC lights up when there is no CD in the selected CD compartment.

Scanning CDs (SCAN)

All CDs:

- Press **SCAN** before or during play.
- If the CD compartment was open, it will now close.
- **SCAN** lights up and the first 10 seconds of each track are played in turn (starting from the current track). 10 seconds are counted down each time under REM(aining) TRACK TIME.



- When the player reaches a track which you wish to hear in full, press **SCAN** again or **PLAY ▶**.

PLAYBACK

English

Playing In Random Order (SHUFFLE)

All CDs:

- Press **SHUFFLE** before or during play.
- If the CD compartment was open, it will now close.
- SHUFFLE lights up and all the tracks are now played in a random order.



- If you press **▶▶**, you will select any one of the following tracks.
- Press **SHUFFLE** again if you wish to return to normal play.

NOTE!

- If, during play, you open the CD compartment to change CDs (see 'NORMAL PLAYBACK') then playback in random order will be cancelled. Playback will stop as soon as the last track of the current CD has been played (in normal order).

Calling Up Information On Display (TIME)

 
In STOP mode:

Text display

- After loading the CDs and closing the CD compartment, the display shows the number of the CD to be played (= default display in STOP mode).



- Press **TIME** to shows the number of tracks and the total playing time of the current CD (TOTAL TIME).



During play:

1. Time display

- When you start play (from STOP mode), the display shows the elapsed playing time of the current track (= default display in PLAY mode).



 
- Press **TIME** whenever you want to know the remaining playing time of the current track (REM TRACK TIME).



- Press **TIME**, if you wish to know the total playing time from the beginning (TOTAL TIME).



- Press **TIME** again if you wish to know the remaining playing time of the entire CD (TOTAL REM TIME).




Note :

- TOTAL REM(aining) TIME and TOTAL TIME indications are not available in SHUFFLE mode.

2. Text display

 - If you press **TIME** again, you will switch to text display; the display shows the number of the current CD.



- If you wish to know the total playing time of the entire CD you must go back to STOP mode first and then press TIME.
- The display now shows the number of tracks and the total playing time of the current CD (TOTAL TIME).

Repeating Play (REPEAT)

Repeating a track:

- Press **REPEAT** before or during playback of the CD.
- REPEAT 1 lights up; the track will now be repeated continuously.



- Press **REPEAT** three times to stop the track being repeated.

Repeating a CD:

- Press **REPEAT** twice before or during playback of the CD.
- REPEAT DISC lights up; the CD will now be repeated continuously.



- Press **REPEAT** twice to stop the CD being repeated.

PLAYBACK

 
English

Note:

- Repeating of a CD is not possible during shuffle or program mode.

Repeating all CDs:

- Press **REPEAT** three times before or during playback.
- REPEAT lights up; all CDs will now be repeated continuously.




- Press **REPEAT** again to stop the CDs being repeated.

NOTE!

- When a program has been stored (for one or more CDs), then only the program will be repeated.

Searching For The Loudest Passage (PEAK SEARCH)

 - In STOP mode, press **PEAK SEARCH**.
- **SELECT DISC** lights up and PEAK starts flashing.
- Press **PEAK SEARCH** again to select the last selected disc or press any **CD DIRECT PLAY** button or **DISC** (on the remote control) to select the desired disc.
- The CD will now be scanned for the loudest passage (the peak).
- The display shows the track being scanned and its elapse playing time.



- When the loudest passage has been found it will be repeated continuously (from 2 seconds before the peak until 2 seconds after the peak) and PEAK lights up.
- You can now adjust your recording device.
- You can stop the scan by pressing **STOP** ■: if you press **PLAY** ►, the CD will be played from the beginning.

NOTES!

- When searching for the loudest passage in a program (from one or more CDs) there is no need to enter the CD number(s).
- If you wish to record tracks from different CDs you have to repeat peak search for each CD.
- You can interrupt PEAK SEARCH by pressing **STOP** ■.

Adjusting The Sound Level (– VOLUME +) (on the remote control only)

The volume output of the CD changer can be adjusted. This will affect the analog out, digital out and headphones level.

- Press **VOLUME –** or **+** to reduce or increase the sound level.
- The display will show a value between VOL 0 and VOL 20.

Important!

The volume level will influence the sound level during recording. Set the volume level to the maximum and do not change the volume setting during recording.

Locking the volume

This unique feature allows you to lock the volume level when listening to the headphones or doing recording.

- Press **EDIT** for more than 2 seconds.
- The displays will show VOL LOCK.

Unlocking the volume

- Press **EDIT** for more than 2 seconds.
- The displays will show VOL 20.

Note:

- When you adjust the volume and the display shows VOL LOCK, it means that the volume is in the lock mode.

Listening to the headphones

- Connect the headphones to the PHONES socket.
- Adjust the headphones sound level with the LEVEL control.

Note:

- Should there be no sound after adjusting the LEVEL control to maximum; press **VOLUME +** on the remote control to increase the sound level.

PLAYBACK

Activating The Fade-In And Fade-Out Function (FADER)

NOTE!

– The FADER function can be used if the changer is connected to the amplifier or the system via the ANALOG OUT output.

- During play press **FADER**.
- The sound level will now gradually decrease (FADE OUT), after which the changer will go into the PAUSE mode.

FADE 3 → FADE 2 → FADE 1

- Press **FADER** again.
- Play continues and the sound level will increase again to the originally set level (FADE IN).

FADE 1 → FADE 2 → FADE 3

PROGRAMMING

Storing A Program (PROGRAM)

- By programming the changer you can play up to 40 tracks in any required sequence.
- **FULL** lights up if you exceed the maximum of 40 tracks.
- **no dISC** lights up when there is no CD in the selected CD compartment.
- In STOP mode, press **PROGRAM** to open the memory.
- **SELECt dISC** lights up and PROGRAM starts flashing.
- Press **PROGRAM** again to select the last selected disc or press any **CD DIRECT PLAY** button or **DISC** (on the remote control) to select the desired disc.
- Press **▶▶** or **◀◀** (less than 0.5 seconds) until the first track number you wish to program appears under TRACK.
- Press **PROGRAM** again.



- The track number has now been stored in the changers memory.
- Select the other track numbers required and store each track by pressing **PROGRAM**.
- The number of tracks and the playing time of your program will be shown under TRACK and TOT(al) TIME.
- Press **STOP** to quit the PROGRAM mode.

Note:

- If the total playing time is more than "99:59", then "--:--" appears in the display instead of the total playing time.

Playing The Program (PLAY ▶)

- Press **PLAY ▶**.
- Playback starts with the first number of the program.

The PROGRAM and EDIT buttons cannot be used during programmed play.

Search for a particular passage is only possible within the track being played.

Erasing A Program (STOP ■ or OPEN/CLOSE)

In PLAY mode:

- Press **OPEN/CLOSE** or **STOP ■** (twice).

In STOP mode:

- Press **OPEN/CLOSE** or **STOP ■**.
- The program has now been erased.

EDIT

English

The EDIT function has two recording modes in which you can store the recording time in the changer memory.

EDIT NORMAL – The changer will determine which tracks fit on each side of the tape and will stop after the last track. The tracks will be recorded in the order in which they appear on the CD(s).

EDIT OPTIMAL – The changer now calculates the combination of tracks that will optimize the use of available recording time.

NOTE!

- The EDIT function **cannot** be used for CDs containing more than 40 tracks.
- The – VOLUME + keys on the remote control may not be used during recording as they affect the strength of the signal from the changer.

Before Recording

Important!

The volume level will influence the sound level during recording. Set the volume level to the maximum and do not change the volume setting during recording.

Preparation:

- A program to be recorded, must be stored in advance. See 'PROGRAMMING'.
- If required you can search the loudest passage and adjust your recording device. See 'SEARCHING THE LOUDEST PASSAGE (PEAK SEARCH)'. This can also be done after selecting the recording mode and the recording time. See below.

- Press **EDIT** to activate the EDIT mode.
- **SELECT DISC** appears on the display.
- Press **EDIT** again to select the last selected disc or press any **CD DIRECT PLAY** button or **DISC** (on the remote control) to select the desired disc. When recording a program there is no need to enter the CD number(s).

Selecting the recording mode:

- The display shows **NORMAL** (= EDIT NORMAL which is the default setting).
- With **|◀◀ ▶▶|** can now select **OPTimal**, **CANCEL** or **EDIT (NORMAL)** again.
- The display shows **OPT** (imal), **CANCEL** or **NORMAL** again.
- Press **EDIT** to store the required recording mode (NORMAL or OPTimal). If you select **CANCEL**, the EDIT mode will be cancelled and the changer will go back to STOP mode.
- As soon as you have stored the recording mode the display shows **C90** (default setting).

Selecting the recording time:

- As soon as you have stored the recording mode the display shows **C90** (default setting).
- With **|◀◀ ▶▶|** you can now select the required recording time:
C30, C45, C60, C90, C100, C120, CDR21, CDR60 or CDR74.
 In EDIT NORMAL mode the recording time must be at least equal to the playing time of the first track on the first CD or in the program.
 In EDIT OPTimal mode the recording time must be at

least equal to the playing time of the shortest track on the CD(s) or in the program.

- **NOT POSSIBLE** lights up if you select a 'wrong' time.
- Press **EDIT** to store the required recording time.
- The CD changer will now go back to STOP mode
- You can now record the CD or the program.

Recording

- Press **PLAY ▶**.
- Playback starts with the selected CD (or with the first track of the program).
- The display shows the elapsed playing time of the current track.
- Press **TIME** to switch to other time display information.
- The number of tracks for side A and their playing time are shown on the display.



- After the last track that fits on side A of the tape, the CD changer will go into PAUSE mode.
- PAUSE lights up.
- Under TRACK you will see the number of the first track to be recorded on side B of the tape.



- Turn the tape over or select the tape travel direction for side B.


EDIT

- Press **PLAY** ►.
- The remaining tracks will now be played.
- After the last track play will stop; **EDIT CANCELLED** lights up.

NOTE!

- As soon as you press **PLAY** ► the other changer functions will temporarily be switched off to prevent the recording being interfered with; **EDIT ACTIVE** lights up if you press one of the other buttons during recording.
- You can quit the **EDIT** mode by pressing **STOP** ■, or **OPEN/CLOSE** ; **EDIT CANCELLED** then lights up.
- **EDIT NOT POSSIBLE** lights up if you try to record a CD containing more than 40 tracks.
- Should the CD or the program be longer than the total recording time of the tape, play will stop after the last track that fits onto side B of the tape.
- Should the first track of the first CD or the program be longer than one side of the tape (= the entered recording time divided by two), then **EDIT NOT POSSIBLE** will light up. You will now have to enter another recording time.

Synchronized Recording

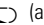- Make sure that the changer is connected via the **REMOTE CONTROL** sockets to the **REMOTE CONTROL IN (RC 5 IN)** sockets of the Marantz cassette deck.
- Set the changer to **EDIT** mode.
- Select the  (auto reverse) mode (if available) on the cassette deck.
- Set the **TIMER** switch (if available) on the deck to 'PLAY/SYNC REC' position.

- The cassette deck will go into **REC PAUSE** mode (=synchronized recording mode).
- Press **PLAY** on the CD Changer.
- Recording starts and after 4 seconds play starts at the beginning of the CD or the programme.
- After each track an extra pause of 4 seconds (**AUTO SPACE** will be inserted).
- **AUTOSPACE** lights up.
- If you record a programme from different CDs the cassette deck will go into **PAUSE** mode everytime the CD Changer selects a new CD in the CD compartment. As soon as playback of the new CD starts, the deck will continue the recording.
- After the last track that fits on side A of the tape, the CD changer will go into **PAUSE** mode.
- As soon as the CD changer receives a command from the cassette deck, playback starts with the first track for side B. You may also press **PAUSE** **6** to restart play.
- Synchronized recording will stop after the last track of the CD or programme.

NOTE!


- As soon as you start recording, the other changer functions will temporarily be switched off to prevent the recording being interfered with; **EDIT ACTIVE** lights up if you press one of the other buttons during play/recording.
- You can stop playback/recording by pressing **STOP** **8**.

ADDITIONAL INFORMATION

Maintenance

The CDs

- Never write on the printed side of a CD.
- Do not attach any stickers to the CD.
- Keep the shiny surface of the disc clean. Use a soft lint-free cloth and always wipe the disc in a straight line from centre to edge.
- Never use cleaning agents for conventional records.
- Detergents or abrasive cleaning agents should not be used either.

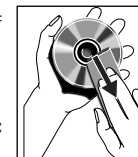

The changer

- A chamois leather slightly moistened with water is sufficient for cleaning the changer.
- Do not use cleaning agents containing alcohol, spirits, ammonia or abrasives.

Environmental Information

All unnecessary packaging material has been omitted. We have done our utmost to make the packaging easily separable into three mono-materials: cardboard (box), polystyrene foam (buffer) and polythene (bags, protective foam sheet).

Your system consists of materials which can be recycled and reused if disassembled by a specialized company. Please observe the local regulations regarding the disposal of packaging materials, exhausted batteries and old equipment.

ADDITIONAL INFORMATION

English

Technical Data

Typical Audio Performance

Frequency range: 20 Hz - 20 kHz
 Amplitude non-linearity: ≤ 3 dB (1 kHz, -90 dB)
 Dynamic range: >90 dB (1 kHz)
 Signal-to-noise ratio: >95 dB (1 kHz)
 Channel separation: >90 dB (1 kHz)
 Channel unbalance ≤ 1 dB (1 kHz)
 Total harmonic distortion: 0.004% (1 kHz)
 Audio output level: 2 Vrms, ± 2 dB, 47 k Ω
 Digital coaxial output 75 Ω acc. IEC 958

Power supply

Mains voltage and frequency:
 see the type plate on the rear of the changer
 Power consumption: <12 W
 Safety requirements: EN60065

Cabinet

Material/finish:
 metal and polystyrene with decorative trim
 Dimensions (w x h x d): 440 x 119 x 380 mm
 Weight: 6.0 kg

Subject to modification

TROUBLESHOOTING

If a fault occurs, run through the points listed below before taking your changer for repair.

If the fault remains, try to clear it by **switching the changer off and on again**. If this also fails to help, consult your dealer.

Under no circumstances should you repair the changer yourself as this will invalidate the guarantee!

Playback does not start or interruption of playback.

- The current CD has been loaded upside down.
→ *Reload the CD, label side up.*
- No CDs inserted.
→ *Insert the CDs, label side up.*
- The current CD is badly scratched or dirty.
→ *Clean the CD with a soft, lint-free cloth.*
- Moisture condensation on the lens.
→ *Leave the CD changer in a warm environment until the moisture evaporates.*

Sound skips (at the same part).

- The current CD is dirty.
→ *Clean the CD with a soft, lint-free cloth.*

The current CD skips tracks.

- The CD is damaged or dirty.
→ *Replace or clean the CD.*

Playback does not start from the first track (of the current CD).

- PRG (program) or SHUFFLE activated.
→ *Switch off SHUFFLE or clear program.*

No sound or bad sound.

- Loose or wrong connections.
→ *Check connections.*

- Strong magnetic fields near the CD changer.
→ *Find another place for the unit or change connections.*

No sound or bad sound on headphones.

- Volume control on remote control is at minimum.
→ *Increase the volume control level.*
- Level control set to – position.
→ *Set level control.*
- Headphones plug is dirty.
→ *Clean plug.*

Volume is too low.

 
- Sound level has been adjusted too low with the –VOLUME + keys on the remote control.
→ *Adjust sound level.*

Remote control does not function.

- Batteries are empty.
→ *Replace the batteries.*




Remote control commands are not properly received.



- The distance between remote control and CD changer is larger than 10 metres.
→ *Reduce the distance between remote control and CD changer.*



STRALEN.

     English



**AUSTRALIA**

Scan audio Pty. Ltd.
4 Station Street, Thornleigh NSW 2120, Australia

AUSTRIA

Huber & Prohaska GmbH
Taborstraße 95 / Ladestraße 1, Gebäude Hangartner, A-1200
Wien, Austria

BELGIUM

Van der Heyden Audio N.V.
Brusselbaan 278, 9320 Erebodegem, Belgium

BULGARIA

Ariescommerce GmbH, Makedonia Blvd. 16, 1606 Sofia, Bulgaria

CANADA

Lenbrook Industries Limited
633 Granite Court, Pickering, Ontario

CYPRUS

Empire HiFi systems Ltd.
P.O. Box 5604, Nicosia, Cyprus

CZECH REPUBLIC

Audio International
Fugnerova 1, 67801 Blansko, Czech Republic

DENMARK

Hi-Fi Klubben Denmark
Aboulevarden 1, DK-8000 Arhus C., Denmark

DUBAI

V.V. & SONS
P.O. Box 105, Dubai, U.A.E.

ESTONIA

Audio International Baltic
Lo Hu 12, EE0026 Tallin, Estonia

F.Y.R.O.M.

T.P. KODI
ul.Cedomir Kantargiev 21a, Skopje, Former Yugoslavian Republic
of Macedonia

FINLAND

Hi-Fi Klubi Finland
Uudenmaankatu 4-6, SF-00120 Helsinki, Finland

FRANCE

Marantz France
A division of Marantz Europe B.V., P.O. Box 301, 92 156
Suresnes Cedex, France

GERMANY

Marantz Deutschland
Hakenbusch 3, 49078 Osnabrück, Germany

GREECE

Adamco S.A.
188, Hippocratous Street, 11471 Athens, Greece

HEADQUARTERS EUROPE:

Marantz Europe B.V.
Building SFF-2, P.O. Box 80002, 5600 JB Eindhoven, The
Netherlands

HONG KONG

Forward International Corp. Ltd.
10/F, Block B, Wo Kee Hong Building, 585-609 Castle Peak Road,
Kwai Chung New Territories, Hong Kong

HUNGARY

Infovox Ltd.
Terez Krt.31, 1067 Budapest, Hungary

ICELAND

Radiobudin HF
Skiopholti 19, P.O. Box 424, 121 Reykjavik, Iceland

INDIA

Marantz India c/o Philips India Ltd., Plot 80, Bhosari
Industrial Estate Pune - 411026, India

IRAN

Home Co.
5th floor no 878 Philips Building Enghelab ave, P.O. 11365/7844
Tehran, Iran

IRELAND

Marantz Ireland
Clonskeagh, Dublin 14, Ireland

ISRAEL

Elmor Ltd.
52 Heh Beiyar Street, Kikar Hamedina, Tel Aviv, Israel

ITALY

Marantz Italy
Via Casati 23, 20052 Monza (Milano), Italy, Servizio Consumatori
1678-20026, Numero Verde

JAPAN

Marantz Japan Inc.
35-1 Sagami Ohno 7-Chome, Japan

KOREA

Mk Enterprises Ltd.
121-210, 2F Shinhan Bldg., 247-17 Seokyo-dong, Mapo-ku, Seoul,
Korea

KUWAIT

alAlamiah Electronics Intl.
P.O. Box 8196, Salmiah 22052, Kuwait

LATVIA

Ace Ltd.
61, LacPlesa Str., Riga LV 1011, Latvia

LEBANON

AZ Electronics S.A., 1,
P.O. Box 11 2833, Beirut, Lebanon

LITHUANIA

A Accapella Ltd.
Ausros, Vartu G5, Pasazo Skg., 2001 Vilnius, Lithuania

MALAYSIA

Wo Kee Hong Electronics Sdn. Bhd.
102 Jalan SS 21/35, Damansara Utama, 47400 Petaling Jaya,
Selangordarul Ehsan, Malaysia

MALTA

Doneo Co Ltd.
78 The Strand, Sliema SLM07, Malta

MAURITIUS

SKR Electronics Ltd
P.O. Box 685, Bell Village, Port Louis, Mauritius

NETHERLANDS

Marantz Trading
A division of Marantz Europe B.V., Building SFF-2, P.O. Box
80002, 5600 JB Eindhoven, The Netherlands

NEW ZEALAND

Scan audio Pty. Ltd.
4 Station Street, Thornleigh NSW 2120, Australia

NORWAY

Hi-Fi Klubben Norway
Lillegrensen 7, N-0159 Oslo, Norway

OMAN

Mustafa & Jawad Trading CO.
P.O. Box 1918, Ruwi, Oman

POLAND

Marantz Polska
Ul. Marszalkowska 45/49, 00-648 Warszawa, Poland

PORTUGAL

Comércio de Electrónica Lda., Av. Luis Bivar, No 85 A, 1050
Lisboa, Portugal

PROFESSIONAL EUROPE

Marantz Professional Products Kingsbridge House,
Padbury Oaks, 575-583 Bath Road, Longford, Middlesex UB7
0EH, U.K.

PROFESSIONAL U.S.A.

Marantz Professional Products Distributed by:
Superscope Technologies Inc., 1000 Corporate Blvd. Ste.D,
Aurora, Illinois

QATAR

Almana & Partners W.W.L.
P.O. Box 49, Doha, Qatar

REUNION

Vision +
180 Rue du Marechal Leclerc, 97400 Saint Denis, Ile de la
Reunion

ROMANIA

Alltrom SRL
Soseaua Bucuresti, Ploiesti 10, Sector 1, Bucharest, Romania

RUSSIA

Trade Company SV
Bld. 2, 7 Montazhnaya Street, 107497 Moscow, Russia

SAUDI ARABIA

Ultimate Fidelity
Sameria Comm. Center, Roadah Dist., P.O. Box 7760, Jeddah

21472, Saudi Arabia

SINGAPORE

Forward Marketing (S) Pte. Ltd.
Wo Kee Hong Centre, 29 Leng Kee Road, Singapore 159099,
Singapore

SLOVAKIA

Audio International Slovakia
Nam. SNP 10, 96001 Zvolem, Slovakia

SLOVENIA

Bofex
Smartinska 152, HALA V/3, 61000 Ljubljana, Slovenia

SOUTH AFRICA

Coherent Imports (PTY) Ltd.
P.O. Box 1614, Alberton, 1450, South Africa

SPAIN

Marantz Spain
Martinez Villergas 2, Apartado 2065, Madrid 28027, Spain

SWEDEN

Hi-Fi Klubben A.B.
Tegnersgatan 21, S-412 52 Gotenborg, Sweden

SWITZERLAND

Sound Company AG
Postfach, 8010 Zürich, Switzerland

TAHITI

Covecolor
Av. Prince Hinoi, Cours de l'union sacré, P.O. Box 2334,
Papeete, Tahiti

TAIWAN

Pai-Yuing Co. Ltd.
6th No 148 Sung Kiang Road, Taipei 10429, Taiwan R.O.C.

THAILAND

Marantz Standard Co. Ltd.
746-750 Mahachai Road, Wangburapa, Bangkok 10200,
Thailand

TURKEY

Penta Elektronik
Sanayi Ve Ticaret Ltd. Sti., Selvi Kokak, No. 4/1, Senlikkoy,
34810 Florya, Istanbul, Turkey

U.K.

Marantz HiFi UK Ltd.
Kingsbridge House, Padbury Oaks, 575-583 Bath Road,
Longford, Middlesex UB7 0EH, U.K.

U.S.A.

Marantz America Inc.
440 Medinah Road, Roselle, IL 60172, U.S.A.

YUGOSLAVIA

ITM
Ljutice Bogdana Ia, Belgrade, Yugoslavia

EXPORT

Marantz Trading
A division of Marantz Europe B.V., Building SFF-2, P.O. Box
80002, 5600 JB Eindhoven, The Netherlands

www.marantz.com

marantz®

is a registered trademark.

3139 116 18871

Printed in SINGAPORE



SL-9911/00&01-09