




marantz

- Q401, Q402 Q403, Q404 Q701 Q703, Q704 Q705, Q706 Q707, Q708 D701, D702 QK01 QK02 QK03, QK04 QK05 QN51 QN52 QN51
- Q407, Q408 HC10028090 HC10141030 HC100808090 HT1566280 HT110152A0 HT10152A0 HC100009090 HCT2301A0 QN01, QN02 HW10005320 HC10042050 HT109701K0 MA1091M
- HF20369100 NJM2037 STK3122 NJM4568 SST15668 ZS1A1015 H215L NJM2901 HD74LS123 DB13 PC847 TA7317P ZS10701BL H020012
- ZS1359 (9, R) (R, S) (R, S) (R, S) (R, S) (HT, FF)

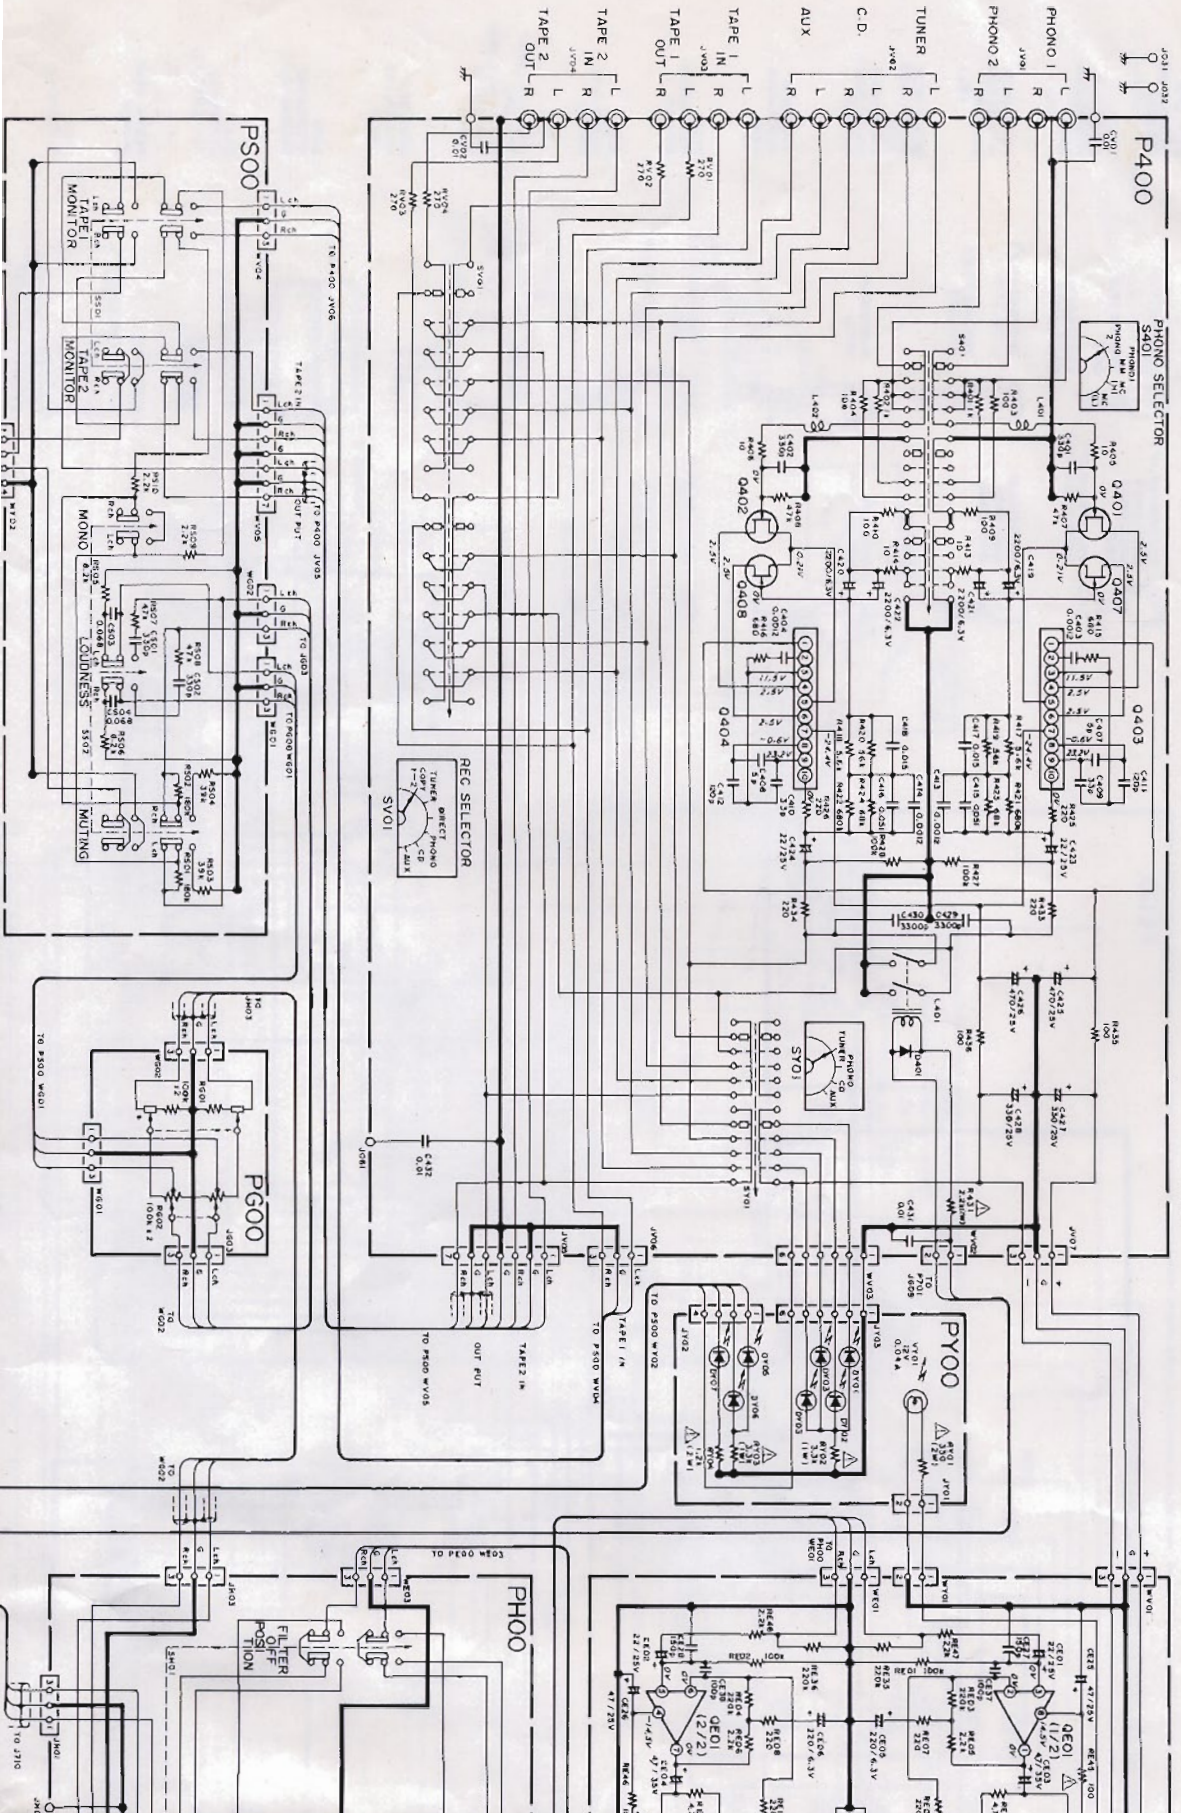

SCHEMATIC DIAGRAM FOR Model PM-84

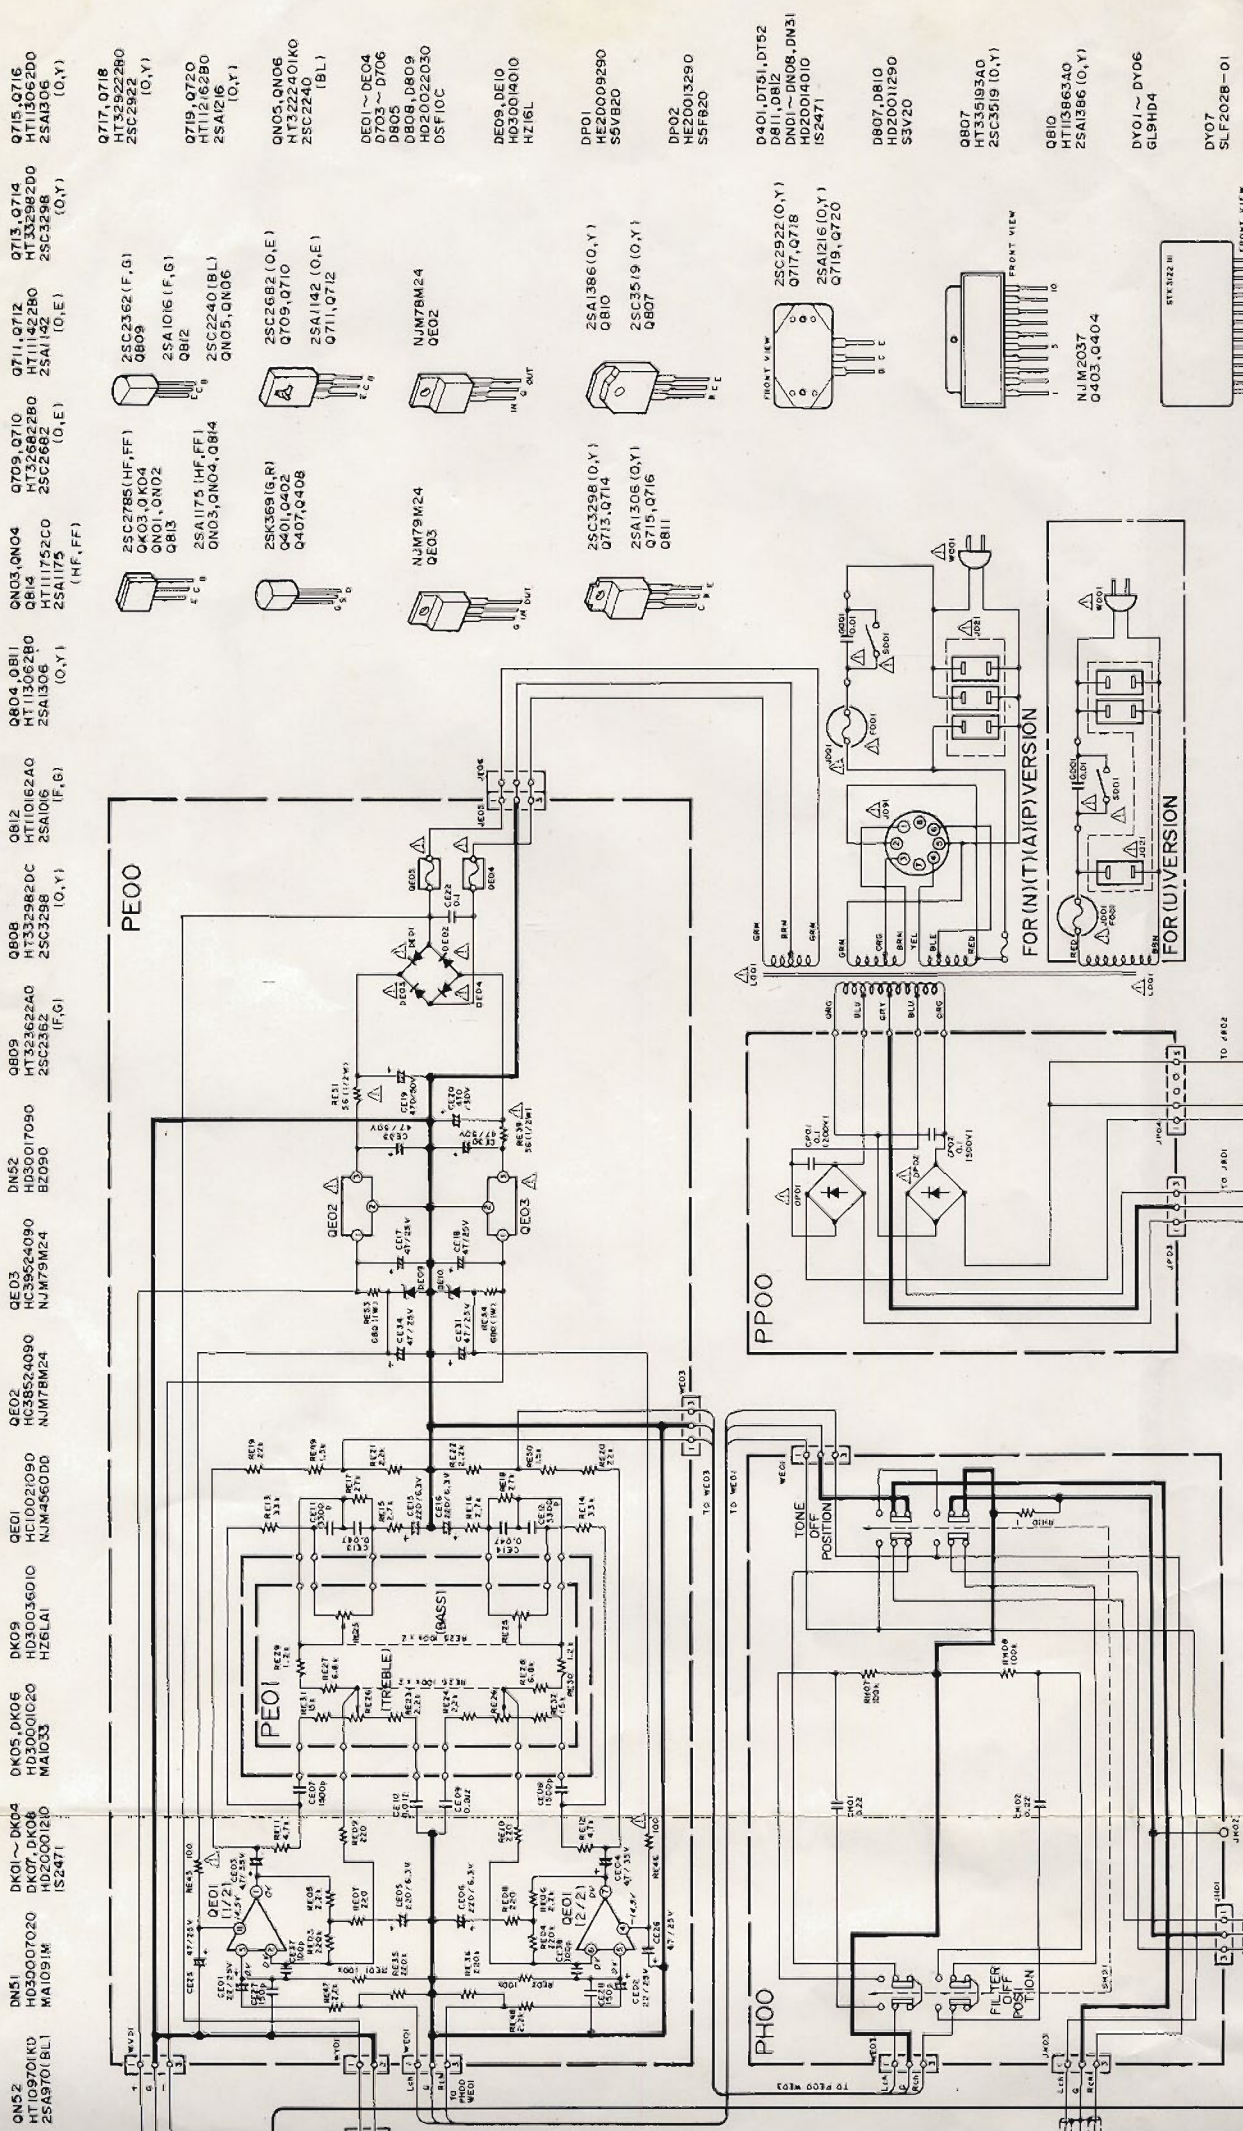

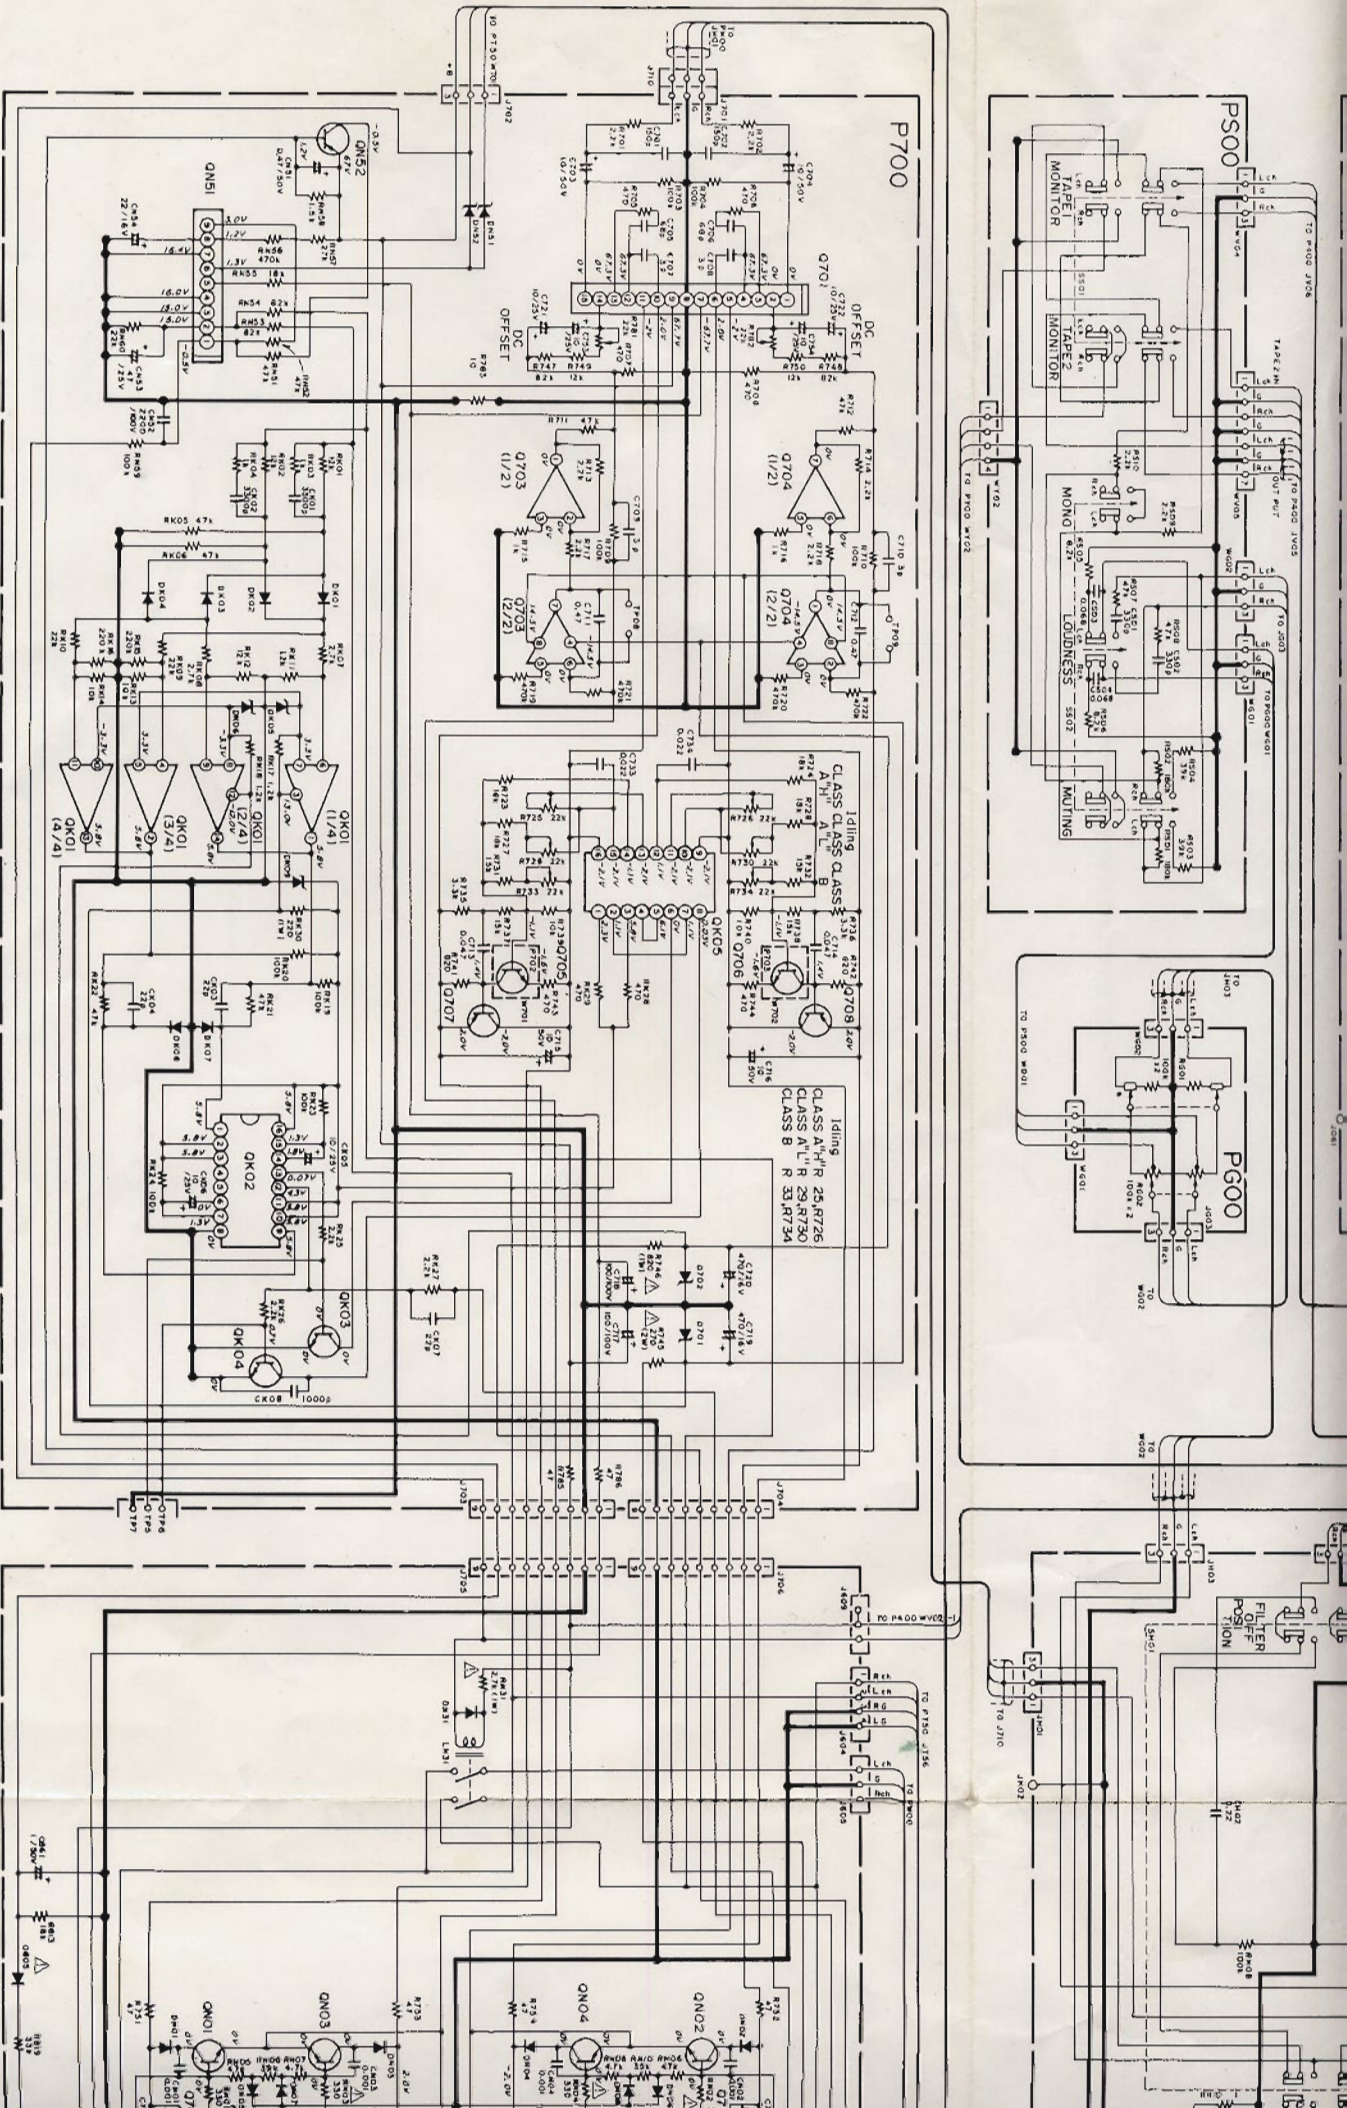

NOTE ON SAFETY :

Symbol \triangle Fire or electrical shock hazard. Only original parts should be used to replace any part marked with symbol \triangle . Any other component substitution (other than original type), may increase risk of fire or electrical shock hazard.





Components and wiring are subject to change for modification with

Q807
HT335193AD
25C3519 (O,Y)

O810
HT113663AD
25A1366 (O,Y)

DY01 ~ DY06
GL9HD4

   DY07
SLF202B-01

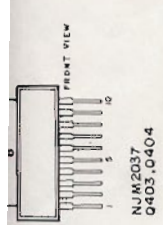





NJM2037
Q403, Q404

NJM4568
Q703, Q704
NJM45600D
QED1

PC847
QK05
HD74LS123
QK02

NJM2501
QK01

TA7317P
QNS1

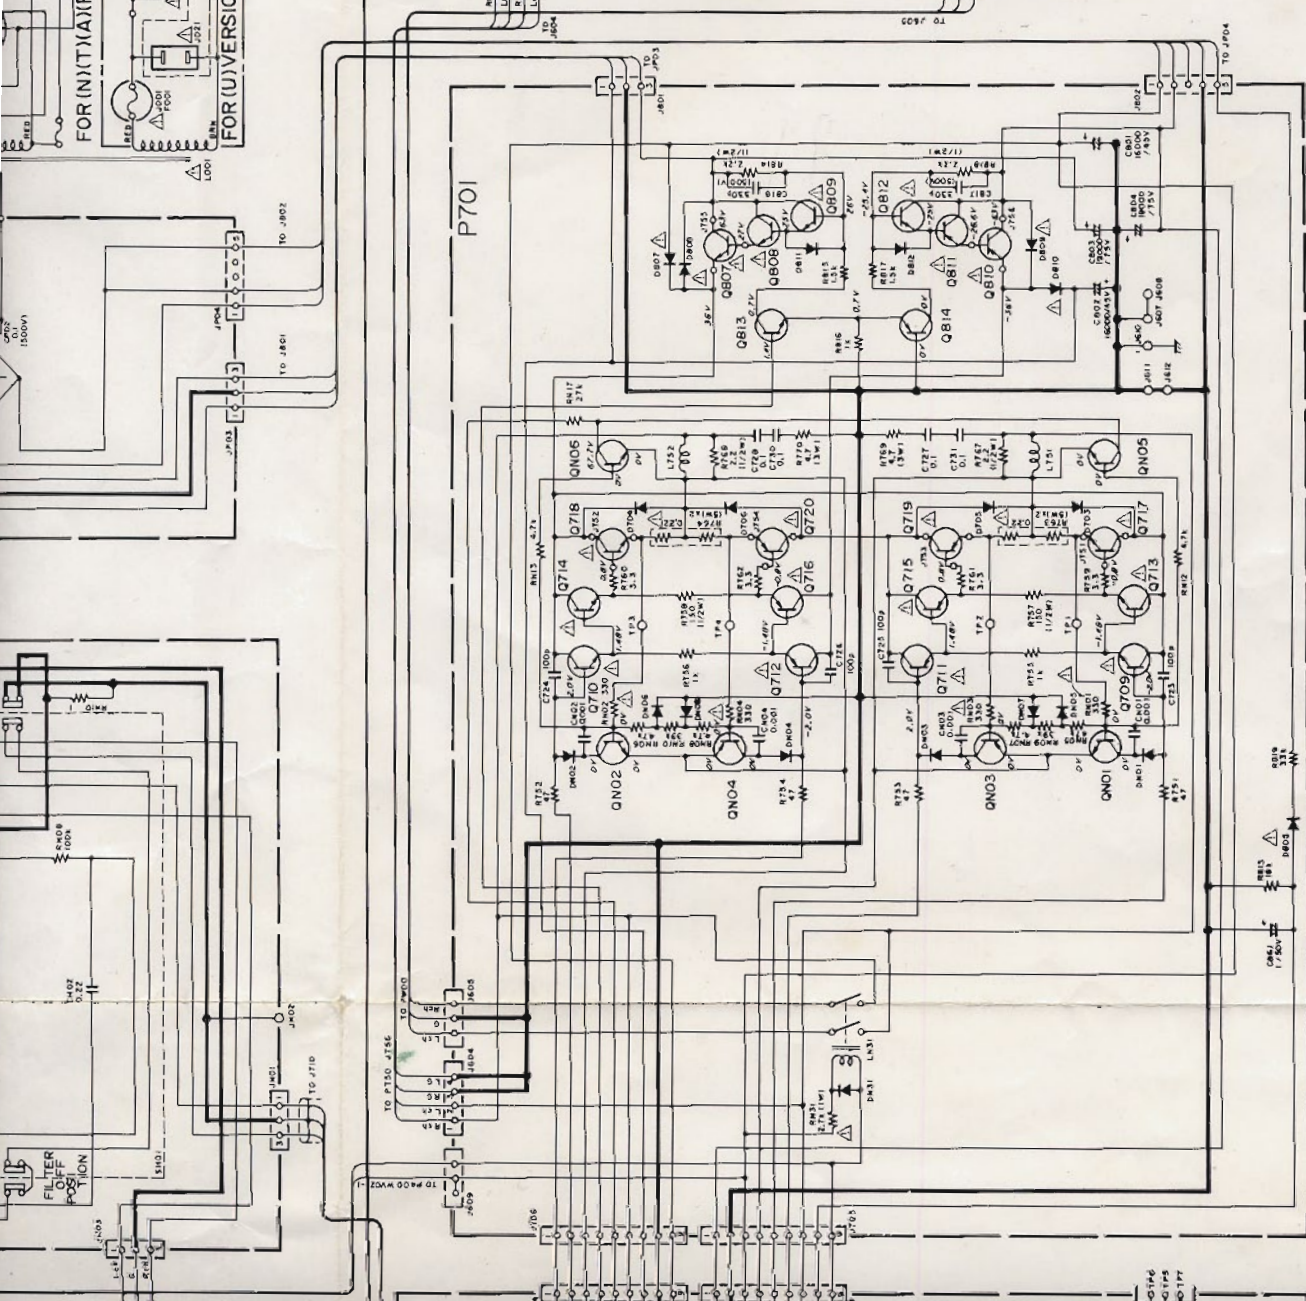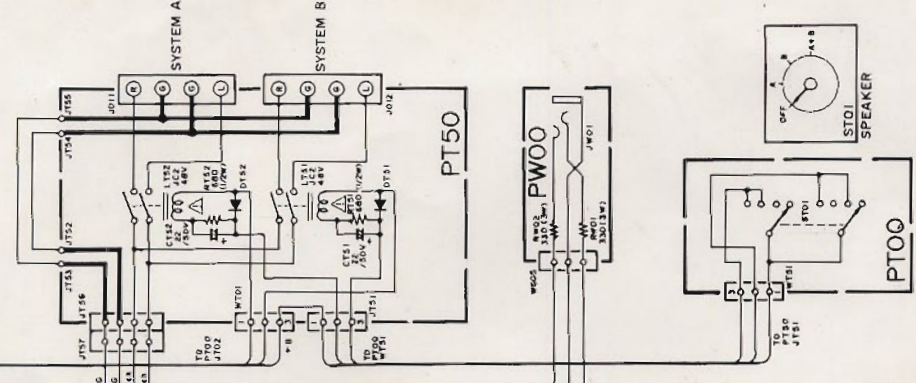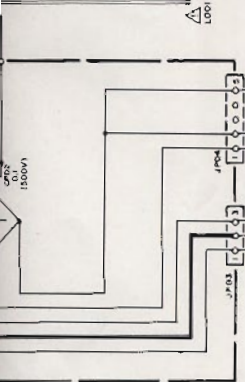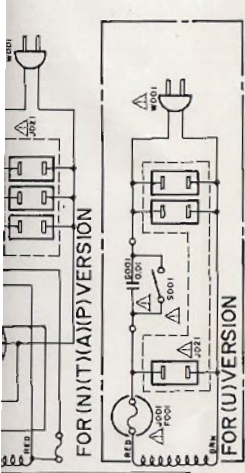

ents and wiring are subject to change for modification without notice.