


- O601, O602
HC10036050
TA7629P
- O801
HC38612090
NJM78M12A
- O802
HC38615090
NJM78M15A
- OX01
HC10036050
TA7666P
- QU21
HT107332A0
25A733(P,Q)
- QJ23
HC10017090
NJM204300
- QL01, QL02
HT3183280
25C1383(O,R)
- QJ01, QJ02
HT318451U0
25C1845(U)
- QJ21, QJ22
QJ71 ~ QJ76
OK01 ~ OK04, QU22
HT32634280
25C2634(S,T)
- DJ21, DU21
DU23 ~ DU25
DU27, DU28
HD20001000
MA-150
- DU22, DU26
DU29
HD10004020
QA-91
- DB01
HD20027080
RB-152
- DE01
HD30022020
MA1130M
- DX01 ~ DX06
DX11, DX12
HI10045030
SLP-256B
- DX07 ~ DX10
HI10044030
SLP-156B
- DX13
HI10046030
SLP-481C-50
- DX14
HI10037030
SLP-981C-50
- DX15
HI10038030
SLP-281F-50U
- S401-1 ~ 8 - REC-REL
S401-1 - DOLBY
S401-2 - TAPE SELECT NORMAL ON
S401-3 - TAPE SELECT CTR OFF
S401-4 - TAPE SELECT METAL OFF
S801 - POWER
S071 - MOTOR MAIN OFF
S072 - MOTOR SUB OFF
S073 - PLAY OFF
S074 - PAUSE OFF
S075 - F.F./REW OFF

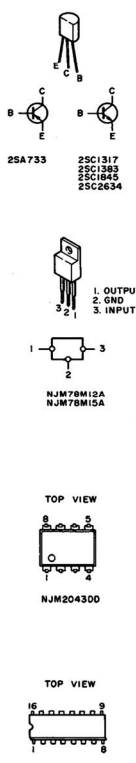

NOTE ON SAFETY:
 Symbol Δ Fire or electrical shock hazard. Only original parts should be used to replace any part marked with symbol Δ . Any other component substitution (other than original type), may increase risk of fire or electrical shock hazard.

Components and wiring are subject to change for modification without notice.