

780Y

# SD9000


1. This Service Manual is prepared for "N" version of SD 9000.
2. The parts not included in the Manual are for common use with those for "U" and "C" versions. Therefore, for such parts not included in the Manual, use the service manual (available under the Part No. 4280855010) for "U" and "C" versions of SD 9000.
3. The parts for "U" and "C" versions, listed in the Manual are:
  - (1) Those which have newly been added
  - (2) Those whose part numbers have been changed
  - (3) Different parts between "U" and "N" versions or between "C" and "N" versions
  - (4) Others

**marantz®**

**model SD9000**

*Stereo Cassette Deck*

78

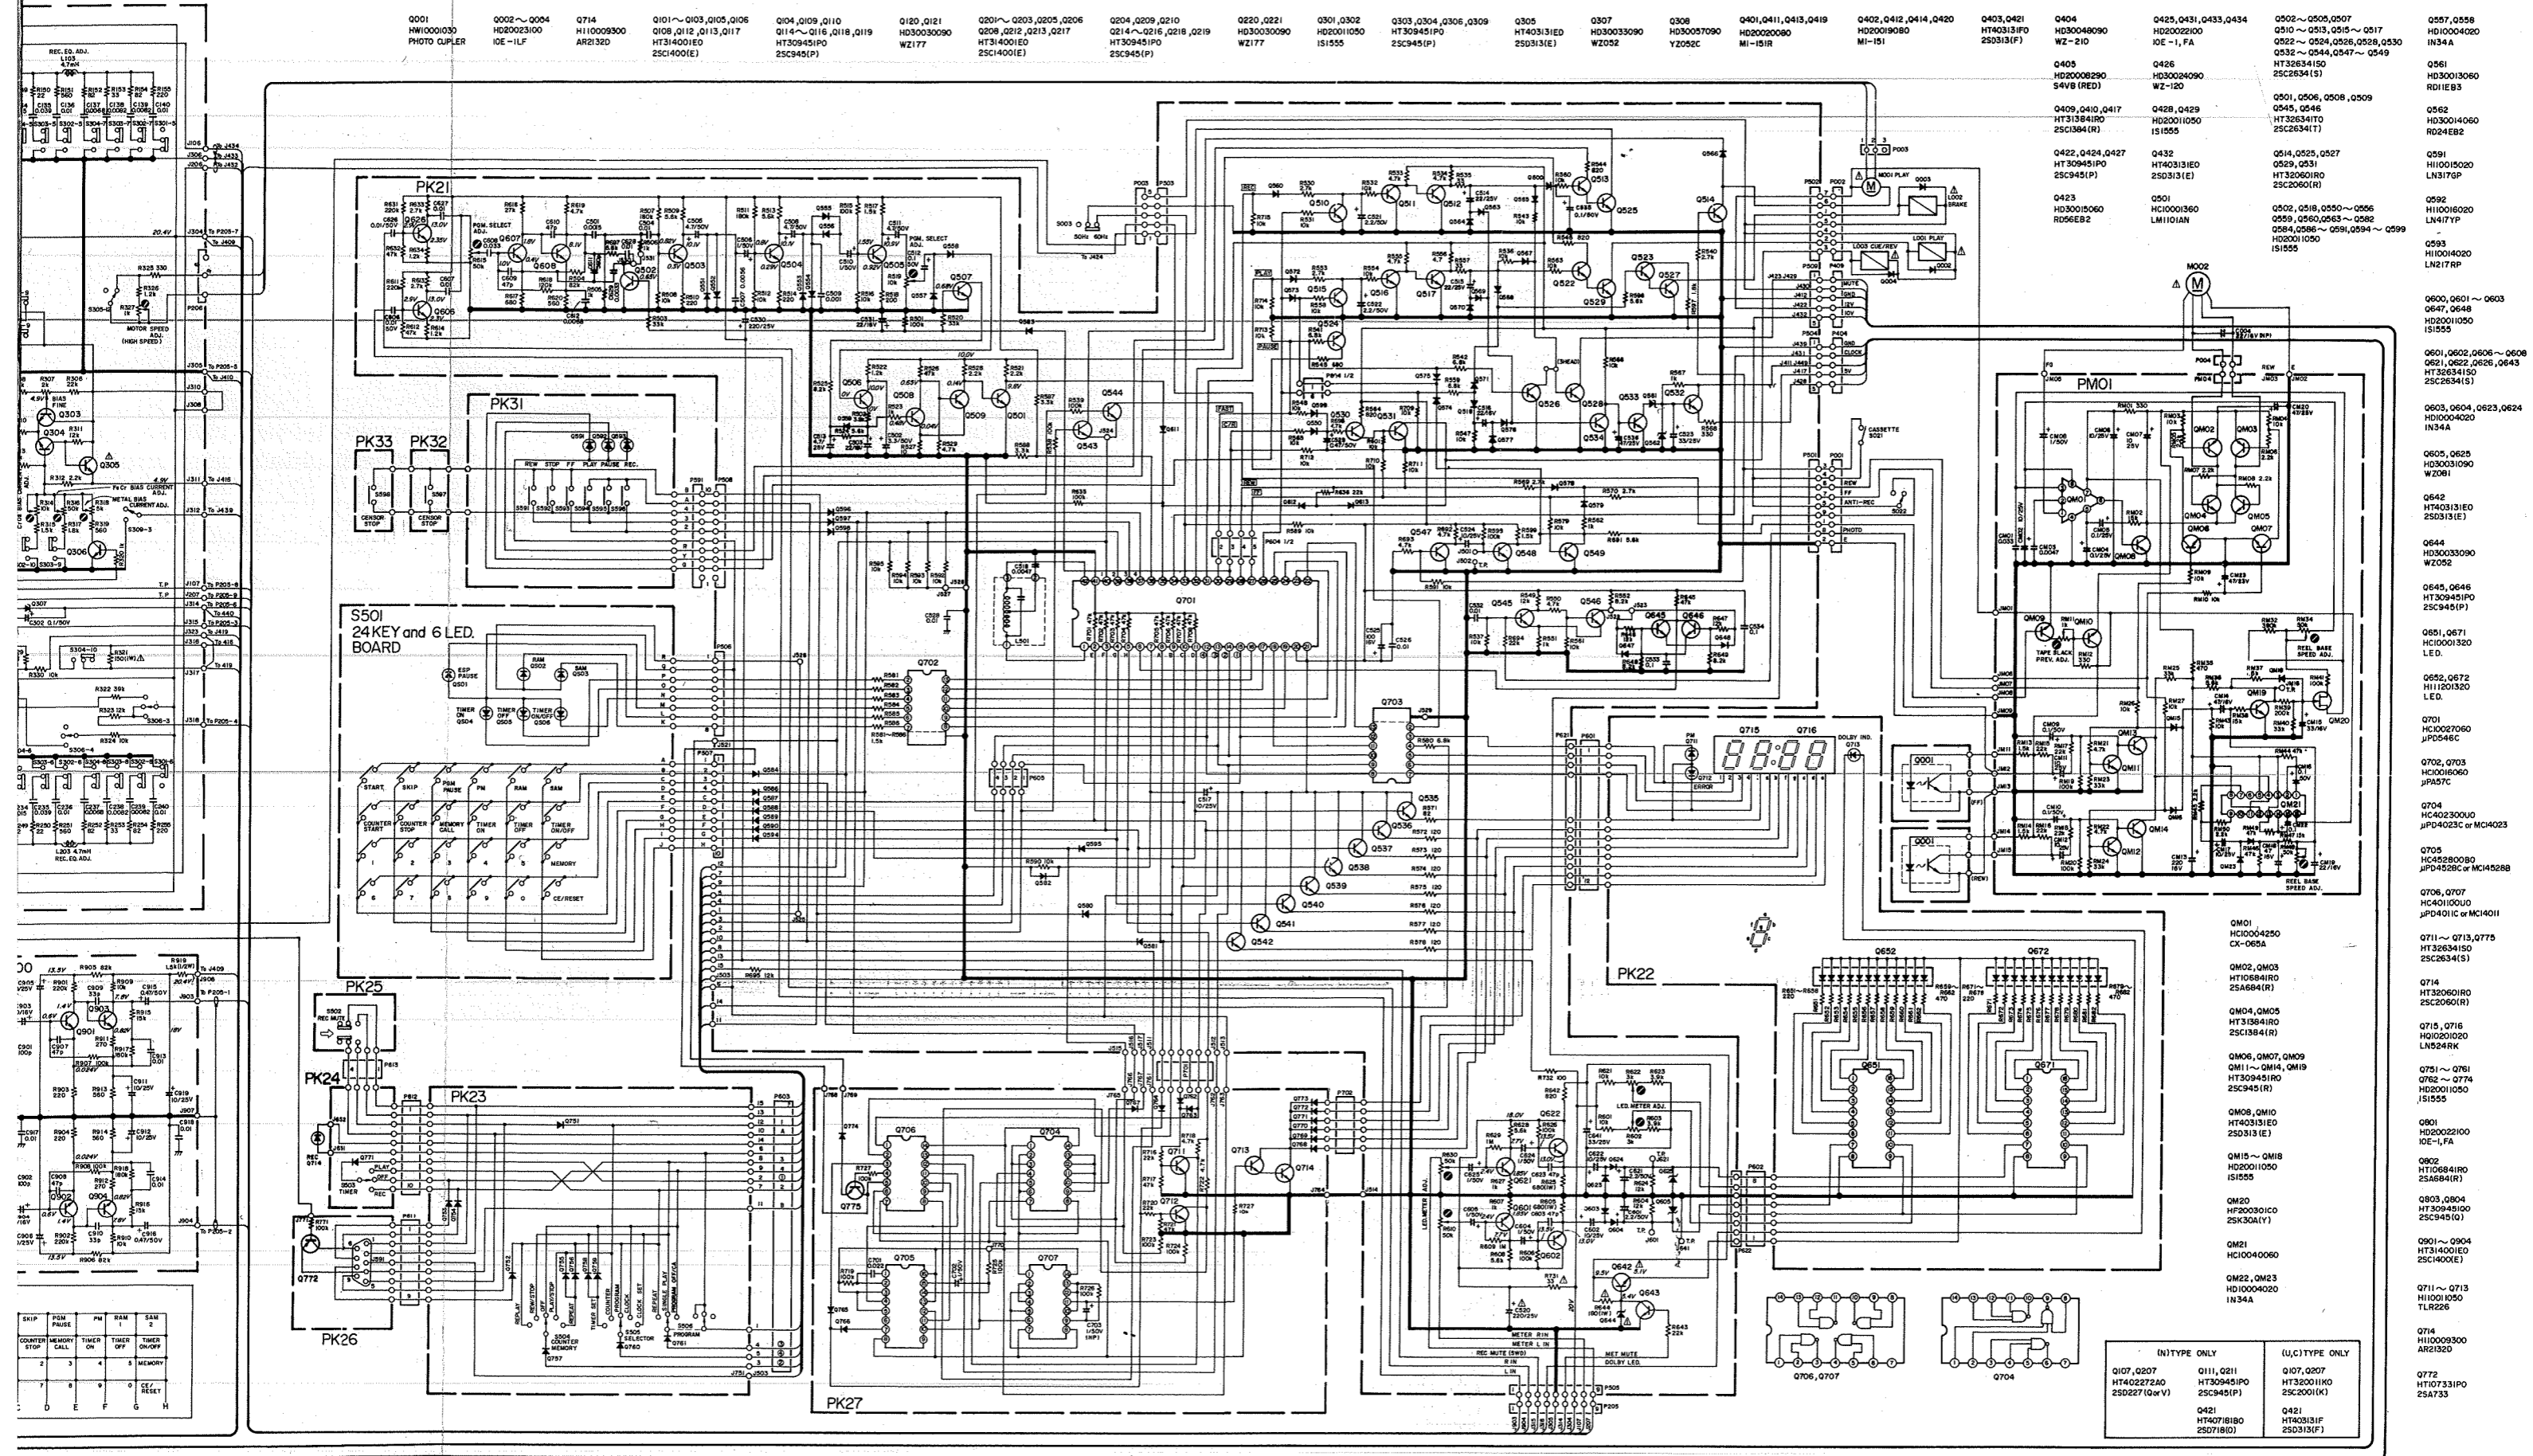

Q001 HW10001030 PHOTO COUPLER	Q002~Q004 HD20023100 IDE-ILF	Q714 HI10009300 AR2132D	Q101~Q103, Q105, Q106 Q108, Q112, Q113, Q117 HT314001E0 25C1400(E)	Q104, Q109, Q110 Q114~Q116, Q118, Q119 HT309451P0 25C945(P)	Q120, Q121 HD30030090 WZ177	Q201~Q203, Q205, Q206 Q208, Q212, Q213, Q217 HT314001E0 25C1400(E)	Q204, Q209, Q210 Q214~Q216, Q218, Q219 HT309451P0 25C945(P)	Q220, Q221 HD30030090 WZ177	Q301, Q302 HD20011050 IS1555	Q303, Q304, Q306, Q309 HT309451P0 25C945(P)	Q305 HT403131E0 25D313(E)	Q307 HD30030090 WZ052	Q308 HD30007090 YZ092C	Q401, Q411, Q413, Q419 HD20019080 MI-151R	Q402, Q412, Q414, Q420 HD20019080 MI-151	Q403, Q421 HT403131F0 25D313(F)	Q404 HD30048090 WZ-210	Q425, Q431, Q433, Q434 HD20022100 IOE-1, FA	Q502~Q505, Q507 Q510~Q513, Q515~Q517 Q522~Q544, Q526, Q528, Q530 Q532~Q544, Q547~Q549 HT326341S0 25C2634(S)	Q501, Q506, Q508, Q509 Q545, Q546 HT326341T0 25C2634(T)	Q514, Q525, Q527 Q529, Q531 HT320601R0 25C2060(R)	Q591 HI10015020 LN317P	Q592 HI10016020 LN417P	Q593 HI10014020 LN217RP	Q600, Q601~Q603 Q647, Q648 HD20011050 IS1555	Q601, Q602, Q606~Q608 Q621, Q622, Q626, Q643 HT326341S0 25C2634(S)	Q603, Q604, Q623, Q624 HI10004020 IN34A	Q605, Q625 HD30031090 WZ061	Q642 HT403131E0 25D313(E)	Q644 HD30033090 WZ052	Q645, Q646 HT309451P0 25C945(P)	Q651, Q671 HI10013200 LED.	Q652, Q672 HI11201320 LED.	Q701 HI10027060 JPD046C	Q702, Q703 HI10010600 JPA57C	Q704 HI10023000 JPD4023C or MC4023	Q705 HI10028080 JPD4528C or MC14528B	Q706, Q707 HI10010000 JPD4011C or MC14011	Q711~Q713, Q775 HT326341S0 25C2634(S)	Q714 HT320601R0 25C2060(R)	Q715, Q716 HI10020100 LN524FK	Q751~Q751 Q762~Q774 HD20011050 IS1555	Q801 HD20022100 IOE-1, FA	Q802 HT106841R0 25A684(R)	Q803, Q804 HT309451P0 25C945(P)	Q901~Q904 HT314001E0 25C1400(E)	Q711~Q713 HI10011050 TLR226	Q714 HI10009300 AR2132D	Q772 HT107331P0 25A733
-------------------------------------	------------------------------------	-------------------------------	---	--	-----------------------------------	---	--	-----------------------------------	------------------------------------	---	---------------------------------	-----------------------------	------------------------------	---	--	---------------------------------------	------------------------------	---	--	--	--	------------------------------	------------------------------	-------------------------------	---	---	---	-----------------------------------	---------------------------------	-----------------------------	---------------------------------------	----------------------------------	----------------------------------	-------------------------------	------------------------------------	--	--	---	---	----------------------------------	-------------------------------------	--	---------------------------------	---------------------------------	---------------------------------------	---------------------------------------	-----------------------------------	-------------------------------	------------------------------

S501  
24 KEY and 6 LED  
BOARD

PK21  
PK22  
PK23  
PK24  
PK25  
PK26  
PK27

(N)TYPE ONLY	(U,C)TYPE ONLY
Q107, Q207 HT402272A0 25D22710(V)	Q111, Q211 HT309451P0 25C945(P)
Q421 HT407181B0 25D718(B)	Q421 HT403131F 25D313(F)

**SWITCHES**  
 S301: TAPE SELECTOR (NORMAL)  
 S302: TAPE SELECTOR (Special/CrO)  
 S303: TAPE SELECTOR (FeCr)  
 S304: TAPE SELECTOR (Metal)  
 S305: TAPE SPEED SWITCH (STANDARD)

