

marantz®

Model SR5000 User Guide

AV Surround Receiver

ENGLISH

WARRANTY

For warranty information, contact your local Marantz distributor.

RETAIN YOUR PURCHASE RECEIPT

Your purchase receipt is your permanent record of a valuable purchase. It should be kept in a safe place to be referred to as necessary for insurance purposes of when corresponding with Marantz.

IMPORTANT

When seeking warranty service, it is the responsibility of the consumer to establish proof and date of purchase. Your purchase receipt or invoice is adequate for such proof.

FOR U.K. ONLY

This undertaking is in addition to a consumer's statutory rights and does not affect those rights in any way.

FRANÇAIS

GARANTIE

Pour des informations sur la garantie, contacter le distributeur local Marantz.

CONSERVER L'ATTESTATION D'ACHAT

L'attestation d'achat est la preuve permanente d'un achat de valeur. La conserver en lieu sûr pour s'y reporter aux fins d'obtention d'une couverture d'assurance ou dans le cadre de correspondances avec Marantz.

IMPORTANT

Pour l'obtention d'un service couvert par la garantie, il incombe au client d'établir la preuve de l'achat et d'en corroborer la date. Le reçu ou la facture constituent des preuves suffisantes.

DEUTSCH

GRANTIE

Bei Garantiefragen wenden Sie sich bitte an Ihren Marantz-Händler.

HEBEN SIE IHRE QUITTUNG GUT AUF

Die Quittung dient Ihnen als bleibende Unterlage für Ihre wertvolle Anschaffung. Das Aufbewahren der Quittung ist wichtig, da die darin enthaltenen Angaben für Versicherungszwecke oder bei Korrespondenz mit Marantz angeführt werden müssen.

WICHTIG!

Bei Garantieforderungen muß der Kunde eine Kaufunterlage mit Kaufdatum vorlegen. Ihre Quittung oder Rechnung ist als Unterlage ausreichend.

NEDERLANDS

GRANTIE

Voor inlichtingen omtrent garantie dient u zich te wenden tot uw plaatselijke Marantz-handelaar.

UW KWITANTIE, KASSABON E.D. BEWAREN

Uw Kwitantie, kassabon e.d. vormen uw bewijs van aankoop van een waardevol artikel en dienen op een veilige plaats bewaard te worden voor evt. verwijzing, b.v. in verband met verzekering of bij correspondentie met Marantz.

BELANGRIJK

Bij een evt. beroep op de garantie is het de verantwoordelijkheid van de consument een gedateerd bewijs van aankoop te tonen. Uw kassabon of factuur is zijn voldoende bewijs.

ITALIANO

CONDIZIONI DI GARANZIA

L'apparecchio e' garantito per 365 giorni dalla data di acquisto comprovata da un documento attestante il nominativo del rivenditore e la data di vendita. La garanzia sara' prestata con la sostituzione o riparazione gratuita delle parti difettose.

Non sono coperti da garanzia difetti derivanti da uso improprio, errata installazione, manutenzione effettuata da personale non autorizzato o, comunque, da circostanze che non passano riferirsi a difetti di funzionamento dell'apparecchio.

Sono inoltre esclusi dalla garanzia gli interventi inerenti l'installazione e l'allacciamento agli impianti di alimentazione.

Gli apparecchi verranno riparati presso i nostri Centri di Assistenza. Le spese ed i rischi di trasporto sono a carico del cliente.

La casa costruttrice declina ogni responsabilita' per danni diretti o indiretti provocati dalla inosservanza delle prescrizioni di installazione, uso e manutenzione dettagliate nel presente manuale.

Per informazioni sull'abbonamento al servizio Assistenza postgaranzia e per conoscere l'indirizzo dei Centri Assistenza Marantz rivolgetevi al nostro servizio consumatori (telefono 1678-20026 - numero verde).

PORTUGUÊS

GARANTIA

Para informações sobre a garantia, contactar o distribuidor Marantz local.

GUARDAR O RECIBO DE COMPRA

O recibo é o registo permanente da compra que fez. Deve ser guardado num local seguro, para ser apresentado em questões relacionadas com o seguro ou para quando tiver de contactar a Marantz.

IMPORTANTE

Quando procurar assistência técnica ao abrigo da garantia, é da responsabilidade do consumidor estabelecer a prova e data de compra. O recibo é prova adequada.

ESPAÑOL

GARANTÍA

Para información sobre las Condiciones de Garantía, sírvase consultar el Certificado que encontrará en le interior del embalaje del equipo.

CONSERVE EL COMPROBANTE DE LA COMPRA

La factura es el comprobante de la adquisición de un producto valioso. Consérvela en lugar seguro para poder consultarla en caso necesario.

IMPORTANTE

Para disponer de servicios cubiertos por la garantía, el usuario deberá acreditar la fecha y el lugar de adquisición del equipo. La factura o recibo de la compra constituyen un comprobante válido a tal efecto.

SVENSKA

GARANTI

Angående garanti, kontakta din lokala Marantz handlare.

SPAR KVITTOT

Kvittot är din Inköpshandling över Inköp av en värdefull vara. Det ska placeras på ett säkert ställe och hänvisas till vid försäkringsfrågor eller vid korrespondens med Marantz.

VIKTIGT

När garantiservice åberopas är det konsumentens ansvar att visa datum för inköp. Ditt kvitto eller din faktura är ett tillfredsställande bevis.

DANSK

GARANTI

Bed din Marantz-forhandler om oplysninger om garantien.

GEM DIN KVITTERING SOM KØBSEVIS

Din kvittering er bevis på et værdifuldt køb. Opbevar den på et sikkert sted, hvor du let kan finde den i forbindelse med eventuelle erstatningskrav eller korrespondance med Marantz.

VIGTIGT

Det er brugerens ansvar at forelægge købsbevis, hvis der er brug for det i garantiforbindelse. Din kvittering eller faktura er gyldige beviser.

CONTENTS LIST

English	page 3
Français	page 14
Deutsch	Seite 25
Nederlands	pagina 38
Italiano	pagina 50
Português	página 61
Español	página 73
Svenska	sidan 85
Dansk	side 96
Specifications	page 107
Figures	page 108

CE MARKING

- CE** **English**
This unit is in conformity with EMC directive and low-voltage directive.
- CE** **Français**
Cet appareil est conforme à la directive EMC et à la directive sur les basses tensions.
- CE** **Deutsch**
Dieses Gerät entspricht den EMC-Richtlinien und den Richtlinien für Niederspannungsgeräte.
- CE** **Nederlands**
Dit apparaat voldoet aan de EMC-richtlijnen en de richtlijnen voor apparatuur met laag voltage.
- CE** **Italiano**
Quest'unità è conforme alle direttive EMC ed alla direttiva sulle basse tensioni.
- CE** **Português**
Esta unidade está em conformidade com as directivas EMC e as directivas de baixa voltagem.
- CE** **Español**
Esta unidad está de acuerdo con las normas EMC y las relacionadas con baja tensión.
- CE** **Svenska**
Denna enhet överensstämmer med EMC direktivet och direktivet för lågspänning.
- CE** **Dansk**
Dette apparat er i overensstemmelse med EMC direktivet og direktivet for lavspænding.

SI DICHIARA CHE L'APPARECCHIO SINTO-AMPLIFICATORE SR5000 RISPONDE ALLE PRESCRIZIONI DELL'ART. 2 COMMA 1 DEL D.M. 28 AGOSTO 1995 N 548.

FATTO A EINDHOVEN, IL 1/1/1996.

**MARANTZ EUROPE B.V.
5600 EINDHOVEN
THE NETHERLANDS**

"Este aparato lleva elementos antiparasitarios necesarios para cumplir con los límites que se establecieron en el Anexo V del Reglamento sobre Perturbaciones Radioeléctricas e Interferencias aprobado en el Real Decreto 138/1989. (B.O.E. de 9 de Febrero 1989)."

FOREWORD

This section must be read carefully before any connection is made to the mains supply.

WARNINGS

- Do not expose the equipment to rain or moisture.
- Do not remove the cover from the equipment.
- Do not insert anything into the equipment through the ventilation holes.
- Do not handle the mains lead with wet hands.

EQUIPMENT MAINS WORKING SETTING

Your Marantz product complies with the household power and safety requirements in your area.

This is a voltage selector on the rear panel of the "Overseas" Version product. Be sure to set the voltage selector to the mains voltage of your area before using the unit.

IMPORTANT

This apparatus is fitted with an approved moulded 13 Amp plug. To change a fuse in this type of plug proceed as follows:

1. Remove fuse cover and fuse.
2. Fix new fuse which should be a BS1362 5A, A.S.T.A. or BSI approved type.
3. Refit the fuse cover.

If the fitted plug is not suitable for your socket outlets, it should be cut off and an appropriate plug fitted in its place.

If the mains plug contains a fuse, this should have a value of 5A. If a plug without a fuse is used, the fuse at the distribution board should not be greater than 5A.

NOTE: The severed plug must be destroyed to avoid a possible shock hazard should it be inserted into a 13A socket elsewhere.

HOW TO CONNECT A PLUG

The wires in the mains lead are coloured in accordance with the following code:

BLUE—"NEUTRAL" ("N")

BROWN—"LIVE" ("L")

1. The BLUE wire must be connected to the terminal which is marked with the letter "N" or coloured BLACK.
2. The BROWN wire must be connected to the terminal which is marked with the letter "L" or coloured RED.
3. Do not connect either wires to the earth terminal in the plug which is marked by the letter "E" or by the safety earth symbol \perp or coloured green or green-and-yellow.

Before replacing the plug cover, make certain that the cord grip is clamped over the sheath of the lead — not simply over the two wires.

COPYRIGHT

Recording and playback of some material may require permission. For further information refer to the following:

- Copyright Act 1956
- Dramatic and Musical Performers Act 1958
- Performers Protection Acts 1963, and 1972
- Any subsequent statutory enactments and orders

INTRODUCTION

Thank you for selecting the Marantz AV Surround Stereo Receiver for your AV system.

This AV Surround Stereo Receiver incorporates a number of features designed to enhance the listening of your favorite music and home theater sources.

Please read these operating instructions carefully. We recommend that you read the entire user guide before you attempt to connect or operate the receiver.

After you have reviewed the contents of this manual, we suggest that you make all system connections before you attempt to operate the unit.

Refer to the figures on the pages at the back of this user's guide. The callout numbers on the figures correspond to those found in the text. All references to the connections and controls that are printed in **BOLD** type are as they appear on the unit.

INSTALLATION

Remember the following important points when installing the receiver.

- Do not expose the component to rain or moisture, as this may cause damage to the receiver.
- All receivers produce some heat during operation and this heat must be allowed to disperse freely. Do not close any ventilation openings and insure that there is adequate ventilation space behind, beside and above the receiver.
- Prevent extra heat from reaching the unit. Never put the receiver in the full glare of the sun or near a heat source.

PRECAUTIONS

The following precautions should be taken when operating the equipment.

GENERAL PRECAUTIONS

When installing the equipment ensure that:

- the ventilation holes are not covered.
- air is allowed to circulate freely around the equipment.
- it is placed on a vibration-free surface.
- it will not be exposed to excessive heat, cold, moisture or dust.
- it will not be exposed to direct sunlight.
- it will not be exposed to electrostatic discharges.
- always install the unite horizontally.

In addition, never place heavy objects on the equipment.

If a foreign object or water does enter the equipment, contact your nearest dealer or service center.

Do not pull out the plug by pulling on the mains lead; grasp the plug itself.

It is advisable when leaving the house, or during a thunderstorm, to disconnect the equipment from the AC outlet.

SR5000 FEATURES

- Equipped with 7 audio inputs and 4 video inputs
- Front 100 watt x 2(stereo mode), 70 watt x 5 (surround mode)
- DTS(Digital Theater System) digital surround decoder
- Dolby digital(AC-3)surround decoder
- 3-in Digital selector (Coax.-1, Coax-2, Opt)
- Surround decoder with digital delay control function.
- 30-station random preset memory.
- Automatic preset memory at tuner.
- Up to 90-minute sleep timer by remote control.
- Radio Data System for European version

To ensure proper ventilation for the amplifier, do not mount it in a rack or locate it inside a bookshelf. Note the following precautions.


- Do not insert objects into the space underneath the amplifier.
- Do not block the vents on the top of the amplifier.
- Keep the area above the amplifier unobstructed for about one meter.
- Allow approximately 20 centimeters of space on all sides of the amplifier.

USING THE SURROUND MODES

8 surround modes are provided for reproducing sound with a live atmosphere. Select the surround mode appropriate to the music/video source and your listening room conditions.

1. DTS (Digital Theater System):

Allows you to enjoy 5.1 (or 6) discrete channels of high quality digital audio

from DTS program sources bearing the  "HDS" or "HIGH DEFINITION SURROUND" trade mark such as laser discs, DVD and compact discs, etc. DTS Digital Surround delivers up to 6 channels of transparent audio (which means identical to the original masters) and results in exceptional clarity throughout a true 360° soundfield.

The term DTS is a trademark of DTS Technology, LLC.

Manufactured under license from DTS Technology, LLC.


Note: The DTS program sources should be played back in the DTS mode. If not, it will sound like continuous noise.

2. DOLBY DIGITAL (AC-3) SURROUND

Dolby Digital (also known as AC-3) is new technology that was originally developed to provide six separate channels of high quality discrete multi-channel sound for motion picture theaters. The Marantz AV receiver brings that same high quality sound into your home when used a compatible laser disc player, as well as from future Dolby Digital sources such as DSS, Digital Video Disc (DVD) and High Definition Television (HDTV).

The wide dynamic range of Dolby Digital enables the Marantz AV receiver to reproduce soundtracks with their full fidelity and a realism that is not possible with conventional matrix surround systems.

3. DOLBY PRO LOGIC SURROUND

This is the setting you will probably use for watching most Dolby Surround ( DOLBY SURROUND) encoded videos. This provides you with left and right stereo for off-screen imaging, a center channel for most on-screen dialogue, and a surround channel for ambiance and special effects.

There are three center channel modes available in Dolby Surround.

"PHANTOM" (CENTER SPEAKER MODE : NONE) should be used if you have elected not to use a center channel. This mode of operation directs the center channel information equally to the left and right channel speakers, creating a "phantom" center image of the dialogue. This is the way the first generation Dolby Surround worked.

"NORMAL" should be used if you are using a small center channel speaker (or speakers) with limited bass response. In NORMAL mode, the lower frequencies (below 100 Hz) are removed from the center channel and redirected equally to the left and right speakers. Since bass frequencies are omnidirectional, this will not affect the imaging of the center channel. The dialogue will still appear to come from the video screen.

"WIDE" should be used if you are using a full-range center channel speaker that is just as capable of good bass response as your main left and right speakers. In this mode, all the center channel information remains in the center channel output.

DELAY TIMES

Delay times available in Dolby Surround : 15 to 30 mS (milliseconds)

Delay times available in Dolby Digital (AC-3) : 0 to 15 mS (milliseconds)

For most home theater setups, the 20mS setting works best. This setting should be used if your front speakers are the about the same distance away from the listening position as the surround speakers are located. Choose the 30mS setting only if you are sitting much closer to the surround speakers than to the front speakers. Choose the 15mS setting if you are further away from the surround speakers than you are to the front speakers.

4. DOLBY 3 STEREO

This mode of operation is available to provide a center channel image for stereo program sources that are not encoded with surround sound. This is use for watching older movies or TV shows that are recorded in stereo, particularly if your speakers are located relatively far apart from each other. In this way, dialogue will be correctly located at the video screen, while the stereo information will provide off-screen imaging. Only NORMAL and WIDE center channel modes are available in 3 STEREO Mode. Delay time is 0mS because the SURROUND channel is off.

5. THEATER

This setting creates the same intimate feeling as you get in a theater when watching plays, musicals and solo acts.

6. HALL

This mode provides the ambiance of a concert hall for live, un-amplified classical music sources such as orchestral, chamber music or solo instrumentals.

7. STADIUM

The reverberation and open air atmosphere of a rock concert or sporting event is created by this setting, when playing stereo (but not mono) source material.

8. CHURCH

This mode provides the reverberant ambiance of a church, which can enhance choral works, as well as adding a rich ambient effect to "dry" studio recordings.

DOLBY PRO-LOGIC SURROUND

[Speaker Selection and Placement]

Front Speakers: These should be full-range, high quality speakers; the best speakers in your system. They should be located far enough from each side of your TV monitor to provide a well defined stereo image. The TV monitor should be located midway between the left and right front speakers. You may use smaller speakers if you are using a sub-woofer with your system.

Surround Speakers: The rear speakers in your surround sound system provide ambient sound for an open, "concert hall" effect when listening to music. They also spread the sound and provide special effects on video soundtracks when used in the Dolby Surround mode.

The demands made on your surround speakers are far less than on your main speakers. Therefore, these speakers do not need to be as large (and as expensive) as your main speakers. Deep bass response is not important at all. Good 2-way bookshelf speakers will handle the job easily, and most full-range mini-monitors are also quite suitable for this application. Depending on how extensive you want to get with your installation, there are also several in-wall and wall-mount speakers that are suitable for use as surround sound speakers. Dipole-type surround speakers can provide even wider dispersion, with a diffused sound field which provides enveloping surround sound effects.

The surround channel speakers should be mounted so that their sound is dispersed throughout the viewing area.

Ideally, you should install the surround speakers along the side walls of the listening room, directly above and to the left and right to the listeners or slightly behind them. Their height should be about 1 meter higher than the level of the listener's ears. (Figure 1-A). This will provide the best surround sound effect and should be used with both conventional direct-radiating as well as dipole speaker types. If this is not possible or practical, then try mounting the surround speakers on the back wall of the room, and aim them so that they are not firing directly sounds do not reach directly toward the listener's ears. (Figure 1-B) Another approach is to mount the speakers facing upward so that their sound is dispersed by the ceiling and rear wall (Figure 1-C).

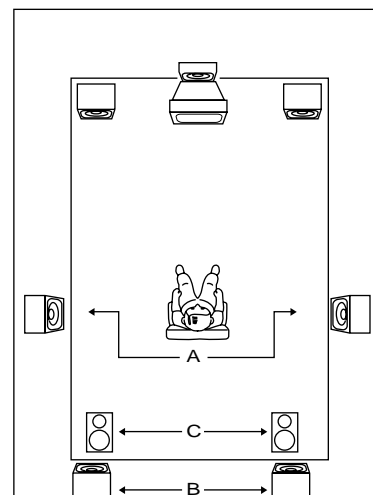


Figure 1.

Figure 1. Surround Speaker Options

- Option A: Placed or mounted along side walls
- Option B: Placed or mounted behind listeners
- Option C: Placed or mounted facing upward

Center Speaker(s) Again, the center speaker(s) can be of a smaller size and less expensive than your main speakers. However, the upper midrange and treble response of the center speaker(s) should resemble that of the main speakers. If there are significant differences in frequency response in this range, the stereo image may shift toward the speaker with the higher output.

You can use one or two speakers for the center channel.

If you choose to use one speaker (Figure 2A), it should be located immediately above or below your video screen. Using one center speaker provides the best results for most home theater system setups.

If you choose to use two speakers (Figure 2B), the same signal will appear in both speakers since the CENTER channel output is monophonic. They should be located on each side of your TV monitor, as close as possible so that the dialogue will seem to come from the center of the TV screen.

In either case, the center speaker(s) should be placed as close to your video screen as possible, so it must be magnetically shielded. If it is not shielded, it could cause distortion of the TV picture. Special video-compatible monitor speakers are available for this application.

Use the center speaker as shown in Figure 2A or 2B.

NOTES

- If using a VCR, to take full advantage of the Surround modes, especially Dolby Pro Logic, your VCR must be a Hi-Fi Stereo VCR. A mono VCR cannot provide the stereo soundtracks necessary for surround decoding.
- The surround modes will not operate correctly if the signal passes through a graphic equalizer. If you use a graphic equalizer in your system, set it for flat response or its "through" or "off" settings.

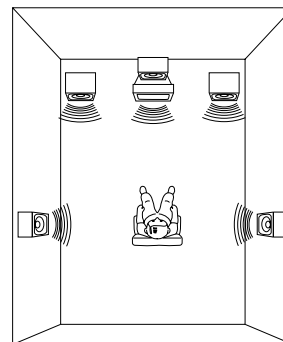


Figure 2A.

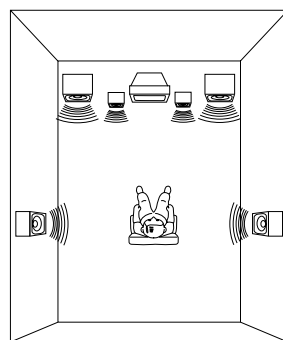


Figure 2B.

Figure 2. Center Speaker Options

- Option A: Using one speaker
- Option B: Using two speakers

LOCATION AND FUNCTION OF PARTS AND CONTROLS

Rear panel connections

(See pages 108)

All connections to the rear panel should be made with entire power off to the system. To avoid miss-connection, it is advisable to connect one cable at a time between the different components. This is the safest way to avoid cross-connecting channels or mix-up signal inputs with outputs.

A FM antenna terminal (75 ohm or 300 ohm)

For connecting an external FM antenna with a coaxial cable, or for connecting a cable network.

AM antenna and ground terminals

For connecting the supplied AM loop antenna. Use the terminals marked "AM" and "GND".

The supplied AM loop antenna will provide good AM reception in most areas. Position the loop antenna to the best reception.

B VCR1 video input/output jacks

Connect the IN jack to your main VCR's video output jack and connect the OUT jack to the VCR's video input jack.

C LD/TV video input jack

Connect to a laser disc player's video output or TV's output jack.

D DVD video input jack

Connect to a DVD's video output.

E TV MONITOR OUT jack

Connect to a TV's video input jack.

F REMOTE jacks

Connect to other Marantz components equipped with REMOTE jacks. (See page 8.)

Marantz components utilize the Philips RC-5 remote control system language.

G TAPE 1 input jacks

Connect the output (PLAY) jack of the cassette deck to the IN jack.

H TAPE 2 input jacks

Connect the output (PLAY) jack of the cassette deck to the IN jack.

I CD input jacks

Connect to the audio output jacks of a CD player.

J VCR1 audio input/output jacks

Connect the IN jacks to a VCR's audio output jacks and the OUT jacks to the VCR's audio input jacks.

K DVD audio input jacks

Connect the IN jacks to a VCR's/DVD's audio output jacks.

L LD/TV audio input jacks

Connect to the audio output jacks of a laser disc player or TV.

M PRE OUT (FRONT, CENTER AND REAR JACKS)

These jacks supply pre-amp output signals, and are used for connection to external power amplifiers (if necessary).

N SURROUND speaker output terminals

Connect to the surround (rear) speakers.

O CENTER speaker output terminals

Connect to the center speaker.

P FRONT speaker output terminals

Connect to the front speakers.

Q AC OUTLET

Connect the AC power cables of a CD player, cassette deck, etc., of your system. The power supply from switched outlet is interlocked with the POWER switch of the unit. The maximum total power consumption of the connected components must not exceed the following limit:
100 W MAX.

R AC power cord

Plug into AC 230V household outlet.

S COAX. input terminal

Connect the COAX. output jack of the (digital equipment) Player to the IN jack.

OPT. input terminal

Connect the OPT. output jack of the (digital equipment) Player to the IN jack.

IMPORTANT NOTE:

These input jacks are for DTS, AC-3 / PCM digital signals only.
Do not connect standard audio outputs to these DTS, AC-3 / PCM digital input jacks.

T 6ch direct in

Connect the output jack of the surround processor (e.g. Marantz DP870 etc.) to the IN jack.

Note on loudspeaker impedance:

The power ratings specified for this Marantz receiver are obtained using fixed value test load impedances. However, the actual impedance of a loudspeaker system will vary with frequency, deviating from the nominal rating. This Marantz amplifier will drive any modern loudspeaker system with a rated impedance of 8 ohms or higher. A few newer loudspeakers feature impedances of less than 8 ohms. The high current output capability of this Marantz receiver can provide the additional power necessary to drive such low impedance speakers. However, during extended passages of high volume, the protection circuitry may temporarily interrupt operation. If this occurs, simply reduce the volume accordingly. The protection circuitry is specially designed so that it cannot affect the sound quality during normal operation.

Front panel features

(See page 108)

① POWER switch

When this switch is pressed once, the power turns ON and display appear on the display panel. When pressed again, the power turns OFF. After initialization or resetting, press this switch to enter the standby mode. To turn the power ON, press any of the function buttons of the main unit or the POWER button of the remote control unit.

② SPEAKERS (ON-OFF) button

Use this button to select speaker system ON or OFF

③ PHONES socket for stereo headphones

This jack is compatible with a wide range of conventional dynamic headphone types.

NOTE:

Change the surround mode to STEREO when using the headphones.

④ Tuning/Preset UP/DOWN, F/P(frequency/preset) buttons

During AM or FM reception, you can scan to other frequencies or preset number by pressing these buttons.

⑤ FM MODE button

Press this button to select stereo or monaural mode, when listening to FM broadcasts.

⑥ MEMORY button

Press this button to memorize the desired station frequency. Please see Page 9 for a detailed usage.

⑦ BASS CONTROL knob

Adjust the low frequency level with this control according to your taste and room acoustics.

⑧ TREBLE CONTROL knob

Adjust the high frequency level with this control according to your taste and room acoustics.

⑨ BALANCE CONTROL knob

Adjust the sound volume between left and right front speakers with this control knob.

⑩ VCR2 audio/video input jacks

Connect the audio/video output of the second VCR, etc. to these IN jacks.

⑪ Input selector button

This button selects the audio or audio/video source. The selected source name will be displayed on FTD. Pushing this button in the standby mode, allows to turn the power ON.

⑫ SET button

When speaker mode is decided, this button is pushed.

⑬ Mid night button (for Dolby digital, Digital Down mix mode only)

The source with large dynamic range is compressed.

⑭ 6-CH INPUT button

When selecting to other surround processor and/or equipment (example MPEG2), this button is pushed. SR5000 enters the state which can be controlled to the input of 6 channels even if any state. All the displays concerning surround mode are off. SR5000 returns to former state when 6 channel direct is made off.

⑮ REMOTE SENSOR

This SENSOR receives the signals from the remote control unit.

⑯ SPEAKER MODE button

Adjusting the settings of the center ,surround and sub woofer speaker mode as follows. The setting of the main speakers can be switched between LARGE SMALL except in case "e" below.

Press the speaker mode button:

a. When DTS mode:

Center speaker LARGE SMALL NONE

When the selection is finished, SET button is pushed, then display changes to surround speaker mode

Surround speaker LARGE SMALL NONE

When the selection is finished, SET button is pushed. Then displayed changes to sub woofer ON or OFF

Sub woofer: ON OFF

When the selection is finished, SET button is pushed. The display returns to the origin.

b. When Dolby Digital mode:

Center speaker LARGE SMALL NONE

When the selection is finished, SET button is pushed. Then displayed change to surround speaker mode

Surround speaker LARGE SMALL NONE

When the selection is finished, SET button is pushed. Then displayed change to sub woofer ON or OFF

Sub woofer: ON OFF

When the selection is finished, SET button is pushed. The display returns to the origin.

c. When Pro-Logic mode:

Center speaker LARGE SMALL NONE

When the selection is finished, SET button is pushed. Then displayed change to sub woofer ON or OFF

Sub woofer: ON OFF

When the selection is finished, SET button is pushed. The display returns to the origin.

d. When 3-Stereo mode:

Center speaker LARGE SMALL

When the selection is finished, SET button is pushed. Then displayed change to sub woofer ON or OFF

Sub woofer: ON OFF

When the selection is finished, SET button is pushed. The display returns to the origin.

e. Other surround, stereo mode

Sub woofer: ON OFF

When the selection is finished, SET button is pushed. The display returns to the origin. Mode of center/surround and sub woofer mode is memorized.

⑰ MASTER VOLUME CONTROL

Adjust the overall sound volume from the front, center, (sub woofer) and rear speakers with this control.

Pre-Out (front, rear, center, sub woofer) can also be controlled.

⑱ RDS Functions

a. SEARCH button

This key is used to search a station broadcasting, TP or PTY data by scanning.

Press the DISPLAY Button then press the SEARCH button.

Now "RDS" is displayed, each further press of the SEARCH button changes the display as shown below.

TP → PTY → FREQUENCY

When the desired item is displayed, press the TUNING UP or DOWN button to start scanning.

b. DISPLAY button

Each press of this button changes the display contents as shown below.

FREQUENCY → STATION NAME → PROGRAM NAME →

TIME(CLOCK) → TEXT → FREQUENCY

However, the above is not displayed when there is no RDS data with the station being received.

c. PTY (PROGRAM TYPE)SELECT button

 
When "PTY" is selected with the SEARCH button, select the desired program type by pressing the PTY SELECT button.

When the desired program type is displayed, press the TUNING UP or DOWN button to start scanning.


⑲ SURROUND MODE knob

Surround mode changes as follows whenever you adjust this knob.


For the digital equipment: CD, LD, DVD. (when selected optical or coaxial input)



 For the digital equipment: CD, LD, DVD. (when selected analog input)



 For the analog equipment: TUNER(AM/FM), TAPE-1, TAPE-2, VCR



⑳ STEREO(SURROUND OFF) button

When switching from surround mode to stereo mode, this button is pushed.

When Dolby digital mode, This Button operates as down mix (2 channel) function and FTD's "STEREO" indicator is light up.

㉑ DIGITAL SELECT. button

Push this button to switch the digital signal (When CD, LD, DVD. selected)

When CD function

a. DTS mode

Optical → Coaxial-1 → Coaxial-2

b. Stereo, Pro logic, 3 Stereo, Other surround (Hall etc.) mode

Optical → Coaxial-1 → Coaxial-2 → Analog(Digital off)

When DVD. function

a. DTS, Dolby Digital mode

Optical → Coaxial-1 → Coaxial-2

b. Stereo, Pro logic, 3 Stereo, Other surround (Hall etc.) mode

Optical → Coaxial-1 → Coaxial-2 → OFF (analog)

When LD/TV function

a. Dolby Digital, mode

Optical → Coaxial-1 → Coaxial-2

b. DTS mode

Optical → Coaxial-1 → Coaxial-2

c. Stereo mode

Optical → Coaxial-1 → Coaxial-2 → Analog

d. Dolby Pro logic, 3 Stereo, Other surround

Optical → Coaxial-1 → Coaxial-2 → Analog

DISPLAY (See page 108)

a) DISPLAY (On Florescent Tube Display) FREQUENCY/CHARACTER DISPLAY

This display the selected station frequency or the corresponding words when selecting a program source or a sound mode or operating test tone.

b) PRESET NUMBER, SLEEP TIME, DELAY TIME, and VOLUME LEVEL DISPLAY

This displays the selected preset number, the sleep time, the delay time, the effect, the center and the rear level when operating the surround mode.

c) Audio MUTE display

This indicator lights up "MUTE ON" on FTD when in the audio mute mode.(by remote control unit)

d) STEREO INDICATOR

This indicator lights up, during in FM stereo mode and/or when make the down mix (stereo) from AC-3 mode.

e) TUNED INDICATOR

This indicator lights up, when a broadcast is received properly.

f) MEMORY INDICATOR

When the MEMORY button is pressed, this indicator blinks for about 5 seconds.

g) SURROUND mode indicator

This indicator lights up when the surround mode is selected.

h) INDICATOR DISPLAY(LED)

STANDBY indicator

This indicator lights up when in the standby mode. This indicator lights when the digital signal is chosen,

Digital Select indicator Coax-1, Coax-2, Opt

This indicator lights up when in the digital input mode. This indicator lights when the digital signal is chosen, and it is judged a correct digital signal format LED blinks when not connected the cord or not formal signal.

6 ch direct in indicator

This indicator lights up when 6 channel input on mode.

Sub woofer on indicator

This indicator lights up when sub woofer on mode.

Mid night on indicator

This indicator lights up when mid night on mode.

RDS FUNCTIONS (Europe version only)

DISPLAY key

Each press of this key changes the display contents as shown below.
 FREQUENCY → STATION NAME → PROGRAM NAME → TIME(CLOCK)
 → TEXT → FREQUENCY

However, the above is not displayed when there is no RDS data with the station being received.

SEARCH key

This key is used to search a station broadcasting, TP or PTY data by scanning.

Press the DISPLAY key then press the SEARCH key.

Now "RDS" is displayed. Each further press of the SEARCH key changes the display as shown below.

TP → PTY → FREQUENCY

When the desired item is displayed, press the TUNING UP or DOWN key to start scanning.

PTY SELECT key

When "PTY" is selected with the SEARCH key, select the desired programme type by pressing the PTY SELECT key.

When the desired programme type is displayed, press the TUNING UP or DOWN key to start scanning.

One of the following programme types can be selected:

NEWS	News service
AFFAIR	Politics and current events
INFO	Spatial informative reports
SPORT	Sports
EDUCATE	Learning and continuation of education
DRAMA	Radio plays, literature
CULTURE	Learning and continuation of education
SCIENCE	Programmers about science and technology
OTHERS	Variety
POP	Popular music
ROCK	Rock music
MOR	Middle of the road music, "easy-listening"

LIGHT	Light classic music
CLASSIC	Serious classical music
OTHER	Other music
WEATHER	Weather reports, forecasts
FINANCE	Financial reports, commerce, trading
CHILDREN	Children's programmes
SOCIAL A	Social affairs
RELIGION	Religious programmes
PHONE IN	Programmes in which the public expresses its view by phone
TRAVEL	Travel reports
HOBBIES	Programmes concerning recreational activities
JAZZ	Jazz music
COUNTRY	Country music
NATION M	National music
OLDIES	Music from the so-called 'golden age' of popular music
FOLK M	Folk music
DOCUMENT	Documentaries

Remote control bus connections

This unit is equipped with a remote control function.

By connecting this unit's remote control jacks to a Marantz CD player or tape deck equipped with remote control (D-BUS) jacks, it allows system remote control operation.


Connect the REMOTE CONT. OUT jack of unit to REMOTE CONT. IN of other Marantz equipment, i.e. CD player or Cassette deck, by using an RCA pin cable.

The connection sequence between components is not important.

Note:


If a component equipped with remote control (D-BUS) jacks has an INT/EXT switch on the rear panel, set the switch to EXT when using the system control function.

(Connection example)

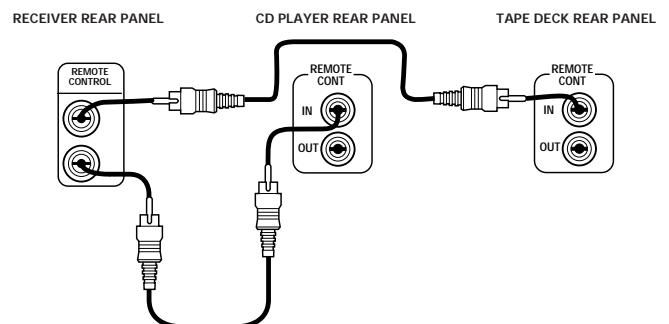

PRE OUT jacks

The RECEIVER is equipped with PRE OUT jacks. Use these jacks to connect to external power amplifiers.

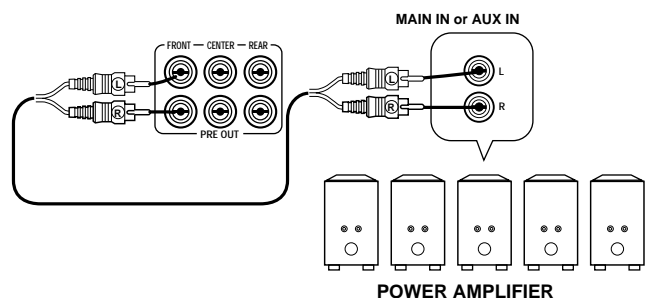

BASIC OPERATION

Listening to the tuner

1. Press the **POWER** switch ① to turn on the power.
2. Press the **AM** or **FM** button ⑤ to select the desired band.
3. Press the **TUNING UP** and **DOWN** buttons ④ to tune in the desired station. Pressing once for less than a half second changes the frequency by one step. Pressing longer sequentially scans frequencies in the indicated direction. Releasing the button in this state activates the auto tuning function, which automatically scans the frequencies until it reaches a station, at which point the **TUNED** and auto tuning stops.
4. Adjust the sound volume with the **VOLUME** control ⑰. If necessary, adjust the tone controls (**BASS/TREBLE**) ⑦ and ⑧.

PRESETTING STATIONS

Up to 30 stations can be preset at random, regardless of the reception band.

Tune in the station to be memorized using the auto or manual tuning.

Manual preset

1. Press the **MEMO**(memory) button ⑥, then the "MEMO" indicator lights up for about 5 seconds.
 - When the MEMO indicator goes off, press again to memorize.
2. Select the preset number with **TUNING UP/DOWN** button ④.
3. Press the **MEMO**(memory) button ⑥ again.
4. Repeat steps 1 to 3 to memorize other stations.
 - When memorizing a new station, the previous memorized station the same preset number is cleared.

Auto preset

1. The receiver is set in FM.
2. You keep pushing **MEMO**(memory) button ⑥ at about 3 seconds.
3. Then, tuner automatically begins scanning. Scanning stops automatically after radio stations have been stored in the Auto Preset memory.

■ PRESET TUNING

- To listen to a radio station stored in the station memory.

■ LISTENING TO FM STEREO BROADCASTS

- During FM broadcasts, press the **FM MODE** button ⑤ to select the **STEREO/MONO** mode.
- Each time this button is pressed, the mode changes as follows. Stereo mode: **STEREO** indicator lights up. Mono mode: **STEREO** indicator goes off.
- When listening to very weak FM stereo stations, you may experience higher than normal background hiss. Switch to monaural sound to eliminate the hiss.

■ CHANGE OF 9K/10K SCAN STEP (Europe, Overseas only)

When you keep pushing **FM/AM** button at about 3 seconds at **AM** mode, scan step of 9K/10K Hz is switched.

PLAYBACK OPERATION

Normal playback

1. Press the **POWER** switch ① to turn on the power.
2. Press the desired input selector ⑩ according to the table shown below.
3. Start playing the desired source. Adjust the volume using the **VOLUME** control ⑰. If necessary, adjust the tone using the **BASS** and **TREBLE** controls ⑦ and ⑧.

Source component	Input selector
Compact Disc Player	CD
FM or AM broadcasting	FM / AM
Laser Disc Player or TV	LD / TV
Video Cassette Recorder	VCR1
Video Cassette Recorder	VCR2
Digital Video Disc Player	DVD
Cassette deck - 1	TAPE 1
Cassette deck - 2	TAPE 2

ADJUSTMENTS

Adjusting the surround level

To adjust the surround level, locate yourself in your usual listening position and operate the remote control unit ⑫. (Please see next page.) Use this procedure to adjust the volume of each of the front, center, and rear speakers when watching a movie or other video source in **DOLBY** surround mode.

1. Press the **DOLBY PRO LOGIC** button.
2. Press the **SPEAKER MODE** ⑮ button to select the center mode corresponding to your speaker system configuration. In this example, the center mode is set to **NORMAL**.
3. Press the **TEST TONE** button. A test signal tone is heard from the left, center, right, and surround speakers in sequence. The balance of the surround channel (rear) can be controlled using the surround up/down keys when **Surr-R** or **L** is shown on the display.
4. Using the remote control, adjust the volume of the test tone for center and surround until the volume appears to be set at the same level for all speakers.
5. When volume adjustment is completed, press the **TEST TONE** button again so that the test signal tone stops.

Listening to a different audio source while watching a video source

1. Select one of the following video sources ⑩. VCR1, VCR2, DVD, LD.
2. Next, select one of the following audio sources ⑩. CD, FM or AM, TAPE 1, TAPE 2. Adjust the volume using the **VOLUME** control ⑰. If necessary, adjust the tone using the **BASS** and **TREBLE** controls ⑦ and ⑧.


■ RECORDING WITH A CASSETTE DECK

■ Recording with TAPE 1, TAPE 2

1. Select the program source to be recorded with the **INPUT FUNCTION SELECTOR** buttons ⑪.
2. Start recording on the cassette deck connected to the **TAPE 1, 2** jacks.
3. Play back the desired program source.
 - The volume, balance, bass and treble settings have no effect on the recording or dubbing.

REMOTE CONTROL OPERATION

(Remote control is applicable to components that use the RC-5 remote control cord language.)

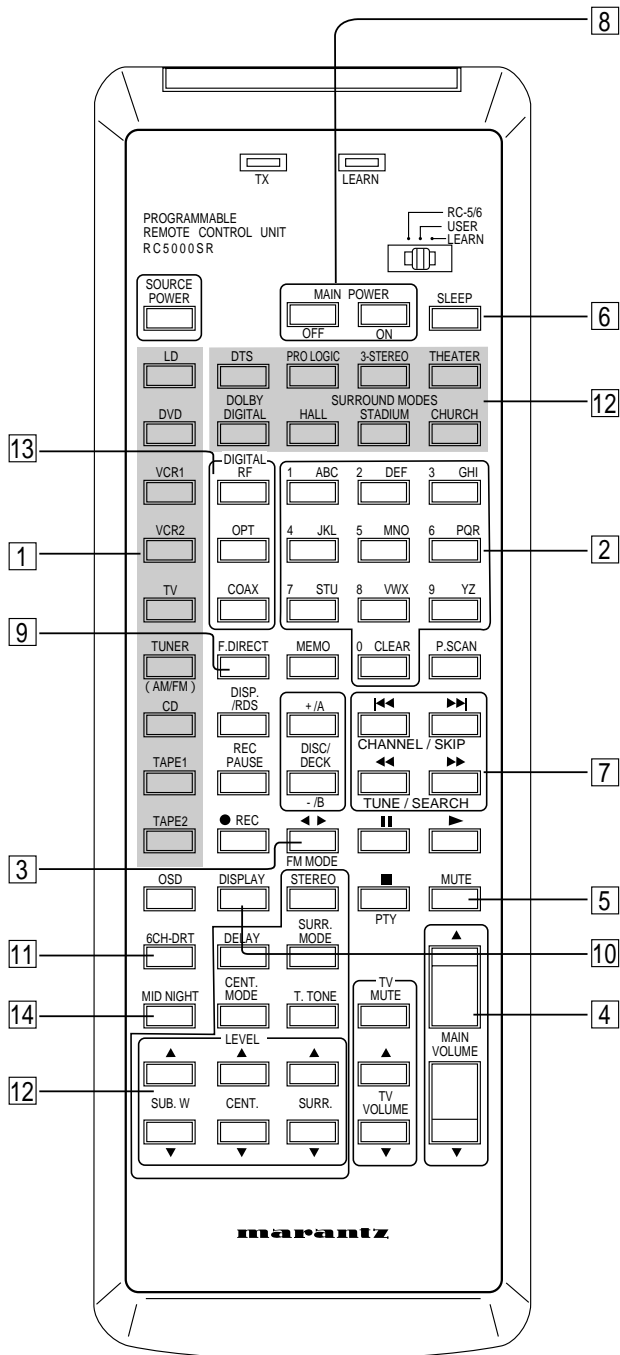

1 Function buttons

- LD button: Select a Laser Disk player or TV
 - DVD button: Select a Digital Video Disk player
 - VCR-1 button: Select a Video Cassette Recorder (number 1)
 - VCR-2 button: Select a Video Cassette Recorder (number 2)
 - TUNER button: Select the AM or FM with cyclic operation
 - CD button: Select a CD
 - TAPE-1 button: Select a TAPE-1
 - TAPE-2 button: Select a TAPE-2
 - TV button: Select a LD/TV
- Pressing one of these button selects the program source. Press the button again to execute.

2 Numeric buttons (on TUNER mode)

This is button which makes you input directly the frequency of the broadcasting station and receive it. You push continuing button of these after Frequency direct button is pushed.

3 MONO/ST Button (FM MONO/STEREO)

Functions as the same as the MODE button in the receiver.

4 MAIN VOLUME buttons ▲ / ▼

Adjust the total volume level.

5 MUTE Button

Pressing this button immediately decreases the sound level (The mute LED will trickery). To restore the sound, press this button again.

6 SLEEP button

Set the sleep time with this button as follows 10 → 20 → 30 → 60 → 90(minute) → OFF(former display)

7 TUNING,PRESET UP/DOWN

During AM or FM reception, you can scan to other frequencies or preset number by pressing these buttons.

8 Main Power

ON button: Power on OFF button: Power off (standby)

9 FR. DIRECT Button

When this button is pressed while the tuner source is being selected, the desired station can be selected by directly composing its frequency using numeric buttons 0 to 9.

10 DISPLAY

This button is make the dimmer mode for FTD
This state is released by display button pushed again, Power off and Standby.

11 6-CH DIRECT button

6-CH input is turned ON or OFF

12 Surround Mode buttons

- DTS button: Select the DTS mode.
- DOLBY DIGITAL button: Select the Dolby Digital mode.
- DOLBY PRO LOGIC button: Select the Dolby Pro logic mode.
- DOLBY 3 STEREO button: Select the Dolby 3 stereo mode.
- THEATER button: Select the effect of theater mode.
- HALL button: Select the effect of hall mode.
- STADIUM button: Select the effect of stadium mode.
- CHURCH button: Select the effect of church mode.

STEREO

 
Change from surround mode to STEREO mode.
Pushing this button when Dolby digital mode, changes from the Dolby digital to Down mix (STEREO) mode, and this button is pushed again, then changes to Analog stereo mode.

DELAY button


According to the surround mode, the display changes as follows.
Dolby Pro logic mode: 15 to 30 mS in 1 mS step.
15 → 16 → 17 → 18...30 → 15 mS
Dolby Digital mode: Surround channels, 0 to 15 mS in 1 mS step
0 → 1 → 2 → 3 → 4 → 5...15 → 0mS
Center channel, 0 to 5 mS
When Dolby Digital mode, After pushed CENT. MODE, and pushed DELAY button
0 → 1 → 2 → 3 → 4 → 5 → 0mS

SURR.MODE button


When Analog function (TUNER, TAPE-1, TAPE-2, VCR), change as follows



When CD function, change as follows

 

 When Digital function (LD, DVD), change as follows




CENT.MODE button


This button is pushed at Dolby Digital. Then, Display becomes Center Delay mode. Delay time is changed with Delay button. This button does not function at other mode.

T.TONE(Test Tone)button

 
The test tone function is turned ON/OFF. Test tone is output as follows. When DTS, Dolby Digital mode



When Dolby Pro logic mode.

 

When Dolby 3 Stereo mode

 

SURROUND LEVEL button

When DTS mode

Adjust the center level with CENTER UP/DOWN button : Changeable range is ± 10 dB

Adjust the Surround R channel level , and after 2 seconds, adjust the surround L channel with SURR.UP/DOWN button. Changeable range is ± 15 dB

Adjust the Sub woofer level (when sub woofer is ON) with SUB. WOOFER UP/DOWN button. Changeable range is ± 10 dB

When Dolby Digital mode

Adjust the center level with CENTER UP/DOWN button : Changeable range is ± 10 dB

Adjust the Surround channel level , and after 2 seconds, adjust the surround L channel with SURR.UP/DOWN button. Changeable range is ± 15 dB

Adjust the Sub woofer level (when sub woofer is ON) with SUB. WOOFER UP/DOWN button. Changeable range is ± 10 dB

When Dolby Pro logic mode

Adjust the center level with CENTER UP/DOWN button : Changeable range is ± 10 dB

Adjust the Surround channel level. Changeable range is ± 15 dB

Adjust the Sub woofer level (when sub woofer is ON) with SUB.WOOFER UP/DOWN button. Changeable range is ± 10 dB

When Other surround mode

Adjust the Surround channel level. Changeable range is ± 15 dB

Adjust the Sub woofer level (when sub woofer is ON) with SUB.WOOFER UP/DOWN button.

Changeable range is ± 10 dB

When STEREO mode: Does not operate.

13 DIGITAL SELECT buttons

RF button : does not apply in SR5000.

OPT button: Press to select the optical input when digital equipment (CD, LD, DVD) is selected as the function.

COAX. button: Press to select the coaxial input when digital equipment (CD, LD, DVD) is selected as the function. Pressing COAX. again changes the input as follows

Coaxial-1 \rightarrow Coaxial-2

14 MID NIGHT button

When Dolby Digital and Dolby Digital Down mix mode, the source with large dynamic range is compressed.

OTHER button

Please see the other equipment's user guide of Marantz models.

LEARNING OF OTHER MAKER'S REMOTE CONTROL CODE

This remote control unit can learn, or program in itself, the remote control code of any function preset under any button of the remote control unit of any system component, except for the MAIN POWER switch of the SR5000. The functions of the components that can be controlled through the D-BUS (RC-5) need not be learned, but the functions of other components must be learned before they can be controlled from the RC5000SR remote control unit. To let the RC5000SR learn the remote control code of a function of a component, follow the learning procedure described below.

1. Set the mode switch to **LEARN**.
2. Select the component with the codes to be learned, by pressing one of the input selector buttons.
For example, when the CD button is pressed, most of the buttons on the remote handset get ready to learn the CD control codes.
3. On the RC5000SR, press the button corresponding to the function to be learned. For example, if the function to be learned is playback, press the **PLAY (▶)** button on the remote control unit. The Learn indicator will light up.
4. Place the remote control unit of the component with the function to be learned at a distance of about 20 cm (8 inches) from the RC5000SR, so that the head (transmitting side) of the former remote control unit points the head of the RC5000SR.
5. On the remote control unit of the component, press and hold the button of the function to be learned, until the learning indicator of the RC5000SR starts to blink then goes off. The learning operation is complete when the indicator is extinguished.
6. Set the mode switch to **USER**.
7. Let the RC5000SR learn other codes by repeating the steps above for each code.

Note:

When the system mode switch is in the **USER** position, the buttons which have not learned any function output the D-BUS (RC-5) codes when they are pressed. In the RC-5 (D-BUS) position, all buttons output the D-BUS (RC-5) codes.

RECALLING THE PRESET FUNCTION

Even after a button has learned the remote control code of a function, its originally preset, D-BUS (RC-5) code can be recalled any time by following the procedure below.

1. Set the mode switch to **LEARN**.
2. Press the **MAIN POWER OFF** button and the button which has learned a function simultaneously.
3. Set the mode switch to **USER**.

Learning button indications

Although the learning buttons can be used to operate various components, the indications printed above the buttons are Marantz D-BUS (RC-5) preset code indications. To make it easier to remember which buttons perform which operations, therefore, we recommend that you program operations into buttons having the same or similar indications.

There are some situations where programming is not possible.

In the following instances, both the TX and LEARN LEDs blink to indicate that programming cannot be carried out.

1. When the remote control unit's memory is full.
2. When you attempt to program a command from a remote control unit using a different signal transmission format.

CLEARING ALL OF THE LEARNED CODES

Use the following procedure to reset all of the buttons which have learned remote control codes and make them possible to output RC-5 preset codes.


1. Set the mode switch to **LEARN**.
2. Hold down the main **POWER ON** and **OFF** buttons simultaneously for more than 3 seconds.
3. Set the mode switch to **USER**.

Operation of Remote Control

1. Remote control

The distance between the transmitter of the remote control unit and the IR SENSOR of the AV Surround Stereo Receiver should be less than about 5 metres. If the transmitter is pointed to a direction other than the IR SENSOR or if there is an obstacle between them, remote control may not be possible.


Remote-controllable range

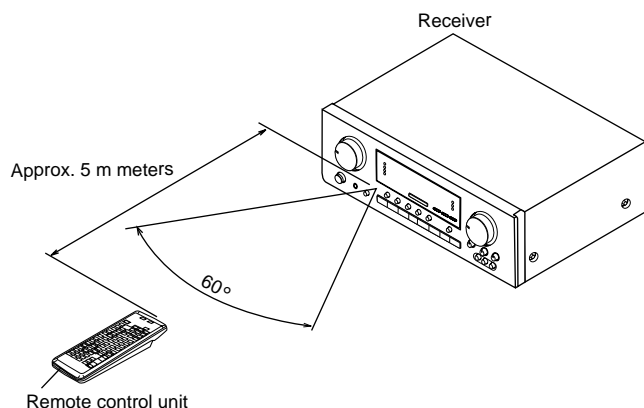


2. Loading batteries

The life of the batteries used with the remote control unit is about one year with normal use.


① Remove the back cover.

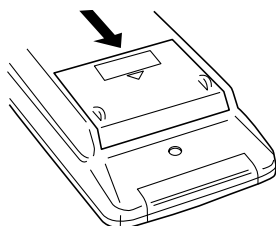

② Insert batteries (AAA type) with correct (+) and (-) polarity.

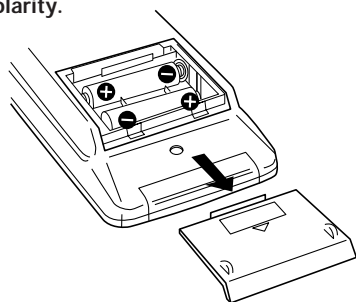

③ Close until it clicks.

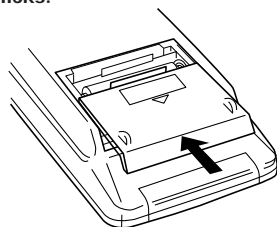

CARE AND MAINTENANCE

This section describes the care and maintenance tasks that must be performed to optimize the operation of your Marantz equipment.

CLEANING OF EQUIPMENT EXTERNAL SURFACES

The exterior finish of your unit will last indefinitely with proper care and cleaning. Never use scouring pads, steel wool, scouring powders or harsh chemical agents (e.g., lye solution), alcohol, thinners, benzene, insecticide or other volatile substances as these will mar the finish of the equipment. Likewise, never use cloths containing chemical substances. If the equipment gets dirty, wipe the external surfaces with a soft, lint-free cloth.

If the equipment becomes heavily soiled:

- dilute some washing up liquid in water, in a ratio of one part detergent to six parts water;
- dip a soft, lint free cloth in the solution and wring the cloth out until it is damp;
- wipe the equipment with the damp cloth
- dry the equipment by wiping it with a dry cloth.

REPAIRS

Only the most competent and qualified service technicians should be allowed to service your unit. Marantz and its factory trained warranty station personnel have the knowledge and special equipment needed for the repair and calibration of this precision instrument.

In the event of difficulty, call the proper toll-free telephone number listed on the face of the warranty to obtain the name and address of the Marantz Authorized Service Center nearest you. In many cases, the dealer where you purchased your Marantz unit may be equipped to provide service. Please include the model, serial number of your unit together with a copy of your purchase receipt and a full description of what you feel is abnormal in its behaviour.

THE PROTECTION CIRCUIT

If the protection circuit does work, the unit will enter to standby mode and do not only working for 3 seconds.

GENERAL MALFUNCTION

If the equipment malfunctions, this may be because an electrostatic discharge or AC line interference has corrupted the information in the equipment memory circuits. Therefore:

- power switch turns OFF
- after waiting at least three minutes, power switch turns ON
- re-attempt to operate the equipment

Memory backup

- In case a power outage occurs or the power cord is accidentally unplugged, the unit is equipped with a backup function to prevent memory data such as the preset memory from being erased.

The memory functions are backed up for up to about 2 week.

TROUBLESHOOTING GUIDE

If your receiver should not perform as expected, consult the table below to see if the problem can be corrected before seeking help from your dealer or our service organization.

PROBLEM	POSSIBLE CAUSE	REMEDY
No power	<ul style="list-style-type: none"> The AC input cord is disconnected. Poor connection at AC wall outlet or the outlet is inactive. 	<ul style="list-style-type: none"> Connect cord securely. Check the outlet using lamp or other appliance.
The sound is shut off.	<ul style="list-style-type: none"> The speaker cables are shorted. 	<ul style="list-style-type: none"> Check the speaker connections.
No sound from the speakers.	<ul style="list-style-type: none"> The speaker cables are disconnected. The master volume is adjusted too low. The surround volume is adjusted too low. The center volume is adjusted too low. The Mute button is pressed to ON. The SPEAKER switches are not pressed correctly. Incorrect selection of program source. Format of surround is different. Incorrect connections between the components. 	<ul style="list-style-type: none"> Check the speaker connections. Adjust the master volume and center, surr.vol. Press the MUTE button to cancel the muting effect. Press the SPEAKER switches to ON correctly. Select the desired program source correctly. DISK of AC-3 format is used. Make connections correctly.
Sound is only heard from one of front speakers.	<ul style="list-style-type: none"> The BALANCE control is set to one end. One of the connection cords is disconnected. 	<ul style="list-style-type: none"> Adjust the BALANCE control. Connect the right and left connection cords securely.
No sound from the rear speakers.	<ul style="list-style-type: none"> The sound field mode is not selected correctly or is set to off. The master volume and rear level are adjusted too low. Monaural source is used, or source without surround information. 	<ul style="list-style-type: none"> Select the desired sound field mode correctly. Adjust the master volume and rear level. Change the playback source to the stereo or surround source.
No sound from the center speaker.	<ul style="list-style-type: none"> The DTS, Dolby Digital, pro logic, 3stereo mode is not selected. The center mode is set to the NONE mode. The master volume and center level are adjusted too low. 	<ul style="list-style-type: none"> Select the desired mode. Set to the NORMAL or WIDE mode. Adjust the master volume and center level.
The remote control unit does not operate.	<ul style="list-style-type: none"> Batteries are not loaded or exhausted. The remote sensor is obstructed. 	<ul style="list-style-type: none"> Replace the with new batteries. Remove the obstacle from the remote sensor.
Not receiving the stations.	<ul style="list-style-type: none"> No antenna is connected. The desired station frequency is not tuned in. 	<ul style="list-style-type: none"> Connect an antenna. Tune in the desired station frequency.
Not receiving the preset stations.	<ul style="list-style-type: none"> An incorrect station frequency has been memorized. The memorized stations are cleared. 	<ul style="list-style-type: none"> Memorized the correct station frequency. Memorize the stations again.
Poor FM reception.	<ul style="list-style-type: none"> No antenna is connected. The antenna is not positioned for the best reception. 	<ul style="list-style-type: none"> Connect an antenna. Change the position of the antenna. Route as high as possible.
Continuous hissing noise during FM reception, especially when a stereo broadcast is received.	<ul style="list-style-type: none"> Weak signal. 	<ul style="list-style-type: none"> Change the position of the antenna. In areas remote from the transmitter, a 5 to 8 element antenna designed exclusively for FM is suggested.
Continuous or intermittent hissing noise during AM reception, especially at night. A hum can be heard during AM reception.	<ul style="list-style-type: none"> Noise is caused by motors, fluorescent lamps or lightning, etc. The AC input cord may be too close to the AM loop antenna or the antenna wire. 	<ul style="list-style-type: none"> Keep the receiver away from noise sources. Install an outdoor AM antenna. Position the AC input cord away from the antenna wire and the AM loop antenna. Adjust the position of the AM loop antenna.

COUNTRY	COMPANY	ADDRESS
AUSTRALIA	Scan audio Pty. Ltd.	4 Station Street, Thornleigh NSW 2120, Australia
AUSTRIA	Huber & Prohaska GmbH	Taborstraße 95 / Ladestraße 1, Gebäude Hangartner, A-1200 Wien, Austria
BELGIUM	Van der Heyden Audio N.V.	Brusselbaan 278, 9320 Erembodegem, Belgium
BULGARIA	Ariescommerce GmbH	Makedonia Blvd. 16, 1606 Sofia, Bulgaria
CANADA	Lenbrook Industries Limited	633 Granite Court, Pickering, Ontario
CYPRUS	Empire Hifi systems Ltd.	P.O. Box 5604, Nicosia, Cyprus
CZECH REPUBLIC	Audio International	Fugnerova 1, 67801 Blansko, Czech Republic
DENMARK	Hi-Fi Klubben Denmark	Aboulevarden 1, DK-8000 Arhus C., Denmark
DUBAI	V.V.& SONS	P.O. Box 105, Dubai, U.A.E.
ESTONIA	Audio International Baltic	Lo Hu 12, EE0026 Tallin, Estonia
F.Y.R.O.M.	T.P. KODI	ul.Cedomir Kantargiev 21a, Skopje, Former Yugoslavian Republic of Macedonia
FINLAND	Hi-Fi Klubi Finland	Uudenmaankatu 4-6, SF-00120 Helsinki, Finland
FRANCE	Marantz France	A division of Marantz Europe B.V., P.O. Box 301, 92 156 Suresnes Cedex, France
GERMANY	Marantz Deutschland	Hakenbusch 3, 49078 Osnabrück, Germany
GREECE	Adamco S.A.	188, Hippocratous Street, 11471 Athens, Greece
HEADQUARTERS EUROPE:	Marantz Europe B.V.	Building SFF-2, P.O. Box 80002, 5600 JB Eindhoven, The Netherlands
HONG KONG	Marantz Asia Ltd.	Unit 1706, Metroplaza II, 223 Hing Fong Road, Kwai Fong, N.T., Kowloon, Hong Kong
HUNGARY	Infovox Ltd.	Terez Krt.31, 1067 Budapest, Hungary
ICELAND	Radiobudin HF	Skipholtí 19, P.O. Box 424, 121 Reykjavik, Iceland
INDIA	Marantz India	c/o Philips India Ltd., Plot 80, Bhosari Industrial Estate Pune - 411026, India
IRAN	Home Co.	5th floor no 878 Philips Building Enghelab ave, P.O. 11365/7844 Tehran, Iran
IRELAND	Marantz Ireland	Clonskeagh, Dublin 14, Ireland
ISRAEL	Elmor Ltd.	52 Heh Beiyar Street, Kikar Hamedina, Tel Aviv, Israel
ITALY	Marantz Italy	Via Casati 23, 20052 Monza (Milano), Italy, Servizio Consumatori 1678-20026, Numero Verde
JAPAN	Marantz Japan Inc.	35-1 Sagami Ohno 7-Chome, Sagamihara-shi, Kanagawa 228-8505, Japan
KOREA	Mk Enterprises Ltd.	121-210, 2F Shinhan Bldg., 247-17 Seokyo-dong, Mapo-ku, Seoul, Korea
KUWAIT	alAlamiah Electronics Intl.	P.O. Box 8196, Salmiah 22052, Kuwait
LATVIA	Ace Ltd.	61, LacPlesa Str., Riga LV 1011, Latvia
LEBANON	AZ Electronics S.A., 1,	P.O. Box 11 2833, Beirut, Lebanon
LITHUANIA	A Accapella Ltd.	Ausros, Vartu G5, Pasazo Skg., 2001 Vilnius, Lithuania
MALAYSIA	Wo Kee Hong Electronics Sdn. Bhd.	102 Jalan SS 21/35, Damansara Utama, 47400 Petaling Jaya, Selangordarul Ehsan, Malaysia
MALTA	Doneo Co Ltd.	78 The Strand, Sliema SLM07, Malta
MAURITIUS	SKR Electronics Ltd.	P.O. Box 685, Bell Village, Port Louis, Mauritius
NETHERLANDS	Marantz Trading	A division of Marantz Europe B.V., Building SFF-2, P.O. Box 80002, 5600 JB Eindhoven, The Netherlands
NEW ZEALAND	Scan audio Pty. Ltd.	4 Station Street, Thornleigh NSW 2120, Australia
NORWAY	Hi-Fi Klubben Norway	Lillegrensen 7, N-0159 Oslo, Norway
OMAN	Mustafa & Jawad Trading CO.	P.O. Box 1918, Ruwi, Oman
POLAND	Marantz Polska	Ul. Marszalkowska 45/49, 00-648 Warszawa, Poland
PORTUGAL	Corel2	Comércio de Electrónica Lda., Av. Luís Bivar, No 85 A, 1050 Lisboa, Portugal
PROFESSIONAL EUROPE	Marantz Professional Products	Kingsbridge House, Padbury Oaks, 575-583 Bath Road, Longford, Middlesex UB7 0EH, U.K.
PROFESSIONAL U.S.A.	Marantz Professional Products	Distributed by: Superscope Technologies Inc., 1000 Corporate Blvd. Ste.D, Aurora, IL
QATAR	Almana & Partners W.W.L.	P.O. Box 49, Doha, Qatar
REUNION	Vision +	180 Rue du Marechal Leclerc, 97400 Saint Denis, Ile de la Reunion
ROMANIA	Alltrom SRL	Soseaua Bucuresti, Ploiesti 10, Sector 1, Bucharest, Romania
RUSSIA	Trade Company SV	Bld. 2, 7 Montazhnaya Street, 107497 Moscow, Russia
SAUDI ARABIA	Ultimate Fidelity	Sameria Comm. Center, Roadah Dist., P.O. Box 7760, Jeddah 21472, Saudi Arabia
SINGAPORE	Forward Marketing (S) Pte. Ltd.	Wo Kee Hong Centre, 29 Leng Kee Road, Singapore 159099, Singapore
SLOVAKIA	Audio International Slovakia	Nam. SNP 10, 96001 Zvolem, Slovakia
SLOVENIA	Bofex	Smartinska 152, HALA V/3, 61000 Ljubljana, Slovenia
SOUTH AFRICA	Coherent Imports (PTY) Ltd.	P.O. Box 1614, Alberton, 1450, South Africa
SPAIN	Marantz Spain	Martinez Villergas 2, Apartado 2065, Madrid 28027, Spain
SWEDEN	Hi-Fi Klubben A.B.	Tegnersgatan 21, S-412 52 Gotenborg, Sweden
SWITZERLAND	Sound Company AG	Postfach, 8010 Zürich, Switzerland
TAHITI	Covecolor	Av. Prince Hinoi, Cours de l'union sacré, P.O. Box 2334, Papeete, Tahiti
TAIWAN	Pai-Yuing Co. Ltd.	6th No 148 Sung Kiang Road, Taipei 10429, Taiwan R.O.C.
THAILAND	MRZ Standard Co. Ltd.	746-750 Mahachai Road, Wangburapa, Bangkok 10200, Thailand
TURKEY	Penta Elektronik	Sanayi Ve Ticaret Ltd. Sti., Selvi Kokak, No. 4/1, Senlikkoy, 34810 Florya, Istanbul, Turkey
U.K.	Marantz Hifi UK Ltd.	Kingsbridge House, Padbury Oaks, 575-583 Bath Road, Longford, Middlesex UB7 0EH, U.K.
U.S.A.	Marantz America Inc.	440 Medinah Road, Roselle, IL 60172, U.S.A.
YUGOSLAVIA	ITM	Ljutice Bogdana Ia, Belgrade, Yugoslavia
EXPORT	Marantz Trading	A division of Marantz Europe B.V., Building SFF-2, P.O. Box 80002, 5600 JB Eindhoven, The Netherlands

www.marantz.com

Manufactured under license from Dolby Laboratories. "Dolby", "AC-3", "Pro Logic" and the double-D symbol are trademarks of Dolby Laboratories. Confidential Unpublished Works. © 1992-1997 Dolby Laboratories, Inc. All rights reserved

marantz® is a registered trademark.

