

# **marantz®**

**Model ST6000 User Guide**

---

TUNER

## ENGLISH

### WARRANTY

Contact your local Marantz distributors for warranty information.

### RETAIN YOUR RECEIPT AS PROOF OF PURCHASE

Your receipt is proof of a valuable purchase. Keep it in a safe place where you can easily find it for filing insurance claims when necessary or when corresponding with Marantz.

### IMPORTANT

It is the responsibility of the consumer to establish proof of purchase when seeking servicing covered by the warranty. Your receipt or invoice is valid as such proof.

### U.K. ONLY

This undertaking is in addition to a consumer's statutory rights and does not affect those rights in any way.

## FRANÇAIS

### GARANTIE

Veillez contacter les revendeurs Marantz locaux pour de plus amples informations concernant la garantie.

### CONSERVER LE TICKET DE CAISSE COMME PREUVE D'ACHAT

Le ticket de caisse représente la preuve d'un achat de valeur. Le conserver dans un endroit sûr, où il peut être retrouvé aisément, afin d'introduire les revendications éventuelles auprès des assurances ou auprès de Marantz, le cas échéant.

### IMPORTANT

Il incombe au consommateur d'établir la preuve de son achat, à l'aide du ticket de caisse ou de la facture, lors de la demande d'interventions couvertes par la garantie.

## DEUTSCH

### GARANTIE

Wenden Sie sich bezüglich Informationen zur Garantie an Ihren örtlichen Marantz-Händler.

### BEWAHREN SIE ALS KAUFNACHWEIS IHRE KAUFQUITTUNG AUF

Ihre Quittung bzw. Rechnung ist ein Beweis für Ihren wertvollen Kauf. Bewahren Sie diese an einem sicheren Ort auf, wo Sie sie im Fall eines Versicherungsschadens oder bei der Korrespondenz mit Marantz leicht wiederfinden können.

### WICHTIG

Es liegt in der Verantwortung des Käufers, den Kaufnachweis zu liefern, wenn Garantiereparaturen in Anspruch genommen werden sollen. Ihre Quittung oder Rechnung dient als ein solcher Nachweis.

## NEDERLANDS

### GARANTIE

Neem contact op met de Marantz distributeurs in uw buurt voor informatie over de garantie.

### BEWAAR UW REÇU ALS AANK OOPBEWIJS.

Uw reçu is het bewijs dat u een waardevol product heeft gekocht. Berg het veilig op, zodat u het snel terug kunt vinden als u een verzekeringsclaim moet indienen of voor uw correspondentie met Marantz.

### BELANGRIJK

De klant is verantwoordelijk voor het tonen van een aankoopbewijs wanneer het apparaat onder garantie moet worden gerepareerd. Uw reçu of uw factuur is een geldig aankoopbewijs.

## ESPAÑOL

### GARANTÍA

Consulte a su distribuidor local de Marantz si desea más información sobre la garantía.

## CONSERVE EL RECIBO COMO PRUEBA DE COMPRA

Su recibo constituye la prueba de compra. Guárdelo en un lugar seguro donde pueda hallarlo fácilmente en caso de que lo necesite para presentar una reclamación de garantía o mantener algún tipo de correspondencia con Marantz.

### IMPORTANTE

Es responsabilidad del consumidor presentar la prueba de compra siempre que solicite alguna reparación cubierta por la garantía. La factura o el recibo son documentos válidos como prueba de compra.

## ITALIANO

### GARANZIA

Contattare i distributori Marantz della zona dell'utente per informazioni sulla garanzia.

### CONSERVARE LA RICEVUTA COME PROVA D'ACQUISTO

La ricevuta comprova un acquisto di valore. Conservarla in un luogo sicuro e facilmente reperibile per intraprendere dei reclami, ove necessario, o quando ci si rivolge alla Marantz.

### IMPORTANTE

L'utente ha la responsabilità di produrre una prova d'acquisto se vuole servirsi dell'assistenza coperta da garanzia. La ricevuta o la fattura è valida in questo senso.

## PORTUGUÊS

### GARANTIA

Para informações sobre a garantia, contacte o concessionário local Marantz.

### GUARDE O TALÃO DE COMPRA COMO PR OVA

O talão de compra é a prova de ter comprado qualquer coisa de valor. Guarde-o em lugar seguro, pois pode precisar dele para obter uma cobertura de seguro ou no âmbito de correspondência com Marantz.

### IMPORTANTE

Para obter um serviço coberto pela garantia, o cliente deve apresentar a prova e a data da compra. O talão ou a factura constituem provas suficientes.

## SVENSKA

### GARANTI

Kontakta din lokala Marantz-distributör för information om garantin.

### SPAR KVITTOT SOM INKÖPSBEVIS

Kvittot är ditt bevis för ett värdefullt inköp. Förvara det på en säker plats där du lätt kan hitta det för försäkringsfrågor eller korrespondens med Marantz.

### VIKTIGT

Kunden ansvarar för att uppvisa inköpsbevis när service begärs som täcks av garantin. Ditt kvitto eller faktura är ett giltigt inköpsbevis.

## DANSK

### GARANTI

Bed din Marantz-forhandler om oplysninger om garantien.

### GEM DIN KVITTERING SOM KØBSBEVIS

Din kvittering er bevis på et værdifuldt køb. Opbevar den på et sikkert sted, hvor du let kan finde den i forbindelse med eventuelle erstatningskrav eller korrespondance med Marantz.

### VIGTIGT

Det er brugerens ansvar at forelægge købsbevis, hvis der er brug for det i garantiforbindelse. Din kvittering eller faktura er gyldige beviser.

## CONTENTS

English .....	page 1
Français .....	page 7
Deutsch .....	seite 13
Nederlands .....	pagina 19
Español .....	pagina 25
Italiano .....	pagina 31
Português .....	página 37
Svenska .....	sidan 43
Dansk .....	side 49
Specifications .....	page 55
Figures .....	page 56

## CE MARKING

- CE English**  
This ST4000 is conformity with EMC directive and low-voltage directive.
- CE Français**  
Le ST4000 est conforme à la directive EMC et à la directive sur les basses tensions.
- CE Deutsch**  
Das Modell ST4000 entspricht den EMC-Richtlinien und den Richtlinien für Niederspannungsgeräte.
- CE Nederlands**  
De ST4000 voldoet aan de EMC-eisen en de vereisten voor laagspanning.
- CE Español**  
El ST4000 está de acuerdo con las normas EMC y las relacionadas con baja tensión.
- CE Italiano**  
Il ST4000 è conforme alle direttive CEE ed a quelle per i bassi voltaggi.
- CE Português**  
O ST4000 conforma com as diretrizes EMC e de baixa voltagem.
- CE Svenska**  
ST4000 tillverkad i enlighet med EMC direktiven och direktiven för låvoltageutrustning.
- CE Dansk**  
ST4000 er i overensstemmelse med EMC-direktivet og lavspændingsdirektivet.

**SI DICHIARA CHE L'APPARECCHIO SINTONIZZATORE ST-59 RISPONDE ALLE PRESCRIZIONI DELL'ART. 2 COMMA 1 DEL D.M. 28 AGOSTO 1995. N° 548.**

**FATTO A EINDHOVEN, IL 1/1/1996.**

**MARANTZ EUROPE B.V.  
5600 EINDHOVEN  
THE NETHERLANDS**

**“Este aparato lleva elementos antiparasitarios necesarios para cumplir con los límites que se establecieron en el Anexo V del Reglamento sobre Perturbaciones Radioeléctricas e Interferencias aprobado en el Real Decreto 148/1989. (B.O.E. de 9 de Febrero 1989).”**

## FOREWORD

Be sure to read this section before any connection to the mains supply.

### WARNINGS

- Never expose the equipment to rain or moisture.
- Never remove the equipment's cover.
- Never insert anything into the equipment's vents.
- Never handle the mains lead while your hands are wet.

## EQUIPMENT MAINS WORKING SETTING

This Marantz product is available in two different variations, depending on geographical area. One variation has a preset mains voltage (230V for General Europe model and U.K. model), while the other variation features variable voltage that can be selected using a voltage selector on rear panel (115V/230V).

The voltage selector must be set for your local mains voltage before any connection to the mains supply. If you need to change its voltage setting, consult your dealer your local Marantz service provider.

### IMPORTANT: (FOR U.K. MODEL)

This apparatus is fitted with an approved moulded 13 Amp plug. To change a fuse in this type of plug proceed as follows:

1. Remove fuse cover and fuse.
2. Fix new fuse which should be a BS1362 5A, A.S.T.A. or BSI approved type.
3. Refit the fuse cover.

If the fitted plug is not suitable for your socket outlets, it should be cut off and an appropriate plug fitted in its place.

If the mains plug contains a fuse, this should have a value of 5A. If a plug without a fuse is used, the fuse at the distribution board should not be greater than 5A.

### NOTE:

The severed plug must be destroyed to avoid a possible shock hazard should it be inserted into a 13A socket elsewhere.

### HOW TO CONNECT A PLUG (FOR U.K. MODEL)

The wires in the mains lead are coloured in accordance with the following code:

BLUE— "NEUTRAL" ("N")

BROWN—"LIVE" ("L")

1. The BLUE wire must be connected to the terminal which is marked with the letter "N" or coloured BLACK.
2. The BROWN wire must be connected to the terminal which is marked with the letter "L" or coloured RED.
3. Do not connect either wires to the earth terminal in the plug which is marked by the letter "E" or by the safety earth symbol  $\perp$  or coloured green or green-and-yellow.

Before replacing the plug cover, make certain that the cord grip is clamped over the sheath of the lead—not simply over the two wires.

### COPYRIGHT

Recording and playback of any material may require previous consent. Refer to the following for further information.

- Copyright Act 1956
- Dramatic and Musical Performers Act 1958
- Performers Protection Acts 1963 and 1972
- Any subsequent statutory enactments and orders

## INTRODUCTION

Thank you for selecting the Marantz ST6000 FM/AM Stereo Tuner for your system.

Please read these operating instructions carefully. We recommend that you read the entire user guide before you attempt to connect or operate the Tuner.

After you have reviewed the contents of this manual, we suggest that you make all system connections before you attempt to operate the unit.

Refer to the figures on the pages at the back of this user's guide. The callout numbers on the figures correspond to those found in the text. All references to the connections and controls that are printed in **BOLD** type are as they appear on the unit.

## INSTALLATION

Remember the following important points when installing the Tuner.

- Do not expose the component to rain or moisture, as this may cause damage to the Tuner.
- Prevent extra heat from reaching the unit. Never put the Tuner in the full glare of the sun or near a heat source.

## PRECAUTIONS

The following precautions should be taken when operating the equipment.

### GENERAL PRECAUTIONS

When installing the equipment ensure that:

- air is allowed to circulate freely around the equipment.
- it is placed on a vibration-free surface.
- it will not be exposed to excessive heat, cold, moisture or dust.
- it will not be exposed to direct sunlight.
- it will not be exposed to electrostatic discharges.

In addition, never place heavy objects on the equipment.

If a foreign object or water does enter the equipment, contact your nearest dealer or service center.

Do not pull out the plug by pulling on the mains lead; grasp the plug itself.

It is advisable when leaving the house, or during a thunderstorm, to disconnect the equipment from the AC outlet.

## ST6000 FEATURES

- Max.30-station preset memory (each FM,AM) with auto preset memory function
- Remote control operation by RC-Bus
- Select the FM Antenna A/B
- Select the IF band (wide/narrow)
- Fine Tuning

## LOCATION AND FUNCTION OF PARTS AND CONTROLS

### FRONT PANEL FEATURES

#### (SEE APPEARANCE DRAWING)

- ① **POWER ON /STANDBY button**  
This button is used to power on or power standby.
  - ② **ANTENNA A/B button**  
This button is used selection of the FM antenna A or B.
  - ③ **IF BAND button**  
This button is used for selecting the bandwidth of the FM broadcast.
  - ④ **TIME ADJ (adjust) button**  
This button is used for adjusting the current time.
  - ⑤ **ST.NAME/DISPLAY button**  
This button is used for manual tuning or selecting the display mode. Press this button slightly longer (for more than 1.5 second) to file in manually stations name in the preset memory.
  - ⑥ **TUNING MODE button**  
This button is used for selecting the manual tuning or the fine tuning mode. Fine tuning mode is available only in the FM band.
  - ⑦ **TUNING ▲∞ (UP/DOWN) button**  
This button used for tuning in the desired broadcasting stations or adjusting the time, or manual tuning, etc.
  - ⑧ **CANCEL button**  
This button is used for canceling the program during manual file or adjusting the on/off time of the timer.
  - ⑨ **NEXT button**  
This button is used for advancing to the next step during time adjustment or manual filing, etc.
  - ⑩ **MEMO button**  
This button is used for presetting the broadcasting stations.
  - ⑪ **(Timer) ON/OFF button**  
This button used for engaging the daily timer function.
  - ⑫ **TIMER SET button**  
This button is used for presetting the time when the system is turned on and off every day at a specified time.
  - ⑬ **TUNING ▲∞ (UP/DOWN) button**  
This button used for preset in the desired broadcasting stations.
  - ⑭ **FM MODE button**  
This unit automatically switches into the STEREO mode when a FM stereo broadcast is received press this button to change the monaural mode, then the "STEREO" indicator will go out on the display.
  - ⑮ **RDS button**  
When the FM RDS broadcasting is displayed, and it retrieves, this button is operated. (See page 5)
  - ⑯ **BAND button**  
This button is used for selecting the FM, MW or LW broadcast.
- ⑰ DISPLAY/INDICATOR**
- a **TIMER**  
This indicator light up when the daily timer is engaged by pressing the timer button.
  - b **DAILY timer indicator**
  - c **TUNED indicator**
  - d **STEREO indicator**
  - e **RDS indicator**
  - f **PTY (program type) indicator**
  - g **RT. (radio text) indicator**
  - h **TP (traffic program) indicator**
  - i **TA (traffic announcement) indicator**
  - j **MEMORY indicator**
  - k **PRESET Number indicator**
  - l **CHARACTER indicator**  
A variety of information is displayed on this indicator. time, frequency, PS, PTY, RT, stations name by manual filing, etc.
  - m **FM Narrow band indicator**
  - n **Antenna A or B indicator**

## OPERATIONS

### 1. MEMORY PRESETTING

#### a. Manual operation

For example: presetting FM 90.1 MHz, to Preset number. 10

1. Select the FM by using the **BAND** button.
2. Tune to 90.1 MHz by using the **TUNING ▲∞** button.
3. Press the **MEMO** button briefly (for less than 0.5 second) Then, "MEMO" will be displayed in the fluorescent tube display.
4. Select the preset number by using the **TUNING ▲∞** button.
5. **MEMO** button pushed again, 90.1 MHz (broadcast station) was able to be memorized in number 10 by this.

#### Note:

Be sure to select the antenna A or B memorization when you preset manual memory in FM broadcast.

#### b. Automatic operation

1. Select the desired broadcasting (FM, AM, or LW) by using the **BAND** button.
2. Press the **MEMO** button slightly longer than 1.5 second does. Then, broadcasting will be automatically received, and as many broadcasting station are received well will be memorized preset number-01 after another
3. Check the broadcasting station by using the **TUNING ▲∞** button.

#### Note:

1. In the case of FM automatic presetting, the antenna A, B selector is set to "A" automatically, And the broadcasting station is scanned twice. The stations that have stronger broadcasting signal are preset in the first time.; weaker ones are preset in the second time.
2. If a new broadcasting station is preset into a channel the broadcasting station which has been preset into that position area will be automatically erased.
3. In mountainous or remote area broadcasting stations which have weak broadcasting signals cannot be automatically preset into the memory.
4. Max. 30 broadcasting stations each for FM, AM(MW and LW) bands can be preset.

### 2. LISTENING TO RADIO

1. Select FM, AM, or LW by using the **BAND** button.
2. Tune to the desired broadcast by using the **TUNING** or **PRESET ▲∞** button.
3. FM broadcasting is set up to "STEREO" mode  
If the broadcasting signal is weak, or if there is a large amount of interference in FM stereo broadcast, change the monaural mode by presetting the **FM MODE** button.
4. Select the IF **BAND** (FM bandwidth)  
Select the **NARROW** bandwidth by pressing this button if the broadcast signal is interfered with adjacent broadcast in the FM .

### 3. FINE, MANUAL TUNING

This function used for selection the manual tuning of the fine tuning mode.

Fine tuning mode is available only in the FM mode.

1. Press the **TUNING MODE** button.
2. Every time you press this button, the following will be displayed  
FINE ↔ MANUAL.

#### a. In FINE (Tuning) mode

When you try press the **TUNING ▲∞** button, the frequency will be selected by 10 kHz step to ±50 kHz. Then, it will automatically be set to the **MANUAL** mode in 4 second.

#### b. In MANUAL (Tuning) mode

1. Press the **TUNING ▲∞** button in the FM band, then the frequency will be selected by 50 kHz step.
2. In the MW band, the frequency will be selected by 9 kHz step.
3. In the LW band, the frequency will be selected by 1 kHz step.

### 4. DIRECT TUNING

(The following operation can be performed by connecting the RC-5 BUS system.)

1. Press the **F. DIRECT** (frequency direct) button
2. Next press the numeric (0 to 9) button.

For example: FM 98.10 MHz

- a. FM is chosen with **BAND** (or **TUNER**) button on remote controller.
- b. Press the **F. DIRECT** (Frequency Direct) button.
- c. Press the numeric button of "9".
- d. Press the numeric button of "8".
- e. Press the numeric button of "1".
- f. Press the numeric button of "0".
- g. The display fixed 98.10 MHz and broadcast station received.  
MW, LW band is same as above operations.

### 5. ADJUSTING CURRENT TIME

You can adjust the current time regardless of power on/standby.

1. Press the **TIME ADJ** button. Then "Hour display" indicator will blink.

12:00  
blink

2. The hour is set with the **TUNING ▲∞** button.

10:

3. Press the **NEXT** button. Then "minute display" indicator will blink.

10:00  
blink

4. The minute is set with the **TUNING ▲∞** button.

10:30  
blink

5. Press the **NEXT** button.

10:30

 
## Daily timer

Example: presetting ON time: 7:15 OFF time: 9:30


1. Press the **TIMER SET** button.




2. Preset the ON time by the **TUNING ▲∞** button and the **NEXT** button. (Same as operation of time adjust)



 3. If ON time setting OK, Press the **NEXT** button.



 4. Preset the OFF time by the **TUNING ▲∞** button and the **NEXT** button. (Same as operation of time adjust)



5. Press the **NEXT** button and the **TIMER SET** button.



\* Daily timer makes the system turn on and off at preset times every day.

\* If you want to record at ON time, select the desired source with the input selector deck to the REC position.

\* If the timer indicator "TIMER DAILY" is off, the daily timer doesn't work.




\* While setting the daily timer, if the cancel button is held depressed, the timer function will be canceled.

## 6. FILING (STATION NAME, ETC.)

 
For example: FM 98.8 MHz Preset CH-10 Station name BBC1

1. Select the preset number 10 in the preset mode.




2. Press the **ST.NAME/DISPLAY** button long pushed (for more than 1.5 second)

 
Then, " \_ \_ \_ \_ " will be displayed in the clock indicator.

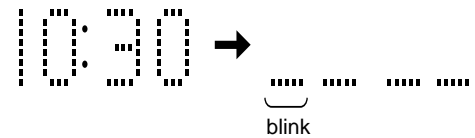

 
3. Select "B" with the **TUNING ▲∞** button.

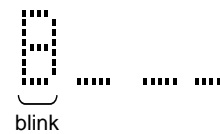

 4. Press the **NEXT** button. and then, the cursor will move one space.

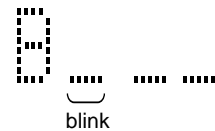

 5. After selecting "BBC 1" with the **TUNING ▲∞** and the **NEXT** button, press the **MEMO** button. and then, the broadcasting station name will be changed to "BBC 1".

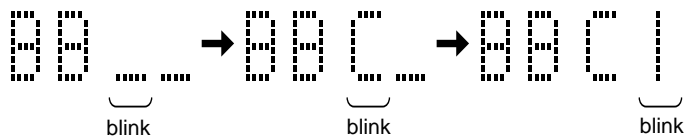

## 7. RDS (RADIO DATA SYSTEM)

### 1. What is RDS?

RDS provides such indication as station names, local times, and the types of program, the radio text ,etc. as well as FM broadcasting.

### 2. You can receive the following kinds of data with this RDS.

- \* PS (Program Service Name): displays FM station names.
- \* CT (Clock Timer): displays the information about times provided from the station.
- \* PTY (Program Type): Program type will be displayed while receiving FM broadcasting.
- \* RT (Radio Text): displays the news of stations composed of up to 64 symbols.
- \* TP (Traffic Program)
- \* TA (Traffic Announcement)

The data is displayed in PTY mode as follows:

### 3. There are 29 programme categories:

NEWS	=	News service
AFFAIR	=	Politics and current events
INFO	=	Special informative reports
SPORT	=	Sports
EDUCATE	=	Learning and continuation of education
DRAMA	=	Radio plays, literature
CULTURE	=	Culture and society
SCIENCE	=	Programmes about sciences and technology
OTHERS	=	Variety
POP	=	Pop music
ROCK	=	Rock music
MOR	=	Middle of the road music, 'easy-listening'
LIGHT	=	Light classical music
CLASSIC	=	Serious classical music
OTHER	=	Other music
WEATHER	=	Weather reports, forecasts
FINANCE	=	Financial reports, commerce, trading
CHILDREN	=	Children's programmes
SOCIAL A	=	Social affairs
RELIGION	=	Religious programmes
PHONE IN	=	Programmes in which the public expresses its view by phone.
TRAVEL	=	Travel reports
HOBBIES	=	Programmes concerning recreational activities
JAZZ	=	Jazz music
COUNTRY	=	Country music
NATION M	=	National music
OLDIES	=	Music from the so-called 'golden age' of popular music
FOLK M	=	Folk music
DOCUMENT	=	Documentaries

- If you do not receive PTY Data, "NO PTY" will be displayed.

## 8. RDS DISPLAY

### 1. Select the FM band. RDS can be received only in FM.

2. Select the RDS broadcasting by using the **TUNING ∞▲** button. Then, RDS will light up in the upper side of the FTD display. And the related data, if received, will be displayed in the type of received data (PTY, RT, TP, TA)

### 3. RDS

- 1) The default of the RDS mode is PS.
- 2) Press the **RDS** button.  
Each time you press the button briefly (1.5 second or less), the modes will change as follows  
**PS → PTY → RT → TA → CT → PS**
- 3) PS mode
  - When you select the PS with the RDS button, "PS" will blink for about 4 seconds.
  - After 4 seconds, PS or a station name entered by manual file will be displayed.
- 4) PTY mode
  - When you select the PTY with the RDS button, PTY will blink for about 4 seconds, the type of received PTY will be displayed.
  - If there is no PTY data among received broadcasting, RDS mode will be switched to PS mode automatically.
- 5) RT mode
  - When you select the RT with the **RDS** button, "RT" will blink for about 4 seconds. After 4 seconds, the data received broadcasting, the RDS mode will be automatically switched to the PS mode.
- 6) TA mode (TP search function)
  - When you select the TA with the **RDS** button, "TA" will be blink for about 4 seconds, TP received broadcasting will be searched with the FM frequency increasing in 50 kHz steps.
  - If TP received broadcasting is searched, the increase in frequency will be stop and it is asked whether TA will be received or not.
  - If TP and TA turn off while you are receiving the TA, the tuner will search the TA broadcasting again with the FM frequency increasing in 50 kHz steps.
- 7) CT mode
  - When you select the CT with the **RDS** button, "CT" will blink for about 4 seconds. After 4 seconds, the clock time together with the frequency will be displayed. "CT" can be received regardless of whichever RDS mode. The tuner is set to.

#### \* Not to use CT mode,

1. Press and hold the **RDS** button for longer than 8 seconds, and press briefly the **RDS** button within 0.5 seconds.
  - The indicator will be changed as follows:  
**PS → PTY → RT → TA → (NO CT) → PS**
  - In this mode, although "CT " data are entered, the time is not changed to the current time.
2. In "NO CT" mode, press and hold the **RDS** button for longer than 8 seconds.
  - The indicator will be changed as follows:  
**PS → PTY → RT → TA → CT**
3. PTY Search
  - 1) Press the **RDS** button for longer then 1.5 second. Then "SEARCH" will be shown in the display.
  - 2) Select the desired PTY mode by using the **TUNING ∞▲** button.
  - 3)
    - If you press the **NEXT** button, the PTY mode wills blink in the clock display.
    - Searching will start when you push the **TUNING ∞▲** button.
    - When the PTY mode that you have selected is searched, searching will stop and the PTY mode will be displayed.
    - If there is no program in the PTY mode, you have selected, searching will stop at the frequency started.



# TROUBLESHOOTING GUIDE

 
If your Tuner should not perform as expected, consult the table below to see if the problem can be corrected before seeking help from your dealer or our service organization.

Symptom	Probable cause (s)	Suggested remedy
No sound	INPUT SELECTOR of amplifier is not Select "TUNER" in INPUT SELECTOR	set to "TUNER"
	Volume of amplifier positioned in "MIN."	Adjust Volume accordingly
	The terminal for system connection is pullet out.	Connect the terminal for system Connection correctly
Only noise is heard	The antenna is pulled out The frequency is not detected exactly	Connect the antenna on the rear panel. Set the frequency correctly
Broadcasting is received but with noise	The position of antenna is not suitable.	Install the antenna again after locating the best reception position.
	The power of CD player is turned on	Turn off CD player.

## WHEN TO USE RESET SWITCH

- When this system is subjected to an electrical shock.
- When the power is irregular.

In the above cases, function buttons may not often operate or the display may operate wrongly. In these cases, try the following:

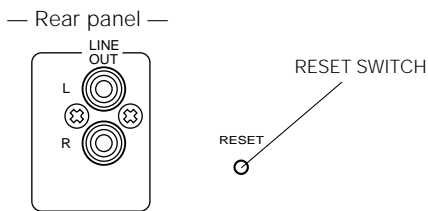

Press the **RESET** switch lightly once or twice with a pencil or a ballpoint pen.

## CARE AND MAINTENANCE

This section describes the care and maintenance tasks that must be performed to optimize the operation of your Marantz equipment.

### CLEANING OF EQUIPMENT EXTERNAL SURFACES

The exterior finish of your ST6000 will last indefinitely with proper care and cleaning. Never use scouring pads, steel wool, scouring powders or harsh chemical agents (e.g., lye solution), alcohol, thinners, benzine, insecticide or other volatile substances as these will mar the finish of the equipment. Likewise, never use cloths containing chemical substances. If the equipment gets dirty, wipe the external surfaces with a soft, lint-free cloth.

If the equipment becomes heavily soiled:

- dilute some washing up liquid in water, in a ratio of one part detergent to six parts water;
- dip a soft, lint free cloth in the solution and wring the cloth out until it is damp;
- wipe the equipment with the damp cloth;
- dry the equipment by wiping it with a dry cloth.

## REPAIRS

Only the most competent and qualified service technicians should be allowed to service your unit. Marantz and its factory trained warranty station personnel have the knowledge and special equipment needed for the repair and calibration of this precision instrument.

In the event of difficulty, call the proper toll-free telephone number listed on the face of the warranty to obtain the name and address of the Marantz Authorized Service Center nearest you. In many cases, the dealer where you purchased your Marantz unit may be equipped to provide service. Please include the model, serial number of your unit together with a copy of your purchase receipt and a full description of what you feel is abnormal in its behaviour.

### Memory backup

- In case a power outage occurs or the power cord is accidentally unplugged, the ST6000 is equipped with a backup function to prevent memory data such as the preset memory from being erased. The memory functions are backed up for up to about one week.

# SPECIFICATIONS

## FM section

Frequency range .....	87.5 MHz to 108.0 MHz
50 kHz steps: Manual mode (10 kHz steps: Fine mode)	
Sensitivity (S/N: 30 dB) .....	1.2 $\mu$ V
Total harmonic distortion (1 kHz)	
Mono .....	0.08 %
Stereo .....	0.15 %
Signal to Noise ratio	
Mono: .....	80 dB
Stereo: .....	75 dB
Selectivity ( $\pm$ 400 kHz)	
Wide mode .....	65 dB
Narrow mode .....	80 dB
Frequency Response .....	20 Hz to 15 kHz (+1.0, -3.0 dB)
Image Rejection .....	70 dB
AM Suppression .....	55 dB
Stereo Separation (1 kHz) .....	50 dB

## MW Section

Frequency range .....	522 kHz to 1620 kHz (9 kHz step)
Sensitivity (S/N: 20 dB) .....	50 dB $\mu$ V / m
Signal to Noise ratio .....	50 dB
Total harmonic distortion .....	1.0 %
Image Rejection .....	35 dB

## LW Section

frequency range .....	146 kHz to 290 kHz (1 kHz step)
Sensitivity (S/N: 20 dB) .....	57 dB $\mu$ V / m
Signal to Noise ratio .....	45 dB
Total harmonic distortion .....	1.0 %
Image Rejection .....	35 dB

## General

Power supply .....	AC 230 V 50 Hz
Power consumption .....	7.6 W
Dimension (WxHxD) .....	440 x 96 x 307 m/m
Weight (Net) .....	3.8 kg

## Accessories

 
Remote control connection cord .....	x1
Audio signal connection cord .....	x1
FM indoor antenna .....	x1
AM loop antenna .....	x1

## Note:


Improvements may result in specification or feature changes without notice.  
Photos and illustrations may differ slightly from production models.

# FIGURES


## BEFORE USE

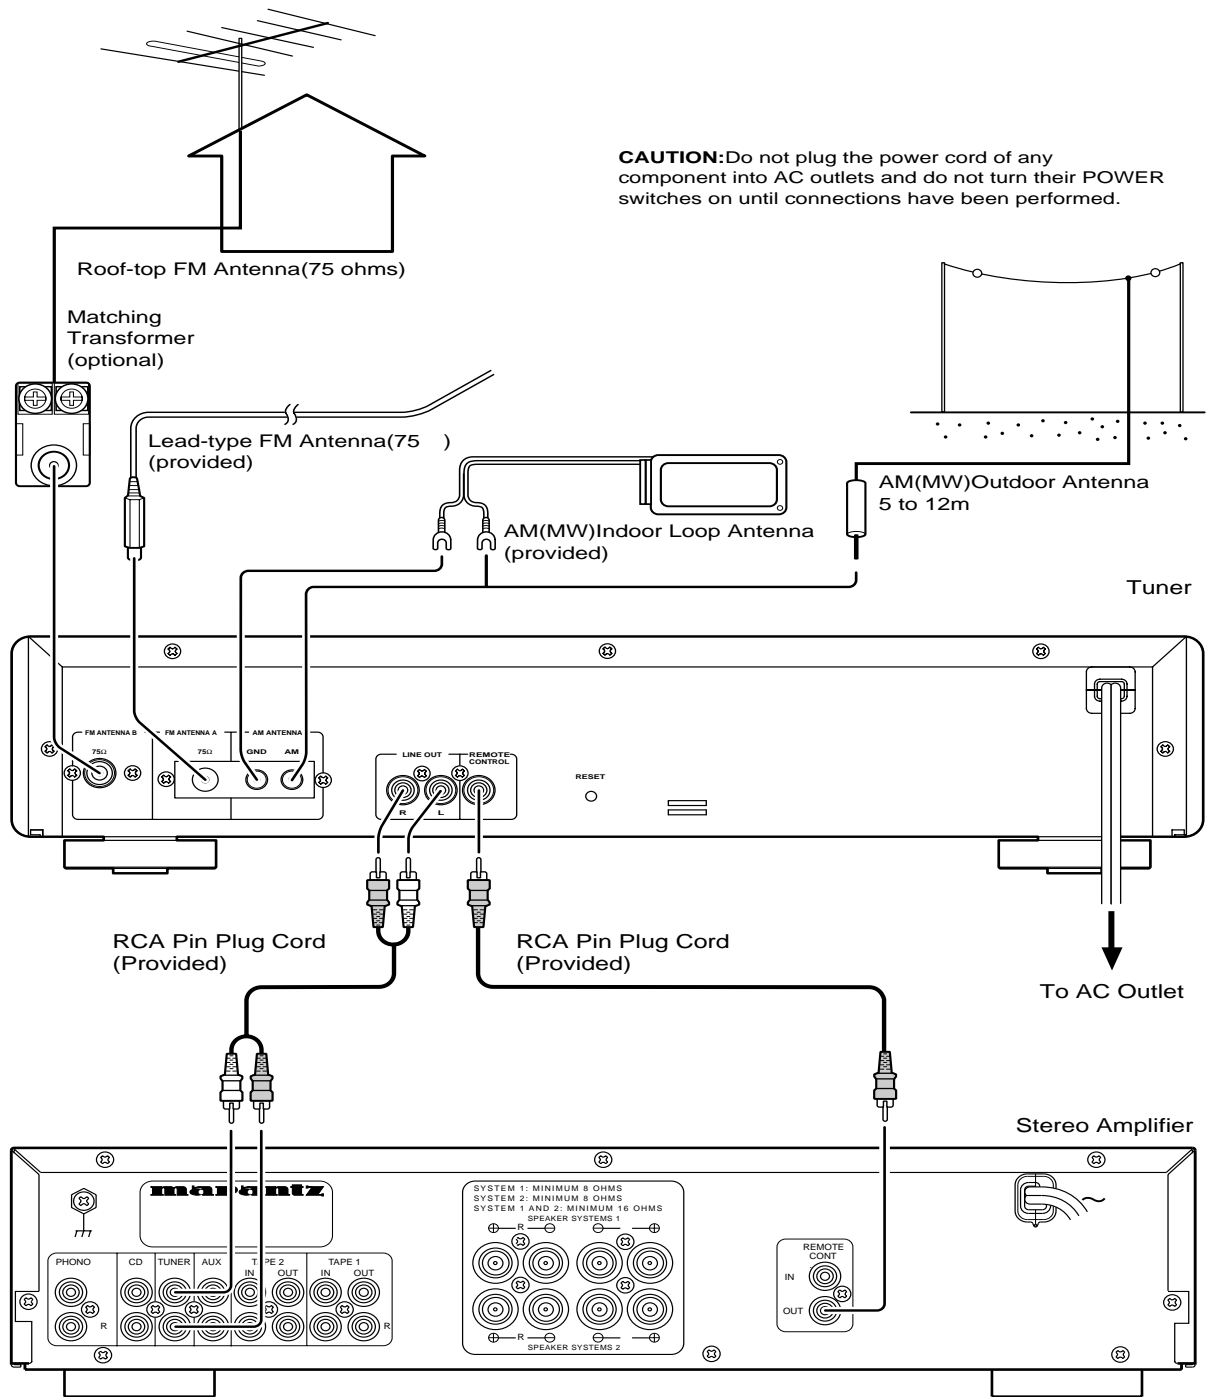

## CONTROLS AND FUNCTIONS

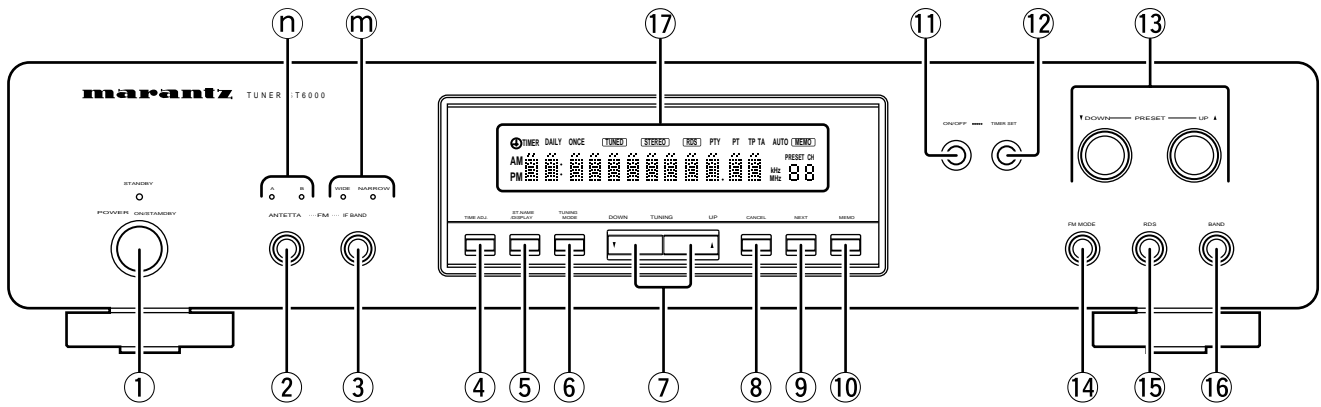 

## FL-DISPLAY

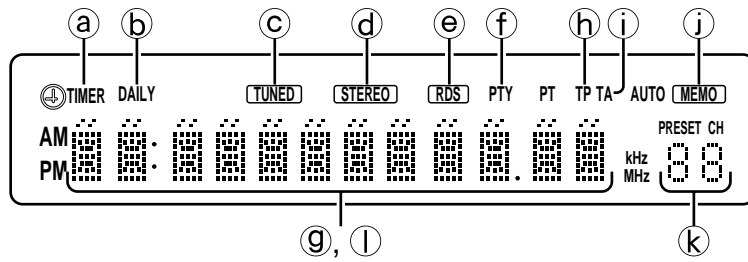 

<b>COUNTRY</b>	<b>COMPANY</b>	<b>ADDRESS</b>
<b>AUSTRALIA</b>	Scan audio Pty. Ltd.	4 Station Street, Thornleigh NSW 2120, Australia
<b>AUSTRIA</b>	Huber & Prohaska GmbH	Taborstraße 95 / Ladestraße 1, Gebäude Hangartner, A-1200 Wien, Austria
<b>BELGIUM</b>	Van der Heyden Audio N.V.	Brusselbaan 278, 9320 Erembodegem, Belgium
<b>BULGARIA</b>	Ariescommerce GmbH	Makedonia Blvd. 16, 1606 Sofia, Bulgaria
<b>CANADA</b>	Lenbrook Industries Limited	633 Granite Court, Pickering, Ontario
<b>CYPRUS</b>	Empire Hifi systems Ltd.	P.O. Box 5604, Nicosia, Cyprus
<b>CZECH REPUBLIC</b>	Audio International	Fugnerova 1, 67801 Blansko, Czech Republic
<b>DENMARK</b>	Hi-Fi Klubben Denmark	Aboulevarden 1, DK-8000 Arhus C., Denmark
<b>DUBAI</b>	V.V.& SONS	P.O. Box 105, Dubai, U.A.E.
<b>ESTONIA</b>	Audio International Baltic	Lo Hu 12, EE0026 Tallin, Estonia
<b>F.Y.R.O.M.</b>	T.P. KODI	ul.Cedomir Kantargiev 21a, Skopje, Former Yugoslavian Republic of Macedonija
<b>FINLAND</b>	Hi-Fi Klubi Finland	Uudenmaankatu 4-6, SF-00120 Helsinki, Finland
<b>FRANCE</b>	Marantz France	A division of Marantz Europe B.V., P.O. Box 301, 92 156 Suresnes Cedex, France
<b>GERMANY</b>	Marantz Deutschland	Hakenbusch 3, 49078 Osnabrück, Germany
<b>GREECE</b>	Adamco S.A.	188, Hippocratous Street, 11471 Athens, Greece
<b>HEADQUARTERS EUROPE:</b>	Marantz Europe B.V.	Building SFF-2, P.O. Box 80002, 5600 JB Eindhoven, The Netherlands
<b>HONG KONG</b>	Marantz Asia Ltd.	Unit 1706, Metroplaza II, 223 Hing Fong Road, Kwai Fong, N.T., Kowloon, Hong Kong
<b>HUNGARY</b>	Infovox Ltd.	Terez Krt.31, 1067 Budapest, Hungary
<b>ICELAND</b>	Radiobudin HF	Skipholt 19, P.O. Box 424, 121 Reykjavik, Iceland
<b>INDIA</b>	Marantz India	c/o Philips India Ltd., Plot 80, Bhosari Industrial Estate Pune - 411026, India
<b>IRAN</b>	Home Co.	5th floor no 878 Philips Building Enghelab ave, P.O. 11365/7844 Tehran, Iran
<b>IRELAND</b>	Marantz Ireland	Clonskeagh, Dublin 14, Ireland
<b>ISRAEL</b>	Elmor Ltd.	52 Heh Beiyar Street, Kikar Hamedina, Tel Aviv, Israel
<b>ITALY</b>	Marantz Italy	Via Casati 23, 20052 Monza (Milano), Italy, Servizio Consumatori 1678-20026, Numero Verde
<b>JAPAN</b>	Marantz Japan Inc.	35-1 Sagami Ohno 7-Chome, Sagamihara-shi, Kanagawa 228-8505, Japan
<b>KOREA</b>	Mk Enterprises Ltd.	121-210, 2F Shinhan Bldg., 247-17 Seokyo-dong, Mapo-ku, Seoul, Korea
<b>KUWAIT</b>	alAlamiah Electronics Intl.	P.O. Box 8196, Salmiah 22052, Kuwait
<b>LATVIA</b>	Ace Ltd.	61, LacPlesa Str., Riga LV 1011, Latvia
<b>LEBANON</b>	AZ Electronics S.A., 1,	P.O. Box 11 2833, Beirut, Lebanon
<b>LITHUANIA</b>	A Accapella Ltd.	Ausros, Vartu G5, Pasazo Skg., 2001 Vilnius, Lithuania
<b>MALAYSIA</b>	Wo Kee Hong Electronics Sdn. Bhd.	102 Jalan SS 21/35, Damansara Utama, 47400 Petaling Jaya, Selangordarul Ehsan, Malaysia
<b>MALTA</b>	Doneo Co Ltd.	78 The Strand, Sliema SLM07, Malta
<b>MAURITIUS</b>	SKR Electronics Ltd.	P.O. Box 685, Bell Village, Port Louis, Mauritius
<b>NETHERLANDS</b>	Marantz Trading	A division of Marantz Europe B.V., Building SFF-2, P.O. Box 80002, 5600 JB Eindhoven, The Netherlands
<b>NEW ZEALAND</b>	Scan audio Pty. Ltd.	4 Station Street, Thornleigh NSW 2120, Australia
<b>NORWAY</b>	Hi-Fi Klubben Norway	Lillegrensen 7, N-0159 Oslo, Norway
<b>OMAN</b>	Mustafa & Jawad Trading CO.	P.O. Box 1918, Ruwi, Oman
<b>POLAND</b>	Marantz Polska	Ul. Marszalkowska 45/49, 00-648 Warszawa, Poland
<b>PORTUGAL</b>	Corel2	Comércio de Electrónica Lda., Av. Luís Bivar, No 85 A, 1050 Lisboa, Portugal
<b>PROFESSIONAL EUROPE</b>	Marantz Professional Products	Kingsbridge House, Padbury Oaks, 575-583 Bath Road, Longford, Middlesex UB7 0EH, U.K.
<b>PROFESSIONAL U.S.A.</b>	Marantz Professional Products	Distributed by: Superscope Technologies Inc., 1000 Corporate Blvd. Ste.D, Aurora, Illino
<b>QATAR</b>	Almana & Partners W.W.L.	P.O. Box 49, Doha, Qatar
<b>REUNION</b>	Vision +	180 Rue du Marechal Leclerc, 97400 Saint Denis, Ile de la Reunion
<b>ROMANIA</b>	Alltrom SRL	Soseaua Bucuresti, Ploiesti 10, Sector 1, Bucharest, Romania
<b>RUSSIA</b>	Trade Company SV	Bld. 2, 7 Montazhnaya Street, 107497 Moscow, Russia
<b>SAUDI ARABIA</b>	Ultimate Fidelity	Sameria Comm. Center, Roadah Dist., P.O. Box 7760, Jeddah 21472, Saudi Arabia
<b>SINGAPORE</b>	Forward Marketing (S) Pte. Ltd.	Wo Kee Hong Centre, 29 Leng Kee Road, Singapore 159099, Singapore
<b>SLOVAKIA</b>	Audio International Slovakia	Nam. SNP 10, 96001 Zvolem, Slovakia
<b>SLOVENIA</b>	Bofex	Smartinska 152, HALA V/3, 61000 Ljubljana, Slovenia
<b>SOUTH AFRICA</b>	Coherent Imports (PTY) Ltd.	P.O. Box 1614, Alberton, 1450, South Africa
<b>SPAIN</b>	Marantz Spain	Martinez Villergas 2, Apartado 2065, Madrid 28027, Spain
<b>SWEDEN</b>	Hi-Fi Klubben A.B.	Tegnersgatan 21, S-412 52 Gotenborg, Sweden
<b>SWITZERLAND</b>	Sound Company AG	Postfach, 8010 Zürich, Switzerland
<b>TAHITI</b>	Covecolor	Av. Prince Hinoi, Cours de l'union sacré, P.O. Box 2334, Papeete, Tahiti
<b>TAIWAN</b>	Pai-Yuing Co. Ltd.	6th No 148 Sung Kiang Road, Taipei 10429, Taiwan R.O.C.
<b>THAILAND</b>	MRZ Standard Co. Ltd.	746-750 Mahachai Road, Wangburapa, Bangkok 10200, Thailand
<b>TURKEY</b>	Penta Elektronik	Sanayi Ve Ticaret Ltd. Sti., Selvi Kokak, No. 4/1, Senlikkoy, 34810 Florya, Istanbul, Turkey
<b>U.K.</b>	Marantz Hifi UK Ltd.	Kingsbridge House, Padbury Oaks, 575-583 Bath Road, Longford, Middlesex UB7 0EH, U.K.
<b>U.S.A.</b>	Marantz America Inc.	440 Medinah Road, Roselle, IL 60172, U.S.A.
<b>YUGOSLAVIA</b>	ITM	Ljutice Bogdana Ia, Belgrade, Yugoslavia
<b>EXPORT</b>	Marantz Trading	A division of Marantz Europe B.V., Building SFF-2, P.O. Box 80002, 5600 JB Eindhoven, The Netherlands

www.marantz.com

**marantz®** is a registered trademark.

