

marantz®

Model VP 7200 User Guide

LCD Projector

ENGLISH**WARRANTY**

For warranty information, contact your local Marantz distributor.

RETAIN YOUR PURCHASE RECEIPT

Your purchase receipt is your permanent record of a valuable purchase. It should be kept in a safe place to be referred to as necessary for insurance purposes or when corresponding with Marantz.

IMPORTANT

When seeking warranty service, it is the responsibility of the consumer to establish proof and date of purchase. Your purchase receipt or invoice is adequate for such proof.

FOR UK ONLY

This undertaking is in addition to a consumer's statutory rights and does not affect those rights in any way.

FRANÇAIS**GARANTIE**

Pour les conditions de garantie, veuillez vous adresser à votre distributeur local Marantz.

CONSERVEZ L'ATTESTATION D'ACHAT

L'attestation d'achat est la preuve permanente d'un achat de valeur. La conserver en lieu sûr pour s'y reporter aux fins d'obtention d'une couverture d'assurance ou dans le cadre de correspondance avec Marantz.

IMPORTANT

Pour l'obtention d'un service couvert par la garantie, il incombe au client d'établir la preuve de l'achat et d'en corroborer la date. Le reçu ou la facture constituent des preuves suffisantes.

DEUTSCH**GARANTIE**

Bei Garantiefragen wenden Sie sich bitte an Ihren Marantz-Händler.

HEBEN SIE IHRE QUITTUNG GUT AUF

Die Quittung dient Ihnen als bleibende Unterlage für Ihre wertvolle Anschaffung. Das Aufbewahren der Quittung ist wichtig, da die darin enthaltenen Angaben für Versicherungszwecke oder bei Korrespondenz mit Marantz angeführt werden müssen.

WICHTIG!

Bei Garantiefragen muß der Kunde eine Kaufunterlage mit Kaufdatum vorlegen. Ihre Quittung oder Rechnung ist als Unterlage ausreichend.

NEDERLANDS**GARANTIE**

Voor inlichtingen omtrent garantie dient u zich te wenden tot uw plaatselijke Marantz-handelaar.

UW KWITANTIE, KASSABON E.D. BEWAREN

Uw kwitantie, kassabon, e.d. vormen uw bewijs van aankoop van een waardevol artikel en dienen op een veilige plaats bewaard te worden voor evt. verwijzing, b.v. in verband met verzekering of bij correspondentie met Marantz.

BELANGRIJK

Bij een evt. beroep op de garantie is het de verantwoordelijkheid van de consument een gedateerd bewijs van aankoop te tonen. Uw kassabon of factuur is voldoende bewijs.

ITALIANO**CONDIZIONI DI GARANZIA**

L'apparecchio è garantito per 365 giorni dalla data di acquisto comprovata da un documento attestante il nominativo del rivenditore e la data di vendita. La garanzia sarà prestata con la sostituzione o riparazione gratuita delle parti difettose.

Non sono coperti da garanzia difetti derivanti da uso improprio, errata installazione, manutenzione effettuata da personale non autorizzato o, comunque, da circostanze che non possano riferirsi a difetti di funzionamento dell'apparecchio. Sono inoltre esclusi dalla garanzia gli interventi inerenti l'installazione e l'allacciamento agli impianti di alimentazione.

Gli apparecchi verranno riparati presso i nostri Centri di Assistenza. Le spese ed i rischi di trasporto sono a carico del cliente.

La casa costruttrice declina ogni responsabilità per danni diretti o indiretti provocati dalla inosservanza delle prescrizioni di installazione, uso e manutenzione dettagliate nel presente manuale.

Per informazioni sull'abbonamento al Servizio Assistenza post-garanzia e per conoscere l'indirizzo dei Centri Assistenza Marantz rivolgetevi al nostro servizio consumatori (telefono 1678-20026 - numero verde).

PORTUGUÊS**GARANTIA**

Para informação sobre garantia, contacte o distribuidor Marantz local.

GUARDAR O RECIBE DE COMPRA

O recibo é o registro permanente da compra que fez. Deve ser guardado num local seguro, para ser apresentado em questões relacionadas com o seguro ou quando tiver de contactar Marantz.

IMPORTANTE

Quando procurar assistência técnica ao abrigo da garantia, é da responsabilidade do consumidor estabelecer a prova e data de compra. O recibo é prova adequada.

ESPAÑOL**GARANTÍA**

Para información sobre las Condiciones de Garantía, sírvase consultar el Certificado que encontrará en el interior del embalaje del equipo.

CONSERVE EL COMPROBANTE DE LA COMPRA

La factura es el comprobante de la adquisición de un producto valioso. Consérvela en lugar seguro para poder consultarla en caso necesario.

IMPORTANTE

Para disponer de servicios cubiertos por la garantía, el usuario deberá acreditar la fecha y el lugar de adquisición del equipo. La factura o recibo de la compra constituyen un comprobante válido a tal efecto.


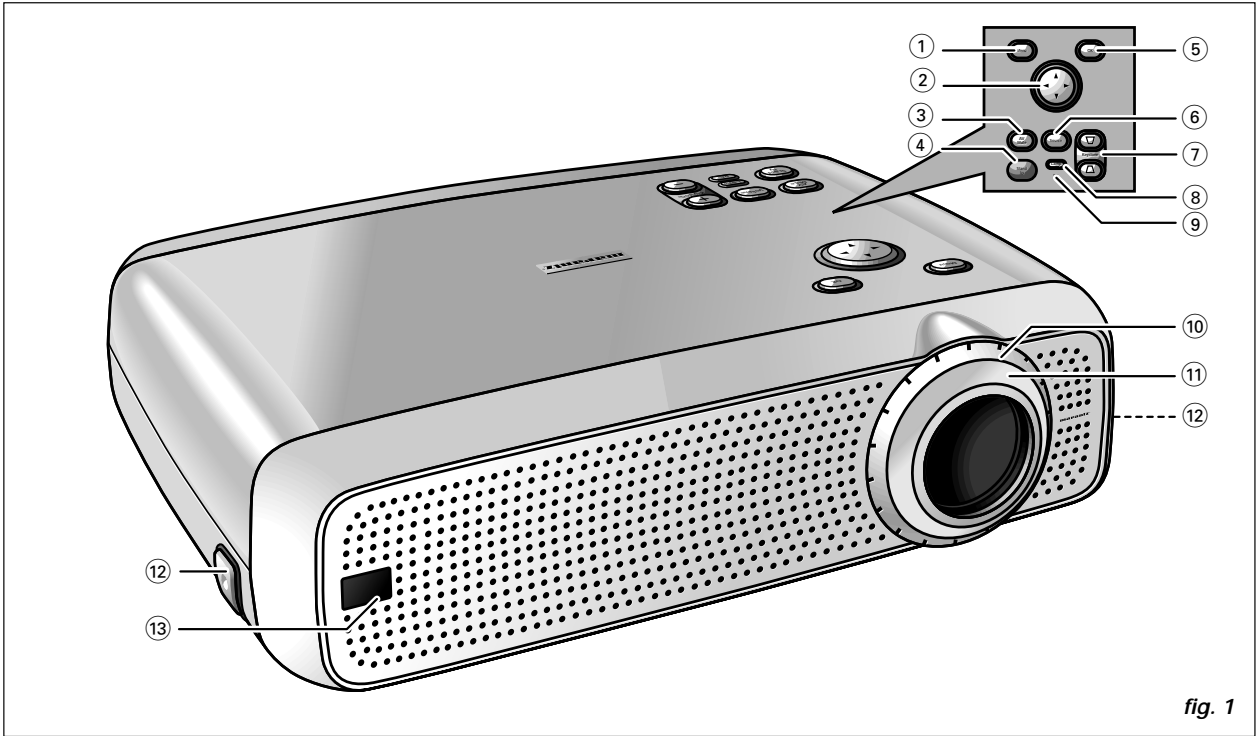


fig. 1

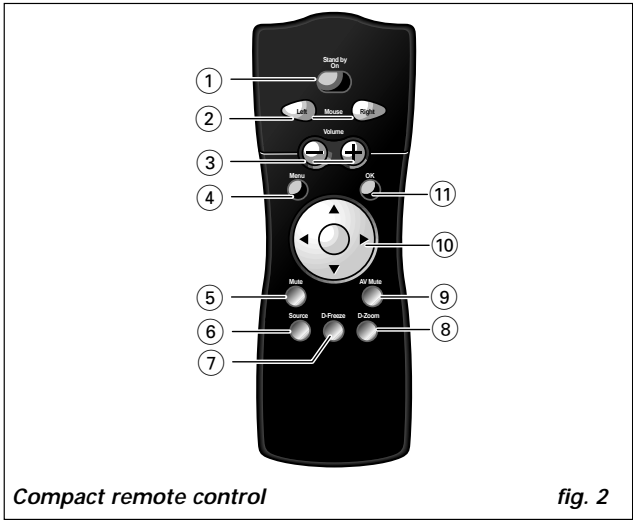

Compact remote control

fig. 2

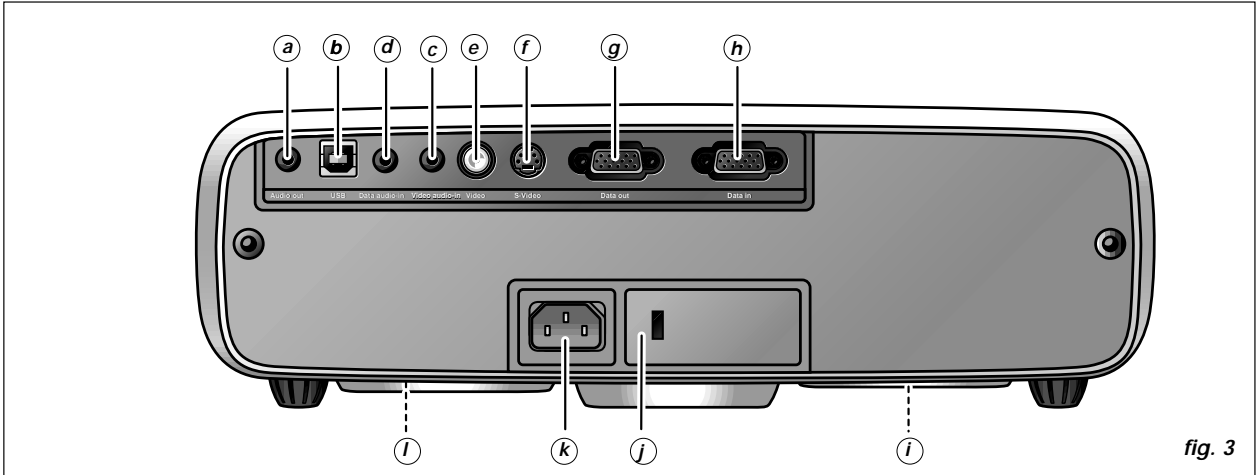


fig. 3

Table of contents

Controls and connections	3
1. Introduction	4
Table of contents	4
Introduction	4
Packaging contents	4
2. Things You Should Know	4
3. Important Safeguards	5
4. Projector Features	6
5. Functional Overview	7-8
Controls	7
Connections	8
6. Set Up	9-10
Positioning the projector and screen	9
Mains supply	9
Adjusting the focus and size of the image	9
Adjusting the vertical and horizontal angle of the projector	10
Moving the projector	10
Transporting the projector	10
Inserting the batteries in the remote control	10
7. Installation	11-15
Video/computer cables and adapter	11
Connecting to a computer	12
Connecting to video equipment	13
Connecting to Component- and HDTV-video equipment	14
Connecting to audio equipment	15
Connecting to an external monitor	15
8. Operation	16-20
Preparation	16-17
Display and Picture control	17-19
Audio control	19
Other settings	20
9. Maintenance	21-23
Cleaning	21
Cleaning the dustfilter	21
Lamp	22
Lamp replacement	22-23
Resetting the lamplife time	23
10. Troubleshooting	24

Introduction

Congratulations on your purchase of one of the most sophisticated and reliable products on the market today. We are sure that, used properly, it will bring you years of enjoyment. You will want to keep this manual handy, as it is a convenient source of information about your projector. For your own protection and prolonged operation of your projector, please read the 'Important Safeguards' section before use.

Packaging contents

Please confirm that the following items are packed in the projector box. They are provided to help you use or set up your projector.

- Projector
- Mains lead
- Audio/Video RCA cable
- S-Video cable
- RCA/Jack adapter
- Integrated VGA/USB cable
- Scart/RCA Audio Video adapter (not for USA version)
- Remote control + batteries
- User Guide

Note: This equipment has been tested to comply with the limits for a class A digital device in accordance with Part 15 of the FCC Rules as well as the European CE marking.

Operation is subject to the following two conditions:

1. This device may not cause harmful interference, and
2. This device must accept any interference received, including interference that may cause undesired operation.

These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment.

This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the user's guide, may cause harmful interference to radio communications.

Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his own expense.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorientate or relocate the receiving antenna.
- Increase the distance between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

FCC Warning:

To assure continued compliance, use only the provided grounded mains supply lead and shielded interface cables when connecting this device to a computer. Also, any unauthorized changes or modifications to this equipment could void the user's authority to operate this device.

Note:

This Marantz projector uses three LCD (Liquid Crystal Display) panels. These panels contain a total of 1,440,000 (for SVGA projectors) or 2,359,296 (for XGA projector) pixels. As with any equipment, certain tolerances apply to the performance specification of the product.

Your projector might have some inactive pixels - within acceptable tolerances - which may result in illuminated or dark dots on the picture screen. These inactive pixels will not affect the overall picture quality or the life expectancy of the projector.

3. Important Safeguards



CAUTION: Please read all of these instructions before you operate your projector.

Save these instructions for future reference.

Electrical energy can perform many useful functions. This projector has been engineered and manufactured to meet applicable safety standards. IMPROPER USE CAN RESULT IN POTENTIAL ELECTRICAL SHOCK OR FIRE HAZARDS. In order not to defeat the safeguards incorporated into this projector, observe the following basic rules for its installation, use and servicing.

1. Unplug the projector from the wall socket before cleaning or lamp replacement.
2. Do not use liquid cleaners or aerosol cleaners. Use a soft dry cloth to clean the projector unit. If the unit is very dirty, wet a cloth with neutral detergent, squeeze it tight, wipe the unit with it, and finish by wiping with a dry cloth. Do not use a chemical duster or polisher-cleaner because it can adversely affect the unit and peel the paint.
3. Do not use attachments not recommended by MARANTZ, as they may cause hazards.
4. Do not use the projector near water- for example, near a bathtub, washbowl, kitchen sink, or laundry tub, in a wet basement, near a swimming pool, etc. Never spill liquid into the projector.
5. Do not place the projector on an unstable cart, stand, or table. The projector may fall, which may cause serious injury to a child or an adult and/or serious damage to the unit. Use only with a cart or stand recommended by its manufacturer as being suitable for use with a projector.
6. Ceiling, wall or shelf mounting should be done with a mounting kit approved by the manufacturer for use with a projector and should follow the manufacturer's instructions.
7. Projector equipment and cart combinations should be moved with care. Quick stops, excessive force, and uneven surfaces may cause the equipment and cart combination to overturn.
8. Slots and openings of the cabinet are provided for ventilation. To ensure reliable operation of the projector and to protect it from overheating, these openings must not be blocked or covered. These openings should never be covered with cloth or other material. The bottom opening should not be blocked by placing the projector on a bed, sofa, rug, or other similar surface. The projector should not be placed near or over a radiator or heating vent. The projector should not be placed in a built-in installation such as a bookcase unless proper ventilation is provided.
9. The projector should be operated only from the type of mains source indicated on the side of the projector or in the specifications and with the appropriate mains lead. If you are not sure of the type of mains supplied to your business or the right type of mains lead, consult your projector dealer or local power company.
10. Do not allow anything to rest on the mains lead. Do not place the projector where the lead will be walked on.
11. Follow all warnings and instructions marked on the projector.
12. As a safety feature, this projector is equipped with mains lead with a 3-pin grounded plug (for USA-versions only) or a 2-pin grounded plug (for European versions only). The 3-pin/2-pin grounded plug will fit only into a grounding type mains outlet. If the plug does not fit, use an adapter that is properly grounded or have an electrician install a grounded type outlet. Do not attempt to modify this AC plug.
13. For added protection of the projector during a lightning storm, or when it is left unattended or not in use for long periods of time, unplug it from the wall socket and disconnect any cable systems. This will prevent damage to the projector due to lightning and power-line surges.
14. Do not overload wall sockets and extension leads with too many products, because this can cause a fire or electric shock.
15. Never push objects of any kind into the projector through cabinet slots as they may touch dangerous voltage points or short cut parts, which could result in a fire or electric shock.
16. Do not attempt to service the projector yourself other than maintenance issues presented in chapter 'Maintenance'. Opening or removing covers may expose you to dangerous voltage or other hazards. Refer all servicing to qualified service personnel.
17. Unplug the projector from the wall socket and refer servicing to qualified service personnel under the following conditions:
 - A. When the mains lead or plug is damaged or frayed.
 - B. If liquid has been spilled into the projector.
 - C. If the projector has been exposed to rain or water.
 - D. If the projector does not operate normally when you follow the operating instructions. Adjust only those controls that are covered by the operating instructions; improper adjustment of other controls may cause damage and will often require extensive work by a qualified technician to restore the projector to normal operation.
 - E. If the projector has been dropped or the cabinet has been damaged.
 - F. When the projector exhibits a distinct change in performance – (this indicates a need for service).
18. Upon completion of any service or repairs to the projector, ask the service technician to perform a routine safety check to check that the projector is in safe operating condition.
19. When replacement parts are required, be sure the service technician has used replacement parts specified by the manufacturer that have the same characteristics as the original parts. Unauthorized substitutions may result in fire, electric shock, or other hazards.
20. It is recommended to clean the air filter after every 100 lamp hours. The projector may become too hot if the filter is not cleaned when required.
21. If the lens becomes dirty or smudged, clean it with a clean, dampened cloth. Never touch the lens with your fingers.
22. Do not look directly into the aperture and lens while operating the projector as this may damage your eyes.
23. Please allow cool down of the projector for a few minutes before switching off the mains.
24. Please dispose of batteries and lamp in special chemical disposal bins.

4. Projector Features

1. Keystone Correction

A keystone image (picture top width larger than picture bottom width or vice versa) appears when the relative positions of the projector and the screen are not correct. With the 'Keystone correction' feature you can correct this picture distortion. Digital keystone correction is directly accessible via the keyboard on the projector or via the 'Settings' menu of the On Screen Display menu.

2. Auto setup functionality Auto Standby

The 'Auto Standby' feature automatically switches the projector to standby when no signal inputs are detected for 30 minutes. This setting can be changed in the 'Settings' menu.

Auto Image

The 'Auto Image' feature automatically sizes and positions the image, to optimally fit the screen picture. It is applicable for data input only and accessible in the 'Display' menu of the On Screen Display menu. Manual settings of Horizontal Size, Shift and Phase remain possible by switching Auto Image off. The projector is fully PC and MAC compatible.

3. USB

The USB (Universal Serial Bus) connector allows you to connect to computers equipped with a USB interface, resulting in real hot plug and play presentation.

Mouse control:

By connecting USB, the mouse function on the Remote Control automatically gets installed. You can now manipulate the mouse cursor on the computer and on the screen, using Cursor Control.

Audio:

Audio information from the computer will be heard via the projector speaker.

Note: Based on the specific hardware and software configuration available, Apple Macintosh computer users could experience incomplete or erratic USB -functionality. These problems are not related to the performance of your projector.

4. Digital features

The digital features of the projector are of great value for an attractive presentation. With 'Digital Zoom' a specific part of the projected image can be enlarged. The 'digital freeze' feature enables you to capture moving pictures (still picture).

5. Very easy to install and operate

The **OSD** (On Screen Display) information screens and menus in 7 languages provide you with additional information to help you make the right choices about installation and operation, and to perform the correct actions.

The standard OSD language is English. In addition you can select French, Spanish, German, Italian, Portuguese and Chinese.

The sensor of the wireless remote control allows you to operate both your computer as well as your projector from almost anywhere in the room. The **directional shuttle** on the projector and on the **remote control** function as **Cursor Control** and are used to manipulate the mouse cursor on the connected computer, as long as the menu is not active. When the menu is active, the Cursor Control controls the menu cursor.

The local keyboard provides direct access keys for those functions that are most often used during set-up of the projector. The remote control provides keys for those functions that are most often used during presentations. For a complete overview of keyboard and remote control keys, see the Functional Overview in the next paragraph.

6. External monitor connection

A separate external monitor (or a second projector) can be connected to the projector. The image projected is simultaneously shown on the monitor, but not when the projector is in power standby mode.

7. High reliability and excellent brightness

The UHP lamp guarantees long life, excellent brightness over the lamp's lifetime and excellent colour reproduction. Furthermore, the projector has an excellent brightness- and colour uniformity over the entire picture.

8. Excellent video quality

The projector accepts the input signal of all major video formats, including PAL, SECAM, NTSC, S-Video, HDTV and Component video signals. The projector will recognize these standards and adapt to them automatically. With the 'picture format' feature you can select one of three picture format options 4:3, 16:9 or 16:9 enlarged.

9. Stereo Audio Output

A standard 3.5 mm audio plug is available for connecting external audio equipment via a standard 3.5 mm stereo plug. Constant ('Line') or variable ('Regulated') audio output volume can be selected in the 'Audio' menu.

10. Adjustable Screen Capability

The diagonal picture size of the display can be set from 21" (0.53 m) to 262" (6.6 m).

11. Ceiling Mount and Rear Screen projection

The projector is equipped with a full mirror scan conversion function ('vertical/horizontal mirror'), which allows the image to be reversed for ceiling mount as well as for rear projection applications.

Controls

On projector (fig. 1)

- ① **Menu**
To activate and deactivate the menu.
- ② **Cursor Control**
To manipulate the mouse cursor on the connected computer as long as the menu is not active. When the menu is active the Cursor Control controls the menu cursor. The cursor control works with up/down and left/right button operation.

Note: The Cursor Control can only function as a mouse cursor when the USB socket of the projector is connected to the USB downstream terminal of the computer.
- ③ **A(udio)/V(ideo) Mute**
To mute the sound of the projector (or an externally connected sound amplifier) and to mute the picture.
- ④ **Standby**
To switch the projector in or out of the power standby mode. When the projector is in standby mode, the ring around the button lights up red. When the projector is operating, the ring is green. When the projector receives a signal from the remote control the ring is fast blinking green/red.
- ⑤ **OK**
To confirm actions in the menu when the menu is on screen.
- ⑥ **Source**
To select the current projection source (Data, S-Video or Video). The button toggles between the three signals.
- ⑦ **▢ Keystone ▢**
To correct picture distortion of the vertical keystone type by digital scaling.
- ⑧ **Lamp indicator**
 - Lights up green when the lamp is on.
 - Lights up orange when lamp life has almost expired.
 - Lights up red when lamp life has expired.
 - Fast blinks red when lamp start has failed.
 - Slowly blinks green/red/orange when the lamp is starting up or cooling down.
- ⑨ **Temperature indicator**
 - Lights up red in case of temperature error.
 - Flashes in case of fan error.
- ⑩ **Zoomring**
To adjust the size of the projected image.
- ⑪ **Focus ring**
To adjust the focus of the projected image.
- ⑫ **Height/Level adjusters**
To adjust the vertical and/or horizontal angle of the projector.
- ⑬ **IR sensor**
To receive the signals from the remote control.

On compact remote control (fig. 2)

- ① **Stand by On**
To switch the projector in or out the the power standby mode.
- ② **Mouse Left/Right**
Function as the Left and Right mouse keys of your PC.
- ③ **– Volume +**
To adjust the volume.
- ④ **Menu**
To activate and de-activating the menu.
- ⑤ **Mute**
To mute the sound of the projector.
- ⑥ **Source**
To select the current projection source (Data, S-Video or Video). The button toggles between the three signals.
- ⑦ **D(igital)-Freeze**
To capture a moving picture. The button toggles between the Freeze mode and the display situation.
- ⑧ **D(igital)-Zoom**
To switch the Digital Zoom function 'On' or 'Off' (toggle button). In 'On' condition, the zoom centre can be selected using Cursor Control and the image is magnified with the zoom factor chosen under Magnification.
- ⑨ **A(udio)/V(ideo) Mute**
To mute the sound of the projector (or an externally connected sound amplifier) and to mute the picture.
- ⑩ **Cursor Control**
To manipulate the mouse cursor on the connected computer as long as the menu is not active. When the menu is active the Cursor Control controls the menu cursor. The cursor control works with up/down and left/right button operation.

Note: The Cursor Control can only function as a mouse cursor when the USB socket of the projector is connected to the USB downstream terminal of the computer.
- ⑪ **OK**
To confirm actions in the menu when the menu is on screen.

Connections**Data source connections (fig. 3)**

- a Audio out**
Output socket to connect to the Line Input sockets of an amplifier or stereo system.
- b USB-(upstream)**
Input socket to connect a PC or Apple Macintosh computer equipped with a USB downlink connection.
- d Data audio in**
Input socket to connect to the Audio out terminal of a computer or Component video source.
- h Data in**
Input socket to connect to the Data out terminal of a computer.

Video source connections (fig. 3)

- a Audio out**
Output socket to connect to the Line Input sockets of an amplifier or stereo system.
- c Video audio in**
Input socket to connect to the Audio out sockets of a video recorder (S-VHS, PAL, NTSC, SECAM).
- e Video**
Input socket to connect to the Video out socket of a video recorder, Laser Disc player, video camera or TV with AV output socket (PAL, NTSC, SECAM).
- f S-Video**
Input socket to connect to the S-Video out socket of a S-VHS video recorder, a VCR, Laser Disc player, video camera or TV with AV output socket.

Other connections (fig. 3)

- g Data out**
To connect to an external monitor (or a second projector).
The image projected is simultaneously shown on the monitor.
- i Lamp compartment**
- j Lock slit**
To insert an optional locking device (Kensington lock).
- k Power**
To connect the projector to the mains.
- l Dust filter**

6. Set Up

Positioning the projector and screen

- Place the projector on a stable, level surface, out of direct sunlight and away from sources of excessive dust, dirt, heat, water, moisture, vibration and strong magnetic fields.
- Allow sufficient cooling of the product by keeping all air inlets and outlets clear from obstructions.
- Take additional measures to protect the product when operating (or storing) it in unclean or smoky environments like e.g. bars, casino's, production environments, arcade game centres, etc.
- Face the projector towards the screen for the best picture results.

Screen Size (Diagonal)		Projection Distance 16:9 screen			
		min (wide)		max (tele)	
inch	metres	feet	metres	feet	metres
40	1.0	5.6	1.71	7.2	2.21
60	1.5	8.4	2.58	10.9	3.33
80	2.0	11.3	3.44	14.6	4.46
100	2.5	14.1	4.31	18.3	5.58
120	3.0	17.0	5.18	22.0	6.71
150	3.8	21.3	6.48	27.5	8.40
200	5.1	28.4	8.66	36.8	11.21
250	6.4	35.5	10.83	46.0	14.02

Screen Size (Diagonal)		Projection Distance 4:3 screen			
		min (wide)		max (tele)	
inch	metres	feet	metres	feet	metres
40	1.0	5.1	1.56	6.6	2.02
60	1.5	7.7	2.36	10.0	3.06
80	2.0	10.4	3.16	13.4	4.09
100	2.5	13.0	3.96	16.8	5.12
120	3.0	15.6	4.75	20.2	6.15
150	3.8	19.5	5.95	25.3	7.70
200	5.1	26.1	7.94	33.7	10.28
250	6.4	32.6	9.94	42.2	12.87

- The screen should be positioned so that it is not directly touched by sunlight or artificial light, as this will wash out the colours of the picture, making it hard to see.
- The projector can be used for both front projection, rear projection and ceiling projection applications. As default factory setting, the projector has been set up for front projection. You can change to rear or ceiling projection via the OSD menu. See 'Rear screen projection' and 'Ceiling-mount projection' under 'Operation - Display and picture control' for further instructions.
- Choose a screen size suitable for the number of viewers and the size of the room.
- Picture quality is best when you sit directly in front of the projector screen.

Important!


Negligence in observing the install recommendations above could infringe the warranty conditions for this product.

Mains supply


1. Insert the mains lead into the projectors Power socket and connect it to the wall socket.

Note: The standby indicator lights up red, the projector is now in the Power/Standby mode.

2. Press the Stand by button to switch on the projector.
 - The Standby indicator lights up green.
 - When the projection lamp is on, the start-up screen appears for several seconds.
3. Press the Stand by button again to switch the projector back into the power standby mode.

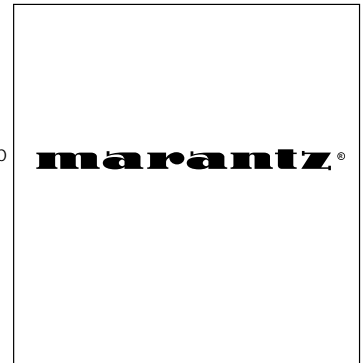

- The Standby Warning screen will appear for 20 seconds.
4. Press the Standby button again to confirm.

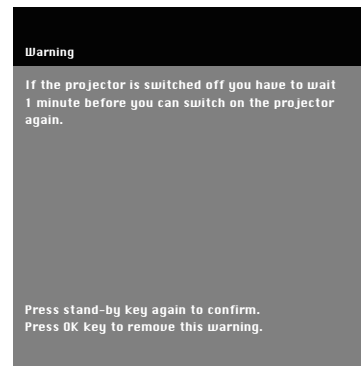

Note: The Stand by Warning screen can be removed by pressing the OK button.


5. To switch off the mains supply completely, disconnect the mains lead.

Notes:

- Save energy! Please put the projector in the Standby position if you are not going to use the projector for more than 15 minutes.
- When no signal inputs are detected for 30 minutes, the projector automatically switches to standby. This setting can be changed in the 'Settings' menu.
- Before disconnecting the mains lead, make sure that the cooling fan has stopped (about 3 minutes after the projector has been switched to Power Standby).

Adjusting the focus and size of the image

- Use the Zoom ring to adjust the size of the image.
- Use the Focus ring to adjust the focus of the image.

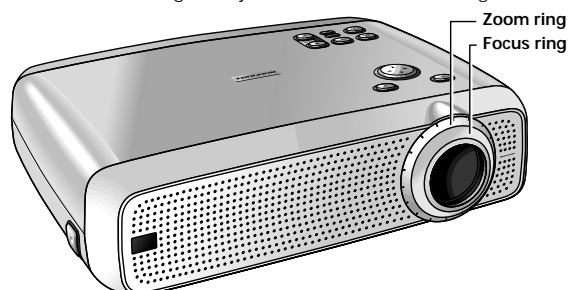


6. Set Up

English

Adjusting the vertical and horizontal angle of the projector

Vertical angle

- Use the Height/Level Adjusters to adjust the vertical angle of the projector as specified under 'Positioning the projector and screen'.

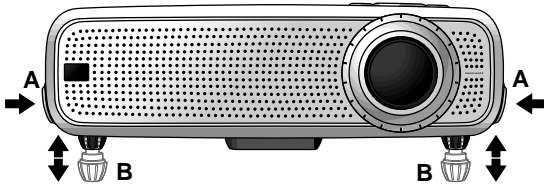

To Raise:


- Keep both adjusters (A) pressed and lift to raise the projector.
- The projector feet (B) will come out.

To Lower:

- Keep both adjusters (A) pressed and gently lower the projector.
- Use the Focus Ring and Zoom Ring to readjust the focus and size of the image.

Horizontal angle (horizon)

- Adjust or correct a possible tilted picture by turning the projector feet to the desired position.

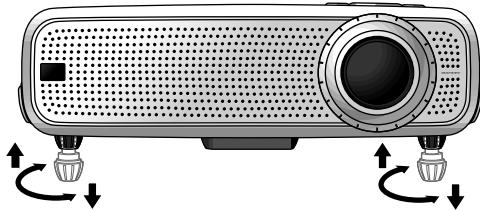

Up: turn the feet to the left.

Down: turn the feet to the right.

- Use the Focus Ring and Zoom Ring to readjust the focus and size of the image.

Keystone correction

If projector and screen are not properly placed, the picture will be distorted, producing a keystone image. Keystone correction allows you to correct picture distortion of the vertical keystone type by internal scaling.



Keystoned Image

- Use the Keystone ▽ button to widen the image.
- Use the ▽ Keystone button to narrow the image.
- This correction function also is accessible through the 'Keystone Correction' option in the 'Settings' menu of the On Screen Display (OSD) menu.

Moving the projector

- Press the Stand by On button to put the projector in stand by. The standby indicator lights up red.
- Wait until the cooling fan has stopped (about 3 minutes after the projector has been switched off) and disconnect the mains lead and all other cables.


Note: Never place the projector on the side where the connections are located.

Transporting the projector

The projector contains many glass and precision parts. If you need to transport the projector, please follow these packing instructions to prevent accidental damage to the projector.

 
 
 
 

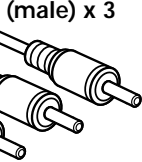

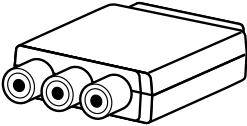
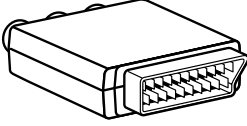
 
 
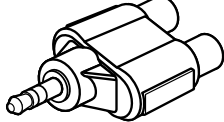
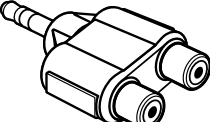
- When transporting the projector for repair, use the original packaging material if possible. If you do not have the original packaging, use equivalent materials, placing plenty of cushioning around the projector.
- When transporting the projector as freight or checked luggage, first put it in a carrying case, then pack it in a firm box, using cushioning around the case.
- When you are hand-carrying the projector, be sure to use a carrying case.

Inserting the batteries in the remote control

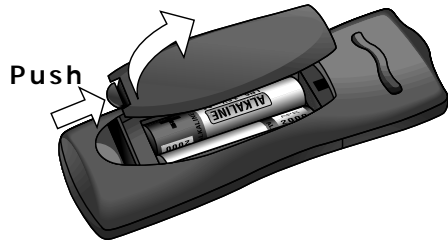

- Push and slide the lid in the direction of the arrow.
- Install two 'AAA' batteries as indicated inside the battery compartment.
- Replace the lid and snap it into place.

Note: The maximum range of the remote control is approximately 15 m (± 50 feet).

No.	CABLE/ADAPTER	CONNECTORS	
		Projector side	Computer/AV product side
1	Integrated VGA/USB Cable	Mini D-Sub 15P (male) 	Mini D-Sub 15P (male) 
		USB connector 4P (male) 	USB connector 4P (male) 
2	RCA Audio Video Cable	RCA pin (male) x 1 	RCA pin (male) x 3 
		Stereo audio plug (male) x 1 	
3	Scart/RCA-AV Adapter (depending on region)		
4	S-Video cable	Mini Din (male) x 4 	Mini Din (male) x 4 
5	RCA/Jack adapter		

Video/computer cables and adapter

These accessories (1 to 5) are supplied with the product for connecting the projector to computer/AV equipment. The numbers in the left-hand column correspond with the numbers in the connection diagrams on the following pages.

Optional accessories:

- LU7200VP/M1M – 150 W replacement lamp;
- MOUNT7200/M1M – ceiling mount.

Connecting to a computer

Notes:

- The data input is suitable for both Apple Macintosh computers (Power Book and Power Mac) as well as for IBM compatible PCs.
- The data output of IBM compatible PCs can be connected directly to the projector using standard data cables.
- Apple Macintosh computers may need a conversion plug to the standard data cable.
- The figures in brackets **(1)** correspond to the figures in the accessories diagram.
- The characters in brackets **(a)** correspond to the characters in **fig. 3** of 'Controls and connections'.

Caution!

Always switch off the projector before making any connections.

USB connection


A USB interface is available via an upstream connector.

When the projector's **USB (upstream) connector** is connected to a PC or an Apple Macintosh computer equipped with a USB downlink connection, it will identify as a USB device.

It is possible to:

- control the cursor of the computer via the projector remote control,
- play audio information from the computer via the projector speaker, and
- the display settings of the computer will be changed to fit the capability of the projector.

Note: If you experience problems using the USB connection, please refer to the user guide or support information of your computer.

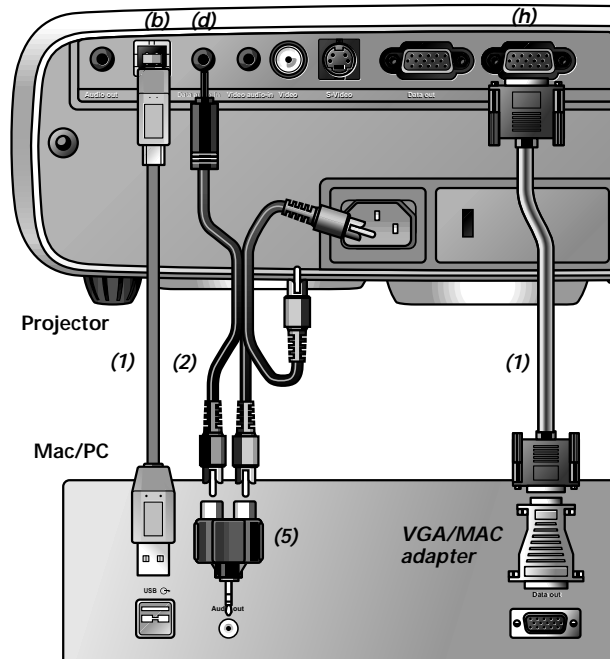**PC (Desk Top/Notebook)/
MACINTOSH (Desk Top/Power Book/Power Mac)**

1. Connect the Data out terminal of the computer to the Data in terminal **(h)** of the projector and secure the plugs by tightening the thumb screws. For this, use the VGA/USB cable **(1)** supplied.

Note: When connecting the projector to a Macintosh computer a VGA/MAC adaptor may be needed. The adaptor is only needed if your computer is equipped with a 2 row, 15 pin connector. If your computer is equipped with a 3 row connector no adaptor is needed.

2. Connect the USB (upstream) socket **(b)** of the projector to the USB downstream part of the computer. For this, use the VGA/USB cable **(1)** supplied.
 - You can now manipulate the mouse cursor on the computer and on the screen, using Cursor Control. Audio information from the computer will be played via the projector speaker.

Notes:

If the mouse cursor does not react when using the cursor control on the remote control:

- Check that the batteries are installed properly and/or replace the batteries.
- Make sure that the USB cable has been properly connected.
- Check that the projector receives the signals from the remote control (LED ring around the Standby button will fast flash when receiving a signal).

If no audio information is heard via the projector speaker:

- Check (AV) Mute setting.
- Check Volume setting.
- Connect the Audio out socket of the computer to the Data audio-in socket **(d)** of the projector. For this use audio/video connection cable **(2)** and adapter **(5)** supplied.

Note: You can also make an Audio out connection to an external amplifier. See 'Connecting to audio equipment'.

Connecting to video equipment


Note: The figures in brackets **(1)** correspond to the figures in the accessories diagram.

The characters in brackets **(a)** correspond to the characters in **fig. 3** of 'Controls and connections'.

Caution!

Always switch off the projector before making any connections.

PAL, NTSC, SECAM

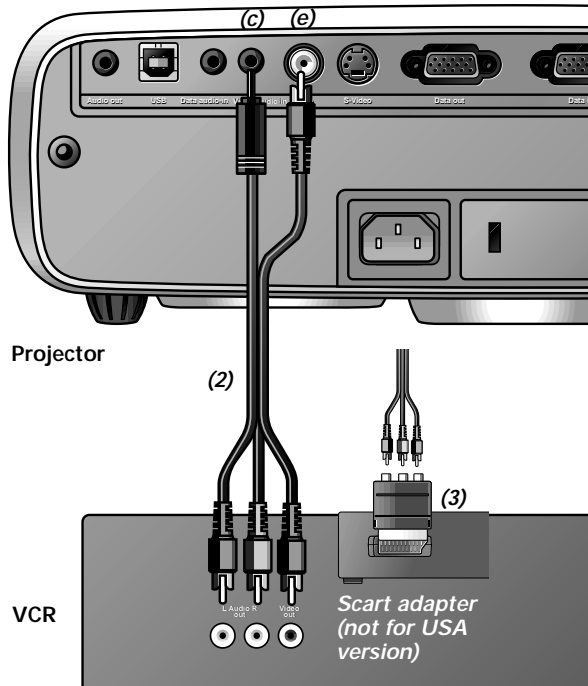


1. Connect the Video out socket of a VCR, Laser Disc player, video camera or TV to the Video socket **(e)** of the projector. For this, use the video/audio connection cable **(2)** supplied.
2. Connect the Audio out L/R sockets of the VCR, Laser Disc player, video camera or TV to the Video audio-in socket **(c)** of the projector. For this, use audio/video connection cable **(2)** supplied.

In case your VCR, Laser Disc player, video camera or TV is equipped with a Scart connector (depending on region):

1. Connect the Scart/RCA Audio Video adapter **(3)** supplied to the Scart connector of the VCR, Laser Disc player, video camera or TV.
2. Plug the video/audio connection cable **(2)** supplied into both the adapter and the Video **(e)** and Video audio-in **(c)** sockets of the projector.

S-VHS

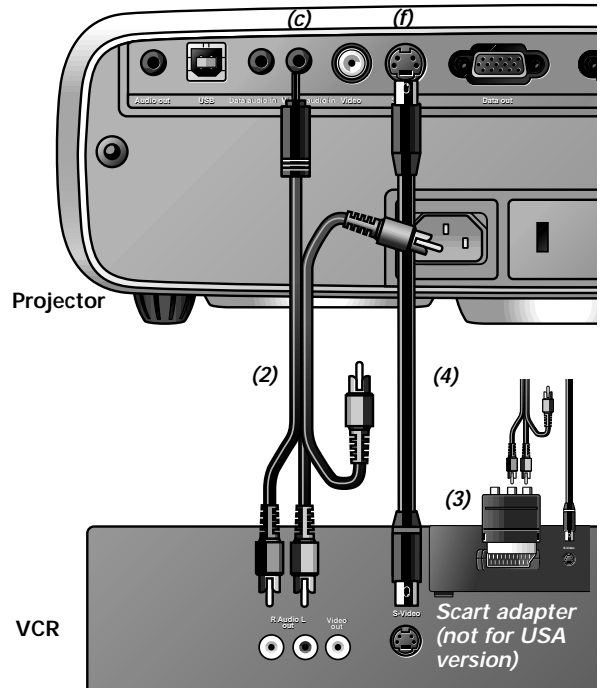

1. Connect the S-Video out socket of a S-VHS video recorder, Laser Disc player, video camera or TV to the S-Video socket **(f)** of the projector. For this use the S-Video connection cable **(4)** supplied.
2. Connect the Audio out L/R sockets of the S-VHS video recorder, Laser Disc player, video camera or TV to the Video audio-in socket **(c)** of the projector.

In case your VCR, Laser Disc player, video camera or TV is equipped with a Scart connector (depending on region):

1. Connect the Scart/RCA Audio Video adapter **(3)** supplied to the Scart connector of the VCR, Laser Disc player, video camera or TV.
2. Plug the audio/video connection cable **(2)** supplied into both the adapter and Video audio-in socket **(c)** of the projector.
3. Plug the S-Video connection cable **(4)** supplied into the VCR and the S-Video socket **(f)** of the projector.


Connecting to Component- and HDTV-video equipment

Note: The characters in brackets **(a)** correspond to characters in **fig. 3** of 'Controls and connections'.


Caution!

Always switch off external equipment and projector before making any connections.

- To connect to Component or HDTV-video equipment, please purchase a proper component/HDTV input cable.

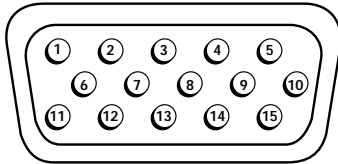

Pin No.	RGB	Component Y/Cr/Cb	Y/Pr/Pb
1	Red	Cr	Pr
6	Red ground	Cr ground	Pr ground
2	Green	Y	Y
7	Green ground	Y ground	Y ground
3	Blue	Cb	Pb
8	Blue ground	Cb ground	Pb ground
13	H-sync	CVBS	
10	Sync ground	CVBS ground	
14	V-sync		
10	Sync ground		

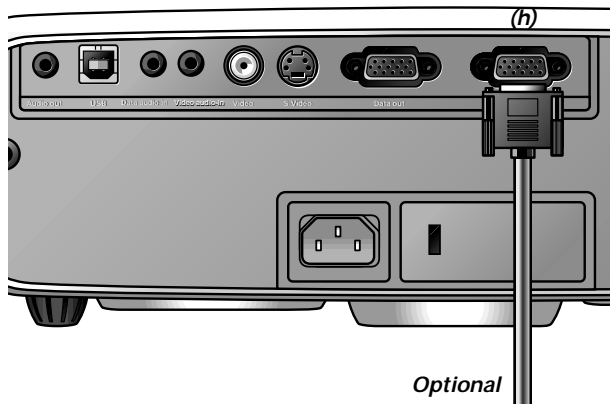


1. Connect the 15 pin connector of an optional component/HD input cable to the Data in terminal **(h)** of the projector.
2. Connect the other end of the cable to the appropriate outputs of your Component- or HDTV-video equipment (e.g. DVD player, Settop Box, HDTV receiver, etc.).

Connecting to audio equipment

Note: The characters in brackets **(a)** correspond to the characters in **fig. 3** of 'Controls and connections'.

Caution!

Always switch off the projector before making any connections.
Always turn down the volume control of the connected amplifier before switching it on, to prevent damage to the speakers.

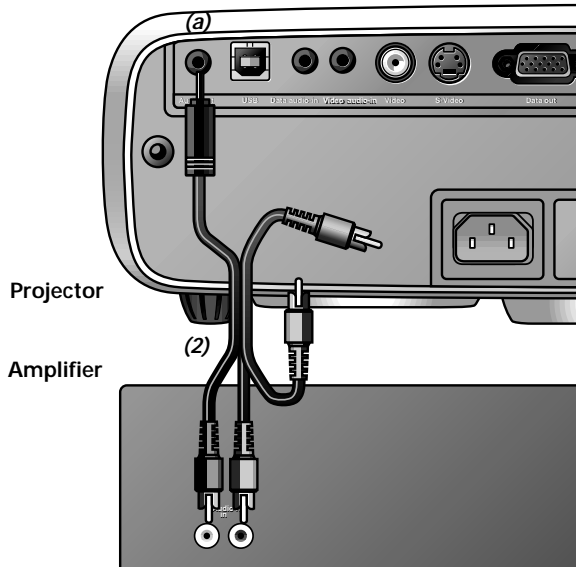


- Connect the Audio in L/R sockets of an amplifier or stereo system to the Audio out socket **(a)** of the projector. For this use audio/video connection cable **(2)** supplied.
You can select fixed ('Line') or variable ('Regulated') volume output in the 'Audio' menu.

Connecting to an external monitor

Note: The characters in brackets **(a)** correspond to characters in **fig. 3** of 'Controls and connections'.

Caution!

Always switch off PC, external monitor and projector before making any connections.

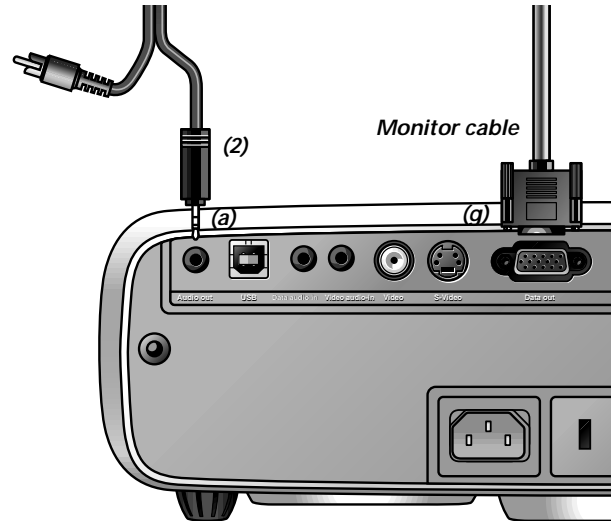

- Connect the Data out terminal **(g)** of the projector to the external monitor and secure the plugs by tightening the thumb screws. For this, a monitor cable needs to be purchased separately.

To obtain the audio signal on the monitor instead of on the projector:

- Connect the Audio in sockets of the monitor to the Audio out socket **(a)** of the projector, using the audio/video connection cable **(2)** supplied.

Notes:

- One external monitor or projector can be connected at a time.
- For further details on the operation with On Screen Displays see chapter '8. Operation'.

General

1. Press the Stand by button to switch on the projector.

- The Standby indicator lights up green and the start up screen appears for several seconds.
- When the average lamplife time has almost expired and less than 100 hours remain, the message 'Warning: lamplife has almost expired' will be displayed on the screen when switching the projector on. For this refer to the section 'Lamp' under 'Maintenance'



2. Select the required source (Data, Video or S-Video) by pressing the Source button.


Note: When only one input source is connected, this source will automatically be selected. When more input sources are connected, the source with the highest priority will be selected (data, video, S-video). This setting can be changed in the 'Settings' menu.

3. Switch on the computer or start video playback.

- A feedback message appears on the screen, indicating the selected source.

Messages - General explanation

Messages are displayed in the centre of the screen. The problem is described in the header of the message display. Suggestion(s) to solve the problem are displayed in the gray part of the message display. These messages cannot be suppressed.

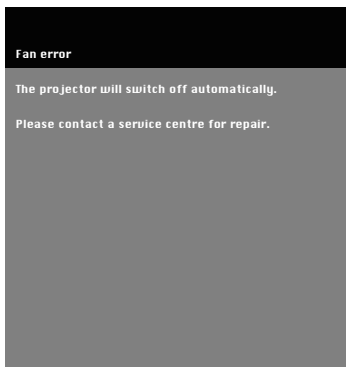

Feedback messages

Feedback messages are displayed in the top right corner of the screen. They are displayed when:


- a signal comes up or goes down,
- when an input source is changed
- when Mute or A/V Mute is activated.
- when the Auto image function is set to On.

These messages will only be displayed when the menu option Feedback is set to 'On' in the Settings menu. All messages will be removed automatically after 4 seconds.


Some examples:



Data selected as source.

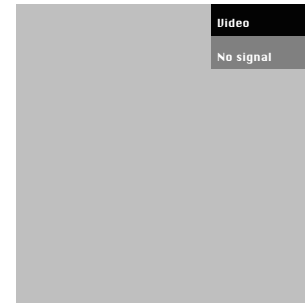

Video selected as source, no input signal.

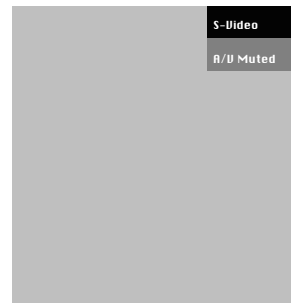

S-Video selected as source. A/V muted.



Video selected as source. A/V muted.


On Screen Display menu - General explanation

All video and data adjustments and settings (except A/V Mute) are done via On Screen Displays and with help of Menu, OK and Cursor Control on the projector or the remote control.

1. Press Menu.

- The menu bar appears on the screen.

The first item is highlighted and its sub menu is shown.

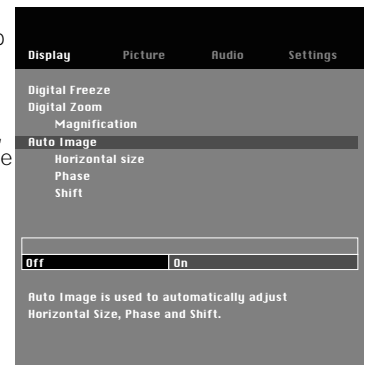


Depending on the selected source (Data, Video or S-Video) some options of the submenu may be greyed out. This indicates that these functions:

- are not available in a certain mode,
- have no function for the selected source.

For example:

- Horizontal size under menu Display when Auto image is switched to ON.
- Hue under menu Picture when signaltype is not NTSC.

- Use Cursor Control left and/or right to move the cursor to any other item in the menu bar.

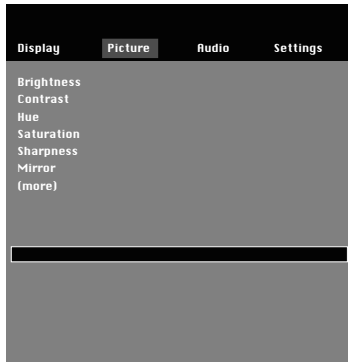

- Select the sub menu item to be adjusted using Cursor Control up and/or down. When more items are available than can be shown in one screen, this will be indicated by 'more' at the bottom of the list. Press OK to move to the next list of items. With 'previous' you can go back to the first list.



- Adjust the selected item in the action window at the bottom of the screen, using Cursor Control left and/or right.
- Select the next item to be adjusted in the sub menu and adjust as described above.
- Press Menu to close the On Screen Display.

Language selection

The projector can display menus in seven different languages.

- Press Menu.
 - The menu bar appears on the screen.
- Use Cursor Control to select Settings in the menu bar.
- Use Cursor Control to select Language from the sub menu.
- Use Cursor Control to select the required language in the action window.
- If required, select the next item to be adjusted or press Menu to exit.

Display and picture control

The projector's picture is set to standard specifications at the factory. However, you can adjust the image to suit your own preferences.

Data only

For data signal input, the following adjustments can be made:

- Auto image**
automatically sizes and positions the image to fit optimally in the screen picture;
- Horizontal size**
adjusts the computer image in a horizontal direction to make the image completely fill the screen;
- Shift**
adjusts the computer image in horizontal and vertical direction to centre it on the screen;
- Phase**
minimises picture imperfections. When connecting the projector to your PC for the first time, be sure to adjust the phase control for optimal readability of the projected text.

Tip for Windows users:

To adjust size and phase correctly:

- Select 'Start' and then 'Shut down' from the Windows Taskbar.
- Adjust the projector's size control, so that no vertical bars are visible.
- Now adjust the projector's phase control for maximum brightness of the projected image.
- Press 'No' in the Windows shutdown screen to cancel the shutdown action.

Data and Video/S-Video

For both data and Video/S-Video signal input, the following adjustments can be made:

- Digital Freeze**
captures a moving picture (still picture);
- Digital Zoom**
enlarges a part of the picture;
- Magnification**
adjusts the zoom factor;
- Brightness**
adjusts brightness of the displayed picture;
- Contrast**
adjusts the overall contrast intensity;
- Sharpness**
controls the contour impression of the picture;
- Colour tracking**
selects between 'Vivid' and 'Natural' representation of colours in the picture. 'Vivid' is automatically set when computer input is used; 'Natural' is automatically set when video input is used.
- Colour Temperature**
adjusts the overall colour impression from warm to cool. The various colors (red, green and blue) can also be adjusted individually.
- Mirror**
mirrors the picture for use of the projector in various positions with respect to the user(s) and the projection screen.

Video/S-Video only

For Video/S-Video signal input, the following adjustments can be made:

- **Hue** (only for NTSC)
adjusts the tint of the projected image;
- **Saturation**
adjusts the colour saturation of the projected image.
- **Picture Format**
selects one of five picture format options:
 - 4:3** Default scaling mode. All inputs are displayed to the full area and resolution of the LCD panel.
 - 16:9** 4:3 signals are scaled to fit into the 16:9 image height. Can be used to restore the original aspect ratio of 16:9 input signals.
 - 16:9 enlarged** 4:3 signals with black bars on top and bottom are enlarged to height-fit to the LCD panel resolution. As a consequence, image information is cropped at the left and right sides of the image.
 - 4:3 in 16:9** 4:3 signals are scaled to fit into 16:9 image heights. Can be used to project a computer input on an installed 16:9 projection screen.
 - 16:9 to 4:3** 4:3 signals with black bars on top and bottom are enlarged to height-fit to the LCD panel resolution but all the image information is displayed. Unlike **16:9 enlarged** mode, no image information is cropped but proportion of the image is distorted.

Note: **A(audio)/V(video)-mute** can only be selected with the **AV mute** button on the projector or on the remote control. **A/V mute** then appears on the screen.

For example:



The following adjustments procedures follow a slightly different sequence of actions, or may need some further explanation.

Digital Zoom

Digital Zoom is used to enlarge a part of the picture.

1. Press Menu.
 - The menu bar will appear. Display is highlighted and its sub menu is shown.
2. Use Cursor Control to move the cursor to Digital Zoom.
3. Select On to switch Digital Zoom on.
 - Press OK to continue, or
 - Press Menu to exit and continue with the previous Zoom settings.
4. Use the zoom target to select centre of the screen area you wish to enlarge.
 - Press OK to confirm.
5. Use the Magnification slider to adjust the Zoom factor.
 - Press OK to confirm and exit the menu.
6. Use Cursor Control to select another section of the enlarged area (Panning).

Horizontal size

The Horizontal size function is used to size a computer image to make it fit the projected picture. When the OSD menu is active and the horizontal size option is selected, the level will be indicated graphically on a linear scale (slider).


Shift

The Shift function adjusts the computer image in horizontal and vertical direction to centre it on the screen. This function is only active when Auto image is set to OFF.

1. Press Menu.
 - The menu bar appears on the screen. Display is highlighted and its sub menu is shown.
2. Use Cursor Control to move the cursor to Shift.
3. Press OK to activate Shift.




4. Use Cursor Control to position the computer image.
5. Press OK to confirm and store the adjustment.
6. If required, select the next item to be adjusted or press MENU to exit.

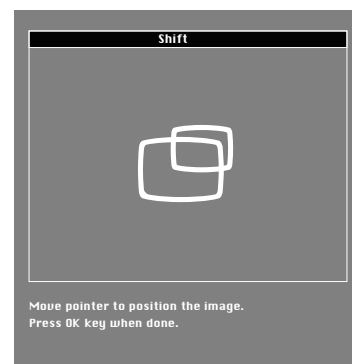**Auto Image**


The Auto Image function automatically sizes and positions the image to fit optimally in the screen picture. In addition it takes care for phase adjustment. It does not affect the selected picture format. When Auto Image is set to ON, the Horizontal size, Shift and Phase options are greyed out.

Mirror


The projector can be used in various positions with respect to the viewers and the projection screen. With the Mirror function the picture can be displayed in a way that is suitable for your specific application.

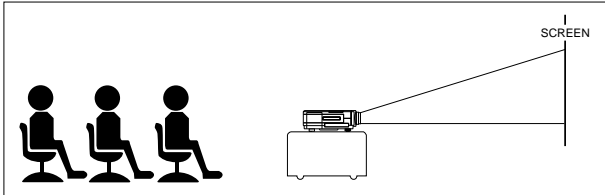


Front projection

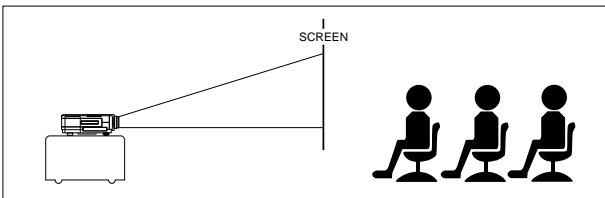

Rear projection

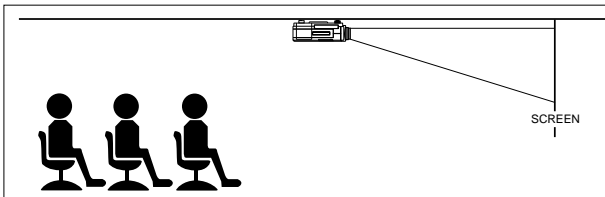

Ceiling front projection

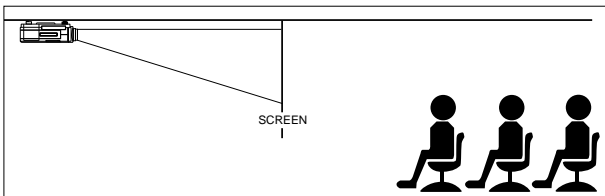

Ceiling rear projection

Audio Control

The projector's sound is set to standard specifications at the factory. However, you can adjust the sound to suit your own preferences by using the Audio control feature.

The following adjustments can be made:

- **Volume** – adjusts the sound level;
- **Bass** – adjusts the bass tones;
- **Treble** – adjusts the high tones;
- **Mute** – mutes the sound of the projector (or an externally connected loudspeaker);
- **Audio out** – switches between fixed and variable volume on the audio output (Audio out).

1. Select the required input (Data, Video or S-Video).
2. Press Menu.
 - The menu bar appears on the screen.
3. Use Cursor Control to select Audio in the menu bar.
4. Use Cursor Control to select the item to be adjusted.
5. Use Cursor Control to make the required adjustment in the action window.
6. If required, select the next item to be adjusted or press Menu to exit.

Note: The volume can also be adjusted with the – Volume + keys on the remote control.

Caution!

Always reduce/check the volume setting of connected amplifiers before switching off (A/V) mute, to prevent damage to speakers.

Other Settings

The projector is equipped with the following functions to optimize its use and handling:

Start-up screen

This function allows you to display or suppress the default start-up screen upon the projector's start up and to select and store a start up screen of your own choice.

1. Press Menu.
 - The menu bar appears on the screen.
2. Use Cursor Control to move the cursor to Settings.
3. Select Start-up screen by using Cursor Control.
4. Select:
 - Default* - to display the default start-up screen;
 - Black* - to suppress the default screen;
 - Custom* - to display a start-up screen of your own choice (if loaded);
 - Load..* - to load the currently shown image and store it as start-up screen.
5. Press Menu to close the On Screen Display.

System information

The System Information sub menu contains an overview of the most relevant projector settings, including information on the hardware and software configuration.

1. Press Menu.
 - The menu bar appears on the screen.
2. Use Cursor Control to move the cursor to Settings.
3. Use Cursor Control to move the cursor to System Information and press OK.
 - The System Information overview appears on the screen.
4. Press OK to return to the menu or press Menu to close the On Screen Display.

Factory reset

This function is used to reset all user settings to the default factory settings.

1. Press Menu.
 - The menu bar appears on the screen.
2. Use Cursor Control to move the cursor to Settings.
3. Select Factory reset by using Cursor Control.
4. Press OK for 3 seconds to reset all user settings.
5. Select the next item to be adjusted in the sub menu or press Menu to close the On Screen Display.

Auto Standby

This function allows you to switch off Auto Standby mode or to select the delay time after which the projector automatically switches to Standby.

Auto Source

This function allows you to switch automatic source selection on or off.

Keystone correction

Adjusts the shape of the displayed picture, when projecting upwards or downwards.

Lamp counter

Shows the operating time of the lamp, which can be reset after a new lamp has been installed. This menu item also shows the total number of hours that the projector has been used, which cannot be reset.

Data input

Selects between Computer and Component video input via the Data in connector.

Feedback

This function allows you to suppress OSD messages. Warning or error messages however are never suppressed.

Key lock

Key lock is used to de-activate all remote and local controls. To disable the keylock function keep the OK button pressed for 10 seconds.

9. Maintenance

NOTICE:

The product you have purchased contains the latest in high-quality optical components. Like all products equipped with an optical function - like e.g. camera lenses, slide projectors and binoculars - these components are sensitive to polluted environments. Small contaminations like dust and smoke particles can easily attach to the surfaces of the optical components, degrading the performance and reducing the lifetime of the product.

Cleaning

Caution!

Switch off and disconnect the projector before cleaning.

1. When the cabinet is dusty, clean it by gently wiping with a soft cloth.
2. A chamois leather slightly moistened with water is sufficient for cleaning the housing.
3. Do not use cleaning agents as they may harm the housing.

Always keep the lens clean


1. When the lens is dirty or dusty, first blow the dust off and then gently wipe with a soft brush or lens cleaning paper. Never touch the lens with your fingers.
2. The lens is likely to become mouldy if left dirty.

Cleaning the dust filter


Important!

Make sure to clean the dust filter regularly.


1. Press the Stand by On button to switch off the projector.
 - The standby indicator lights up red.
2. Wait until the cooling fan has stopped (about 3 minutes) and disconnect the mains lead and all other cables.
3. Turn the projector over. *Never place the projector on the side where the connections are located!*
4. Press tab A and lift up the cover.

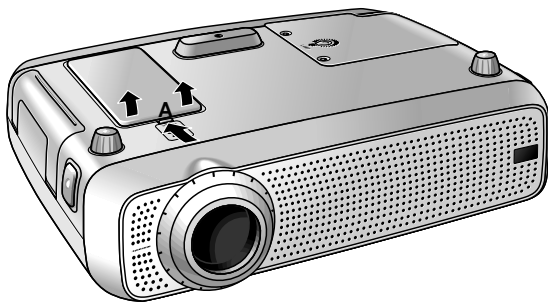


5. Turn the cover upside down. The filter is located on the cover underside.
6. Carefully remove the filter from the cover.

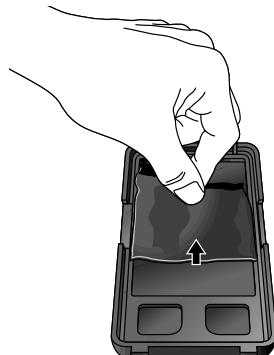

7. While firmly holding the filter, gently remove any accumulated dust with a vacuum cleaner.
8. Replace the filter. Firmly press the filter edges in place. Check if the filter is firmly tightened by turning the cover upside down.

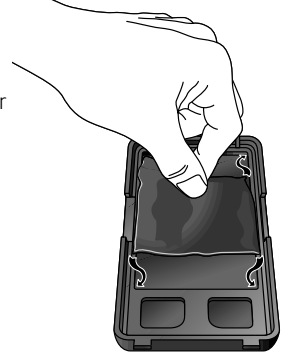

9. Replace the cover.

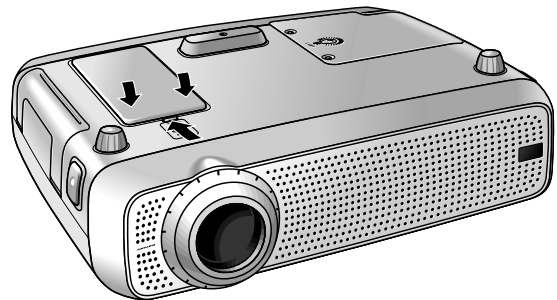

Notes:


- We advise you to clean the filter every 100 hours.
- Operating the projector without filter or with a torn or damaged filter may seriously damage the projector.
- When the filter is damaged replace it with a filter of the same type FL7200VP/M1M.
- The projector power cannot be switched on again unless the filter holder is installed correctly.

9. Maintenance

English


Lamp

When operation time reaches the last 100 hours of the average lamp life, the message 'Warning: lamp life has almost expired' will be displayed on the screen, each time the projector is switched on. The lamp indicator lights up orange.

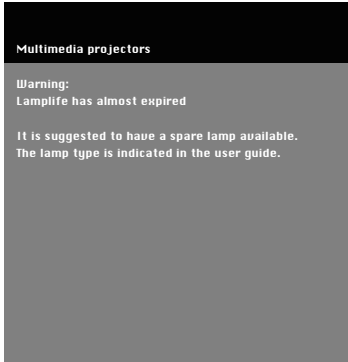


The lamp life remaining can be checked using the OSD menu.

1. Press the Menu.
 - The menu bar appears on the screen.
2. Use Cursor Control to move the cursor to Settings.
3. Use Cursor Control to select Lamp counter.
 - The remaining lamp life hours are displayed in the action window at the bottom of the screen.

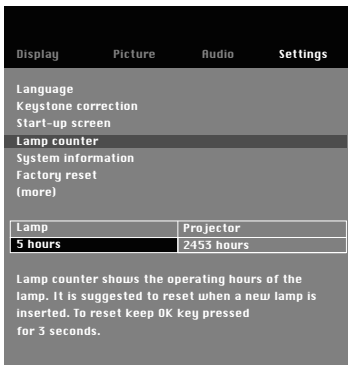


- When the lamp life has expired, the lamp indicator lights up red and the message 'Warning: lamp life has expired' is displayed on the screen.

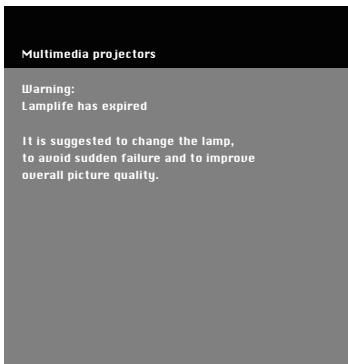


Lamp replacement

Caution!

- For cooling purposes the lamp is open. When removing the lamp do not tilt. If the inner tube is broken glass particles may fall out.
 - Be very careful. The lamp and lampholder may still be too hot to touch.
 - Keep lamp holder opening to your right. Do not touch lamp or point lamp holder opening at anyone.
 - A high-pressure lamp may break if handled improperly.
1. Press the Stand by button to switch off the projector.
 - The standby indicator lights up red.
 2. Wait 5 minutes for the lamp to cool down and the cooling fan to stop and disconnect the mains lead and all other cables.
 3. Turn the projector over. *Never place the projector on the side where the connections are located!*
 4. Unscrew the screws at the bottom of the cover and remove the cover.

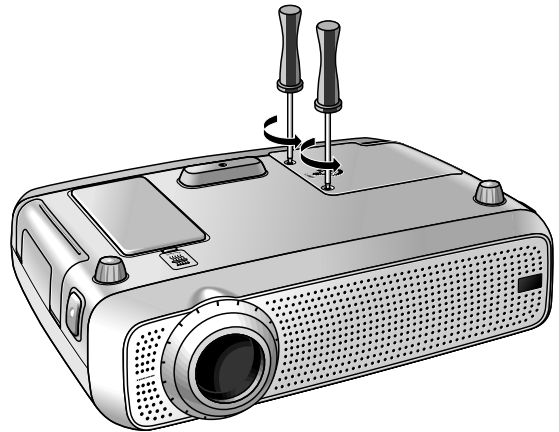


5. Read the caution and warning labels on the lamp cover.
6. Unscrew the lamp holder.

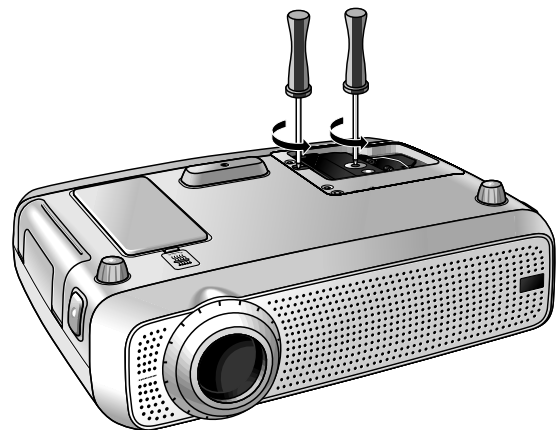


9. Maintenance

7. Grasp the lamp holder handle and carefully pull the lamp holder out of the projector.

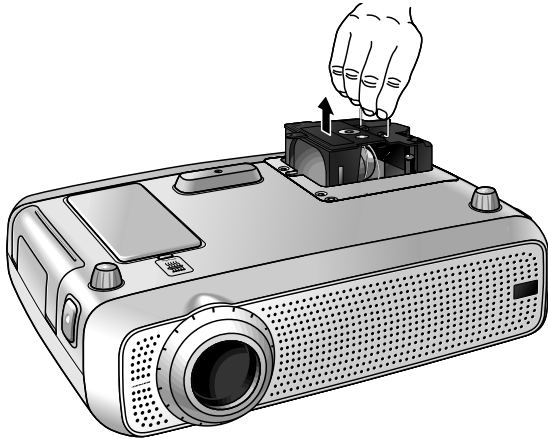

8. Carefully remove the new lamp housing from its package. Do not touch lamp or point lamp housing opening at anyone. Do not drop, as the impact may cause the lamp to break.
9. Place the lamp holder in the guiding slots and insert into the lamp compartment.

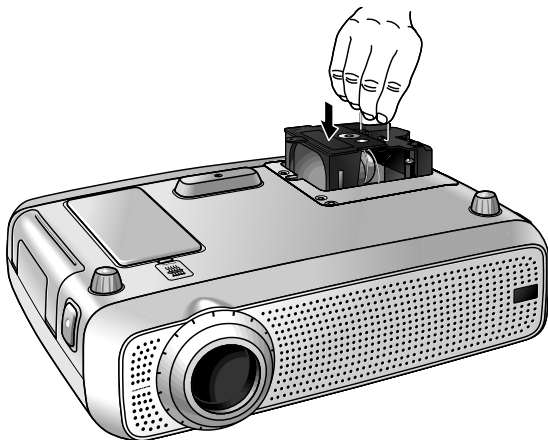


10. Tighten the screws.
11. Replace the cover and tighten the screws.
12. Plug the projector back in by inserting the mains lead in the Mains socket.
13. Press the Stand by On button to switch on the projector.
14. Reset the lamp life time (see 'Resetting the lamp life time').
15. Properly dispose of the old lamp.

Notes:


- When replacing the lamp, always use the same type of lamp LU7200VP/M1M.
- Please dispose of lamp in special chemical disposal bins.

Resetting the lamp life time

1. Press Menu.
 - The menu bar appears on the screen.
2. Use cursor control to select Settings in the menu bar.

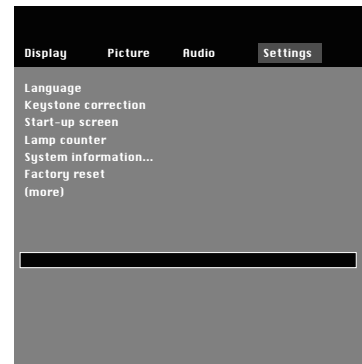

3. Use cursor control to select Lamp counter in the sub menu.

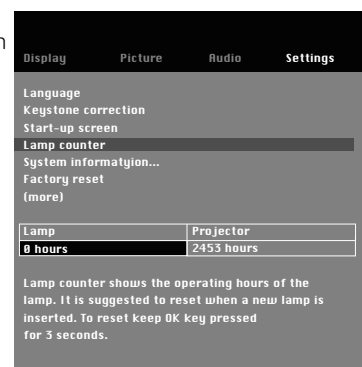

4. Press OK for 3 seconds to reset the lamp counter.
5. If required, select another item you wish to adjust or press Menu to exit.

10. Troubleshooting

If a fault occurs, first check the points listed below before taking the projector for repair. If you are unable to remedy a problem by following these hints, consult your dealer or service organisation.

Warning:

Under no circumstances should you try to repair the projector yourself as this could invalidate the guarantee.

PROBLEM

- POSSIBLE CAUSE
- SOLUTION

Image is not displayed

- Mains lead is not correctly connected.
- Correctly connect mains lead.

- The filter holder is not installed correctly or is damaged.
- Install the filter holder correctly (see 'Cleaning the dust filter' under 'Maintenance').

- Lamp holder cover is not closed correctly or the lamp holder is damaged.
- Close the cover correctly (see 'Lamp replacement' under 'Maintenance').

- Signal cable not correctly connected.
- Connect signal cable correctly.

- The projector is in Off position.
- Press Stand by to switch on the projector.

Poor colour

- Select the correct data input (Computer or Component video) in the Settings menu.
- Adjust brightness, contrast, saturation or hue (see 'Display and picture control' under 'Operation').

Image is blurred

- Image is not focused.
- Adjust focus ring.

- Distance between projector and screen is not correct.
- Adjust the distance between the projector and the screen.

- Signal cable is not correctly connected.
- Connect signal cable correctly.

Image does not match up with the projected screen

- Shift and/or Horizontal size are not adjusted correctly.
- Adjust Shift or Horizontal size (See 'Display and Picture control', sections 'Data only' and 'Data and Video/S-Video').
- Activate the auto-image function via the On Screen menu.

Picture rolls

- Signal cable is not correctly connected.
- Connect signal cable correctly.

No sound

- Audio cable is not correctly connected.
- Connect audio cable correctly.

- Volume is not adjusted properly.
- Adjust volume.

- A/V-mute is active.
- Cancel A/V-mute.

Caution!

Always reduce/check the volume setting of connected amplifiers before switching off A/V mute, to prevent damage to speakers.

The projector does not react to commands from the remote control

- Distance is too great.
- Reduce distance.

- Batteries are exhausted.
- Replace batteries (see 'Inserting the batteries in the remote control').

- IR sensor is obstructed.
- Remove obstacle.

Note: You can check if the projector receives the signal from the remote control: the ring around the Standby button will indicate this by fast flashing.

INDICATORS

Lamp indicator

- **green:** normal lamp condition.
- **orange:** lamp life has almost expired (less than 100 hours to go).
 - See warning messages on the start up screen for details.
- **red:** lamp life has expired.
 - Replace lamp. See 'Maintenance'.
- **red (fast blinking):** lamp start has failed.
 - Disconnect projector from the mains. Reconnect and restart. If this does not resolve the problem, replace the lamp. See 'Maintenance'.
- **slow blinking (green, red or orange):** lamp is starting up or cooling down.

Temperature indicator

- **red:** temperature error.
 - The projector will go into Standby mode. Allow the projector to cool down; this may take up to 30 minutes. When the LED goes out press any button to activate the projector again.
- **fast blinking red:** fan error.
 - The projector will go into Standby mode. Make sure the filter cover is closed properly; clean air inlets or dust filter and allow the projector to cool down; this may take up to 30 minutes. When the LED stops flashing press any button to activate the projector again.

Standby indicator (ring around Standby button).

- **red:** standby mode or projector cooling down.
- **green:** operation mode or projector warming up
- **fast blinking (red or green):** remote control signal received.
- **slow blinking (green):** waiting on retry to start the lamp.
 - Do not switch the projector off; it will restart the lamp automatically within a few seconds.