

marantz®

Model ZC4001 User Guide

Audio Client

ENGLISH

WARRANTY

For warranty information, contact your local Marantz distributor.

RETAIN YOUR PURCHASE RECEIPT

Your purchase receipt is your permanent record of a valuable purchase. It should be kept in a safe place to be referred to as necessary for insurance purposes or when corresponding with Marantz.

IMPORTANT

When seeking warranty service, it is the responsibility of the consumer to establish proof and date of purchase. Your purchase receipt or invoice is adequate for such proof.

FOR U.K. ONLY

This undertaking is in addition to a consumer's statutory rights and does not affect those rights in any way.

FRANÇAIS

GARANTIE

Pour des informations sur la garantie, contacter le distributeur local Marantz.

CONSERVER L'ATTESTATION D'ACHAT

L'attestation d'achat est la preuve permanente d'un achat de valeur. La conserver en lieu sur pour s'y reporter aux fins d'obtention d'une couverture d'assurance ou dans le cadre de correspondances avec Marantz.

IMPORTANT

Pour l'obtention d'un service couvert par la garantie, il incombe au client d'établir la preuve de l'achat et d'en corroborer la date. Le reçu ou la facture constituent des preuves suffisantes.

DEUTSCH

GARANTIE

Bei Garantiefragen wenden Sie sich bitte an Ihren Marantz-Händler.

HEBEN SIE IHRE QUITTING GUT AUF

Die Quittung dient Ihnen als bleibende Unterlage für Ihren wertvollen Einkauf. Das Aufbewahren der Quittung ist wichtig, da die darin enthaltenen Angaben für Versicherungswecke oder bei Korrespondenz mit Marantz angeführt werden müssen.

WICHTIG!

Bei Garantiefragen muß der Kunde eine Kaufunterlage mit Kaufdatum vorlegen. Ihren Quittung oder Rechnung ist als Unterlage ausreichend.

NEDERLANDS

GARANTIE

Voor inlichtingen omtrent garantie dient u zich tot uw plaatselijke Marantz.

UW KWITANTIE, KASSABON E.D. BEWAREN

Uw kwitantie, kassabon e.d. vormen uw bewijs van aankoop van een waardevol artikel en dienen op een veilige plaats bewaard te worden voor evt, verwijzing bijv, in verbend met verzekering of bij correspondentie met Marantz.

BELANGRIJK

Bij een evt, beroep op de garantie is het de verantwoordelijkheid van de consument een gedateerd bewijs van aankoop te tonen. Uw kassabon of factuur zijn voldoende bewijs.

ESPAÑOL

GARANTIA

Para obtener información acerca de la garantía póngase en contacto con su distribuidor Marantz.

GUARDE SU RECIBO DE COMPRA

Su recibo de compra es su prueba permanente de haber adquirido un aparato de valor. Este recibo deberá guardarlo en un lugar seguro y utilizarlo como referencia cuando tenga que hacer uso del seguro o se ponga en contacto con Marantz.

IMPORTANTE

Cuando solicite el servicio otorgado por la garantía el usuario tiene la responsabilidad de demostrar cuándo efectuó la compra. En este caso, su recibo de compra será la prueba apropiada.

ITALIANO

GARANZIA

L'apparecchio è coperto da una garanzia di buon funzionamento della durata di un anno, o del periodo previsto dalla legge, a partire dalla data di acquisto comprovata da un documento attestante il nominativo del Rivenditore e la data di vendita. La garanzia sarà prestata con la sostituzione o la riparazione gratuita delle parti difettose.

Non sono coperti da garanzia difetti derivanti da uso improprio, errata installazione, manutenzione effettuata da personale non autorizzato o, comunque, da circostanze che non possano riferirsi a difetti di funzionamento dell'apparecchio. Sono inoltre esclusi dalla garanzia gli interventi inerenti l'installazione e l'allacciamento agli impianti di alimentazione.

Gli apparecchi verranno riparati presso i nostri Centri di Assistenza Autorizzati. Le spese ed i rischi di trasporto sono a carico del cliente.

La casa costruttrice declina ogni responsabilità per danni diretti o indiretti provocati dalla inosservanza delle prescrizioni di installazione, uso e manutenzione dettagliate nel presente manuale o per guasti dovuti ad uso continuato a fini professionali.

SVENSKA

GARANTI

För information om garantin, kontakta Marantz lokalagent.

SPAR KVITTOT

Kvittot är ett inköpsbevis på en värdefull vara. Det skall förvaras säkert och hänvisas till vid försäkringsfall eller vidkorrespondens mod Marantz.

VIKTIGT

Fö att garantin skall gälla är det kundens sak att framställa bevis och datum om köpet. Kvitto eller faktura är tillräckligt bevis fö detta.

CE MARKING

English

The ZC4001 is in conformity with the EMC directive and low-voltage directive.

Français

Le ZC4001 est conforme à la directive EMC et à la directive sur les basses tensions.

Deutsch

Das Modell ZC4001 entspricht den EMC-Richtlinien und den Richtlinien für Niederspannungsgeräte.

Nederlands

De ZC4001 voldoet aan de EMC eisen en de vereisten voor laag-voltage.

Español

El ZC4001 está de acuerdo con las normas EMC y las relacionadas con baja tensión.

Italiano

Il ZC4001 è conforme alle direttive CEE ed a quelle per i bassi voltaggi.

Svenska

ZC4001 är tillverkad i enlighet med EMC direktiven och direktiven för lågvoltsutrustning.

English

WARNINGS

- Do not expose the equipment to rain or moisture.
- Do not remove the cover from the equipment.
- Do not insert anything into the equipment through the ventilation holes.
- Do not handle the mains cord with wet hands.
- Do not cover the ventilation with any items such as tablecloths, newspapers, curtains, etc.
- No naked flame sources, such as lighted candles, should be placed on the equipment.
- When disposing of used batteries, please comply with governmental regulations or environmental public instruction's rules that apply in your country or area.
- Make a space of about 0.2 meter around the unit.
- No objects filled with liquids, such as vases, shall be placed on the equipment.
- When the switch is in the OFF position, the equipment is not completely switched off from MAINS.
- The equipment shall be installed near the power supply so that the power supply is easily accessible.

Français

AVERTISSEMENTS

- Ne pas exposer l'appareil à la pluie ni à l'humidité.
- Ne pas essayer de retirer le boîtier de l'appareil.
- Ne rien insérer dans l'appareil par les orifices de ventilation.
- Ne pas manipuler le cordon d'alimentation avec les mains mouillées.
- Ne pas recouvrir les ouïes de ventilation avec un objet quelconque comme une nappe, un journal, un rideau, etc.
- Ne placer aucune source de flamme nue, comme une bougie allumée, sur l'appareil.
- Pour mettre au rebut les piles usées, respecter les lois gouvernementales ou les règlements officiels concernant l'environnement qui s'appliquent à votre pays ou région.
- Veiller à ce qu'aucun objet ne soit à moins de 0,2 mètre des côtés de l'appareil.
- Aucun objet rempli de liquide, un vase par exemple, ne doit être placé sur l'appareil.
- Lorsque l'interrupteur est sur la position OFF, l'appareil n'est pas complètement déconnecté du SECTEUR (MAINS).
- L'appareil sera installé près de la source d'alimentation, de sorte que cette dernière soit facilement accessible.

Deutsch

WARNHINWEISE

- Das Gerät nicht Regen oder Feuchtigkeit aussetzen.
- Die Abdeckung nicht vom Gerät abnehmen.
- Keine Gegenstände durch die Belüftungsschlitze stecken.
- Das Netzkabel nicht mit feuchten oder nassen Händen anfassen.
- Decken Sie die Lüftungsöffnungen nicht mit einem Tischtuch, einer Zeitung, einem Vorhang usw. ab.
- Es dürfen keine Gegenstände mit offener Flamme, wie etwa brennende Kerzen, auf dem Gerät aufgestellt werden.
- Beachten Sie bei der Entsorgung der verbrauchten Batterien alle geltenden lokalen und überregionalen Regelungen.
- Auf allen Geräteseiten muß ein Zwischenraum von ungefähr 0,2 meter vorhanden sein.
- Auf das Gerät dürfen keine mit Flüssigkeiten gefüllte Behälter, wie etwa eine Vase, gestellt werden.
- Wenn der Schalter ausgeschaltet ist (OFF-Position), ist das Gerät nicht vollständig vom Stromnetz (MAINS) abgetrennt.
- Das Gerät sollte in der Nähe einer Netzsteckdose aufgestellt werden, damit es leicht an das Stromnetz angeschlossen werden kann.

Nederlands

WAARSCHUWINGEN

- Stel het apparaat niet bloot aan regen of vocht.
- Verwijder de afdekplaat van het apparaat niet.
- Duw niets door de ventilatieopeningen in het apparaat.
- Raak het netsnoer niet met natte handen aan.
- Bedek de ventilatieopeningen niet met enige voorwerpen, zoals tafelkleden, kranten, gordijnen, enz.
- Plaats geen brandende voorwerpen, zoals kaarsen, op het apparaat.
- Volg bij het weggooien van verbruikte batterijen de overheidswetgeving of milieuvorschriften op die van kracht zijn in het land of de regio waarin u zich bevindt.
- Zorg dat er 0,2 meter vrije ruimte rond het toestel is.
- Plaats geen voorwerpen met een vloeistof erin, zoals een bloemenvaas, op het apparaat.
- Als de schakelaar op OFF staat, is het apparaat niet volledig losgekoppeld van de netspanning (MAINS).
- De apparatuur wordt in de buurt van het stopcontact geïnstalleerd, zodat dit altijd gemakkelijk toegankelijk is.

Español

ADVERTENCIAS

- No exponga el equipo a la lluvia ni a la humedad.
- No extraiga la tapa del equipo.
- No introduzca nada en el interior del equipo a través de los orificios de ventilación.
- No maneje el cable de alimentación con las manos mojadas.
- No cubra la ventilación con objetos como manteles, periódicos, cortinas, etc.
- No deben colocarse sobre el equipo elementos con fuego, por ejemplo velas encendidas.
- Cuando se eliminen baterías usadas, deben cumplirse las reglamentaciones oficiales o las normas de protección medioambiental aplicables en su país o en su zona.
- Deje un espacio de unos 0,2 metro alrededor de la unidad.
- No se deben colocar sobre el aparato recipientes que contengan líquidos, como por ejemplo jarrones.
- Cuando el interruptor está en la posición OFF, el equipo no está completamente desconectado de la alimentación MAINS.
- El equipo se instalará cerca de la fuente de alimentación de manera que resulte fácil acceder a ella.

Italiano

AVVERTENZE

- Non esporre l'apparecchio alla pioggia o all'umidità.
- Non rimuovere il coperchio dell'apparecchio.
- Non introdurre oggetti all'interno dell'apparecchio attraverso i fori di ventilazione.
- Non toccare il cavo di alimentazione con le mani bagnate.
- Non coprire le fessure di ventilazione con tovaglie, giornali, tende od oggetti analoghi.
- Non posare sull'apparecchio sorgenti di fiamme scoperte quali candele accese.
- Smaltire le pile usate in conformità alle norme governative o disposizioni ambientali vigenti nel proprio paese o zona.
- Lasciare 0,2 metro liberi tutto intorno l'unità.
- Non mettere sull'apparecchiatura alcun contenitore di liquido, come ad esempio dei vasi.
- Quando l'interruttore è nella posizione OFF, l'apparecchiatura non è completamente scollegata da MAINS.
- L'apparecchio va installato in prossimità della fonte di alimentazione, in modo che quest'ultima sia facilmente accessibile.

Svenska

VARNINGAR

- Utsätt inte utrustningen för regn eller fukt.
- Ta inte bort utrustningens hölje.
- För inte in föremål i utrustningen genom ventilationshålen.
- Hantera inte nätsladden med våta händer.
- Täck inte för ventilationsöppningarna med några föremål som till exempel bordsdukar, dagstidningar, gardiner e.d.
- Inga föremål med öppen låga, som till exempel tända stearinljus, bör placeras på utrustningen.
- Följ de lagar och miljöskyddsråd som gäller i det land eller område där du bor när du gör dig av med batterier.
- Se till att det finns omkring 0,2 meter fri plats runt omkring enheten.
- Inga objekt som är fyllda med någon vätska, till exempel blomstervaser, bör placeras på apparaten.
- Även om strömbrytaren står i det avstängda läget OFF, så är utrustningen inte helt bortkopplad från det elektriska nätet (MAINS).
- Utrustningen ska vara installerad nära strömuttaget så att strömförsörjningen är lätt att tillgå.

TABLE OF CONTENTS

INTRODUCTION..... 1

PRECAUTIONS 1

DESCRIPTION..... 1

FEATURES 2

FRONT PANEL 3

 FL DISPLAY AND INDICATOR 3

TOP PANEL 3

REAR PANEL 4

REMOTE CONTROL OPERATION 4

CONNECTIONS..... 5

SETUP 6

 PLC SETTING 6

 SLEEP TIMER SETTING 7

 BASS BOOST SETTING 7

 SOUND EFFECT SETTING 7

 DISPLAY DIMMER SETTING 7

 CLOCK SETTING 8

 STANDBY MODE SETTING 8

BASIC OPERATION 9

TROUBLESHOOTING..... 10

TECHNICAL SPECIFICATIONS 10

DIMENSIONS 10

FOREWORD

This section must be read before any connection is made to the mains supply.

EQUIPMENT MAINS WORKING SETTING

Your Marantz product has been prepared to comply with the household power and safety requirements that exist in your area. ZC4001 can be powered by 230V AC only.

COPYRIGHT

 
Recording and playback of any material may require consent. For further information refer to the following:

- Copyright Act 1956
- Dramatic and Musical Performers Act 1958
- Performers Protection Acts 1963 and 1972
- Any subsequent statutory enactments and orders

CAUTIONS ON INSTALLATION

For heat dispersal, leave at least 20 cm/8 inch of space between the top, back and sides of this unit and the wall or other components.

- Do not obstruct the ventilation holes.

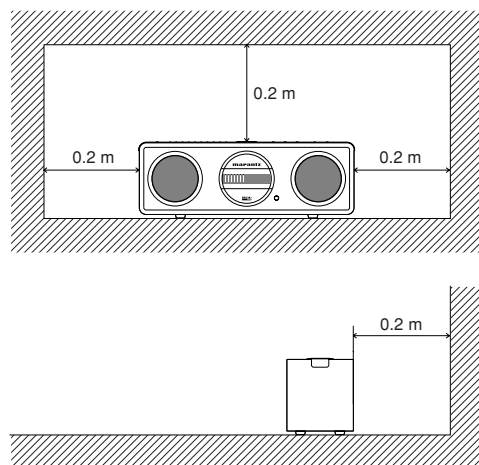

INTRODUCTION

Thank you for purchasing the Marantz ZC4001 Audio Client.

This remarkable component has been engineered to provide you with many years of home theater enjoyment. Please take a few minutes to read this manual thoroughly before you connect and operate the ZC4001.

As there are a number of connection and configuration options, you are encouraged to discuss your own particular home theater setup with your Marantz A/V specialist dealer.

A NOTE ABOUT RECYCLING



This product's packaging materials are recyclable and can be reused. This product and the accessories packed together are the applicable product to the WEEE directive except batteries.

Please dispose of any materials in accordance with your local recycling regulations.

When discarding the unit, comply with your local rules or regulations.

Batteries should never be thrown away or incinerated but disposed of in accordance with your local regulations concerning chemical wastes.

DESCRIPTION



SRS WOW Audio Effect creates a panoramic stereo audio image by producing deep and rich bass tones and clear treble tones, enabling you to enjoy powerful sound.

WOW, SRS and (●) symbol are trademarks of SRS Labs, Inc. WOW technology is incorporated under license from SRS Labs, Inc.

FEATURES

 
By simply plugging the power cables of the ZC4001 and ZR6001 into ordinary home electrical outlets, the ZR6001 sends audio sources over your home electrical line for playback by the ZC4001.

PLC (POWER LINE COMMUNICATION)


The ZR6001* converts analog audio signals into noncompressed linear PCM digital signals, modulates them into high frequency signals, and sends them over power lines.

The ZC4001 demodulates the sent signals and converts them back to analog signals.

* If the condition of the power line degenerates because of the effects of noise from other devices or for other reasons, the ZR6001 uses an audio format of different sampling rate and data bit length.

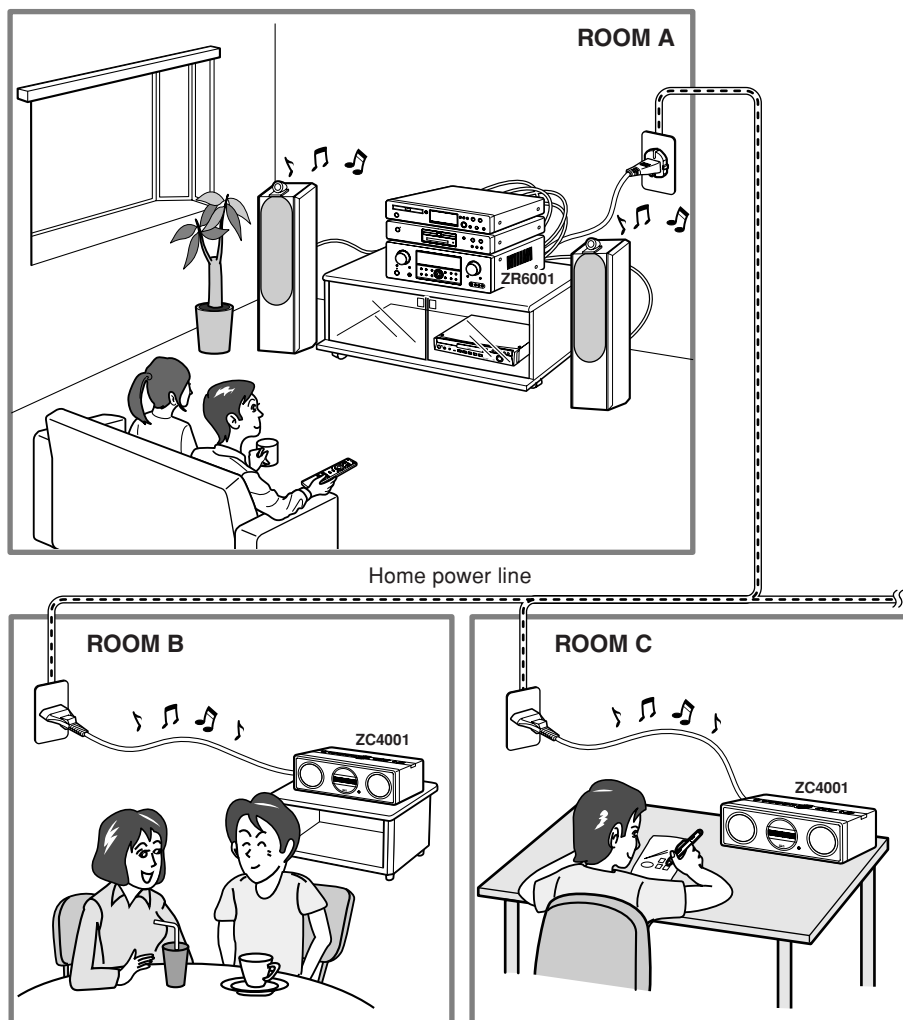

FRONT PANEL

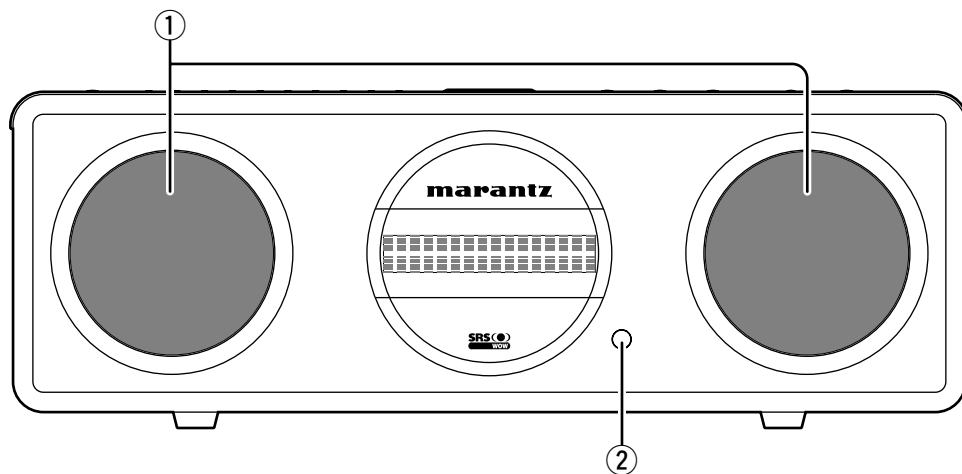 


① SPEAKERS

② INFRARED receiver window

This window receives infrared signals for the remote control unit.

 FL DISPLAY AND INDICATOR

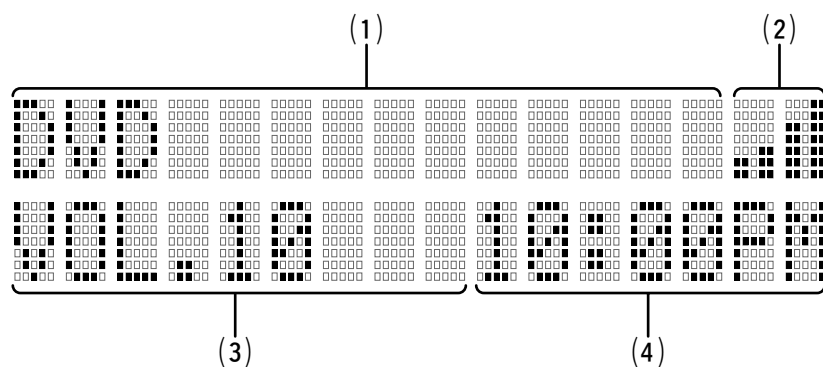

(1) Function display area

This area displays the input source.

(3) Volume/ Text display area

This area displays the volume and other text.

 
(2) PLC Status display area

This area displays the PLC reception strength.

(4) Clock display area

This area displays the time.

TOP PANEL

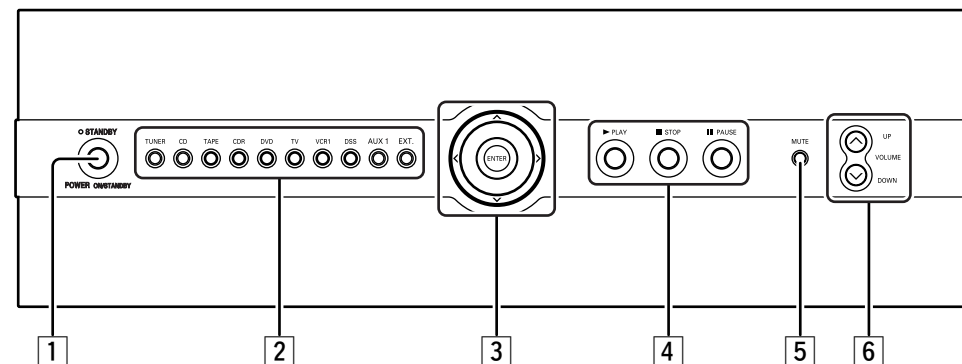

① POWER button and STANDBY indicator

When this button pressed once, the unit turns ON and the display illuminates. When pressed again, the unit turns OFF and the STANDBY indicator will be illuminated.

④ CONTROL buttons

These buttons are used when operating the PLAY, STOP, PAUSE, and other commands of a source.

② SOURCE buttons

These buttons are used to switch the source of ZR6001.

⑤ MUTE button

Press this button to mute the output to the speakers. Press it again to return the previous volume level.

* When the EXT. button is pressed, the source switches to the EXT. INPUT jack on the rear panel.

 
③ Cursor (<, >, ^, v)/ENTER buttons

These buttons are used to operate the menu system and source units.

⑥ VOLUME UP(^)/DOWN(v) buttons

This button is volume control of the ZC4001.

REAR PANEL

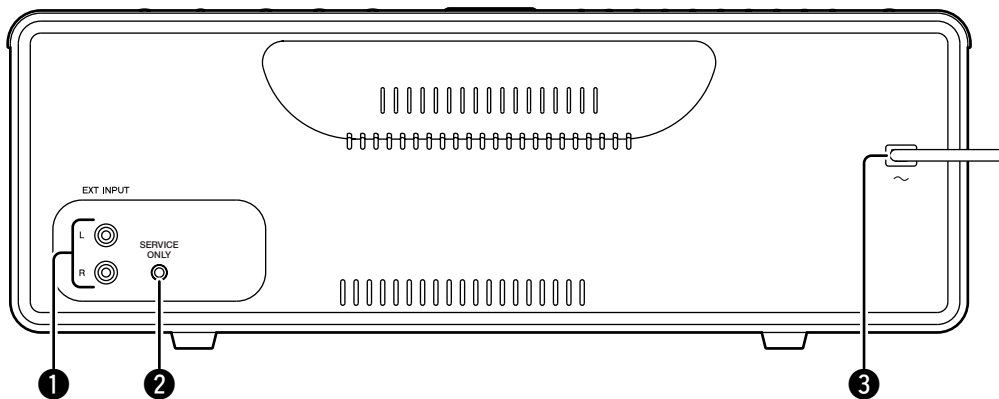

① EXT INPUT

This is the analog audio input. The audio inputs require RCA-type connectors.

② SERVICE ONLY

This is a servicing port. Do not connect anything to it.

③ AC Power cable

 
Connect the power outlet on the wall.

REMOTE CONTROL OPERATION

The ZC4001 does not come with a remote controller.

However, it does have an infrared sensor that functions as a remote control signal receptor, and therefore it can be operated with the system remote controller (RC5500SR, etc.) of other Marantz products.

Remote-controllable range

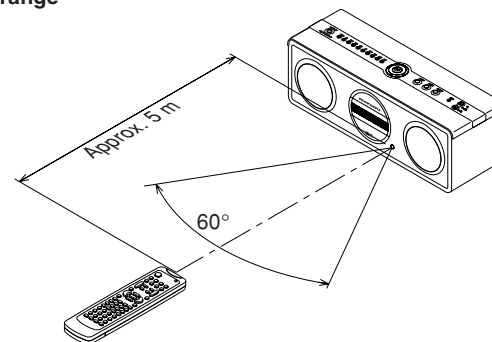

The distance between the transmitter of the remote control unit and the infrared sensor of the ZC4001 should be less than about 16.4 ft (5meters).

If the transmitter is pointed away from the infrared sensor or if there is an obstacle between them, remote control may not be possible.

 
CONNECTIONS

CONNECTING AUDIO COMPONENTS

There is one Audio EXT INPUT jack on the rear panel. You can use this jack to input analog audio signal from CD, TAPE DECK, or other analog source component.

CONNECTING AC POWER CABLE

Connect the AC power cable of the ZC4001 to a wall electrical outlet. Also connect the AC power cable of the ZR6001 to a wall electrical outlet.

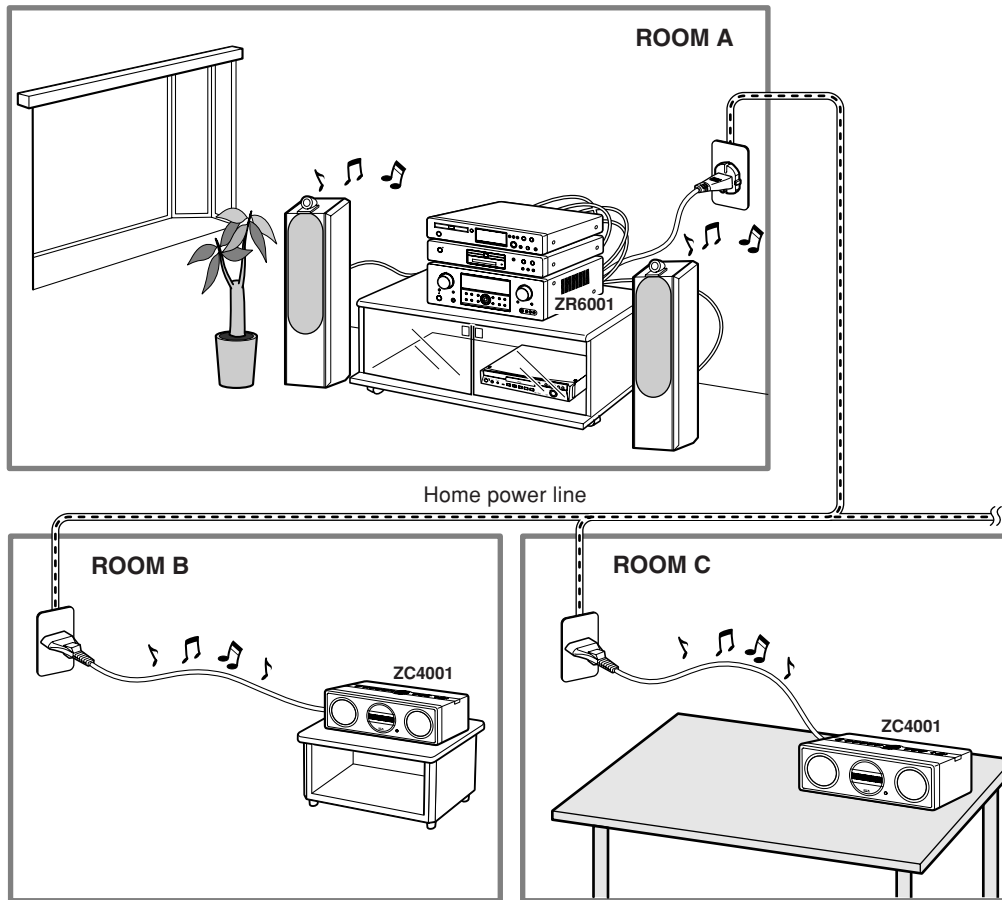


Up to four ZC4001 units may be connected to the same system at one time.


Notes:

- The ZC4001 and ZR6001 send audio data over power lines. Therefore, if the condition of the power line degenerates seriously because of the effects of noise from other devices or for other reasons, audio data may not be received or may skip.
- If the distance of the power line between the ZC4001 and ZR6001 is very long, audio data may not be received or may skip.
- At the time of purchase, all ZC4001 and ZR6001 are set to the same Group ID. If used with this same Group ID, you risk having your music listened into by others. Therefore, set the Group ID as explained herein.
- If the following trouble is experienced, block PLC signals from other sources using a commercially available power filter, etc.

 When a ZC4001 and ZR6001 are connected over PLC, another ZR6001 cannot be added to the same power line and connected over PLC. In this case, PLC signals are not sent.

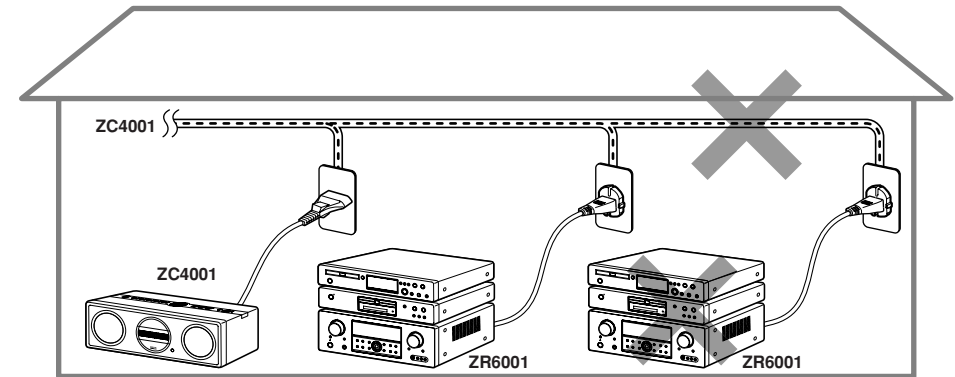

 If a ZR6001 and ZC4001 are connected over PLC in a nearby apartment unit for example, and there is only a short distance between your apartment and your neighbor's, the PLC signals from your neighbor's apartment can travel over power lines to your place, mix with your system, and prevent audio output.

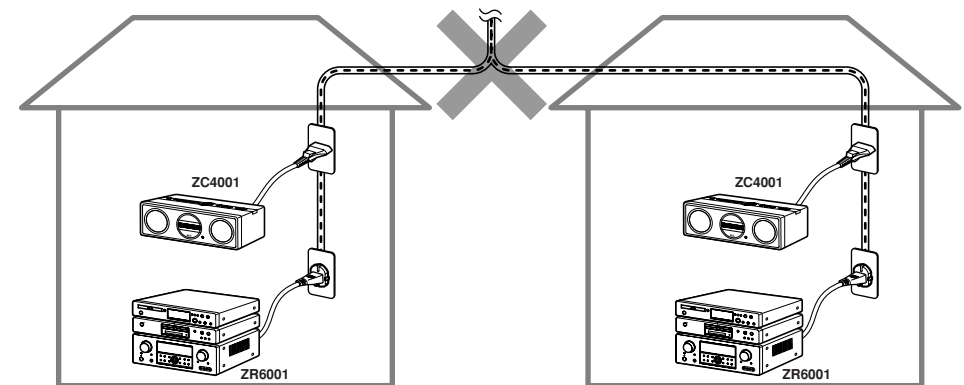

SETUP

PLC SETTING

 
RECALIBRATION

If audio is lost when the ZC4001 and ZR6001 are connected over a PLC connection, recalibrate the signal to the best carrier frequency. The ZR6001 is set first.

<ZR6001>

Using the OSD menu system, set "MULTI PLC SERVER" to "ON".


ZR6001 ON SCREEN DISPLAY MENU SYSTEM

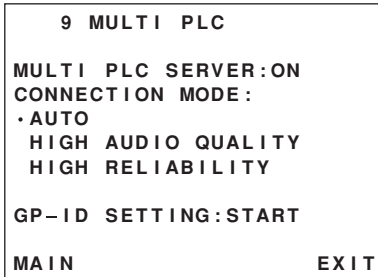


1. Select "9. MULTI PLC" in the SETUP MAIN MENU with the ▲ or ▼ cursor buttons, and press the ENTER button.
2. Select "MULTI PLC SERVER" with the ▲ or ▼ cursor buttons. And select "ON" with the ◀ or ▶ cursor buttons.

For details, see page 24 in the ZR6001 User's Guide.
 
<ZC4001>

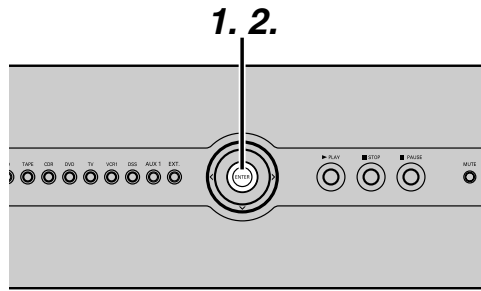

 
1. Press and hold the ENTER button for 5 sec. or more.



2. Press the ENTER button.



 3. The below message appears when recalibration is complete.




SET GROUP ID

To set a Group ID, connect the AC power cables of the ZC4001 and ZR6001 to wall power outlets as close to each other as possible. Set the Group ID simultaneously for the ZC4001 and ZR6001.

<ZR6001>


Using the OSD menu system, set "GP-ID SETTING" to "START".

 ZR6001 ON SCREEN DISPLAY MENU SYSTEM

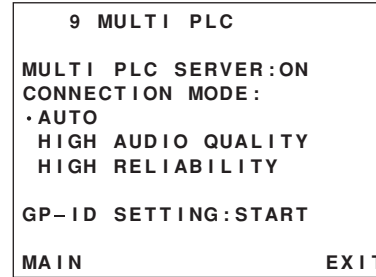


1. Select "9. MULTI PLC" in the SETUP MAIN MENU with the ▲ or ▼ cursor buttons, and press the ENTER button.
2. Select "GP-ID SETTING" with the ▲ or ▼ cursor buttons.

 
<ZC4001>

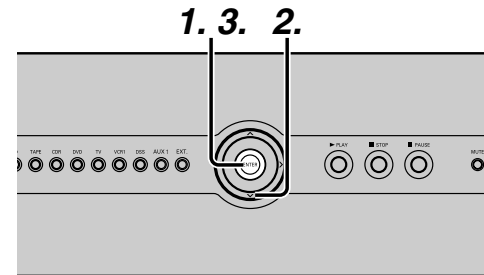

 1. Press and hold the ENTER button for 5 sec. or more.



 2. Press the ▼ button once.



3. Simultaneously press the ENTER buttons of the ZR6001 and ZC4001.

<ZR6001>

GP-ID SETTING : * *

<ZC4001>



The below message appears when the Group ID has been successfully set.

<ZC4001>

 


<ZR6001>

GP-ID SETTING : SUCCEED

The below message appears if the units fail to set the Group ID.

<ZC4001>



<ZR6001>

 
GP-ID SETTING : MISSING

Notes:

One possible reason the Group ID cannot be set is power line noise. In that case, unplug the power cable of the device that is generating noise, then plug it back in and try setting the Group ID again.

SLEEP TIMER SETTING


When the set time elapses, the ZC4001 automatically goes on standby. The sleep timer can be set to 10, 20, 30, 40, 50, 60, 70, 80 or 90 min.

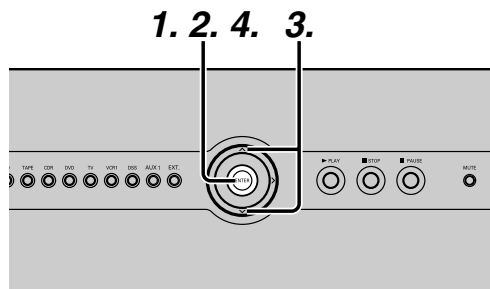


1. Press the **ENTER** button.



 2. Press the **ENTER** button again.



 
3. Select the sleep time. Each time the **▲** button is pressed, the sleep time changes in the order of OFF → 10 → 20 → 30 → 40 → 50 → 60 → 70 → 80 → 90 → OFF. Each time the **▼** button is pressed, the sleep time changes in the order of OFF → 90 → 80 → 70 → 60 → 50 → 40 → 30 → 20 → 10 → OFF.




4. Press the **ENTER** button to return to the normal display.

WAKE UP TIMER

 The Wake Up Timer outputs an audio alarm at the set time. The volume level of the alarm can be user-set.

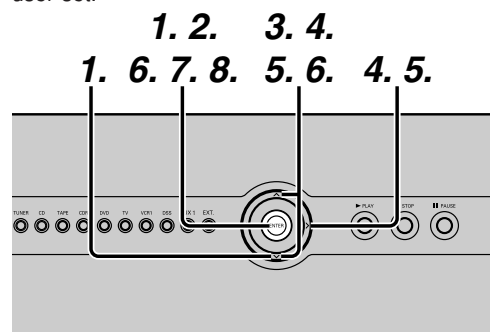


 1. Press the **ENTER** button once, then press the **▼** button.




2. Press the **ENTER** button again.

 
3. Each time the **▲** and **▼** buttons are pressed, the Wake Up Timer switches between "ON" and "OFF".



 
4. Press the **▶** button to get the hour setting. Press the **▲** and **▼** buttons to set the hour.



 5. Press the **▶** button to get the minutes setting. Press the **▲** and **▼** buttons to set the minutes.



 6. Press the **ENTER** button again. Press the **▲** and **▼** buttons to set the volume of the alarm.




7. Press the **ENTER** button to return to the normal display. When the Wake Up Timer is turned ON, a symbol **♪** appears in front of the time display.




8. When the set time is reached, an audio alarm outputs. If not stopped, the alarm gradually gets louder. To stop the alarm, press the **ENTER** button. The Wake Up Timer can be set when the Standby Mode is set to "NORMAL".

BASS BOOST SETTING

 The Bass Boost feature is turned ON/OFF as follows. When ON, bass tones are accented. When OFF, normal audio is produced.

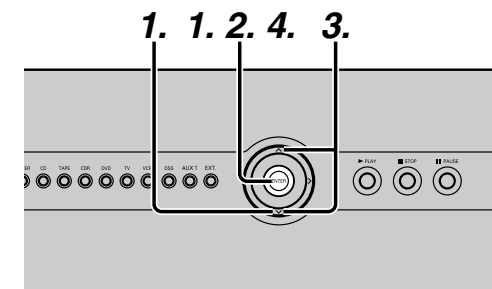


 1. Press the **ENTER** button once, then press the **▼** button twice.



2. Press the **ENTER** button again.

 3. Each time the **▲** button is pressed, the Bass Boost setting switches between ON and OFF. ON ↔ OFF




4. Press the **ENTER** button to return to the normal display.

SOUND EFFECT SETTING

The Sound Effect mode is set as follows: Sound dynamics increase in the order of MODE1 → MODE2 → MODE3.

Setting the NIGHT MODE compresses the dynamic range.

 This softens loud passages such as sudden explosions, to help prevent disturbing others late at night.

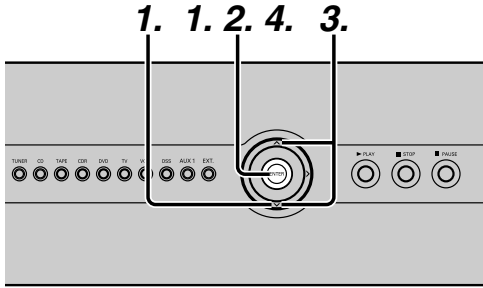

1. Press the **ENTER** button once, then press the **✓** button three times.

```
==SETUP MENU==
}SOUND EFFECT
```

 
2. Press the **ENTER** button again.
3. Select a Sound Effect mode. Each time the **▲** button is pressed, the Sound Effect mode changes in the order of OFF → MODE1 → MODE2 → MODE3 → NIGHT MODE → OFF. Each time the **▼** button is pressed, the Sound Effect mode changes in the order of OFF → NIGHT MODE → MODE3 → MODE2 → MODE1 → OFF. WOW is activated in all three Sound Effect modes: 1, 2 and 3.

```
SOUND EFFECT
}MODE2 (WOW) ▲▼
```

4. Press the **ENTER** button to return to the normal display.

DISPLAY DIMMER SETTING

The brightness of the FL display can be adjusted. The display darkens in the order of OFF → LEVEL1 → LEVEL2 → LEVEL3.

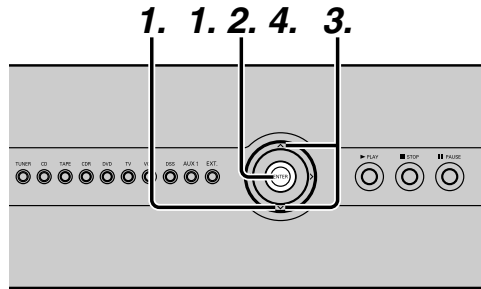

1. Press the **ENTER** button once, then press the **✓** button four times.

```
==SETUP MENU==
}DISPLAY DIMMER
```

 
2. Press the **ENTER** button again.
3. Select a dimmer level. Each time the **▲** button is pressed, the brightness of the FL display changes in the order of OFF → LEVEL1 → LEVEL2 → LEVEL3 → OFF. Each time the **▼** button is pressed, the brightness of the FL display changes in the order of OFF → LEVEL3 → LEVEL2 → LEVEL1 → OFF.

```
DISPLAY DIMMER
}LEVEL2 ▲▼
```

4. Press the **ENTER** button to return to the normal display.

CLOCK SETTING

The time is set as follows.

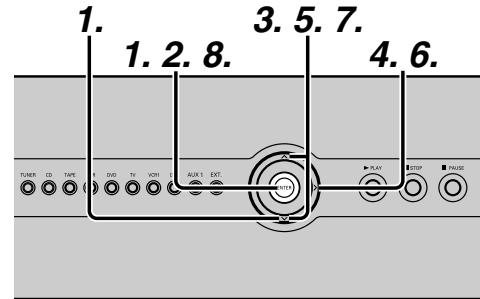

1. Press the **ENTER** button once, then press the **✓** button five times.

```
==SETUP MENU==
}CLOCK SETTING
```

2. Press the **ENTER** button again.
3. Each time the **▲** and **▼** buttons are pressed, the clock switches between the 12-hour and 24-hour display.

```
CLOCK SETTING
}12h 10:00PM <>▲▼
```

4. Press the **▶** button to get the hour setting.
5. Press the **▲** and **▼** buttons to set the hour.

```
CLOCK SETTING
}24h 22:00 <>▲▼
```

6. Press the **▶** button to get the minutes setting.
7. Press the **▲** and **▼** buttons to set the minutes.

```
CLOCK SETTING
}24h 22:35 <>▲▼
```

 
8. Press the **ENTER** button to start the clock and return to the normal display.

STANDBY MODE SETTING

The ZC4001 has two Standby Modes. The Standby Mode is set as follows.

ECONOMY: This is a low power consumption mode. The clock is not displayed.

NORMAL: This is the normal standby mode. The clock is displayed.

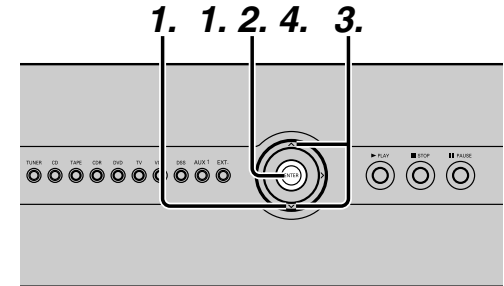

1. Press the **ENTER** button once, then press the **✓** button six times.

```
==SETUP MENU==
}STANDBY MODE
```

2. Press the **ENTER** button again.
3. Each time the **▲** and **▼** buttons are pressed, the Standby Mode switches between "ECONOMY" and "NORMAL".

```
STANDBY MODE
}ECONOMY ▲▼
```

When "ECONOMY" is set as the Standby Mode, the time is not displayed when the unit is on standby.

Also, the Wake Up Timer cannot be set in the Economy mode.

 
```
STANDBY MODE
}NORMAL ▲▼
```

4. Press the **ENTER** button to return to the normal display.

BASIC OPERATION

TURNING THE POWER ON

1. 2.

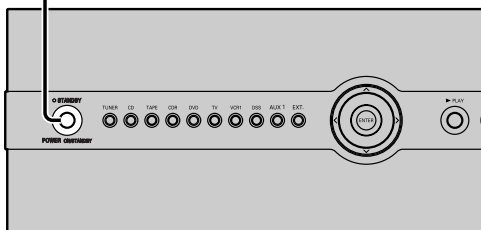


1. Press the **POWER** button to turn the power ON. When the power turns ON, the ZC4001 resumes the same status that existed when power was turned OFF the last time.
2. Press the **POWER** button again to set the ZC4001 on standby.

Caution:

Power to the ZC4001 is always ON (standby state) while the AC power cable is connected to a wall electrical outlet. To completely shut OFF the power, unplug the AC power cable from the wall electrical outlet. However, if the AC power cable is left unplugged for an extended period of time, the clock resets and the time must be set again.

ADJUSTING THE VOLUME

 
1.

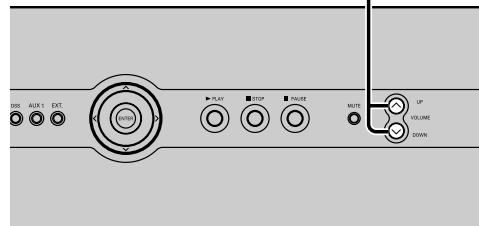

1. Press the **VOLUME** \wedge / \vee buttons to adjust the volume. Pressing the **VOLUME** \wedge button increases the volume. Pressing the **VOLUME** \vee button decreases the volume. Volume can be adjusted in the (Min.) 01 - (Max.) 79 range. Pressing and holding the **VOLUME** \wedge / \vee buttons increases or decreases the volume rapidly.

MUTE

 
Pressing the **MUTE** button temporarily mutes the sound from the speakers. Pressing the **MUTE** button again cancels the mute and restores the original volume level.

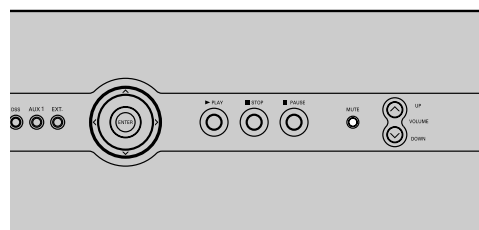

LISTENING OVER THE PLC


Check the settings of the ZR6001. Using the OSD menu system of the ZR6001, set "MULTI PLC SERVER" to "ON". For details, see the ZR6001 User's Guide.

 ZR6001 ON SCREEN DISPLAY MENU SYSTEM

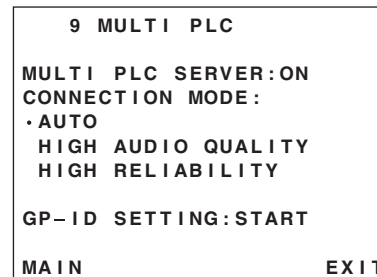

1. LISTENING TO THE TUNER

 
1. 2. 3. 4.

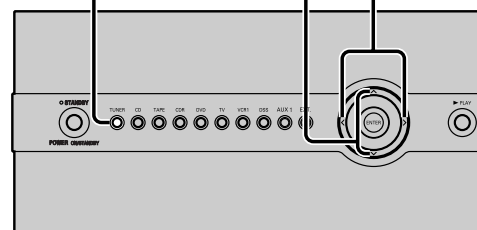

1. Press the **TUNER** button.
2. To switch between FM and AM, press the **TUNER** button again.
3. To select a station, use the \wedge / \vee buttons.
4. To select a preset station, use the \langle / \rangle buttons. (With the ZR6001, this works only when stations have been preset.)


2. LISTENING TO SOURCES OVER THE PLC (CD, TAPE, CDR, DVD, TV, VCR1, DSS OR AUX1)

 To listen to these sources, the ZR6001 must be connected to the unit and set accordingly. For details, see the ZR6001 User's Guide.

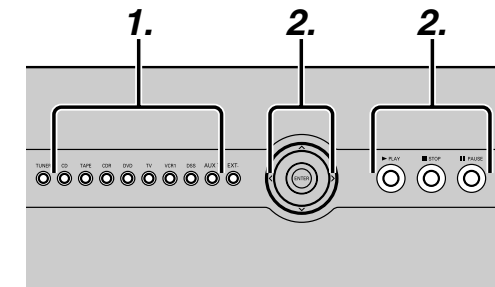

1. Press the button of the desired source.
2. Operate the source with the **PLAY**, **STOP**, **PAUSE**, \langle , \rangle , \wedge and \vee buttons.

 3. LISTENING TO SOURCES CONNECTED TO EXT INPUT

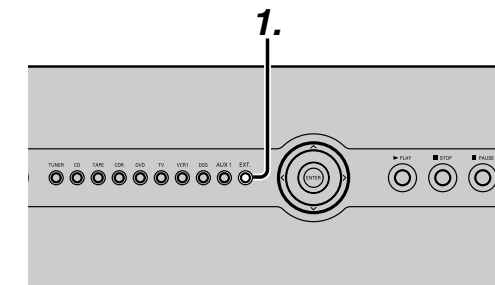

1. Press the **EXT** button.
2. Operate the unit connected to the **EXT INPUT** jack on the rear panel.

TROUBLESHOOTING

In case of trouble, check the following before calling for service:

1. Are the connections made properly?
2. Are you operating the unit properly following the user's guide?
3. Are the power amplifiers and speaker working properly?

If the unit does not operate properly, check items shown in the following table. If your trouble cannot be recovered with the remedy actions listed in the following table, malfunction of the internal circuitry is suspected; immediately unplug the power cable and contact your dealer, nearest Marantz authorized dealer or the Marantz Service Center in your country.

SYMPTOM	CAUSE	REMEDY
The ZC4001 cannot be turned on.	The power plug is not connected.	Connect the power plug to the outlet.
No sound even when power is on.	Mute is on.	Cancel mute using the MUTE button.
	The input cable is not connected correctly. (EXT INPUT)	See the connection diagram and connect the cables correctly.
	The volume control is turned all the way down.	Adjust the volume.
Nothing is heard over PLC connection.	The PLC is wrongly set.	Correctly set the PLC as explained in "PLC SETTING" on page 6. You can check whether or not the ZC4001 is securely connected to the ZR6001 via the PLC status display area of the ZC4001.
	The source (Marantz product) is not correctly connected to the ZR6001.	Marantz products connect over an RC-5 bus. Correctly connect the source as explained in the ZR6001 User's Guide.
	The source (other brand product) is not correctly connected to the ZR6001.	Other brand sources are controlled by remote control signals sent from an emitter connected to the IR EMITTER OUT terminals of the ZR6001 to the IR sensor of the source unit. Operation requires you to set the brand code or use the IR code learning feature. Correctly connect the source as explained in the ZR6001 User's Guide.
	Another device is generating a high level of noise on the power line.	Turn OFF the device that is causing the noise or move it farther away from the ZC4001 and ZR6001.
	Two ZR6001 units are connected to the same system.	Using the OSD menu system, set "MULTI PLC SERVER" of one of the ZR6001 unit to "OFF". (See page 6)
	Control with the remote control unit fails.	Batteries are exhausted.
Control with the remote control unit fails.	Function key setting for the remote control unit is wrong.	Press the AMP button on the remote control unit to confirm control of the ZR6001.
	The distance between the ZC4001 and the remote control unit is too far.	Move closer to the ZC4001.
	Something is blocking the ZC4001 and the remote control unit.	Remove the offending object.

HOW TO RESET THE UNIT

Should the operation or display seem to be abnormal, reset the unit with the following procedure. The ZC4001 is turned on, press and hold the **MUTE** and **STOP** buttons simultaneously for 3 seconds or more.

TECHNICAL SPECIFICATIONS

AUDIO SECTION

Power Output 10W + 10W (JEITA, 1kHz, 6 ohms)
 7W + 7W (20Hz – 20kHz, THD=0.05%, 6 ohms)
 EXT INPUT Sensitivity/Impedance .. 200mV / 22k ohms

PLC SECTION

Modulation Method Multi carrier
 Frequency Band 2MHz – 20MHz

GENERAL

 
Power Requirement AC 230 V 50/60 Hz
 Power Consumption 34 W
 Weight 3.0 kg

ACCESSORIES

User Guide 1

Specifications subject to change without prior notice.

DIMENSIONS

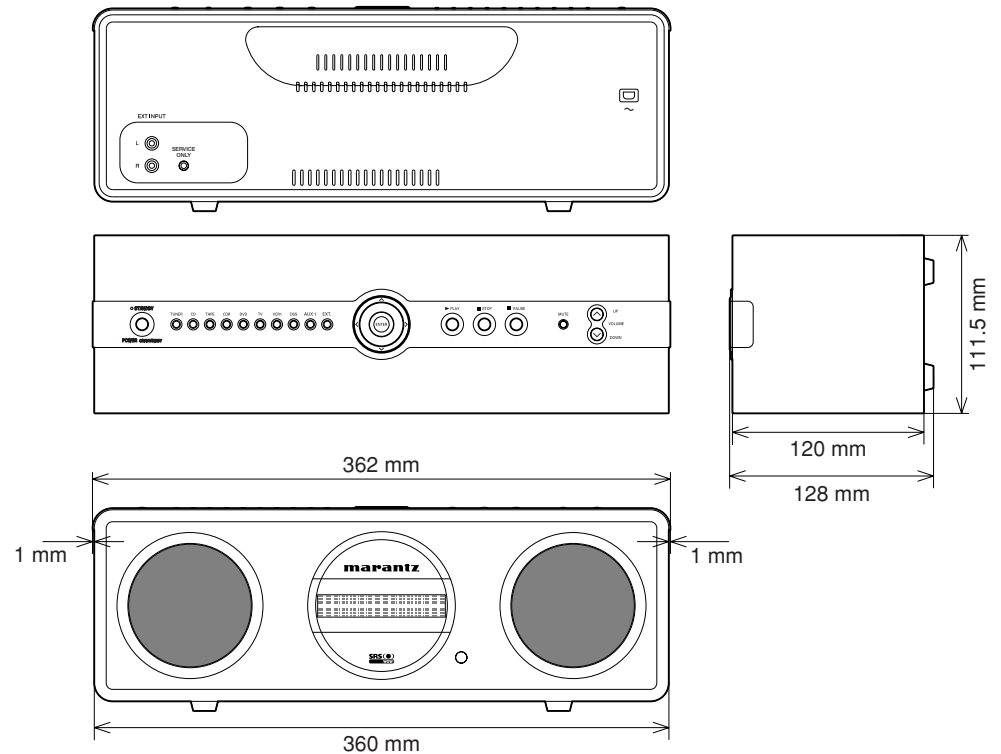

www.marantz.com

You can find your nearest authorized distributor or dealer on our website.

U.S.A. Marantz America, Inc. 1100 Maplewood Drive, Itasca, IL 60143, U.S.A.

EUROPE Marantz Europe B.V. P.O. Box 8744, 5605 LS Eindhoven, The Netherlands

Manufactured under license from Dolby Laboratories. "Dolby", "Pro Logic" and the double-D symbol are trademarks of Dolby Laboratories. Confidential Unpublished Works. Copyright 1992-1999 Dolby Laboratories, Inc. All rights reserved.

marantz[®] is a registered trademark.