


# **marantz®**


**Model ZR6001 User Guide**

---

AV Surround Receiver

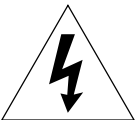

**CAUTION**



**RISK OF ELECTRIC SHOCK  
DO NOT OPEN**

**CAUTION: TO REDUCE THE RISK OF ELECTRIC SHOCK,  
DO NOT REMOVE COVER (OR BACK)  
NO USER-SERVICEABLE PARTS INSIDE  
REFER SERVICING TO QUALIFIED SERVICE PERSONNEL**



The lightning flash with arrowhead symbol within an equilateral triangle is intended to alert the user to the presence of uninsulated “dangerous voltage” within the product’s enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the product.

## WARNING

**TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK,  
DO NOT EXPOSE THIS APPLIANCE TO RAIN OR MOISTURE.**

**CAUTION: TO PREVENT ELECTRIC SHOCK, MATCH WIDE BLADE OF PLUG  
TO WIDE SLOT, FULLY INSERT.**

**ATTENTION: POUR ÉVITER LES CHOCS ÉLECTRIQUES, INTRODUIRE LA  
LAME LA PLUS LARGE DE LA FICHE DANS LA BORNE CORRESPONDANTE  
DE LA PRISE ET POUSSER JUSQU’AU FOND.**

### NOTE TO CATV SYSTEM INSTALLER:

This reminder is provided to call the CATV (Cable-TV) system installer’s attention to Section 820-40 of the NEC which provides guidelines for proper grounding and, in particular, specifies that the cable ground shall be connected to the grounding system of the building, as close to the point of cable entry as practical.

### NOTE:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by tuning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

### NOTE:

Changes or modifications not expressly approved by the party responsible for compliance could void the user’s authority to operate the equipment.

# IMPORTANT SAFETY INSTRUCTIONS

## READ BEFORE OPERATING EQUIPMENT

 
This product was designed and manufactured to meet strict quality and safety standards. There are, however, some installation and operation precautions which you should be particularly aware of.

9. A product and cart combination should be moved with care. Quick stops, excessive force, and uneven surfaces may cause the product and cart combination to overturn.



1. Read Instructions – All the safety and operating instructions should be read before the product is operated.
2. Retain Instructions – The safety and operating instructions should be retained for future reference.
3. Heed Warnings – All warnings on the product and in the operating instructions should be adhered to.
4. Follow Instructions – All operating and use instructions should be followed.
5. Cleaning – Unplug this product from the wall outlet before cleaning. Do not use liquid cleaners or aerosol cleaners. Use a damp cloth for cleaning.
6. Attachments – Do not use attachments not recommended by the product manufacturer as they may cause hazards.
7. Water and Moisture – Do not use this product near water—for example, near a bath tub, wash bowl, kitchen sink, or laundry tub, in a wet basement, or near a swimming pool, and the like.
8. Accessories – Do not place this product on an unstable cart, stand, tripod, bracket, or table. The product may fall, causing serious injury to a child or adult, and serious damage to the product. Use only with a cart, stand, tripod, bracket, or table recommended by the manufacturer, or sold with the product. Any mounting of the product should follow the manufacturer’s instructions, and should use a mounting accessory recommended by the manufacturer.
9. Ventilation – Slots and openings in the cabinet are provided for ventilation and to ensure reliable operation of the product and to protect it from overheating, and these openings must not be blocked or covered. The openings should never be blocked by placing the product on a bed, sofa, rug, or other similar surface. This product should not be placed in a built-in installation such as a bookcase or rack unless proper ventilation is provided or the manufacturer’s instructions have been adhered to.
10. Power Sources – This product should be operated only from the type of power source indicated on the marking label. If you are not sure of the type of power supply to your home, consult your product dealer or local power company. For products intended to operate from battery power, or other sources, refer to the operating instructions.

12. Grounding or Polarization – This product may be equipped with a polarized alternating-current line plug (a plug having one blade wider than the other). This plug will fit into the power outlet only one way. This is a safety feature. If you are unable to insert the plug fully into the outlet, try reversing the plug. If the plug should still fail to fit, contact your electrician to replace your obsolete outlet. Do not defeat the safety purpose of the polarized plug.

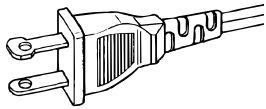

AC POLARIZED PLUG

13. Power-Cord Protection – Power-supply cords should be routed so that they are not likely to be walked on or pinched by items placed upon or against them, paying particular attention to cords at plugs, convenience receptacles, and the point where they exit from the product.
14. Protective Attachment Plug – The product is equipped with an attachment plug having overload protection. This is a safety feature. See Instruction Manual for replacement or resetting of protective device. If replacement of the plug is required, be sure the service technician has used a replacement plug specified by the manufacturer that has the same overload protection as the original plug.
15. Outdoor Antenna Grounding – If an outside antenna or cable system is connected to the product, be sure the antenna or cable system is grounded so as to provide some protection against voltage surges and built-up static charges. Article 810 of the National Electrical Code, ANSI/NFPA 70, provides information with regard to proper grounding of the mast and supporting structure, grounding of the lead-in wire to an antenna discharge unit, size of grounding conductors, location of antenna-discharge unit, connection to grounding electrodes, and requirements for the grounding electrode. See Figure 1.


16. Lightning – For added protection for this product during a lightning storm, or when it is left unattended and unused for long periods of time, unplug it from the wall outlet and disconnect the antenna or cable system. This will prevent damage to the product due to lightning and power-line surges.
17. Power Lines – An outside antenna system should not be located in the vicinity of overhead power lines or other electric light or power circuits, or where it can fall into such power lines or circuits. When installing an outside antenna system, extreme care should be taken to keep from touching such power lines or circuits as contact with them might be fatal.

18. Overloading – Do not overload wall outlets, extension cords, or integral convenience receptacles as this can result in a risk of fire or electric shock.
19. Object and Liquid Entry – Never push objects of any kind into this product through openings as they may touch dangerous voltage points or short-out parts that could result in a fire or electric shock. Never spill liquid of any kind on the product.
20. Servicing – Do not attempt to service this product yourself as opening or removing covers may expose you to dangerous voltage or other hazards. Refer all servicing to qualified service personnel.
21. Damage Requiring Service – Unplug this product from the wall outlet and refer servicing to qualified service personnel under the following conditions:
- When the power-supply cord or plug is damaged.
  - If liquid has been spilled, or objects have fallen into the product.
  - If the product has been exposed to rain or water.

- If the product does not operate normally by following the operating instructions. Adjust only those controls that are covered by the operating instructions as an improper adjustment of other controls may result in damage and will often require extensive work by a qualified technician to restore the product to its normal operation.
- If the product has been dropped or damaged in any way, and
- When the product exhibits a distinct change in performance – this indicates a need for service.

22. Replacement Parts – When replacement parts are required, be sure the service technician has used replacement parts specified by the manufacturer or have the same characteristics as the original part. Unauthorized substitutions may result in fire, electric shock, or other hazards.
23. Safety Check – Upon completion of any service or repairs to this product, ask the service technician to perform safety checks to determine that the product is in proper operating condition.
24. Wall or Ceiling Mounting – The product should be mounted to a wall or ceiling only as recommended by the manufacturer.
25. Heat – The product should be situated away from heat sources such as radiators, heat registers, stoves, or other products (including amplifiers) that produce heat.

**FIGURE 1  
EXAMPLE OF ANTENNA GROUNDING AS PER  
NATIONAL ELECTRICAL CODE, ANSI/NFPA 70**

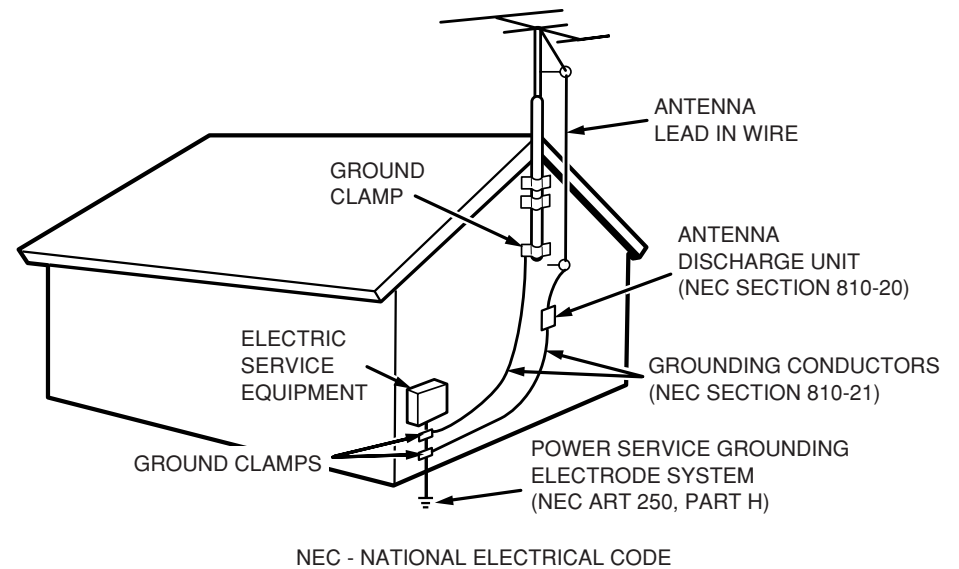

# TABLE OF CONTENTS

<b>INTRODUCTION</b> .....	<b>1</b>	<b>SIMPLE SETUP</b> .....	<b>26</b>
<b>PRECAUTIONS</b> .....	<b>1</b>	<b>BASIC OPERATION (PLAY BACK) ..</b>	<b>27</b>
<b>DESCRIPTION</b> .....	<b>2</b>	SELECTING AN INPUT SOURCE .....	27
<b>FEATURES</b> .....	<b>3</b>	VIDEO CONVERT .....	27
<b>ACCESSORIES</b> .....	<b>4</b>	SELECTING THE SURROUND MODE .....	27
<b>FRONT PANEL</b> .....	<b>5</b>	ADJUSTING THE MAIN VOLUME .....	27
FL DISPLAY .....	6	ADJUSTING THE TONE (BASS & TREBLE) CONTROL ...	27
<b>REAR PANEL</b> .....	<b>7</b>	TEMPORARILY TURNING OFF THE SOUND .....	28
<b>REMOTE CONTROL OPERATION</b> .....	<b>8</b>	USING THE SLEEP TIMER .....	28
FUNCTION AND OPERATION .....	8	NIGHT MODE .....	28
PROGRAMMING THE REMOTE CONTROLLER .....	9	<b>SURROUND MODE</b> .....	<b>28</b>
OPERATION OF REMOTE CONTROL UNIT .....	10	<b>OTHER FUNCTION</b> .....	<b>31</b>
GENERAL INFORMATION OF RC5500SR TO ZR6001 ..	10	TV AUTO ON/OFF FUNCTION .....	31
<b>CONNECTIONS</b> .....	<b>12</b>	ATTENUATION TO ANALOG INPUT SIGNAL .....	31
CONNECTING FOR THE MULTI PLC LISTENING .....	12	LISTENING THROUGH HEADPHONES .....	31
CONNECTING AN IR EMITTER (OTHER BRAND PRODUCT) ..	13	DOLBY HEADPHONE MODE .....	31
SPEAKER PLACEMENT .....	13	VIDEO ON/OFF .....	31
CONNECTING SPEAKERS .....	14	DISPLAY MODE .....	31
CONNECTING AUDIO COMPONENTS .....	15	SELECTING ANALOG AUDIO INPUT OR DIGITAL AUDIO INPUT ..	32
CONNECTING VIDEO COMPONENTS .....	16	RECORDING AN ANALOG SOURCE .....	32
ADVANCED CONNECTING .....	17	HT-EQ .....	32
CONNECTING TO THE RC-5 (MARANTZ PRODUCTS ONLY) ..	17	7.1 CH INPUT .....	32
CONNECTING THE ANTENNA TERMINALS .....	18	AUX2 INPUT .....	33
CONNECTING FOR THE MULTI ROOM .....	19	LIP.SYNC .....	33
<b>SETUP</b> .....	<b>20</b>	<b>BASIC OPERATION (TUNER) .....</b>	<b>33</b>
ON SCREEN DISPLAY MENU SYSTEM .....	20	LISTENING TO THE TUNER .....	33
1 INPUT SETUP (ASSIGNABLE DIGITAL INPUT AND	21	PRESET MEMORY .....	34
COMPONENT VIDEO INPUT) .....	21	<b>MULTI ROOM SYSTEM</b> .....	<b>36</b>
2 SPEAKER SETUP .....	21	MULTI ROOM PLAYBACK USING THE MULTI ROOM	36
3 PREFERENCE .....	22	OUT TERMINALS .....	36
4 SURROUND .....	23	MULTI ROOM PLAYBACK USING THE MULTI SPEAKER	36
5 PL II (PRO LOGIC II)	23	TERMINALS .....	36
MUSIC PARAMETER .....	23	MULTI PLC SYSTEM .....	36
6 CS II (CIRCLE SURROUND II) PARAMETER .....	23	<b>TROUBLESHOOTING</b> .....	<b>37</b>
7 MULTI ROOM .....	23	<b>TECHNICAL SPECIFICATIONS</b> .....	<b>38</b>
8 7.1 CH INPUT LEVEL .....	24	<b>DIMENSIONS</b> .....	<b>38</b>
9 MULTI PLC SETUP .....	24		
10 SPEAKERS LEVEL SETTING WITHOUT TEST TONE ..	26		

# INTRODUCTION



Thank you for purchasing the Marantz ZR6001 Surround receiver. This remarkable component has been engineered to provide you with many years of home theater enjoyment. Please take a few minutes to read this manual thoroughly before you connect and operate the ZR6001. As there are a number of connection and configuration options, you are encouraged to discuss your own particular home theater setup with your Marantz A/V specialist dealer.

# PRECAUTIONS

## CAUTIONS ON INSTALLATION

For heat dispersal, leave at least 20 cm/8 inch of space between the top, back and sides of this unit and the wall or other components.

- Do not obstruct the ventilation holes.

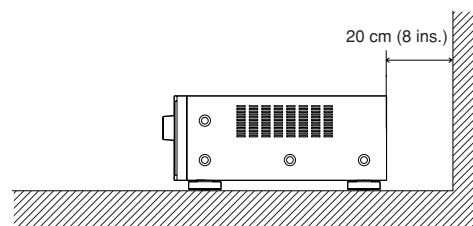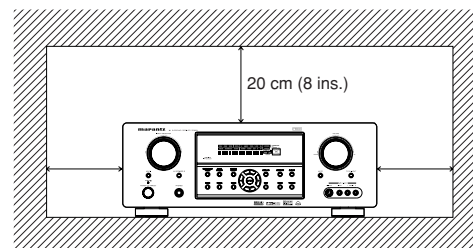

## DESCRIPTION



DTS was introduced in 1994 to provide 5.1 channels of discrete digital audio into home theater systems. DTS brings you premium quality discrete multichannel digital sound to both movies and music. DTS is a multichannel sound system designed to create full range digital sound reproduction.

The no compromise DTS digital process sets the standard of quality for cinema sound by delivering an exact copy of the studio master recordings to neighborhood and home theaters.

Now, every moviegoer can hear the sound exactly as the moviemaker intended.

DTS can be enjoyed in the home for either movies or music on of DVD's, LD's, and CD's.

"DTS" and "DTS Digital Surround" are registered trademarks of Digital Theater Systems, Inc.



The advantages of discrete multichannel systems over matrix are well known.

But even in homes equipped for discrete multichannel, there remains a need for high-quality matrix decoding. This is because of the large library of matrix surround motion pictures available on disc and on VHS tape; and analog television broadcasts. The typical matrix decoder of today derives a center channel and a mono surround channel from two-channel matrix stereo material. It is better than a simple matrix in that it includes steering logic to improve separation, but because of its mono, band-limited surround it can be disappointing to users accustomed to discrete multichannel.

Neo:6 offers several important improvements as follow,

- Neo:6 provides up to six full-band channels of matrix decoding from stereo matrix material. Users with 6.1 and 5.1 systems will derive six and five separate channels, respectively, corresponding to the standard home-theater speaker layouts.
- Neo:6 technology allows various sound elements within a channel or channels to be steered separately, and in a way which follows naturally from the original presentation.
- Neo:6 offers a music mode to expand stereo nonmatrix recordings into the five- or six-channel layout, in a way which does not diminish the subtlety and integrity of the original stereo recording.



DTS-ES Extended Surround is a new multichannel digital signal format developed by Digital Theater Systems Inc. While offering high compatibility with the conventional DTS Digital Surround format, DTS-ES Extended Surround greatly improves the 360-degree surround impression and space expression thanks to further expanded surround signals. This format has been used professionally in movie theaters since 1999.

In addition to the 5.1 surround channels (FL, FR, C, SL, SR and LFE), DTS-ES Extended Surround also offers the SB (Surround Back) channel for surround playback with a total of 6.1 channels. DTS-ES Extended Surround includes two signal formats with different surround signal recording methods, as DTS-ES Discrete 6.1 and DTS-ES Matrix 6.1.

"DTS", "DTS-ES" and "Neo:6" are trademarks of Digital Theater Systems, Inc.



The stereo CD is a 16-bit medium with sampling at 44.1 kHz. Professional audio has been 20- or 24-bit for some time, and there is increasing interest in higher sampling rates both for recording and for delivery into the home. Greater bit depths provide extended dynamic range. Higher sampling rates allow wider frequency response and the use of anti-alias and reconstruction filters with more favorable aural characteristics.

DTS 96/24 allows for 5.1 channel sound tracks to be encoded at a rate of 96kHz/24bits on DVD-Video titles.

When DVD-video appeared, it became possible to deliver 24-bit, 96 kHz audio into the home, but only in two channels, and with serious limitations on picture. This capability has had little use.

DVD-audio allows 96/24 in six channels, but a new player is needed, and only analog outputs are provided, necessitating the use of the D/A converters and analog electronics provided in the player.

DTS 96/24 offers the following:

1. Sound quality transparent to the original 96/24 master.
2. Full backward compatibility with all existing decoders. (Existing decoders will output a 48 kHz signal)

3. No new player required: DTS 96/24 can be carried on DVD-video, or in the video zone of DVD-audio, accessible to all DVD players.

4. 96/24 5.1-channel sound with full-quality full-motion video, for music programs and motion picture soundtracks on DVD-video.

"DTS" and "DTS 96/24" are trademarks of Digital Theater Systems, Inc.



Dolby Digital identifies the use of Dolby Digital audio coding for such consumer formats as DVD and DTV. As with film sound, Dolby Digital can provide up to five full-range channels for left, center, and right screen channels, independent left and right surround channels, and a sixth (".1") channel for low-frequency effects.

Dolby Surround Pro Logic II is an improved matrix decoding technology that provides better spatiality and directionality on Dolby Surround program material; provides a convincing three-dimensional soundfield on conventional stereo music recordings; and is ideally suited to bring the surround experience to automotive sound. While conventional surround programming is fully compatible with Dolby Surround Pro Logic II decoders, soundtracks will be able to be encoded specifically to take full advantage of Pro Logic II playback, including separate left and right surround channels. (Such material is also compatible with conventional Pro Logic decoders.)

Dolby Digital EX creates six full-bandwidth output channels from 5.1-channel sources. This is done using a matrix decoder that derives three surround channels from the two in the original recording. For best results, Dolby Digital EX should be used with movies soundtracks recorded with Dolby Digital Surround EX.

### About Dolby Pro Logic IIx

Dolby Pro Logic IIx technology delivers a natural and immersing 7.1-channel listening experience to the home theater environment. A product of Dolby's expertise in surround sound and matrix decoding technologies, Dolby Pro Logic IIx is a complete surround sound solution that maximizes the entertainment experience from stereo as well as 5.1-channel encoded sources.

Dolby Pro Logic IIx is fully compatible with Dolby Surround Pro Logic technology and can optimally decode the thousands of commercially available Dolby Surround encoded video cassettes and television programs with enhanced depth and spatiality. It can also process any high-quality stereo or Advanced Resolution 5.1-channel music content into a seamless 6.1- or 7.1-channel listening experience.



The Dolby Headphone technology provides a surround sound listening experience over headphones. When listening to multichannel content such as DVD movies over headphones, the listening experience is fundamentally different than listening to speakers. Since the headphone speaker drivers are covering the pinna of the ear, the listening experience differs greatly from traditional speaker playback. Dolby utilizes patented headphone perspective curves to solve this problem and provides a non-fatiguing, immersive, home theater listening experience. Dolby Headphone also delivers exceptional 3D audio from stereo material.


Manufactured under license from Dolby Laboratories. "Dolby", "Pro Logic", and the double-D symbol are trademarks of Dolby Laboratories.



Circle Surround II (CS-II) is a powerful and versatile multichannel technology. CS-II is designed to enable up to 6.1 multichannel surround sound playback from mono, stereo, CS encoded sources and other matrix encoded sources. In all cases the decoder extends it into 6 channels of surround audio and a LFE/subwoofer signal. The CS-II decoder creates a listening environment that places the listener "inside" music performances and dramatically improves both hi-fi audio conventional surround-encoded video material. CS-II provides composite stereo rear channels to greatly improve separation and image positioning – adding a heightened sense of realism to both audio and A/V productions.



CS-II is packed with other useful feature like dialog clarity (SRS Dialog) for movies and cinema-like bass enrichment (TruBass). CS-II can enable the dialog to become clearer and more discernable in movies and it enables the bass frequencies contained in the original programming to more closely achieve low frequencies – overcoming the low frequency limitations of the speakers by full octave.

Circle Surround II, Dialog Clarity, TruBass, SRS and  symbol are trademarks of SRS Labs, Inc. Circle Surround II, Dialog Clarity and TruBass technology are incorporated under license from SRS Labs, Inc.



HDCD<sup>®</sup> (High Definition Compatible Digital<sup>®</sup>) is a patented process for delivering on Compact Disc the full richness and details of the original microphone feed. HDCD encoded CDs sound better because they are encoded with 20-bits of real musical information as compared to 16-bits for all other CDs. HDCD overcomes the limitation of the 16-bit CD format by using a sophisticated system to encode the additional four bits onto the CD while remaining completely compatible with the CD format. When listening to HDCD recordings, you hear more dynamic range, a focused 3-D sound stage, and extremely natural vocal and musical timbre. With HDCD, you get the body, depth and emotion of the original performance not a flat, digital imitation.

HDCD system manufactured under license from Microsoft. This product is covered by one or more of the following: In the United States 5,479,168 5,638,074 5,640,161 5,808,574 5,838,274 5,854,600 5,864,311 5,872,531 and in Australia 669,114 with other patents pending.


## FEATURES

By simply plugging the power cables of the ZR6001 and ZC4001 into ordinary home electrical outlets, the ZR6001 sends audio sources over your home electrical line for playback by the ZC4001.

### PLC (POWER LINE COMMUNICATION)

The ZR6001\* converts analog audio signals into noncompressed linear PCM digital signals, modulates them into high frequency signals, and sends them over power lines. The ZC4001 demodulates the sent signals and converts them back to analog signals.

\* If the condition of the power line degenerates because of the effects of noise from other devices or for other reasons, the ZR6001 uses an audio format of different sampling rate and data bit length.

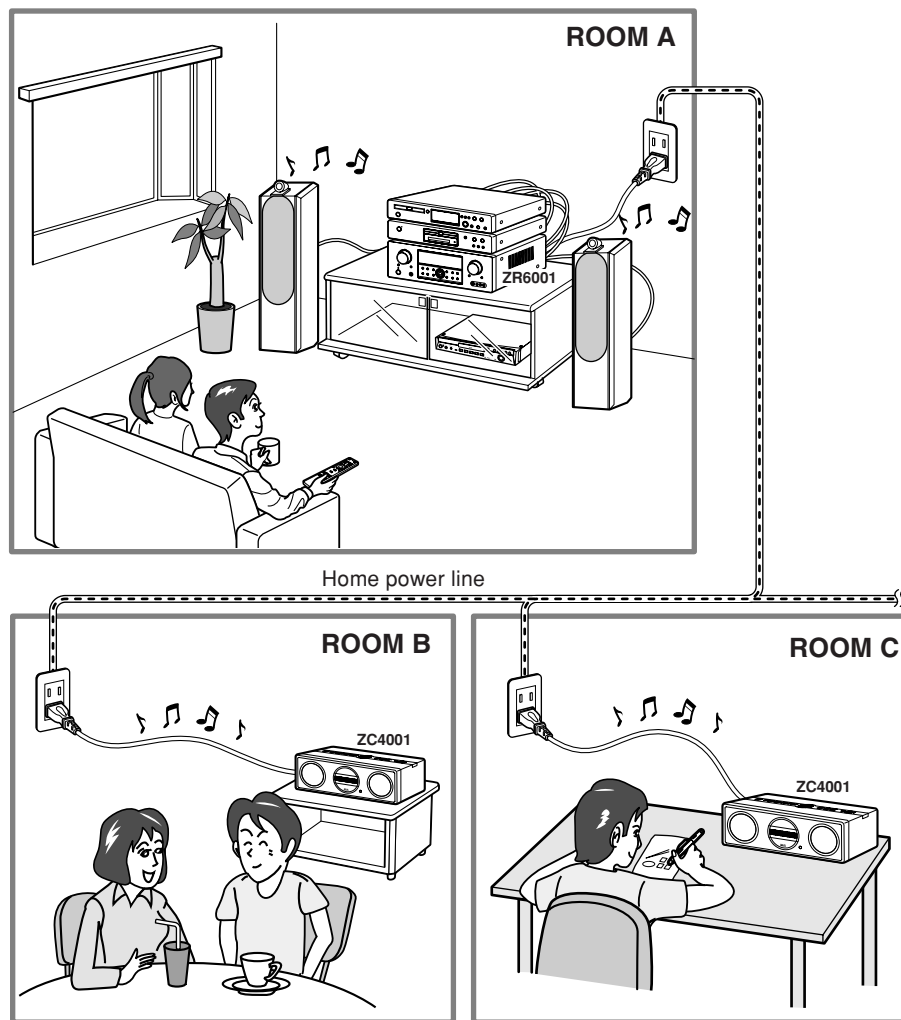

The ZR6001 incorporates the latest generation of digital surround sound decoding technology such as Dolby Digital EX, Dolby Digital, DTS-ES (Discrete 6.1 and Matrix 6.1), DTS Neo:6 (Cinema, Music), Dolby Pro-Logic IIx (Movie, Music and Game), Circle Surround II (Cinema and Music). In addition, Marantz has focused on the future. By utilizing pre-out jacks, 7.1 direct inputs and a RS-232C communication port, the ZR6001 is tomorrow's technology, today!

The ZR6001 features a fully discrete 7 channel amplifier section capable of delivering 90 watts of high-current amplification, for continuously clean and stable power into each of the 7 channels. It employs a massive EI power transformer in combination with oversized filter capacitors. Current feedback topology allows total operation stability, while requiring minimal amounts of negative feed-back, resulting in an excellent transient frequency response and superb sonic transparency. This design configuration is capable of a clear and powerful reproduction of the most demanding action movie soundtracks and full range (multichannel) music discs. Through its ability to generate very high output voltages, the ZR6001 can easily drive the most demanding speakers with optimum results.

The ZR6001 incorporates the most advanced Digital Signal Processing circuitry, along with a Crystal® 192 kHz/24 bit D/A converter in each of the 8 channels. Independent power supply circuits are incorporated for the FL display, audio and video sections for maximum separation, clarity and dynamic range. Together with hand-selected customized components, all elements work in harmony to recreate the emotion, exactly as the artist had intended.

The ZR6001 is designed and engineered with extensive feedback from custom installation experts, dealers and consumers. It features multi-room/multisource, a RS-232C communication port, heavy duty speaker binding posts and an extensive array of both analog and digital inputs / outputs. With 4 assignable digital inputs, 2 assignable component inputs, SACD Multi Channel (7.1 channel) direct inputs video convert system and OSD output versatility is taken to a stunning new level. Furthermore, the ZR6001 can output the OSD information through the Y/C (S-video) and composite video outputs.


An easy-to-use universal remote control allows full access to all of the operating functions and can be used for system operation as well.

This unit has Simple Setup function for easy setup. You can setup all speaker settings by just selecting your room size and the number of your speakers with Simple Setup function. You can also setup customized settings just like conventional AV amplifiers.


- Dolby Digital EX, Dolby Digital, DTS ES (Discrete 6.1, Matrix 6.1, Neo: 6)
- Dolby Headphone (DH1, DH2, DH3)
- Dolby Pro Logic IIx (Movie, Music, Game)
- Circle Surround II (Movie, Music, Mono)
- HDCD decoding
- 7 x 95 Watts (8 Ohm), Discrete Amplifiers
- High Power Current Feedback Circuitry
- Massive Energy Power Supply, Huge EI Transformer, Large ELCO's.
- 192 kHz/24 bit Crystal® DAC for all 8 Channels
- 32 bit Digital Surround Processing Chipsets
- Video Off Mode
- Large Heavy Duty Speaker Terminals for all Channels
- RS-232C Terminal for System Control
- Set Up Menu via all Video Output (Composite, S-Video and Component video)
- Auto Input Signal Detection
- Improved Station Name Input Method, 50 Presets
- Auto Adjust Function for Speaker Distance Settings (Delay Time)
- Front AUX Input (Digital Camera, Portable DVD)
- Universal remote control
- Simple Setup Function
- Video convert system
- LIP.SYNC Function (Audio delay)
- PLC (Power Line Communication) function to ZC4001.

## ACCESSORIES


### Remote Controller RC5500SR

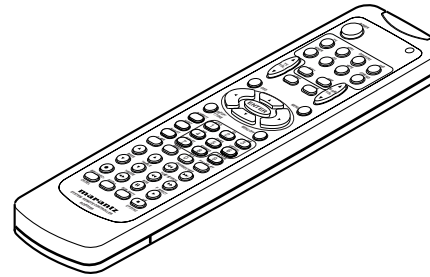


### AAA-size batteries X 2

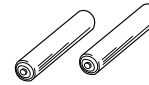 


### AM Loop Antenna

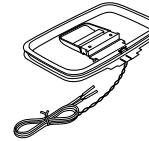


### FM Antenna

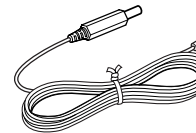


### Front AUX Jack Cover

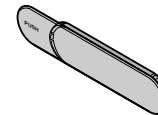 


### AC Power Cord

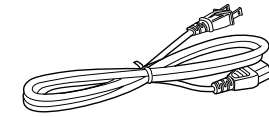 

### User Guide

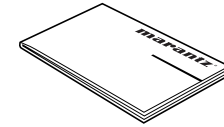

# FRONT PANEL

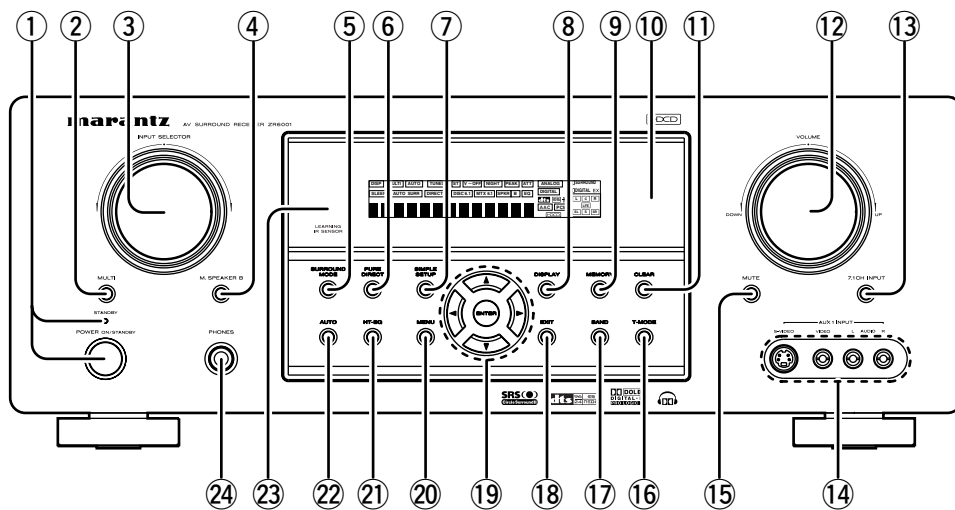

**① POWER switch and STANDBY indicator**  
When this switch is pressed once, the unit turns ON and the display illuminates. When pressed again, the unit turns OFF and the STANDBY indicator will be illuminated.

**② MULTI (Multi Room) button**  
Press this button to activate the Multiroom system. "MULTI" indicator will be illuminated in the display.

**③ INPUT SELECTOR knob (AUDIO/ VIDEO)**  
This knob is used to select the input sources. The video function selector, such as TV, DVD, VCR1 and DSS, selects video and audio simultaneously. Audio function sources such as CD, TAPE, CDR/MD, and TUNER may be selected in conjunction with a Video source. This feature (Sound Injection) combines a sound from one source with a picture from another. Choose the video source first, and then choose a different audio source to activate this function.

**④ M.(Multi Room) SPEAKER B button**  
Press this button to activate the Multiroom Speaker B system. "MULTI" indicator will be illuminated in the display. (See page 36)

**⑤ SURROUND MODE button**  
You can select the surround mode by pressing this button.

**⑥ PURE DIRECT button**  
When this button is pressed, the tone control circuitry is bypassed as well as Bass Management. "DIRECT" indicator will be illuminated in the display.

**Notes:**

- The surround mode is automatically switched to AUTO when the pure direct function is turned on.
- Additionally, Speaker Configurations are fixed automatically as follows.  
Front SPKR = Large, Center SPKR = Large, Surround SPKR = Large, Sub woofer = On
- This function is unavailable when the M. speaker B system is activated. While this function is activated, this function will be canceled if the M. SPEAKER B button is pressed.

**⑦ SIMPLE SETUP button**  
Press this button to enter the simple setup mode. You can setup the speaker conditions (speaker sizes, number of speakers, speaker delay times) quickly by pressing the cursor buttons.

**⑧ DISPLAY button**  
When this button is pressed, the FL display mode is changed as Surround Mode → Auto-display Off → Display Off → Input Function and the display off indicator (DISP) lights up in condition of DISPLAY OFF.

**⑨ MEMORY button**  
Press this button to enter the tuner preset memory numbers or station names. (See page 34)

**⑩ INFRARED receiving sensor window**  
This window receives infrared signals for the remote control.

**⑪ CLEAR button**  
Press this button to cancel the station-memory setting mode or preset scan tuning. (See page 34)

**⑫ VOLUME control knob**  
Adjusts the overall sound level. Turning the control clockwise increases the sound level.

**⑬ 7.1CH INPUT button**  
Press this button to select the output of an external multichannel player.

**⑭ AUX1 INPUT jacks**  
These auxiliary video/audio input jacks accept the connections of a camcorder, portable DVD, game etc.

**⑮ MUTE button**  
Press this button to mute the output to the speakers. Press it again to return to the previous volume level.

**⑯ T-MODE button**  
Press this button to select the auto stereo mode or mono mode when the FM band is selected. The "AUTO" indicator lights in the auto stereo mode. (See page 34)

**⑰ BAND button**  
Press this button to switch between FM and AM in the TUNER mode.

**⑱ EXIT button**  
This button is used to exit from the SETUP MAIN MENU.

**⑲ Cursor (◀, ▶, ▲, ▼) / ENTER button**  
Use these buttons when operating the SETUP MAIN MENU and TUNER function.

**⑳ MENU button**  
This button is used to enter the SETUP MAIN MANU.

**㉑ HT-EQ button**  
Used to turn on or off HT(Home Theater)-EQ mode. This mode compensates for the audio portion of a movie sounding "bright". When this button is pressed, "EQ" indicator lights up.

**㉒ AUTO (Auto surround) button**  
Press this button to select the AUTO mode from the surround modes. When this mode is selected, the receiver determines the surround mode corresponding to a digital input signal automatically.

**㉓ LEARNING IR SENSOR**  
This sensor is used to operate other brands from the ZC4001 via the Multi PLC feature when the 4-digit code of the source is not known.


**㉔ HEADPHONE jack for stereo headphones**  
This jack may be used to listen to the ZR6001's output through a pair of headphones. Be certain that the headphones have a standard 1 / 4" stereo phono plug. Note that the main room speakers will automatically be turned off when the headphone jack is in use.

**Notes:**

- When using headphones, the surround mode will change to STEREO and Dolby Headphone by MENU and Cursor button.
- The surround mode returns to the previous setting as soon as the headphone plug is removed from the jack.



## FL DISPLAY

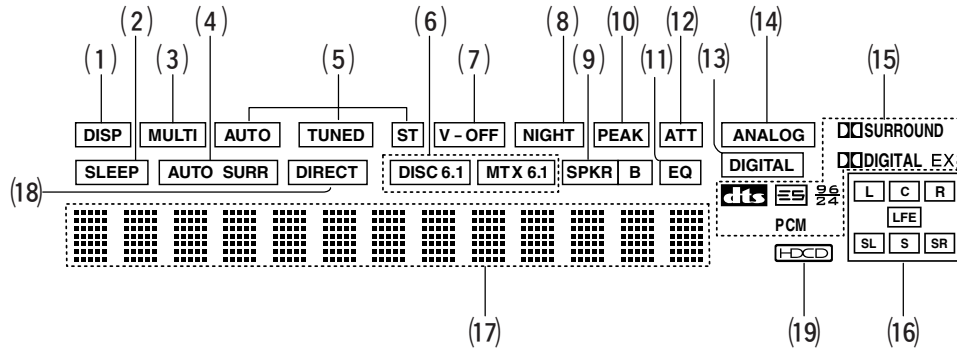**(1) DISP (Display Off) indicator**

This indicator is illuminated when the ZR6001 is in the display off condition.

**(2) SLEEP timer indicator**

This indicator is illuminated when the sleep timer function in the main-room is in use.

**(3) Multi-room system indicator**

This indicator is illuminated when the multi-room system is active.

**(4) AUTO SURR (Auto Surround mode) indicator**

This indicator is illuminated to show that the AUTO SURROUND mode is in use.

**(5) TUNER's indicators**

**AUTO** : This indicator illuminates when the tuner's Auto mode is in use.

**TUNED** : This indicator illuminates when a station is being received with sufficient signal strength to provide acceptable listening quality.

**ST(Stereo)** : This indicator illuminates when an FM station is being tuned into stereo condition.

**(6) DTS-ES mode indicators (DISC6.1, MTX6.1)**

These indicators will illuminate to show the DTS-ES decoding mode (Discrete 6.1 or Matrix 6.1).

**(7) V (video)-OFF mode indicator**

This indicator is illuminated when the Video-OFF function is active.

**(8) NIGHT mode indicator**

This indicator is illuminated when the ZR6001 is in the Night mode, which reduces the dynamic range of digital program material at low volume levels.

**(9) SPKR (speaker) B indicator**

This indicator is illuminated when the M (Multiroom) speaker B system is active.

**(10) PEAK indicator**

This indicator is a monitor for an analog audio input signal. If the selected analog audio input signal is greater than the capable level of internal processing, this will illuminate. If this happens, you should press the **ATT** button on the remote.

**(11) EQ mode indicator**

This indicator is illuminated when the HT-EQ function is active.

**(12) ATT (Attenuation) indicator**

This indicator is illuminated when the attenuation function is active.

**(13) DIGITAL Input Indicator**

This indicator lights when a digital input has been selected.

**(14) ANALOG input indicator**

This indicator is illuminated when an analog input source has been selected.

**(15) SIGNAL FORMAT indicators**

**DIGITAL, EX, SURROUND, dts, ES, 96/24, PCM**

When the selected input is a digital source, some of these indicators will be illuminated to display the specific type of signal in use.

**(16) ENCODED CHANNEL STATUS indicators**

These indicators display the channels that are encoded with a digital input signal. If the selected digital input signal is Dolby Digital 5.1ch or DTS 5.1ch, "L", "C", "R", "SL", "SR" and "LFE" will be illuminated. If the digital input signal is 2 channel PCM-audio, "L" and "R" will be displayed.

If Dolby Digital 5.1ch signal with Surround EX flag or DTS-ES signal comes in, "L", "C", "R", "SL", "S", "SR" and "LFE" will be illuminated.

**(17) Main Information Display**

This display shows messages relating to the status, input source, surround mode, tuner, volume level or other aspects of unit's operation.


**(18) DIRECT (Puredirect) indicator**

This indicator is illuminated when the ZR6001 is in the PURE DIRECT mode.

**(19) HDCD indicator**


When HDCD signal is decoded from digital input, this indicator will light up.

## HOW TO ATTACH THE FRONT AUX JACK COVER

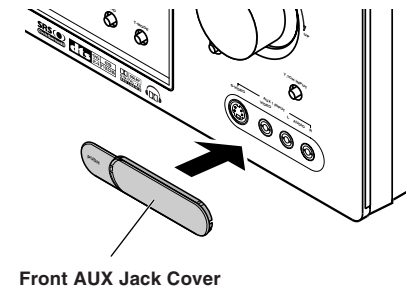

Front AUX Jack Cover

# REAR PANEL

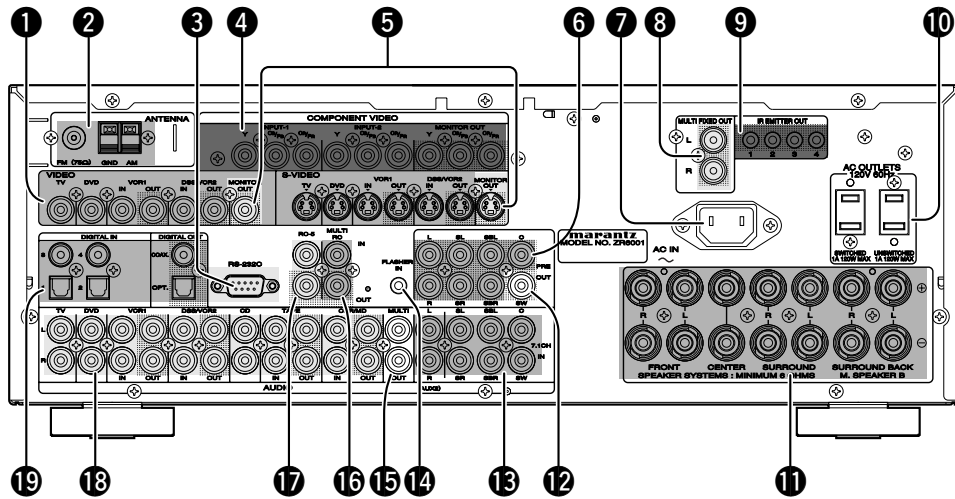

## 1 VIDEO IN/OUT (TV, DVD, VCR1, DSS/VCR2)

These are the video inputs and outputs. There are 4 video inputs and 2 video outputs and each one includes both composite video and S-video configurations. Connect VCRs, DVD players, and other video components to the video inputs. The 2 video output channels can be used to be connected to video tape recorders for making recordings.

The input signals of video and S-video are converted each other, and each of the converted video signals can be output.

## 2 FM antenna terminal (75 ohms)

Connect an external FM antenna with a coaxial cable, or a cable network FM source.

### AM antenna and ground terminals

Connect the supplied AM loop antenna. Use the terminals marked "AM" and "GND". The supplied AM loop antenna will provide good AM reception in most areas. Position the loop antenna until you hear the best reception.

## 3 RS-232C

The RS-232C port is to be used in conjunction with an external controller to control the operation of the ZR6001 by using an external device.

## 4 COMPONENT VIDEO INPUT/OUTPUT

If your DVD player or other device has component video connectors, be sure to connect them to these component video connectors on the ZR6001. The ZR6001 has two component video input connectors to obtain the color information (Y, Cb, Cr) directly from the recorded DVD signal or other video component and one component video output connector to output it directly into the matrix decoder of the display device.

By sending the pure DVD component video signal directly, the DVD signal forgoes the extra processing that normally would degrade the image. The result is vastly increased image quality, with incredibly life like colors and crisp detail.

When the video convert function is enabled, video and S-video images can be output to the COMPONENT MONITOR OUT jack.

## 5 MONITOR OUT

This is a monitor output and each one includes both composite video and S-video configurations. When connecting two video monitors or televisions, be aware that the OSD interface can be used with both MONITOR OUT connections.

## 6 Preamp Outputs (L, R, SL, SR, SBL, SBR, C)

Jacks for L (front left), R (front right), C (Center), SL (surround left), SR (surround right), SBL (surround back left) and SBR (surround back right).

Use these jacks for connection to external power amplifiers.

## 7 AC INLET

Plug the supplied power cord into this AC INLET and then into the power outlet on the wall. ZR6001 can be powered by 120V AC only.

## 8 Multiroom Fixed OUTPUT

These are the audio output jacks for the Multi zone (Multi room). Volume is fixed and cannot be changed.

## 9 IR EMITTER OUT (1-4)

Connect to an IR emitter. These terminals output remote control signals from the ZC4001 over the power line to control sources via the Multi PLC feature.

## 10 AC OUTLETS

Connect the AC power cables of components such as a DVD and CD player to these outlets. SWITCHED and UNSWITCHED outlets are provided.

The one marked SWITCHED provides power only when the ZR6001 is turned on and is useful for components which you use every time you play your system.

The one marked UNSWITCHED is always live as long as the ZR6001 is plugged into a live outlet.

A component connected here may be left on permanently, or may be switched off with via its own power switch.

### Caution:

- In order to avoid potential turn-off thumps, anything plugged into these outlets should be powered up before the ZR6001 is turned on.
- The capacity of this AC outlet is 120W. Do not connect devices that consume electricity more than the capacity of these AC outlets. If the total power consumption of the connected devices exceeds the capacity, the protection circuit shuts down the power supply.

## 11 Speaker outputs terminals

Seven terminals are provided for the front left, front right, front center, surround left, surround right, surround back left and surround back right speakers.

### Note:

- You can use surround back speaker terminals as M (Multiroom) SPEAKER B terminals, when you use no surround back speaker.

## 12 Subwoofer Output

Connect this jack to the line level input of a powered subwoofer. If an external subwoofer amplifier is used, connect this jack to the subwoofer amplifier input. If you are using two subwoofers, either powered or with a 2 channel subwoofer amplifier, connect a "Y" connector to the subwoofer output jack and run one cable from it to each subwoofer amplifier.

## 13 7.1 CHANNEL or AUX2 INPUT

By connecting a DVD Audio player, SACD multichannel player, or other components that has a multichannel port, you can playback the audio with 5.1 channel or 7.1 channel outputs.

## 14 FLASHER IN (Flasher input terminal)

These terminals are for controlling the unit from each room using a keypad, etc.

## 15 Multiroom Outputs (Audio L&R)

These are the audio output jacks for the Multi zone (Multi room).

Connect these jacks to optional audio power amplifiers to listen the source selected by the multiroom system in a remote room.

## 16 MULTI ROOM REMOTE IN/OUT terminals

IN: Connect to a multi-room remote control device, available from your Marantz dealer.

OUT: Connect to the Marantz component equipped with remote control (RC-5) terminals in Multi zone (Multi room).

## 17 REMOTE CONT. IN/OUT terminals

Connect to a Marantz component equipped with remote control (RC-5) terminals.

## 18 AUDIO IN/OUT (CD, TAPE, CD-R, TV, DVD, VCR1, DSS/VCR2)

These are the analog audio inputs and outputs. There are 7 audio inputs (4 of which are linked to video inputs) and 4 audio outputs (2 of which are linked to video outputs). The audio jacks are nominally labeled for cassette tape decks, compact disc players, DVD players and etc.... The audio inputs and outputs require RCA-type connectors.

## 19 DIGITAL INPUT (Dig.1 - 4) / OUTPUT (coaxial, optical)

These are the digital audio inputs and outputs. There are 2 digital inputs with coaxial jacks, 2 with optical jacks.

The inputs accept digital audio signals from a compact disc, LD, DVD, or other digital source component.


For digital output, there is 1 coaxial output and 1 optical output.

The digital outputs can be connected to MD recorders, CD recorders, DAT decks, or other similar components.

# REMOTE CONTROL OPERATION

## FUNCTION AND OPERATION

The provided remote control unit is a universal remote controller. The **POWER** button, numeric buttons and control buttons are used in common across different input source components. The input source controlled with the remote control unit changes when one of the input selector buttons is pressed.

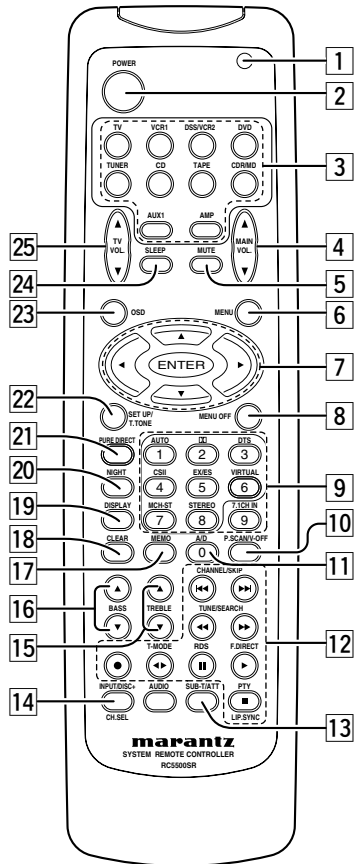

### 1 Transmitting indicator

Lights up during a button is pressed and an infrared signal is sending.

### 2 (Main) POWER buttons

(when AMP mode is selected)

Press to switch the power of the ZR6001 ON or OFF after pressing the **AMP** button.

### 3 Input selector buttons/ FUNCTION SELECTOR buttons (AUDIO/VIDEO INPUT)

These buttons are used to select a Audio or Video source component. Press one of these buttons once to change the function of the remote control. Press same button within 2 seconds, the input function of the ZR6001 is changed.

Audio function sources such as CD, TAPE, CDR/MD, and TUNER may be selected in conjunction with a Video source.

This feature (Sound Injection) combines a sound from one source with a picture from another. Choose the video source first, and then choose a different audio source to activate this function.

#### Notes:

- CDR/MD button is set CDR function at initial. To switch MD function, press and hold down CDR/MD button and press **2** button.
- To return CDR function, press and hold down CDR/MD button and press **1** button.

### 4 MAIN VOLUME UP (▲) /DOWN (▼) buttons

Main volume control of the ZR6001. The front, surround, center and subwoofer channel volumes controlled by these buttons simultaneously.

### 5 MUTE button

Muting button of the ZR6001. Press this button decrease the sound temporarily. Press this button again to return to the previous sound. When this button is pressed, "MUTE" indicator lights up.

### 6 MENU button

(when AMP mode is selected)

This button is used to enter the SETUP MAIN MENU.

### 7 Cursor (◀, ▶, ▲, ▼) / ENTER buttons

(when AMP mode is selected)

Use these button when operating the SETUP MAIN MENU.

### 8 MENU OFF button

(when AMP mode is selected)

This button is used to exit from the SETUP MAIN MENU.

### 9 Numeric buttons 1 to 9 / Surround mode buttons

#### Numeric buttons

These buttons are used to enter figures in the selection of a tuner preset station and station name preset or to set select a CD track number, etc. The functions of these buttons are dependent on the function button selected.

#### Surround mode buttons

(when AMP mode is selected)

These buttons are used to select the surround mode.

### 10 P.SCAN (Preset scan) / V(Video)-OFF button

(when TUNER mode is selected)

This button is used to start preset scan when ZR6001 is selected TUNER mode.

(when AMP mode is selected)

This is used when switching the video signals from the various monitor outputs to Video-Off mode. (See page 31)

### 11 0 / A/D button

#### 0 button

This button is used to enter the number "0"

A/D button (when AMP mode is selected)

This is used to switch between the analog and digital inputs.

### 12 CONTROL buttons

These buttons are used when operating the CD player, TAPE deck, etc.

The function of these buttons are dependent on the function button selected.

For the controllable functions of each input function, please refer to controllable function table on the page 11.

### 13 SUB-T (Title) / ATT (attenuator) button

When the input signal is too high and the voice distorts even while adjusting the ZR6001 VOLUME control, turn on this function. "ATT" is illuminated when this function is activated.

The input level is reduced. Attenuator is invalid for the output signal of "REC OUT". (See page 31)

#### Note:

- This function is unavailable while the digital input is selected.

### 14 INPUT/DISC+ / CH.SEL buttons

This button is used to enter the input level setup menu.

### 15 TREBLE UP (▲) /DOWN (▼) buttons

These buttons are used to adjust the tone control of high frequency sound for left and right speaker.

### 16 BASS UP (▲) /DOWN (▼) buttons

These buttons are used to adjust the tone control of low frequency sound for left, right and subwoofer speaker.

### 17 MEMO button

Memory enable button for various preset functions.

### 18 CLEAR button

This button is used to cancel for certain memory or programming operations.

### 19 DISPLAY button

Selects the display mode for the front display of the ZR6001.

### 20 NIGHT button

Pressing this button prevents the Dolby Digital signal from playback at a loud voice. This function reduces the voice by 1/3 to 1/4 at maximum. Thus, it eliminates the occurrence of an abruptly loud voice at night. However, the function is valid only in the case when the Dolby Digital signal is entered into OPTICAL or COAXIAL and data to compress the voice exists in the signal to be played back. When this button is pressed, the "NIGHT" indicator is illuminated.

**21 PURE DIRECT button**

When this button is pressed, the tone control circuit is bypassed.

**22 SETUP / T.TONE button**

*(when AMP mode is selected)*

Used to enter the test tone menu.

**23 OSD button**

*(when AMP mode is selected)*

When this button is pressed, the current setting is displayed on the TV monitor.

**24 SLEEP (sleep timer) button**

This button is used for setting the sleep timer. It can be operated the same way as the button on the unit.

**25 TV VOLUME UP (▲) /DOWN (▼) buttons**

These buttons increase or decrease TV's volume.


**PROGRAMMING THE REMOTE CONTROLLER**

The remote controller RC5500SR must be programmed to use the codes for your appliances of different brands. This is done by keying in a 4-digit code or by scanning the codes until the correct one is found. We recommend to using the 4-digit code. This mode is faster and more reliable. The code scanning method should be used only if you cannot find the code for one of your appliances. The codes are listed at the end of this guide. (SET UP CODES FOR REMOTE CONTROLLER RC5500SR)

**Important:**

- Use the remote control buttons for programming, not the buttons of the receiver or other appliances.
- Some codes may be not match your equipment. In this case, your equipment cannot be controlled with this remote controller.

**PROGRAMMING WITH THE 4-DIGIT CODE**

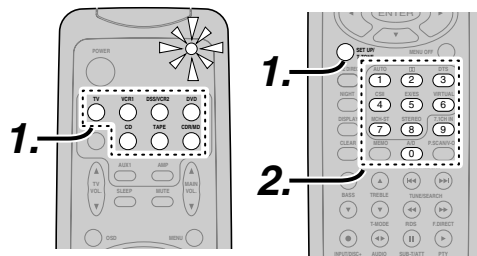


1. Press and hold down the **Function Selector** button for the appliance which should be controlled and press **SETUP** button until the indicator blinks twice.
2. Press the 4-digit code for appliance (code table at the end of this book)
3. When the procedure is successful, the indicator will blink twice.

**Note:**


- If the indicator did not blink twice, then repeat steps 1 through 2 and try entering the same code again.

**SCANNING THE CODE TABLE**

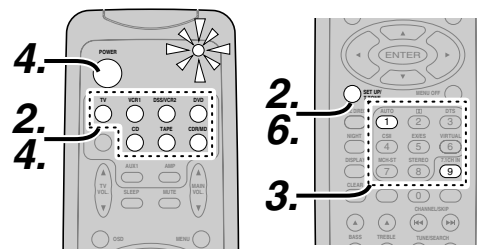

1. Switch on the appliance which should be controlled.
2. Press and hold down the **Function Selector** button for appliance which should be controlled and press **SETUP** button until the indicator blinks twice.
3. Press the code **9 - 9 - 1**. The indicator will blink twice.
4. Aim the remote control at the appliance and slowly alternate between pressing **POWER** button and the **Function Selector** button for the appliance.
5. Stop when the appliance turns off.
6. Press **SETUP** button once to lock in the code.

**CHECKING THE CODE**

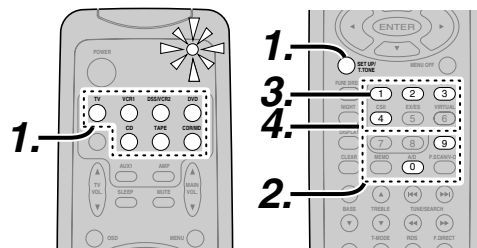


1. Press and hold down the **Function Selector** button for appliance which should be controlled and press **SETUP** button until the indicator blinks twice.
2. Press the code **9 - 9 - 0**. The indicator will blink twice.
3. To view the code for first digit, press **1** once. Wait 3 seconds, count the indicator blinks (e.g. 3 blinks = 3) and write down the number.

**Note:**

- If a code digit is "0", the indicator will not blink.
4. Repeat step 3 three more times for remaining digits. Use **2** for the second digit, **3** for the third digit, and **4** for the fourth digit.

**RESETTING THE ALL CODE**

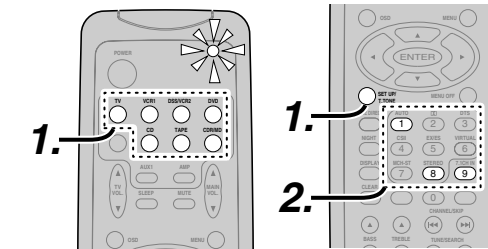

1. Press and hold down the any **Function Selector** button and press **SETUP** button until the indicator blinking twice.
2. Press the code **9 - 8 - 1**. The indicator will blink twice. Then, RC5500SR will return to the factory preset code.

**Note:**

- After this procedure, the selected function button is set initial code and other function buttons are set initial code too.

Once you have found and the codes for your various appliances, you may want to write them down here.

- TV -----
- VCR -----
- DSS -----
- DVD -----
- CD -----
- TAPE -----
- CDR -----
- MD -----




## OPERATION OF REMOTE CONTROL UNIT

### REMOTE CONTROL

The distance between the transmitter of the remote control and the IR SENSOR of the ZR6001 should be less than 5 meters. If the remote control is pointed in a direction other than the IR SENSOR or if there is an obstacle between them, use of the remote control may not be possible.

### Remote-controllable range

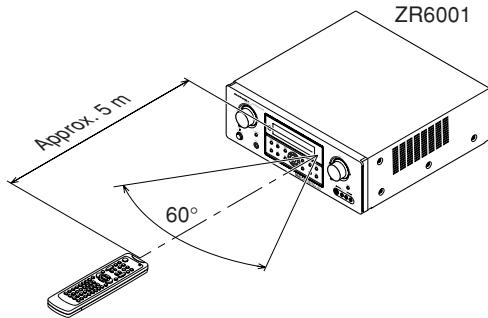


Remote control unit (RC5500SR)


### LOADING BATTERIES

The life of the batteries used with the remote control is about 4 months with normal use. Also be sure to replace batteries earlier when you notice that they are getting weak.


1. Remove the back cover.

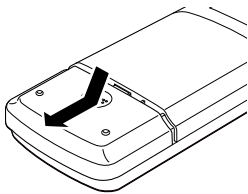

2. Insert the new batteries (AAA type) with correct ⊕ and ⊖ polarity.

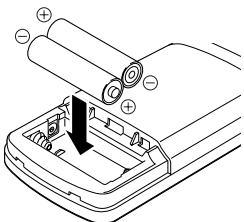

3. Close the cover until it clicks.

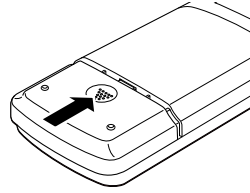

### Notes:

- Do not mix alkaline and manganese batteries.
- Do not mix old and new batteries.


### CAUTIONS ON BATTERIES

- Use "AAA" type batteries in this remote control unit.
- If the remote control unit does not operate from close to the main unit, replace the batteries with new ones, even if less than a year has passed.
- The included battery is only for verifying operation. Replace it with a new battery as soon as possible.
- When inserting the batteries, be careful to do so in the proper direction, following the + and - marks in the remote control unit's battery compartment.
- To prevent damage or battery fluid leakage:
  - Do not use a new battery with an old one.
  - Do not use two different types of batteries.
  - Do not short-circuit, disassemble, heat or dispose of batteries in flames.
- Remove the batteries when not planning to use the remote control unit for a long period of time.
- If the batteries should leak, carefully wipe off the fluid from the inside of the battery compartment, then insert new batteries.
- When disposing of used batteries, please comply with governmental regulations or environmental public instruction's rules that apply in your country or area.

## GENERAL INFORMATION OF RC5500SR TO ZR6001

To control the ZR6001 by your RC5500SR, you have to select the device AMP or TUNER by pressing the function selector button. Please refer below for the details in AMP and TUNER mode.

### AMP MODE

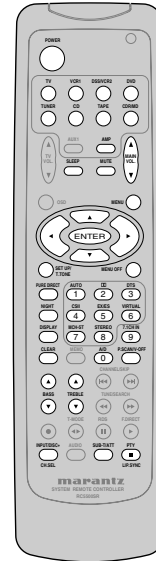

POWER	Turns the ZR6001 on and off
Function selector *	Selects a particular source component
SLEEP *	Sets the sleep timer function
MUTE *	Decreases the sound temporarily
VOL ▲▼ *	Adjusts the over all sound level
MENU	Enters the SETUP MENU
Cursor	Moves the cursor for settings in the SETUP MENU
ENTER	• Enters the SETUP MENU • Confirms the settings in SETUP MENU
SETUP/T.TONE	Enters the test tone mode for setting the Speaker Level Setup
MENU OFF	Exits from the SETUP MENU
PURE DIRECT *	Selects the Pure Direct mode
NIGHT *	Turns on or off the NIGHT mode
DISPLAY *	Change the front display mode
Surround mode (1-8)	Selects the surround mode
7.1CH-IN (9)	Selects the 7.1CH IN
A/D (0)	Switches between the analog and digital inputs
BASS ▲▼ *	Adjusts the tone control of low frequency sound
TREBLE ▲▼ *	Adjusts the tone control of high frequency sound
SUB-T/ATT	Reduces the input level
P.SCAN/V-OFF	Turns on or off the Video output
CH. SEL	Adjusts the input level
LIP.SYNC	Selects the LIP. SYNC mode

\* These buttons are used to control ZR6001 in any function mode.


### TUNER MODE



TUNER	Selects a frequency band
0-9	Inputs the numeric #s
CLEAR	Clears the inputting
MEMO	Enters the tuner preset memory numbers
P.SCAN/V-OFF	Starts preset scan
CHANNEL/SKIP	• Selects a preset station
◀◀ / ▶▶	
TUNE/SEARCH	Tunes a station
◀◀ / ▶▶	
T-MODE ◀▶	Selects the auto stereo mode or mono mode
F.DIRECT ▶	Selects the "Frequency direct input"



**THE CONTRABLE FUNCTION TABLE**

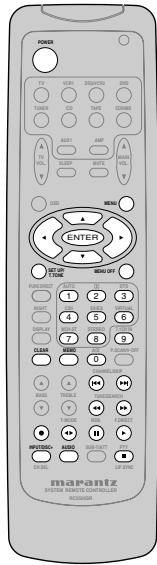


	TV	VCR	DVD	DSS	CD	TAPE	CDR	MD
POWER	POWER	POWER	POWER	POWER	POWER	POWER	POWER	POWER
MENU	CALL UP MENU	CALL UP MENU	CALL UP MENU	CALL UP MENU	SWITCH DISPLAY	SWITCH DISPLAY	SWITCH DISPLAY	SWITCH DISPLAY
Cursor	Cursor	Cursor	Cursor	Cursor	-	-	-	-
ENTER	OK	OK	OK	OK	-	-	-	-
SETUP/T.TONE	-	-	SETUP MENU	-	-	-	-	-
MENU OFF	-	CANCEL MENU	-	CANCEL MENU	-	-	-	-
0 - 9	INPUT NUMERIC	INPUT NUMERIC	INPUT NUMERIC	INPUT NUMERIC	INPUT NUMERIC	INPUT NUMERIC	INPUT NUMERIC	INPUT NUMERIC
CLEAR	INPUT CLEAR	TAPE SPEED	INPUT CLEAR	INPUT CLEAR	INPUT CLEAR	INPUT CLEAR	INPUT CLEAR	INPUT CLEAR
MEMO	-	-	CALL PROGRAM	-	CALL PROGRAM	CALL PROGRAM	CALL PROGRAM	CALL PROGRAM
CHANNEL/SKIP ◀◀	CH-	PREV	PREV	CH-	PREV	PREV	PREV	PREV
CHANNEL/SKIP ▶▶	CH+	NEXT	NEXT	CH+	NEXT	NEXT	NEXT	NEXT
TUNE/SEARCH ◀◀	-	REWIND	REWIND	-	REWIND	REWIND	REWIND	REWIND
TUNE/SEARCH ▶▶	-	FF	FF	-	FF	FF	FF	FF
● (REC)	-	REC	-	-	-	REC	REC	REC
T-MODE ◀▶	-	-	-	-	-	DIRECTION	-	-
RDS	-	PAUSE	PAUSE	-	PAUSE	PAUSE	PAUSE	PAUSE
F.DIRECT ▶	-	PLAY	PLAY	-	PLAY	PLAY	PLAY	PLAY
INPUT/DISC+	INPUT SEL.	TV/VCR	DISC+	TV/DSS	DISC+	-	DISC+	-
AUDIO	-	AUDIO	AUDIO	AUDIO	-	-	-	-
PTY ■	-	STOP	STOP	-	STOP	STOP	STOP	STOP
SUB-T/ATT	-	-	SUBTITLE	-	-	-	-	-

# CONNECTIONS

## CONNECTING FOR THE MULTI PLC LISTENING

Connect the AC power cable of the ZR6001 to a wall electrical outlet. Also connect the AC power cable of the ZC4001 to a wall electrical outlet.


Up to four ZC4001 units may be connected to the same system at one time.

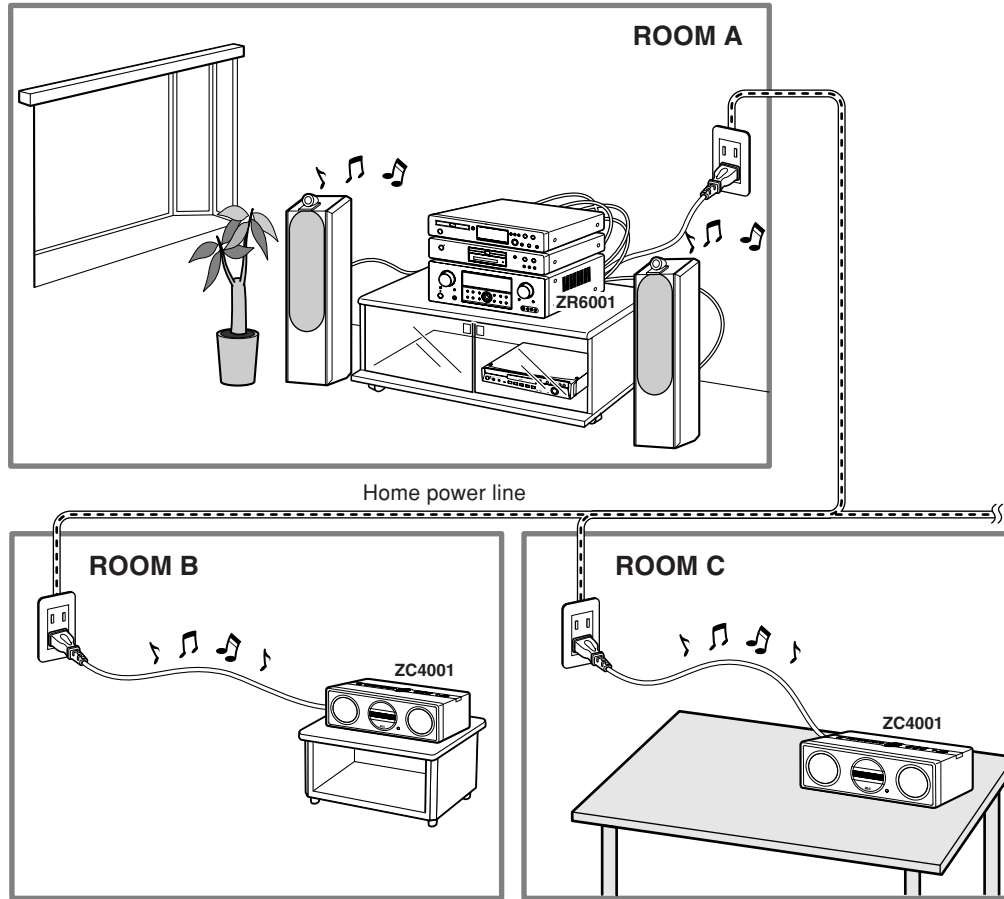


### Notes:

- The ZR6001 sends audio data to the ZC4001 over power lines. Therefore, if the condition of the power line degenerates seriously because of the effects of noise from other devices or for other reasons, audio data may not be received or may skip.
- If the distance of the power line between the ZR6001 and ZC4001 is very long, audio data may not be received or may skip.
- At the time of purchase, all ZC4001 and ZR6001 are set to the same Group ID. If used with this same Group ID, you risk having your music listened into by others. Therefore, set the Group ID as explained herein.
- If the following trouble is experienced, block PLC signals from other sources using a commercially available power filter, etc.

When a ZC4001 and ZR6001 are connected over PLC, another ZR6001 cannot be added to the same power line and connected over PLC. In this case, PLC signals are not sent.

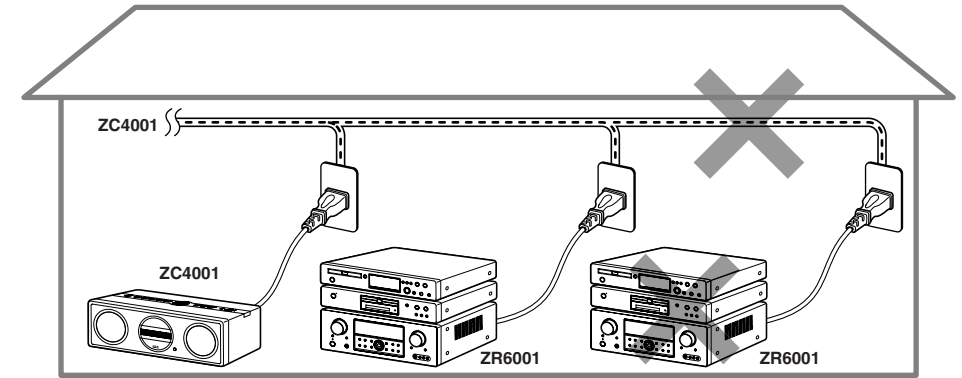


If a ZR6001 and ZC4001 are connected over PLC in a nearby apartment unit for example, and there is only a short distance between your apartment and your neighbor's, the PLC signals from your neighbor's apartment can travel over power lines to your place, mix with your system, and prevent audio output.

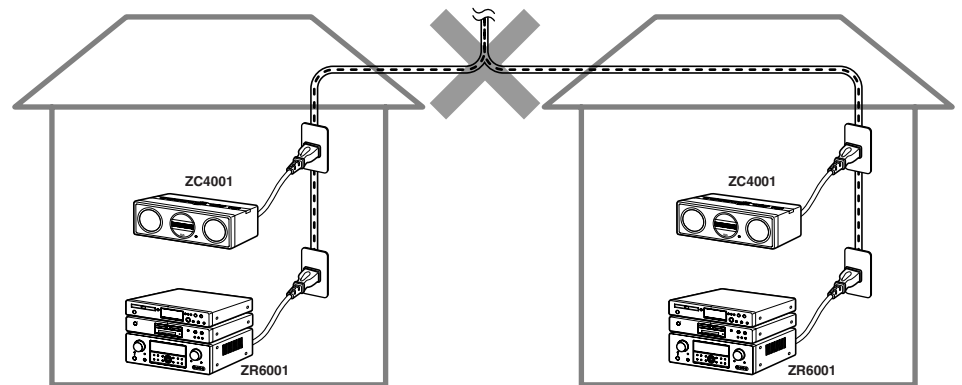

## CONNECTING AN IR EMITTER (OTHER BRAND PRODUCT)

When the ZR6001 and ZC4001 are connected via the PLC, the ZC4001 can control other brand product. Other brand product is controlled by remote control signals sent from an emitter connected to the IR EMITTER OUT terminals of the ZR6001 to the IR sensor of the source unit. To control other brand's output, an IR code must be set. If the IR code of the source is unknown, the IR code learning feature must be used.

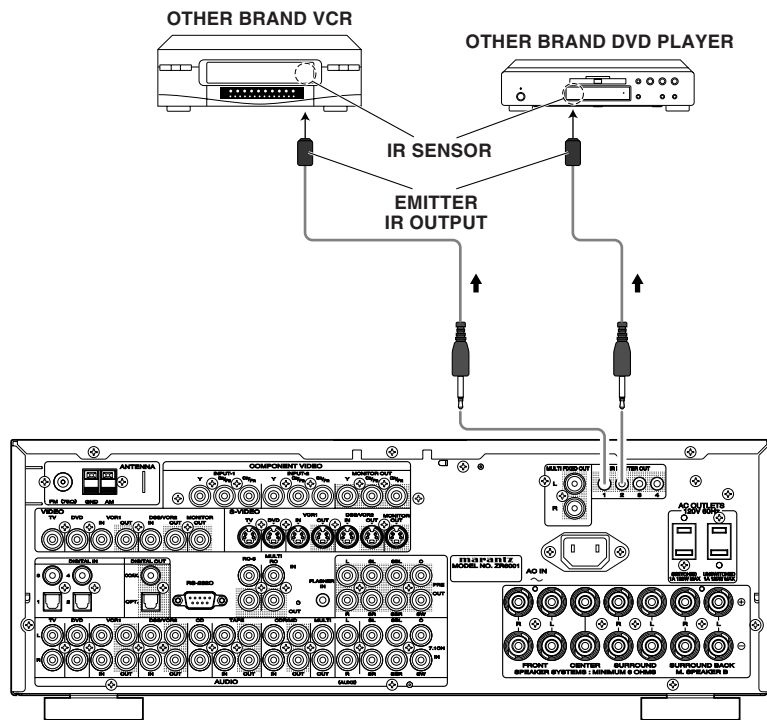

1. Connect an emitter to an IR EMITTER OUT terminal on the ZR6001.
2. Position the IR output of the emitter near to the IR sensor of the other brand source.

**Notes:**

- Up to 4 emitters can be connected to the ZR6001.
- To control Marantz products from the ZC4001 over a PLC connection, connect the source as explained in "CONNECTING TO THE RC-5" on page 17.

## SPEAKER PLACEMENT

The ideal surround speaker system for this unit is 7-speaker systems, using front left and right speakers, a center speaker, surround left and right speakers, a surround back left and right speakers, and a subwoofer.


For best results we recommend that all front speakers be of the same type, with identical or similar driver units. This will deliver smooth pans across the front sound stage as the action moves from side to side.

Your center channel speaker is very important as over 80% of the dialog from a typical motion picture emanates from the center channel.

It should possess similar sonic characteristics to the main speakers. Surround channel speakers need not be identical to the front channel speakers, but they should be of high quality.

The surround center speaker is useful for playback of Dolby Digital Surround EX or DTS-ES. One of the benefits of both Dolby Digital and DTS is that surround channels are discrete full range, while they were frequency limited in earlier "Pro Logic" type systems.

Bass effects are an important part of home theater. For optimal enjoyment a subwoofer should be used as it is optimized for low frequency reproduction. If you have full range front speakers, however, they may be used in place of a subwoofer with proper setting of the switches in the menu system.

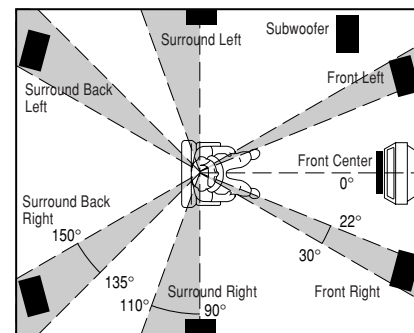

**Front left and right speakers**

We recommend to set the front L and R speakers with 45-60 degrees from the listening position.

**Center speaker**

Align the front line of the center speaker with the front L/R speakers. Or place the center speaker a little backward from the line.

**Surround left and right speakers**

When the ZR6001 is used in surround operation, the preferred location for surround speakers is on the side walls of the room, at or slightly behind the listening position.

The center of the speaker should face into the room.

**Surround back left and right speakers**

Surround back speakers are required when a full 7.1-channel system is installed.

Speakers should be placed on a rear wall, behind the listening position.

The center of the speaker should face into the room.

**Subwoofer**

We recommend using a sub-woofer to have maximum bass effect. Sub-woofer bears only low frequency range so you can place it anywhere in the room.


**HEIGHT OF THE SPEAKER UNITS**

**Front left and right speakers, and a center speaker**

Align the tweeters and mid-range drivers on the three front speakers at the same height, as best as possible.

**Surround left and right speakers, and surround back speaker**


Place the surround left, right and surround back speakers higher than your ears by about 2 Ft. – 3 Ft. (70 cm – 1 m). Also place the speakers at the same height, as best as possible.

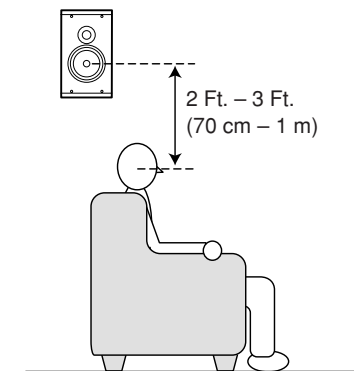

**Note:**


- Use magnetically-shielded speakers for front left, right and the center speakers when the speakers are installed near the TV and the TV is a monitor type.

**CONNECTING SPEAKERS**

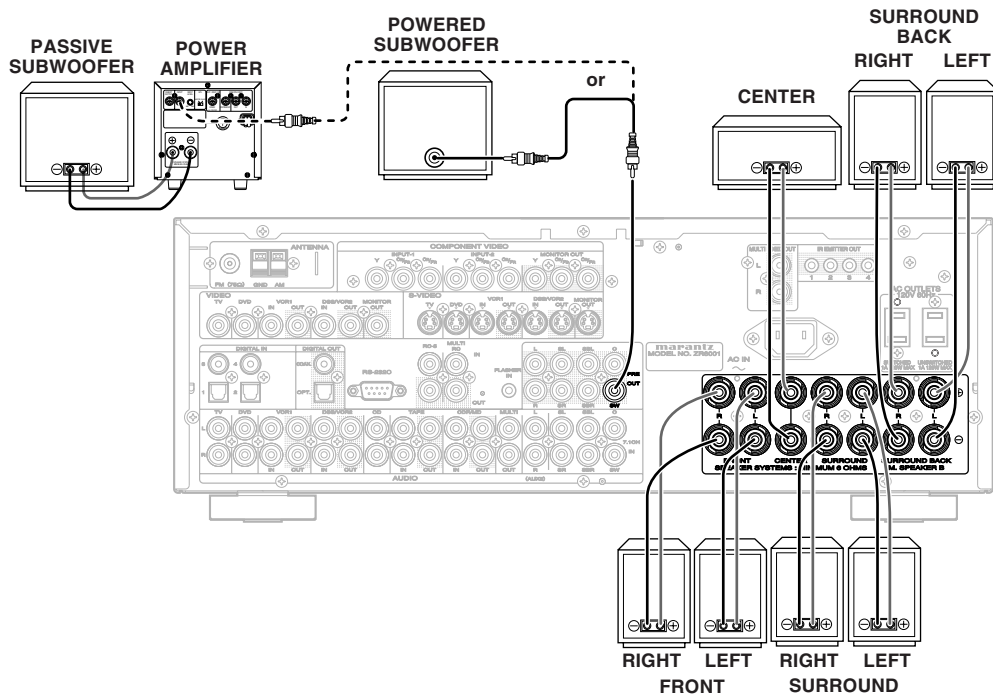


**CONNECTING SPEAKER WIRE**

1. Strip away approx. 3/8 inch (10 mm) of wire insulation.
2. Twist the bared wire ends tight, to prevent short circuits.
3. Loosen the knob by turning it counterclockwise.
4. Insert the bare part of the wire into the hole in side of each terminal.
5. Tighten the knob by turning it clockwise to secure the wire.

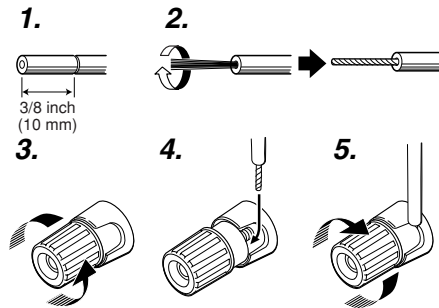

**Caution:**

- Be sure to use speakers with the specified impedance as shown on the rear panel of this unit.
- To prevent damage to circuitry, do not let the bare speaker wires touch each other and do not let them touch any metal part of this unit.
- Do not touch the speaker terminals when the power is on. It may cause you to receive an electric shocks.
- Do not connect more than one speaker cable to one speaker terminal. Doing so may damage this unit.

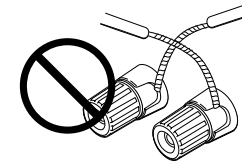


**Note:**

- Be sure to connect the positive and negative cables for the speaker properly. If they are miss-connected, the signal phase will be reversed and the signal quality will be corrupted.

**CONNECTING A SUBWOOFER**

Use the PRE OUT SUBWOOFER jack to connect a powered subwoofer (power amplifier built in). If your subwoofer is a passive type (power amplifier is not built in), connect a monaural power amplifier to the PRE OUT SUBWOOFER jack and connect the subwoofer to the amplifier.

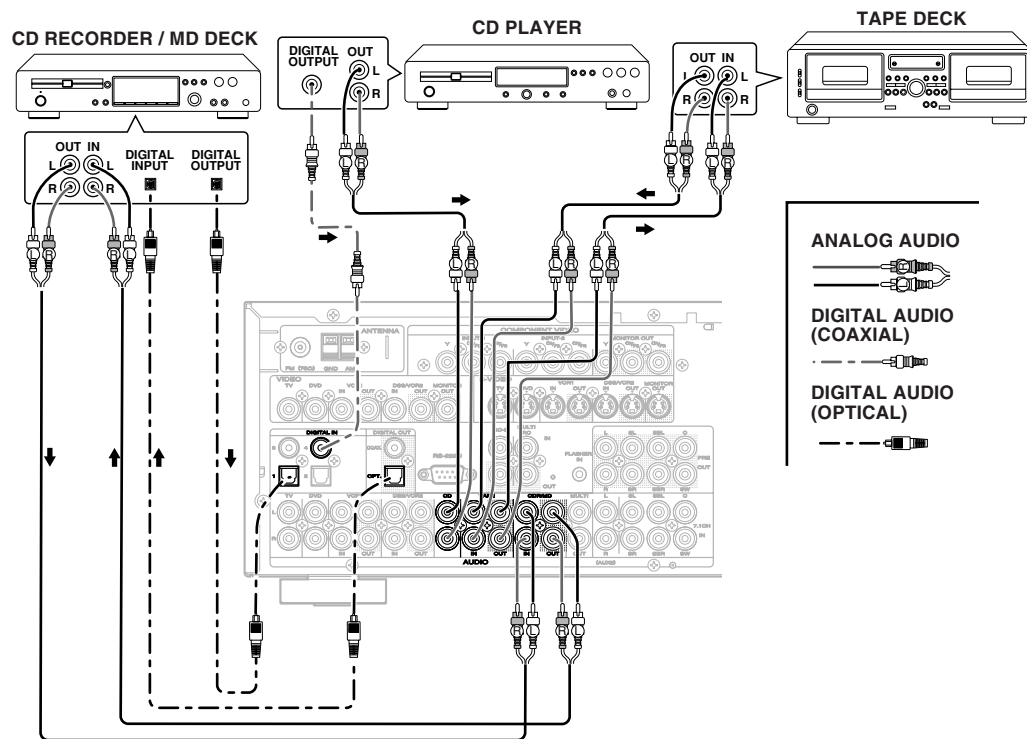

The output audio signal from the TAPE OUT jack and the CD-R/MD OUT jack is the same signal which is currently selected.

**Caution:**

- Do not connect this unit and other components to mains power until all connections between components have been completed.

**Notes:**

- Insert all plugs and connectors securely. Incomplete connections may make noise.
- Be sure to connect the left and right channels properly.  
Red connectors are for the R (right) channel, and white connectors are for the L (left) channel.
- Be sure to connect input and output properly.
- Refer to the instructions for each component that is connected to this unit.
- Do not bind audio/video connection cables with power cords and speaker cables this will result in generating a hum or other noise.

**CONNECTING DIGITAL AUDIO COMPONENTS**



- There are 4 digital inputs, 2 coaxial jacks and 2 optical jacks, on the rear panel. You can use these jacks to input PCM, Dolby Digital and DTS bitstream signals from a CD, DVD, or other digital source components.
- There is one digital output coaxial jack and one optical output jack on the rear panel. These jacks can be connected to a CD recorder-, or a MD deck inputs, respectively.
- Refer to the instructions for each component. To setup the digital audio format of DVD player, or other digital source's connected to digital input jacks.
- Use fiber optical cables (optical) for DIG-1,2 input jacks. Use 75 ohms coaxial cables (for digital audio or video) for DIG-3, 4 input jacks.
- You can designate the input for each digital input/output jacks according to your component. See page 20.

**Notes:**

- There is no Dolby Digital RF input jack. Please use an external RF demodulator Dolby Digital decoder when connecting the Dolby Digital RF output jack of the video disc player to the digital input jack.
- The digital signal jacks on this unit conform to the EIA standard. If you use a cable that does not conform to this standard, this unit may not function properly.
- Each type of audio jack works independently. Signals input through the digital and analog jacks are output through the corresponding digital and analog jacks, respectively.



CONNECTING VIDEO COMPONENTS

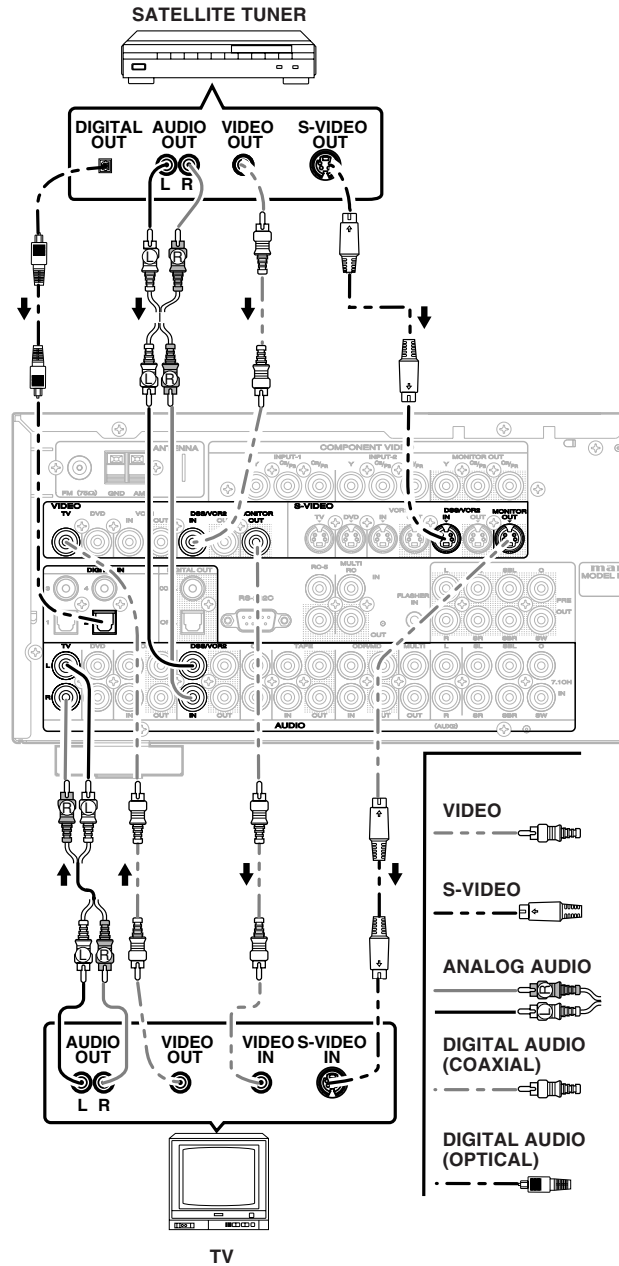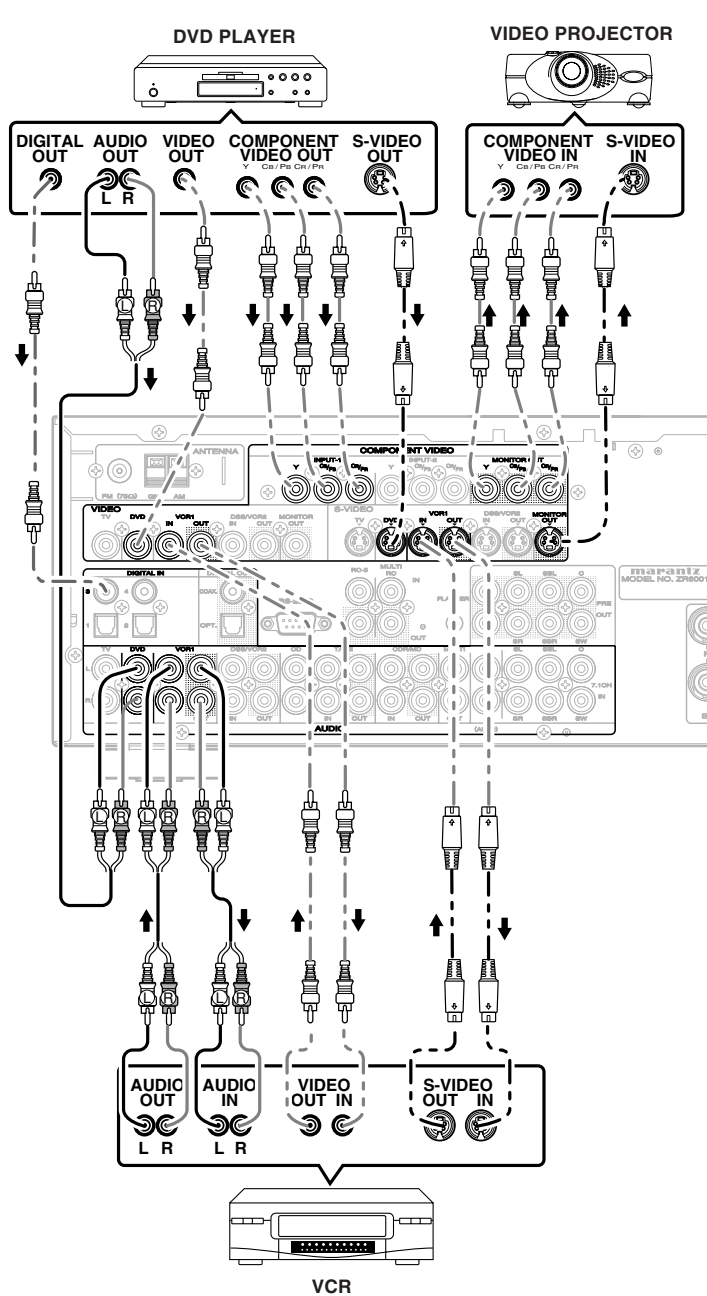

VIDEO, S-VIDEO, COMPONENT JACKS

There are 3 types of video jacks on the rear panel.

**VIDEO jack**

The video signal for the VIDEO jacks is the conventional composite video signal.

**S-VIDEO jack**


The video signal is separated into luminance (Y) and color (C) signals for the S-VIDEO jack. The S-VIDEO signals enables high-quality color reproduction. If your video component has an S-VIDEO output, we recommend to use it. Connect the S-VIDEO output jack on your video component to the S-VIDEO input jack on this unit.

**Component jack**

Make component video connections to a TV or monitor with component inputs to produce higher quality video images. Use a component video cable or 3 video cords to connect the component video out jacks on the ZR6001 to the monitor.

**Notes:**

- Be sure to connect the left and right audio channels properly.  
Red connectors are for the R (right) channel, and white connectors are for L (left) channel.
- Be sure to connect the inputs and outputs of the video signals properly.
- If you connect the S-VIDEO or component signal to the S-VIDEO or component jack on this unit, it is not necessary to connect the conventional video signal to the VIDEO (composite) jack. If you use both video inputs, this unit gives priority to the S-VIDEO signal.
- Each type of video jack works independently. Signals input to the VIDEO (composite) and S-VIDEO jacks or component are output to the corresponding VIDEO (composite) and S-VIDEO or component jacks, respectively.
- This unit has the "TV-AUTO ON/OFF" function to turn the TV ON or OFF automatically, by sensing the incoming video signal from the VIDEO jacks.
- You may need to setup the digital audio output format of your DVD player, or other digital source components. Refer to the instructions of the each component connected to the digital input jacks.
- There is no Dolby Digital RF input jack. Please use an external RF demodulator with a Dolby Digital decoder to connect a video disc player which has a Dolby Digital output jack to the digital input jack on this unit.

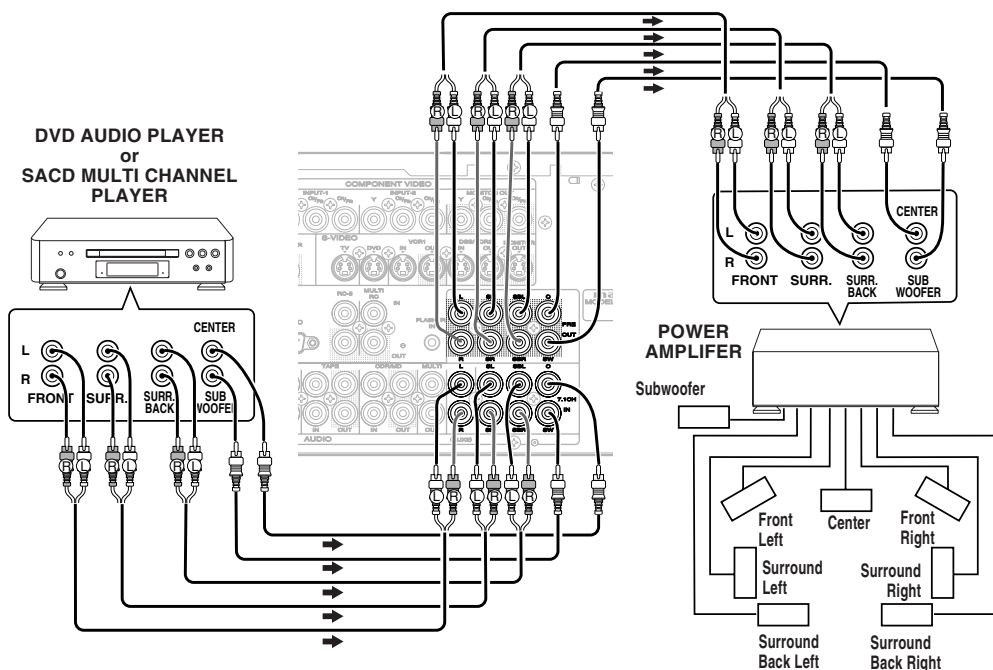


**CONNECTING MULTI CHANNEL AUDIO SOURCE**

The 7.1CH INPUT jacks are for multichannel audio source such as a SACD multichannel player, DVD audio player or external decoder. If you use these jacks, switch on the 7.1CH INPUT and set the 7.1CH INPUT level by using the SETUP MAIN MENU. See page 32.

**CONNECTING AN EXTERNAL POWER AMPLIFIER**

The PREOUT jacks are for connecting external power amplifiers. Be sure to connect each speaker to the corresponding external power amplifier.

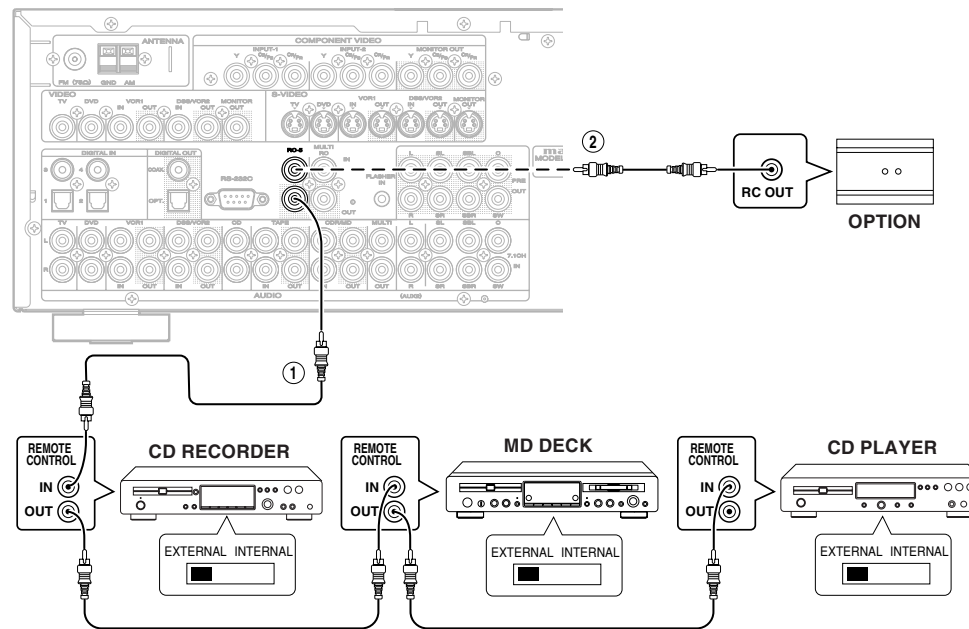

①

You can control other Marantz products through this unit with the remote control by connecting the REMOTE CONTROL terminals on each unit. The signal transmitted from the remote control is received by the remote sensor on this unit. Then the signal is sent to the connected device through this terminal. Therefore you need to aim the remote signal only to the unit. Also, if a Marantz power amplifier (some models excluded) is connected to one of these terminals, the power amplifier's power switch is synchronized with this unit's power switch.

Set the REMOTE CONTROL SWITCH on the units, other than the main unit to EXT.(EXTERNAL) for this feature.

②


Whenever external infrared sensors or similar devices are connected to RC-5 IN of the ZR6001, be sure to always disable operation of the infrared sensor on the main unit by using the following procedure.

1. Hold down the **MULTI** button and **MENU** button on the front panel at the same time for five seconds.
2. The setting "IR=ENABLE" is shown on the FL DISPLAY.
3. Press the ◀ or ▶ cursor button to change this to "IR=DISABLE".
4. Press the **ENTER** button. Once this setting is made, the infrared sensor on the main unit is disabled.

**Note:**


- Be sure to set to "IR=ENABLE" when external infrared sensors or similar devices are not connected. Otherwise, the main unit will be unable to receive remote control commands.
- 5. To restore the original setting, perform steps 1 to 4 to set to "IR=ENABLE".

## CONNECTING THE ANTENNA TERMINALS

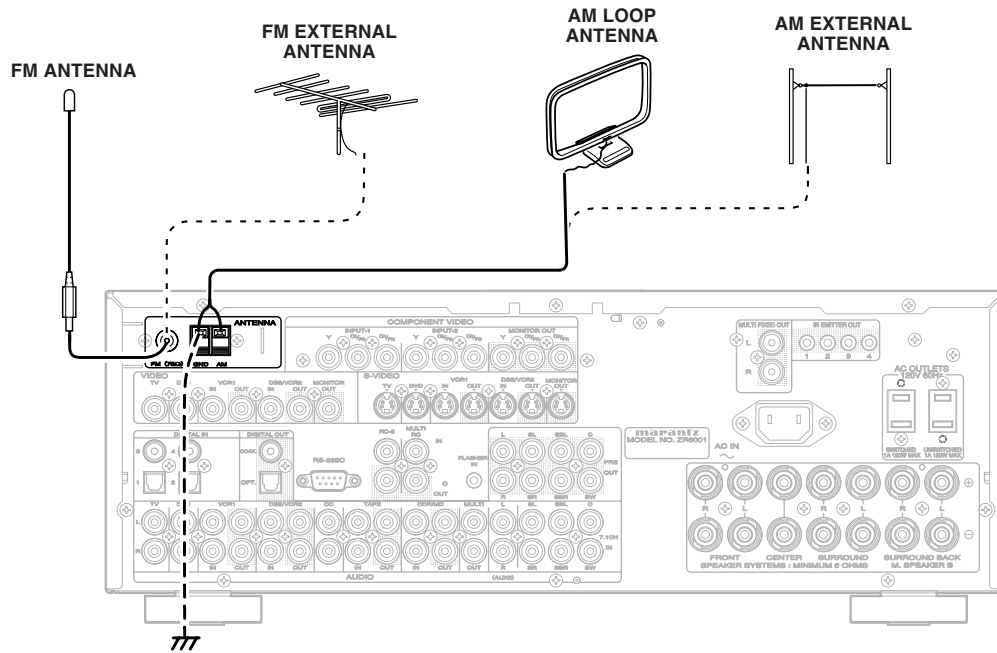


### ASSEMBLING THE AM LOOP ANTENNA


1. Release the vinyl tie and take out the connection line.

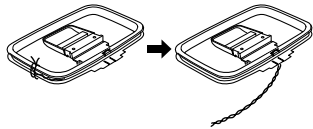


2. Bend the base part in the reverse direction.

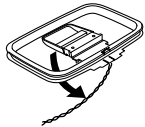

3. Insert the hook at the bottom of the loop part into the slot at the base part.

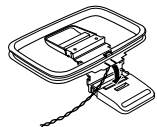

 4. Place the antenna on stable surface.

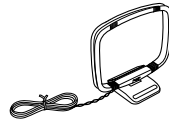

## CONNECTING THE SUPPLIED ANTENNAS

### Connecting the supplied FM antenna

The supplied FM antenna is for indoor use only. During use, extend the antenna and move it in various directions until the clearest signal is received. Fix it with push pins or similar implements in the position that will cause the least amount of distortion. If you experience poor reception quality, an outdoor antenna may improve the quality.

### Connecting the supplied AM loop antenna

The supplied AM loop antenna is for indoor use only.

Set it in the direction and position it to where you receive the clearest sound. Put it as far away as possible from the unit, televisions, speaker cables, and power cords.

If you experience poor reception quality, an outdoor antenna may improve the quality.

1. Press and hold down the lever of the AM antenna terminal.
2. Insert the bare wire into the antenna terminal.
3. Release the lever.

## CONNECTING AN FM OUTDOOR ANTENNA

### Notes:


- Keep the antenna away from noise sources (neon signs, busy roads, etc.).
- Do not put the antenna close to power lines. Keep it well away from power lines, transformers, etc.
- To avoid the risk of lightning and electrical shock, grounding is necessary.

## CONNECTING AN AM OUTDOOR ANTENNA

An outdoor antenna will be more effective if it is stretched horizontally above a window or outside.

### Notes:

- Do not remove the AM loop antenna.
- To avoid the risk of lightning and electrical shock, grounding is necessary.

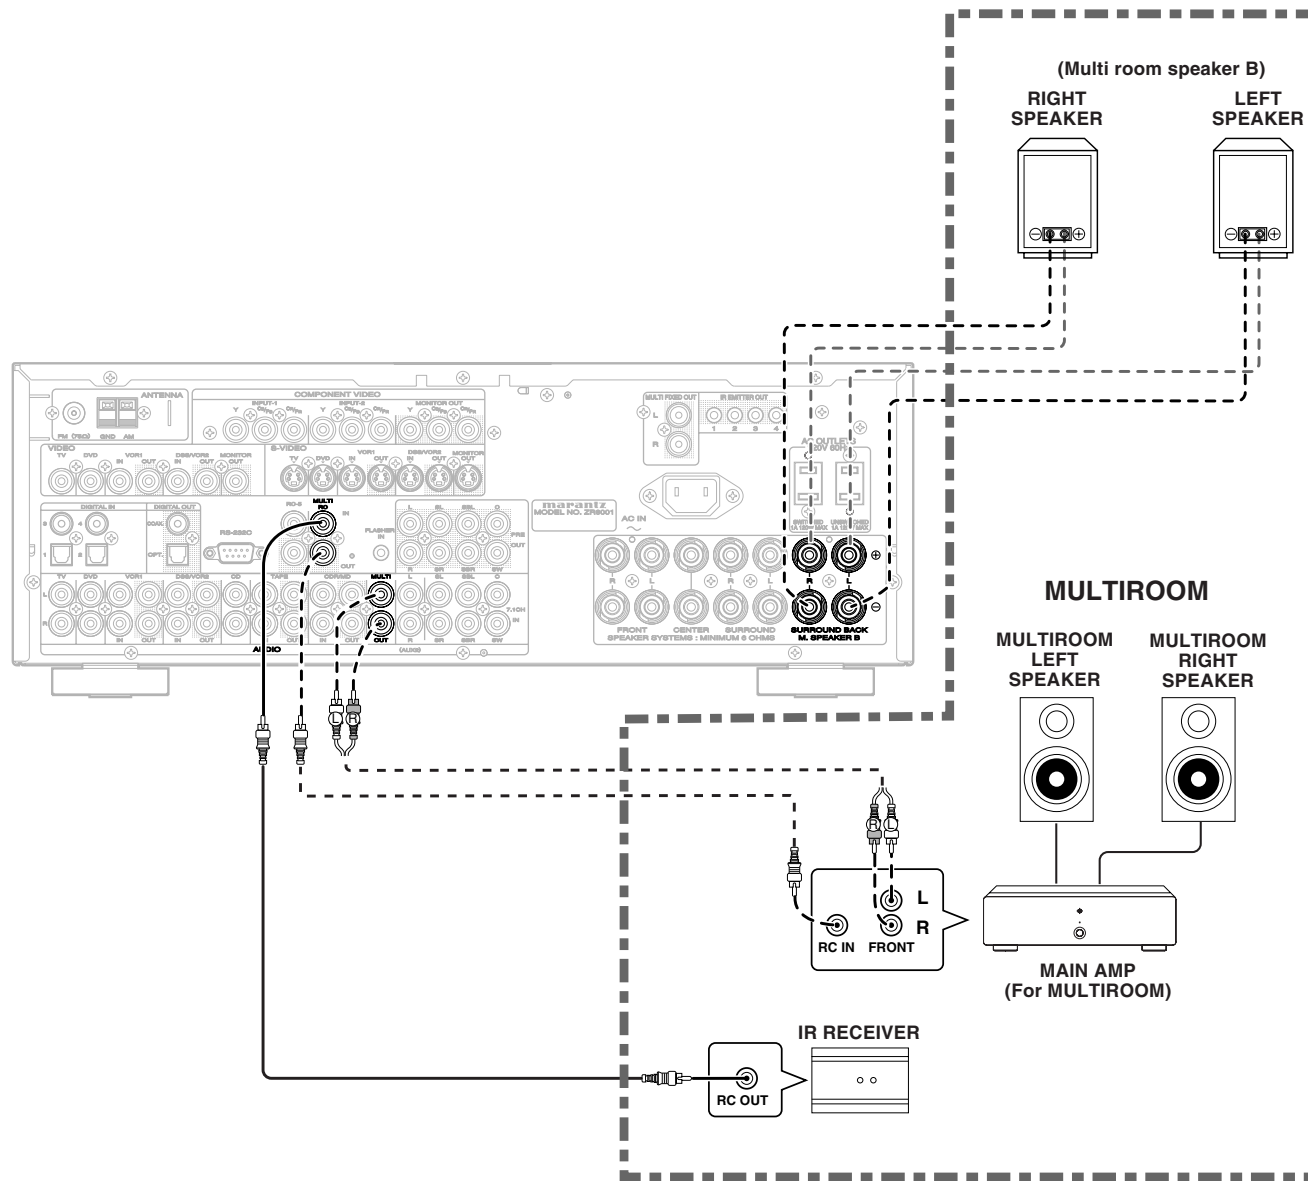

**Note:**

- You can use surround back speaker terminals as multi room speaker terminals when you use no surround back speaker.

# SETUP

After all components are connected, initial setup must be performed.

## ON SCREEN DISPLAY MENU SYSTEM

The ZR6001 incorporates an on-screen menu system, which makes various operations possible by using the cursor (▲, ▼, ◀, ▶) and **ENTER** buttons on the remote control or on the front panel.


**Note:**

- To view the on-screen displays, make certain you have made a connection from the Monitor Out jack on the rear panel to the composite, S-Video, component video input of your TV or projector. (see page 16)

1. Press the **AMP** button of the remote control. (This step is not needed when operating the setup menus from the receiver itself.)
2. Press the **MENU** button on the remote control or set to display the "SETUP MAIN MENU" of the OSD menu system. There are 8 items in the SETUP MAIN MENU.
3. Select a desired sub-menu with the ▲ or ▼ cursor buttons, and press the **ENTER** button to enter. The display will change to the selected sub-menu. You can lock the condition of setup to each sub-menu with the ◀ or ▶ or cursor buttons.

**Note:**

- If you desire to adjust any sub-menu, you need to set it to UNLOCKED.
4. If you desire to exit from this menu system, press the **EXIT** button, or move the cursor to **EXIT** and press the **ENTER** button.

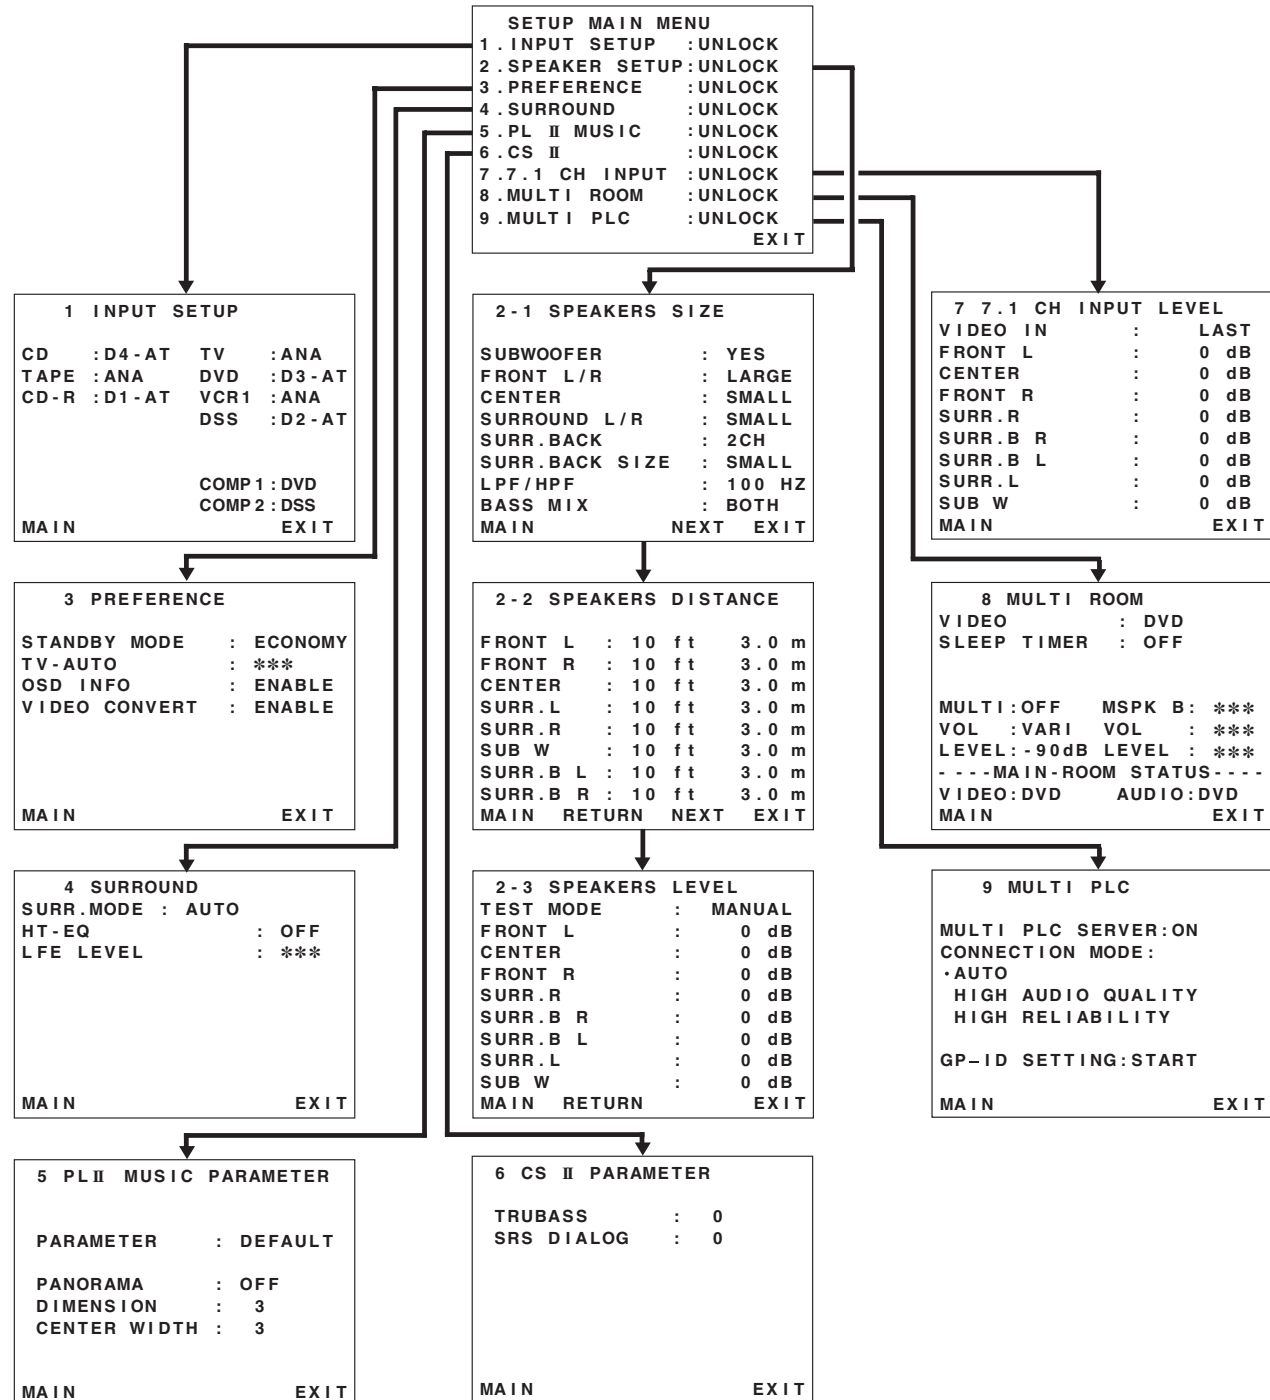



## 1 INPUT SETUP (ASSIGNABLE DIGITAL INPUT AND COMPONENT VIDEO INPUT)

4 digital inputs and 2 component video inputs can be assigned to a desired source. Use this menu to select the digital input jack to be assigned to the input source.

1. Select "INPUT SETUP" in SETUP MAIN MENU with ▲ or ▼ cursor button, and press the ENTER button.

1 INPUT SETUP			
CD	: D4 - AT	TV	: ANA
TAPE	: ANA	DVD	: D3 - AT
CD - R	: D1 - AT	VCR1	: ANA
		DSS	: D2 - AT
		COMP 1	: DVD
		COMP 2	: DSS
MAIN		EXIT	

2. To select the input source, press the ▲ or ▼ cursor buttons.
3. To select the digital input jack, press the ◀ or ▶ cursor buttons.  
Select "Dx-AT" for input sources, for automatic detection of the digital input signal condition. If there is not a digital signal present, but there is an analog signal present, the analog signal will be played.  
Select "Dig x", when only a digital signal will be used. Select "ANA" for input sources for which no digital input jacks are used.
4. To select the video source, select "COMP1" or "COMP2" by pressing the ▲ or ▼ cursor buttons, and press the ◀ or ▶ cursor buttons to select the video source to be assigned.
5. After you complete this portion of the set up, move the cursor to MAIN with the ▲ or ▼ cursor buttons and press the ENTER button.

**Notes:**

- The TUNER, AUX1 and AUX2 are fixed to the analog input, and cannot be selected for any digital input.
- When a DTS-LD or DTS-CD is playing, this setup is not available. This is to avoid noise being generated from the analog input.
- If "Dx-AT" is selected and a DVD, compact disc or LD is fast-forwarded during playback, decoded signals may produce a skipping sound. In such cases, change the setting to DIGITAL.

## 2 SPEAKER SETUP

After you have installed the ZR6001, connected all the components, and determined the speaker layout, it is now time to perform the settings in the Speaker Setup menu for the optimum sound acoustics for your environment and speaker layout.

Before you perform the following settings, it is important that you first determine the following characteristics:

### 2-1 SPEAKERS SIZE

When setting the speaker size in the SPEAKER SIZE sub-menu, use the guidelines given below.

**LARGE:**

The complete frequency range for the channel you are setting will be output from the speaker.

**SMALL:**

Frequencies of the channel you are setting lower than approx. 100 Hz will be output from the subwoofer.

If the Subwoofer is set to "NONE" and the front speakers are set to "LARGE," then the sound will be output from both the left and right speakers.

2 - 1 SPEAKERS SIZE	
SUBWOOFER	: YES
FRONT L/R	: LARGE
CENTER	: SMALL
SURROUND L/R	: SMALL
SURR. BACK	: 2CH
SURR. BACK SIZE	: SMALL
LPF/HPF	: 100 HZ
BASS MIX	: BOTH
MAIN	NEXT EXIT

1. Select "SPEAKER SETUP" in SETUP MAIN MENU with ▲ or ▼ cursor button, and press the ENTER button.
2. To select the each speaker, press the ▲ or ▼ cursor buttons.
3. To select the setting of each speaker size, press the ◀ or ▶ cursor buttons.
4. After you complete this portion of the set up, move the cursor to "NEXT" with the ▲ or ▼ cursor buttons and then press the ENTER button to go to the next page.

**SUBWOOFER:**

**YES:**

Select when a subwoofer is connected.

**NONE:**

Select when a subwoofer is not connected.

**FRONT L/R**

**LARGE:**

Select if the front speakers are large.

**SMALL:**

Select if the front speakers are small.

- If "NONE" is selected for the Subwoofer setting, then this setting is fixed to "LARGE."

**CENTER**

**NONE:**

Select if no center speaker is connected.

**LARGE:**

Select if the center speaker is large.

**SMALL:**

Select if the center speaker is small.

**SURROUND L/R**

**NONE:**

Select if no surround left and right speakers are connected.

**LARGE:**

Select if the surround left and right speakers are large.

**SMALL:**

Select if the surround left and right speakers are small.

**SURR. BACK**

**NONE:**

Select if no surround back left and right speakers are connected.

**2CH:**

Select if the surround back left and right speakers are connected.

**1CH:**

Select if the one surround back speaker is connected.

In this case, the audio signal is emitted from the Surround L output terminal.

**Notes:**

- If "NONE" is selected for the Surround L/R setting, then this setting is fixed to "NONE."
- You can use surround back speaker terminals as multi room speaker terminals when you use no surround back speaker. (See page 19)

**SURR. BACK SIZE**

**LARGE:**

Select if the surround back speaker is large.

**SMALL:**

Select if the surround back speaker is small.

**Note:**

- If "NONE" is selected for the Surround L/R setting, then this setting is not available.

**LPF/HPF**

When you use a subwoofer, you can select the cutoff frequency for the small speakers used. Select one of the crossover frequency levels according to the size of the small speaker connected.

**80Hz:**

Select this when the bass speaker is about 12 cm (4 3/4 inches).

**100Hz:**

Select this when the bass speaker is about 10 cm (3 15/16 inches).

**120Hz:**

Select this when the bass speaker is about 8 cm (3 3/16 inches).

**Notes:**

- Use the above comments as reference when adjusting.
- If Pure-Direct mode, 7.1CH Input is in use, this function does not take effect.

**BASS MIX**

The bass mix setting is only valid when "LARGE" is set for the front speakers and "YES" is set for the subwoofer during stereo playback.

This setting has effect only during playback of PCM or analog stereo sources.

When "BOTH" is selected, the low frequencies will be played through the main L&R, as well as the sub woofer.

In this playback mode, the low frequency range expand more uniformly through the room, but depending on the size and shape of the room, interference may result in a decrease of the actual volume of the low frequency range.

By selecting "MIX", the low frequencies will play through the main L&R ONLY.

**Note:**

- LFE signals during playback of Dolby Digital or DTS, will be played through the sub woofer.

## 2-2 SPEAKERS DISTANCE

Use this parameter to specify the distance of each speaker's position from the listening position. The delay time is automatically calculated according to these distances.

Begin by determining the ideal or most commonly used seating position in the room.

This is important for the timing of the acoustics to create the proper sound space that the ZR6001 and today's sound systems are able to produce.

### Note:

- For speakers that you have selected "NONE" the Speaker Configuration sub-menu will not appear here. (There are several useful books and special DVD and LD's available to guide you through proper home theater configuration. If you are unsure, have your Marantz dealer perform the installation for you. They are trained professionals familiar with even the most sophisticated custom installations. Marantz recommends the WWW.CEDIA.ORG website for further information about this).

2 - 2 SPEAKERS DISTANCE		
FRONT L	: 10 ft	3.0 m
FRONT R	: 10 ft	3.0 m
CENTER	: 10 ft	3.0 m
SURR. L	: 10 ft	3.0 m
SURR. R	: 10 ft	3.0 m
SUB W	: 10 ft	3.0 m
SURR. B L	: 10 ft	3.0 m
SURR. B R	: 10 ft	3.0 m
MAIN	RETURN	NEXT EXIT

- To select each speaker, press the ▲ or ▼ cursor buttons.
- To set the distance for each speaker, press the ◀ or ▶ cursor buttons.
- After you complete this portion of the set up, move the cursor to "NEXT" with the ▲ or ▼ cursor buttons and then press the ENTER button to go to the next page.

### FRONT L:

Set the distance from the front left speaker to your normal listening position.

### Center:

Set the distance from the center speaker to your normal listening position.

### FRONT R:

Set the distance from the front right speaker to your normal listening position.

### SURR. L:

Set the distance from the surround left speaker to your normal listening position.

### SURR. R:

Set the distance from the surround right speaker to your normal listening position.

### SUB W:

Set the distance from the subwoofer to your normal listening position.

### SURR. B L:

Set the distance from the surround back left speaker to your normal listening position.

### SURR. B R:

Set the distance from the surround back right speaker to your normal listening position.

### Notes:

- Set the distance to each speaker in meters (m) or feet (ft) as follows.  
m: 0.3 - 9 m in 0.3 m steps  
ft: 1 - 30 ft in 1 ft steps
- For the speakers that you have selected "NONE" the Speaker Size menu will not appear.
- The setting for Surr.Back L and Surr.Back R appears if you set for it to, two surround back speakers in the Speaker Size menu.
- The setting of Surr.Back appears if it is set for one surround back speaker in the Speaker Size menu.

## 2-3 SPEAKERS LEVEL SETTING WITH TEST TONE

Here you will set the volume for each speaker so that they are all heard by the listener at the same level. We recommend using a SPL (Sound Pressure Level) meter, when available.

### Note:

- The speaker level settings are not available in 7.1 Channel Input mode, CS mode and Multi Channel Stereo mode.

2 - 3 SPEAKERS LEVEL		
TEST MODE	:	MANUAL
FRONT L	:	0 dB
CENTER	:	0 dB
FRONT R	:	0 dB
SURR. R	:	0 dB
SURR. B R	:	0 dB
SURR. B L	:	0 dB
SURR. L	:	0 dB
SUB W	:	0 dB
MAIN	RETURN	EXIT

### TEST MODE :

Selects "MANUAL" or "AUTO" for generating the mode of the test tone with the ◀ or ▶ cursor buttons.

If you select "AUTO", the test tone will be cycled through in a circular pattern which is Left → Center → Right → Surround Right → Surround Back Right → Surround Back Left → Surround Left → Subwoofer → Left →.. increments of 2 seconds for each channel.

Using the ◀ or ▶ cursor buttons, adjust the volume level of the noise from the speaker so that it is the same level for all the speakers.

If you select "MANUAL", adjust the output level of each speaker as listed below.

- When you move the cursor to FRONT L by pressing the ▼ cursor button, the ZR6001 will emit a pink noise from the front left speaker. Remember the level of this noise and then press the ▼ cursor button.  
(Note that this can be adjusted to any level between -10 and +10 dB in 1 dB intervals except the subwoofer setting. The subwoofer can be adjusted to any level between -15 and +10 dB in 1 dB intervals.)  
The ZR6001 will now emit the pink noise from the center speaker.
- Using the ◀ and ▶ cursor buttons, adjust the volume level of the noise from the center speaker so that it is the same level as the front left speaker.
- Press the ▼ cursor button again. The ZR6001 will now emit the pink noise from the front right speaker.
- Repeat steps 2 and 3 above for the front right and other speakers until all speakers are adjusted to the same volume level.

After you complete this portion of the set up, press the ENTER button, the cursor will move to "MAIN" and then press the ENTER button to go to SETUP MAIN MENU.

### Notes:

- Speakers that you selected "NONE" for in the Speaker Size menu will not appear.
- The setting of Surr.Back L and Surr.Back R appears if you have set it for two surround back speakers in the Speaker Size menu.
- The setting of Surr.Back appears if you have set it for one surround back speaker in the Speaker Size menu.
- To adjust the speaker levels for 7.1-channel input sources, you will need to use the 7.1CH-INPUT sub menu. (See page 24).

## 3 PREFERENCE

3 PREFERENCE	
STANDBY MODE	: ECONOMY
TV - AUTO	: ***
OSD INFO	: ENABLE
VIDEO CONVERT	: ENABLE
MAIN	EXIT

- Select "PREFERENCE" in the SETUP MAIN MENU with the ▲ or ▼ cursor buttons, and press the ENTER button.
- To select a desired content, press the ▲ or ▼ cursor buttons.

### STANDBY MODE:

When this function is set to "ECONOMY", you can reduce the power consumption when the unit is in the standby mode.

### Note:

- TV-AUTO and RS-232C are disabled in the "ECONOMY" setting.

### TV AUTO:

Select the TV AUTO ON/OFF function to enable or disable with the ◀ or ▶ cursor buttons. (refer to page 31)

### OSD Info:

Select the OSD information function to enable or disable with the ◀ or ▶ cursor buttons.

If you select "ENABLE", the ZR6001 will display the status of the feature (Volume up/down, input select, etc..) on the TV monitor. But if you do not desire this information, select "DISABLE".

### VIDEO CONVERT:

Select the VIDEO CONVERT function to enable or disable with the ◀ or ▶ cursor buttons. (Video cable connection: Refer to page 27)

After you complete this portion of the set up, move the cursor to "MAIN" with the ▲ or ▼ cursor buttons and press the ENTER button.

## 4 SURROUND

4 SURROUND	
SURR. MODE :	AUTO
HT-EQ :	OFF
LFE LEVEL :	0 dB
MAIN	EXIT

1. Select "SURROUND" in the SETUP MAIN MENU with the ▲ or ▼ cursor buttons, and press the ENTER button.
2. To select a desired content, press the ▲ or ▼ cursor buttons.

### SURR.MODE:

Select the desired surround mode with the ◀ or ▶ cursor buttons.

### HT-EQ:

Select to activate the HT-EQ with the ◀ or ▶ cursor buttons.

The tonal balance of a film soundtrack will be excessively bright and harsh when played back over audio equipment in the home. This is because film soundtracks were designed to be played back in large movie theater environments. Activating the HT-EQ feature when watching a film made for movie theaters corrects this and restores the correct tonal balance.

The HT-EQ feature is available except in the following modes.

- 7.1 CH INPUT
- PURE-DIRECT
- When VIRTUAL is set for the surround mode

### LFE LEVEL:

Select the output level of the LFE signal included in the Dolby Digital signal or the DTS signal.

Select 0 dB, -10 dB or OFF with the ◀ or ▶ cursor buttons.

After you complete this portion of the set up, move the cursor to "MAIN" with the ▲ or ▼ cursor buttons and press the ENTER button.

## 5 PL II (PRO LOGIC II) MUSIC PARAMETER

Pro Logic II-Music mode creates a rich and enveloping surround ambience from stereo sources such as CDs.

In this mode, ZR6001 includes three controls to fine-tune the soundfield as follows.

5 PL II MUSIC PARAMETER	
PARAMETER :	DEFAULT
PANORAMA :	OFF
DIMENSION :	3
CENTER WIDTH :	3
MAIN	EXIT

Select "PL II MUSIC" in the SETUP MAIN MENU with the ▲ or ▼ cursor buttons, and press the ENTER button.

### PARAMETER:

Select "DEFAULT" or "CUSTOM" with the ◀ or ▶ cursor buttons.

If you select "CUSTOM", you can adjust three parameters as listed below.

### PANORAMA:

Select the Panorama mode On or Off with the ◀ or ▶ cursor buttons.

Panorama wraps the sound of the front left and right speakers around you, for an exciting perspective.

### DIMENSION:

Set the Dimension level between 0 and 6 level in 1 level intervals with the ◀ or ▶ cursor buttons.

Adjust the soundfield either towards the front or towards the rear.

This can be useful to help achieve a more suitable balance from all the speakers with certain recordings.

### CENTER WIDTH:

Set the Center width level between 0 and 7 in 1 level intervals with the ◀ or ▶ cursor buttons.

Center Width allows you to gradually spread the center channel sound into the front left and right speakers.

At its widest setting, all the sound from the center is mixed into the left and right.

This control may help achieve a more spacious sound or a better blend for the front image.

If "NONE" was selected for the Center speaker setting, in the Speaker size set up menu, then this setting will not appear.

After you complete this portion of the set up, move cursor to "MAIN" with the ▲ or ▼ cursor buttons and press the ENTER button.

## 6 CS II (CIRCLE SURROUND II) PARAMETER

6 CS II PARAMETER	
TRUBASS :	0
SRS DIALOG :	0
MAIN	EXIT

1. Select "CS II" in the SETUP MAIN MENU with the ▲ or ▼ cursor buttons, and press the ENTER button.
2. To Select desired contents as below, press the ▲ or ▼ cursor buttons.

### TRUBASS:

Set the TRUBASS level between 0 and 6 level in 1 level interval with the ◀ or ▶ cursor buttons.

TRUBASS produced by the speakers are an octave below the actual physical capabilities of the speakers adding exciting, deeper bass effects.

### SRS DIALOG:

Set the SRS DIALOG level between 0 and 6 in 1 level intervals with the ◀ or ▶ cursor buttons.

This can be popped out of the surround audio effects, allowing the listener to easily discern what the actors say.

If "NONE" was selected for the Center speaker setting, in the Speaker size set up menu, then this setting will not appear.

After you complete this portion of the set up, move cursor to "MAIN" with the ▲ or ▼ cursor buttons and press the ENTER button.

## 7 MULTI ROOM

ZR6001 has features in MULTI ROOM SYSTEM such as source selector, sleep timer, Multi Room Speaker output and remote control.

You can set these feature in this sub-menu.

7 MULTI ROOM	
AUDIO :	DVD
SLEEP TIMER :	OFF
MULTI : OFF	MSPK B : ***
VOL : VARI	VOL : ***
LEVEL : -90dB	LEVEL : ***
- - - MAIN - ROOM STATUS - - -	
VIDEO : DVD	AUDIO : DVD
MAIN	EXIT

1. Select "MULTI ROOM" in the SETUP MAIN MENU with ▲ or ▼ cursor button, and press the ENTER button.

2. To Select desired contents, press ▲ or ▼ cursor button

### AUDIO:

Select the audio source of the Multi-room output with ◀ or ▶ cursor buttons.

### SLEEP TIMER:

SLEEP timer function is available during the multiroom is active, set the time with ◀ or ▶ cursor buttons.

### MULTI (MULTI ROOM):

To switch on the Multi-room output ON or OFF, press ◀ or ▶ cursor button.

### VOL (VOLUME SETUP):

Select whether the Multi-room output level is variable or fixed with a ◀ or ▶ cursor buttons.

### LEVEL (VOLUME LEVEL):

Adjust the Multi-room output level with ◀ or ▶ cursor buttons.

### MSPK B (MULTI SPEAKER B):

To switch on the Multi-speaker B output ON or OFF, press ◀ or ▶ cursor buttons.

### Note:

- This setting can be changed when the Surr Back is set "NONE" in 2-1 SPEAKER SIZE menu. When this setting is unavailable, "\*\*\*" is displayed

### VOL (VOLUME SETUP):

Select whether the Multi-speaker output level is variable or fixed with a ◀ or ▶ cursor buttons.

### Note:

- This setting can be changed when the Surr Back is set "NONE" in 2-1 SPEAKER SIZE menu. When this setting is unavailable, "\*\*\*" is displayed

**LEVEL (VOLUME LEVEL):**

Adjust the Multi-speaker output level with ◀ or ▶ cursor button.

**Note:**

- This setting can be changed when the Surr Back is set "NONE" in 2-1 SPEAKER SIZE menu. When this setting is unavailable, "\*\*\*" is displayed

**MAIN ROOM STATUS:**

Selected input source in the main room will be displayed.

**Note:**

- If "VOLUME" is set to "FIXED", the multi-room output level cannot be adjusted from the second zone.

After you complete this portion of the set up, move the cursor to "MAIN" with ▲ or ▼ cursor buttons and press ENTER button.

**8 7.1 CH INPUT LEVEL**

This sub-menu is to adjust the speaker levels for 7.1-channel input sources.

Here you will adjust the volume for each channel so that they are all heard by the listener at the same level.

8 7.1 CH INPUT LEVEL		
VIDEO IN	:	LAST
FRONT L	:	0 dB
CENTER	:	0 dB
FRONT R	:	0 dB
SURR . R	:	0 dB
SURR . B R	:	0 dB
SURR . B L	:	0 dB
SURR . L	:	0 dB
SUB W	:	0 dB
MAIN	:	EXIT

1. Select "7.1CH INPUT" in the SETUP MAIN MENU with the ▲ or ▼ cursor buttons, and press the ENTER button.
2. To select "VIDEO IN", press ▲ or ▼ cursor button.
3. Using the ◀ or ▶ cursor buttons, select the video input source which is emitted from Monitor out in the 7.1 CH INPUT function. The input source is switched by pressing the ◀ or ▶ cursor buttons as follows;  
LAST ↔ TV ↔ DVD ↔ VCR1 ↔ DSS ↔ AUX1 ↔ V-OFF ↔ LAST ↔

**Notes:**

- When select LAST, the source is set previous source before 7.1 CH INPUT function is activated.
  - When select V-OFF, no signal is emitted from monitor out terminal.
4. To Select desired channel , press the ▲ or ▼ cursor buttons.
  5. Using the ◀ or ▶ cursor buttons, adjust the volume level of each channel.
  6. After you complete this portion of the set up, move the cursor to "MAIN" with the ▲ or ▼ cursor buttons and press the ENTER button.

**Notes:**

- These settings will be memorized to 7.1CH INPUT source.
- This feature can be directly selected with the CH.SEL button of the remote controller.

**9 MULTI PLC SETUP**

This submenu is for setting up the Multi PLC feature of the ZR6001.

9 MULTI PLC	
MULTI PLC SERVER:ON	
CONNECTION MODE:	
· AUTO	
HIGH AUDIO QUALITY	
HIGH RELIABILITY	
GP-ID SETTING:START	
MAIN	EXIT

1. Select "9. MULTI PLC" in the SETUP MAIN MENU with the ▲ or ▼ cursor buttons and press the ENTER button.
2. To select desired contents, press ▲ or ▼ cursor button.

**MULTI PLC SEVER:**

Select "ON" or "OFF" with the ◀ / ▶ cursor buttons to turn the Multi PLC Server feature ON/OFF.

**CONNECTION MODE:**

Select the Connection Mode of the Multi PLC feature with the ▲ / ▼ cursor buttons.

The available Connection Modes are:

- AUTO :Normal mode  
Use this mode as standard.
- HIGH AUDIO QUALITY(H-AQ)  
:Emphasizes audio quality.  
Use this mode to listen to high audio quality. (However, when multiple ZC4001 units are connected, audio may be lost or noise may occur in a ZC4001 that experience poor reception.)
- HIGH RELIABILITY(H-R)  
:Emphasizes reliability.  
Use this mode when multiple ZC4001 units are connected, audio is lost, or noise occurs.

**GP-ID SETTING**

To set a Group ID, connect the AC power cables of the ZR6001 and ZC4001 to wall power outlets as close to each other as possible. Set the Group ID simultaneously for the ZR6001 and ZC4001.

**<ZR6001>**


Using the OSD menu system, set "GP-ID SETTING" to "START".

**ZR6001 ON SCREEN DISPLAY MENU SYSTEM**


9 MULTI PLC	
MULTI PLC SERVER:ON	
CONNECTION MODE:	
· AUTO	
HIGH AUDIO QUALITY	
HIGH RELIABILITY	
GP-ID SETTING:START	
MAIN	EXIT

1. Select "9. MULTI PLC" in the SETUP MAIN MENU with the ▲ or ▼ cursor buttons, and press the ENTER button.
2. Select "GP-ID SETTING" with the ▲ or ▼ cursor buttons.

**<ZC4001>**

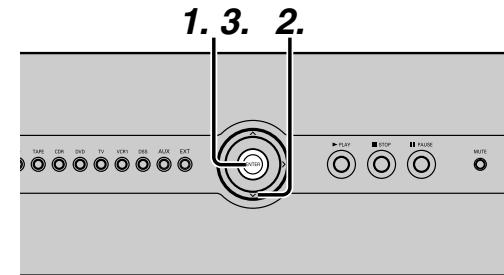


 1. Press and hold the ENTER button for 5 sec or more.

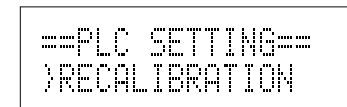




- Press the **▼** button once.

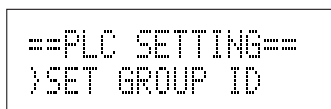 

- Simultaneously press the **ENTER** buttons of the ZR6001 and ZC4001.
 
<ZC4001>

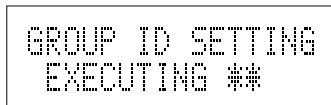


<ZR6001>

GP-ID SETTING : \* \*

The below message appears when the Group ID has been successfully set.
 
<ZC4001>

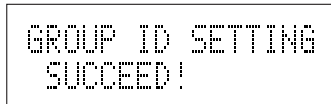


<ZR6001>

GP-ID SETTING : SUCCEED

The below message appears if the units fail to set the Group ID.
 
<ZC4001>

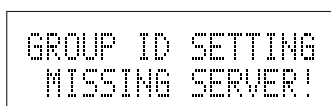

<ZR6001>

GP-ID SETTING : MISSING

**Notes:**

One possible reason the Group ID cannot be set is power line noise. In that case, unplug the power cable of the device that is generating noise, then plug it back in and try setting the Group ID again.

**PLC IR EMITTER OUT SETUP**

When the ZR6001 and ZC4001 are connected over the PLC, the ZC4001 can control output from other brands.

The ZR6001's IR EMITTER OUT terminals output remote control signals from the ZC4001 to an emitter, which are then picked up by the IR sensor of other brand products. To control other brand sources, an IR code must be set. If the IR code of the source is unknown, the IR code learning feature must be used.


**IR CODE SETTING**

- Press and hold the **MENU** button for 5 sec. or more.
- "**SET REMOTE IR**" appears, followed by "**INPUT IR CODE**".
- Press the **ENTER** button.
- Select a function to be controlled by ZR6001 with the **▲ / ▼** buttons. (Select from DVD, TV, VCR1, DSS, AUX1, TAPE, CD-R and CD.) "**FUNCTION : DVD**"
- Press the **ENTER** button.
- Select a source device of the other brand with the **▲ / ▼** buttons. (See the **PLC REMOTE CODES** table at the end of this guide. Select from TV, CABLE, V.ACC, DSS, VCR, LD, DVD, TUNER, AMP, CD, HOME, TAPE, CD-R and AUX.) "**DEVICE : DVD**"
- Press the **ENTER** button.
- Input the code of the source with the **▲ / ▼** buttons. Move to other digits in the code with the **◀ / ▶** buttons. "**CODE NR : 6000**"
- After inputting the code, press the **ENTER** button. "**WRONG NUMBER**" appears if an incorrect code is input. In that case, press the **ENTER** button. "**CHECK IR CODE**" appears followed by "**CODE: POWER**" if the correct code is input.
- Press the **ENTER** button to output the Power Code from the IR EMITTER OUT terminal and subsequently via the emitter as a test.

**IR CODE LEARNING**

- Press and hold the **MENU** button for 5 sec. or more.
- "**SET REMOTE IR**" appears, followed by "**INPUT IR CODE**".
- Select "**LEARN IR CODE**" with the **▲ / ▼** buttons.
- Press the **ENTER** button.
- Select a function to be controlled by ZR6001 with the **▲ / ▼** buttons. (Select from DVD, TV, VCR1, DSS, AUX1, TAPE, CD-R and CD.) "**FUNCTION : DVD**"
- Press the **ENTER** button.
- Select a source device of the other brand with the **▲ / ▼** buttons. (Select from TV, CABLE, V.ACC, DSS, VCR, LD, DVD, TUNER, AMP, CD, HOME, TAPE, CD-R and AUX.) "**DEVICE : DVD**"
- Press the **ENTER** button.
- Select a button to learn with the **▲ / ▼** buttons. (Select from 0, 1-9, SKIP+, SKIP-, POWER, ENTER, INPUT, PLAY, STOP, SEARCH+, SEARCH- and PAUSE.) "**KEY : POWER**"
- Press the **ENTER** button.

- Face the remote controller of the other brand source towards the learning IR sensor on the front panel of the ZR6001 and press the remote controller button to provide the code. (In this case, the Power button is pressed.)

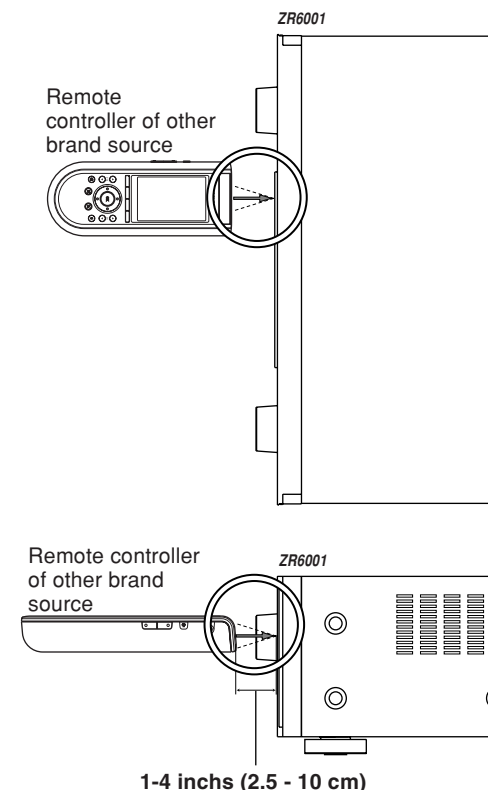

- "**LEARNING\***" appears. "**FAIL LEARNING**" appears if the ZR6001 fails to learn the IR code. "**SUCCEED**" appears if the ZR6001 successfully learns the IR code. After that, "**CHECK IR CODE**" appears, followed by "**CODE: POWER**".
- Press the **ENTER** button to output the Power Code from the IR EMITTER OUT terminal and subsequently via the emitter as a test.
- Press the **EXIT** button and repeat the procedure to learn the IR code for another remote controller button.



## 10 SPEAKERS LEVEL SETTING WITHOUT TEST TONE

Channel level (speaker level) can be adjusted without using test tone.

**Note:**

- Four channel level settings can be memorized for reproduction: the 7.1 ch input mode, CS mode, Multi channel stereo mode, and all other surround modes, respectively.


CH	LEVEL	ADJUST
FRONT L	:	0 dB
CENTER	:	0 dB
FRONT R	:	0 dB
SURR. R	:	0 dB
SURR. B R	:	0 dB
SURR. B L	:	0 dB
SURR. L	:	0 dB
SUB W	:	0 dB

1. Set the surround mode or 7.1 ch input mode which you want to adjust the channel level.
2. Press the **CH.SEL** button on the remote.
3. Select the desired channel (speaker) with the ◀ or ▶ cursor buttons.
4. Adjust the level with the ▲ or ▼ cursor buttons.
5. After completing the setup, press the **CH.SEL** button again.

## SIMPLE SETUP

You can setup the speaker conditions quickly with SIMPLE SETUP menu. In this menu, the number of speakers and speaker delay time can be set. These settings can be changed more detail in "2. SPEAKER" setup menu.

Press the **SIMPLE SETUP** button on the unit to enter this menu.

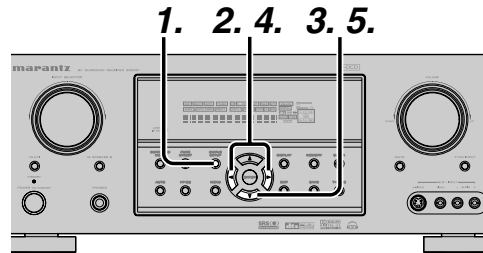

1. Press the **SIMPLE SETUP** button on the unit to enter the "SPEAKERS" menu.
2. Press ◀ or ▶ cursor button to select the speaker number.
3. Press the ▼ cursor button to enter the "ROOM" menu.
4. Press ◀ or ▶ cursor button to select the room size.
5. After finishing all setup, press the ▼ cursor button to exit the SIMPLE SETUP menu.

**Note:**

- All Simple Setup menu is reset when the speaker setting is changed with Speaker Setup menu.

SIMPLE SETUP		
1 . SPEAKERS	:	?
2 . ROOM	:	?
<b>EXIT</b>		

### The relation of the speakers number and connected speaker

CHANNEL	Front L/R (F)	Front Center (C)	Surround L/R (S)	Surround Back L/R (SB)	Sub woofer (SW)
7.1 ch	LARGE	SMALL	SMALL	2ch	YES
7.0 ch	LARGE	SMALL	SMALL	2ch	NONE
6.1 ch	LARGE	SMALL	SMALL	1ch	YES
6.0 ch	LARGE	SMALL	SMALL	1ch	NONE
5.1 ch	LARGE	SMALL	SMALL	NONE	YES
5.0 ch	LARGE	SMALL	SMALL	NONE	NONE
4.1 ch	LARGE	NONE	SMALL	NONE	YES
4.0 ch	LARGE	NONE	SMALL	NONE	NONE
3.1 ch	LARGE	SMALL	NONE	NONE	YES
3.0 ch	LARGE	SMALL	NONE	NONE	NONE
2.1 ch	LARGE	NONE	NONE	NONE	YES
2.0 ch	LARGE	NONE	NONE	NONE	NONE

### The relation of the room size and floor space

SIZE	Floor space	Width (W)	Depth (D)	Imaging Distance	
SMALL	10 m <sup>2</sup>	2.7 m	3.6 m	Front (F)	6 ft. (1.8 m)
				Center (C)	5 ft. (1.5 m)
				Surround (S)	4 ft. (1.2 m)
				Surr. Back (SB)	5 ft. (1.5 m)
				Sub Woofer (SW)	5 ft. (1.5 m)
MEDIUM	16 m <sup>2</sup>	3.6 m	4.5 m	Front (F)	7 ft. (2.1 m)
				Center (C)	6 ft. (1.8 m)
				Surround (S)	5 ft. (1.5 m)
				Surr. Back (SB)	7 ft. (2.1 m)
				Sub Woofer (SW)	6 ft. (1.8 m)
LARGE	24 m <sup>2</sup>	4.5 m	5.4 m	Front (F)	9 ft. (2.7 m)
				Center (C)	8 ft. (2.4 m)
				Surround (S)	7 ft. (2.1 m)
				Surr. Back (SB)	8 ft. (2.4 m)
				Sub Woofer (SW)	8 ft. (2.4 m)

The relation of the room size and floor space is a roughly standard.

# BASIC OPERATION

## (PLAY BACK)

### SELECTING AN INPUT SOURCE

Before you can listen to any input media, you must first select the input source on the ZR6001.

**Example : DVD**



To select DVD, turn the **INPUT FUNCTION SELECTOR** knob on the front panel or simply press the **DVD** button on the remote. After you have selected DVD, simply turn on the DVD player and play the DVD.

- As the input source is changed, the new input name will appear momentarily an OSD information on the video display. The input name will also appear in the display, on the front-panel.
- As the input is changed, the ZR6001 will automatically switch to the digital input, surround mode, attenuation, and night mode status which were entered during the configuration process for that source.
- When an audio source is selected, the last video input used remains routed to the **VCR1 & DSS/ VCR2** Outputs and **Monitor** Output. This permits simultaneous viewing and listening to different sources.
- When a Video source is selected, the video signal for that input will be routed to the **Monitor Output** jacks and will be viewable on a TV monitor connected to the ZR6001. If a component video input is connected to the **DVD** or **DSS** component inputs, it will be routed to the **Component Video Output**. Make certain that your TV is set to the proper input to view the signal.

### VIDEO CONVERT

When this function is activated, the video or S-video signal can be emitted from the video, S-video or component video output terminal. To activate this function, select VIDEO CONVERT in PREFERENCE menu and set ENABLE.


#### Notes:

- The component video signal is emitted only from component video output terminal. When the video equipment is connected by component terminal, connect the monitor and ZR6001 by the component terminal.
- This function is unavailable for the REC out terminal.
- This function is unavailable for the still picture, fast forward and reverse playing of the video component.
- If, while attempting to use the video convert feature, the ZR6001 cannot synchronize with the display device, "NO SIGNAL" appears on the monitor, or noise is generated, this feature cannot be used. All of these signs are caused by equipment incompatibility; there is nothing wrong with the ZR6001.



In such case, set VIDEO CONVERT in the PREFERENCE menu to DISABLE. Also, connect the video input signal to the display device via the MONITOR OUT terminal under VIDEO and the S-video input signal to the display device via the MONITOR OUT terminal under S-VIDEO.

#### Example:

Monitor is connected with the component.

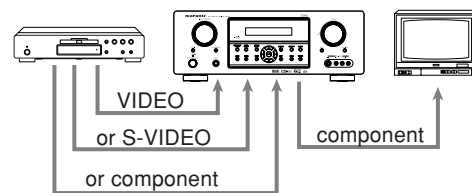

Monitor is connected with the video or S-video.

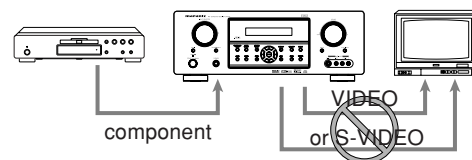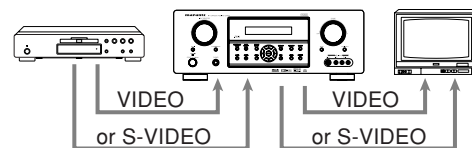

The signal cannot be converted from the component to the video or S-video.

#### Notes of OSD menu:


- The setup menu can be displayed through all video out (COMPONENT, S-VIDEO, VIDEO).
- The setting informations (e.g. volume setting) are displayed through all video out when the VIDEO CONVERT function are set ENABLE.

#### Note:

- No setting information is displayed when the signal is emitted from the COMPONENT IN to COMPONENT OUT.
- The setting informations (e.g. volume setting) are displayed through the S-VIDEO or VIDEO out when the VIDEO CONVERT function are set DISABLE. When the S-VIDEO and VIDEO outputs are used simultaneously, the setting informations are displayed through the S-VIDEO out only.


### SELECTING THE SURROUND MODE

**Example: AUTO SURROUND**

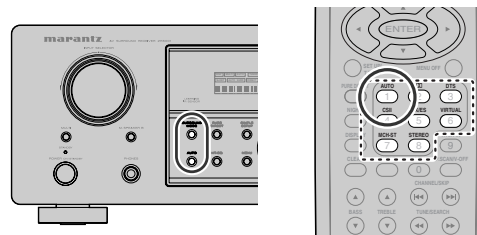

To select the surround mode during playback, press the **SURROUND MODE** button on the front panel or the **Surround mode** buttons on the remote.

### ADJUSTING THE MAIN VOLUME

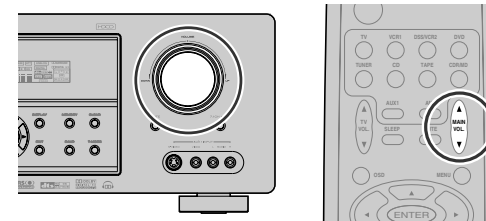

Adjust the volume to a comfortable level using the **VOLUME** control knob on the front panel or **VOL ▲ / ▼** buttons on the remote.


To increase the volume, turn the **VOLUME** knob clockwise or press **VOL ▲** button on the remote, to decrease the volume, turn counterclockwise or press **VOL ▼** button on the remote.

#### Notes:

- The volume can be adjusted within the range of  $-\infty$  to 18 dB, in steps of 1 dB.
- However, when the channel level is set as described on page 22, if the volume for any channel is set at +1 dB or greater, the volume cannot be adjusted up to 18 dB.

(In this case the maximum volume adjustment range is "18 dB - Maximum value of channel level")

### ADJUSTING THE TONE (BASS & TREBLE) CONTROL

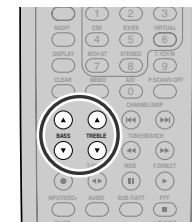

During a listening session you may wish to adjust the Bass and Treble Control to suit your listening tastes or room acoustics.

#### (Using the remote control unit)


To adjust the bass effect, press **BASS▲** or **BASS▼** on the remote.

To adjust the treble effect, press **TREBLE▲** or **TREBLE▼** on the remote.

#### Note:

- The tone control function can work in the AUTO Surround, Stereo, Dolby PLIIx, DTS, DTS-ES, and Multi Ch. Stereo mode.

## TEMPORARILY TURNING OFF THE SOUND

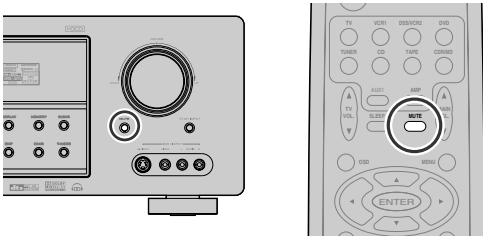


To temporarily silence all speaker outputs such as when interrupted by a phone call, press the **MUTE** button on the front panel or **MUTE** button on the remote.

This will interrupt the output to all speakers and the head-phone jack, but it will not affect any recording or dubbing that may be in progress.

When the system is muted, the display will show "MUTE".


Press the **MUTE** button again to return to normal operation.

## USING THE SLEEP TIMER

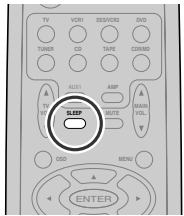

To program the ZR6001 for automatic standby, press the **SLEEP** button on the remote.

 Each press of the button will increase the time before shut down in the following sequence.

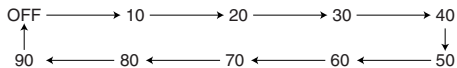

The sleep time will be shown for a few seconds in the display on the front panel, and it will count down until the time has elapsed.

When the programmed sleep time has elapsed, the unit will automatically turn off.

Note that the SLEEP indicator on the display will illuminate when the Sleep function is programmed. To cancel the Sleep function, press the **SLEEP** button until the display shows "SLEEP OFF" and the SLEEP indicator will disappear.

## NIGHT MODE



Press the **NIGHT** button on the remote to turn on the NIGHT mode.

Selecting the Night Mode ON is effective in Dolby Digital only, and it compresses the dynamic range. This softens loud passages such as sudden explosions, to help prevent disturbing others late at night.

To turn off the Night mode, press the **NIGHT** button again.

## SURROUND MODE

The ZR6001 is equipped with many surround modes. These are provided to reproduce a variety of surround sound effects, according to the content of the source to be played.

The available surround modes may be restricted depending on the input signal and speaker setup.

### AUTO

When this mode is selected, the receiver determines whether the digital input signal is Dolby Digital, Dolby Digital Surround EX, DTS, DTS-ES, DTS 96/24 or PCM-audio.

Surround EX & DTS-ES will operate for multichannel source that has a Dolby Digital Surround EX or DTS-ES auto trigger flag in the digital signal.

When a Dolby Digital or DTS signal is input, the number of channels for which the corresponding signal is encoded will be played.

Inputting a Dolby Digital two channel signal with Dolby surround status automatically subjects that signal to Pro Logic Ix movie processing before play.

PCM 96 kHz source material can be played in this mode.

### Notes:

- When you use this mode with certain DVD and CD players, performing operations such as "Skip" or "Stop" may momentarily interrupt the output.
- When the signal is not decoded, the mode is changed to AUTO mode automatically. Refer to page 27 to confirm the available decoding mode.

## DOLBY DIGITAL

(Dolby Digital, Pro Logic Ix MOVIE, Pro Logic Ix MUSIC, Pro Logic Ix GAME, Pro Logic)

This mode is used with source materials encoded in Dolby Digital and Dolby Surround.

### DOLBY DIGITAL

This mode is enabled when playing source materials encoded in Dolby Digital.

Playing multichannel encoded 6.1 or 7.1-channel Dolby Digital sources provides five main audio channels (left, center, right, surround left and surround right) and Low Frequency Effect channel. Dolby Digital EX decoding is not available in this mode.

Dolby Pro Logic Ix brings the excitement of surround sound to any stereo mix, while making existing Dolby Surround mixes sound more like discrete 7.1 channels Surround sound.

Dolby Pro Logic Ix has 3 modes. Please see below.

### Pro Logic Ix MOVIE

This mode provides 6.1 or 7.1 channel surround sound from Dolby Surround encoded stereo movie sound tracks.

### Pro Logic Ix MUSIC

This mode provides 6.1 or 7.1 channel surround sound from conventional stereo sources, analog or digital, such as CD, Tape, FM, TV, Stereo VCR, etc.

### Pro Logic Ix GAME

Game mode restores the impact low-frequency surround effects by routing them to the system's subwoofer.

### Pro Logic

This mode emulated original Dolby Pro Logic decoding (3/1 surround) suit for Dolby Surround encoded stereo movie soundtracks.

### Notes:

- Pro Logic Ix mode will decode as Pro Logic II mode when the SURROUND BACK SPEAKER is set NONE in SPEAKER SETUP menu. (See SPEAKER SETUP, page 21)
- Pro Logic Ix mode is available for a 2ch input signal which is encoded in Dolby Digital or PCM format.
- PCM-audio signals can be subjected to Pro Logic processing when the sampling frequency is 32 kHz, 44.1 kHz or 48 kHz.

**EX/ES**

This mode provides 6.1 channel surround for DOLBY DIGITAL EX, DTS-ES encoded source material such as DVD.

This mode cannot be used when an analog input has been selected.

**Dolby Digital EX**

In a movie theater, film soundtracks that have been encoded with Dolby Digital surround EX technology are able to reproduce an extra channel which has been added during the mixing of the program.

This channel, called Surround Back, places sounds behind the listener in addition to the currently available front left, front center, front right, surround right, surround left and subwoofer channels.

This additional channel provides the opportunity for more detailed imaging behind the listener and brings more depth, spacious ambience and sound localization than ever before.

Dolby Digital EX is not available in the system without surround back speaker(s).

**DTS-ES (Discrete 6.1, Matrix 6.1)**

DTS-ES adds the surround center channel audio to the DTS 5.1-channel format to improve the acoustic positioning and makes acoustic image movement more natural with the 6.1-channel reproduction.

This receiver incorporates a DTS-ES decoder, which can handle DTS-ES Discrete-encoded and DTS-ES Matrix-encoded program sources from DVD, etc..

DTS-ES Discrete 6.1 features digital discrete recording of all channels including the surround back channel(s) and higher quality of audio reproduction.

DTS-ES is not available in the system without a surround back speaker.

**dts MODE****(dts, Neo:6 Cinema, Neo:6 Music)**

This mode is for DTS encoded source materials such as LASER DISC, CD, and DVD. Neo:6 is for some 2 channel sources.

**dts** : This mode is enabled when playing source materials encoded in dts multichannel.

Playing multichannel encoded 5.1-channel dts sources provides five main audio channels (left, center, right, surround left and surround right) and Low Frequency Effect channel.

dts-ES decoding is not available in this mode.

The DTS mode cannot be used when an analog input has been selected.

**Neo:6 Cinema, Neo:6 Music**

This mode decodes 2-channel signals into 6-channel signals using high-accuracy digital matrix technology.

The DTS NEO:6 decoder has near-discrete properties in the frequency characteristics of the channels as well as in channel separation.

According to the signals to be played back, DTS NEO:6 uses either the NEO:6 CINEMA mode optimized for movie playback or the NEO:6 MUSIC mode optimized for music playback.

**Notes:**

- Neo:6 mode is available to 2ch input signals which are encoded in Dolby Digital or PCM format.
- PCM-audio signals can be subjected to Pro Logic processing when the sampling frequency is 32 kHz, 44.1 kHz or 48 kHz.

**MULTI CH. ST**

This mode is used to create a wider, deeper and more natural soundstage from two channel source material. This is done by feeding the left channel signal to both left front and left surround speaker and the right channel signal to both right front and right surround speaker. Additionally, the center channel reproduces a mix of the right and left channel.

**CIRCLE SURROUND II  
(CSII-CINEMA, CSII-MUSIC, CSII-MONO)**

Circle Surround is designed to enable multichannel surround sound playback of non-encoded and multichannel encoded material.

Backward compatibility provides listeners with up to 6.1 channels of surround performance from entire collection of music and film, including broadcast, videotape and stereo recorded music. Depending on source material, you can select **CSII-Cinema** mode, **CSII-Music** mode or **CSII-Mono** mode.

**CSII Cinema mode**

This mode is suited for playing back Circle Surround-encoded and non-encoded film and television soundtracks. Cinema Mode enables 6.1-channel surround playback of 2-channel sources such as Video Cassettes, TV broadcasts, streaming media and DVDs.

**CSII Music mode**

This mode is suited for playing back Circle Surround-encoded and non-encoded music. Music Mode decodes, music DVDs, radio and TV music broadcasts and CDs into enveloping 6.1-channel surround.

**CSII-Mono mode**

This mode plays back monaural recordings from any source, including CDs, DVDs and TV and radio broadcasts in compelling 6.1-channel surround.

**Notes:**

- CS II mode is available for 2ch input signals which are encoded in Dolby Digital or PCM format.
- PCM-audio signals can be subjected to Pro Logic processing when the sampling frequency is 32 kHz, 44.1 kHz or 48 kHz.

**VIRTUAL**

This mode creates a virtualized surround sound experience from a two-speaker (front L and R) playback system playing any multichannel audio source (such as found on DVDs and digital broadcasts), including Dolby Digital, Dolby Pro Logic or DTS.

**STEREO**

This mode bypasses all surround processing.

In stereo program sources, the left and right channels play normally when PCM-audio or analog stereo is input.

With Dolby Digital and DTS sources, the 5.1 multichannels are converted to two channel stereo. 96 kHz PCM source material can be played back in stereo mode.

**PURE-DIRECT**

In the Pure Direct mode, the tone control circuit and bass management configuration are bypassed for full range frequency response and the purist audio reproduction.

96 kHz PCM source material can be played back in this mode.

**Notes:**

- Internal speaker size is setup to front L/R = LARGE, Center = LARGE, Surround L/R = LARGE and Subwoofer = YES automatically. Tone controls and additional processing are also defeated.
- When you use this mode with certain DVD and CD players, performing operations such as "Skip" or "Stop" may momentarily interrupt the output.

**CAUTION****NOTE for DTS signal**

\* Connected DVD-player, laser-disc player or CD-player needs to support DTS-digital output. You may not be able to play some DTS source signals from certain CD players and LD players even if you connect the player to the ZR6001 digitally. This is because the digital signal has been processed (such as the output level, sampling frequency, or frequency response) and the ZR6001 cannot recognize the signal as DTS data.

\* Depending on the player used, DTS play may produce a short noise. This is not a malfunction.

\* While signals from DTS-laser disc or CD are playing in another Surround mode, you cannot switch to digital input or from digital input to analog input by INPUT SETUP in SETUP MAIN MENU or the A/D button.

\* The outputs for the VCR 1 OUT, DSS/VCR 2 OUT, TAPE OUT, and CD-R OUT output analog audio signals. Do not record from CDs or LDs that support DTS using these outputs. If you do, the DTS-encoded signal will be recorded as noise.

**NOTE for Dolby Digital Surround EX signal**

\* When playing Dolby Digital Surround EX-encoded software in 6.1 channels, it is required to set the EX/ES mode.

\* Note that some of Dolby Digital Surround EX-encoded software does not contain the identification signal. In this case, set the EX/ES mode manually.

**NOTE for 96kHz PCM audio**

\* AUTO, PURE-DIRECT, and STEREO modes can be used when playing PCM signals with a sampling frequency of 96 kHz (such as from DVD-Video discs that contain 24 bit, 96 kHz audio). If such signals are input during playback in one of the other surround modes, output from ZR6001 will be muted.

\* Certain DVD player models inhibit digital output. For details, refer to the player's operation manual.

\* Some DVD formatted discs feature copy protection. When using such disc, 96 kHz PCM signal is not output from the DVD player. For details, refer to the player's operation manual.

**NOTE for HDCD signal**

\* HDCD is effective only at the time of digital input.

\* AUTO, PURE DIRECT, and STEREO modes can be used when playing HDCD signals (such as from CD discs that contain HDCD).

\* You may not be able to play some HDCD source signals from certain CD players if you connect the player to the ZR6001 digitally. This is because the digital signal has been processed (such as the output level, sampling frequency, or frequency response) and the ZR6001 cannot recognize the signal as HDCD data.



**The relation between the selected surround mode and the input signal**

The surround mode is selected with the surround mode selector on ZR6001 or the remote control unit. However, the sound you hear is subject to the relationship between the selected surround mode and input signal. That relationship is as follows;

Surround Mode	Input Signal	Decoding	Output Channel					Front information display	
			L/R	C	SL SR	SBL SBR	SubW	Signal format indicators	Channel status
AUTO	Dolby Surr. EX	Dolby Digital EX	○	○	○	○	○	DD DIGITAL	L, C, R, SL, SR, S, LFE
	Dolby D (5.1ch)	Dolby Digital 5.1	○	○	○	-	○	DD DIGITAL	L, C, R, SL, SR, LFE
	Dolby D (2ch)	Dolby Digital 2.0	○	-	-	-	-	DD DIGITAL	L, R
	Dolby D (2ch Surr)	Pro Logic IIx movie	○	○	○	○	-	DD DIGITAL, DD SURROUND	L, R, S
	DTS-ES	DTS-ES	○	○	○	○	○	dts, ES	L, C, R, SL, SR, S, LFE
	DTS 96/24	DTS 96/24	○	○	○	-	○	dts 96/24	L, C, R, SL, SR, LFE
	DTS (5.1ch)	DTS 5.1	○	○	○	-	○	dts	L, C, R, SL, SR, LFE
	PCM(Audio)	PCM (Stereo)	○	-	-	-	-	PCM	L, R
	PCM 96kHz	PCM (96kHz Stereo)	○	-	-	-	-	PCM	L, R
	HDCD	PCM (Stereo)	○	-	-	-	-	PCM HDCD	L, R
	Analog	Stereo	○	-	-	-	-	ANALOG	-
PURE DIRECT	Dolby D Surr. EX	Dolby Digital EX	○	○	○	○	○	DD DIGITAL	L, C, R, SL, SR, S, LFE
	Dolby D (5.1ch)	Dolby Digital 5.1	○	○	○	-	○	DD DIGITAL	L, C, R, SL, SR, LFE
	Dolby D (2ch)	Dolby Digital 2.0	○	-	-	-	-	DD DIGITAL	L, R
	Dolby D (2ch Surr)	Pro Logic IIx movie	○	○	○	○	-	DD DIGITAL, DD SURROUND	L, R, S
	DTS-ES	DTS-ES	○	○	○	○	○	dts, ES	L, C, R, SL, SR, S, LFE
	DTS 96/24	DTS 96/24	○	○	○	-	○	dts 96/24	L, C, R, SL, SR, LFE
	DTS (5.1ch)	DTS 5.1	○	○	○	-	○	dts	L, C, R, SL, SR, LFE
	PCM (Audio)	PCM (Stereo)	○	-	-	-	-	PCM	L, R
	PCM 96kHz	PCM (96kHz Stereo)	○	-	-	-	-	PCM	L, R
	Analog	Stereo	○	-	-	-	-	ANALOG	-
	EX/ES	Dolby D Surr. EX	Dolby Digital EX	○	○	○	○	○	DD DIGITAL
Dolby D (5.1ch)		Dolby Digital EX	○	○	○	○	○	DD DIGITAL	L, C, R, SL, SR, LFE
DTS-ES		DTS-ES	○	○	○	○	○	dts, ES	L, C, R, SL, SR, S, LFE
DTS(5.1ch)		DTS-ES	○	○	○	○	○	dts	L, C, R, SL, SR, LFE
DOLBY (PL IIx movie) (PL IIx music) (PL IIx game) (Pro Logic)	Dolby D Surr. EX	Dolby Digital 5.1	○	○	○	○	○	DD DIGITAL	L, C, R, SL, SR, S, LFE
	Dolby D (5.1ch)	Dolby Digital 5.1	○	○	○	○	○	DD DIGITAL	L, C, R, SL, SR, LFE
	Dolby D (2ch)	Pro Logic IIx	○	○	○	○	-	DD DIGITAL	L, R
	Dolby D (2ch Surr)	Pro Logic IIx	○	○	○	○	-	DD DIGITAL, DD SURROUND	L, R, S
	PCM (Audio)	Pro Logic IIx	○	○	○	○	-	PCM	L, R
	Analog	Pro Logic IIx	○	○	○	○	-	ANALOG	-
	DTS-ES	DTS 5.1	○	○	○	-	○	dts, ES	L, C, R, SL, SR, S, LFE
DTS (Neo:6 Cinema) (Neo:6 Music)	DTS 96/24	DTS 96/24	○	○	○	-	○	dts 96/24	L, C, R, SL, SR, LFE
	DTS (5.1ch)	DTS 5.1	○	○	○	-	○	dts	L, C, R, SL, SR, LFE
	PCM (Audio)	Neo:6	○	○	○	○	-	PCM	L, R
	Analog	Neo:6	○	○	○	○	-	ANALOG	-
	Dolby D (2ch)	Neo:6	○	○	○	○	-	DD DIGITAL	L, R
	Dolby D (2ch Surr)	Neo:6	○	○	○	○	-	DD DIGITAL, DD SURROUND	L, R, S
	PCM (Audio)	CS II	○	○	○	○	○	PCM	L, R
CS II Cinema CS II Music CS II Mono	Analog	CS II	○	○	○	○	○	ANALOG	-
	Dolby D (2ch)	CS II	○	○	○	○	○	DD DIGITAL	L, R
	Dolby D (2ch Surr)	CS II	○	○	○	○	○	DD DIGITAL, DD SURROUND	L, R, S
STEREO	Dolby Surr. EX	Stereo	○	-	-	-	○	DD DIGITAL	L, C, R, SL, SR, S, LFE
	Dolby D (5.1ch)	Stereo	○	-	-	-	○	DD DIGITAL	L, C, R, SL, SR, LFE
	Dolby D (2ch)	Stereo	○	-	-	-	-	DD DIGITAL	L, R
	Dolby D (2ch Surr)	Stereo	○	-	-	-	-	DD DIGITAL, DD SURROUND	L, R, S
	DTS-ES	Stereo	○	-	-	-	○	dts, ES	L, C, R, SL, SR, S, LFE
	DTS 96/24	Stereo	○	-	-	-	○	dts 96/24	L, C, R, SL, SR, LFE
	DTS (5.1ch)	Stereo	○	-	-	-	○	dts	L, C, R, SL, SR, LFE
	PCM (Audio)	Stereo	○	-	-	-	-	PCM	L, R
	PCM 96kHz	Stereo	○	-	-	-	-	PCM	L, R
	HDCD	PCM (Stereo)	○	-	-	-	-	PCM HDCD	L, R
	Analog	Stereo	○	-	-	-	-	ANALOG	-
Virtual	Dolby Surr. EX	Virtual	○	-	-	-	-	DD DIGITAL	L, C, R, SL, SR, S, LFE
	Dolby D (5.1ch)	Virtual	○	-	-	-	-	DD DIGITAL	L, C, R, SL, SR, LFE
	Dolby D (2ch)	Virtual	○	-	-	-	-	DD DIGITAL	L, R
	Dolby D (2ch Surr)	Virtual	○	-	-	-	-	DD DIGITAL, DD SURROUND	L, R, S
	DTS-ES	Virtual	○	-	-	-	-	dts, ES	L, C, R, SL, SR, S, LFE
	DTS (5.1ch)	Virtual	○	-	-	-	-	dts	L, C, R, SL, SR, LFE
	PCM (Audio)	Virtual	○	-	-	-	-	PCM	L, R
Analog	Virtual	○	-	-	-	-	ANALOG	-	
Multi Ch. Stereo	Dolby Surr. EX	Dolby Digital EX	○	○	○	○	○	DD DIGITAL	L, C, R, SL, SR, S, LFE
	Dolby D (5.1ch)	Dolby Digital 5.1	○	○	○	-	○	DD DIGITAL	L, C, R, SL, SR, LFE
	Dolby D (2ch)	Multi Channel Stereo	○	○	○	○	-	DD DIGITAL	L, R
	Dolby D (2ch Surr)	Multi Channel Stereo	○	○	○	○	-	DD DIGITAL, DD SURROUND	L, R, S
	DTS-ES	DTS-ES	○	○	○	○	○	dts, ES	L, C, R, SL, SR, S, LFE
	DTS (5.1ch)	DTS 5.1	○	○	○	-	○	dts	L, C, R, SL, SR, LFE
	PCM (Audio)	Multi Channel Stereo	○	○	○	○	-	PCM	L, R
Analog	Multi Channel Stereo	○	○	○	○	-	ANALOG	-	

**Notes:**

- Dolby Digital (2 ch: Lt/Rt): signal with Dolby Surround flag Speakers are full set.
- No sound outputs from the surround speaker, center speaker and subwoofer if the DVD disc has no surround data.

**Abbreviations**

- L/R : Front speakers
- C : Center speaker
- SL/SR : Surround speakers
- SBL/SBR : Surround Back speakers
- SubW : Sub woofer speaker



# OTHER FUNCTION

## TV AUTO ON/OFF FUNCTION

This function allows the component connected to the TV-VIDEO in jack to control the power (ON/OFF) to the ZR6001.

### AUTO POWER ON

1. Be sure the TV auto mode is ENABLED. (Refer page 22 : System Setup)
2. Connect your TV TUNER (etc) to the TV-VIDEO in terminal. Be sure to connect the VIDEO input.
3. Turn OFF the power to the TV TUNER and the ZR6001.
4. Turn ON the TV TUNER and tune in a receivable station.
5. When the station is received, the ZR6001 turns ON and TV is selected automatically.

### AUTO POWER OFF

1. In the above situation, turn the TV TUNER OFF or select a channel that does not contain any broadcast.
2. The power to the ZR6001 switches to STANDBY after approx. 5 minutes.

#### Notes:

- AUTO POWER OFF is canceled if the ZR6001 is set to a source other than TV. The function reactivates when TV is selected again.
- Some TV broadcasts may cause the TV AUTO FUNCTION to turn ON.
- The S-Video terminal does not support "TV AUTO ON/OFF" function.

## ATTENUATION TO ANALOG INPUT SIGNAL




If the selected analog audio input signal is greater than the capable level of internal processing, the "PEAK" indicator will light up on the front display. If this happens, you should press the **ATT** button on the remote.

"ATT" indicator will be illuminated when this function is activated. The signal-input level is reduced by about half. Attenuation will not work with the output signal of TAPE-OUT, CD-R/MD-OUT, VCR1-OUT and DSS/VCR2-OUT. This function is memorized for each individual input source.

## LISTENING THROUGH HEADPHONES

This jack may be used to listen to the ZR6001's output through a pair of headphones. Be certain that the headphones have a standard 1/4" stereo phono plug. (Note that the speakers will automatically be turned off when the headphone jack is in use.)

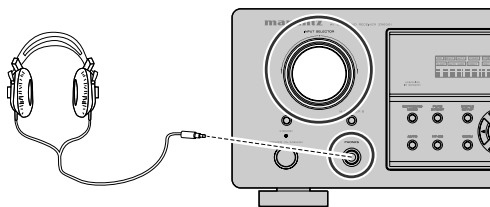

#### Note:


- The surround mode returns to the previous setting as soon as the plug is removed from the jack.

## DOLBY HEADPHONE MODE

This feature simulates the waveforms of the actual sounds heard from the speakers.

When headphones are used, the **MENU** button automatically switches to the Dolby headphone mode.

The OSD that appears when the **MENU** button is pressed is shown below.

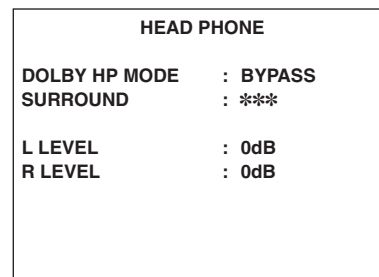

DOLBY HP (Headphone) MODE can be selected with the left and right cursor buttons.

BYPASS → DH1 → DH2 → DH3 → BYPASS

BYPASS: Bypasses the Dolby headphone mode and delivers ordinary 2-channel stereo.

DH1: The size of a typical living room space is simulated.

DH2: The expansiveness of a structure as large as a music hall is simulated.

DH3: A large space such as that found in a movie theater is simulated.

When the PURE DIRECT mode is selected, Dolby surround processing is bypassed and "\*\*\*" is displayed as the mode indication.

The surround mode can be selected when any of the modes in DH1, DH2, or DH3 is selected.

L/R LEVEL can be set in the ±10 dB range.


#### Notes:

- The surround mode returns to the previous setting as soon as the plug is removed from the jack.
- TONE cannot be set when any of the modes in DH1, DH2, or DH3 is selected.
- The Dolby Headphone function will not work when 32 or 96 kHz PCM digital signals are input.



## VIDEO ON/OFF

When no video signal is connected to the ZR6001 or a DVD, etc., is connected directly to your TV, the unnecessary video circuit can be turned off by selecting the "VIDEO OFF" setting.

To select video off, press the **AMP** button and press the **V-OFF** button.

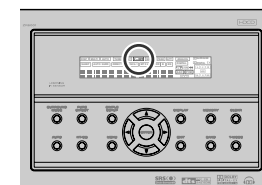

## DISPLAY MODE

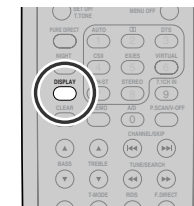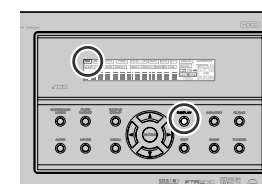

You can select the display mode for the front display of the ZR6001.

To select this mode, press the **DISPLAY** on the remote control.

When this button is pressed, the display mode is switched in the following sequence.

→ Surround Mode → Auto-display Off → Display Off → Input Function → Surround Mode...


In Auto display off mode, the display is off. But, if you make a change to the unit such as input or surround mode, the display will show that change, then go back to off after about 3 seconds. When changing the volume, it is not displayed.

In Display off mode, the display is off completely.

#### Note:

- Only the DISP indicator will be illuminated on the front display in display off condition

## SELECTING ANALOG AUDIO INPUT OR DIGITAL AUDIO INPUT

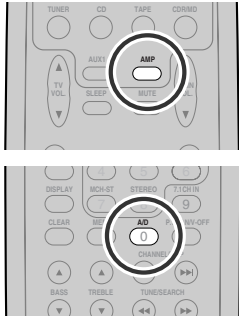

If you have already assigned the digital inputs, you can temporarily select the audio input mode for each input source as following procedures. Press the **AMP** button and press the **A/D (0)** button. When this button is pressed, the input mode is switched in the following sequence.  
→ Digital Auto → Digital → Analog → Digital Auto...

In Digital Auto mode, the types of signals being input to the digital and analog input jacks for the selected input source are detected automatically. If no digital signal is being input, the analog input jacks are selected automatically.

In Digital mode, input is fixed to an assigned digital input terminal.

In analog mode, the analog input jacks are selected. This selecting is temporary, so the result will not be stored in memory.


If you need to change the input mode completely, use INPUT SETUP in OSD menu system. (see page 21)

## RECORDING AN ANALOG SOURCE

In normal operation, the audio or video source selected for listening through the ZR6001 is sent to the record outputs.

This means that any program you are watching or listening to may be recorded simply by placing machines connected to the outputs for **TAPE OUT**, **CD-R/MD OUT**, **VCR1 OUT**, and **DSS/VCR2 OUT** in the record mode.

*To record the input source signal you are currently watching or listening to*

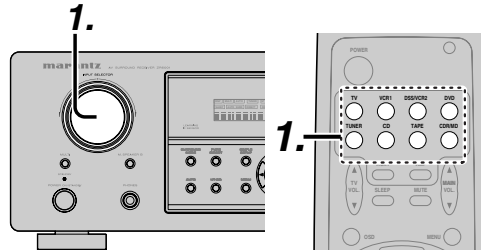


1. Select the input source to record by turning the **INPUT FUNCTION SELECTOR** knob on the front panel or simply press the **input selector** buttons on the remote. The input source is now selected and you may watch or listen to it as desired.
2. The currently selected input source signal is output to the **TAPE OUT**, **CD-R/MD OUT**, **VCR1 OUT**, and **DSS/VCR2 OUT** outputs for recording.
3. Start recording to the recording component as desired.

### Recording the video from one source and the audio from another

You can add the sound from one source to the video of another source to make your own video recordings.

Below is an example of recording the sound from a compact disc player connected to CD IN and the video from a video camera connected to VCR1 to video cassette recorder connected to the DSS/VCR2 OUT jack.

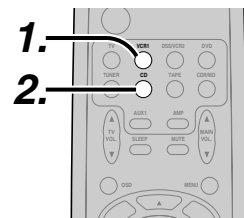


1. Switch the video output source to VCR1 by simply pressing the **input selector** buttons on the remote.
2. Switch the audio input source to CD by simply pressing the **input selector** buttons on the remote.
3. Now "CD" has been selected as the audio input source and "VCR1" as the video input source.

#### Notes:

- If you change the input source during recording, you will record the signals from the newly selected input source.
- You cannot record the surround effects.
- Digital input signals are only output to the digital outputs. There is no conversion from digital to analog.

When connecting CD players and other digital components, do not connect only the digital terminals, but the analog ones as well.

## HT-EQ

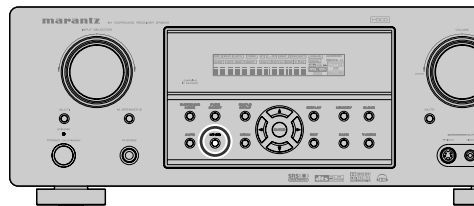

Press the **HT-EQ** button on the front panel to turn on the HT-EQ mode.

The tonal balance of a film soundtrack will be excessively bright and harsh when played back over audio equipment in the home. This is because film soundtracks were designed to be played back in large movie theater environments.

Activating the HT-EQ feature when watching a film made for movie theaters corrects this and restores the correct tonal balance.

The HT-EQ feature is available except in the following modes.

- 7.1 CH INPUT
- PURE-DIRECT
- When VIRTUAL is set for the surround mode


## 7.1 CH INPUT

The ZR6001 is equipped for future expansion through the use of Multi channel SACD multichannel player or DVD-Audio player.

When this is selected, the input signals connected to the L(front left), R (front right), CENTER, SL (surround left), SR (surround right) and SBL (surround back left) and SBR (surround back right) channels of the 7.1 CH. In jacks are output directly to the front (left and right), center, surround (left and right) and surround back speaker systems as well as the pre-out jacks without passing through the surround circuitry.

In addition, the signal input to the SW (subwoofer) jack is output to the PRE OUT SW (subwoofer) jack.

When 7.1 CH. INPUT is selected, the last video input used remains routed to the **Monitor Outputs**. This permits simultaneous viewing with video sources

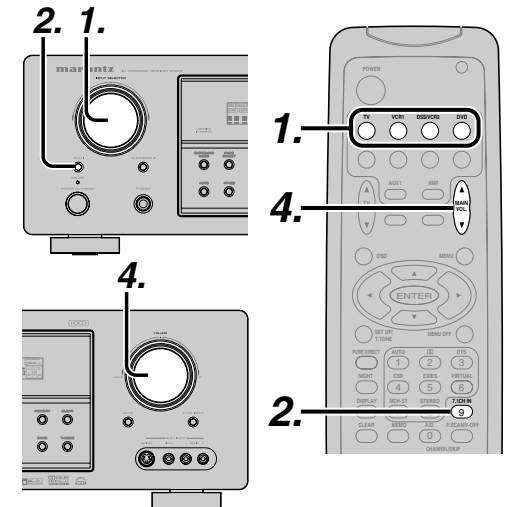

1. Select a desired Video source to decide the routed video signal to the **Monitor Outputs**.
2. Press the **7.1 CH INPUT** button on the front panel or press **7.1 CH IN** on the remote to switch the 7.1 channel input.
3. If it is necessary to adjust the output level of each channel, press the **CH.SEL** button on the remote.  
Adjust the speaker output levels so that you can hear the same sound level from each speaker at the listening position. For the front left, front right, center, surround left, surround right and surround back speakers, the output levels can be adjusted between -10 to +10 dB. The subwoofer can be adjusted between -15 and +10 dB.  
These adjustments result will be stored to 7.1 CH. INPUT memory.
4. Adjust the main volume with the **MAIN VOLUME** knob or the **VOL** buttons on the remote.


To cancel the 7.1 CH. INPUT setting, press the **7.1 CH INPUT** button on the front panel or press **7.1 CH IN** on the remote.

**Notes:**

- When the 7.1 CH. Input is in use, you may not select a surround mode, as the external decoder determines processing.
- In addition, there is no signal at the record outputs when the 7.1 CH. Input is in use.

**AUX2 INPUT**

If you don't need to connect 7.1 Ch. input terminals with multi channel decoder, L(front left) and R (front right) inputs terminals are available as AUX2 input. In this case, You can connect additional audio source to AUX2 as other audio input terminals.

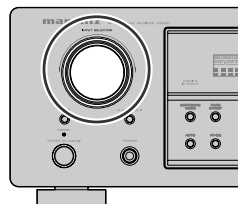

**LIP.SYNC**

Depending on the image device (TV, monitor, projector, etc.) connected to the ZR6001, a time lag can occur between image signal processing and audio signal processing. Though minor, this time lag can interfere with movie and music enjoyment. The LIP.SYNC feature delays the audio signal with respect to the image signal output from the ZR6001 to correct the time lag between the sound and image. It can be operated with the "LIP.SYNC" and ◀ and ▶ cursor buttons of the remote controller. Set the remote controller to the AMP mode before operating the LIP.SYNC feature. The initial setting is OFF (0 ms).The time lag can be adjusted in 10 ms steps up to 200 ms. Watch the picture on the image device (i.e., TV, monitor, projector, etc.) as you adjust the time lag.

**Note:**

- The LIP.SYSNC feature turns OFF (0 ms) in the PURE DIRECT mode. When the PURE DIRECT mode is deactivated, the set value of the LIP.SYSNC feature is automatically restored.

**BASIC OPERATION (TUNER)**


**LISTENING TO THE TUNER**

Frequency scan step for AM is selectable. Default setup is 10 kHz step, if your country's standard is 9 kHz step, Press **TUNER** button on the remote more than 6 seconds. Scan step will change.

**Note:**

- Preset memory for the tuner will clear by changing this setup.
- When using the PLC feature, AM sensitivity may decrease because of the effects of the PLC signals. There is nothing wrong with the equipment.

**AUTO TUNING**

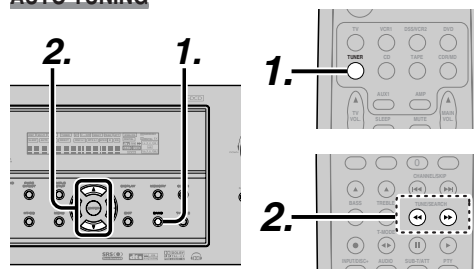

**(Using the ZR6001)**


1. To select tuner and desired band (FM or AM), press the **BAND** button on the front panel.
2. Press the ▲ or ▼ cursor buttons on the front panel for more than 1 second to start the auto tuning function.
3. Automatic searching begins then stops when a station is tuned in.

**(Using the remote control unit)**

1. To select tuner and desired band (FM or AM), press the **TUNER** button twice within in two seconds on the remote.
2. Press the ◀ or ▶ for more than 1 second on the remote.
3. Automatic searching begins then stops when a station is tuned in.

If tuning does not stop at the desired station, use to the "Manual tuning" operation.

**MANUAL TUNING**

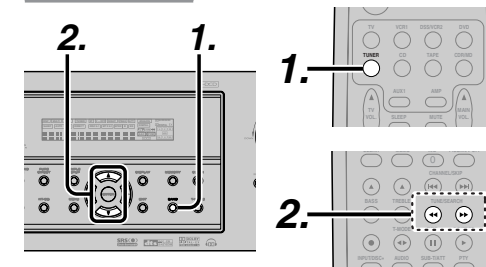


**(Using the ZR6001)**

1. To select tuner and desired band (FM or AM), press the **BAND** button on the front panel
2. Press the ▲ or ▼ cursor buttons on the front panel to select the desired station.

**(Using the remote control unit)**


1. To select tuner and desired band (FM or AM), press the **TUNER** button twice within in two seconds on the remote.
2. Press the ◀ or ▶ on the remote to tune in the desired station.

**DIRECT FREQUENCY CALL**

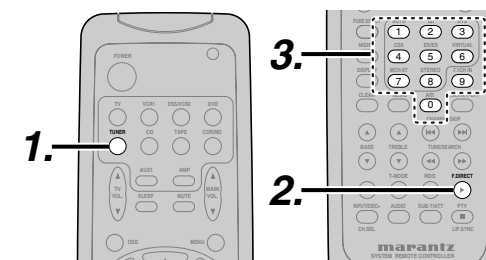

1. To select tuner and desired band (FM or AM), press the **TUNER** button twice within two seconds on the remote.
2. Press the **F.DIRECT** on the remote, display will show "FREQ - - -".
3. Input your desired station's frequency with the **numeric** buttons on the remote.
4. The desired station will automatically be tuned.

**(FM) TUNING MODE (AUTO STEREO OR MONO)**

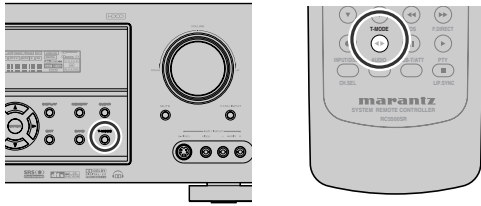


When in the auto stereo mode, **AUTO** indicator will be illuminated on the display. The **“ST”** indicator is illuminated when a stereo broadcast is tuned in. At open frequencies, the noise is muted and the **“TUNED”** and **“ST”** indicators are not illuminated. If the signal is weak, it may be difficult to tune into the station in stereo. In such a case, press the **T-MODE** button on the front panel or remote. **“AUTO”** indicator is not illuminated, if FM stereo broadcasts are received in monaural and the **“ST”** indicator is not illuminated. To return to auto stereo mode, press the **T-MODE** button or press **T-MODE** button on the remote again. **AUTO** indicator is illuminated on the display.

**PRESET MEMORY**

With this unit you can preset up to 50 FM/AM stations in any order. For each station, you can memorize the frequency and reception mode if desired.


**AUTO PRESET MEMORY**

This function automatically scans the FM and AM band and enters all stations with proper signal strength into the memory.

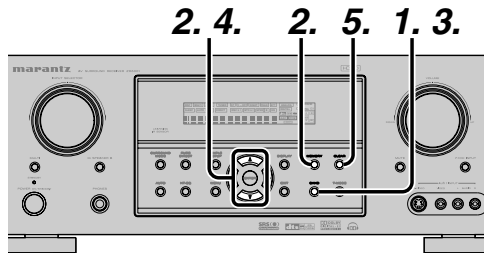

1. To select FM, press the **BAND** button on the front panel.
2. While pressing the **MEMO** button, press the **▶** cursor button. **“AUTO PRESET”** will appear on the display, and scanning starts from the lowest frequency.
3. Each time the tuner finds a station, scanning will pause and the station will be played for five seconds. During this time, the following operations are possible. The band can be changed by the **BAND** button.
4. If no button is pressed during this period, the current station is memorized in location Preset 02. If you wish to skip the current station, press the **▲** cursor button during this period, this station is skipped and auto presetting continues.
5. Operation stops automatically when all 50 preset memory positions are filled or when auto scanning attains the highest end of all bands. If you desire to stop the auto preset memory at anytime, press the **CLEAR** button.

**MANUAL PRESET MEMORY**

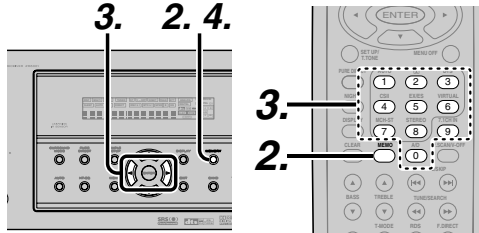

- (Using the ZR6001)*
1. Tune into the radio station you desire (Refer to the **“MANUAL TUNING”** or **“AUTO TUNING”** section).
  2. Press the **MEMO** button on the front panel. **“- -”** (preset number) starts blinking on the display.
  3. Select the preset number by pressing the **◀** or **▶** cursor buttons, while this is still blinking (approx. 5 seconds)
  4. Press the **MEMO** button again to enter. The display stops blinking. The station is now stored in the specified preset memory location.


*(Using the remote control unit)*

1. Tune into the radio station you desire (Refer to the **“MANUAL TUNING”** or **“AUTO TUNING”** section).
2. Press the **MEMO** button on the remote. **“- -”** (preset number) starts blinking on the display.
3. Enter the desired preset number by pressing the **numeric** buttons.

**Note:**

- When entering a single digit number (2 for example), either input **“02”** or just input **“2”** and wait for a few seconds.

**RECALLING A PRESET STATION**

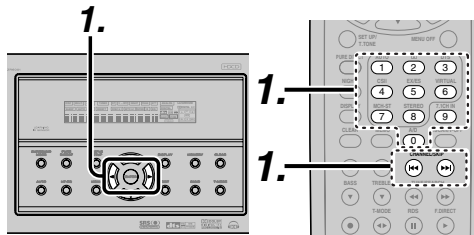


*(Using the ZR6001)*

1. Select the desired preset station by pressing the **◀** or **▶** cursor buttons on the front panel

*(Using the remote control unit)*

1. Press the **◀◀** or **▶▶** buttons to select the desired preset station, or input your desired preset channel with the **numeric** buttons on the remote.

**PRESET SCAN**

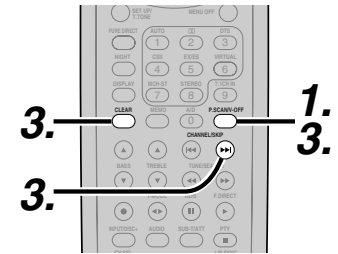


*(Using the remote control unit)*

1. Press the **P.SCAN** on the remote. **“PRESET SCAN”** appears on the display and then the preset station with the lowest preset number is recalled first.
2. Preset stations are recalled in sequence (No.1 → No.2 → etc.) for 5 seconds each. No stored preset number will be skipped.
3. You can fast forward the preset stations by pressing the **▶▶** continuously. When the desired preset station is received, cancel the preset scan operation by pressing the **CLEAR** button or **P.SCAN** on the remote.



### CLEARING STORED PRESET STATIONS

You can remove preset stations from the memory using the following procedure.

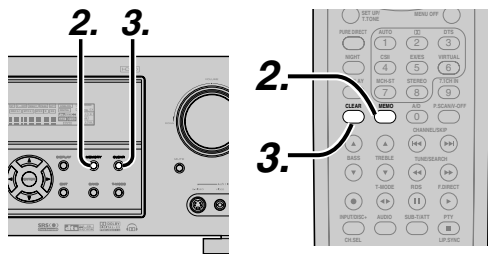


1. Recall the preset number to be cleared with the method described in "Recalling" a preset station.
2. Press the **MEMO** button on the front panel or press the **MEMO** button on the remote.
3. The stored preset number blinks in the display for 5 seconds. While blinking, press the **CLEAR** button on the front panel or the remote.
4. "xx CLEAR" appears on the display to indicate that the specified preset number has been cleared.

**Note:**

- To clear all stored preset stations, press and hold the **CLEAR** and the **ENTER** buttons for two seconds.

### SORTING PRESET STATIONS

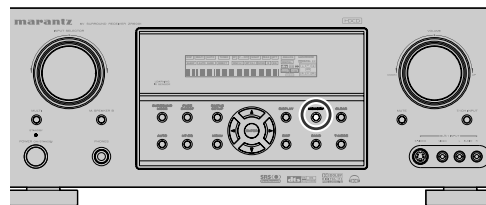

If you have stations memorized, and there is a gap in the sequential order:

I.e. the stations are stored as follows

- 1) 87.1 MHz
- 2) 93.1 MHz
- 3) 94.7 MHz
- 10) 105.9 MHz

(notice there is no stations programmed for pre sets for 4-9), you can have pre set 10 become pre set 5:



To sort the numbers, press and hold the **MEMO** and the **▼** cursor buttons.

"PRESET SORT" will appear on the display and sorting will be done.

### NAME INPUT OF THE PRESET STATION.

This function allows the name of each preset channel to be entered using alphanumeric characters.

Before name inputting, you need to store preset stations with the preset memory operation.

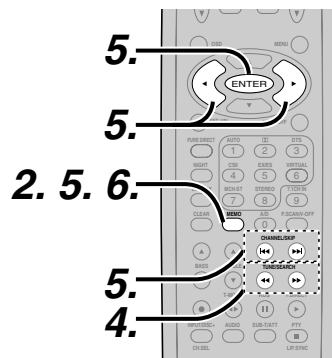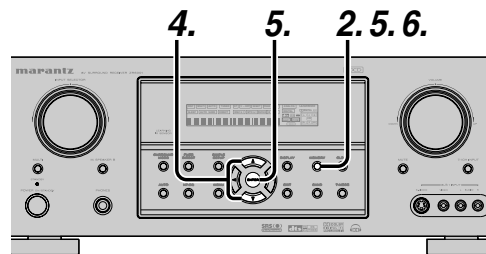

1. Recall the preset number to be inputted name with the method described in "Recalling" a preset station.
2. Press the **MEMO** button on the front panel or press the **MEMO** button on the remote for more than 3 seconds.
3. The left most column of the station name indicator flashes, indicating the character entry ready status.
4. When you press the **▲** or **▼** cursor buttons on the front panel or the **◀ / ▶** buttons on the remote, alphabetic and numeric characters will be displayed in the following order:  
**A → B → C ... Z → 1 → 2 → 3 ..... 0 → - → + → / → (Blank) → A**  
**UP →**  
**← DOWN**
5. After selecting the first character to be entered, press the **MEMO** or **ENTER** buttons, press the **MEMO** button on the remote. The entry in this column is fixed and the next column starts to flash. Fill the next column the same way.  
 To move back and forth between the characters, press the **◀ / ▶** cursor buttons or press **◀◀** or **▶▶** buttons on the remote.

**Note:**

- Unused columns should be filled by entering blanks.
- 6. To save the name, press the **MEMO** button on the front panel or remote for more than 2 seconds.

Ten keypad	Press, press again, press again, etc.
1	A → B → C → 1 → A
2	D → E → F → 2 → D
3	G → H → I → 3 → G
4	J → K → L → 4 → J
5	M → N → O → 5 → M
6	P → Q → R → 6 → P
7	S → T → U → 7 → S
8	V → W → X → 8 → V
9	Y → Z → space → 9 → Y
0	- → + → / → 0



## MULTI ROOM SYSTEM

The Multi Room system is a function which allows you to listen to the same or a different source in a room other than the room in which the ZR6001 is located.

To use this function, a multi room remote unit and remote control signal receiver available from your Marantz dealer are necessary.

The operations possible with the multi room function are explained briefly below.

For details, refer to the instruction manual supplied with the multi room remote control unit and receiver.

When the outputs of the MULTI OUT terminals are wired and connected to amplifiers installed in other rooms or M (MULTI) SPEAKER B terminals are wired and connected to L&R speakers in other room, different sources can be played in rooms other than the main room in which this unit and the playback devices are installed.


ZR6001 has some feature to MULTI ROOM SYSTEM as source selector, sleep timer, Multi Room Speaker output and remote control.

### MULTI ROOM PLAYBACK USING THE MULTI ROOM OUT TERMINALS

The ZR6001 is equipped with audio pre-out terminals for which the volume is adjustable as the MULTI output terminals.

A separately sold stereo power amplifier can be connected to enjoy multi room playback.

The MULTI OUT system can not be operated with the supplied remote controller.

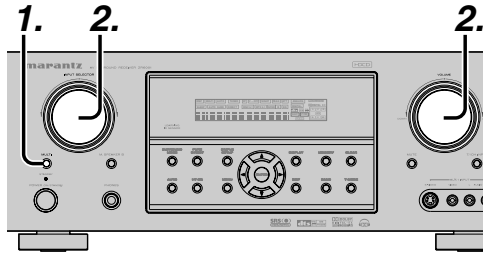


1. Press the **MULTI** button. The unit enters multi room mode and the display indicates “**SELCT SOURCE**” and flashes the “**MULTI**” indicator for approx. 10 seconds.
2. In this time, you can select the input source by turning the input selector knob. Then, the display indicates “**MULTI VOLUME**” “**MULTI VOL. xx**” for approx. 5 seconds.
3. During this time, you can set the volume level in the multi room as desired. This will only set the volume in the second room.

### MULTI ROOM PLAYBACK USING THE MULTI SPEAKER TERMINALS

The ZR6001 allows you to connect another set of speakers and place them in a different room or separated area for listening to music.

The MULTI ROOM SPEAKER system can not be operated with the supplied remote controller.

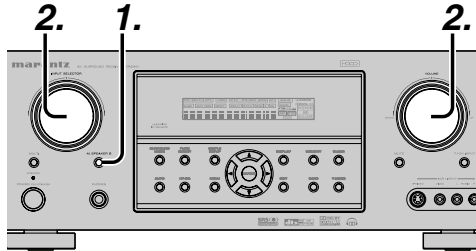

1. Press the **M. SPEAKER B** button. The unit enters multi room speaker mode and the display indicates “**SELCT SOURCE**” and flashes the “**MULTI**” indicators for approx. 10 seconds.
2. In this time, you can select the input source by turning the input selector knob.
3. Then, the display indicates “**MSPKR VOLUME**” “**MSPKR VOL.-18**” for approx. 5 seconds. During this time, you can set the volume level in the multi room as desired. This will only set the volume in the multi room.

#### Notes for MULTI ROOM SPEAKER

- MULTI ROOM SPEAKER On/ Off is available in main room only.
- MULTI ROOM SPEAKER output terminals can be used when the SURROUND BACK SPEAKER is set NONE in SPEAKER SETUP menu. (See SPEAKER SETUP, page 21)
- “The Surr. Back Speakers are in use” is displayed by pressing the **MULTI SPEAKER** button when the SURROUND BACK SPEAKER is set except NONE in SPEAKER SETUP menu. (See SPEAKER SETUP, page 21)
- Multi room operations cannot be performed from the remote controller.

### MULTI PLC SYSTEM

With the ZR6001, the source selected for the Multi PLC and MULTI ROOM features are one and the same.

Accordingly, the source selected for the “MULTI ROOM” setting also becomes the source for the Multi PLC feature.

For PLC settings, see pages 24 – 25.

# TROUBLESHOOTING

In case of trouble, check the following before calling for service:

1. Are the connections made properly ?
2. Are you operating the unit properly following the user's guide ?
3. Are the power amplifiers and speaker working properly ?

If the unit does not operate properly, check items shown in the following table.

If your trouble cannot be recovered with the remedy actions listed in the following table, malfunction of the internal circuitry is suspected; immediately unplug the power cable and contact your dealer, nearest Marantz authorized dealer or the Marantz Service Center in your country.

SYMPTOM	CAUSE	REMEDY
ZR6001 cannot be turned up.	The power plug is not connected.	Connect the power plug to the outlet.
No sound and picture are output even when power is on.	Mute is on.	Cancel mute using the remote control unit.
	The input cable is not connected correctly.	See the connection diagram and connect the cables correctly.
	The master volume control is turned all the way down.	Adjust the master volume.
	The function selector position is wrong.	Select correct position.
No speaker output.	The headphones are connected to the headphone jack.	Disconnect the headphones. (Speakers will not output sound when headphones are connected.)
Incorrect Audio or Video for selected source.	Input cable connected incorrectly.	Connect the cable correctly by referring to the connection diagram.
Incorrect Audio from a channel.	Speaker cable connected incorrectly.	Connect the cable correctly by referring to the connection diagram.
	The center speaker cable connection is incomplete.	Connect the cable correctly.
	STEREO has been selected for Surround mode.	When STEREO is selected for Surround mode, no sound will be output from the center speaker. Set another Surround mode.
No Audio output from the center channel speaker.	Center = NONE has been selected in SETUP mode.	Make the correct setting.
	The surround speaker cable connection is incomplete.	Connect the cable correctly.
	STEREO has been selected for Surround mode.	When STEREO has been selected for Surround mode, no sound will be output from the surround speaker. Set another Surround mode.
No Audio output from the surround speakers.	Surround = NONE has been selected in SETUP mode.	Make the correct setting.
	The surround back speaker cable connection is incomplete.	Connect the cable correctly.
	Surround mode is not EX/ES mode.	Set surround mode EX/ES.
No Audio output from the surround back speakers.	Surround back = NONE has been selected in SPEAKERS SIZE SETUP	Make the correct setting.
	Surround center= NONE has been selected in SPEAKERS SIZE SETUP	Make the correct setting.
	Input signal is incompatible.	Use 5.1 channel source.

SYMPTOM	CAUSE	REMEDY
Can not select Pro Logic IIx mode.	Input signal is incompatible.	Use 2 channel Dolby Digital input signal, PCM input signal or analog input signal.
Can not select Neo:6 mode.	Input signal is incompatible.	Use 2 channel Dolby Digital input signal, PCM input signal or analog input signal.
Can not select CSII mode.	Input signal is incompatible.	Use 2 channel Dolby Digital input signal, PCM input signal or analog input signal.
No output to Sub Woofer Out.	Sub-woofer = NONE has been selected in SETUP mode.	Select Sub-woofer = YES.
Noise is produced during DTS-encoded CD or laser disc play.	Analog has been selected for input.	Be sure to perform digital connection, select digital input, then play.
A specific channel does not produce output.	Nothing recorded on source.	Check the encoded channel on the source side.
FM or AM reception fails.	Antenna connection is incomplete.	Correctly connect the indoor FM and AM antennas to FM and AM antenna outlets.
Noise is heard during AM reception.	Reception is affected by other electrical fields.	Try changing location where the AM indoor antenna is set up.
Noise is heard during FM reception.	The radio waves from the broadcasting station are weak.	Install an FM outdoor antenna.
Cannot get programmed station when the PRESET button is pressed.	Preset data has been erased.	Disconnecting power plug for long periods of time will erase preset data. If that happens, input the preset data again.
Control with the remote control unit fails.	Batteries are consumed.	Replace all the batteries with new ones.
	Remote controller's function-key setting is wrong.	Select different position from which equipment will be controlled.
	The distance between this ZR6001 and the remote commander is too far.	Move closer to this ZR6001.
	Something is blocking ZR6001 and the remote commander.	Remove offending object.
Nothing is heard over PLC connection.	The PLC is wrongly set.	Correctly set the PLC as explained in "MULTI PLC SETUP" on page 24. You can check whether or not the ZC4001 is securely connected to the ZR6001 via the PLC status display area of the ZC4001.
	The source (Marantz product) is not correctly connected to the ZR6001.	Marantz products connect over an RC-5 bus. Correctly connect the source as explained in "CONNECTING TO THE RC-5" on page 17.
	The source (other brand product) is not correctly connected to the ZR6001.	Other brand sources are controlled by remote control signals sent from an emitter connected to the IR EMITTER OUT terminals of the ZR6001 to the IR sensor of the source unit. Operation requires you to set the brand code or use the IR code learning feature. Correctly connect the source as explained in "CONNECTING AN IR EMITTER" on page 13.
	Another device is generating a high level of noise on the power line.	Turn off the device that is causing the noise or move it farther away from the ZR6001 and ZC4001.

**Note:**

- After "PROTECT" appears on the unit's display, the standby indicator may start flashing. If it does, there is a problem in the unit or the connection. If this problem reoccurs even when power is activated from the remote control unit, call for servicing.

**GENERAL MALFUNCTION**


If the equipment malfunctions, this may be because an electrostatic discharge or AC line interference has corrupted the information in the equipment memory circuits. Therefore:

- disconnect the plug from the AC line supply
- after waiting at least three minutes, reconnect the plug to the AC line supply
- re-attempt to operate the equipment

**Memory backup**

- In case a power outage occurs or the power cord is accidentally unplugged, the ZR6001 is equipped with a backup function to prevent memory data such as the preset memory from being erased.

**HOW TO RESET THE UNIT**

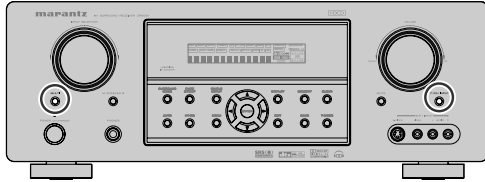

Should the operation or display seem to be abnormal, reset the unit with the following procedure.

The ZR6001 is turned on, press and hold the **MULTI** and **7.1CH INPUT** buttons simultaneously for 3 seconds or more.

Remember that the procedure will reset the settings of the function selector, Surround mode, delay time, TUNER PRESET etc., to their initial settings.

**TECHNICAL SPECIFICATIONS**

**FM TUNER SECTION**

Frequency Range ..... 87.5 - 108.0 MHz  
 Usable Sensitivity ..... IHF 1.8 μV/16.4 dBf  
 Signal to Noise Ratio ..... Mono/Stereo 75/70 dB  
 Distortion ..... Mono/Stereo 0.2/0.3 %  
 Stereo Separation ..... 1 kHz 45 dB  
 Alternate Channel Selectivity ..... ± 300 kHz 60 dB  
 Image Rejection ..... 98 MHz 70 dB  
 Tuner Output Level ..... 1 kHz, ± 75 kHz Dev 800 mV

**AM TUNER SECTION**

Frequency Range ..... 520 - 1710 kHz  
 Signal to Noise Ratio ..... 50 dB  
 Usable Sensitivity .....  
 ... Loop 400 μV (When MULTI PLC SERVER is OFF)  
 Distortion ..... 400Hz, 30 % Mod. 0.5 %  
 Selectivity ..... ± 18 kHz 70 dB

**AUDIO SECTION**

Power Output (20 Hz - 20 kHz/THD=0.08%)  
 Front L&R ..... 8 ohms 95 W / Ch  
 Center ..... 8 ohms 95 W / Ch  
 Surround L&R ..... 8 ohms 95 W / Ch  
 Surround Back L&R ..... 8 ohms 95 W / Ch

Front L&R ..... 6 ohms 115 W / Ch  
 Center ..... 6 ohms 115 W / Ch  
 Surround L&R ..... 6 ohms 115 W / Ch  
 Surround Back L&R ..... 6 ohms 115 W / Ch

Input Sensitivity/Impedance ..... 168 mV/ 47 Kohms  
 Signal to Noise Ratio(Analog Input / Pure Direct) ..... 105 dB  
 Frequency Response  
 (Analog Input / Pure Direct) ..... 8 Hz - 100 kHz (± 3 dB)  
 (Digital Input / 96 kHz PCM) ..... 8 Hz - 45 kHz (± 3 dB)

**VIDEO SECTION**

Television Format ..... NTSC  
 Input Level/Impedance ..... 1 Vp-p/75 ohms  
 Output Level/Impedance ..... 1 Vp-p/75 ohms  
 Video Frequency Response ..... 5 Hz to 8 MHz (-1 dB)  
 Video Frequency (Component) ... 5 Hz to 80 MHz (-1 dB)  
 S/N ..... 60 dB

**PLC SECTION**

Modulation Method ..... Multi carrier  
 Frequency Band ..... 2 MHz - 20 MHz

**GENERAL**




Power Requirement ..... AC 120 V 60 Hz  
 Power Consumption ..... 5 A  
 Weight ..... 30.2 lbs (13.7 kg)

**ACCESSORIES**

- Remote Control Unit RC5500SR ..... 1
- AAA-size batteries ..... 2
- FM Antenna ..... 1
- AM Loop Antenna ..... 1
- Front AUX Jack Cover ..... 1
- AC Power Cable ..... 1

Specifications subject to change without prior notice.

**DIMENSIONS**

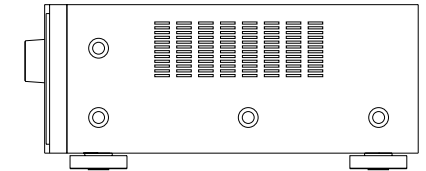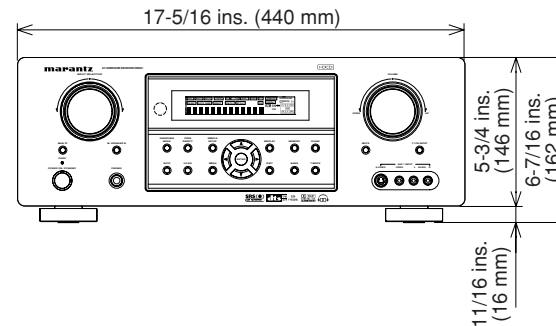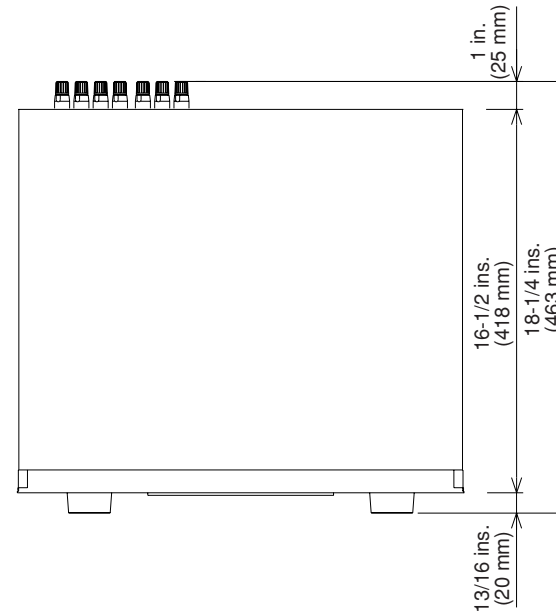

# SETUP CODES FOR REMOTE CONTROLLER RC5500SR

## CD

Aiwa .....	0184
Burmester .....	0447
California Audio Labs .....	0056
Carver .....	0184, 0206
Classic .....	0324
Denon .....	0030
DKK .....	0027
DMX Electronics .....	0184
Emerson .....	0332
Fisher .....	0352, 0206
Garrard .....	0447
Genexxa .....	0059, 0332
GPX .....	0323
Harman/Kardon .....	0184, 0200, 0229
Hitachi .....	0059
Integra .....	0128
JVC .....	0099, 0321
Kenwood .....	0055, 0064, 0217
KLH .....	0345
Koss .....	0344
Krell .....	0184
Linn .....	0184
Luxman .....	0120
LXI .....	0332
Magnavox .....	0184, 0332
Marantz .....	0999, 0056, 0184
MCS .....	0056
Miro .....	0027
Mission .....	0184
MTC .....	0447
NSM .....	0184
Onkyo .....	0128
Optimus .....	0027, 0059, 0064, 0332, 0206, 0495, 0172, 0447, 0102
Panasonic .....	0056
Parasound .....	0447
Philips .....	0999, 0184
Pioneer .....	0059, 0332, 0495
Polk Audio .....	0184
Proton .....	0184
QED .....	0184
Quad .....	0184
Quasar .....	0056

RadioShack .....	0102
RCA .....	0089, 0059, 0447, 0080, 0332, 0206, 0495
Realistic .....	0447, 0206
Rotel .....	0184, 0447
SAE .....	0184
Sansui .....	0184, 0332
Sanyo .....	0206
Scott .....	0332
Sears .....	0332
Sharp .....	0064
Sonic Frontiers .....	0184
Sony .....	0027, 0127, 0391
Soundesign .....	0172
Symphonic .....	0332
TAG McLaren .....	0184
Tascam .....	0447
TDK .....	0235
Teac .....	0447
Technics .....	0056
Victor .....	0099
Wards .....	0184, 0080
Yamaha .....	0063, 0319
Zonda .....	0184

## CDR

Classic .....	0324
Fisher .....	0352
Harman/Kardon .....	0229
JVC .....	0321
Kenwood .....	0999
Marantz .....	0999
Philips .....	0999
Pioneer .....	0089, 0114
Sony .....	0391, 0127
TDK .....	0235
Teac .....	0447
Yamaha .....	0319

## MD PLAYERS

Denon .....	1900
-------------	------

Kenwood .....	1708, 1853
Marantz .....	1207
Onkyo .....	1895
Optimus .....	1090
Pioneer .....	1090
Sharp .....	1888
Sherwood .....	1094
Sony .....	1517
Yamaha .....	1915

## TAPE

Aiwa .....	0056, 0227, 0224
Akai .....	0310
Carver .....	0056
Denon .....	0103
Fisher .....	0101
Garrard .....	0466, 0335
Harman/Kardon .....	0209, 0056
JVC .....	0271, 0300
Kenwood .....	0097
Magnavox .....	0056
Marantz .....	0056, 0036
Mitsubishi .....	0310
NAD .....	0171
Onkyo .....	0309, 0163, 0162
Optimus .....	0054, 0247, 0466, 0364
Panasonic .....	0256
Philips .....	0056
Pioneer .....	0054, 0247, 0126
Polk Audio .....	0056
RCA .....	0054, 0247
Revox .....	0217
Sansui .....	0056, 0036
Sherwood .....	0364
Sony .....	0270, 0197, 0318
Teac .....	0335
Technics .....	0256
Victor .....	0300
Wards .....	0054
Yamaha .....	0124, 0121

## SAT (DSS)

AlphaStar .....	0799
Chaparral .....	0243
Crossdigital .....	1136

DirecTV .....	0419, 0593, 0666, 1666, 1169, 0274, 0776, 1776, 0751, 0846, 1883, 1103, 1136, 0126, 1470, 1469
Dish Network System .....	1032, 0802, 1197
Dishpro .....	1032, 0802
Echostar .....	1032, 0802, 1197
Expressvu .....	0802
GE .....	0593
General Instrument .....	0896
GOI .....	0802
Hitachi .....	0846
HTS .....	0802
Hughes Network Systems .....	1169, 0776, 1776, 1470, 1469
JVC .....	0802, 1197
Magnavox .....	0751, 0749
Memorex .....	0751
Mitsubishi .....	0776
Motorola .....	0896
Next Level .....	0896
Panasonic .....	0274, 0728
Paysat .....	0751
Philips .....	1169, 0776, 1776, 0751, 1103, 0749, 0126, 1469
Proscan .....	0419, 0593
RadioShack .....	0896
RCA .....	0419, 0593, 0882, 0170
Samsung .....	1303, 1136
SKY .....	0883
Sony .....	0666, 1666
Star Choice .....	0896
Tivo .....	1169, 1470, 1469
Toshiba .....	0776, 1776, 0817, 1312
Uniden .....	0751, 0749
Zenith .....	0883, 1883

## TV

Admiral .....	0120, 0490
Advent .....	0788, 0869
Aiko .....	0119
Akai .....	0729, 0057, 0699
Albatron .....	0870
America Action .....	0207
Anam .....	0207
AOC .....	0057
Apex Digital .....	0775, 0792, 0906
Audiovox .....	0478, 0207, 0119
Bell & Howell .....	0181

Bradford .....	0207	KEC .....	0207	Scott .....	0263, 0207, 0205	Citizen .....	0064, 1305
Broksonic .....	0263, 0490	Kenwood .....	0057	Sears ...	0074, 0081, 0181, 0183, 0205, 0198	Craig .....	0064, 0074, 0267
Candle .....	0057	KLH .....	0792	Sharp .....	0120	Curtis Mathes .....	0087, 0062, 0189, 1062
Carnivale .....	0057	KTV .....	0207, 0057	Sheng Chia .....	0120	Cybernex .....	0267
Carver .....	0081	LG .....	1205, 0883, 0469	Sony .....	0027	Daewoo .....	0072, 1305
Celebrity .....	0027	LXI .....	0074, 0081, 0181, 0183, 0205	Soundesign .....	0207, 0205	Denon .....	0069
Celera .....	0792	Magnavox .....	0081, 0057, 1481, 0733, 1281	Squareview .....	0198	Durabrand .....	0066
Changhong .....	0792	Marantz .....	0081, 0057, 1581, 0731	SSS .....	0207	Dynatech .....	0027
Citizen .....	0087, 0057, 0119	Matsushita .....	0277, 0677	Starlite .....	0207	Electrohome .....	0064
Clarion .....	0207	Megatron .....	0205, 0172	Studio Experience .....	0870	Electroponic .....	0064
Contec .....	0207	Memorex .....	0181, 0490, 0177, 0205	Supreme .....	0027	Emerex .....	0059
Craig .....	0207	MGA .....	0177, 0057, 0205	SVA .....	0775, 0892	Emerson .....	0064, 0211, 0027, 0148, 0070, 0236, 1305, 1506
Crosley .....	0081	Midland .....	0074, 0044, 0078	Sylvania .....	0081, 0057, 0198	Fisher .....	0074, 0131
Crown .....	0207	Mitsubishi .....	0120, 0177, 1277, 0205, 0863	Symphonic .....	0207, 0198	Fuji .....	0062, 0060
Curtis Mathes .....	0074, 0081, 0181, 0478, 0120, 0087, 0729, 0057, 0172, 0193, 1174, 1374	Monivision .....	0870	Tandy .....	0120	Funai .....	0027
CXC .....	0207	Motorola .....	0120	Tatung .....	1783	Garrard .....	0027
Daewoo .....	0478, 1688, 0119, 0699	MTC .....	0087, 0057	Technics .....	0277, 0078	GE .....	0087, 0062, 0267, 1087, 1062, 0834
Denon .....	0172	Multitech .....	0207	Techwood .....	0078	GoldStar .....	0064, 1264
Dumont .....	0044	NAD .....	0183, 0205	Teknika .....	0081, 0207, 0177, 0087, 0119	Gradiente .....	0027
Durabrand .....	0207, 0205	NEC .....	0057, 1731	Telefunken .....	0729	Harley Davidson .....	0027
Electroband .....	0027	Nikko .....	0057, 0205, 0119	TMK .....	0205	Harman/Kardon .....	0108
Elektra .....	0044, 1688	Norcent .....	0775, 0851	TNCi .....	0044	HI-Q .....	0074
Emerson .....	0181, 0263, 0490, 0207, 0205, 0198	NTC .....	0119	Toshiba .....	0181, 0183, 0087, 1283, 1383, 1183, 1731, 0677	Hitachi .....	0027, 0069
Envision .....	0057	Onwa .....	0207	TVS .....	0490	Hughes Network Systems .....	0069
Fisher .....	0181	Optimus .....	0181, 0277, 0193, 0677	Vector Research .....	0057	JVC .....	0094
Fujitsu .....	0710, 0880, 0836	Optonica .....	0120	Victor .....	0080	KEC .....	0064
Funai .....	0207, 0198	Orion .....	0263, 0490	Vidikron .....	0081	Kenwood .....	0094
Futuretech .....	0207	Panasonic .....	0277, 0078, 0677	Vidtech .....	0205	Kodak .....	0062, 0064
Gateway .....	1782, 1783	Penney .....	0074, 0183, 0078, 0087, 0057, 0205, 1374	Viewsonic .....	1782	Lloyd's .....	0027
GE .....	0074, 0078, 0478, 0205, 1474, 1374, 1174	Philco .....	0081, 0057	Wards .....	0081, 0057, 0205, 1183	LXI .....	0064
Gibraltar .....	0044, 0057	Philips .....	0081, 1481, 0717	Waycon .....	0183	Magnasonic .....	1305
GoldStar .....	0057, 0205	Pilot .....	0057	White Westinghouse .....	0490	Magnavox .....	0062, 0066, 0108, 0027, 1808
Grunpy .....	0207	Pioneer .....	0193, 0706	Yamaha .....	0057	Magnin .....	0267
Hallmark .....	0205	Portland .....	0119	Zenith .....	0044, 0490, 0205, 0119	Marantz .....	0062, 0108, 1408
Harman/Kardon .....	0081	Prima .....	0788			Marta .....	0064
Harvard .....	0207	Prism .....	0078			Matsushita .....	0062, 0189
Havermy .....	0120	Proscan .....	0074, 1474, 1374			MEI .....	0062
Hello Kitty .....	0478	Proton .....	0205			Memorex .....	0062, 0189, 0064, 0075, 0066, 0074, 0267, 0027, 0131, 0236, 1264
Himitsu .....	0207	Pulsar .....	0044			MGA .....	0267, 0070
Hisense .....	0775	Quasar .....	0277, 0078, 0677			MGN Technology .....	0267
Hitachi .....	1172, 0172	RadioShack ...	0074, 0181, 0207, 0057, 0205			Minolta .....	0069
Infinity .....	0081	RCA .....	0074, 1474, 1274, 1574, 0117, 1174, 1074, 1374, 0706			Mitsubishi .....	0094, 0070, 0834
Inteq .....	0044	Realistic .....	0181, 0207, 0057, 0205			Motorola .....	0062, 0075
JBL .....	0081	Runco .....	0044, 0057			MTC .....	0267, 0027
JCB .....	0027	Sampo .....	0057, 1782			Multitech .....	0027
Jensen .....	0788	Samsung .....	0087, 0729, 0057, 0205			NAD .....	0085
JVC .....	0080	Sansui .....	0490			NEC .....	0131, 0094
		Sanyo .....	0181			Nikko .....	0064
		Scotch .....	0205			Noblex .....	0267

### VCR

Admiral .....	0075, 0236
Adventura .....	0027
Aiwa .....	0064, 0027
American High .....	0062
Asha .....	0267
Audiovox .....	0064
Beaumarck .....	0267
Bell & Howell .....	0131
Broksonic .....	0211, 0148, 0236, 1506
Calix .....	0064
Canon .....	0062
Carver .....	0108





# PLC REMOTE CODES

## TV

### TV's

Accent ..... 0009  
 Acura ..... 0009  
 Addison ..... 0092, 0108, 0653  
 Admiral ..... 0093, 0463  
 Advent ..... 0761, 0842  
 Aiko ..... 0009, 0092  
 Aim ..... 0037, 0706  
 Aiwa ..... 0701, 1904, 1911  
 Akai ..... 0009, 0030, 0037, 0178, 0208, 0480,  
 0548, 0556, 0672, 0702, 0714, 0812  
 Akiba ..... 0037  
 Akito ..... 0037  
 Akura ..... 0009, 0037, 0668, 0714  
 Alba .... 0009, 0037, 0443, 0487, 0668, 0714, 1037  
 Albatron ..... 0700, 0843  
 Alfide ..... 0672  
 Allstar ..... 0037  
 America Action ..... 0180  
 Amplivision ..... 0370  
 Amstrad ..... 0009, 0037, 0171, 1037  
 Anam ..... 0009, 0180, 0250, 0700  
 Anam National ..... 0250, 0650  
 Anglo ..... 0009  
 Anhua ..... 0051  
 Anitech ..... 0009, 0037  
 Ansonic ..... 0009, 0370, 0668  
 AOC ..... 0009, 0030, 0060, 0092, 0093,  
 0108, 0178, 0180, 0451  
 Apex Digital ..... 0748, 0765, 0767, 0879, 1943  
 Ardem ..... 0037, 0714  
 Aristona ..... 0037, 0556  
 Asberg ..... 0037  
 Asora ..... 0009  
 Astra ..... 0037  
 ATD ..... 0698  
 Atlantic ..... 0037  
 Atori ..... 0009  
 Audinac ..... 0180  
 Audiosonic ..... 0009, 0037, 0370, 0486, 0714  
 Audioton ..... 0370, 0486  
 Audiovox ..... 0092, 0180, 0451, 0623  
 Awa ..... 0009, 0108  
 Axxent ..... 0009  
 Axxon ..... 0714  
 Baihe ..... 0009  
 Baile ..... 0009, 0661  
 Baird ..... 0073, 0208  
 Bang & Olufsen ..... 0565  
 Baosheng ..... 0009

Basic Line ..... 0009, 0037, 0556, 0668, 1037  
 Baur ..... 0009, 0037  
 Baysonic ..... 0180, 0236, 0463  
 Beaumark ..... 0178  
 Beijing ..... 0009, 0208, 0661, 0812  
 Beko ..... 0037, 0370, 0486, 0714, 1037  
 Bell & Howell ..... 0154  
 BenQ ..... 1032, 1756  
 Beon ..... 0037  
 Berthen ..... 0668  
 Bestar ..... 0037, 0370  
 Black Diamond ..... 1037  
 Blaupunkt ..... 0195  
 Blue Sky ..... 0037, 0487, 0556, 0668, 0714,  
 1037, 1254  
 Boots ..... 0009  
 BPL ..... 0037  
 Bradford ..... 0180  
 Brand Unknown ..... 0060  
 Brandt ..... 0287, 0560, 0625  
 Brinkmann ..... 0037, 0486, 0668  
 Broksonic ..... 0236, 0463, 1911, 1935  
 Bush ..... 0009, 0037, 0208, 0487, 0556, 0661,  
 0668, 0698, 0714, 1037, 1935  
 Caihong ..... 0009  
 Cailing ..... 0748  
 Candle ..... 0030  
 Carad ..... 0610, 0668, 1037  
 Carena ..... 0037  
 Carnivale ..... 0030  
 Carver ..... 0054  
 Cascade ..... 0009, 0037  
 Casio ..... 0037  
 Cathay ..... 0037  
 CCE ..... 0037  
 Celebrity ..... 0000  
 Celera ..... 0765  
 Celestial ..... 0767  
 Centrum ..... 1037  
 Centurion ..... 0037  
 CGE ..... 0370  
 Changcheng ..... 0009, 0051, 0661  
 Changfei ..... 0009  
 Changhai ..... 0009  
 Changhong ..... 0009, 0156, 0508, 0765, 0767,  
 1008, 1156  
 Chengdu ..... 0009  
 Ching Tai ..... 0009, 0092  
 Chun Yun .... 0000, 0009, 0092, 0180, 0700, 0843  
 Chunfeng ..... 0009  
 Chung Hsin ..... 0053, 0108, 0180  
 Chunsun ..... 0009  
 Cimline ..... 0009

Cinema ..... 0672  
 Cinal ..... 0092, 0451  
 Citizen ..... 0030, 0060, 0092, 0451  
 City ..... 0009  
 Clarion ..... 0180  
 Clarivox ..... 0037  
 Clatronic ..... 0009, 0037, 0370, 0714  
 Clayton ..... 1037  
 Commercial Solutions ..... 0047, 1447  
 Concorde ..... 0009  
 Condor ..... 0009, 0037, 0370  
 Conrac ..... 0808  
 Conrowa ..... 0009, 0145, 0156, 0698, 1156  
 Contec ..... 0009, 0037, 0180  
 Continental Edison ..... 0287, 0487  
 Cosmel ..... 0009, 0037  
 Craig ..... 0180  
 Crosley ..... 0054  
 Crown ..... 0009, 0037, 0053, 0180, 0208, 0370,  
 0486, 0487, 0672, 0714  
 Crown Mustang ..... 0672  
 Curtis Mathes ..... 0030, 0047, 0051, 0054, 0060,  
 0093, 0145, 0154, 0166, 0451,  
 0702, 1147, 1347  
 CXC ..... 0180  
 D-Vision ..... 0037, 0556  
 Daenix ..... 0180, 0672  
 Daenyk ..... 0672  
 Daewoo ..... 0009, 0030, 0037, 0092, 0108,  
 0154, 0178, 0180, 0451, 0556,  
 0623, 0634, 0661, 0672, 0700,  
 0865, 1661  
 Dansai ..... 0009, 0037, 0208  
 Dantax ..... 0714  
 Dawa ..... 0009, 0037  
 Dayton ..... 0009  
 Daytron ..... 0009, 0037, 0180  
 Dayu ..... 0661  
 De Graaf ..... 0208, 0548  
 Decca ..... 0037  
 Dell ..... 1080  
 Denon ..... 0145  
 Denver ..... 0037  
 Desmet ..... 0009, 0037  
 Diamant ..... 0037  
 Diamond ..... 0009, 0698, 0706  
 Digatron ..... 0037  
 Digiline ..... 0668  
 Digitor ..... 0037  
 Dixi ..... 0009, 0037  
 Domeos ..... 0668  
 Dongda ..... 0009  
 Donghai ..... 0009  
 Dreon ..... 0037  
 DTS ..... 0009  
 Dual ..... 0037

Dumont ..... 0017  
 Durabrand .... 0171, 0178, 0180, 0463, 1034, 1463  
 Dux ..... 0037  
 Dynatron ..... 0037  
 Ecco ..... 0706  
 ECE ..... 0037  
 Edison-Minerva ..... 0487  
 Elbe ..... 0610  
 Electrobond ..... 0000  
 Elekta ..... 0009  
 Elektra ..... 0017, 1661  
 ELG ..... 0037  
 Elin ..... 0009, 0037, 0548  
 Elta ..... 0009  
 Emerson ..... 0037, 0154, 0171, 0178, 0180, 0236,  
 0370, 0463, 0486, 0623, 0714, 1911  
 Envision ..... 0030  
 Erres ..... 0037  
 ESA ..... 0171, 0812  
 ESC ..... 0037  
 Ether ..... 0009, 0030  
 Etron ..... 0009  
 Euroman ..... 0037, 0370  
 Europa ..... 0037  
 Exquisit ..... 0037  
 Feilang ..... 0009  
 Feilu ..... 0009  
 Feiyue ..... 0009  
 Fenner ..... 0009  
 Ferguson ..... 0037, 0053, 0073, 0287, 0548,  
 0560, 0625  
 Fidelity ..... 0037, 0171  
 Finlandia ..... 0208, 0548  
 Finlux ..... 0037, 0480, 0714  
 Firstar ..... 0009, 0236  
 Firstline ..... 0009, 0037, 0208, 0556, 0668,  
 0714, 1037  
 Fisher ..... 0047, 0154, 0208, 0370  
 Flint ..... 0037, 0610  
 Formenti ..... 0037  
 Fortress ..... 0093  
 Fraba ..... 0037, 0370  
 Friac ..... 0009, 0037, 0370, 0610  
 Frontech ..... 0009  
 Fujitsu ..... 0009, 0683, 0809, 0853  
 Fujitsu General ..... 0009  
 Fujitsu Siemens ..... 0809  
 Funai ..... 0171, 0180, 0668, 1904  
 Furi ..... 0145  
 Futuretech ..... 0180  
 Galaxi ..... 0037  
 Galaxis ..... 0037, 0370  
 Gateway ..... 1755, 1756  
 GBC ..... 0009  
 GE ..... 0030, 0047, 0051, 0092, 0093, 0178,  
 0180, 0451, 0560, 0625, 1147, 1347,  
 1447, 1454, 1917, 1922

GEC .....	0037	Hua Tun .....	0009	Kathrein .....	0556	Matsui .....	0009, 0037, 0195, 0208,
Geloso .....	0009	Huafa .....	0009, 0145	KEC .....	0180		0443, 0487, 0556, 0714, 1037
General Electric .....	0047	Huanghaimei .....	0009	Ken Brown .....	0236, 0463	Matsushita .....	0051, 0250, 0650
General Technic .....	0009	Huanghe .....	0009	Kendo .....	0037, 0610	Matsuyama .....	0587
Genesis .....	0009, 0037	Huanglong .....	0009	Kenia .....	0030	Maxent .....	1755
Genexxa .....	0009, 0037	Huangshan .....	0009	Kenwood .....	0030	MCE .....	0009
Gericom .....	0865	Huari .....	0145	Kioto .....	0054, 0556, 0706	Mediator .....	0037
Gibraltar .....	0017, 0030	Huodateji .....	0051	Kiton .....	0037, 0668	Medion .....	0037, 0556, 0668, 0698, 0714,
Go Video .....	0886	Hyper .....	0009	KLH .....	0765, 0767		0808, 1037
Goldfunk .....	0668	Hypson .....	0037, 0668, 0714, 1037	KLL .....	00037	Megapower .....	0700
GoldStar .....	0030, 0037, 0154, 0178, 0714	Hyundai .....	0849, 0865	Kneissel .....	0037, 0556, 0610	Megas .....	0610
Gooding .....	0487	Hoher .....	0714	Kolin .....	0053, 0108, 0150, 0180	Megatron .....	0145, 0178
Goodmans ..	0009, 0037, 0480, 0487, 0556, 0560,	Iberia .....	0037	Kongque .....	0009	MEI .....	1037
	0634, 0661, 0668, 0714, 1037	Imperial .....	0037, 0370	Konichi .....	0009	Meletronic .....	0009, 0037, 0480,
Gorenje .....	0370	Imperial Crown .....	0009, 0661	Konka .....	0037, 0587, 0714, 1084		0634, 0661, 0714
Gradiente .....	0053	Indiana .....	0037	Kontakt .....	0487	Memorex .....	0009, 0060, 0150, 0154, 0178,
Graetz .....	0487	Infinity .....	0054	Korpel .....	0037		0250, 0463, 1037, 1911
Granada .....	0037, 0108, 0208, 0548, 0560	Ingelen .....	0487, 0610, 0714	Koyoda .....	0009	Mercury .....	0009, 0037, 0060
Grandin .....	0009, 0037, 0610, 0668,	Ingersoll .....	0009	KTV .....	0030, 0180	Mermaid .....	0037
	0714, 1037	Inno Hit .....	0009	Kuaille .....	0009	Metronic .....	0625
Grundig .....	0009, 0037, 0195, 0443, 0487, 0556,	Innova .....	0037	Kulun .....	0009	Metz .....	0037, 0447, 0587, 0668, 0746
	0587, 0672, 0706, 1935	Innowert .....	0865	Kunlun .....	0051, 0208, 0661	MGA .....	0030, 0150, 0178
Grunpy .....	0180	Inteq .....	0017	L&S Electronic .....	0714, 0808	Micromaxx .....	0037, 0668, 0808, 1037
Haaz .....	0706	Interbuy .....	0037	LaSAT .....	0486	Microstar .....	0808
Haier .....	0037, 0508, 0587, 0698, 1017, 1034	Interfunk .....	0037	Leader .....	0009	Midland .....	0017, 0047, 0051
Haihong .....	0009	Internal .....	0037	Lecson .....	0037	Minato .....	0037
Hallmark .....	0178	Intervision .....	0009, 0037, 0486, 0487	Legend .....	0009	Minerva .....	0108, 0487
Hankook .....	0030, 0178, 0180	IR .....	0037, 0073, 0093, 0108, 0195,	Lenco .....	0037, 1037	Minoka .....	0037
Hanseatic .....	0009, 0037, 0556, 0634, 0661,		0287, 0370, 0556	Lenoir .....	0009	Mitsubishi .....	0030, 0037, 0093, 0108, 0150, 0154,
	0714, 0808	Irradio .....	0009, 0037	Leyco .....	0037		0178, 0180, 0236, 0250, 0556, 1037,
Hantarex .....	0009, 0037, 0865	IRT .....	0451, 0698, 1661	LG .....	0030, 0037, 0060, 0108, 0178,	Mivar .....	1250, 1917
Hantor .....	0037	Isukai .....	0037		0556, 0698, 0700,	Monaco .....	0609
Harley Davidson .....	1904	ITS .....	0037		0714, 0856	Monovision .....	0009
Harman/Kardon .....	0054	ITT .....	0208, 0480, 0548, 0610	Liesen & Tter .....	0037	Morgan's .....	0700, 0843
Harsper .....	0865	ITT Nokia .....	0180, 0208, 0480, 0548, 0610	Liesenkotter .....	0037	Motorola .....	0037
Harvard .....	0180	ITV .....	0037	Lifetec .....	0009, 0037, 0668, 0683, 0714, 1037	MTC .....	0093
Harwood .....	0009, 0037, 0487	JBL .....	0054	Lloyd's .....	0009, 1904	MTC .....	0030, 0060, 0370
Hauppauge .....	0037	JCB .....	0000	Loewe .....	0037	MTlogic .....	0714
Havermy .....	0093	Jean .....	0009, 0051, 0092, 0156, 0236	Logik .....	0009, 0698	Mudan .....	0009, 0051, 0208
HCM .....	0009, 0037	Jensen .....	0761	Logix .....	0668	Multitec .....	0037, 0486, 0668, 1037
Helios .....	0865	Jiahua .....	0051	Lumatron .....	0037, 0073	Multitech .....	0009, 0037, 0180, 0486
Hello Kitty .....	0451	Jialicai .....	0009	Lux May .....	0009, 0037	Myryad .....	0556
Hema .....	0009	Jinfeng .....	0051, 0208	Luxor .....	0208, 0480, 0548, 1037	NAD .....	0156, 0178, 0866
Highline .....	0037	Jinque .....	0009	LXI .....	0047, 0054, 0154, 0156, 0178	Naiko .....	0037
Himitsu .....	0180	Jinta .....	0009	M & S .....	0054	Nanbao .....	0009
Hinari .....	0009, 0037	Jinxing .....	0009, 0037, 0054, 0145, 0156,	M Electronic .....	0009, 0037, 0287, 0480	National .....	0051, 0208, 0508
Hisawa .....	0610, 0714		0556, 0698, 1011	Madison .....	0037	NEC .....	0009, 0030, 0051, 0053, 0154,
Hisense .....	0009, 0145, 0156, 0208, 0508,	JMB .....	0443, 0556, 0634	Magnavox .....	0030, 0054, 0706,		0156, 0178, 0508, 0661
	0556, 0748, 1022, 1156	Jubilee .....	0556		1254, 1454, 1904	Neckermann .....	0037, 0370, 0556
Hitachi .....	0009, 0030, 0037, 0092, 0108, 0145,	JVC .....	0053, 0093, 0463, 0508, 0653,	Magnum .....	0037, 0714	NEI .....	0037
	0156, 0178, 0480, 0481, 0508, 0548,		0683, 0731, 1253, 1923	Manesth .....	0037	Netsat .....	0037
	0634, 1037, 1145, 1156, 1256, 1904, 1960	Kaige .....	0009	Manhattan .....	0037, 0668, 1037	Neufunk .....	0009, 0037, 0556, 0610, 0714
Hitachi Fujian .....	0108, 0150	Kaisui .....	0009, 0037	Marantz .....	0030, 0037, 0054, 0556	New Tech .....	0009, 0037, 0556
Hitsu .....	0009, 0610	Kangli .....	0009, 0661	Mark .....	0009, 0037, 0714	Newave .....	0009, 0092, 0093, 0178
Hongmei .....	0009, 0093	Kangyi .....	0009	Masuda .....	0009, 0037	Nikkai .....	0009, 0037
Hornophon .....	0037	Karcher .....	0610, 0714			Nikko .....	0030, 0092, 0178

Noblex .....	0037, 0154	Premier .....	0009	Sansei .....	0451	Sony .....	0000, 0037, 0053, 0093, 0145, 0150, 0156, 0250, 0650, 1100, 1651, 1904
Nokia .....	0180, 0208, 0480, 0548, 0610	Prima .....	0009, 0761	Sansui .....	0037, 0463, 0706, 1904, 1911, 1935	Soundesign .....	0178, 0180
Norcent .....	0748, 0824	Princeton .....	0700	Santon .....	0009	Soundwave .....	0037
Nordmende .....	0037, 0195, 0287, 0560, 0714	Prinston .....	1037	Sanyo .....	0088, 0108, 0145, 0154, 0156, 0180, 0208, 0370, 0508	Sowa .....	0051, 0060, 0092, 0156, 0178
Normerel .....	0037	Prism .....	0051	Sanyuan .....	0009, 0093	Spectra .....	0009
Novatronic .....	0037	Profex .....	0009	SBR .....	0037, 0556	Squareview .....	0171
NTC .....	0092	Profi .....	0009	Schaub Lorenz .....	0486, 0548, 0714	Ssangyong .....	0009
NU-TEC .....	0698	Proffitronic .....	0037	Schneider .....	0037, 0556, 0668, 0714, 1037, 1904	SSS .....	0180
Oceanic .....	0208, 0548	Proline .....	0037, 0625, 0634	Scotch .....	0178	Staksonic .....	0009
Okano .....	0009, 0037, 0370	Proscan .....	0047, 1347, 1447, 1922	Scott .....	0178, 0180, 0236	Standard .....	0009, 0037, 1037
Omni .....	0698	Proscoc .....	0156	Sears .....	0047, 0054, 0154, 0156, 0171, 0178, 1904	Starlite .....	0009, 0037, 0180
Onimax .....	0714	Prosonic .....	0037, 0370, 0668, 0714	Seaway .....	0634	Strato .....	0009, 0037
Onwa .....	0180	Protech .....	0009, 0037, 0486, 0668, 1037	Seelver .....	1037	Studio Experience .....	0843
Opera .....	0037	Proton .....	0009, 0030, 0178	SEG .....	0009, 0037, 0634, 0668, 1037	Sunkai .....	0487, 0610
Optimus .....	0154, 0166, 0250, 0650	ProVision .....	0037, 0556, 0714	SEI .....	0037	Sunstar .....	0009, 0037
Optonica .....	0093	Pulsar .....	0017	Sei-Sinudyne .....	0037	Sunwood .....	0037
Orbit .....	0037	Pye .....	0037, 0556	Semivox .....	0180, 0236, 0463	Supersonic .....	0009, 0208
Orion .....	0037, 0236, 0443, 0463, 0556, 0714, 1463, 1911	Pymi .....	0009	Semp .....	0156, 1356	SuperTech .....	0009, 0037, 0556
Orline .....	0037	Qingdao .....	0051, 0208	Sencora .....	0009	Supra .....	0009, 00178
Ormond .....	0668, 1037	Quasar .....	0009, 0051, 0250, 0650	Serie Dorada .....	0030, 0156, 0178, 0180	Supreme .....	0000
Osaki .....	0037, 0556	Quelle .....	0037, 0668	Serino .....	0093, 0610	Susumu .....	0287
Osio .....	0037	R-Line .....	0037	Shanghai .....	0009, 0208	Sutron .....	0009
Osume .....	0037	Radiola .....	0037, 0556	Shaofeng .....	0145	SVA .....	0587, 0748, 0865
Otto Versand .....	0037, 0093, 0556	Radiomarelli .....	0037, 0154	Sharp .....	0009, 0030, 0053, 0093, 0650, 1193, 1917	Sylvania .....	0030, 0054, 0171
Pacific .....	0556, 0714, 1037	RadioShack .....	0030, 0037, 0047, 0154, 0178, 0180, 1904	Shen Ying .....	0009, 0092	Symphonic .....	0171, 0180, 1904
Palladium .....	0037, 0370, 0714	Radiotone .....	0009, 0037, 0668, 1037	Shencai .....	0009, 0145	Synco .....	0000, 0060, 0092, 0093, 0178, 0451
Palsonic .....	0037, 0698	RCA .....	0000, 0030, 0047, 0051, 0060, 0090, 0092, 0093, 0178, 0560, 0618, 0625, 0679, 1047, 1147, 1247, 1347, 1447, 1454, 1547, 1917, 1922, 1948	Sheng Chia .....	0009, 0093, 0236	Sysline .....	0037
Panama .....	0037	Realistic .....	0030, 0154, 0178, 0180	Shenyang .....	0009	T + A .....	0447
Panasonic ...	0037, 0051, 0054, 0108, 0208, 0250, 0508, 0548, 0650, 0853, 1941	Recor .....	0037	Sherwood .....	0009	T+A .....	0447
Panavision .....	0037	Rectiligne .....	0037	Shintoshi .....	0037	Tacico .....	0009, 0092, 0178
Panda .....	0009, 0051, 0208, 0508, 0698, 0706	Rediffusion .....	0548	Shivaki .....	0037, 0178, 0443	Tai Yi .....	0009
Pausa .....	0009	Reflex .....	0037, 0668, 1037	Show .....	0009	Taishan .....	0009
Penney .....	0030, 0047, 0051, 0060, 0156, 0178, 1347	Relisys .....	0865	Siam .....	0037	Talent .....	0178
Perdio .....	0037	Reoc .....	0714	Siemens .....	0037, 0195	Tandy .....	0093
Perfekt .....	0037	Revox .....	0037	Siesta .....	0370	Targa .....	0702
Philco .....	0030, 0037, 0054, 0092, 0145, 0178, 0180, 0370, 0451, 0463, 0481, 1661, 1911	RFT .....	0037	Silva .....	0037	Tashiko .....	0092, 0650
Philips .....	0000, 0009, 0017, 0030, 0037, 0051, 0054, 0092, 0108, 0178, 0556, 0690, 1454, 1961	Roadstar .....	0009, 0037, 0668, 1037	Silva Schneider .....	0037	Tatung .....	0009, 0037, 0051, 0054, 0060, 0154, 0156, 1156, 1254, 1756
Phoenix .....	0037, 0486	Rowa .....	0009, 0037, 0587, 0698, 0748	Singer .....	0009, 0037	TCL .....	0698, 1027
Phonola .....	0037	Royal Lux .....	0370	Sinudyne .....	0037	TCM .....	0714, 0808
Pilot .....	0030	Runco .....	0017, 0030	SKY .....	0037	Teac .....	0009, 0037, 0171, 0178, 0668, 0698, 0706, 0714, 1037, 1755, 1904
Pioneer .....	0037, 0166, 0287, 0486, 0679, 0760, 0866	Saba .....	0250, 0287, 0548, 0560, 0625, 0714	Skygiant .....	0180	Tec .....	0009, 0037
Pionier .....	0370, 0486	Sagem .....	0610	Skyworth .....	0009, 0037, 0698, 0748, 1115	Tech Line .....	0037, 0668
Plantron .....	0009, 0037	Saige .....	0009	SLX .....	0668	Technics .....	0051, 0250, 0556, 0650
Playsonic .....	0037, 0714	Saisho .....	0009	Smaragd .....	0487	TechniSat .....	0556
Poppy .....	0009	Saivod .....	0037, 0668, 1037	Soemtron .....	0865	Techwood .....	0051
Portland .....	0092	Salora .....	0208, 0480, 0548	Solavox .....	0037, 0548	Tecnimagen .....	0556
Powerpoint .....	0037, 0487	Sampo .....	0009, 0030, 0092, 0093, 0154, 0171, 0178, 0650, 0700, 1755	Songba .....	0009	Teco ...	0009, 0051, 0092, 0093, 0178, 0653, 1040
		Samsung .....	0009, 0030, 0037, 0060, 0090, 0092, 0093, 0154, 0156, 0178, 0208, 0370, 0556, 0587, 0618, 0702, 0766, 0812, 1060, 1959	Soniko .....	0037	Tedelex .....	0009, 0208
				Sonitron .....	0208, 0370	Tek .....	0009
				Sonneclair .....	0037	Teknika .....	0054, 0060, 0092, 0150, 0180
				Sonoko .....	0009, 0037	Telecor .....	0037
				Sonolor .....	0208, 0548	Telefunken .....	0037, 0073, 0287, 0486, 0560, 0587, 0625, 0698, 0702
				Sontec .....	0009, 0037, 0370		

Telefusion .....	0037	Vlnc .....	1756	Orion .....	1911	Gehua .....	0476
Telegazi .....	0037	Vision .....	0037	RadioShack .....	1904	General Instrument .....	0003, 0276, 0476, 0810
Telesonic .....	0037	Vortec .....	0037	RCA .....	1917, 1922	General Instruments .....	0003, 0276, 0476
Telestarr .....	0009, 0037, 0556	Voxson .....	0178	Samsung .....	1959	GNI .....	1466
Teletech .....	0009, 0037, 0668, 1037	Waltham .....	0037, 0668, 1037	Sansui .....	1904, 1911	GoldStar .....	0144
Television .....	0037	Wards .....	0000, 0017, 0030, 0047, 0051, 0054, 0060, 0154, 0156, 0166, 0178, 0180, 0866, 1147, 1156, 1347	Schneider .....	1904	Hamlin .....	0009, 0273
Tempest .....	0009	Warumaia .....	0661	Sears .....	1904	Hongtian Jianguo .....	1462
Tennessee .....	0037	Watson .....	0009, 0037, 0668, 1037	Sharp .....	1917	Hwalin .....	0303
Tensai .....	0009, 0037	Waycon .....	0156	Sony .....	1904	Jerrold .....	0003, 0276, 0476, 0810
Tenson .....	0009	Wega .....	0037	Symphonic .....	1904	Jiuzhou .....	1445
Tera .....	0030	Weipai .....	0009	Teac .....	1904	Kabelvision .....	0003
Tevion .....	0037, 0668, 0714, 1037	Westinghouse .....	0889	Thomas .....	1904	KNC .....	0008
Texet .....	0009	Wharfedale .....	0037, 0556	Zenith .....	1904, 1911	LG .....	0144
Thomas .....	1904	White Westinghouse .....	0037, 0463, 0623	<b>TV/DVD</b>		Macab .....	0817
Thomson .....	0037, 0287, 0560, 0625, 1447	Windsor .....	0668, 1037	Apex Digital .....	1943	Melita .....	0003
Thorn .....	0037, 0073	Windy Sam .....	0556	Broksonic .....	1935	Memorex .....	0000
Thorn-Ferguson .....	0073	Wintel .....	0714	Bush .....	0698, 1037	Motorola .....	0276, 0476, 0810, 1254, 1376
Tiane .....	0093	Xenius .....	0634, 0661	Grundig .....	1935	Mr Zapp .....	0817
TMK .....	0178	Xiahua .....	0009, 0698	Hitachi .....	1960	MS .....	0303
TNCi .....	0017	Xianghai .....	0009	Panasonic .....	1941	Multitech .....	0883
Tobo .....	0009, 0748	Xiangyu .....	0009	Philips .....	1961	Noos .....	0817
Tokai .....	0009, 0037, 0668, 1037	Xingfu .....	0009	RCA .....	1948	NTL .....	0003, 0276, 1060, 1068
Tokaido .....	1037	XLogic .....	0698	Sansui .....	1935	Oak .....	0303
Tophouse .....	0180, 0672	XMS .....	0698	Sylvania .....	0171	Ono .....	1068
Toshiba .....	0009, 0060, 0093, 0145, 0154, 0156, 0195, 0508, 0618, 0650, 0714, 1156, 1256, 1356, 1656, 1935, 1945	Xoceco .....	1064	Toshiba .....	1935	Optus .....	0276, 1060
Toyoda .....	0009	Xrypton .....	0037	<b>TV/VCR/DVD</b>		Pace .....	0237, 1060, 1068, 1877
Trakton .....	0009	Yamaha .....	0030, 0650	Sharp .....	1917	Panasonic .....	0000, 0008, 0107
Trans Continsens .....	0037, 0668, 1037	Yamishi .....	0037	Toshiba .....	1945	Paragon .....	0000
Transonic .....	0009, 0037, 0587, 0698	Yapshe .....	0250	<b>CABLE</b>		Philips .....	0317, 0817, 1305
Triad .....	0556	Yingge .....	0009	Cable Converters		Pioneer .....	0144, 0533, 0877, 1877
Triumph .....	0556	Yokan .....	0037	ABC .....	0003, 0008, 0237	Pulsar .....	0000
Tuntex .....	0009, 0030, 0092	Yoko .....	0009, 0037	Americast .....	0899	PVP Stereo Visual Matrix .....	0003
TVS .....	0463	Yonggu .....	0009	Austar .....	0276	Quasar .....	0000
TVTEXT 95 .....	0556	Yousida .....	0009	Bell South .....	0899	RadioShack .....	0303, 0883
Uher .....	0037, 0480, 0486	Yuhang .....	0009	Bestlink .....	0303	Regal .....	0273, 0279
Ultravox .....	0037	Zenith .....	0017, 0092, 0178, 0463, 1904, 1911	Birmingham Cable Communications .....	0276	Runco .....	0000
Unic Line .....	0037	Zhuhai .....	0009	British Telecom .....	0003	Sagem .....	0817
United .....	0037, 0714	Zonda .....	0698	Cable & Wireless .....	1068	Salora .....	0000
Universal .....	0037	<b>TV/VCR</b>		Clearmaster .....	0883	Samsung .....	0000, 0144, 0840, 1060
Universum .....	0009, 0037, 0370, 0480, 0618, 0668, 1037	Aiwa .....	1904, 1911	ClearMax .....	0883	Scientific Atlanta .....	0008, 0237, 0477, 0877, 1068, 1877
Univox .....	0037	America Action .....	0180	Coolmax .....	0883	Skyworth .....	1464
V Inc. .....	1756	Audiovox .....	0180	Coship .....	1462	Sony .....	1006
V7 .....	1755	Broksonic .....	1911	Daehan .....	0778	Starcom .....	0003
Vector Research .....	0030	Emerson .....	0236, 1911	Daeryung .....	0008, 0477, 0877, 1877	Supercable .....	0276
Vestel .....	0037, 0556, 0668, 1037	Funai .....	1904	Director .....	0476	Supermax .....	0883
Vexa .....	0009, 0037	GE .....	1917, 1922	France Telecom .....	0817	Taihan .....	0778
Victor .....	0053, 0250, 0650, 0653	Harley Davidson .....	1904	Galaxi .....	0008	TCL .....	1445
Videomac .....	0009	Hitachi .....	1904	GE .....	0237	Telewest .....	1068
VideoSeven .....	1755	JVC .....	1923	<b>CABLE</b>		Time Warner cable .....	1877
VideoSystem .....	0037	Lloyd's .....	1904	Cable Converters		TongKook .....	0840
Vidikron .....	0054	Magnavox .....	1904	ABC .....	0003, 0008, 0237	Torx .....	0003
Vidtech .....	0178	Mitsubishi .....	1917	Americast .....	0899	Toshiba .....	0000
Viewsonic .....	1755			Austar .....	0276	Trans PX .....	0276, 0303



United Cable .....	0003
US Electronics .....	0276
V2 .....	0883
Viewmaster .....	0883
Vision .....	0883
Visiopass .....	0817
Vortex View .....	0883
Zenith .....	0000, 0008, 0525, 0899

## VIDEO ACCESSORY

### Video Accessories

ABS .....	1272
Alienware .....	1272
CyberPower .....	1272
D-Link .....	1554
Gateway .....	1272
Hewlett Packard .....	1267, 1272
Howard Computers .....	1272
HP .....	1272
iBUYPOWER .....	1272
LG .....	1415
Linksys .....	1365
Media Center PC .....	1272
Microsoft .....	1272
Mind .....	1272
Motorola .....	1363
Northgate .....	1272
Packard Bell .....	1272
Panasonic .....	1120
Pioneer .....	1010
Samsung .....	1190, 1490
Sensory Science .....	1126
Sharp .....	1010
SMC .....	1456
Sony .....	1272, 1324, 1364
Systemax .....	1272
Tagar Systems .....	1272
Toshiba .....	1272
Touch .....	1272
Viewsonic .....	1272, 1329
ZT Group .....	1272

## DSS/SATELLITE

### Satellite Receivers

@sat .....	1300
ABsat .....	0123
ADB .....	0642
AGS .....	0710
Akai .....	0200
Allsat .....	0200, 1017, 1043
AlphaStar .....	0772

Ampere .....	0132
Amstrad .....	0132, 0345, 0795, 0847, 0863, 0882, 1175
AntSat .....	1017, 1083
Arcon .....	1043, 1075
Arnion .....	1300
Asat .....	0200
AssCom .....	0853
Astacom .....	0710
Aston .....	0142
Astro .....	0173, 1099
Atsat .....	1300
Aurora .....	0642, 0879
Austar .....	0497, 0642, 0863, 0879
Axiel .....	0710
Axis .....	1111
Bentley Walker .....	1017
Blaupunkt .....	0173
Boca .....	0132
Boston .....	0710
Brand Unknown .....	0132, 0299
British Sky Broadcasting .....	0847, 1175, 1847
BskyB .....	0847, 1175
BT .....	0710
Canal Digital .....	0853
Canal Satellite .....	0853
Canal+ .....	0853
CanalSatellite .....	0853
Century .....	0856
Chaparral .....	0216
Cherokee .....	0123, 0710
Chess .....	1085
CityCom .....	0299, 1075, 1176
Colombia .....	0132
Columbia .....	0132
Comag .....	0132
Conrad .....	0132
Crossdigital .....	1109
Cryptovision .....	0795
Cyrus .....	0200
D-box .....	0723, 0873
Daewoo .....	1111
Delfa .....	0863
Deltasat .....	1075
Digenius .....	0299
DigiQuest .....	0863
Digiturk .....	1076
DirecTV .....	0099, 0247, 0392, 0566, 0639, 0724, 0749, 0819, 1076, 1108, 1109, 1142, 1392, 1414, 1442, 1639, 1640, 1749, 1856
Discovery .....	0710
Diseqc .....	0710
Dish Network System .....	0775, 1005, 1505, 1775
Dishpro .....	0775, 1005, 1505, 1775
DMT .....	1075

DNT .....	0200
Dream Multimedia .....	1237
DREAM multimedia.TV .....	1237
DStv .....	0642, 0879
DX Antenna .....	1530
Echostar .....	0167, 0610, 0775, 0853, 0871, 1005, 1086, 1200, 1505, 1775
Einhell .....	0132
Elta .....	0200
Emme Esse .....	0871
Engel .....	1017
Eurieult .....	0882
Europa .....	0863
Europhon .....	0132, 0299
Eurosky .....	0132, 0299
Expressvu .....	0775, 1775
Force .....	1101
Force NO AS .....	1101
Fortec Star .....	1017, 1083
Foxtel .....	0497, 0720, 0879, 1176
Fracarro .....	0871
Freesat .....	0882
FTEmaximal .....	0863
Fuba .....	0173, 0299
Galaxis .....	0853, 0863, 0879, 1101, 1111
Garnet .....	1075
GE .....	0566
General Instrument .....	0869
General Instruments .....	0869
GF .....	1043
GF Star .....	1043
GOD Digital .....	0200
GOI .....	0775, 1775
Gold Box .....	0853
Goldbox .....	0853
Goldvision .....	1017
Gradiente .....	0099, 0856, 0887
Grundig .....	0173, 0345, 0847, 0853, 0879
Hanseatic .....	1099
Hirschmann .....	0173, 0299, 0710, 0882, 1085, 1111
Hisense .....	1535
Hitachi .....	0819, 1250
HNE .....	0132
Hornet .....	1300
HSnsel & Gretel .....	0132
HTS .....	0775, 1775
Hughes Network Syst .....	0749
Hughes Network Systems .....	0749, 1142, 1442, 1749
Humax .....	0863, 1176, 1406
Huth .....	1109, 1142, 1392, 1414, 1442, 10132, 1017, 1075
Hyundai .....	1075
I-Lo .....	1535
ID Digital .....	1176
Indovision .....	0887
Ingelen .....	0882
Innova .....	0099

International .....	0132
Interstar .....	1017
InVideo .....	0871
IR .....	0173
Irdeto Technology .....	0879
ISkyB .....	0887
Italtel .....	0871
ITT Nokia .....	0723, 0873
Jiuzhou .....	1450
JOK .....	0710
JVC .....	0775, 1775
Kaon .....	1300
KaTelco .....	1111
Kathrein .....	0123, 0173, 0200, 0249, 1221
Kenwood .....	0853
Key West .....	0132
Klap .....	0710
Koscom .....	1043
Kreiling .....	0249
Kreiselmeyer .....	0173
L&S Electronic .....	0132, 1043
LaSAT .....	0132, 0299
LG .....	1075, 1414
Lifesat .....	0132, 0299, 1043
Logix .....	1017, 1075
Lorenzen .....	0132, 0299
Luxor .....	0345
Magnavox .....	0722, 0724
Manata .....	0132, 0710
Manhattan .....	1017, 1083
Marantz .....	0200
Maspro .....	0173, 1530
Matsui .....	0173, 0710
Maximum .....	1075
MediaSat .....	0853
Medion .....	0132, 0299, 1043, 1075
Mega .....	0200
Memorex .....	0724
Metz .....	0173
Micromaxx .....	0299
Microstar .....	1075
Mitsubishi .....	0749
Morgan's .....	0132, 0200
Motorola .....	0856, 0869
Multichoice .....	0642, 0879
Myryad .....	0200
Netsat .....	0099, 0887
Neuling .....	0132
Next Level .....	0869
Nikko .....	0200
Nokia .....	0723, 0751, 0853, 0873, 1023, 1223
OctalTV .....	1505
OnDigital .....	0751
Optex .....	1043
Optus .....	0879
Orbitech .....	1099

Origo ..... 0497  
OSAT ..... 0345  
Pace ..... 0200, 0497, 0720, 0795, 0847,  
0853, 0887, 1175  
Packard Bell ..... 1111  
Packsat ..... 0710  
Palcom ..... 0299  
Panasat ..... 0615, 0879  
Panasonic ..... 0247, 0701, 0847, 1527  
Panda ..... 0173  
Patriot ..... 0132, 0710  
Paysat ..... 0724  
Philips ..... 0099, 0173, 0200, 0710, 0722, 0724,  
0749, 0853, 0856, 0887, 1076, 1114,  
1142, 1442, 1749  
Phonotrend ..... 0863, 1017, 1200  
Pioneer ..... 0853  
Planet ..... 0871  
Preisner ..... 0132, 1101  
Premiere ..... 0853, 0873  
Prima ..... 0795  
Primacom ..... 1111  
Profile ..... 0710  
Proscan ..... 0392, 0566  
Proton ..... 1535  
QNS ..... 1402  
Quadral ..... 0710  
Quelle ..... 0299  
Radiola ..... 0200  
RadioShack ..... 0869  
Radix ..... 0882  
RCA ..... 0143, 0392, 0566, 0855, 1392  
RFT ..... 0200  
Roadstar ..... 0853  
Saba ..... 0710  
Sagem ..... 0820, 1114, 1307  
Samsung ..... 0853, 0863, 1017, 1108, 1109, 1276  
Sat Control ..... 1300  
Satstation ..... 1083  
Schneider ..... 0710  
Schwaiger ..... 0132, 0863, 1075, 1083, 1111  
SCS ..... 0299  
Sedea Electronique ..... 0132  
SEG ..... 1075, 1087  
Seleco ..... 0871  
Serino ..... 0610  
Siemens ..... 0173  
Silva ..... 0299  
SKY ..... 0099, 0847, 0856, 0887, 1014,  
1175, 1847, 1856  
SKY Italia ..... 1847  
Sky Television ..... 1014  
SKY+ ..... 1175  
Skymaster ..... 1075, 1085, 1200  
Skymax ..... 0200  
SL ..... 0132, 0299

SM Electronic ..... 1200  
Smart ..... 0132, 0299, 0882, 1101  
Sony ..... 0639, 0847, 0853, 1524, 1639, 1640  
SR ..... 0132  
Star ..... 0887  
Star Choice ..... 0869  
Starlite ..... 0200  
Stream ..... 1847  
Strong ..... 0132, 0853, 0879, 1300  
Sunkai ..... 0123  
Sunstar ..... 0132, 0642  
Supernova ..... 0887  
SVA ..... 1455  
Tecatel ..... 1200  
TechniSat ..... 0200, 0863, 1099  
Technowelt ..... 0132  
Techsan ..... 1017  
tekComm ..... 1017  
Telcel ..... 1043  
Telefunken ..... 0710  
Telestar ..... 1099  
Teledes ..... 0132, 1300  
Televisa ..... 0887  
Thomson ..... 0392, 0710, 0820, 0847, 0853, 1046  
Tioko ..... 0132  
Tivo ..... 1142, 1442  
Tokai ..... 0200  
Toshiba ..... 0749, 0790, 1285, 1530, 1749  
TPS ..... 0820, 1307  
Triax ..... 0132, 0200, 0853, 1099  
Trio ..... 1075  
UEC ..... 0879  
UltimateTV ..... 1392, 1640  
Uniden ..... 0722, 0724  
Unisat ..... 0132, 0200  
Universum ..... 0173, 0299, 1087, 1099  
US Digital ..... 1535  
USDTV ..... 1535  
Variosat ..... 0173  
Ventana ..... 0200  
VH-Sat ..... 0299  
Visiosat ..... 0142, 0710  
Viva ..... 0856  
Voom ..... 0869  
Wintel ..... 0299  
Wisi ..... 0173, 0299  
Worldsat ..... 0123, 0710  
XCOM ..... 0123  
Xsat ..... 0123, 0847  
Xtreme ..... 1300  
Yes ..... 0887  
Zehnder ..... 1075  
Zenith ..... 0856, 1856

## VCR

### VCRs

ABS ..... 1972  
Accent ..... 0072  
Admiral ..... 0048, 0209  
Adventura ..... 0000  
Adyson ..... 0072  
Aiko ..... 0278  
Aim ..... 0278  
Aiwa ..... 0000, 0037, 0209, 0348, 0479  
Akai ..... 0037, 0041, 0240, 0315, 0348, 0642  
Akiba ..... 0072  
Akura ..... 0072  
Alba ..... 0000, 0072, 0081, 0209, 0278, 0315, 0348  
Alienware ..... 1972  
Allorgan ..... 0240  
Allstar ..... 0081  
America Action ..... 0278  
American High ..... 0035  
Amoisonic ..... 0479  
Amstrad ..... 0000, 0072, 0278  
Anam ..... 0037, 0162, 0226, 0240, 0278  
Anam National ..... 0162, 0226, 1562  
Anitech ..... 0072  
Ansonic ..... 0000  
Aristona ..... 0081  
ASA ..... 0037, 0081  
Asha ..... 0240  
Asuka ..... 0037, 0038  
Audiosonic ..... 0278  
Audiovox ..... 0037, 0278  
AVP ..... 0000  
Awa ..... 0037, 0043, 0278, 0642  
Baird ..... 0000, 0041, 0104  
Basic Line ..... 0046, 0072, 0104, 0278  
Beaumarck ..... 0240  
Beko ..... 0104  
Bell & Howell ..... 0104  
Bestar ..... 0278  
Black Diamond ..... 0642  
Black Panther ..... 0278  
Blaupunkt ..... 0081, 0162, 0226  
Blue Sky ..... 0037, 0072, 0209, 0278, 0348, 0642  
Bondstec ..... 0072  
Brand Unknown ..... 0104, 0348  
Brandt ..... 0041, 0320  
Brandt Electronic ..... 0041  
Brandt Electronique ..... 0041  
Brinkmann ..... 0209, 0348  
Broksonic ..... 0002, 0121, 0184, 0209, 0348, 0479  
Bush ..... 0000, 0072, 0081, 0209, 0278,  
0315, 0348, 0642  
Calix ..... 0037  
Canon ..... 0035  
Carena ..... 0081, 0209

Carrefour ..... 0045  
Carver ..... 0081  
Casio ..... 0000  
Cathay ..... 0278  
CCE ..... 0072, 0278  
CGE ..... 0000, 0041  
Changhong ..... 0048, 0081  
Cimline ..... 0072  
Cineral ..... 0278  
Citizen ..... 0037, 0278  
Clatronic ..... 0000, 0072  
Colt ..... 0072  
Condor ..... 0278  
Craig ..... 0037, 0047, 0072, 0240  
Crown ..... 0037, 0072, 0278  
Curtis Mathes ..... 0035, 0041, 0060, 0162  
Cybernex ..... 0240  
CyberPower ..... 1972  
Cyrus ..... 0081  
Daewoo ..... 0045, 0046, 0104, 0209, 0278, 0642  
Dansai ..... 0072, 0278  
Daytron ..... 0278  
De Graaf ..... 0042, 0046, 0048, 0081, 0104  
Decca ..... 0000, 0041, 0067, 0081, 0209  
Deitron ..... 0278  
Dell ..... 1972  
Denko ..... 0072  
Denon ..... 0042  
Diamant ..... 0037  
Diamond ..... 0348  
DirecTV ..... 0739  
Domland ..... 0209  
Dual ..... 0000, 0041, 0081, 0278, 0348  
Dumont ..... 0000, 0081, 0104  
Durabrand ..... 0038, 0039  
Dynatech ..... 0000  
Elbe ..... 0038, 0278  
Elcatech ..... 0072  
Electrohome ..... 0037  
Electroponic ..... 0037  
Elin ..... 0240  
Elsay ..... 0072  
Elta ..... 0072, 0278  
Emerex ..... 0032  
Emerson ..... 0000, 0002, 0035, 0037, 0043,  
0045, 0072, 0121, 0184, 0209,  
0240, 0278, 0479  
ESC ..... 0240, 0278  
Etzuko ..... 0072  
Ferguson ..... 0000, 0041, 0278, 0320  
Fidelity ..... 0000, 0072, 0240, 0432  
Finlandia ..... 0000, 0037, 0042, 0043, 0046,  
0048, 0081, 0104, 0226  
Finlux ..... 0000, 0042, 0081, 0104  
Firstline ..... 0037, 0043, 0045, 0072, 0209, 0278, 0348  
Fisher ..... 0046, 0047, 0104

Flint .....	0209, 0348	International .....	0037, 0278, 0642	MEI .....	0035	Palladium .....	0037, 0041, 0072, 0209, 0348
Frontech .....	0072	Intervision .....	0000, 0209, 0278	Meletronic .....	0000, 0037, 0038	Palsonic .....	0000, 0072, 0642
Fuji .....	0033, 0035	IR .....	0041, 0042, 0045, 0047, 0072, 0081, 0104, 0209, 0226, 0240, 0348	Memorex .....	0000, 0035, 0037, 0039, 0046, 0047, 0048, 0104, 0162, 0209, 0240, 0348, 0479	Panasonic .....	0035, 0162, 0225, 0226, 0616, 1062, 1562
Fujitsu .....	0000, 0045	Irradio .....	0037, 0072, 0081	Memphis .....	0072	Pathe Cinema .....	0043
Fujitsu General .....	0037	ITT .....	0041, 0046, 0104, 0240	Metronic .....	0081	Pathe Marconi .....	0041
Funai .....	0000	ITV .....	0037, 0278	Metz .....	0037, 0081, 0162, 0226, 0347, 1562	Penney .....	0035, 0037, 0038, 0042, 0240
Galaxi .....	0000	JBL .....	0278	MGA .....	0043, 0240	Pentax .....	0042
Galaxis .....	0278	Jensen .....	0041	MGN Technology .....	0240	Perdio .....	0000, 0209
Garrard .....	0000	JMB .....	0209, 0348	Micormay .....	0348	Philco ...	0000, 0035, 0038, 0072, 0209, 0226, 0479
Gateway .....	1972	Joyce .....	0000	Micromaxx .....	0209	Philips .....	0000, 0035, 0081, 0226, 0618, 0739
GE .....	0035, 0048, 0060, 0226, 0240, 0320	JVC .....	0041, 0045, 0067, 0081, 1008	Microsoft .....	1972	Phoenix .....	0278
GEC .....	0081	Kaisui .....	0072	Migros .....	0000	Phonola .....	0081
General .....	0045	Kambrook .....	0037	Mind .....	1972	Pilot .....	0037
General Technic .....	0348	Karcher .....	0081, 0278	Minolta .....	0042	Pioneer .....	0042, 0067, 0081, 0162
Genexxa .....	0104	KEC .....	0037, 0278	Mitsubishi .....	0000, 0041, 0043, 0048, 0067, 0081, 0642	Polk Audio .....	0081
Go Video .....	0432	Kendo .....	0072, 0209, 0278, 0315, 0348, 0642	Motorola .....	0035, 0048	Portland .....	0278
GoldHand .....	0072	Kenwood .....	0038, 0041, 0067	MTC .....	0000, 0240	Prinz .....	0000
GoldStar .....	0037, 0038, 0209, 0225, 0226	KIC .....	0000	Multitec .....	0037	Profitronic .....	0081, 0240
Goodmans .....	0000, 0037, 0072, 0081, 0209, 0278, 0348, 0642	Kimari .....	0047	Multitech .....	0000, 0072	Proline .....	0000, 0278, 0320, 0642
GPX .....	0037	Kioto .....	0348	Murphy .....	0000	Proscan .....	0060
Gradiente .....	0000	KLH .....	0072	Myryad .....	0081	Prosco .....	0278
Graetz .....	0041, 0104, 0240	Kneissel .....	0037, 0209, 0278, 0348	NAD .....	0104	Prosonic .....	0209, 0278
Granada .....	0000, 0037, 0042, 0046, 0048, 0081, 0104, 0226, 0240	Kodak .....	0035, 0037	Naiko .....	0642	Protec .....	0072
Grandin .....	0000, 0037, 0072, 0209, 0278	Kolin .....	0041, 0043	National .....	0226	Protech .....	0081
Grundig .....	0072, 0081, 0226, 0320, 0347, 0348	Kolster .....	0209	Nebula Electronics .....	0033	ProVision .....	0278
Haaz .....	0348	Korpel .....	0072	NEC .....	0035, 0037, 0038, 0041, 0048, 0067, 0104, 0278	Pulsar .....	0039
Hanseatic .....	0037, 0038, 0081, 0209	Kuba .....	0047	Neckermann .....	0081	Pye .....	0000, 0081
Haojie .....	0240	Kuba Electronic .....	0047	Nesco .....	0000, 0072	Qisheng .....	0060
Harley Davidson .....	0000	Kuwa .....	0226	Neufunk .....	0209	Quarter .....	0046
Harman/Kardon .....	0038, 0081	Kyoto .....	0072	Newave .....	0037	Quartz .....	0046
Harwood .....	0072	Lenco .....	0278	Nikkai .....	0072, 0278	Quasar .....	0035, 0162, 0278
HCM .....	0072	Leyco .....	0072	Nikko .....	0037	Quelle .....	0081
Headquarter .....	0046	LG .....	0037, 0038, 0042, 0045, 0209	Noblex .....	0240	Radialva .....	0037, 0048, 0072, 0081
Hewlett Packard .....	1972	Lifetec .....	0209, 0348	Nokia .....	0041, 0042, 0046, 0048, 0081, 0104, 0240, 0278, 0315	Radiola .....	0081
HI-Q .....	0047	Lloyd's .....	0000	Nordmende .....	0041, 0067, 0320	Radionette .....	0037
Hinari .....	0041, 0072, 0209, 0240, 0278	Loewe .....	0037, 0081, 0162, 1562	Northgate .....	1972	RadioShack .....	0000, 0037
Hisawa .....	0209	Logik .....	0072, 0209, 0240	NU-TEC .....	0209	Radix .....	0037
Hischito .....	0045	Lux May .....	0072	Oceanic .....	0000, 0041, 0046, 0048, 0081, 0104	Randex .....	0037
Hitachi .....	0000, 0037, 0041, 0042, 0046, 0081, 0089, 0240	Luxor .....	0043, 0046, 0047, 0048, 0104, 0315	Okano .....	0072, 0209, 0278, 0315, 0348	Rank .....	0041
Hornophon .....	0081	LXI .....	0037	Olympus .....	0035, 0226	Rank Arena .....	0041
Howard Computers .....	1972	M Electronic .....	0000, 0038	Onimax .....	0642	RCA .....	0000, 0035, 0042, 0048, 0060, 0149, 0226, 0240, 0320, 0880
HP .....	1972	Magnasonic .....	0278	Optimus .....	0037, 0048, 0104, 0162, 0432, 1062	Realistic .....	0000, 0035, 0037, 0046, 0047, 0048, 0104
HP .....	1972	Magnavox ...	0000, 0035, 0039, 0081, 0149, 0642	Orbit .....	0072	Reoc .....	0348
Hughes Network Syst .....	0042	Magnin .....	0240	Orion .....	0002, 0121, 0184, 0209, 0348, 0479	ReplayTV .....	0616
Hughes Network Systems .....	0042, 0739	Magnum .....	0642	Orson .....	0000	Rex .....	0041
Hypson .....	0000, 0037, 0072, 0209, 0278	Manesth .....	0045, 0072, 0081, 0209	Osaki .....	0000, 0037, 0072	RFT .....	0072
Hoyer .....	0278, 0642	Marantz .....	0035, 0038, 0081, 0209	Osime .....	0072	Roadstar .....	0037, 0072, 0081, 0240, 0278
iBUYPOWER .....	1972	Mark .....	0000, 0278	Otake .....	0209	Royal .....	0072
Imperial .....	0000	Marta .....	0037	Otto Versand .....	0081	Runco .....	0039
Ingersoll .....	0209, 0240	Master's .....	0278	Pacific .....	0000, 0348, 0642	Saba .....	0041, 0278, 0320
Inno Hit .....	0072	Matsui .....	0209, 0240, 0278, 0348	Packard Bell .....	1972	Saisho .....	0209, 0348
Interbuy .....	0037, 0072	Matsushita .....	0035, 0162, 0226			Salora .....	0043, 0046, 0104
Interfunk .....	0081, 0104	Media Center PC .....	1972			Sampo .....	0037, 0048
Internal .....	0278	Mediator .....	0081				
		Medion .....	0209, 0348, 0642				

Samsung .....	0045, 0240, 0432
Sanky .....	0039, 0048
Sansei .....	0048
Sansui ..	0000, 0041, 0067, 0072, 0209, 0348, 0479
Sanyo .....	0046, 0047, 0048, 0067, 0104, 0209, 0240, 0348
Saville .....	0240, 0278
SBR .....	0081
Schaub Lorenz .....	0000, 0041, 0104, 0315, 0348
Schneider .....	0000, 0037, 0042, 0072, 0081, 0240, 0278, 0348, 0642
Scott .....	0043, 0045, 0121, 0184
Sears ..	0000, 0035, 0037, 0042, 0046, 0047, 0104
Seaway .....	0278
SEG .....	0072, 0081, 0240, 0278, 0642
SEI .....	0081
Sei-Sinudyne .....	0081
Seleco .....	0037, 0041
Semivox .....	0045, 0209
Semp .....	0045
Sentra .....	0072
Setron .....	0072
Sharp .....	0037, 0048, 0209
Shinco .....	0000
Shintom .....	0072, 0104
Shivaki .....	0037
Shogun .....	0240
Siemens .....	0037, 0046, 0081, 0104, 0320, 0347
Siera .....	0081
Silva .....	0037
Silver .....	0278
Singer .....	0045, 0072, 0348
Sinudyne .....	0081, 0209
Smaragd .....	0348
Sonic Blue .....	0616
Sonneclair .....	0072
Sonolor .....	0046
Sontec .....	0037
Sony .....	0000, 0032, 0033, 0035, 0636, 1972
Soundwave .....	0037, 0209, 0348
Ssangyong .....	0072
Standard .....	0278
Stern .....	0278
STS .....	0042
Sunkai .....	0209, 0278, 0348
Sunstar .....	0000
Suntronic .....	0000
Sunwood .....	0072
Supra .....	0037, 0278, 0348
Sylvania .....	0000, 0035, 0043, 0081
Symphonic .....	0000
Systemax .....	1972
T+A .....	0162
Tagar Systems .....	1972
Taisho .....	0209
Tandberg .....	0278
Tandy .....	0000, 0104
Tashiko .....	0000, 0037, 0048, 0081, 0240
Tatung .....	0000, 0041, 0043, 0045, 0048, 0067, 0081, 0209, 0348
Tchibo .....	0348
TCM .....	0348
Teac .....	0000, 0037, 0041, 0072, 0278, 0642
Tec .....	0072
Tech Line .....	0072
Technics .....	0035, 0081, 0162, 0226
TechniSat .....	0348
Teco .....	0035, 0037, 0038, 0041, 0048
Tedalex .....	0037, 0209, 0348
Teknika .....	0000, 0035, 0037
Teleavia .....	0041
Telefunken .....	0041, 0209, 0278, 0320, 0642
Telestar .....	0037
Teletech .....	0000, 0072, 0278
Tenosal .....	0072
Tensai .....	0000, 0072, 0278
Tevion .....	0209, 0348, 0642
Texet .....	0278
Thomas .....	0000
Thomson .....	0041, 0060, 0067, 0278, 0320
Thorn .....	0037, 0041, 0104
Tivo .....	0618, 0636, 0739, 1503
TMK .....	0240
Tokai .....	0037, 0041, 0072, 0104
Topline .....	0348
Toshiba .....	0041, 0042, 0043, 0045, 0067, 0081, 0432, 1008, 1503, 1972
Totevision .....	0037, 0240
Touch .....	1972
Towada .....	0072
Tradex .....	0081
Triad .....	0278
Uher .....	0240
Ultravox .....	0278
Unitech .....	0240
United .....	0348
United Quick Star .....	0278
Universum .....	0000, 0037, 0081, 0104, 0209, 0240, 0348
Vector .....	0045
Vector Research .....	0038
Victor .....	0041, 0067
Video Concepts .....	0045
Video Technic .....	0000
Videomagic .....	0037
Videosonic .....	0240
Viewsonic .....	1972
Villain .....	0000
Wards .....	0000, 0033, 0035, 0038, 0039, 0042, 0045, 0046, 0047, 0048, 0060, 0072, 0081, 0149, 0240
Watson .....	0081, 0642

Weltblick .....	0037
Wharfedale .....	0642
White Westinghouse .....	0072, 0209, 0278
World .....	0348
XR-1000 .....	0000, 0035, 0072
Yamaha .....	0038, 0041
Yamishi .....	0072, 0278
Yokan .....	0072
Yoko .....	0037, 0072, 0240
Zenith .....	0000, 0033, 0039, 0209, 0479
ZT Group .....	1972
ZX .....	0209, 0348

## LD

### Laser Disk Players

Baolijin .....	0726
Caishi .....	0726
Caosde .....	0726
Denon .....	0059
Grundig .....	0059
Lingxian .....	1220
Microboss .....	0726
Mitsubishi .....	0059
NAD .....	0059
Nagsmi .....	0059
Optimus .....	0059
Panasonic .....	0204
Pioneer .....	0059
Quasar .....	0204
Skyworth .....	1218
Sony .....	0201
TCL .....	1184
Technics .....	0204
Telefunken .....	0059
Wards .....	0059

## DVD

### Digital Video Disks

3DLAB .....	0539
Acoustic Solutions .....	0730
AEG .....	0770
Aim .....	0699, 0833
Airis .....	1250
Aiwa .....	0533
Akai .....	0690, 0770, 1115
Akira .....	0699
Alba .....	0539, 0672, 0695, 0699, 0713, 0717, 0730, 0783
Allegro .....	0869
Amitech .....	0770, 0784, 0850
Amstrad .....	0713
Ansonic .....	0774, 0831
Apex Digital .....	0672, 0717, 0794, 0796, 0797, 1004, 1020, 1056, 1061
Aspire Digital .....	1168
Audiosonic .....	0690
Audiovox .....	0717
Awa .....	0730
Axion .....	0730
Baze .....	0672
Bellagio .....	1004
Black Diamond .....	0713
Blaupunkt .....	0717
Blue Parade .....	0571
Blue Sky .....	0651, 0672, 0695, 0713
Boghe .....	1004
Boman .....	0783
Brainwave .....	0770, 1115
Brand Unknown .....	0490, 0717, 0730
Brandt .....	0503, 0651
Broksonic .....	0695
Bush .....	0672, 0690, 0695, 0699, 0713, 0717, 0730, 0831
C-Tech .....	0768, 0798
Cambridge Soundworks .....	0690
Cat .....	0699
CCE .....	0730
Celestial .....	1020
Centrex .....	0672, 1004
Centrum .....	0713
CGV .....	1115
Changhong .....	1061
Cineral .....	0730
Cinetec .....	0713
cineULTRA .....	0699
CineVision .....	0869
Classic .....	0730
Clatronc .....	0672
Clayton .....	0713
Coby .....	0730, 1086
Conia .....	0672



Continental Edison	0831	Grunkel	0770	Metronic	0690	Revoy	0699
Crown	0690, 0770, 1115	H & B	0850	Metz	0525, 0571, 0713	Rio	0869
Cybercom	0831	H&B	0713, 0850	Micromedia	0503, 0539	Roadstar	0672, 0690, 0699, 0713, 0730
CyberHome	0816, 1129	Haaz	0768	Micromega	0539	Rotel	0558, 0623
Cytron	0651, 0774	Hanseatic	0741, 0783	Microsoft	0522	Rowa	0717, 1004
D-Vision	1115	HE	0730	Microstar	0831	Saba	0651
Daewoo	0770, 0784, 0833, 0869, 1172	HenS	0713	Minato	0752	Sabaki	0798
Dansai	0770, 0783, 1115	Hitachi	0573, 0664, 0695	Minax	0713	Saivod	0831
DCE	0831	Hiteker	0672	Minoka	0770	Salora	0741
Decca	0770, 1115	Home Electronics	0730	Mintek	0717, 0839	Sampo	0752
Denon	0490	Humax	0646	Mirror	0752	Samsung	0490, 0573, 0744, 0820, 1075
Denver	0672, 0699	Hyundai	0783, 0850	Mitsubishi	0521, 0713, 1521	Sansui	0695, 0768, 0784
Desay	1212	Hoher	0651, 0713, 0831	Mustek	0730, 1730	Sanyo	0670, 0695, 0873
Diamond	0651, 0768	Initial	0717, 0839	Mx Onda	0651	Scan	0850
Digihome	0713	IRT	0783	NAD	0741	ScanMagic	0730, 1730
digiRED	0717	ISP	0695	Naiko	0770, 1004	Schaub Lorenz	0770, 1115
Digitor	0651	JDB	0730	NEC	0869	Schneider	0539, 0651, 0774, 0783, 0831
Digitrex	0672, 1056	Jeken	0699	Nesa	0717	Schwaiger	0752
DiK	0831	Jepssen	1250	Nevir	0770, 0831	Scientific Labs	0768
DK digital	0831	JMB	0695	Nintaus	1202	Scott	0651, 0672
DMTECH	0783	JVC	0503, 0539, 0558, 0623, 0867	Nordmende	0774, 0831	SEG	0713, 0768, 0798
Dragon	0831	Karcher	0783	Noriko	0752	Semp	0503
Dual	0651, 0713, 0730, 0783, 0831	Kendo	0699, 0713	Okano	0752	Shanghai	0672
Durabrand	0713	Kennex	0770	Olidata	0672	Sharp	0630, 0752
DVD2000	0521	Kenwood	0490, 0534	Omni	0690, 0833	Sherwood	0717, 0741, 0770
DVX	0768	Kiiri	0770	Onkyo	0503	Shinco	0717
Elin	0770	KLH	0717, 1020	Optimus	0525	Shinsonic	0533, 0839
Ellion	0850	KLH Digital	0717	Orion	0695	Silva Schneider	0831
Elta	0672, 0690, 0770, 0850, 1115	Konka	1192	Oritron	0651	Simaudio	0885
Emerson	0591, 0675	Koss	0651	Ormond	0713	Singer	0690, 0768
Enterprise	0591	Lasonic	0798	Pacific	0713, 0768, 0831	Skymaster	0730, 0768
Enzer	0784	Lawson	0768	Palladium	0695	Slim Art	0784
EuroLine	1115	Lenco	0651, 0672, 0699, 0713, 0770, 0774	Palsonic	0672	Slim Devices	0533
Fenner	0651	Lenoxx	0690	Panasonic	0490, 1762	SM Electronic	0690, 0730, 0768
Ferguson	0651	Lexia	0699, 0768	Panda	0717, 1203	Smart	0713
Finlux	0591, 0672, 0741, 0770, 0783	LG	0591, 0741, 0869	Philco	0690	Sonashi	0831
Fintec	0784	Lifetec	0651, 0831	Philips	0503, 0539, 0646, 0675, 0885	Sonic Blue	0783, 0869, 1099
Firstline	0713, 0869	Limit	0768	Phonotrend	0699	Sony	0533, 0573, 0864, 1033
Fisher	0670	Lite-On	1058, 1158	Pioneer	0525, 0571	Soundmaster	0768
Funai	0675, 0695	LiteOn	1058, 1158	Plu2	0850	Soundmax	0768
Gateway	1158	Loewe	0539, 0885	Pointer	0784	Soundwave	0783
GE	0522, 0717	Logix	0783	Polaroid	1061, 1086	Standard	0651, 0768
General Electric	0717	Luxman	0573	Polk Audio	0539	Sunkai	0770, 0850
Global Solutions	0768	Luxor	1004	Polkaudio	0539	Supervision	0768
Global Sphere	0768	Magnasonic	0651	Portland	0770	SVA	0672, 0717, 1105
Go Video	0715, 0741, 0744, 0783, 0833, 0869, 1075, 1099, 1158, 1730	Magnavox	0503, 0539, 0675	Prinz	0831	Sylvania	0630, 0675
GoldStar	0591, 0741	Manhattan	0713	Proline	0651, 0672, 0833, 1004	Symphonic	0675
Goodmans	0651, 0690, 0713, 0730, 0783, 0833, 1004	Marantz	0539	Proscan	0522	Synn	0768
GPX	0699	Mark	0713	Prosonic	0699	Tandberg	0713
Gradiente	0651	Marquant	0770	ProVision	0699	Tatung	0770
Gran Prix	0831	Matsui	0651, 0672, 0695, 0713, 1004	Qwestar	0651	TCL	1180
Grandin	0713	Maxim	0713	Radionette	0741, 0869	Teac	0571, 0717, 0741, 0768, 0833
Greenhill	0717	MBO	0690, 0730, 1730	RCA	0522, 0571, 0717, 0822	Technics	0490
Grundig	0539, 0651, 0670, 0695, 0713, 1004, 1730	Mecotek	0770	REC	0490	Technika	0770, 0831, 1115
		Medion	0630, 0651, 0774, 0783, 0831	Red Star	0770	Technisson	1115
		Memorex	0695, 0831	Reoc	0752, 0768	Technosonic	0730, 1115



Techwood .....	0713
Tedelex .....	0690
Teletech .....	0713, 0768
Tensai .....	0651, 0690, 0770
Tevion .....	0651, 0768, 0798
Theta Digital .....	0571
Thomson .....	0522
Tokai .....	0784
Toshiba .....	0503, 0695, 1154
TRANS-continents .....	0831
Trasonic .....	0672
Tsinghua Tongfang .....	1205
Umax .....	0690
United .....	0672, 0730, 1115
Universum .....	0591, 0713, 0741, 0869
Urban Concepts .....	0503
US Logic .....	0839
Vestel .....	0713
Voxson .....	0690, 0730, 0774, 0831
Walkvision .....	0717
Welkin .....	0831
Wellington .....	0713
Wesder .....	0699
Wharfedale .....	0752
Wilson .....	0831
Windy Sam .....	0573
WIZE .....	1115
Xbox .....	0522
XLogic .....	0768, 0798
Xoro .....	1250
Yakumo .....	1004, 1056
Yamada .....	1004
Yamaha .....	0490, 0539, 0545, 0646
Yukai .....	0730, 1730
Zenith .....	0503, 0591, 0741, 0869
Zeus .....	0784

## TUNER

### Audio Amp/Tuners

ADC .....	0531
Aiwa .....	0121, 0158, 0189, 1405
Anam .....	1074, 1609
Arcam .....	0189
Audiolab .....	1189
Audiotronic .....	1189
AVLight .....	0158
Bose .....	1229
Cairn .....	0189
Cambridge .....	0189
Cambridge Audio .....	0189
Capetronic .....	0531
Carver .....	0189, 1189
Coby .....	1263
Dell .....	1383
Denon .....	1142, 1360
Ferguson .....	0531
Fine Arts .....	1189
Fonmix .....	1360
Glory Horse .....	1263
Goldmund .....	0189
Grundig .....	0189, 1189
Harman/Kardon .....	0110, 0189, 1189
Inkel .....	0027
Integra .....	0135
JBL .....	0110
JVC .....	0074, 0531, 1263
Kenwood .....	0027, 1313, 1569
KLH .....	1428
Linn .....	0189
Loewe .....	0189
Magnavox .....	0189, 0531, 1189, 1269
Marantz .....	0039, 0189, 1189, 1269
MCS .....	0039
Memorex .....	0014
Micromega .....	0189, 1189
Mitsubishi .....	1393
Myryad .....	0189, 1189
Onkyo .....	0135
Optimus .....	0531, 0670, 1023, 1074
Panasonic .....	0039, 0309, 1308
Philips .....	0189, 1189, 1269
Pioneer .....	0014, 0150, 0531, 0630, 1023
Polk Audio .....	0189
Proscan .....	1254
Qisheng .....	1609
Quasar .....	0039
Radiola .....	0189
RadioShack .....	1263
RCA .....	0531, 1023, 1074, 1254, 1609
Restek .....	0189
Revox .....	0189
Rio .....	1383

Rio Audio .....	1383
Roadstar .....	1263
Saba .....	0531
Sansui .....	0189
Sanyo .....	0670
Schneider .....	0110, 0531
Sharper Image .....	1263
Silsonic .....	0176
Sonic Blue .....	1383
Sony .....	0158, 1058, 1406, 1759
Soundesign .....	0670
Stereophonics .....	1023
Sunfire .....	1313
TAG McLaren .....	1189
Teac .....	0110, 1074
Technics .....	0039, 0309, 1308
Telefunken .....	0531
Thomson .....	1254
Thorens .....	0189, 1189
Uher .....	0531
Universum .....	0189, 1609
Victor .....	0074
Wards .....	0014, 0158, 0189
Yamaha .....	0176, 1176, 1276

## AMPLIFIER

### Audio Amplifiers

Amstrad .....	0078
Durabrand .....	1561
GE .....	0078
Genexxa .....	0395
Harman/Kardon .....	0892
JVC .....	0331
Left Coast .....	0892
Lenoxx .....	1561
Marantz .....	0892
Optimus .....	0395
Philips .....	0892
Polk Audio .....	0892
Realistic .....	0395
Soundesign .....	0078
Victor .....	0331
Wards .....	0078
Yamaha .....	0354

### Miscellaneous Audio

Aiwa .....	0159
Altec Lansing .....	1485
Cambridge Soundworks .....	1530
Creative .....	0872
Imerge .....	1491
Marantz .....	1491
Motorola .....	1464
Omnifi .....	1605
Omnify .....	1605
Sony .....	0159

**CD****CD Players**

Acoustic Research .....	0420
Advantage .....	0032
Aiwa .....	0157
Arcam .....	0157
Audio Research .....	0157
Audiolab .....	0157
Audiomeca .....	0157
Audioton .....	0157
BAT .....	0157
Burmester .....	0420
Cairn .....	0157
California Audio Labs .....	0029
Cambridge .....	0157
Cambridge Audio .....	0157
Carver .....	0157, 0179
CCE .....	0157
CDC .....	0420
CEC .....	0420
Cyrus .....	0157
Denon .....	0003, 0873
DKK .....	0000
DMX Electronics .....	0157
Dual .....	0003
Dynamic Bass .....	0179
Emerson .....	0305
Fisher .....	0179
Garrard .....	0420
Genexxa .....	0000, 0032, 0037, 0179, 0305
Goldmund .....	0157
Goodmans .....	0305
Grundig .....	0157
Harman/Kardon .....	0157, 0173
Hitachi .....	0032
Integra .....	0101
IR .....	0000
JVC .....	0072
Kenwood .....	0028, 0036, 0037, 0157, 0190, 0681
KLH .....	1318
Krell .....	0157
Linn .....	0157
Loewe .....	0157
LXI .....	0305
Magnavox .....	0157, 0305
Marantz .....	0029, 0157
Matsui .....	0157
MCS .....	0029
Memorex .....	0032, 0305
Meridian .....	0157
Micromega .....	0157
Miro .....	0000
Mission .....	0157
MTC .....	0420

Myryad .....	0157
NAD .....	0000
Naim .....	0157
NSM .....	0157
Oak .....	0145
Onkyo .....	0101, 0868
Optimus .....	0000, 0032, 0037, 0087, 0145, 0179, 0305, 0420, 1063, 1075
Panasonic .....	0029
Parasound .....	0420
Philips .....	0157
Pioneer .....	0032, 0101, 0305, 1063
Polk Audio .....	0157
Proton .....	0157
QED .....	0157
Quad .....	0157
Quasar .....	0029
Radiola .....	0157
RadioShack .....	1075
RCA .....	0032, 0053, 0179, 0305, 0420
Realistic .....	0179, 0420
Restek .....	0157
Revox .....	0157
Roksan .....	0420
Rotel .....	0157, 0420
Royal .....	0420
SAE .....	0157
Sansui .....	0157, 0305
Sanyo .....	0087, 0179
SAST .....	0157
Scott .....	0305
Sears .....	0305
Sharp .....	0037, 0861
Sherwood .....	1067
Siemens .....	0157
Silsonic .....	0036, 0888
Simaudio .....	0157
Sonic Frontiers .....	0157
Sony .....	0000, 0100, 0490
Soundesign .....	0145
Symphonic .....	0305
TAG McLaren .....	0157
Tandy .....	0032
Tascam .....	0420
Teac .....	0420
Technics .....	0029
Thomson .....	0053
Thorens .....	0157
Thule Audio .....	0157
Tokai .....	0420
Universum .....	0053, 0157
Victor .....	0072
Wards .....	0000, 0032, 0053, 0087, 0157, 0179
Yamaha .....	0032, 0036, 0888
Zonda .....	0157

**HOME****Home Automation**

Accutek .....	1215
Bionaire .....	1215
Frigidaire .....	1333
GE .....	0240
GE X10 Homeminder .....	0240
GoldStar .....	1537
Holmes .....	1215
Lasko .....	0846
LG .....	1537
Lutron .....	0597
One For All .....	0167
RadioShack .....	0240
Security System .....	0167
Sharper Image .....	0846
Universal X10 .....	0167
Whirlpool .....	1332
Windmere .....	1215
X-10 home automation .....	0167
X10 .....	0167

**RC-5 REMOTE CODES  
(MARANTZ PRODUCT)**

TV .....	2048
VCR .....	2053
AUX .....	2052
TAPE .....	2066
CD-R .....	2074
CD .....	2068
DVD .....	2064

**www.marantz.com**

You can find your nearest authorized distributor or dealer on our website.

---

**U.S.A.** Marantz America, Inc. 1100 Maplewood Drive, Itasca, IL 60143, U.S.A.

**EUROPE** Marantz Europe B.V. P.O. Box 8744, 5605 LS Eindhoven, The Netherlands

---

Manufactured under license from Dolby Laboratories. "Dolby", "Pro Logic" and the double-D symbol are trademarks of Dolby Laboratories. Confidential Unpublished Works. Copyright 1992-1999 Dolby Laboratories, Inc. All rights reserved.

**marantz**<sup>®</sup> is a registered trademark.