


SERVICE MANUAL


STEREO INTEGRATED AMPLIFIER
MODEL DA-U310

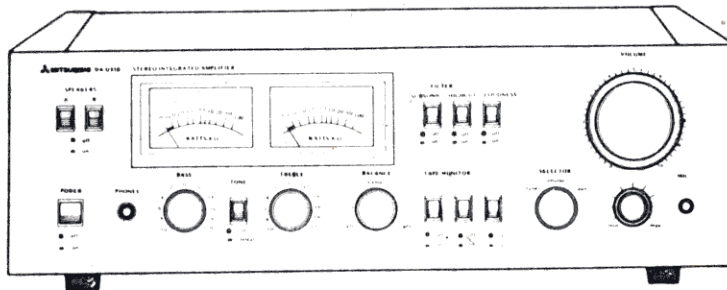


CONTENTS

SPECIFICATIONS	2
ADJUSTMENTS	3
SERVICE PARTS LIST	4
PRINTED CIRCUIT BOARDS	5 to 8
SCHEMATIC DIAGRAM	9 to 10
WIRING DIAGRAM	11 to 12
PRINTED CIRCUIT BOARDS (Continued)	13 to 14

SCHEMATIC DIAGRAM

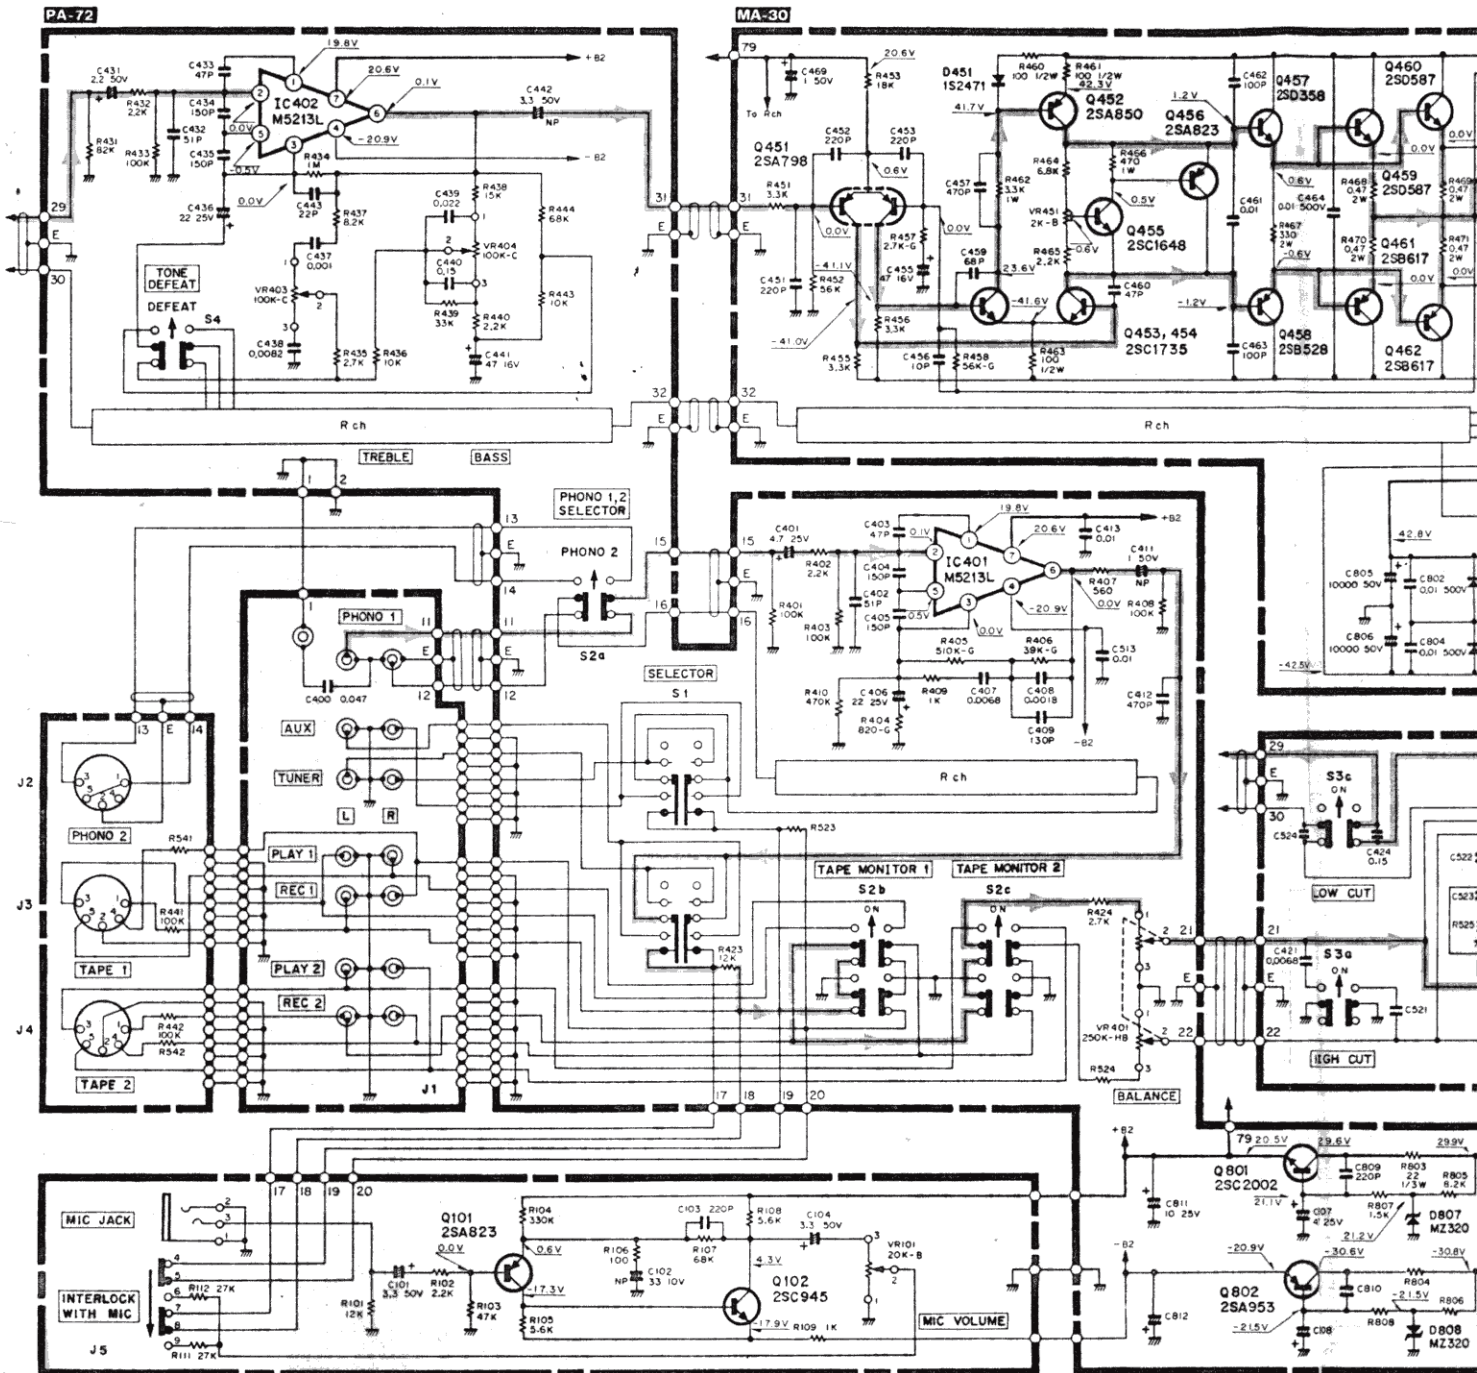

EXTERNAL VIEW AND POLARITY DIAGRAM OF THE TRANSISTOR, IC

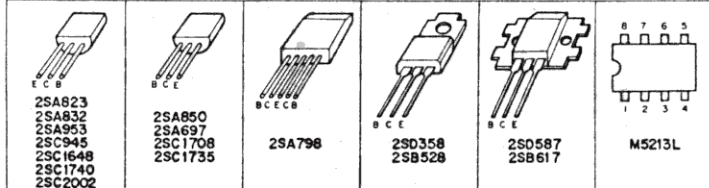


- Note: 1 S1 SELECTOR SwitchPHONO Position
 2 S2-a PHONO 1,2 SELECTOR Switch.....PHONO 1 Position
 2 S2-b TAPE MONITOR 1 Switch.....OFF Position
 2 S2-c TAPE MONITOR 2 Switch.....OFF Position
 3 S3-a HIGH CUT Switch.....OFF Position
 3 S3-b LOUDNESS Switch.....OFF Position
 3 S3-c LOW CUT Switch.....OFF Position
 4 S4 TONE DEFEAT Switch.....ON Position
 5 S5-a SPEAKER SELECTOR Switch.....ON Position
 5 S5-b SPEAKERS Switch.....OFF Position
- 2 Unit of C and R
 (1) C
 (2) R
 (3) The voltage in each se
 DC 20K Ω /V tester.

This circuit is a basic dia
change without notice for



Components marked with symbol have special char
important to safety and performance. For continued safe
replace with components of identical value and characteri

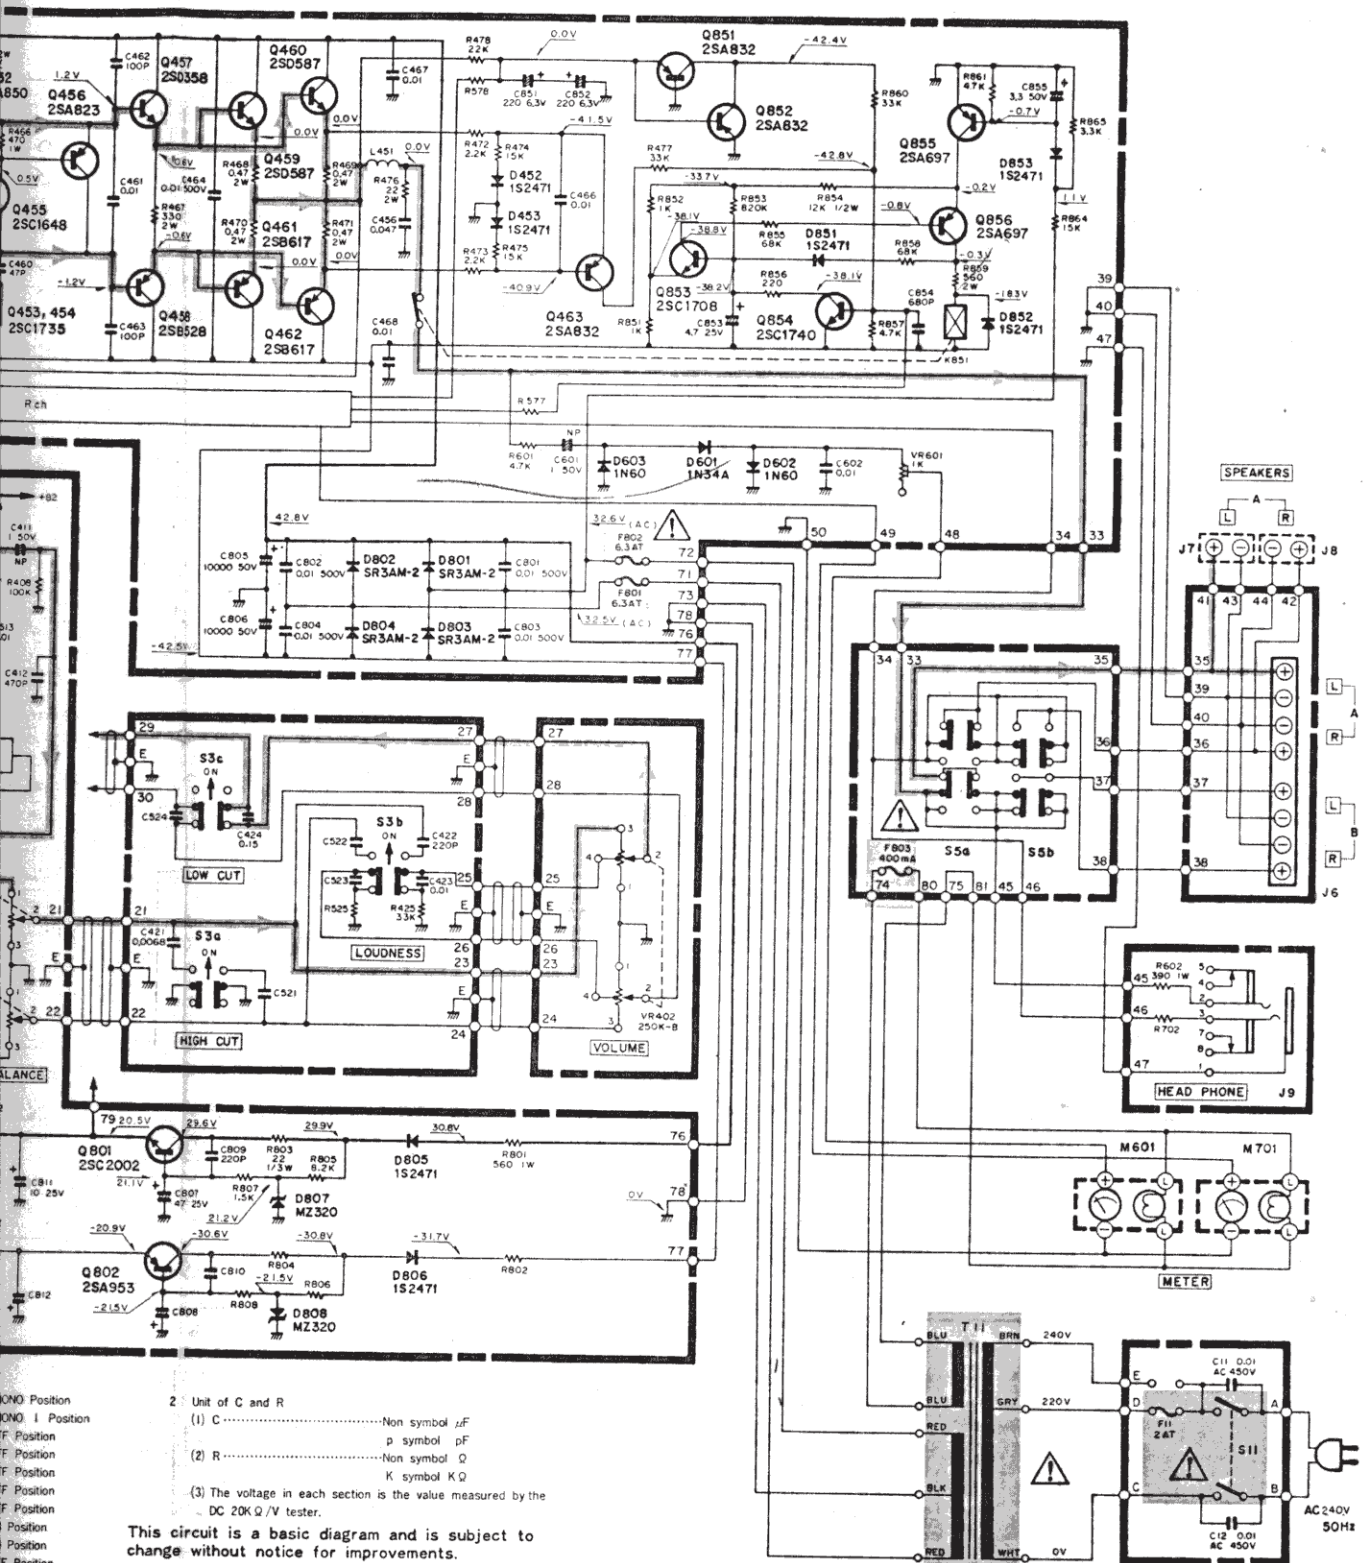

MONO Position
 MONO I Position
 F Position
 F Position
 F Position
 F Position
 F Position
 F Position
 F Position

2 Unit of C and R
 (1) C Non symbol pF
 p symbol pF
 (2) R Non symbol Ω
 K symbol K Ω
 (3) The voltage in each section is the value measured by the DC 20K Ω/V tester.

This circuit is a basic diagram and is subject to change without notice for improvements.

with Δ symbol have special characteristics, and performance. For continued safety, please use components of identical value and characteristics.