

Region Setting

The above models are delivered factory set to either R1 or R2 depending on the version. To change the region code to your own area please perform the following,

- 1. Turn on the unit and remove any discs .*
- 2. Press the “Pause” button on the remote control.*
- 3. Press numeric buttons: 3 1 4 1 5 9*
- 4. VFL shows ‘CODE--‘*
- *5. Enter the code for your region and press “Pause” button again.*
- 6. Turn off power.*

** NOTE: Perform step 5 as quick as possible for unit to accept command.*

This completes the region setting.

Contact:

NAD Electronics International
633 Granite Court
Pickering, ON Canada L1K 3K1
Voice: 905-831-0799 FAX 905-837-6357
www.NADelectronics.com

Region Setting

The above models are delivered factory set to either R1 or R2 depending on the version. To change the region code to your own area please perform the following,

- 1. Turn on the unit and remove any discs .*
 - 2. Press the “Pause” button on the remote control.*
 - 3. Press numeric buttons: 3 1 4 1 5 9*
 - 4. VFL shows ‘CODE--‘*
 - *5. Enter the code for your region and press “Pause” button again.*
 - 6. Turn off power.*
- * NOTE: Perform step 5 as quick as possible for unit to accept command.*

This completes the region setting.

Contact:

NAD Electronics International
633 Granite Court
Pickering, ON Canada L1K 3K1
Voice: 905-831-0799 FAX 905-837-6357
www.NADelectronics.com