



DELTA 10B / DELTA 10R / DELTA 10S

User manual



Delta 10

Wireless Speaker Bluetooth Receiver

Instruction Manual

CAUTION: Risk of electrical shock. Please do not open the unit.

1. Please read, keep and follow these instructions.
2. Install in accordance with the manufacturer’s instructions.
3. Do not install near any heat sources such as radiators, heat registers, stoves, or other products (including amplifiers) that produce heat.
4. Only use attachments/accessories specified by the manufacturer.
5. Protect the power cord from being walked on or pinched, particularly at plugs, convenience receptacles, and the point where they exit from the product.
6. Unplug this product during lightning storms or when unused for long periods of time.
7. Do not let foreign objects or liquids enter the product.
8. Refer all servicing to qualified service personnel. Servicing is required when the product has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the product, the product has been exposed to rain or moisture, does not operate normally, or has been dropped.
9. Opening the unit by unauthorized personnel will void the warranty.

CAUTION: Use of controls, adjustments or performance of procedures other than herein may result in hazardous radiation exposure or other unsafe operation.

Cleaning: Use a soft, dry cloth to avoid scratching to the surface. Do not use cleaning alcohol, or other solvent fluids to clean the surface of the Cabinet as this can both damage the coating and also cause electrical failures or fire if it enters the electronics in the unit! Before cleaning, please unplug the unit from the AC power outlet.


Overloading: To prevent risk of fire or electric shock, avoid overloading wall outlets or extension cords.

Open fire: Keep this sound system a safe distance away from any open flames such as a lit candle. No open flame sources, such as lighted candles, should be placed on the unit.

Operating temperatures: The recommended operating temperature range for the sound system is 5 to 40 degrees Celsius (41 to 104 degrees Fahrenheit).

Label location: The product labels and safety related markings are located on the back of the unit and the power adaptor.

Unplugging while in operation: Do not remove the AC power cord if music is playing.

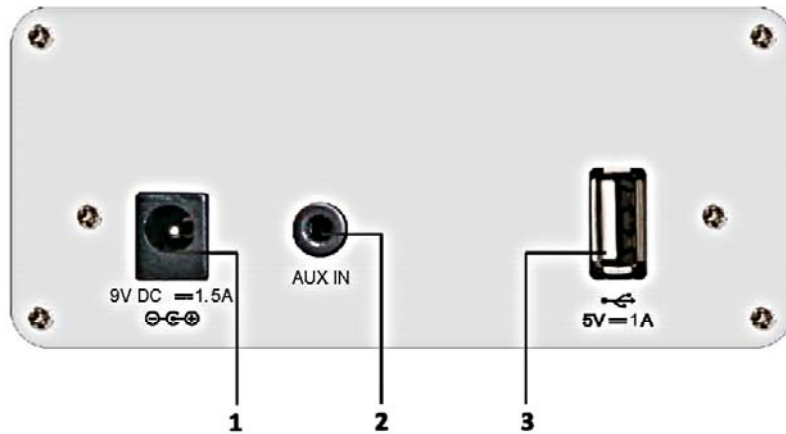

BACK PLATE

1. DC IN - Connect with provided Power Adaptor.
2. AUX IN - Insert with external input source (e.g. Smartphone or MP3 Player), the unit will turn to Aux mode automatically when this jack is inserted. (Please Note: During Aux mode, the Bluetooth source will not have sound playback. 3.5mm Aux cable not supplied)
3. USB Port for charging - 5V output for Smartphone charging at 1A current. (USB cable not supplied)



KEY PANEL



1. Bluetooth LED Indicators
 - Flashing Red & Blue alternatively - Pairing mode
 - Flashing Blue - Waiting for connection
 - Blue ON - BT device connected
2. Standby key - Press to turn on your Delta 10. Indicator 1 will light up in Blue if the source is Bluetooth, whereas if the source is AUX, indicator 5 will light up in green.
3. PAIR key - Press key to enter pairing mode, indicator 1 (Blue & Red) will flash alternatively.
4. Play/Pause key - Press to play or pause playback, indicator 1 Blue will flash once each time you press this button.
5. Aux LED
 - Aux mode: Green

CONNECTING TO THE SPEAKER FOR THE FIRST TIME

1. Connect the speaker with the power adaptor provided.
2. Press "Standby" key to turn on the speaker, it will go to Pairing mode the first time you turn ON.



PAIRING WITH BLUETOOTH DEVICES

Your Bluetooth speaker can pair with most Bluetooth 2.0 and 2.1 devices. Pairing may vary by devices. Consult your Bluetooth device's owner's manual for pairing instructions.


1. Press  key to switch to Bluetooth mode.
2. Turn on Bluetooth on your device (e.g. Smartphone), Delta 10 will be shown on your device's Bluetooth list. Please select.
3. Press and hold  key for 3 seconds until consecutive "beep" sound is played, the Bluetooth LED will keep flashing RED and BLUE alternatively quickly waiting for your Bluetooth device to pair.
4. Connect your device to the BT Speaker with Bluetooth, your device menu will show "Connected", the Bluetooth LED will stay Blue when pairing is successful.
5. You can now play your music wirelessly with the BT Speaker.
6. IMPORTANT PLEASE NOTE: If you wish to connect a different device, please TURN speaker off and then repeat steps (1-3) for new device.

Please Note:


For mobile phones with Bluetooth 2.0 your device may request you enter a pass code during pairing, please press 0000.

The Delta 10 can remember up to 8 Bluetooth devices, to clear the memory, press  key for 3 seconds until you hear a "Beep" sound from your speaker, the Bluetooth LED will flash quickly. Then press the  key twice, the Blue LED will stop. When the Blue LED starts flashing again the unit is in pairing mode. You will need to run through the pairing setup again with your device (e.g. Smartphone).



TO TURN YOUR BLUETOOTH SPEAKER TO STANDBY MODE

When the speaker is ON, press the  once. The speaker will take around 3 seconds to shut down, the LEDs will turn OFF and remember your Bluetooth device.

CONNECTING THE LATEST BLUETOOTH DEVICE

1. This is a quick method to connect your Speaker with the latest Paired Device.
2. Turn on your unit by pressing the  key, it will connect with the device automatically, the BT LED will stay ON when the connection is successful. If the speaker cannot find the latest Device, it will go to Waiting for Connection mode. Please check that your device (Smartphone) is visible to other devices refer your device owner's manual.



CONNECTING A PREVIOUSLY PAIRED BLUETOOTH DEVICE

1. If you want to connect another device instead of the current paired one, please make sure the Bluetooth connection of the current device is turned off.
2. Disconnect your current playing device, the speaker will change to Waiting for Connection mode, the BT LED will keep flashing slowly.
3. Turn ON your Bluetooth device (e.g. Smartphone) Bluetooth setting.
4. Select the Speaker from your device's Bluetooth list and push the  key for 3 seconds to connect to the speaker.
5. The Bluetooth LED will stay Blue when connection is successful. You can play your music wirelessly with BT Speaker.
6. You can also connect your paired device under pairing mode.
7. Under Waiting for Connection mode, you can simply reconnect to your latest paired device by just pressing the  key once.



PAIRING YOUR BLUETOOTH DEVICE WITH NFC (NEAR FIELD COMMUNICATION) FUNCTION

Your Bluetooth speaker can pair with most Bluetooth devices. Pairing may vary on different devices on your device. Please consult your Bluetooth device owner's manual for pairing instructions.

1. Press  key on top of the unit to switch on.
2. Turn on the NFC function on your Bluetooth device (e.g. Smartphone).
3. Place your device surface near the NFC sensor area of your speaker (top of unit). Push the  key for 3 seconds on your speaker to pair your device. (Some devices may have a pop up message to confirm the speaker connection, select YES to accept).
4. You can play your music wirelessly with your Bluetooth speaker.
5. To disable the connection, just place your device surface near the NFC sensor area of the speaker again or turn off the NFC function on your device.
6. **IMPORTANT PLEASE NOTE:** If you wish to connect a different device TURN unit off and then please repeat steps (1-3) for new devices.

TO CONTROL YOUR MUSIC PLAYBACK

Your device must support AVRCP (Audio Video Remote Control Profile) to control your device's playback from the Speaker. Please check your device's owner's manual.

When the music is being played:

- Play/Pause key
 - Press once to pause the playback
 - Press twice to resume the playback

Please use your Bluetooth device (e.g. Smartphone) setting to control the volume level.

PLAYBACK AUX IN DEVICE

1. Insert the AUX in jack with external device (e.g. Smartphone or MP3 player) via an AUX cable (not provided).
2. The speaker will switch to AUX mode automatically, AUX LED will be ON.
3. Use your device to control the playback and Volume level of the speaker.
4. Please use your Bluetooth device setting to control the volume level.

CHARGING A DEVICE VIA USB CONNECTION

1. Connect your wireless speaker to Mains power using power lead supplied.
2. Plug one end of the USB cable (not supplied with unit) into the USB port on the back of your speaker, plug the other end of the USB cable into your device (I.E. Smartphone) for USB charging.

TROUBLE SHOOTING AND SUPPORT

1. If your wireless speaker does not work as expected please first read this manual.
2. No operation: Check the power adaptor and mains power have been turned on.
3. If still not successful please contact Nakamichi Service Support. Please refer to page 6 for details.

ITEM'S INCLUDED

- Wireless Bluetooth Speaker x 1 pc
- Power Adaptor (DC 9V $\overline{\overline{=}}$ 1.5A) x 1 pc

GENERAL SPECIFICATIONS

- Bluetooth v2.1 includes profiles: A2DP, AVRCP
- Advanced Audio Distribution Profile (A2DP) for wireless music streaming
- Audio Video Remote Control Profile (AVRCP) for wireless audio playback control
- Range up to (10M) in open areas

SPECIFICATIONS

Model	Delta 10
Bluetooth specification	Bluetooth V2.1
Transmission distance	10m music transmission without barrier
Output power maximum	2 x 5W
USB charging	DC 5V $\overline{\overline{=}}$ 1A
AUX input	3.5mm Stereo
Product weight	1.3kg
Product size	L250 x W88.5 x H132.5mm



NAKAMICHI SERVICE CONTACT DETAILS

Australia

Telephone: 1300 565 197

Fax: 03 9548 7174

Email: warranty@nakamichi.com.au

Website: www.nakamichi.com.au

Address: 178 Boundary Road, Braeside Victoria 3195

Australia

Hours of Operation

Monday - Friday

9am to 5:30pm AEST excluding Public Holidays

New Zealand

Telephone: 0800 462 526

Fax: 09 266 7105

Email: warranty@nakamichi-ap.co.nz

Website: www.nakamichi.com.au

Address: 84 Kerrs Road, Manukau Auckland 2104

New Zealand

Hours of Operation

Monday - Friday

9am to 5:00pm excluding Public Holidays

Or visit the Nakamichi website anytime 24/7 and use the e-warranty service to make a claim.