



SERVICE MANUAL

TRM-750
INTEGRATED STEREO AMPLIFIER

NIKKO

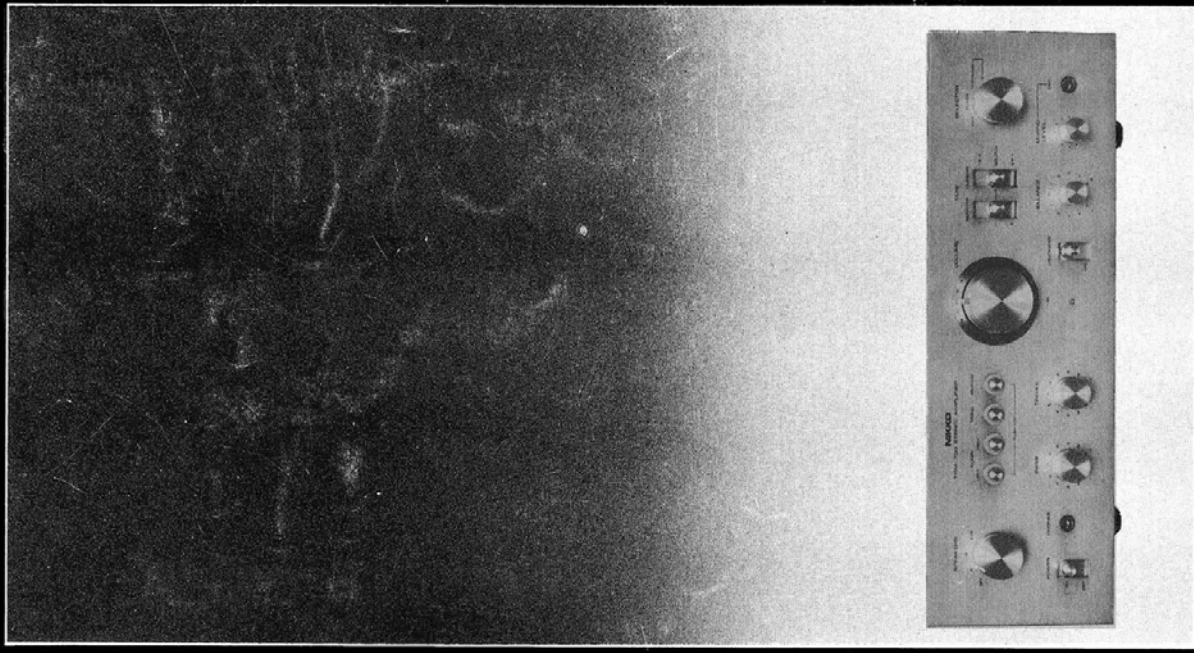

OVERALL DIAGRAM TRM-750

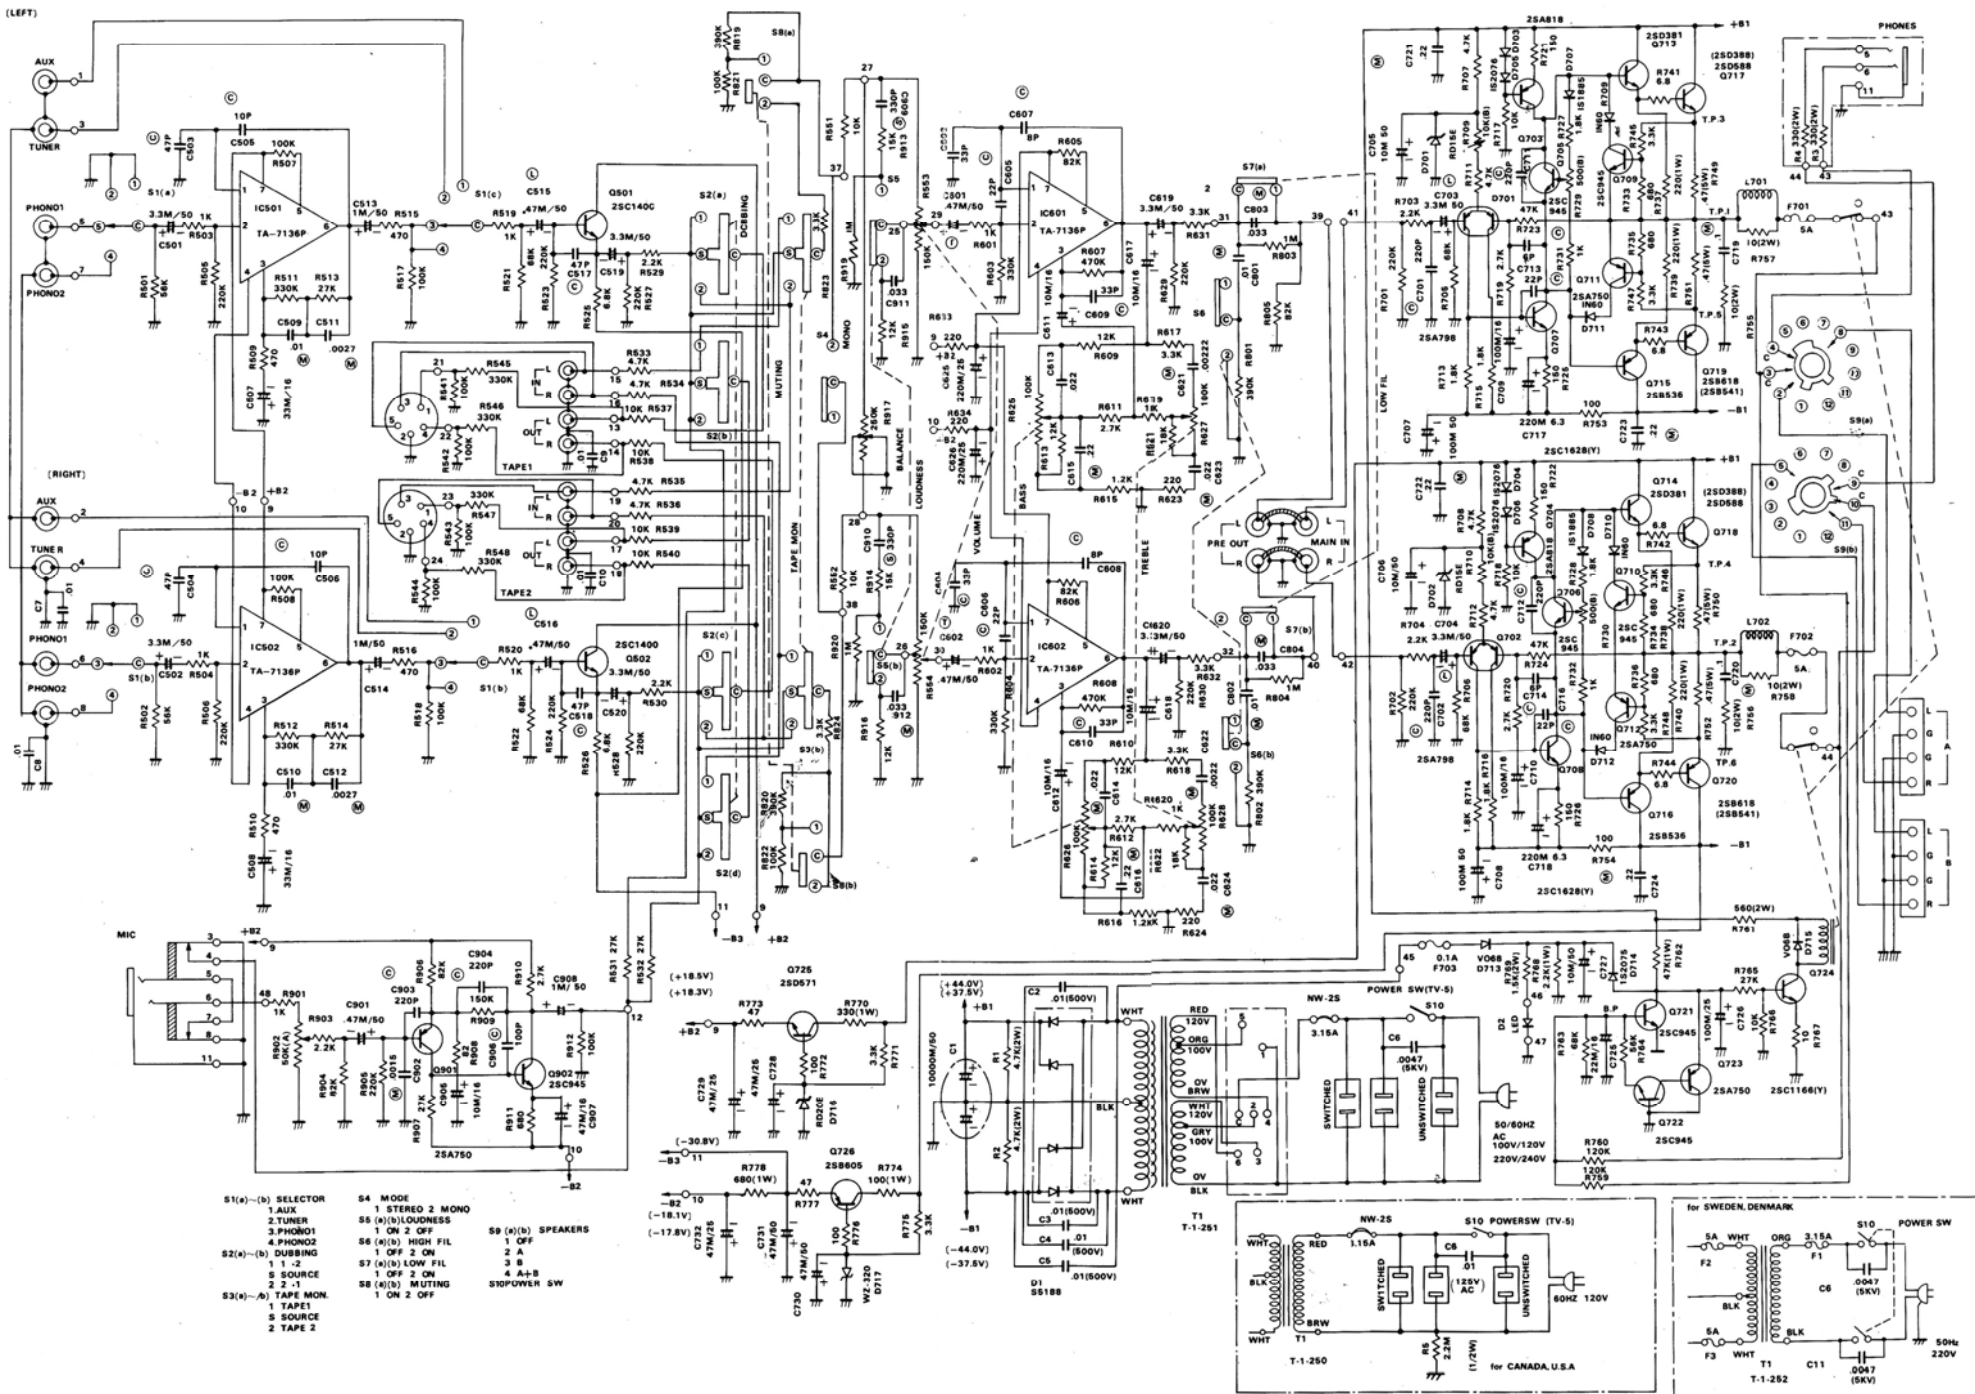

- S1(a)-(b) SELECTOR
 1 AUX
 2 TUNER
 3 PHONO1
 4 PHONO2
- S2(a)-(b) DUBBING
 1 1 - 2
 2 1 - 1
 3 SOURCE
 4 A+B
 5 SOURCE
 2 TAPE 2
- S3(a)-(b) TAPE MON.
 1 TAPE1
 2 TAPE 2
- S4 MODE
 1 STEREO 2 MONO
- S5 (a)(b) LOUDNESS
 1 ON 2 OFF
- S6 (a)(b) HIGH FIL
 1 OFF 2 ON
- S7 (a)(b) LOW FIL
 1 OFF 2 ON
- S8 (a)(b) MUTING
 1 ON 2 OFF
- S9 (a)(b) SPEAKERS
 1 OFF
 2 A
 3 A+B
 4 A+B
 5 POWER SW

