



NIKKO

TRM-800

Service manual

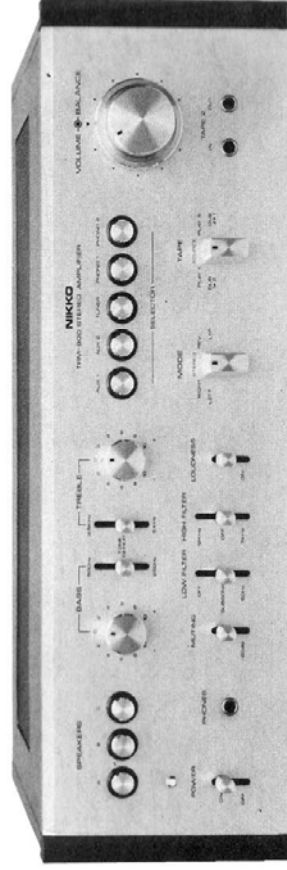

OVERALL DIAGRAM MODEL TRM-800

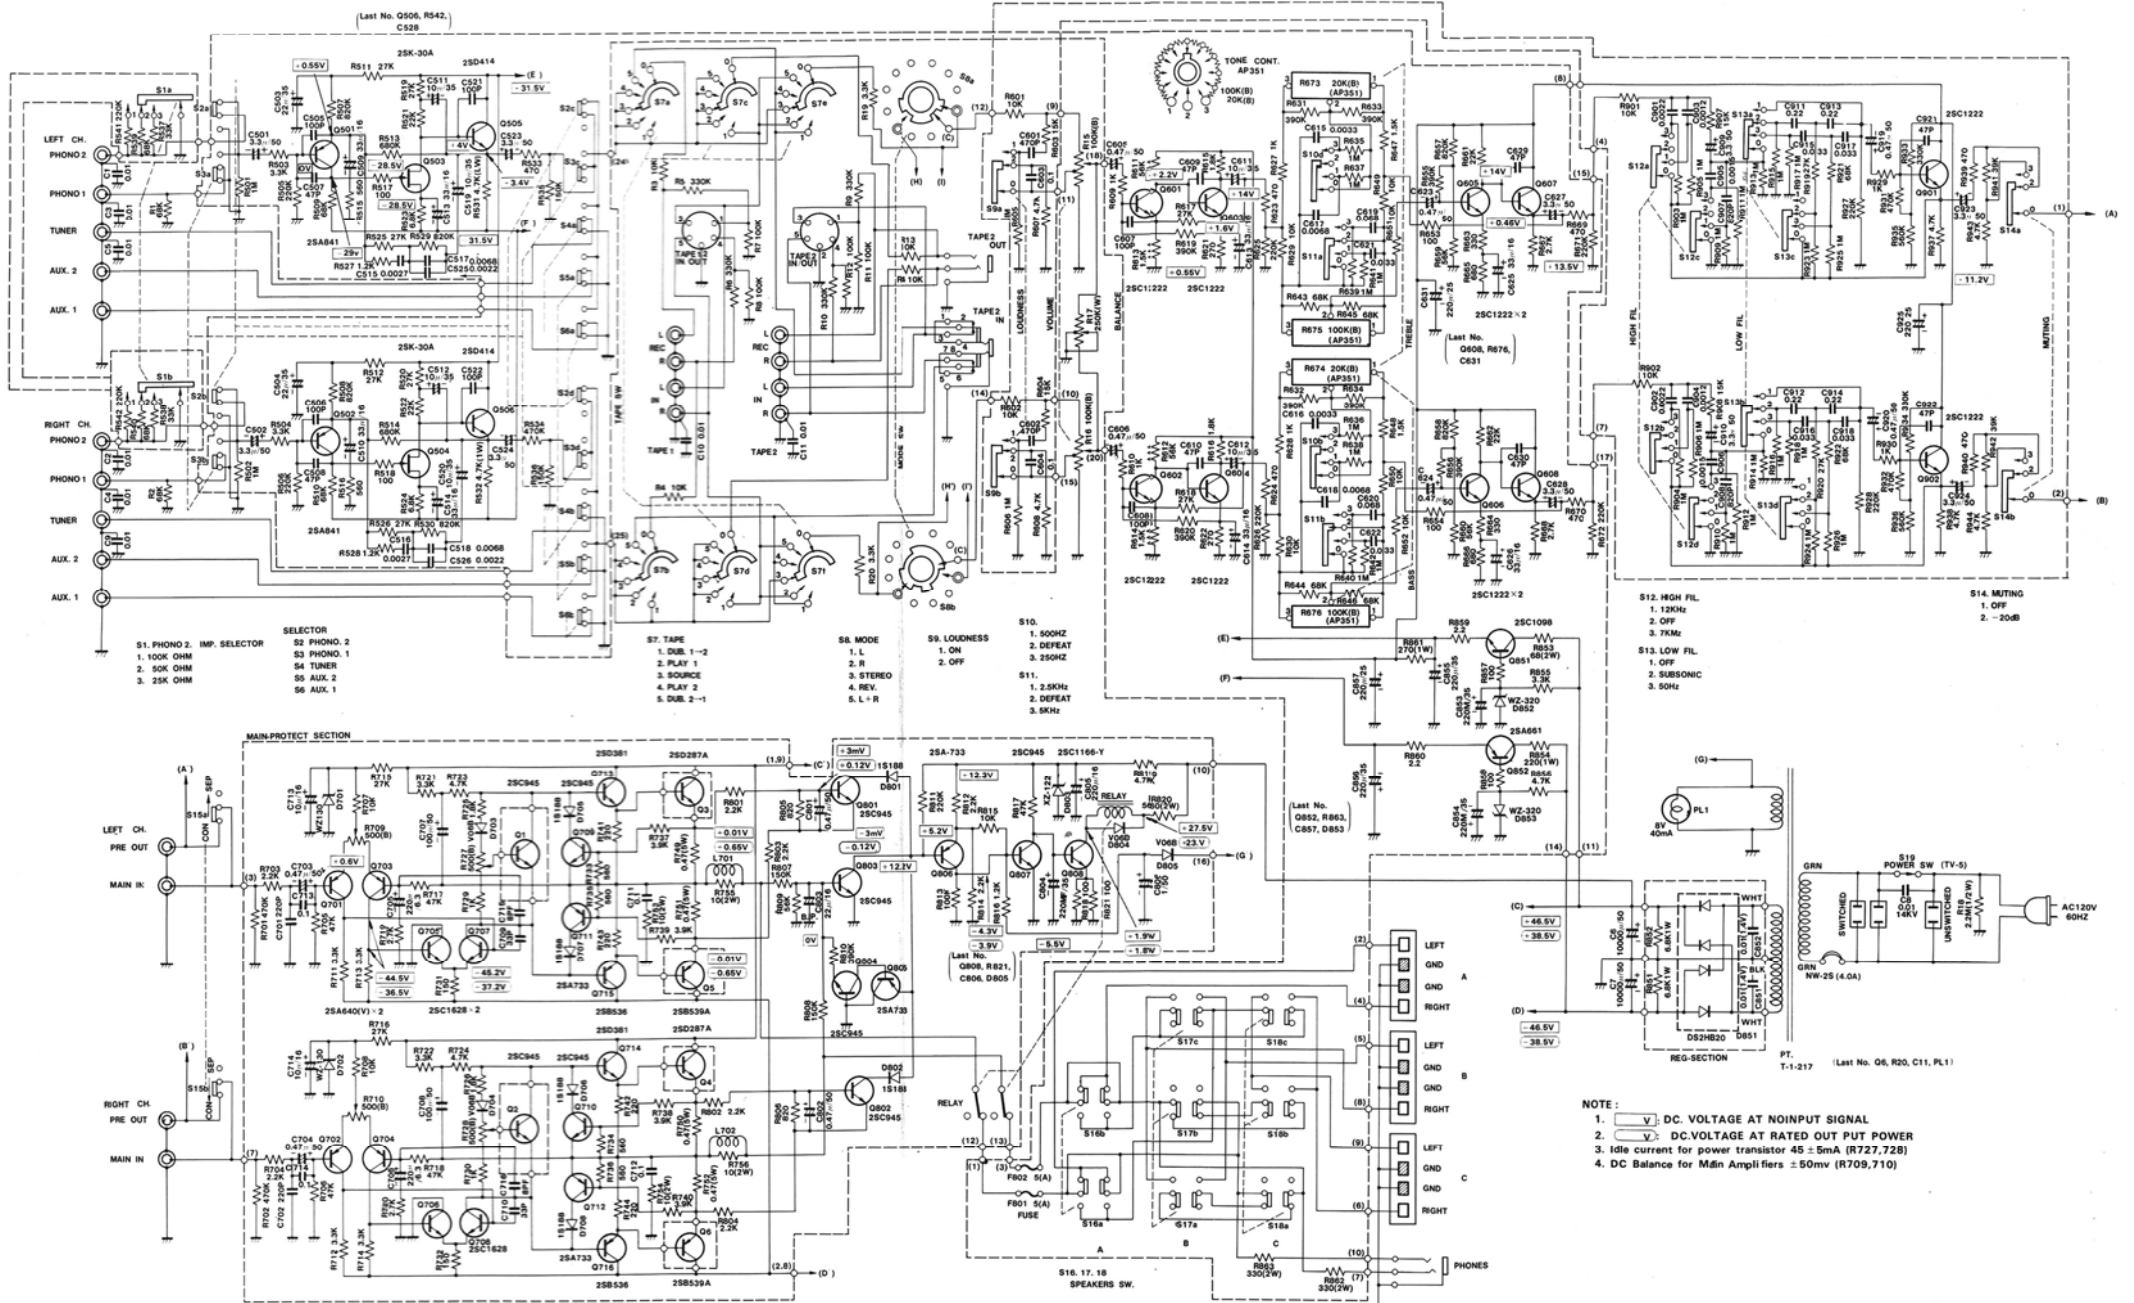

- SELECTOR**
- S1. PHONO 2. IMP. SELECTOR
 - S2. PHONO 2
 - S3. PHONO 1
 - S4. TUNER
 - S5. AUX. 2
 - S6. AUX. 1

- S7. TAPE**
- 1. DUB. 1-2
 - 2. PLAY 1
 - 3. SOURCE
 - 4. PLAY 2
 - 5. DUB. 2-1

- S8. MODE**
- 1. L
 - 2. OFF
 - 3. STEREO
 - 4. REV.
 - 5. L-R

- S9. LOUDNESS**
- 1. ON
 - 2. OFF

- S10.**
- 1. 500HZ
 - 2. DEFEAT
 - 3. 350HZ

- S11.**
- 1. 2.5KHz
 - 2. DEFEAT
 - 3. 5KHz

LAST NO.
Q716, R756, C714
L702, D708

NOTES:

When any two pair of the buttons. (A+B, B+C, C+A) are depressed the corresponding pair of speaker systems come into operation.

However all three buttons even though depressed at the same time (A+B+C) Only system "A" come into operation.

- NOTE:**
1. ∇ DC VOLTAGE AT NOINPUT SIGNAL
 2. ∇ DC VOLTAGE AT RATED OUT PUT POWER
 3. Idle current for power transistor $45 \pm 5\text{mA}$ (R727, 728)
 4. DC Balance for Main Amplifiers $\pm 50\text{mV}$ (R709, 710)