

SKW-30 Subwoofer Parts List

EAMOSKW30P	Pre-Amp with Harness. Order with,
1216SKW30	Frequency Selector Knob
511SKW30	Volume Knob
ELP2219	+/_ Lead Set
EAMOSKW30	Amplifier assembly
EWF61615P	EWF61615P Woofer
EAC3M1C	RCA Cable
12K / 3watt carbon	Resistor (obtain Locally)
EAMOSKW30-1	Power Block Only. (M3) Black Block in picture 3



Note: *It is important to remove the knobs with care as not to damage front cabinet assembly. When replacing any components on the pre-amplifier assembly it may be necessary to replace the knobs that may be damaged as well.*

1216SKW30	Frequency Selector Knob
511SKW30	Volume Knob
EAC3M1	RCA cable
SKF110W	Fuse AGC 2A 250V

