


ONKYO SERVICE MANUAL

QUARTZ SYNTHESIZED TUNER AMPLIFIER MODEL TX-36

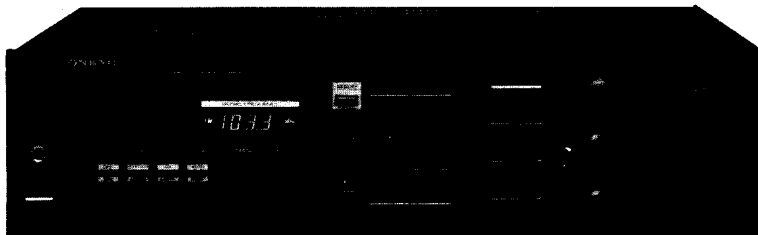

UD, UDN, BUD, BUDN	120V AC, 60Hz
UG, UGV, BUG, BUGV	220V AC, 50Hz
UW	120 or 220V AC, 50/60Hz
UQB	240V AC, 50Hz

Silver and black models

SAFETY-RELATED COMPONENT WARNING!!

COMPONENTS IDENTIFIED BY MARK \triangle ON THE SCHEMATIC DIAGRAM AND IN THE PARTS LIST ARE CRITICAL FOR RISK OF FIRE AND ELECTRIC SHOCK. REPLACE THESE COMPONENTS WITH ONKYO PARTS WHOSE PARTS NUMBERS APPEAR AS SHOWN IN THIS MANUAL.

MAKE LEAKAGE-CURRENT OR RESISTANCE MEASUREMENTS TO DETERMINE THAT EXPOSED PARTS ARE ACCEPTABLY INSULATED FROM THE SUPPLY CIRCUIT BEFORE RETURNING THE APPLIANCE TO THE CUSTOMER.

SPECIFICATIONS

AMPLIFIER SECTION

Power Output:	50 watts per channel, min. RMS, at 8 ohms, both channels driven, from 20 Hz to 20 kHz, with no more than 0.04% THD.
Music Power Output:	2 x 110 watts at 4 ohms, 1 kHz (DIN) 2 x 75 watts at 8 ohms, 1 kHz (DIN)
Continuous Power Output:	2 x 75 watts at 4 ohms, 1 kHz (DIN) 2 x 50 watts at 8 ohms, 1 kHz (DIN)
Total Harmonic Distortion:	0.04% at rated power 0.04% at 1 watt output
IM Distortion:	0.04% at rated power 0.04% at 1 watt output
Damping Factor:	35 at 8 ohms
Frequency Response:	20 - 30,000 Hz \pm 1 dB
RIAA Deviation:	20 - 20,000 Hz \pm 0.8 dB
Sensitivity and Impedance:	Phono: 2.5 mV/50 kohms Tape Play: 150 mV/50 kohms Tape Rec: 150 mV/3.5 kohms (phono)
Phono Overload:	180 mV RMS at 1kHz, 0.08% THD
Signal-to-Noise Ratio:	Phono: 85 dB (at 10 mV input, A weighted) 76 dB (IHF A-202) Tape: 95 dB (A weighted) 80 dB (IHF A-202)
Tone Controls:	Bass: \pm 8 dB at 100 Hz Treble: \pm 8 dB at 10 kHz
Loudness (-30 dB):	+7 dB at 70Hz, +5 dB at 10 kHz
Subsonic:	-6 dB at 15 Hz

ONKYO
AUDIO COMPONENTS

TUNER SECTION**FM:**

	120V model	220/240V model
Tuning Range:	87.5 – 108.0 MHz (100 kHz steps)	87.5 – 108.0 MHz (50 kHz steps)
Usable sensitivity:	Mono: 10.8 dBf, 1.9 μ V Stereo: 17.2 dBf, 4.0 μ V	Mono: 11.2 dBf, 1.0 μ V Stereo: 18.0 dBf, 2.2 μ V
50 dB Quieting Sensitivity:	Mono: 17.2 dBf, 4.0 μ V Stereo: 37.2 dBf, 40 μ V	Mono: 18.0 dBf, 2.2 μ V Stereo: 37.2 dBf, 20 μ V
Capture Ratio:	1.5 dB	1.5dB
Image Rejection Ratio:	40 dB	85 dB
IF Rejection Ratio:	90 dB	90 dB
Signal-to Noise Ratio:	Mono: 72 dB Stereo: 67 dB	Mono: 72 dB Stereo: 67 dB
Selectivity:	55 dB	50 dB DIN (\pm 300 kHz 40 kHz dev.)
AM Suppression Ratio:	50 dB	50 dB
Harmonic Distortion:	Mono: 0.15% Stereo: 0.25%	Mono: 0.15% Stereo: 0.25%
Frequency Response:	30 – 15,000 Hz \pm 1.5 dB	30 – 15,000 Hz \pm 1.5 dB
Stereo Separation:	40 dB at 1 kHz 30 dB at 100 – 10,000 Hz	40 dB at 1 kHz 30 dB at 100 – 10,000 Hz
Tuning Level (Hi/Lo):	23.2 dBf, 8 μ V/17.2 dBf, 4 μ V	23.2 dBf, 4 μ V/17.2 dBf, 2 μ V
Stereo Threshold:	23.2 dBf, 8 μ V/17.2 dBf, 4 μ V	23.2 dBf, 4 μ V/17.2 dBf, 2 μ V

AM:

Tuning Range:	520 – 1,710 kHz (10 kHz steps)	522 – 1,611 kHz (9 kHz steps)
Usable Sensitivity:	30 μ V	30 μ V
Image Rejection Ratio:	40 dB	40 dB
IF Rejection Ratio:	30 dB	30 dB
Signal-to-Noise Ratio:	40 dB	40 dB
Harmonic Distortion:	0.8%	0.8%

GENERAL:

Semiconductors:	EETs: 6 TR: 34 ICs: 11 Diodes: 82	EETs: 6 TR: 38 ICs: 11 Diodes: 85
Dimensions (WxHxD):	418 x 112 x 340 mm (16 1/2" x 4 1/2" x 13 3/8")	418 x 112 x 340 mm (16 1/2" x 4 1/2" x 13 3/8")
Weight:	8.1 kg, 17.8 lbs.	8.1 kg, 17.8 lbs.

TABLE OF CONTENTS

Specifications	1	Pc board parts list and view from component side	
Service procedures	3	FM/AM tuner pc board	19
Block diagram – Amplifier section–	4	Digital circuit pc board	23
Block diagram –D (120V) model–	5	Fluorescent indicator tube pc board	23
Block diagram –G (220V) and Q (240V) models–	6	Tuner switch pc board	24
Block diagram –W (120 or 220V) model–	7	Power supply and amplifier pc board	27
Exploded view	8	Speaker switch pc board	27
Parts list	9	Fuse terminal pc board	27
Circuit description	10	Equalizer amplifier pc board	31
Adjustment procedures	15	Tone control/Switch pc boards	32
Schematic diagram of tuner section		Block diagram of IC	35
–W model –	17	Packing view	36
–D model–	21		
–G/Q models–	25		
Schematic diagram of amplifier section			
–D/W models–	29		
–G/Q models–	33		

SERVICE PROCEDURES

1. Replacing the fuses

For continued protection against fire hazard, replace only with same type and same rating fuse.

D (120V) model

Circuit no.	Parts no.	Description
F501, F601	252059	4A (SS-2), Speaker
F901	252049	4A (ST-6), Primary

G (220V) and Q (240V) models

Circuit no.	Parts no.	Description
F501, F601	252077	4A-SE-EAK, Speaker
F902	252074	2A-SE-EAK, Primary
F903, F904	252078	5A-SE-EAK, Secondary
F905, F906	252070	1A-SE-EAK, Secondary
F907	252088	250mA-SE-EAK, Secondary

W(120 or 220V) model

Circuit no.	Parts no.	Description
F501, F601	252059	4A (SS-2), Speaker
F901	252049	4A (ST-6), Primary
F902	252074	2A-SE-EAK, Primary

2. Replacing the lamps

This unit uses the lamps listed below.

Circuit no.	Parts no.	Description
PL901, PL902	210162	PL 6.3V, 250mA, Dial plate illumination

Remove the top cover.
Remove the front panel.
Remove the holder.
(See fig. 2)

3. Insulation resistance measurement (Only U.S.A. model)

Connect the insulating-resistance tester between the plug of power supply cable and terminal GND.

Specifications: $3.3 \pm 0.3M$ ohm


4. Disassembling procedures

Selector switch pc board


Remove the top cover.
Remove the all screws on the back panel.
Remove a screw holding the radiator and bracket, pcb.

5. Change of AM scan step

W models are equipped with a switch to change the AM scan step frequency from 9kHz to 10kHz. The switch is located on the back panel. This switch is set to 9kHz at the factory; change to 10kHz if gives better results in your locality.

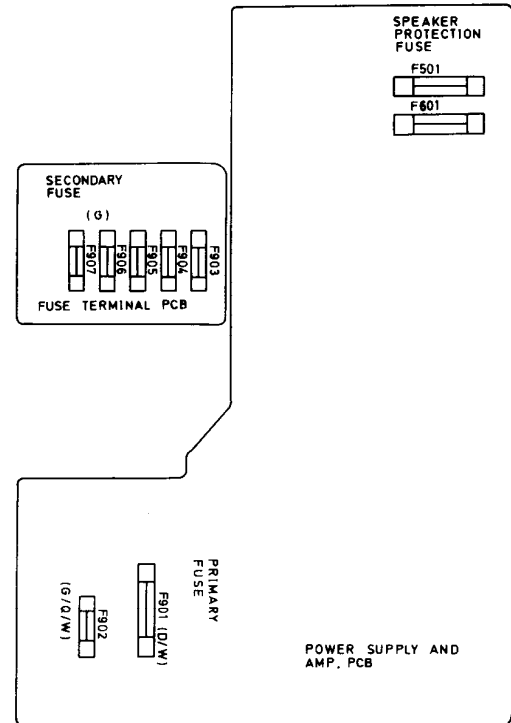

(fig. 1)

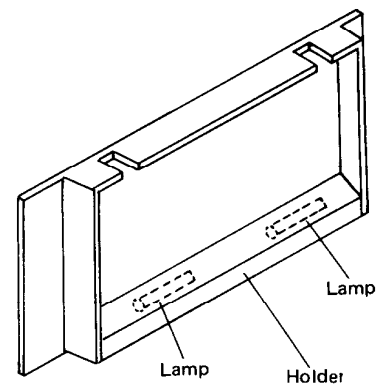

(fig. 2)

6. Change of De-emphasis

W models are equipped with a $50\mu\text{sec}$ - $75\mu\text{sec}$ selector switch. This switch is located on the back panel. This switch is set to $50\mu\text{sec}$ at the factory, but may have to be reset to $75\mu\text{sec}$ depending on the area where the unit is used.

Europe: $50\mu\text{sec}$

U.S.A.: $75\mu\text{sec}$

7. Change of voltage

W models are equipped with a voltage selector to conform with local power supplies. This switch is located on the back panel. Be sure to set this switch to match the voltage of the power supply in your area before turning the power switch on.


This switch is set to 220V at the factory. Voltage is changed by sliding the groove in the switch with the screwdriver to the right or left. Confirm that the switch has been moved all the way to the right or left before turning the power switch on.

8. Memory Preservation

This unit does not require memory preservation batteries. A built-in memory power back-up system preserves contents of the memory during power failures and even when the unit is unplugged. The unit must be plugged in and the power switch turned on and off once in order to charge the back-up system. Note that since this is not a permanent memory, the power switch must be turned on and off a few times each month to keep the back-up system operable. The period of time during which memory contents are preserved after power has last been turned off varies depending on climate and the location and placement of the unit. On the average, memory contents are protected over a period of 3 to 4 weeks (a minimum of 2 weeks) after the last time power has been turned off. This period is shorter when the unit is exposed to very high humidity or used in an area with an extremely humid climate.


BLOCK DIAGRAM

Amplifier section

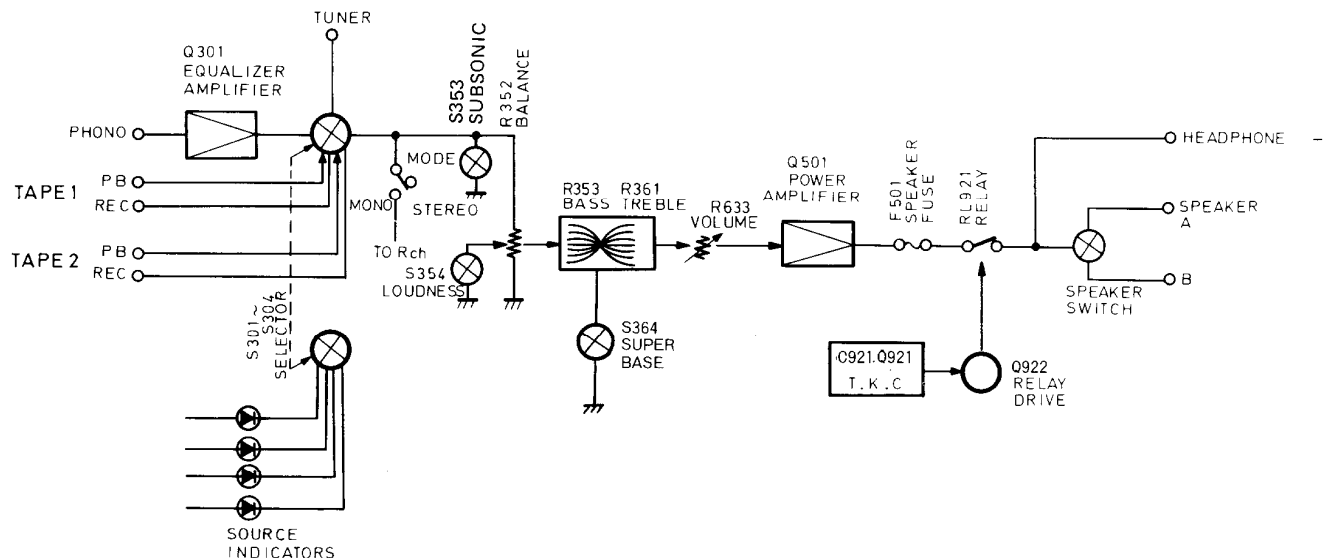


BLOCK DIAGRAM


-G model-

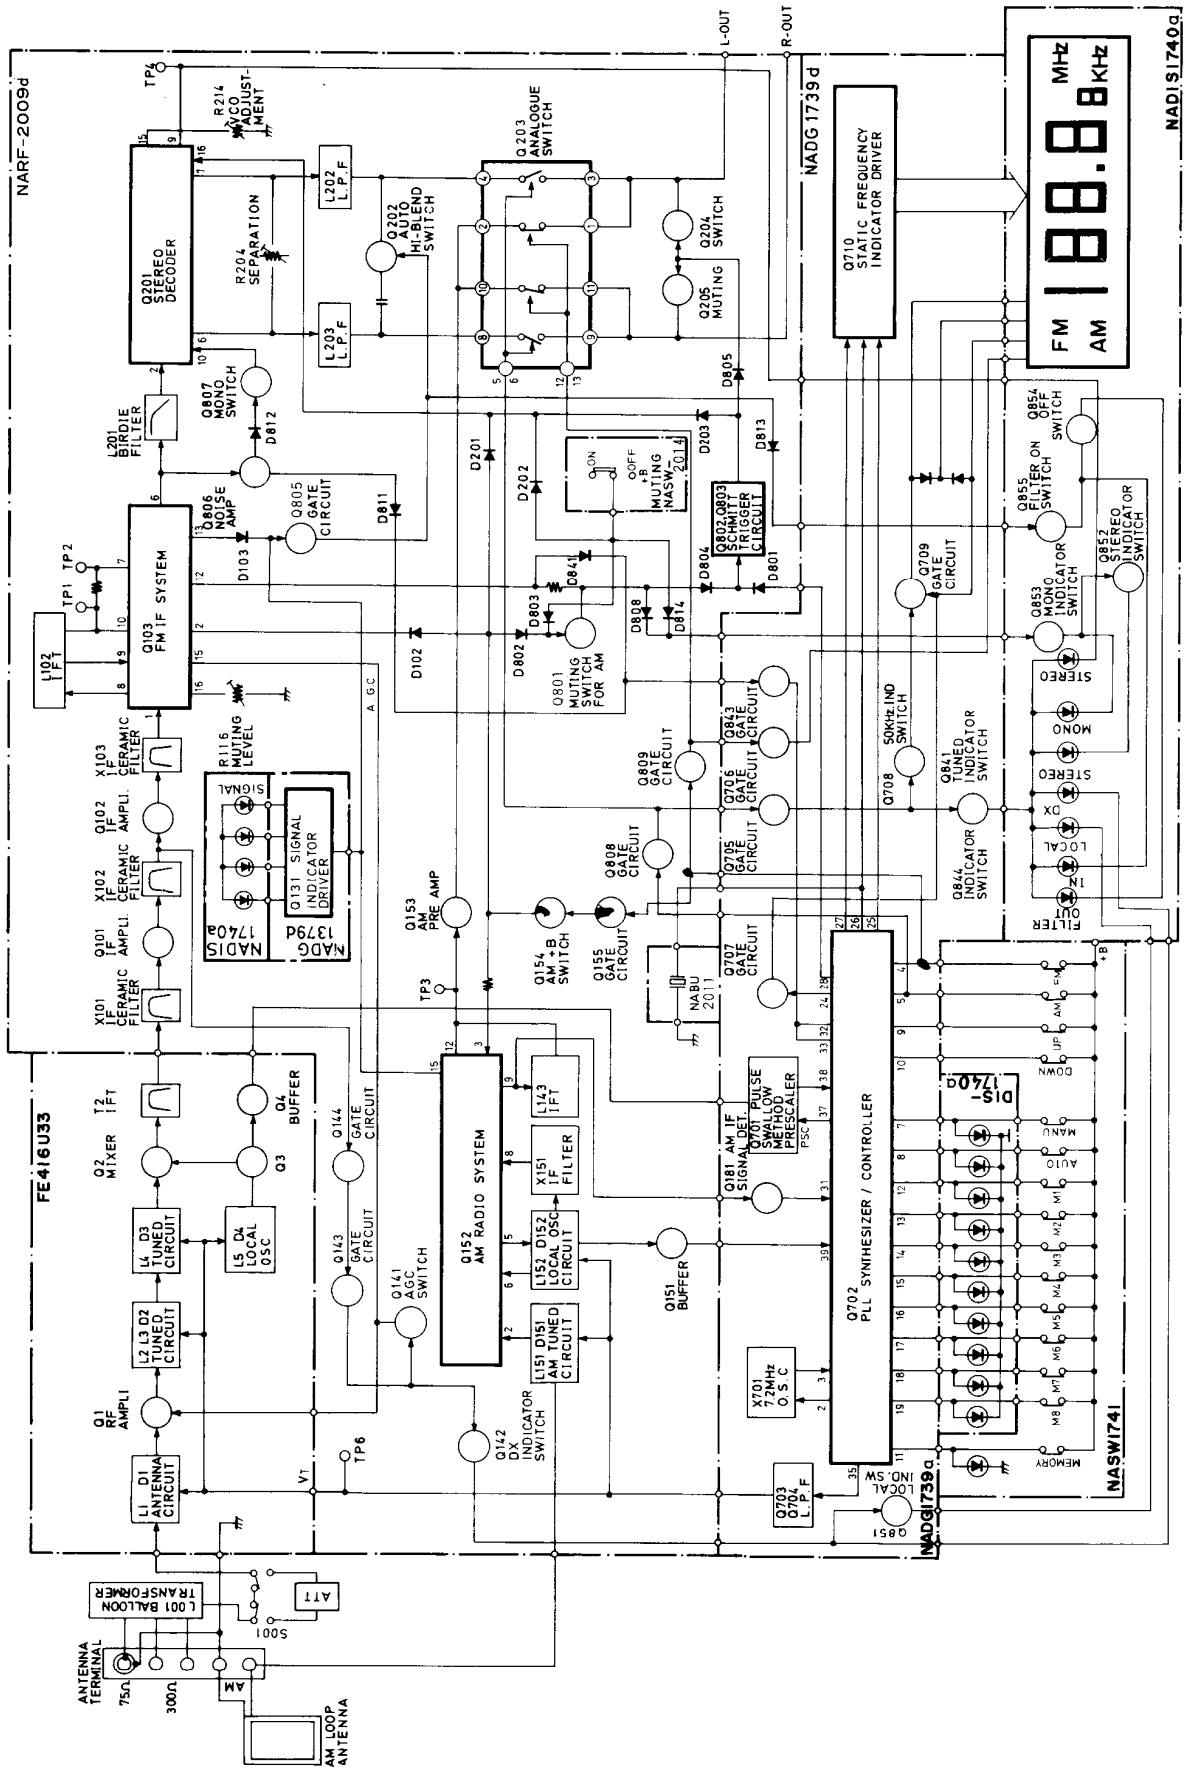


BLOCK DIAGRAM

-W model-

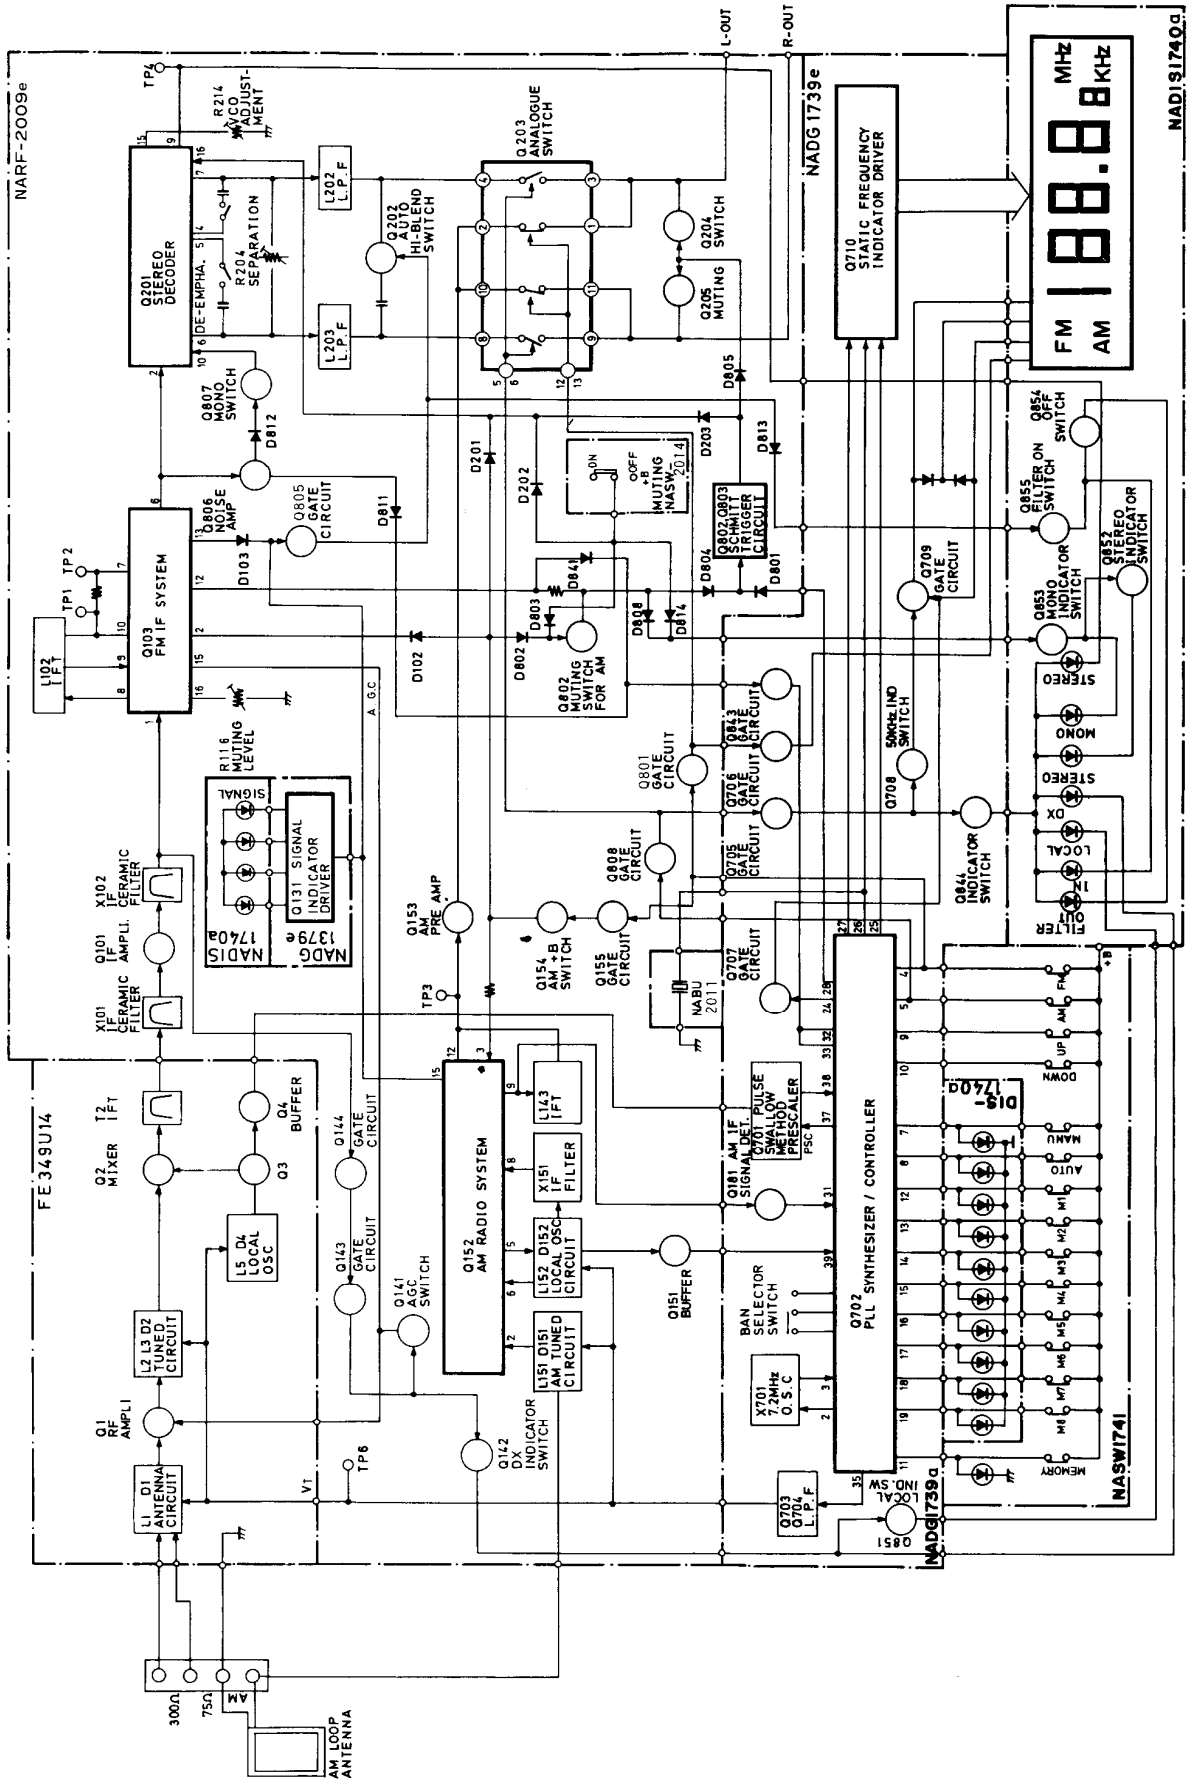

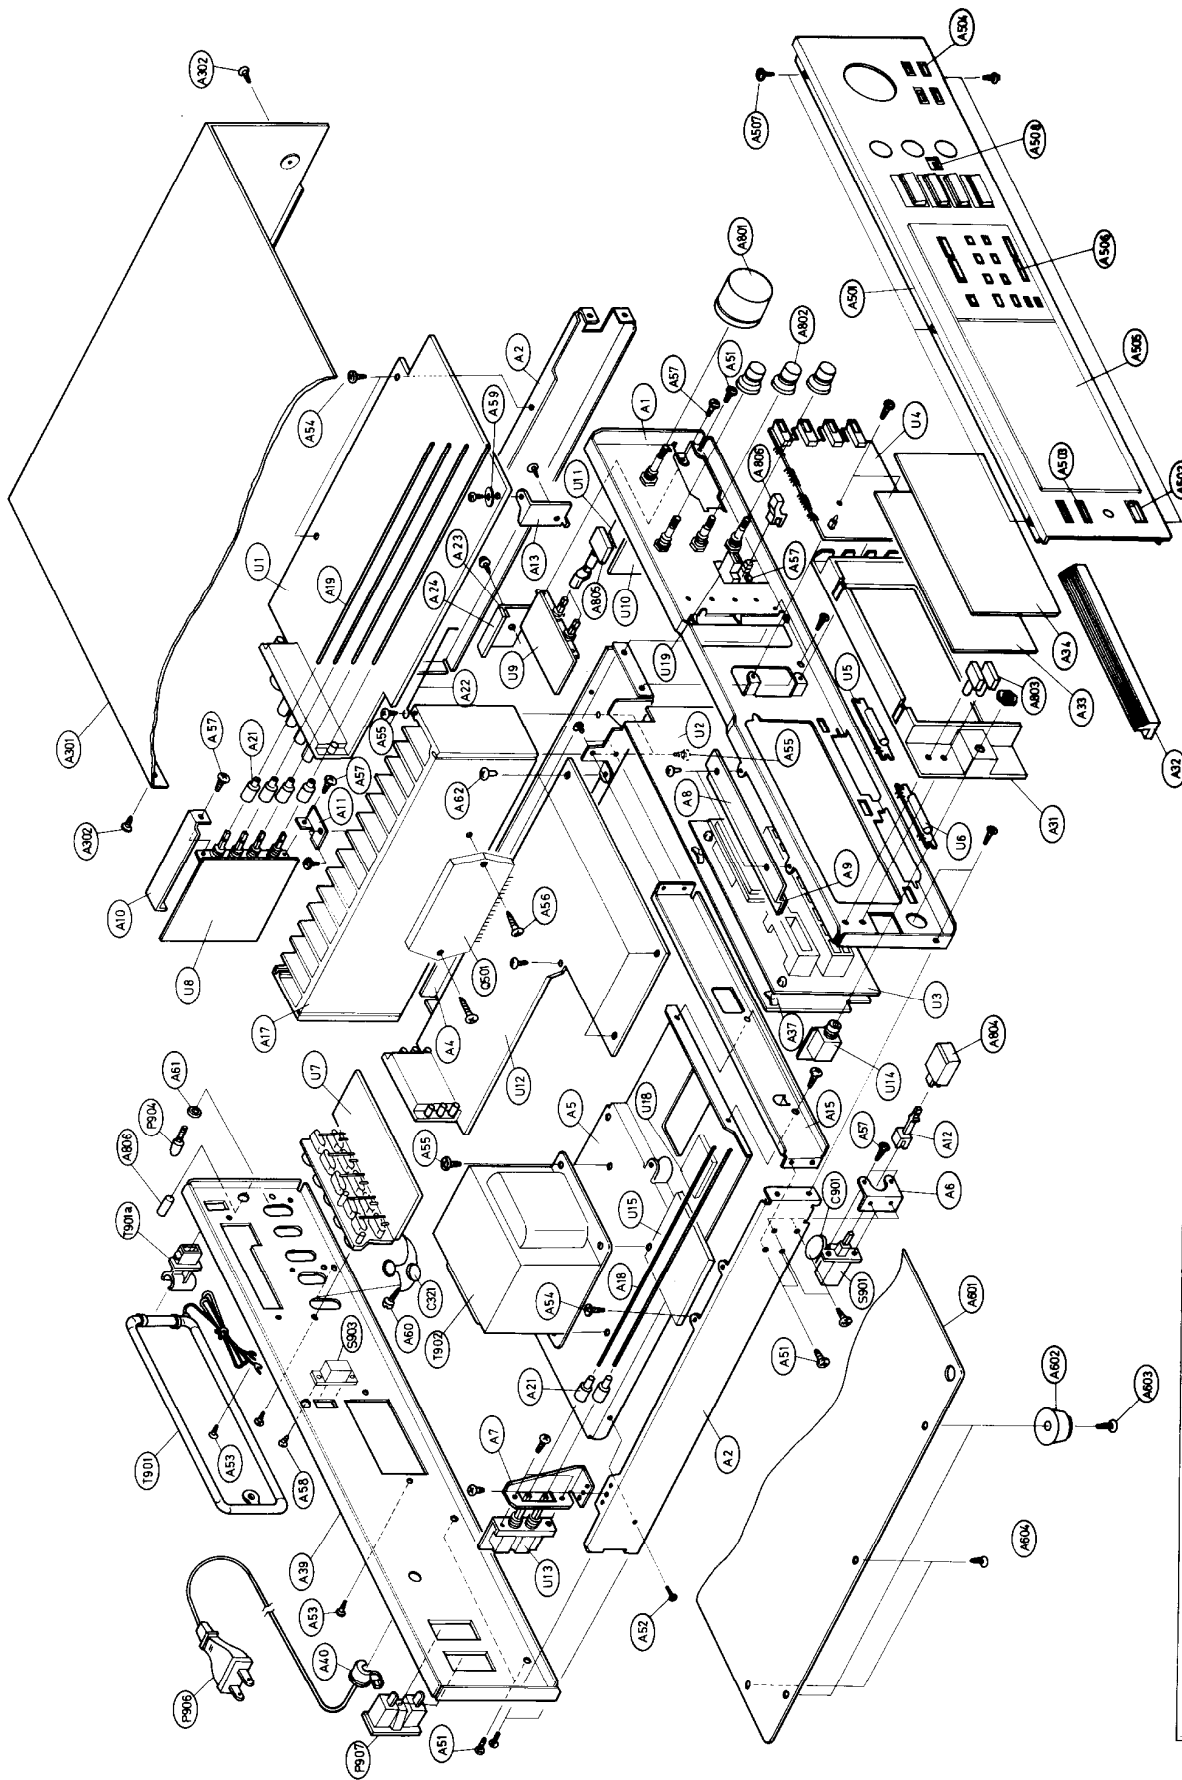

Notes: (D): Only 120V model
 (S): Only silver model
 (G): Only 220V model
 (B): Only black model
 (W): Only 120/220V model

NOTE: THE COMPONENTS IDENTIFIED BY MARK  ARE CRITICAL FOR RISK OF FIRE AND ELECTRIC SHOCK. REPLACE ONLY WITH PARTS NUMBER SPECIFIED.

DAIGAE
TX-36 UD

日付：85/04/17 ページ： 1

P/N	Location		SUB	Original	Serial Range
		部品名	代替部品	正規部品	適用台数
590721	Q805, 806, 951, 953	TRANSISTOR	2SC1815BL	2SC1815GR	2538-4137
590721	Q704	FET	2SK68AM	2SK68M	2538-4137
590627	Q805, 806, 951, 953	TRANSISTOR	2SC1815BL	2SC1815GR	1738-2537
590809	Q704	FET	2SK68AM	2SK68M	4138-5637
590720	Q703	TRANSISTOR	2SC1815BL	2SC1815GR	2538-4137
590720	Q921	TRANSISTOR	2SC1815BL	2SC1815GR	2538-4137
590924	Q103	IC	MPC1267C	MPC1167C2	7138-8137
591017	Q101	TRANSISTOR	2SC1923R	2SC1923O	8638-10637
600118	Q704	FET	2SK68AM	2SK68M	13338-14337

CHANGE OF PARTS
MODEL TX-36

10-31-8

ONKYO CORPORATION
SERVICE DIVISION

TYPE	CIRCUIT NO.	DESCRIPTION	AFTER CHANGE SPECIFICATIONS	PART NO	BEFORE CHANGE SPECIFICATIONS	PART NO.	APPLI- CATION	CHANGE DESCRIPTION
NARF-2009c/e	Q103 R116 R815 R149	IC Semi-fixed Carbon Carbon	μ PC1167C2 N08H50KBC R25J 330K R25J 4.7K	222608 5215046	μ PC1267C N08H20KBC R25J 75K R25J 1K	222803 5215003		5638- The supply of part is insufficiency.
NAAF-2031c	C505, C605	Elect.	100 μ F, 10V	3500080	100 μ F, 10V	352731019		5638- To flame- proof type (UL)
	PL901 PL902	Lamp pcb ass'y Lamp pcb ass'y Pilot lamp Pilot lamp Insulator plate	Abolition Abolition PL6.3V0.25A PL6.3V0.25A (Pc board)	210162 210162 28175110	NAPL-1743 NAPL-1744 Add Add Add			(UL) Change of material of pc board
NARF-2009c	C801 C802	Elect. Elect.	1 μ F, 50V 0,22 μ F, 50V	352780109 352782299	0.22 μ F, 50V Add	352782299		1738- Improvement of muting hystere- sis.
	A805	Knob ass'y Knob ass'y	(Silver) (Black)	28321583A 28321584A		28321583 28321584		
NARF-2009c	R124	Carbon	R25J 10K (Parallel C113)		Add			1738- To be stabi- lize the signal indicator.

PARTS LIST

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
A1	27110202-1A	Front bracket	A505	28191202	Clear plate	U1	18148509C	NARF-2009C, FM/AM tuner pc board ass'y (D)
A2	27115145A	Side bracket	A506	28321584	Knob ass'y	U2	18194509D	NARF-2009d, FM/AM tuner pc board ass'y (G)
A4	27130339B	Bracket, radiator	A508	27267333	Guide S		18190509E	NARF-2009e, FM/AM tuner pc board ass'y (G)
A5	27130340A	Bracket, power transformer	A507	834430068	3TTS+6B(BC), Tapping screw		18048539C	NADG-1739c, Digital circuit pc board ass'y (D)
A6	27140805	Bracket, power	A509	29110050	Aluminium tape on the front panel		18054539D	NADG-1739d, Digital circuit pc board ass'y (G)
A7	27140806	Bracket, speaker					18050539E	NADG-1739e, Digital circuit pc board ass'y (W)
A8	27140807	Bracket, holder	A601	27170160	Bottom board		18008541	NASW-1741, Tuner switch circuit pc board ass'y
A9	28140260	1.5 X 10 X 100mm, Cushion	A602	27175009A	Leg		18008543	NAPL-1743, Dial plate illumination lamp pc board ass'y
A10	27140808	Bracket, selector	A603	834430128	3TTS+12B(BC), Tapping screw		18008544	NAPL-1744, Dial plate illumination lamp pc board ass'y
A11	27140809A	Bracket S	A604	831430088	3TTW+8B(BC), Tapping screw		18148512	NAEQ-2012, Equalizer amplifier pc board ass'y (D/W)
A12	27260062	Shaft, switch	A801	28320543-1	Knob, volume (S)		18154512A	NAEQ-2012a, Equalizer amplifier pc board ass'y (G)
A13	27140810A	Bracket, PCB	A802	28320892	Knob, volume (B)		18148513	NASW-2013, Selector switch pc board ass'y
A15	27130341	Bracket F	A803	28321205	Knob, balance (S)		18188514A	NASW-2014a, Mode/ loudness switch pc board ass'y
A17	27160133	Radiator	A804	28321206	Knob, balance (B)		18148515	NATC-2015, Tone control circuit pc board ass'y
A18	27260123	Shaft	A805	28321207	Knob, push (S)		18148516	NAVR-2016, Volume control pc board ass'y
A19	27260124	Shaft	A806	28321208	Knob, push (B)		18188531C	NAAF-2031c, Power supply and power amplifier pc board ass'y (D)
A21	28320135	Connector	A807	28320852	Knob, power (S)		18194531D	NAAF-2031d, Power supply and power amplifier pc board ass'y (G)
A22	27300656	Spring	A807	28321160	Knob, power (B)		18190531E	NAAF-2031e, Power supply and power amplifier pc board ass'y (W)
A23	27140928	Bracket PCS	A807	28321215	Knob, push (S)		18188532A	NASW-2032a, Speaker selector switch pc board ass'y
A24	28175100	Insulating plate	A807	28321216	Knob, push (B)		18148533	NAHP-2033, Headphone terminal pc board ass'y
A31	27190220	Holder, pcb	A807	28321522	Knob, push (S)		18154534	NAFU-2034, Fuse terminal pc board ass'y
A32	27190221	Holder, lamp	A807	28321523	Knob, push (B)		18154510	NASW-2010, De-emphasis switch pc board ass'y (W)
A33	28133103	Back plate	A807	28320461	Knob, push (G)		18010542	NASW-1742, Band selector switch pc board ass'y (W)
A34	28130217	Dial plate	△ C901	3500065A	IS		18188511	NABU-2011, Buzzer pc board ass'y
A37	27190011	Holder	△ C901a	27300601	Cover for C901		18148517	NATS-2017, Super base switch pc board ass'y
A39	27120595	Back panel (D)	C321, C322	330924730	0.047μF, 50V, Ceramic capacitor (D)			
	27120596	Back panel (G)	C990	335622230	0.022μF, 50V, Ceramic capacitor (D)			
	27120597	Back panel (W)	△ F501, F601	252059	4A(SS-2), Speaker protection fuse (D/W)			
△ A40	270280	SR-4K-4, Strain relief	△	252077	4A-SE-EAK, K, Speaker protection fuse (G)			
A51	834430068	3TTS+6B(BC), Tapping screw	△ F901	252049	4A(ST-6), Primary fuse (D/W)			
A52	8384430068	3TTB+6B(BC), Tapping screw	△ F902	252074	2A-SE-EAK, Primary fuse (G/W)			
A53	834430108	3TTS+10B(BC), Tapping screw	△ F903, F904	252078	5A-SE-EAK, Secondary fuse (G)			
A54	831130088	3TTW+8B, Tapping screw	△ F905, F906	252070	1A-SE-EAK, Secondary fuse (G)			
A55	838440089	4TTB+8C(BC), Tapping screw	△ F907	252088	250mA-SE-EAK, Secondary fuse (G)			
A56	834430168	3TTS+16B(BC), Tapping screw	P904	25060044	Terminal, ground			
A57	82143006	3P+6FN(BC), Pan head screw	△ P906	253112	AS-UC-4#18, Power supply cable (D)			
A61	87613010	W3 X 10F, Washer	△	253083-1	AS-CEE, Power supply cord (G/W)			
A62	831430088	3TTW+8B(BC), Tapping screw	△ P907	25050046	NSCT-2PI15, AC outlet (D)			
A63	82142604	2.6P+4F(BC), Pan head screw	P908	223004-1	Terminal			
A301	28184201	Top cover (S)	Q501, Q601	222036	STK-4893, Power amplifier IC			
A301	28184202	Top cover (B)	△ S901	25035398	NPS-1111-L362P, Power switch			
A302	834430068	3TTS+6B(BC), Tapping screw	S902	25065123	NPS-1258P, Voltage selector switch			
A501	18188121	Front panel ass'y (S)	S903	250142	NSS-2225, Buzzer switch (W)			
A502	27267215	Guide, power	T901	232085	AM loop antenna			
A503	27267280	Guide, speaker	T901a	27190105	Holder, antenna			
A504	27267282	Guide, push	△ T902	230791	NPT-838D, Power transformer (D)			
A505	28198607	Clear plate						
A506	28321583	Knob ass'y						
A508	27267333	Guide S						
A501	18268121	Front panel ass'y (B)						
A502	27267215	Guide, power						
A503	27267280	Guide, speaker						
A504	27267282	Guide, push						
A505	28198607	Clear plate						
A506	28321583	Knob ass'y						
A508	27267333	Guide S						
A501	18268121	Front panel ass'y (B)						
A502	27267215	Guide, power						
A503	27267280	Guide, speaker						
A504	27267282	Guide, push						
A505	28198607	Clear plate						
A506	28321583	Knob ass'y						
A508	27267333	Guide S						
A501	18268121	Front panel ass'y (B)						
A502	27267215	Guide, power						
A503	27267280	Guide, speaker						
A504	27267282	Guide, push						
A505	28198607	Clear plate						
A506	28321583	Knob ass'y						
A508	27267333	Guide S						
A501	18268121	Front panel ass'y (B)						
A502	27267215	Guide, power						
A503	27267280	Guide, speaker						
A504	27267282	Guide, push						
A505	28198607	Clear plate						
A506	28321583	Knob ass'y						
A508	27267333	Guide S						
A501	18268121	Front panel ass'y (B)						
A502	27267215	Guide, power						
A503	27267280	Guide, speaker						
A504	27267282	Guide, push						
A505	28198607	Clear plate						
A506	28321583	Knob ass'y						
A508	27267333	Guide S						
A501	18268121	Front panel ass'y (B)						
A502	27267215	Guide, power						
A503	27267280	Guide, speaker						
A504	27267282	Guide, push						
A505	28198607	Clear plate						
A506	28321583	Knob ass'y						
A508	27267333	Guide S						
A501	18268121	Front panel ass'y (B)						
A502	27267215	Guide, power						
A503	27267280	Guide, speaker						
A504	27267282	Guide, push						
A505	28198607	Clear plate						
A506	28321583	Knob ass'y						
A508	27267333	Guide S						
A501	18268121	Front panel ass'y (B)						
A502	27267215	Guide, power						
A503	27267280	Guide, speaker						
A504	27267282	Guide, push						
A505	28198607	Clear plate						
A506	28321583	Knob ass'y						
A508	27267333	Guide S						
A501	18268121	Front panel ass'y (B)						
A502	27267215	Guide, power						
A503	27267280	Guide, speaker						
A504	27267282	Guide, push						
A505	28198607	Clear plate						
A506	28321583	Knob ass'y						
A508	27267333	Guide S						
A501	18268121	Front panel ass'y (B)						
A502	27267215	Guide, power						
A503	27267280	Guide, speaker						
A504	27267282	Guide, push						
A505	28198607	Clear plate						
A506	28321583	Knob ass'y						
A508	27267333	Guide S						
A501	18268121	Front panel ass'y (B)						
A502	27267215	Guide, power						
A503	27267280	Guide, speaker						
A504	27267282	Guide, push						
A505	28198607	Clear plate						
A506	28321583	Knob ass'y						
A508	27267333	Guide S						
A501	18268121	Front panel ass'y (B)						
A502	27267215	Guide, power						
A503	27267280	Guide, speaker						
A504	27267282	Guide, push						
A505	28198607	Clear plate						
A506	28321583	Knob ass'y						
A508	27267333	Guide S						
A501	18268121	Front panel ass'y (B)						
A502	27267215	Guide, power						
A503	27267280	Guide, speaker						
A504	27267282	Guide, push						
A505	28198607	Clear plate						
A506	28321583	Knob ass'y						
A508	27267333	Guide S						
A501	18268121	Front panel ass'y (B)						
A502	27267215	Guide, power						
A503	27267280	Guide, speaker						
A504	27267282	Guide, push						
A505	28198607	Clear plate						
A506	28321583	Knob ass'y						
A508	27267333	Guide S						
A501	18268121	Front panel ass'y (B)						
A502	27267215	Guide, power						
A503	27267280	Guide, speaker						
A504	27267282	Guide, push						

CIRCUIT DESCRIPTIONS

1. Synthesizer and controller operation


Pin No.	Symbol	Terminal	Description
1	GND	Ground	
2	XT	X'tal	Connected to the 7.2MHz crystal oscillator for the reference frequency.
3	XT		
4	FM	FM band specification input	Mutual reset type, performs switching of each band, FM/MW/LW.
5	MW	MW band specification input	
6	LW	LW band specification input	
7	MANUAL	Manual tuning mode specification input	Mutual reset type, performs auto search and manual operation mode switching during UP/DOWN tuning.
8	AUTO	Auto search tuning mode specification input	
9	UP	UP tuning key input	Connect the push key and perform UP/DOWN tuning.
10	DOWN	DOWN tuning key input	
11	STO	Memory store command input	The preset memory is set to the write mode when the key is pressed.
12-19	M1-M8	Preset memory channel specification input	Controls the write and read out of the internal 16-station preset memory along with the MC1 and MC2 input.
20	MC-1	Memory control input	Set the 16-station preset memory to the 8 FM/8 AM station mode or the FM/MW/LW 3-band 16-station random mode. The 8 FM/8 AM mode is used in this unit.
21	MC-2		
22	OSC2	AM oscillator terminal	CR connection terminal for the oscillator that determines the scan speed during the AM search mode.
23	OSC1	FM oscillator terminal	CR connection terminal for the oscillator that determines the scan speed during the FM search mode.
24	0/5	FM 50 kHz output	Output that represents the 50kHz FM band tuning step for European models. Goes to the high level for the 50 kHz setting.
25	CK2	Tuned frequency data output	Outputs the serial data and timing clock to the tuned frequency display driver.
26	CK1		
27	DATA		
28	MUTE	Muting signal output	Goes to the high level during muting output.
29	E2	Regin specification input	See table 1.
30	E1		
31	STOP 3	AM IF signal input	During AM reception, this counts the IF signal and stops auto search.
32	STOP 2	Auto search stop signal input	When the stop 1 input (pin 33) is at the high level and this terminal goes to the high level, auto search is stopped.
33	STOP 1	Scan speed slow input	When the high level is input at this terminal, the auto search speed is cut in half.

Pin No.	Symbol	Terminal	Description
34	DO1	Error output	Charge pump output of the phase detector which constitutes the PLL. High level is output when the divided oscillation frequency is high than the reference frequency. In the opposite case, low level is output. Floating occurs when the frequencies match. The output is applied to the variable capacitor diode in the front end through low pass filter Q703 and Q704. The output from both terminals is the same, but only D01 is used.
35	D02		
36	TEST	Test terminal	Test mode at the high level.
37	FM IN	FM programmable counter input	Connect to the prescaler output (Pin3 of Q701)
38	PSC	Pulse swallow control output	Output to the control the division ratio of the prescaler.
39	AM IN	AM local oscillator signal input	Terminal for input of AM broadcast signal.
40	$\overline{\text{INH}}$	Inhibit input	Operates normally at the high level. Inhibit status at the low level.
41	$\overline{\text{INT}}$	Initialize input	Operates normally at the high level. At the low level, the internal status is initialized.
42	V_{DD}	Power supply	Device power terminal; supplies 5V during the normal operation and 2.5V from the super capacitor (C715) for memory preservation.

table 1.



E1 (Pin 30)	E2 (Pin 29)	Regin	Band	Frequency range	Intermediate frequency	Scan step	Reference frequency
0	1	U.S.A	FM	87.5 ~ 108.0 MHz	+10.7 MHz	100 kHz	25 kHz
			AM1	520 ~ 1 710 kHz	+450 kHz	10kHz	10 kHz
1	1	Europe	AM2	522 ~ 1 710 kHz	+450 kHz	9kHz	9kHz
1	0		FM	87.50 ~ 108.00 MHz	+10.7 MHz	50 kHz	25 kHz
			MW	522 ~ 1611 kHz	+450 kHz	9 kHz	9 kHz
0	0	Japan	LM	153 ~ 360 kHz	+450 kHz	1 kHz	1 kHz
			FM	76.0 ~ 90.0 MHz	-10.7 MHz	100 kHz	25 kHz
			AM	522 ~ 1611 kHz	+450 kHz	9 kHz	9 kHz

2. Auto-Hi-blend circuit

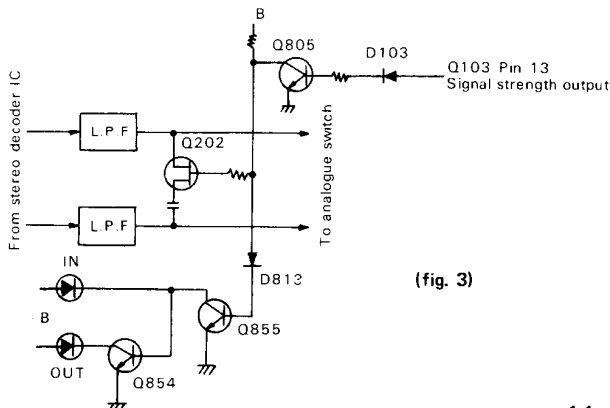


There is a 3-stage IF level detection circuit in the IC of Q103. A direct current voltage approximately proportional to the electrical field intensity is output from output pin 13. This is used to turn off Q805 and turn on Q202 when the electrical field is weak and, making use of the fact that the phase of noise components in the high range of stereo broadcasts is reversed left-right, the left and right channels are mixed in the high range to reduce noise. At the same time, Q855 is turned on and Q854 is turned off, and the IN LED of filter lights on.

3. Auto-search tuning circuit

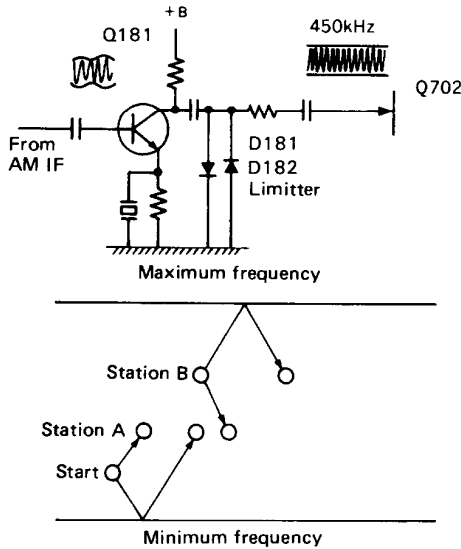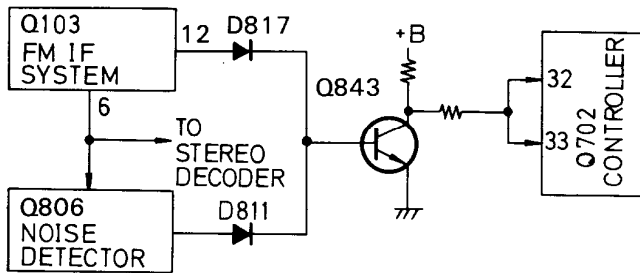

(fig. 4)

4. FM/AM selector circuit

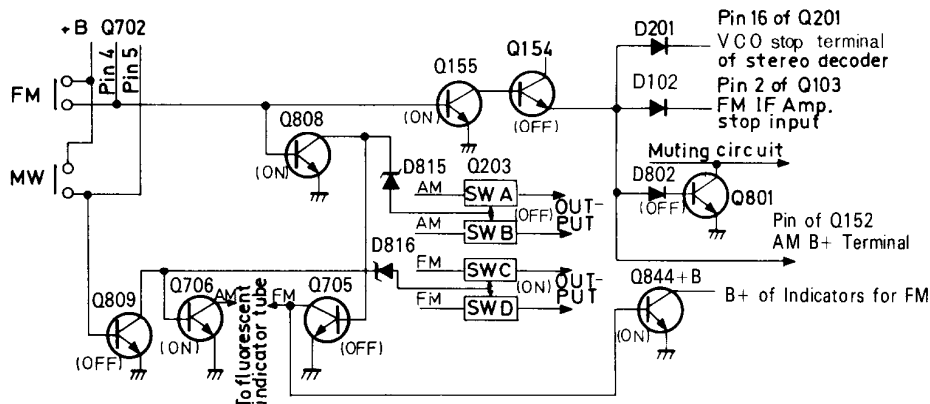

(fig. 5)

The FM/AM selector circuit is shown in the diagram. fig. 5. Pins 4 and 5 of Q702 are of the mutual reset type. For FM, pin 4 is high and pin 5 is low; for AM, pin 4 is low and pin 5 is high. Because pin 5 is high and pin 4 is low during AM reception, Q809 is on and Q808 is off, the analogue switches SW1 and SW2 of Q203 are on while SW3 and SW4 are off, so an AM signal is output. Also, since Q706 goes to on and Q705 to off, the AM, kHz segments of the fluorescent display are turned on. Q844 goes to off so the FM indicators is turned off. At the same time, Q155 is turned

During FM reception, this is operated by the IF level detection and zero point detection circuits included in the FM IF system IC of Q103 and by the noise component detection circuit of Q806. When a station is tuned, the output of all outputs go to the low level so Q843 goes from on to off, causing pins 32 and 33 of the controller IC to go to the high level to complete auto search tuning.

During AM reception, the AM IF signal is taken, amplified by Q181, limited to a certain amplitude by the D181 D182 limiter circuits and auto search tuning is completed when the IF signal becomes 450 ± 3 kHz.

• Manual Tuning

When the UP or DOWN key is pressed, the frequency goes up or down by one step. When either key is held down, the frequency rapidly increases or decreases (scans) and stops when the key is released. When either end of the tuning range is reached, key input will no longer be received and the frequency will stop at the highest or lowest frequency.


• Auto Tuning

When the UP or DOWN key is pressed, scanning begins in the up or down direction, stopping where there is a radio station. Since auto scan is operated by a triangular wave, scanning is begun in the opposite direction the instant either end of the tuning range is reached. Also, if the UP or DOWN key is pressed when the tuned frequency is not at either end of the range, up or down scanning will begin.


off and Q154 turned on, so +B is supplied to the power source terminal of the radio system pin 3 of Q152.

Pin 16 of Q201 goes to the high level, the VCO oscillator stops, and pin 2 of Q103 goes to the high level so the FM IF amp is also switched off. Also, during AM reception, Q801 is turned on so the muting circuit is off. During FM reception, all of the switching transistors mentioned above perform the opposite operations to switch to the FM mode. Figures in parentheses indicate transistor operation during FM reception.

5. PLL tuned circuit

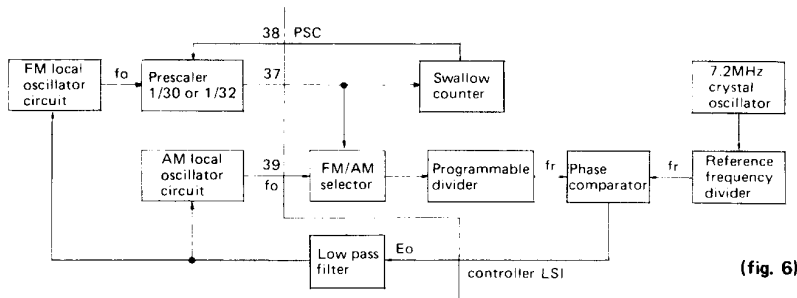

(fig. 6)

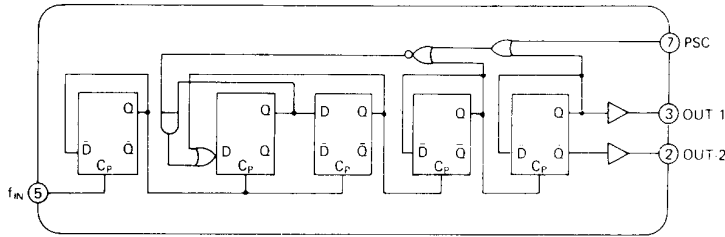

(fig 7) TD6104P (Prescaler)

A block diagram of the tuned circuit of the PLL is shown in figure 6.

Operation during AM reception

The reception frequency is applied to the programmable divider where it is divided to $1/N$ and output as f_v . This is applied to the phase comparator where it is compared with frequency reference f_r (9kHz for G/W model and 10kHz for D model). If f_r and f_v differ, E_o equal to the difference in frequency is output. Since error output E_o is a pulse waveform, it is passed through the low pass filter to change it into DC voltage V_D , which is applied to the variable capacitor diode in the front end to change the reception frequency. This continues until f_v and f_r are the same and $E_o=0$.

Operation during FM reception


The pulse swallow method is used in the prescaler of this unit. In this type of prescaler, a supplementary number

(changed according to the program code input) and the divided reception frequency from the prescaler are combined in the control counter and the prescaler's division factor is switched 1/30 or 1/32 according to external control (1/32 when the PSC terminal is "H" and 1/30 when it is "L").


The station oscillator frequency is applied to the programmable divider, but the programmable divider has an upper frequency limit of only 30MHz, so the pulse swallow-type prescaler, which can be used up to 150 MHz, is inserted for division to $1/N_p$;

The signal is applied to the programmable divider and divided to $1/N$. The result is compared with a 25kHz frequency reference in the phase detector and the error is output as E_o until a match is obtained as in AM operation.

6. Frequency indicator circuit

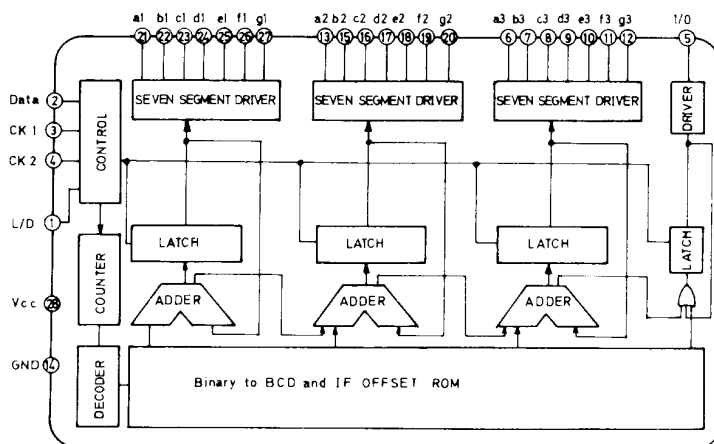


(fig. 8) TD6301AP block diagram

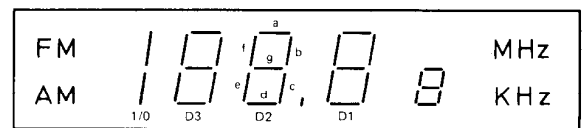

Pin No.	Terminal	Description
1	L/D	Output indication switching input terminal: Fluorescent display at the low level, and LED display at the high level.
2	Data	Tuned frequency data input terminal: Input from the system controller LSI to the serial.
3,4	CK1, CK2	Tuned frequency data input control timing input terminal: Transferred simultaneously with data from the system controller LSI.
5	I/O	Segment drive output terminal: Sets the number of display digit for FM (100MHz) and AM (1,000kHz) reception.
6-12	a3-g3	Seven segment drive output terminals: Sets the number of display digit for FM(10MHz) and AM (100kHz) reception.
13, 15-20	a2-g2	Seven segment drive output terminals: Sets the number of display digit for FM (1MHz) and AM (10kHz) reception
21-27	a1-g1	Seven segment drive output terminals; set the number of display digit for FM (100kHz) and AM (1kHz) reception
14	V _{CC}	Power source terminal
28	Gnd	Ground

7. Muting circuit

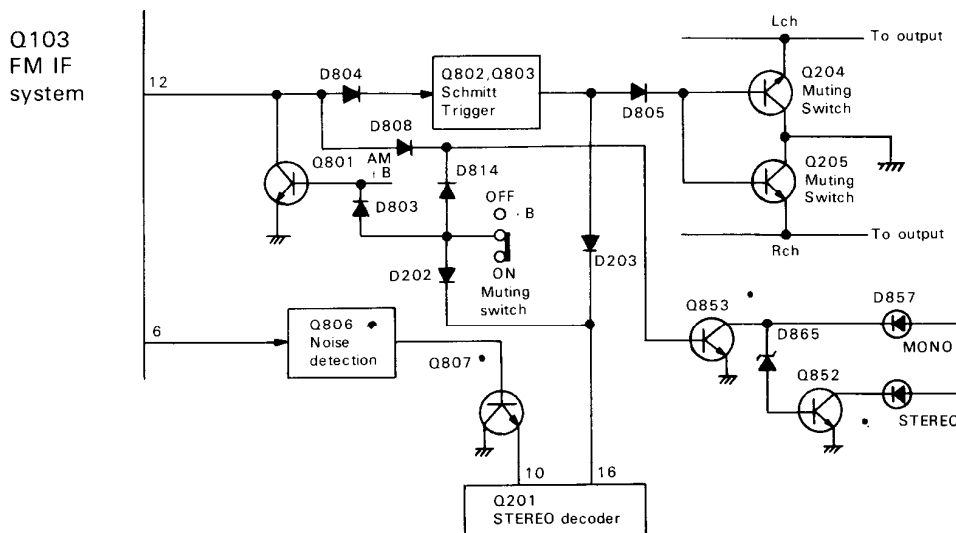

The muting circuit operates in the following cases.

- While pin 28 of the controller IC outputs the high level, Q204 and Q205 are turned on and muting is closed in the following cases: (1) While the manual UP/DOWN switch is being held down, (2) When a station in the memory is recalled, and (3) While a radio station is being received using auto search tuning.
- When an FM station is not being received (and the muting switch is on).

The IF level in the FM IF system (set at R116 so muting is opened at 17 dBf) and zero point detection circuit (tuning point $35 \pm 15\text{kHz}$) are output at pin 12 through


the AND circuit. When a station is tuned, the output goes to the low level.

When output goes to the low level, Q802 is turned off, Q803 is turned on and Q203 and Q204 are turned off, so muting is opened. At the same time, pin 16 of stereo decoder Q201 goes to the low level, so the VCO oscillator starts.

ADJUSTMENT PROCEDURES

FM section

Item	Step	Connection of instrument	FM SG output	Stereo modulator output	Turning dial setting	Output indicator	Adjustment	Adjust for	Remarks
FM RF	1	Fig. 1	—	—	88.0 MHz	Digital DC voltmeter	T1	1.4V	
	2	Fig. 1	107.9 MHz 1 kHz, 75 kHz devi.	—	107.9 MHz	AC voltmeter	C7, C9 (G)	Maximum output	
FM IF	1	Fig. 2	98.1 MHz 1 kHz, 75 kHz devi. 65 dBf	—	98.1 MHz	DC voltmeter	L101 Primary coil	0V	Repeat the steps 1 and 2 until no further adjustment is necessary
	2	Fig. 2		—	98.1 MHz	Distortion analyzer	L101 Secondary coil	Minimum	
VCO		Fig. 3	98.1 MHz No modulation 65 dBf	—	98.1 MHz	Frequency counter	R214	19 kHz ± 19 Hz	Remove the frequency counter after adjustment
	Separation	Fig. 3	98.1 MHz 65 dBf Ext. modulation	L ch. 1 kHz R ch. 1 kHz	98.1 MHz	R ch. AC voltmeter L ch. AC voltmeter	R204	Minimum Minimum	Maximum and same separation
Distortion		Fig. 3	98.1 MHz 65 dBf Ext. modulation	L+R 1 kHz	98.1 MHz	Distortion analyzer	T2	Minimum	
	Muting level	Fig. 2	98.1 MHz 17.2 dBf 1 kHz, 75 kHz devi. 98.1 MHz 16.2 dBf 1 kHz, 75 kHz devi.	—	98.1 MHz	Oscilloscope	R116	Signal output No output	Muting switch to on.

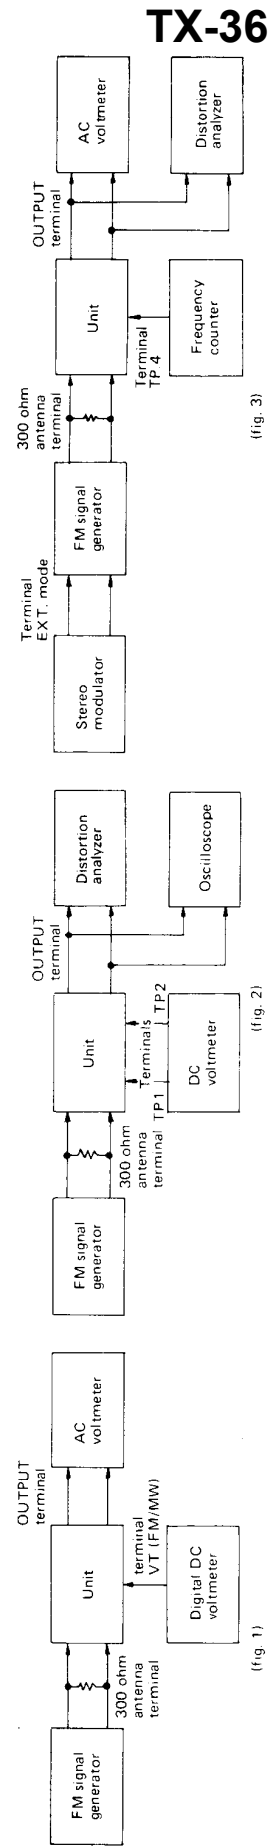


TX-36


AM section

Step	AM SG output	Tuned frequency	Output indicator	Adjustment point	Adjust for	Remarks
1	999kHz (1000kHz) 400Hz 30% mod.	999kHz (1000kHz)	AC voltmeter	X151 L153	Maximum	
2		522kHz (520kHz)	Digital DC voltmeter	L152	1.2V	Repeat the steps 2 and 3 until no further adjustment is necessary.
3		1611kHz (1710kHz)	Digital DC voltmeter	C157	9.5V (10.5V)	
4	603kHz (600kHz) 400Hz 30% mod.	603kHz (600kHz)	AC voltmeter	L151	Maximum	Repeat the steps 4 and 5 until no further adjustment is necessary.
5	1404kHz (1400kHz) 400Hz 30% mod.	1404kHz (1400kHz)	AC voltmeter	C151	Maximum	

() : 120V model

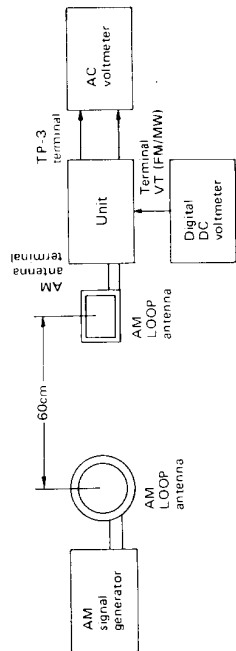

- FM signal strength meter adjustment (Only 120V model)
Set the output of FM SG to 98.1MHz, 1kHz, 75kHz devi and 65dBf. Adjust R123 so that fourth signal indicator lights on.

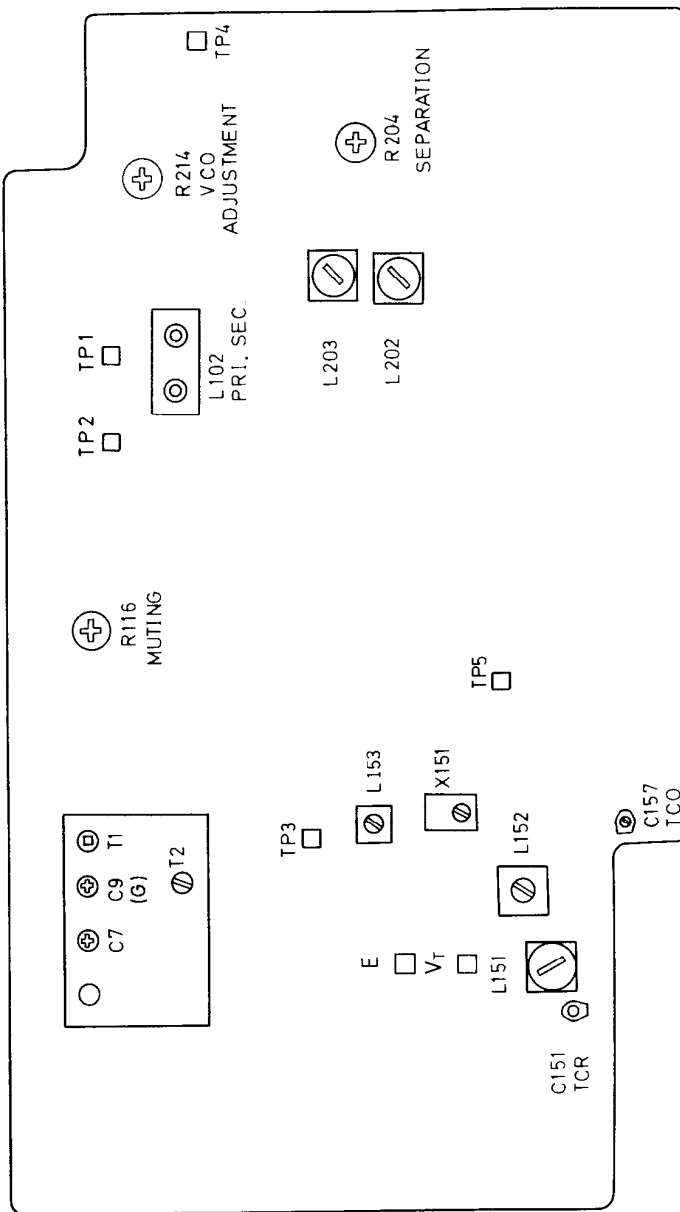

PCB PARTS LIST/VIEW FROM COMPONENT SIDE

FM/AM TUNER PCB VIEW

FM/AM TUNER PC BOARD ASS'Y (NARF-2009c/d/e)

CIRCUIT NO.	PART NO.	DESCRIPTION
	Front end	
TU001	240061	FE349U14 (D/W)
	240059	FE416U33 (G)
	ICs	
Q103	222803	μ PC1267C2 (D/ W)
	222608	μ PC1167C (G)
Q152	222804 or	μ PC1168C or
	222629	μ PC1243C
Q201	222678	μ PC1161C3
Q203	222575 or	TC4066BP or
	222840661	4066B
Q952	222780122	78M12
	Transistors	
Q101	2211723	2SC1923(O)
Q102	2211723	2SC1923(O) (G)
Q151,Q202	2211945 or	2SK 246(GR) or
	2212304	2SK 381(D)
Q807-Q809	2210746	2SC945A (P)
Q141-Q144		

CIRCUIT NO.	PART NO.	DESCRIPTION
	Transistors	
Q153-Q155	2211254,	2SC1815(Y),
Q801-Q804	2211255,	2SC1815(GR),
Q807-Q809	2210746,	2SC945A(P),
Q141-Q144	2212484 or	JC501P or
	2212485	JC501Q
Q204,Q205	2211705	2SD655(E)
Q805, Q806	2211255	2SC1815(GR)
Q951,Q953	2211255	2SC1815(GR)
	Diodes	
D001	2243192,	MTZ8.2B,
	2242866 or	EQA02-08C or
	2239552	RD8.2EB2(G)
D102	223105,	1S1555,
D141,D142	223133,	DS442X,
D201-D203	223145 or	1S2076TD or
D801-D805	223150	US1040
D808-D812		
D814,D817		
D103,D153	4000068	VD1222
D151,D152	223140	KV1236

CIRCUIT NO.	PART NO.	DESCRIPTION
D815,D816 D951	2241291 2239792, 2243012 or 2242741	RD3.3EB1 RD27EB2, EQA02-25B or GZA27X
D952	2239433, 2243133 or 2242835	RD4. 7EB3, MTZ-4.7C or EQA02-05B
D953	2239433, 2243163 or 2242848	RD6.2EB3, MTZ6.2C or EQA02-06E
Transformers		
L102	233270	NF1F-6040
L153	232095	NM1F-6025
Coils		
L001	233312	NFA-3051 (G)
L101	233105 or 233024	NCH-1005 or NCCH-1501
L151	232113	NMA-3049
L152	232084	NMO-2018
L201	233236	NMC-6027 (G)
L202,L203	233291	NMC-5039
L801	231042	NCH-2082
L802	233031	NMC-9-1
Ceramic filters		
X101,X102	3010071	SFE10.7MA5 (D/W)
X101-X103	3010043	SFE10.7MM (G)
X151	3010075	SFL450B3
Capacitors		
C108, C110	352780109	1 μ F, 50V, Elect.
C111	352784799	0.47 μ F, 50V, Elect.
C117	352741009	10 μ F, 16V, Elect.
C142	352780339	3.3 μ F, 50V, Elect.
C151, C157	3060010	NTC20P09, Trimmer
C155	370135114	510pF \pm 5%, 100V, APS
C163	352741019	100 μ F, 16V, Elect.
C167	352741009	10 μ F, 16V, Elect..
C168	352750479	4.7 μ F, 25V, Elect.
C169	352741009	10 μ F, 16V, Elect.
C174	352784799	0.47 μ F, 50V, Elect.
C202	352750479	4.7 μ F, 25V, Elect.
C208	352744719	470 μ F, 16V, Elect.
C209, C210	352741009	10 μ F, 16V, Elect.
C213	370134714	470pF \pm 5%, 100V, APS
C214	352780109	1 μ F, 50V, Elect.
C215	352780339	3.3 μ F, 50V, Elect.
C216	352782299	0.22 μ F, 50V, Elect.
C218, C219	352780109	1 μ F, 50V, Elect.
C220	352724719	470 μ F, 6.3V, Elect.
C801	352780109	1 μ F, 50V, Elect.
C802	352780229	2.2 μ F, 50V, Elect.
C806	352783399	0.33 μ F, 50V, Elect.
C809	352780229	2.2 μ F, 50V, Elect.
C951	352780109	1 μ F, 50V, Elect.
C954	352751019	100 μ F, 25V, Elect.
C956	352724719	470 μ F, 6.3V, Elect.
C958	352780109	1 μ F, 50V, Elect.
C970	352751029	1,000 μ F, 25V, Elect.
Resistors		
R116	5215003	N08HR20KBC, Semi-fixed
R123	5215038	N08HR500K BA, Semi-fixed (D/W)
R204	5215048	N08HR200KBC, Semi-fixed
R214	5215044	N08HR5KBC, Semi-fixed
R952	441721204	12ohm, 2W, Metal oxide film
R955	441523904	39ohm, 1/2W, Metal oxide film
Terminal		
P901	25060082	NTM-4PDMN26, Antenna (D/W)
	25060083	NTM-5PDMN27, Antenna (G)
Switch		
S001	25035407	NPS-122-L371, Antenna attenuator (G)


Note: (D): Only 120V model
(G): Only 220V model
(W): Only 120/220V model

SCHEMATIC DIAGRAM

-G/Q MODELS-

NOTES

- ALL RESISTORS ARE IN OHMS UNLESS OTHERWISE NOTED.
- ALL CAPACITORS ARE IN μ F UNLESS OTHERWISE NOTED.
- ELECTROLYTIC CAPACITORS ARE IN μ F/WV.
- VOLTAGE (MEASURED WITH 1V AC INPUT SIGNAL) IS SUBJECT TO CHANGE FOR IMPROVEMENT.
- THE COMPONENTS IDENTIFIED BY MARK Δ ARE CRITICAL FOR SAFETY.

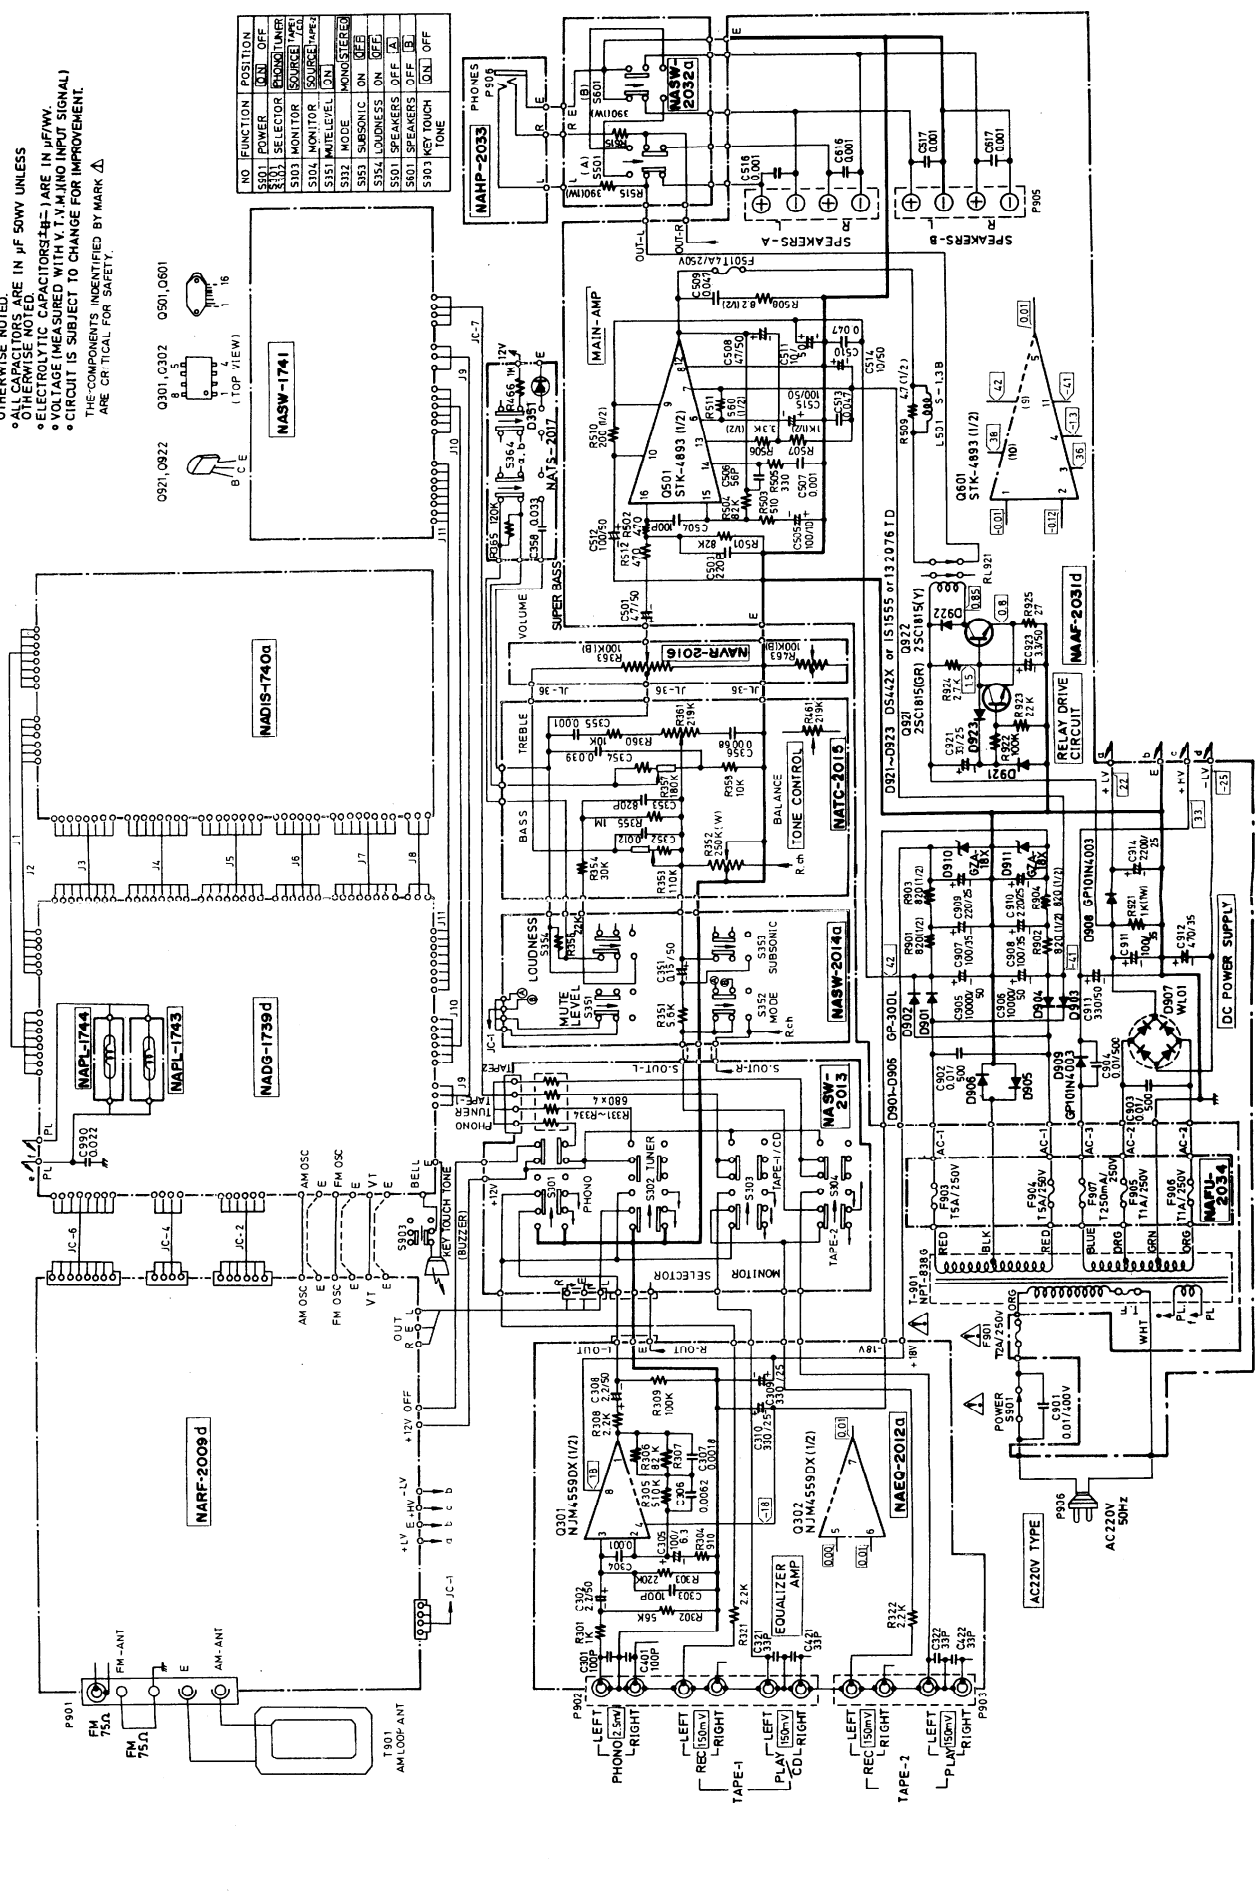

A

B

C

D

E

F

G

SCHEMATIC DIAGRAM

- D/W MODELS -

NOTES

- *ALL RESISTORS ARE IN OHMS UNLESS OTHERWISE NOTED.
- *ALL CAPACITORS ARE IN P.F. UNLESS OTHERWISE NOTED.
- *ELECTROLYTIC CAPACITORS ARE IN μ F UNLESS OTHERWISE NOTED.
- *VOLTAGE MEASURED WITH 1.1V R.M.S. INPUT SIGNAL.
- *CIRCUIT IS SUBJECT TO CHANGE FOR IMPROVEMENT.
- THE COMPONENTS IDENTIFIED BY MARK Δ ARE CRITICAL FOR SAFETY.

The schematic diagram illustrates the internal circuitry of an audio receiver, organized into sections A through G. It features several integrated circuits (ICs) and discrete components:

- Section A:** Includes the antenna input (P901) with 300Ω and 75Ω resistors, and the AM loop antenna (T801).
- Section B:** Contains the tuner section with ICs NAF-174A, NAF-174B, NAF-174C, and NAF-174D, along with various capacitors and resistors for frequency selection.
- Section C:** Shows the detector and amplifier stages, including the NAF-2013 IC and associated components like the volume knob (V1) and tone controls.
- Section D:** Details the equalizer and amplifier stages, featuring ICs NAF-2014, NAF-2015, NAF-2016, NAF-2017, NAF-2018, NAF-2019, NAF-2020, NAF-2021, NAF-2022, NAF-2023, NAF-2024, NAF-2025, NAF-2026, NAF-2027, NAF-2028, NAF-2029, NAF-2030, NAF-2031, NAF-2032, NAF-2033, NAF-2034, NAF-2035, NAF-2036, NAF-2037, NAF-2038, NAF-2039, NAF-2040, NAF-2041, NAF-2042, NAF-2043, NAF-2044, NAF-2045, NAF-2046, NAF-2047, NAF-2048, NAF-2049, NAF-2050, NAF-2051, NAF-2052, NAF-2053, NAF-2054, NAF-2055, NAF-2056, NAF-2057, NAF-2058, NAF-2059, NAF-2060, NAF-2061, NAF-2062, NAF-2063, NAF-2064, NAF-2065, NAF-2066, NAF-2067, NAF-2068, NAF-2069, NAF-2070, NAF-2071, NAF-2072, NAF-2073, NAF-2074, NAF-2075, NAF-2076, NAF-2077, NAF-2078, NAF-2079, NAF-2080, NAF-2081, NAF-2082, NAF-2083, NAF-2084, NAF-2085, NAF-2086, NAF-2087, NAF-2088, NAF-2089, NAF-2090, NAF-2091, NAF-2092, NAF-2093, NAF-2094, NAF-2095, NAF-2096, NAF-2097, NAF-2098, NAF-2099, NAF-2100.
- Section E:** Shows the relay drive circuit (NAAF-2031C) and the DC power supply section, including the transformer (T-901), diodes (D901-D905), and capacitors (C901-C905).
- Section F:** Contains the main amplifier and speaker output stages, including the NAF-2032 IC and the speaker drivers (SPEAKERS-A and SPEAKERS-B).
- Section G:** Includes the phone input section (NAHP-2003) and the tape input section (NAAF-2031E).

Key components and their values are specified throughout the diagram, such as resistors (R101-R905) and capacitors (C101-C905). The diagram also shows various control points like volume (V1), tone (T1), and balance (B1) knobs, and switches for power, mute, and tape.

ONKYO CORPORATION

PCB PARTS LIST/VIEW FROM COMPONENT SIDE

DIGITAL CIRCUIT PCB VIEW

1

2

TUNER SWITCH PC BOARD ASS'Y (NASW-1741)

CIRCUIT NO.	PARTS NO.	DESCRIPTION
	LEDs	
D759	225126	GL3PR1
D865, D866	225137	SEL2413E
D867, D868	225142	SEL2913K
	Switches	
S751-S765	25035275	NPS-111-S239
	Spacer	
	27270103	
	Holders	
	27190224	LED

DE-EMPHASIS SWITCH PC BOARD ASS'Y (NASW-1737) (Only W model)

CIRCUIT NO.	PARTS NO.	DESCRIPTION
S201	250142	NSS-2225, De-emphasis switch


BAND SELECTOR SWITCH PC BOARD ASS'Y (NASW-1742) (Only W model)

CIRCUIT NO.	PARTS NO.	DESCRIPTION
S701	250142	NSS-2225, Switch


DIAL PLATE ILLUMINATION LAMP PC BOARD ASS'Y (NAPL-1743/1744)

CIRCUIT NO.	PARTS NO.	DESCRIPTION
PL901	210162	PL6. 3V0. 25A, Lamp

FLUORESCENT INDICATOR TUBE PCB VIEW

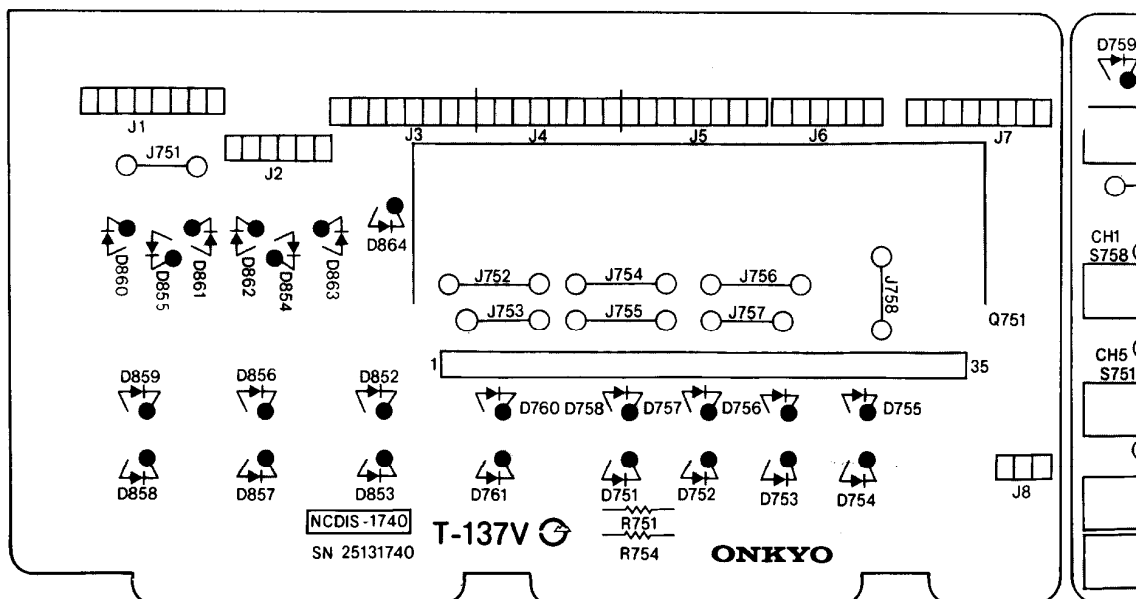


Notes: (D): Only 120V model
 (G): Only 220V model
 (W): Only 120/220V model
 (Q): Only 240V model

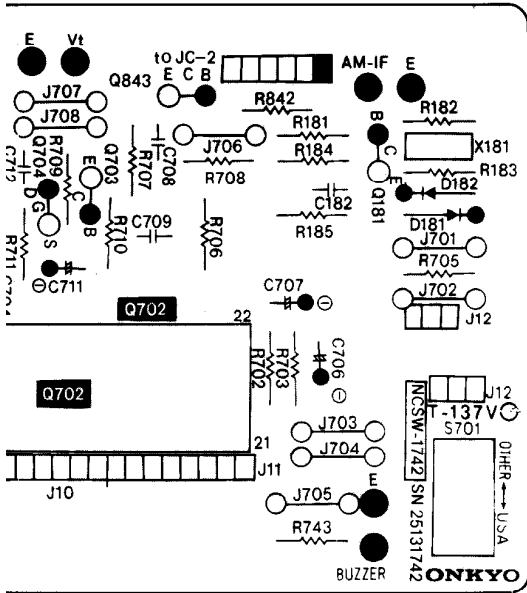

BUZZER PC BOARD PARTS LIST

CIRCUIT NO.	PARTS NO.	DESCRIPTION
	241048	PKM24-4A0, Buzzer

SWITCH PCB VIEW

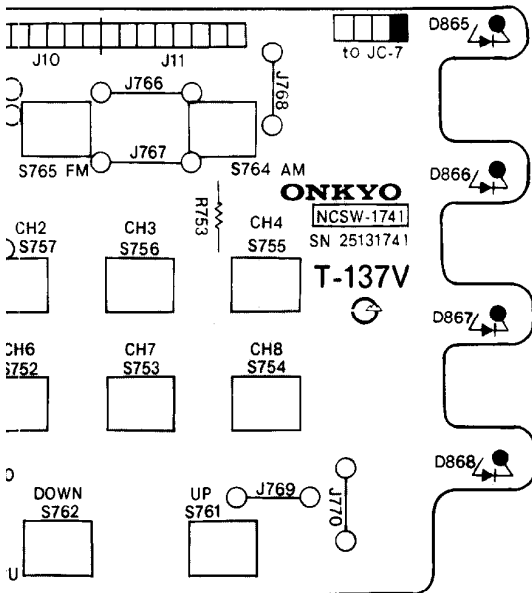


DIGITAL CIRCUIT PC BOARD ASS'Y (NADG-1739c/d/e)

CIRCUIT NO.	PART NO.	DESCRIPTION
ICs		
Q701	222675	TD6104P, Prescaler
Q702	222674	TC9147P, PLL synthesizer/controller
Q710	222673	TD6301AP, Static frequency indicator driver
Q131	222666	LB1403
Transistors		
Q703	2211255	2SC1815 (GR)
Q704	2212294	2SK108 (D)
Q705, Q706	2211254,	2SC1815 (Y),
Q855, Q843	2211255 or	2SC1815 (GR) or
Q851, Q853,	2210746	2SC945A (P)
Q844	2211256	2SC1815 (BL)
Q852, Q854	2211256	2SC1815 (BL)
Q707, Q708	2211255	2SC1815 (GR) (G/Q/W)
Q709	2211455	2SA1015 (GR) (G/Q/W)
Q181	2210823	2SC1675 (L-1)
Diodes		
D181, D182	223105,	1S1555,
D701-D704	223133 or	DS442X or
D707, D708	223145	1S2076TD
D813		
D705, D706	223105,	1S1555,
	223133 or	DS442X or
	223145	1S2076TD (G/Q/W)
D851, D865	224178,	05Z9. 1Y,
	2241052 or	GZA9. 1EB3 or
	2239573	RD9. 1EB3
D954	2239433	RD4. 7EB3
Ceramic filter		
X181	3010076	BFU450C
X'tal		
X701	3010073	XTL-7.2M <i>TX61</i>
Capacitors		
C705	352734709	47µF, 10V, Elect.
C706	352780109	1µF, 50V, Elect.
C707	352780229	2.2µF, 50V, Elect.
C711	395160107	1µF, 35V, Tantalum
C713	352784799	0.47µF, 50V, Elect.
C715	3020018	0.047F, 5V, Super
C718	352722229	2,200µF, 6.3V, Elect.
C719	352751009	10µF, 25V, Elect.
C841	352780339	3.3µF, 50V, Elect.
C131, C132	352740109	10µF, 16V, Elect.
Resistors		
R721-R729	49121333509	33kohm×9, 1/8W, Network
R730-R742	49121333513	33kohm×13, 1/8W, Network
R957	441523904	39ohm, 1/2W, Metal oxide film
R133	441526804	68ohm, 1/2W, Metal oxide film



FLUORESCENT INDICATOR TUBE PC BOARD ASS'Y (NADIS-1740a)

CIRCUIT NO.	PART NO.	DESCRIPTION
Fluorescent indicator tube		
Q751	212016	FIP7B8CS
LEDs		
D751-D758	225142	SEL2913K
D761, D853		
D760, D852	225137	SEL2413E
D859-D863		
D856-D858	225142	SEL2913K
D864	225141	SEL2213C
Holders		
	27190222	LED16
	27190230	LED5
Cushion		
	28140513	40×10×8mm

SCHEMATIC DIAGRAM
- G/Q MODELS -


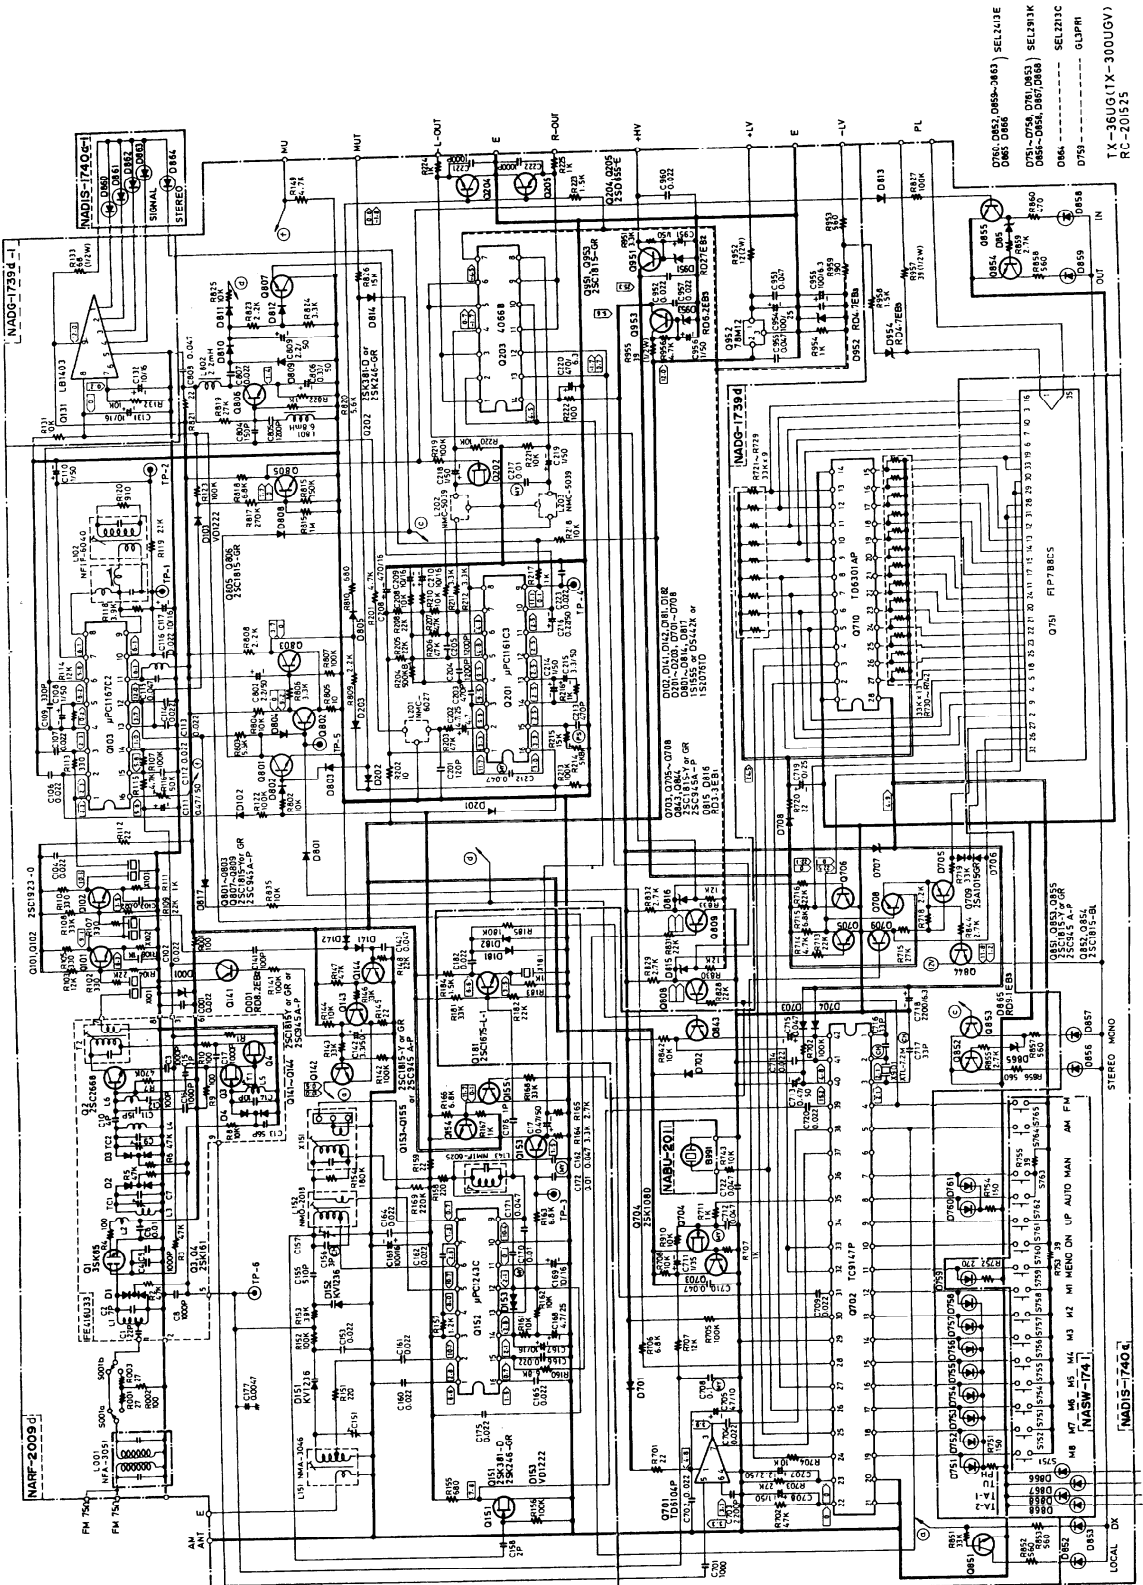


- NOTES**
- ALL RESISTORS ARE IN OHMS UNLESS OTHERWISE NOTED.
 - ALL CAPACITORS ARE IN P.F. UNLESS OTHERWISE NOTED.
 - ELECTROLYTIC CAPACITORS ARE IN μ F UNLESS OTHERWISE NOTED.
 - VOLTAGE UNLESS OTHERWISE NOTED WITH V.T.V.M. (NO INPUT SIGNAL)
 - CIRCUIT IS SUBJECT TO CHANGE FOR IMPROVEMENT.

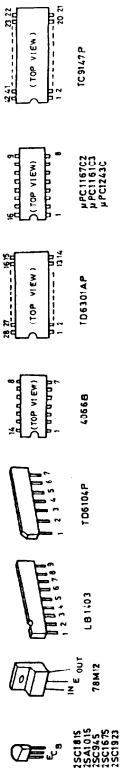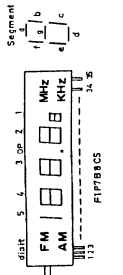


SCHEMATIC DIAGRAM

- 120V MODEL -

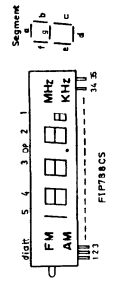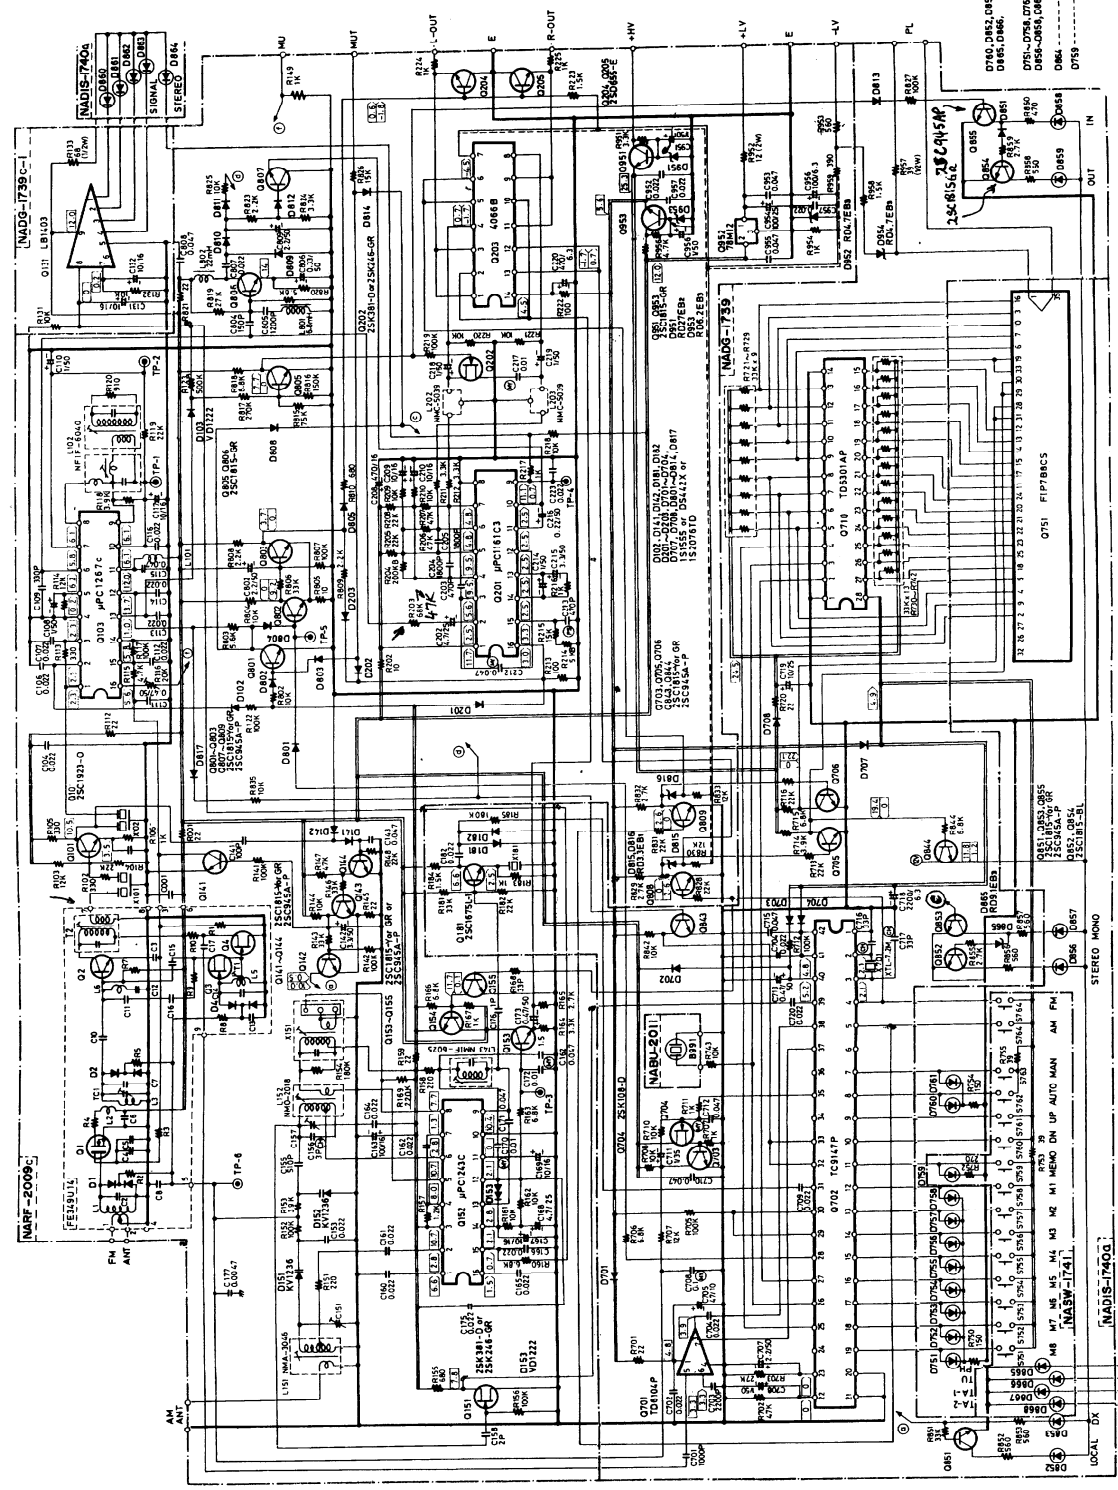


- NOTES
- ALL RESISTORS ARE IN OHMS UNLESS OTHERWISE NOTED.
 - ALL CAPACITORS ARE IN P.P.S. UNLESS OTHERWISE NOTED.
 - VOLTAGE MEASURED WITH V.T.V.M. (NO INPUT SIGNAL).
 - CIRCUIT IS SUBJECT TO CHANGE FOR IMPROVEMENT.

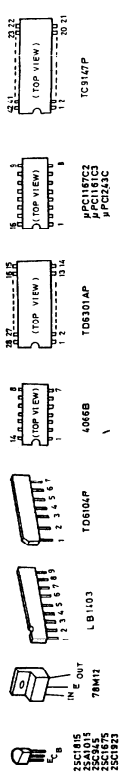


PCB PARTS LIST/VIEW FROM COMPONENT SIDE

POWER SUPPLY AND AMPLIFIER PCB VIEW

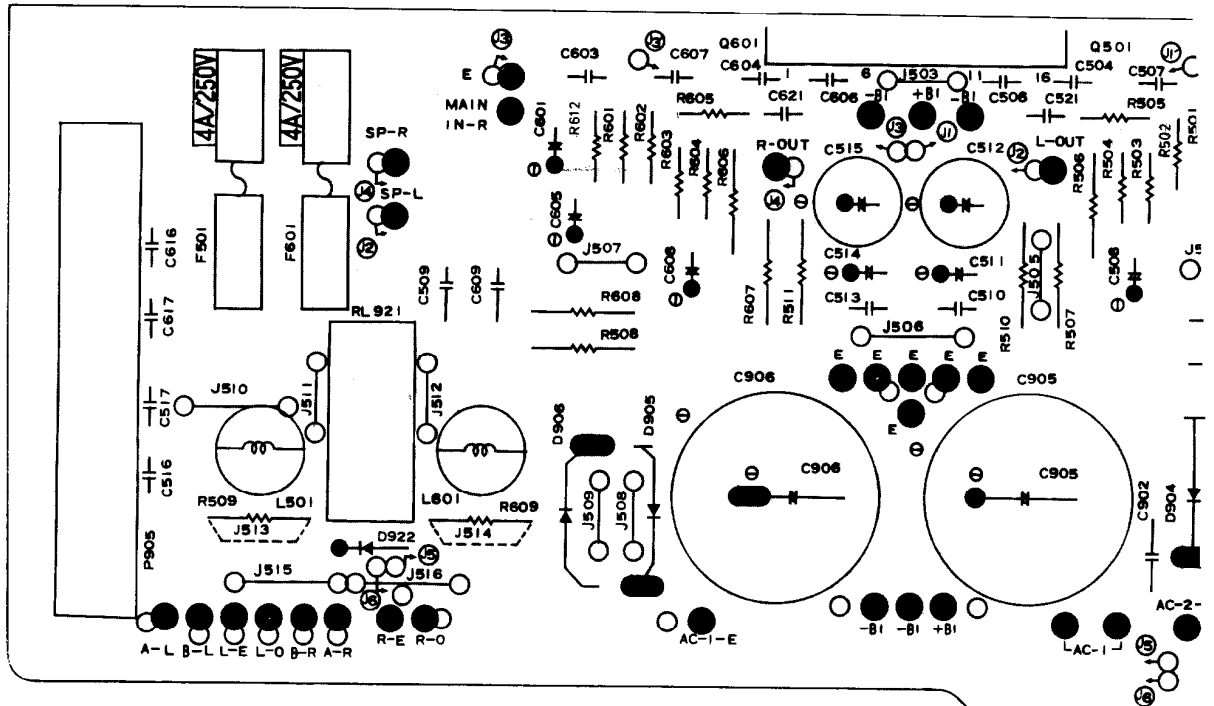


SPEAKER SELECTOR

SWITCH PCB VIEW

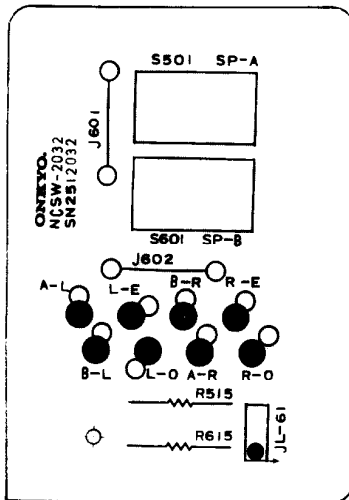

FUSE PCB VIEW

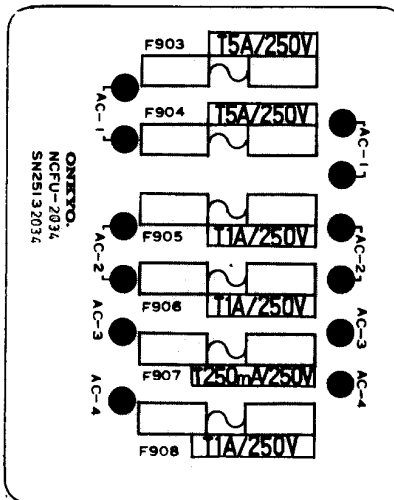

SPEAKER SELECTOR SWITCH PC BOARD ASS'Y (NASW-2032a)

CIRCUIT NO.	PART NO.	DESCRIPTION
	Resistors	
R515, R615	441523914	390ohm, 1/2W, Metal oxide film
	Switches	
S501, S601	25035397	NPS-222-L361

HEADPHONE TERMINAL PC BOARD ASS'Y (NAHP-2033)

CIRCUIT NO.	PARTS NO.	DESCRIPTION
P906	25045138	HLJ0520-01-010

FUSE TERMINAL PC BOARD ASS'Y (NAFU-2034)

CIRCUIT NO.	PART NO.	DESCRIPTION
	Fuseholders	
	25050065	YSH403T
	Fuses	
△ F903, F904	252078	5A-SE-EAK
△ F905, F906	252070	1A-SE-EAK
△ F907	252088	250mA-SE-EAWK
		(Only 220/240V models)

Note: (D): Only 120V model
 (G): Only 220V model
 (W): Only 120/220V model
 (Q): Only 240V model


**POWER SUPPLY AND POWER AMPLIFIER CIRCUIT
 PC BOARD ASS'Y (NAAF-2031c/d/e)**

CIRCUIT NO.	PART NO.	DESCRIPTION
	IC	
Q501, Q601	222036	STK-4893, Power amplifier
	Transistors	
Q921	2211255	2SC1815 (GR)
Q922	2211254	2SC1815 (Y)
	Diodes	
D901-D906	223863	GP30DL
D907	223862	WL-01
D908, D909	223880	GP101N4003
D910, D911	2241191, 2241192 or 2243273	GZA-18X GZA-18Y or MTZ-18C
D921-D923	223145, 223133 223105 or 223150	1S2076TD, DS442X 1S1555 or US1040
	Coils	
L501, L601	231001	S1. 3B (G/Q)
	Capacitors	
C501, C601	352780479	4.7 μ F, 50V, Elect.
C505, C605	352731019	100 μ F, 10V, Elect.
C508, C608	352784709	47 μ F, 50V, Elect.
C511, C514	352781009	10 μ F, 50V, Elect.
C512, C515	352781019	100 μ F, 50V, Elect.
C905, C906	3504178	10.000 μ F, 50V, Elect.
C907, C908	352761019	100 μ F, 35V, Elect.
C909, C910	352752219	220 μ F, 25V, Elect.
C911	352761019	100 μ F, 35V, Elect.
C912	352764719	470 μ F, 35V, Elect.
C913	352783319	330 μ F, 50V, Elect.
C914	352752229	2.200 μ F, 25V, Elect.
C921	352753309	33 μ F, 25V, Elect.
C923	352780339	3.3 μ F, 50V, Elect.
	Resistors	
R506, R606	441523324	3.3kohm, 1/2W, Metal oxide film
R507, R607	441521024	1kohm, 1/2W, Metal oxide film
R508, R608	441520824	8.2ohm, 1/2W, Metal oxide film
R509, R609	441520474	4.7ohm, 1/2W, Metal oxide film (G/Q)
R510	441522014	200ohm, 1/2W, Metal oxide film
R511	441525614	560ohm, 1/2W, Metal oxide film
R901-R904	441528214	820ohm, 1/2W, Metal oxide film
R905	431523355	3.3Mohm, 1/2W, Solid (D)
R921	441621024	1kohm, 1W, Metal oxide film
	Relay	
RL921	25065134	NRL-2P5A-DC24-07
	Terminal	
P905	25060058	NTM-8PDML25, Speaker
	Fuseholders	
△ F901a, F501a F601a F902a F501a, F601a	250113 25050065 25050065	SN5051 (D/W) YSH403T (G/Q/W) YSH403T (G/Q)
	Fuses	
△ F501, F601	252059 252077	4A (SS-2), Speaker (D/W) 4A-SE-EAK, Speaker (G/Q)
△ F901	252049	4A (ST-6), Primary (D/W)
△ F902	252074	2A-SE-EAK, Primary (G/Q/W)

NOTE: THE COMPONENTS IDENTIFIED BY MARK
 △ ARE CRITICAL FOR RISK OF FIRE AND
 ELECTRIC SHOCK. REPLACE ONLY WITH
 PARTS NUMBER SPECIFIED.

SCHEMATIC DIAGRAM

-120/220V MODEL-

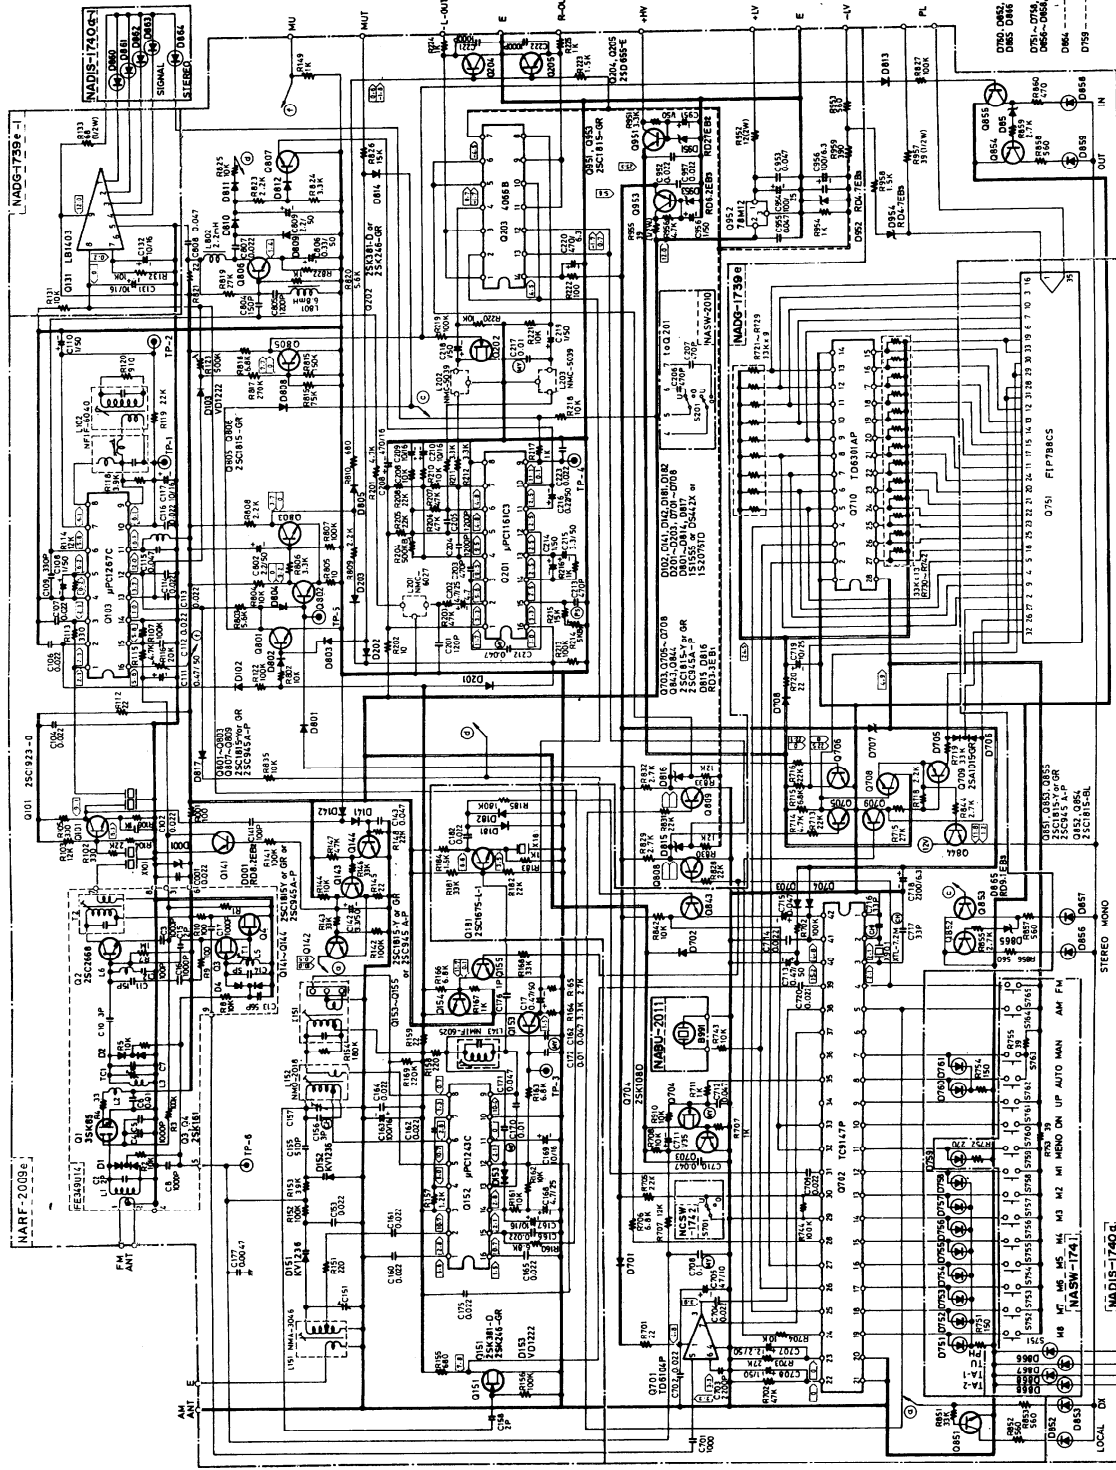

NOTES

- ALL RESISTORS ARE IN OHMS (AWATT UNLESS OTHERWISE NOTED).
- ALL CAPACITORS ARE IN P.F. 50V UNLESS OTHERWISE NOTED.
- ELECTROLYTIC CAPACITORS (—) ARE IN μ F/WV.
- VOLTAGE (MEASURED WITH V.T.V.M.) (NO INPUT SIGNAL).
- CIRCUIT IS SUBJECT TO CHANGE FOR IMPROVEMENT.

Component List:

- 0101 25C923-0
- 0102 25C924-0
- 0103 25C925-0
- 0104 25C926-0
- 0105 25C927-0
- 0106 25C928-0
- 0107 25C929-0
- 0108 25C930-0
- 0109 25C931-0
- 0110 25C932-0
- 0111 25C933-0
- 0112 25C934-0
- 0113 25C935-0
- 0114 25C936-0
- 0115 25C937-0
- 0116 25C938-0
- 0117 25C939-0
- 0118 25C940-0
- 0119 25C941-0
- 0120 25C942-0

Other Components:


- 0121 25C943-0
- 0122 25C944-0
- 0123 25C945-0
- 0124 25C946-0
- 0125 25C947-0
- 0126 25C948-0
- 0127 25C949-0
- 0128 25C950-0
- 0129 25C951-0
- 0130 25C952-0
- 0131 25C953-0
- 0132 25C954-0
- 0133 25C955-0
- 0134 25C956-0
- 0135 25C957-0
- 0136 25C958-0
- 0137 25C959-0
- 0138 25C960-0
- 0139 25C961-0
- 0140 25C962-0
- 0141 25C963-0
- 0142 25C964-0
- 0143 25C965-0
- 0144 25C966-0
- 0145 25C967-0
- 0146 25C968-0
- 0147 25C969-0
- 0148 25C970-0
- 0149 25C971-0
- 0150 25C972-0
- 0151 25C973-0
- 0152 25C974-0
- 0153 25C975-0
- 0154 25C976-0
- 0155 25C977-0
- 0156 25C978-0
- 0157 25C979-0
- 0158 25C980-0
- 0159 25C981-0
- 0160 25C982-0
- 0161 25C983-0
- 0162 25C984-0
- 0163 25C985-0
- 0164 25C986-0
- 0165 25C987-0
- 0166 25C988-0
- 0167 25C989-0
- 0168 25C990-0
- 0169 25C991-0
- 0170 25C992-0
- 0171 25C993-0
- 0172 25C994-0
- 0173 25C995-0
- 0174 25C996-0
- 0175 25C997-0
- 0176 25C998-0
- 0177 25C999-0
- 0178 25C1000-0

Other Parts:

- 0179 25C1001-0
- 0180 25C1002-0
- 0181 25C1003-0
- 0182 25C1004-0
- 0183 25C1005-0
- 0184 25C1006-0
- 0185 25C1007-0
- 0186 25C1008-0
- 0187 25C1009-0
- 0188 25C1010-0
- 0189 25C1011-0
- 0190 25C1012-0
- 0191 25C1013-0
- 0192 25C1014-0
- 0193 25C1015-0
- 0194 25C1016-0
- 0195 25C1017-0
- 0196 25C1018-0
- 0197 25C1019-0
- 0198 25C1020-0
- 0199 25C1021-0
- 0200 25C1022-0
- 0201 25C1023-0
- 0202 25C1024-0
- 0203 25C1025-0
- 0204 25C1026-0
- 0205 25C1027-0
- 0206 25C1028-0
- 0207 25C1029-0
- 0208 25C1030-0
- 0209 25C1031-0
- 0210 25C1032-0
- 0211 25C1033-0
- 0212 25C1034-0
- 0213 25C1035-0
- 0214 25C1036-0
- 0215 25C1037-0
- 0216 25C1038-0
- 0217 25C1039-0
- 0218 25C1040-0
- 0219 25C1041-0
- 0220 25C1042-0
- 0221 25C1043-0
- 0222 25C1044-0
- 0223 25C1045-0
- 0224 25C1046-0
- 0225 25C1047-0
- 0226 25C1048-0
- 0227 25C1049-0
- 0228 25C1050-0
- 0229 25C1051-0
- 0230 25C1052-0
- 0231 25C1053-0
- 0232 25C1054-0
- 0233 25C1055-0
- 0234 25C1056-0
- 0235 25C1057-0
- 0236 25C1058-0
- 0237 25C1059-0
- 0238 25C1060-0
- 0239 25C1061-0
- 0240 25C1062-0
- 0241 25C1063-0
- 0242 25C1064-0
- 0243 25C1065-0
- 0244 25C1066-0
- 0245 25C1067-0
- 0246 25C1068-0
- 0247 25C1069-0
- 0248 25C1070-0
- 0249 25C1071-0
- 0250 25C1072-0
- 0251 25C1073-0
- 0252 25C1074-0
- 0253 25C1075-0
- 0254 25C1076-0
- 0255 25C1077-0
- 0256 25C1078-0
- 0257 25C1079-0
- 0258 25C1080-0
- 0259 25C1081-0
- 0260 25C1082-0
- 0261 25C1083-0
- 0262 25C1084-0
- 0263 25C1085-0
- 0264 25C1086-0
- 0265 25C1087-0
- 0266 25C1088-0
- 0267 25C1089-0
- 0268 25C1090-0
- 0269 25C1091-0
- 0270 25C1092-0
- 0271 25C1093-0
- 0272 25C1094-0
- 0273 25C1095-0
- 0274 25C1096-0
- 0275 25C1097-0
- 0276 25C1098-0
- 0277 25C1099-0
- 0278 25C1100-0
- 0279 25C1101-0
- 0280 25C1102-0
- 0281 25C1103-0
- 0282 25C1104-0
- 0283 25C1105-0
- 0284 25C1106-0
- 0285 25C1107-0
- 0286 25C1108-0
- 0287 25C1109-0
- 0288 25C1110-0
- 0289 25C1111-0
- 0290 25C1112-0
- 0291 25C1113-0
- 0292 25C1114-0
- 0293 25C1115-0
- 0294 25C1116-0
- 0295 25C1117-0
- 0296 25C1118-0
- 0297 25C1119-0
- 0298 25C1120-0
- 0299 25C1121-0
- 0300 25C1122-0
- 0301 25C1123-0
- 0302 25C1124-0
- 0303 25C1125-0
- 0304 25C1126-0
- 0305 25C1127-0
- 0306 25C1128-0
- 0307 25C1129-0
- 0308 25C1130-0
- 0309 25C1131-0
- 0310 25C1132-0
- 0311 25C1133-0
- 0312 25C1134-0
- 0313 25C1135-0
- 0314 25C1136-0
- 0315 25C1137-0
- 0316 25C1138-0
- 0317 25C1139-0
- 0318 25C1140-0
- 0319 25C1141-0
- 0320 25C1142-0
- 0321 25C1143-0
- 0322 25C1144-0
- 0323 25C1145-0
- 0324 25C1146-0
- 0325 25C1147-0
- 0326 25C1148-0
- 0327 25C1149-0
- 0328 25C1150-0
- 0329 25C1151-0
- 0330 25C1152-0
- 0331 25C1153-0
- 0332 25C1154-0
- 0333 25C1155-0
- 0334 25C1156-0
- 0335 25C1157-0
- 0336 25C1158-0
- 0337 25C1159-0
- 0338 25C1160-0
- 0339 25C1161-0
- 0340 25C1162-0
- 0341 25C1163-0
- 0342 25C1164-0
- 0343 25C1165-0
- 0344 25C1166-0
- 0345 25C1167-0
- 0346 25C1168-0
- 0347 25C1169-0
- 0348 25C1170-0
- 0349 25C1171-0
- 0350 25C1172-0
- 0351 25C1173-0
- 0352 25C1174-0
- 0353 25C1175-0
- 0354 25C1176-0
- 0355 25C1177-0
- 0356 25C1178-0
- 0357 25C1179-0
- 0358 25C1180-0
- 0359 25C1181-0
- 0360 25C1182-0
- 0361 25C1183-0
- 0362 25C1184-0
- 0363 25C1185-0
- 0364 25C1186-0
- 0365 25C1187-0
- 0366 25C1188-0
- 0367 25C1189-0
- 0368 25C1190-0
- 0369 25C1191-0
- 0370 25C1192-0
- 0371 25C1193-0
- 0372 25C1194-0
- 0373 25C1195-0
- 0374 25C1196-0
- 0375 25C1197-0
- 0376 25C1198-0
- 0377 25C1199-0
- 0378 25C1200-0
- 0379 25C1201-0
- 0380 25C1202-0
- 0381 25C1203-0
- 0382 25C1204-0
- 0383 25C1205-0
- 0384 25C1206-0
- 0385 25C1207-0
- 0386 25C1208-0
- 0387 25C1209-0
- 0388 25C1210-0
- 0389 25C1211-0
- 0390 25C1212-0
- 0391 25C1213-0
- 0392 25C1214-0
- 0393 25C1215-0
- 0394 25C1216-0
- 0395 25C1217-0
- 0396 25C1218-0
- 0397 25C1219-0
- 0398 25C1220-0
- 0399 25C1221-0
- 0400 25C1222-0
- 0401 25C1223-0
- 0402 25C1224-0
- 0403 25C1225-0
- 0404 25C1226-0
- 0405 25C1227-0
- 0406 25C1228-0
- 0407 25C1229-0
- 0408 25C1230-0
- 0409 25C1231-0
- 0410 25C1232-0
- 0411 25C1233-0
- 0412 25C1234-0
- 0413 25C1235-0
- 0414 25C1236-0
- 0415 25C1237-0
- 0416 25C1238-0
- 0417 25C1239-0
- 0418 25C1240-0
- 0419 25C1241-0
- 0420 25C1242-0
- 0421 25C1243-0
- 0422 25C1244-0
- 0423 25C1245-0
- 0424 25C1246-0
- 0425 25C1247-0
- 0426 25C1248-0
- 0427 25C1249-0
- 0428 25C1250-0
- 0429 25C1251-0
- 0430 25C1252-0
- 0431 25C1253-0
- 0432 25C1254-0
- 0433 25C1255-0
- 0434 25C1256-0
- 0435 25C1257-0
- 0436 25C1258-0
- 0437 25C1259-0
- 0438 25C1260-0
- 0439 25C1261-0
- 0440 25C1262-0
- 0441 25C1263-0
- 0442 25C1264-0
- 0443 25C1265-0
- 0444 25C1266-0
- 0445 25C1267-0
- 0446 25C1268-0
- 0447 25C1269-0
- 0448 25C1270-0
- 0449 25C1271-0
- 0450 25C1272-0
- 0451 25C1273-0
- 0452 25C1274-0
- 0453 25C1275-0
- 0454 25C1276-0
- 0455 25C1277-0
- 0456 25C1278-0
- 0457 25C1279-0
- 0458 25C1280-0
- 0459 25C1281-0
- 0460 25C1282-0
- 0461 25C1283-0
- 0462 25C1284-0
- 0463 25C1285-0
- 0464 25C1286-0
- 0465 25C1287-0
- 0466 25C1288-0
- 0467 25C1289-0
- 0468 25C1290-0
- 0469 25C1291-0
- 0470 25C1292-0
- 0471 25C1293-0
- 0472 25C1294-0
- 0473 25C1295-0
- 0474 25C1296-0
- 0475 25C1297-0
- 0476 25C1298-0
- 0477 25C1299-0
- 0478 25C1300-0
- 0479 25C1301-0
- 0480 25C1302-0
- 0481 25C1303-0
- 0482 25C1304-0
- 0483 25C1305-0
- 0484 25C1306-0
- 0485 25C1307-0
- 0486 25C1308-0
- 0487 25C1309-0
- 0488 25C1310-0
- 0489 25C1311-0
- 0490 25C1312-0
- 0491 25C1313-0
- 0492 25C1314-0
- 0493 25C1315-0
- 0494 25C1316-0
- 0495 25C1317-0
- 0496 25C1318-0
- 0497 25C1319-0
- 0498 25C1320-0
- 0499 25C1321-0
- 0500 25C1322-0
- 0501 25C1323-0
- 0502 25C1324-0
- 0503 25C1325-0
- 0504 25C1326-0
- 0505 25C1327-0
- 0506 25C1328-0
- 0507 25C1329-0
- 0508 25C1330-0
- 0509 25C1331-0
- 0510 25C1332-0
- 0511 25C1333-0
- 0512 25C1334-0
- 0513 25C1335-0
- 0514 25C1336-0
- 0515 25C1337-0
- 0516 25C1338-0
- 0517 25C1339-0
- 0518 25C1340-0
- 0519 25C1341-0
- 0520 25C1342-0
- 0521 25C1343-0
- 0522 25C1344-0
- 0523 25C1345-0
- 0524 25C1346-0
- 0525 25C1347-0
- 0526 25C1348-0
- 0527 25C1349-0
- 0528 25C1350-0
- 0529 25C1351-0
- 0530 25C1352-0
- 0531 25C1353-0
- 0532 25C1354-0
- 0533 25C1355-0
- 0534 25C1356-0
- 0535 25C1357-0
- 0536 25C1358-0
- 0537 25C1359-0
- 0538 25C1360-0
- 0539 25C1361-0
- 0540 25C1362-0
- 0541 25C1363-0
- 0542 25C1364-0
- 0543 25C1365-0
- 0544 25C1366-0
- 0545 25C1367-0
- 0546 25C1368-0
- 0547 25C1369-0
- 0548 25C1370-0
- 0549 25C1371-0
- 0550 25C1372-0
- 0551 25C1373-0
- 0552 25C1374-0
- 0553 25C1375-0
- 0554 25C1376-0
- 0555 25C1377-0
- 0556 25C1378-0
- 0557 25C1379-0
- 0558 25C1380-0
- 0559 25C1381-0
- 0560 25C1382-0
- 0561 25C1383-0
- 0562 25C1384-0
- 0563 25C1385-0
- 0564 25C1386-0
- 0565 25C1387-0
- 0566 25C1388-0
- 0567 25C1389-0
- 0568 25C1390-0
- 0569 25C1391-0
- 0570 25C1392-0
- 0571 25C1393-0
- 0572 25C1394-0
- 0573 25C1395-0
- 0574 25C1396-0
- 0575 25C1397-0
- 0576 25C1398-0
- 0577 25C1399-0
- 0578 25C1400-0
- 0579 25C1401-0
- 0580 25C1402-0
- 0581 25C1403-0
- 0582 25C1404-0
- 0583 25C1405-0
- 0584 25C1406-0
- 0585 25C1407-0
- 0586 25C1408-0
- 0587 25C1409-0
- 0588 25C1410-0
- 0589 25C1411-0
- 0590 25C1412-0
- 0591 25C1413-0
- 0592 25C1414-0
- 0593 25C1415-0
- 0594 25C1416-0
- 0595 25C1417-0
- 0596 25C1418-0
- 0597 25C1419-0
- 0598 25C1420-0
- 0599 25C1421-0
- 0600 25C1422-0
- 0601 25C1423-0
- 0602 25C1424-0
- 0603 25C1425-0
- 0604 25C1426-0
- 0605 25C1427-0
- 0606 25C1428-0
- 0607 25C1429-0
- 0608 25C1430-0
- 0609 25C1431-0
- 0610 25C1432-0
- 0611 25C1433-0
- 0612 25C1434-0
- 0613 25C1435-0
- 0614 25C1436-0
- 0615 25C1437-0
- 0616 25C1438-0
- 0617 25C1439-0
- 0618 25C1440-0
- 0619 25C1441-0
- 0620 25C1442-0
- 0621 25C1443-0
- 0622 25C1444-0
- 0623 25C1445-0
- 0624 25C1446-0
- 0625 25C1447-0
- 0626 25C1448-0
- 0627 25C1449-0
- 0628 25C1450-0
- 0629 25C1451-0
- 0630 25C1452-0
- 0631 25C1453-0
- 0632 25C1454-0
- 0633 25C1455-0
- 0634 25C1456-0
- 0635 25C1457-0
- 0636 25C1458-0
- 0637 25C1459-0
- 0638 25C1460-0
- 0639 25C1461-0
- 0640 25C1462-0
- 0641 25C1463-0
- 0642 25C1464-0
- 0643 25C1465-0
- 0644 25C1466-0
- 0645 25C1467-0
- 0646 25C1468-0
- 0647 25C1469-0
- 0648 25C1470-0
- 0649 25C1471-0
- 0650 25C1472-0
- 0651 25C1473-0
- 0652 25C1474-0
- 0653 25C1475-0
- 0654 25C1476-0
- 0655 25C1477-0
- 0656 25C1478-0
- 0657 25C1479-0
- 0658 25C1480-0
- 0659 25C1481-0
- 0660 25C1482-0
- 0661 25C1483-0
- 0662 25C1484-0
- 0663 25C1485-0
- 0664 25C1486-0
- 0665

PCB PARTS LIST/VIEW FROM COMPONENT SIDE

EQUALIZER AMPLIFIER PCB VIEW

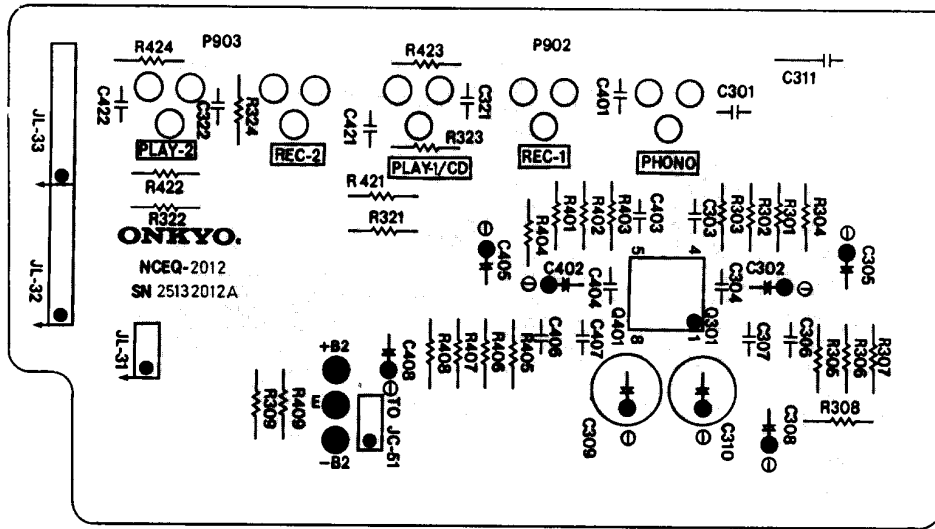


EQUALIZER AMPLIFIER PC BOARD ASS'Y (NAEQ-2012/a)


CIRCUIT NO.	PART NO.	DESCRIPTION
	IC	
Q301, Q401	222534	NJM-4559DX
	222502 or	NJM-4558DX or
	222570	NJM-4560DX
	Capacitors	
C302, C402	352780229	2.2μF, 50V, Elect.
C305, C405	352721019	100μF, 6.3V, Elect.
C308, C408	352780229	2.2μF, 50V, Elect.
C309, C310	352752219	220μF, 25V, Elect.
	Terminals	
P902	25045137	NPJ-6PDBL52, Phono/Tape 1
P903	25045084	NPJ-4PDBL42, Tape 2

BLOCK DIAGRAM


STK-4893 (Power amplifier)

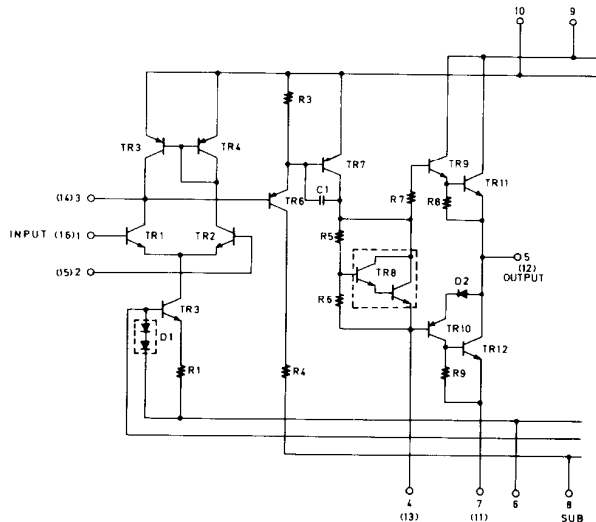


NJM-4559DX (Equalizer amplifier)

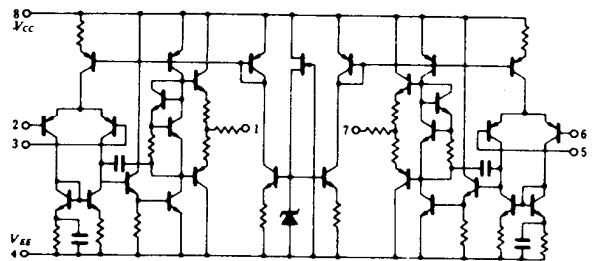

TONE CONTROL PCB VIEW

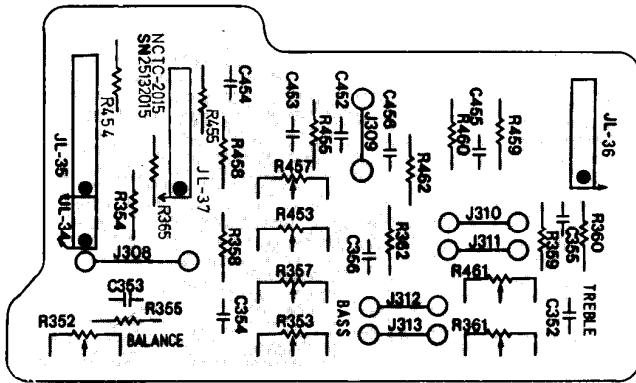

VOLUME CONTROL PCB VIEW

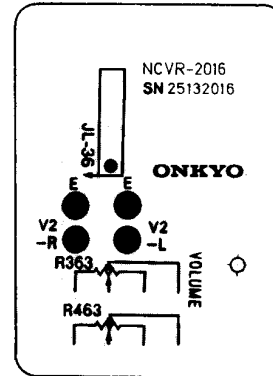


TONE CONTROL CIRCUIT PC BOARD ASS'Y (NATC-2015)

CIRCUIT NO.	PART NO.	DESCRIPTION
Variable resistors		
R352	5146034	N16RLC250KWT30, Balance
R353, R453	5148073	N16RQMC110K180K30, Bass
R357, R457		
R361, R461	5148074	N16RQMC219K30, Treble


VOLUME CONTROL PC BOARD ASS'Y (NAVR-2016)

CIRCUIT NO.	PARTS NO.	DESCRIPTION
R363, R463	5148093	N16RGM100KBT35, Variable resistor

SELECTOR SWITCH PCB VIEW

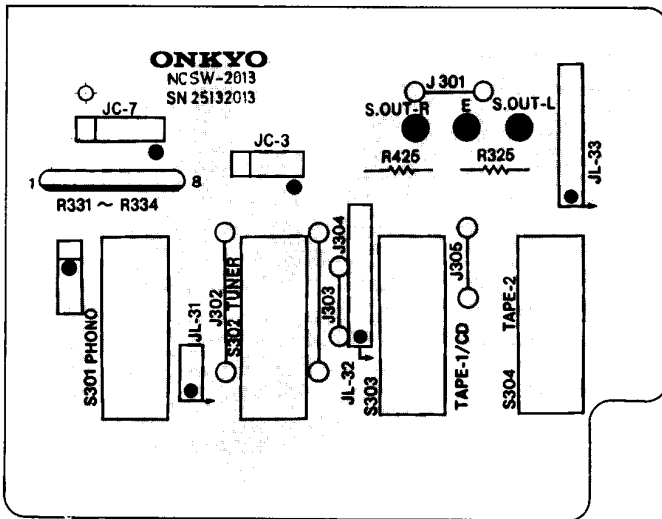

SWITCH PCB VIEW

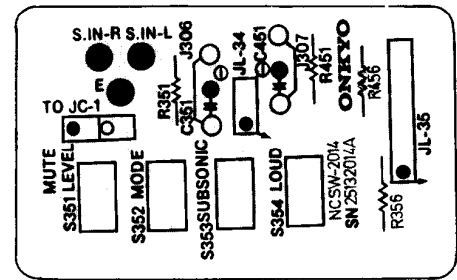

SWITCH PC BOARD ASS'Y (NASW-2014a)


CIRCUIT NO.	PART NO.	DESCRIPTION
S351-S354	25035400	NPS-422-L360, Push switch
C351, C451	352781599	0.15μF, 50V, Flect. capacitor

SELECTOR SWITCH PC BOARD ASS'Y (NASW-2013)




CIRCUIT NO.	PART NO.	DESCRIPTION
Resistor		
R331-R334	49241681504	680ohm×4, 1/4W, Network
Switches		
S301-S304	25035395	NPS-442-L358, Push

SUPER BASE PC BOARD ASS'Y (NATS-2017)


CIRCUIT NO.	PART NO.	DESCRIPTION
D351	225141	SEL2213C, LED
S364	25035422	NPS-142-L386, Push SWITCH
	27190273	Holder, LED

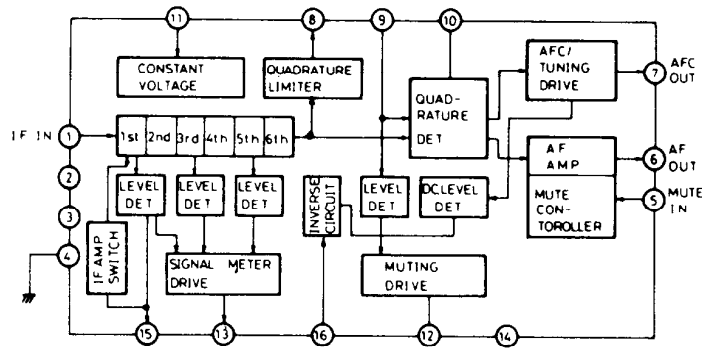BLOCK DIAGRAM OF IC **μ PC1267C/ μ PC1167C2 (FM IF system)**

1. IF signal input
2. IF amplifier switch inp
H level: Off
5. Muting switch input
6. Composite signal outpu
7. AFC output
8. IF amplifier output
9. 10.7MHz input
10. Reference voltage
11. Power supply
12. Muting output
Tuned: L level
13. Signal strength output
15. AGC output
16. Muting level

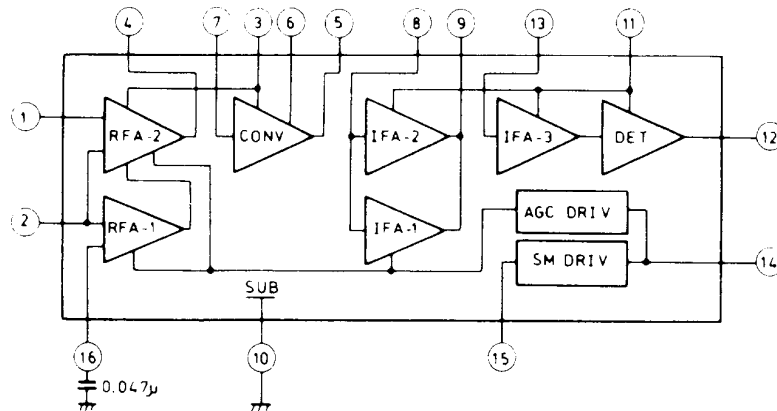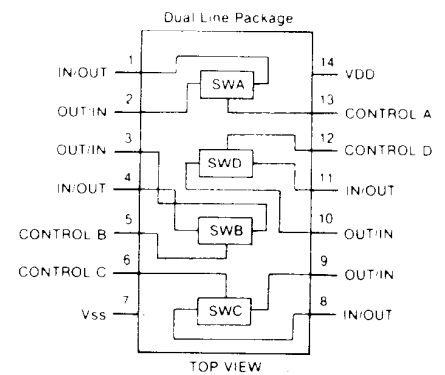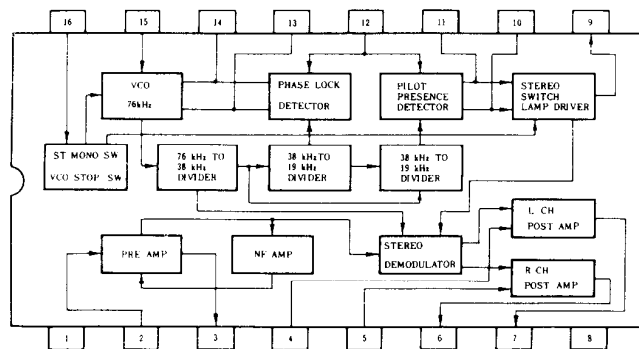 μ PC1168C/ μ PC1243C (AM radio system)**TC4066BP (Analogue switch)** **μ PC1161C3 (Stereo decoder)**

PACKING VIEW

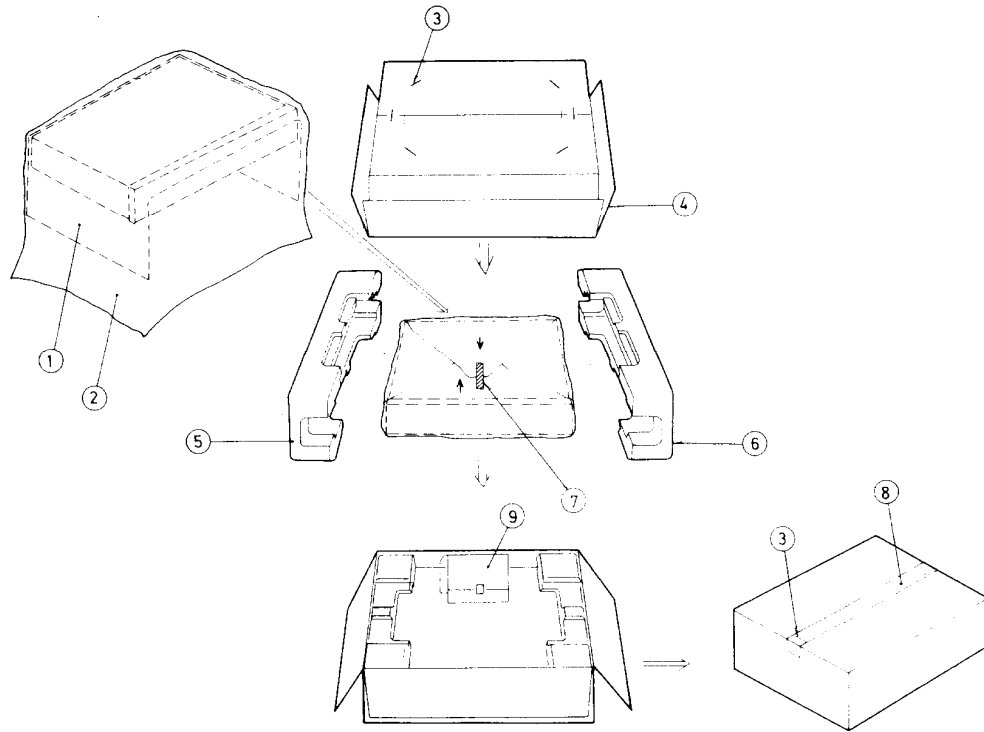

REF. NO.	PART NO.	DESCRIPTION
1	29095012-1	500×800mm, Protection sheet
2	29100034	650×850mm, Poly-vinyl bag
3	282301	Sealing hook
4	29050971	Master carton box
	29050972	Master carton box (B)
5	29090817A	Pad R
6	29090816B	Pad L
7	29110032	W=15mm, Adhesive tape
8	260012	50(W)×600mm, Damplon tape
9		Accessory bag complete
U.S.A. model		
	292064A	FM antenna
	29100006	350×250mm, Poly-vinyl bag
	29340770	Instruction manual
	29365006-5	Warranty card
	29358002A	Service station list
120V model		
	292064A	FM antenna
	29100006	350×250mm, Poly-vinyl bag
	29340770	Instruction manual
220V model		
	292064A	FM antenna
	29100006	350×250mm, Poly-vinyl bag
	29340771	Instruction manual
120/220V model		
	292064A	FM antenna
	29100006	350×250mm, Poly-vinyl bag
	29340771	Instruction manual
	25055040	CV-K-2, Conversion plug

Note: (B): Only black model

ONKYO CORPORATION

International Division: No. 24 Mori Bldg., 23-5, 3-chome, Nishi-Shinbashi, Minato-ku, Tokyo, Japan
 Telex: 2423551 ONKYO J. Phone: 03-432-6981

ONKYO U.S.A. CORPORATION

200 Williams Drive, Ramsey, N.J. 07446 Tel. 201-825-7950

ONKYO DEUTSCHLAND GMBH, ELECTRONICS

8034 München-Germering, Industriestrasse 18, West Germany. Telex: 521726 Telefon: (089)-84-3071