

# PHILIPS RADIO 06 RL 416

|      |   |                     |                         |                 |   |   |                 |
|------|---|---------------------|-------------------------|-----------------|---|---|-----------------|
| TS   | 421                                     | 423 - 421           | 424                     | 425             | 428 - 427 - 426                               | 429a - 429b   | 404             |
| D, S | 441-402-442-446-430                     | 447                 | 448                     | 449-444-445-443 | 450-431                                       | 432   | 490             |
| C    | 454 - 451-453 - 456-457 - 496-401a      | 472                 | 474                     | 476 - 460-481   | 477-4011-478-470-465-468-482-467 - 479 - 401b | 486 - 487   | 493 - 494 - 491 |
| C    | 495 - 401a - 452-455 - 458 - 463 - 401c | 459 - 473           | 475                     | 482-488         | 454 - 481-401d-466-483-469-471 - 485 - 484    | 492 - 488   | 489 - 491       |
| R    | 534                                     | 505-506 - 508 - 507 | 501-502-509-503-510-504 | 511 - 512       | 514 - 515-406-513 - 405                       | 516 - 517-518-519 - 520-521-522-530-523-531-532-524-533-526-525-528-527 | 529             |

