



Play Back - Rewinding - Winding	I	1	7	13	15	17	19	21	23	25	27	29	31
Recording	II	2	8	14	16	18	20	22	24	26	28	30	32
Play Back - Recording	III	3	9	15	17	19	21	23	25	27	29	31	33
Aut. Stop	IV	4	10	16	18	20	22	24	26	28	30	32	34
Play Back - Recording - Winding	V	5	11	17	19	21	23	25	27	29	31	33	35
Rewinding	VI	6	12	18	20	22	24	26	28	30	32	34	36

CONNECT VOLT ADAPTER	
110V	1-2
177V	5-7
230V	4-7
240V	3-2

3-104 106 03742

TAPE DECK 8500 (PHILIPS)