MP3 CD Soundmachine

Service Service **Service**



Service Manual





AZ1816

all versions



CONTENTS

Circuit diagram - CD part Key part Power amp part USB part Tuner part Tuner buffer part

PCB Layout diagram - top view bottom view

Service parts list

CLASS 1 LASER PRODUCT

[©] Copyright 2006 Philips Consumer Electronics B.V. Eindhoven, The Netherlands All rights reserved. No part of this publication may be reproduced, stored in a retrieval system or transmitted, in any form or by any means, electronic, mechanical, photocopying, or otherwise without the prior permission of Philips.

Published by LX 0701 Service Audio Subject to modification









(GB) 3141 785 31520

Downloaded Free from http://www.free-service-manuals.com


CD part

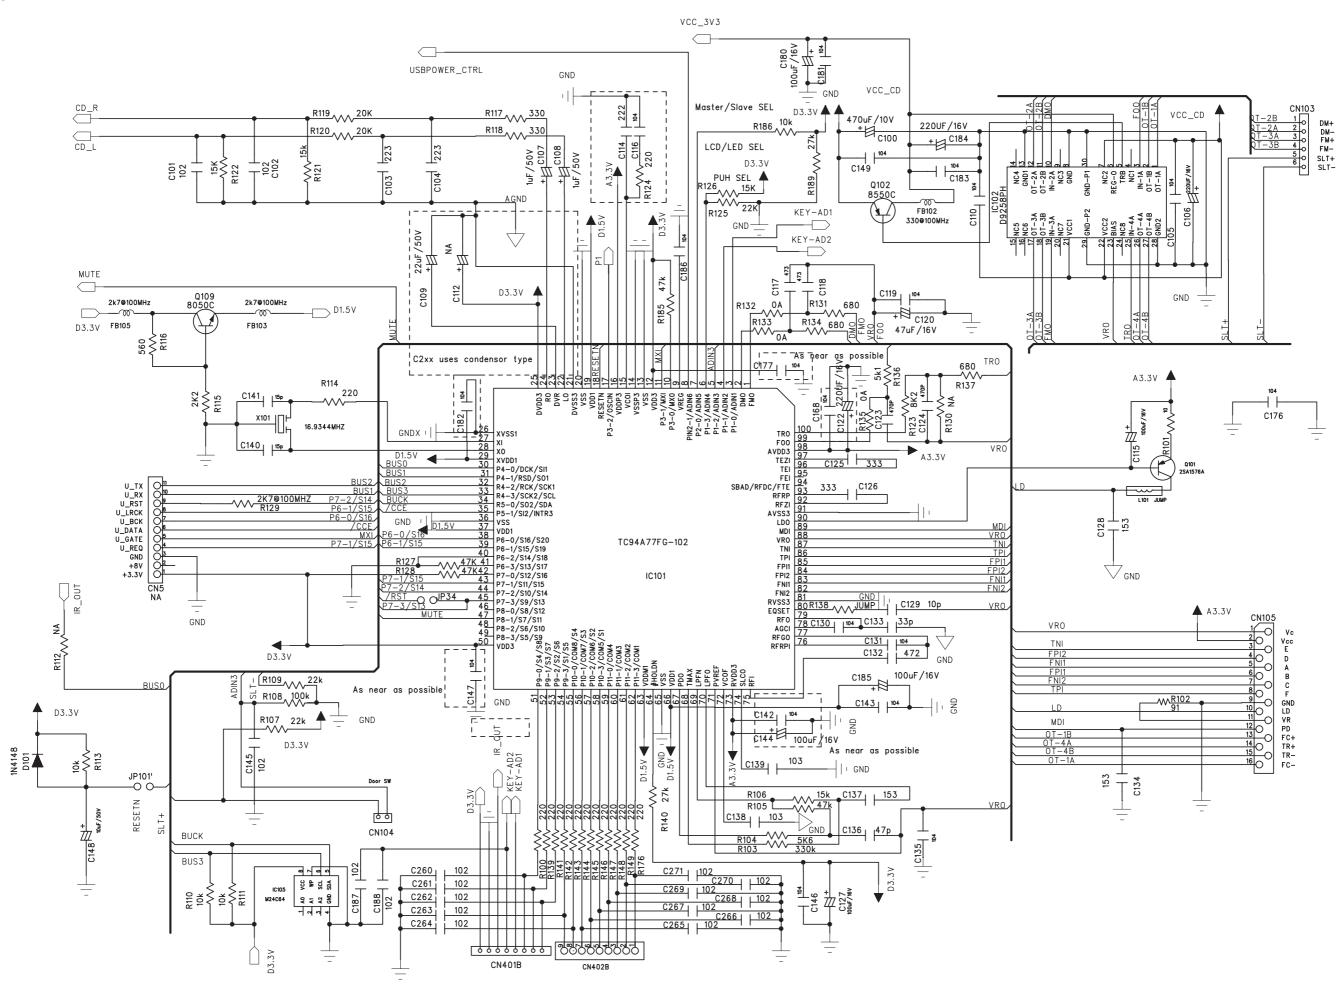


Downloaded Free from http://www.free-service-manuals.com

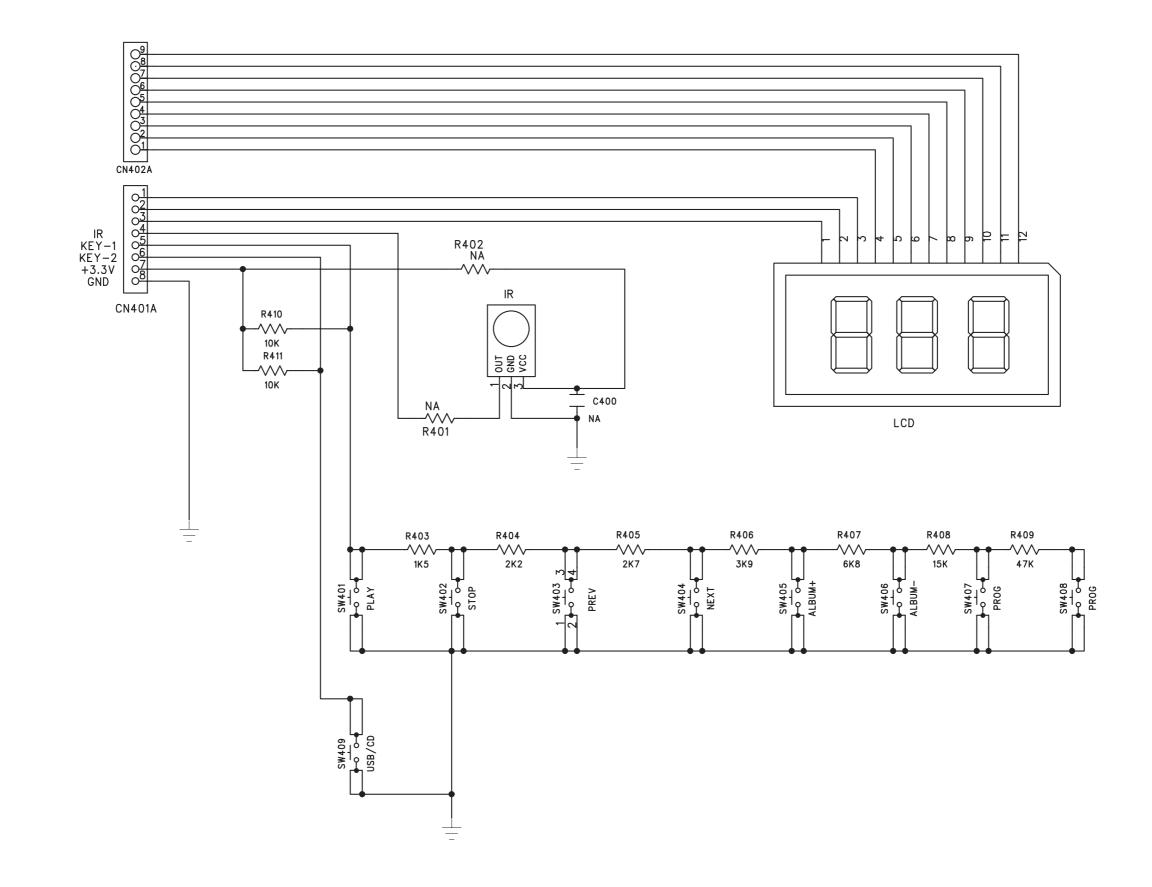


•

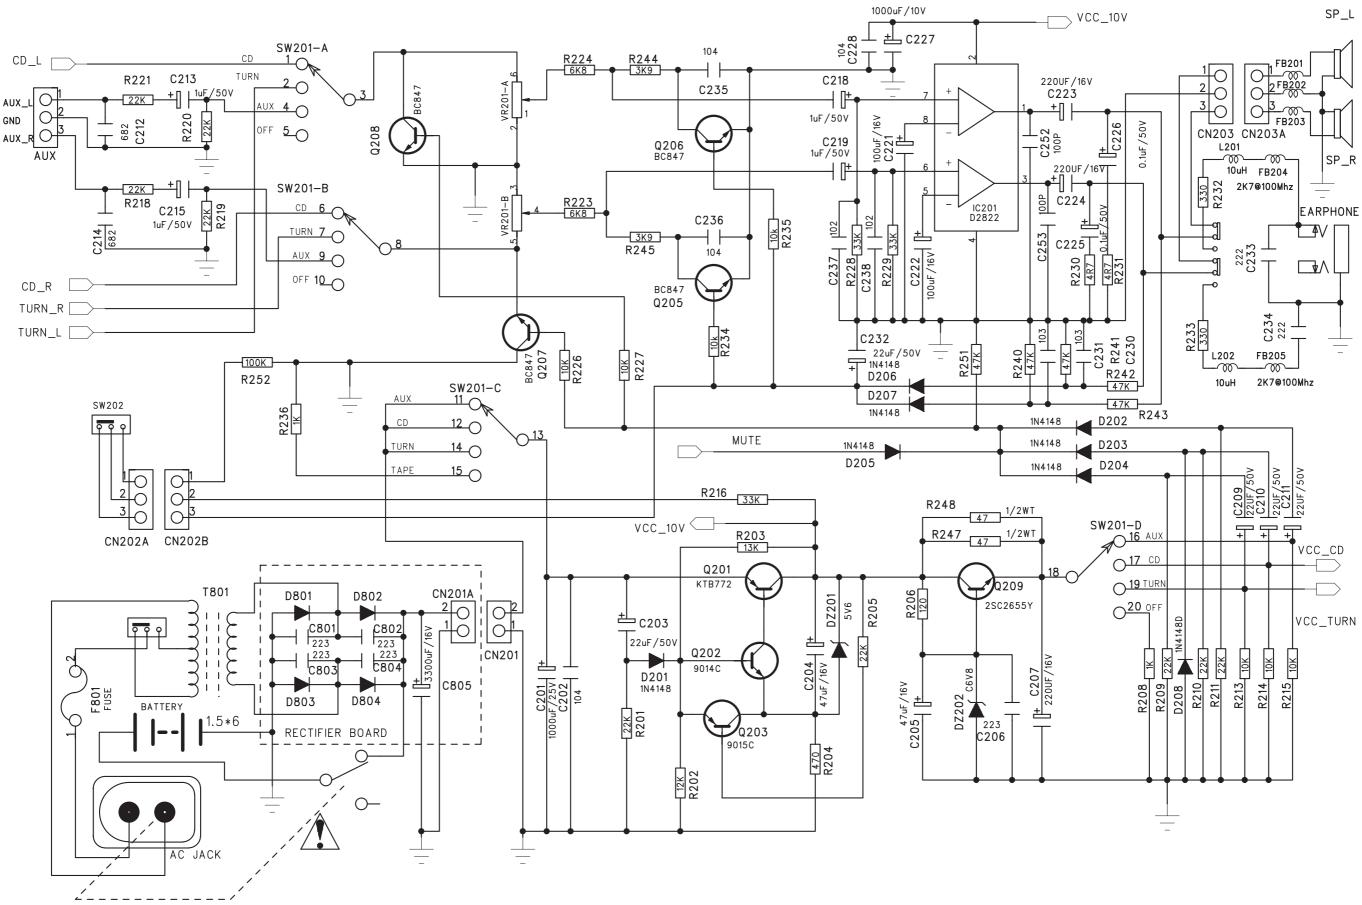



USB part

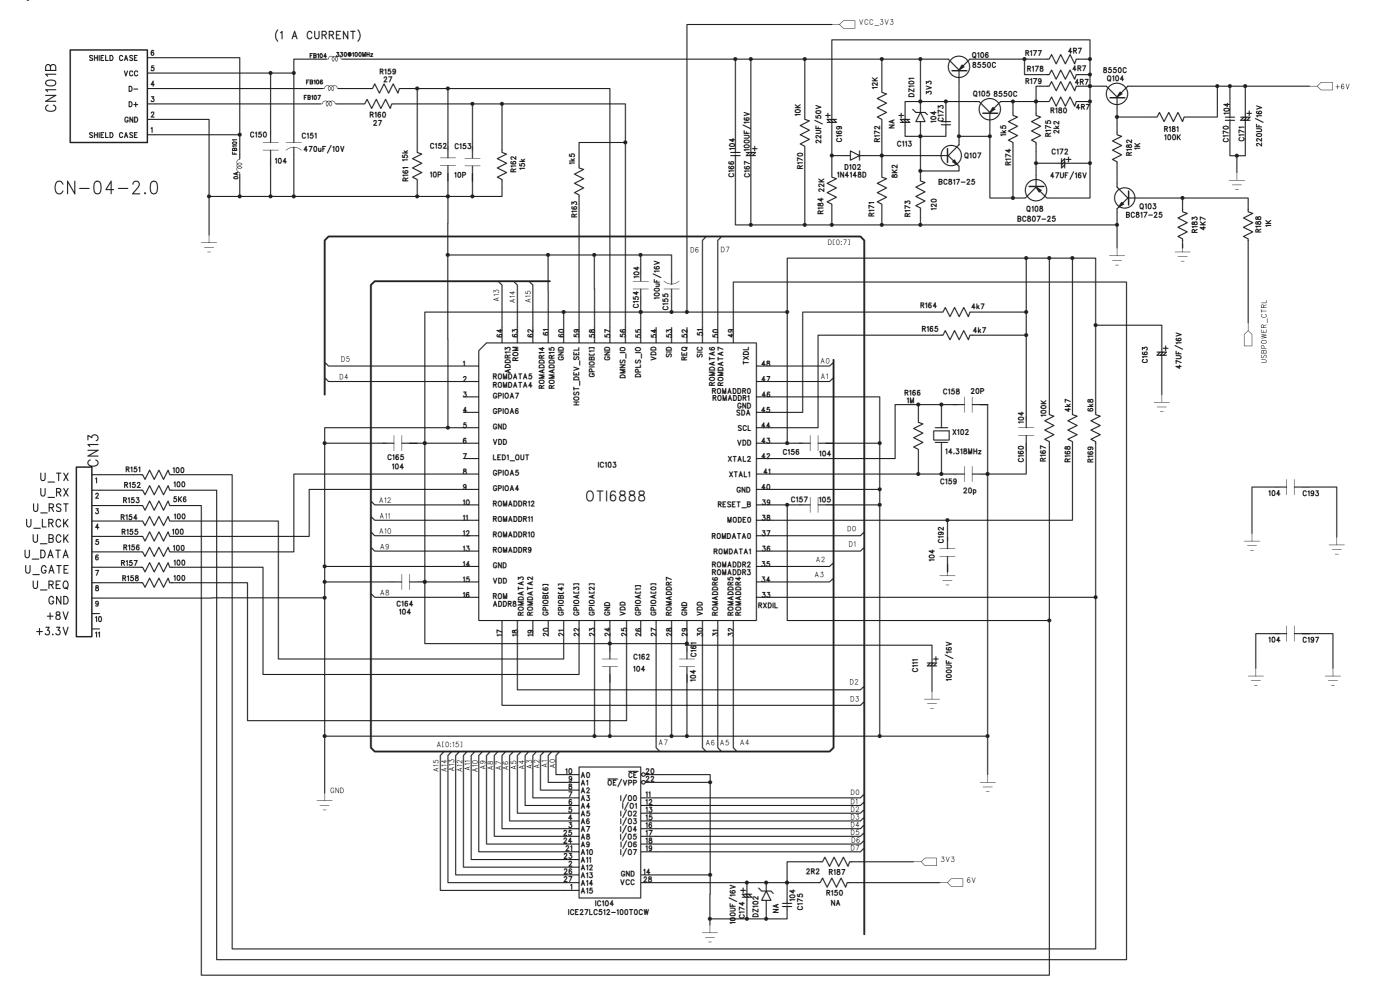


Downloaded Free from http://www.free-service-manuals.com

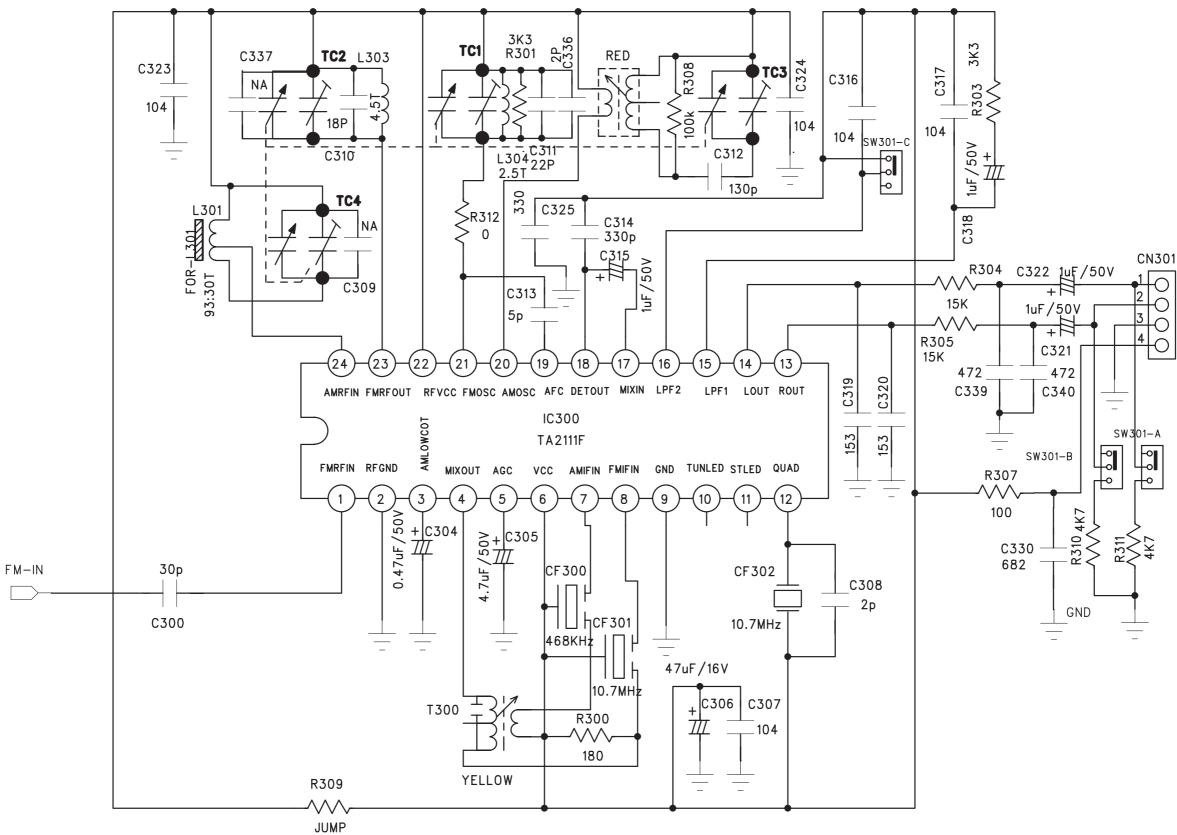

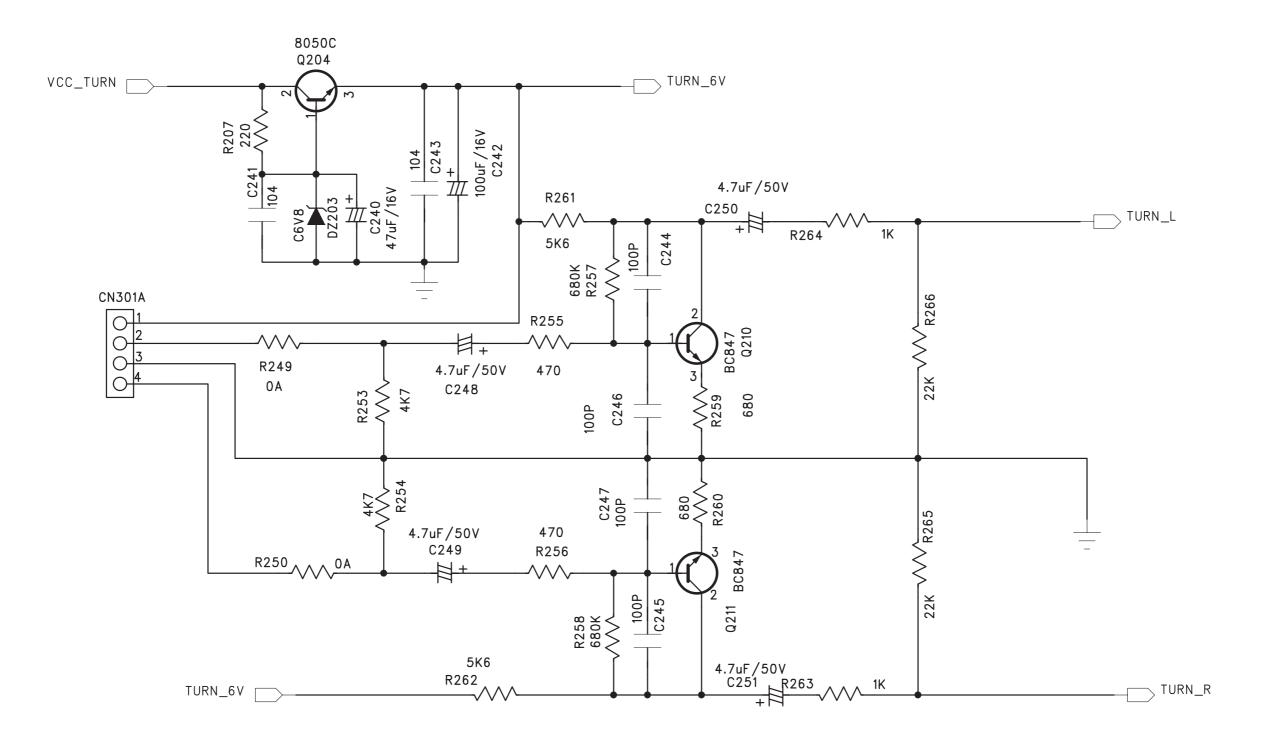

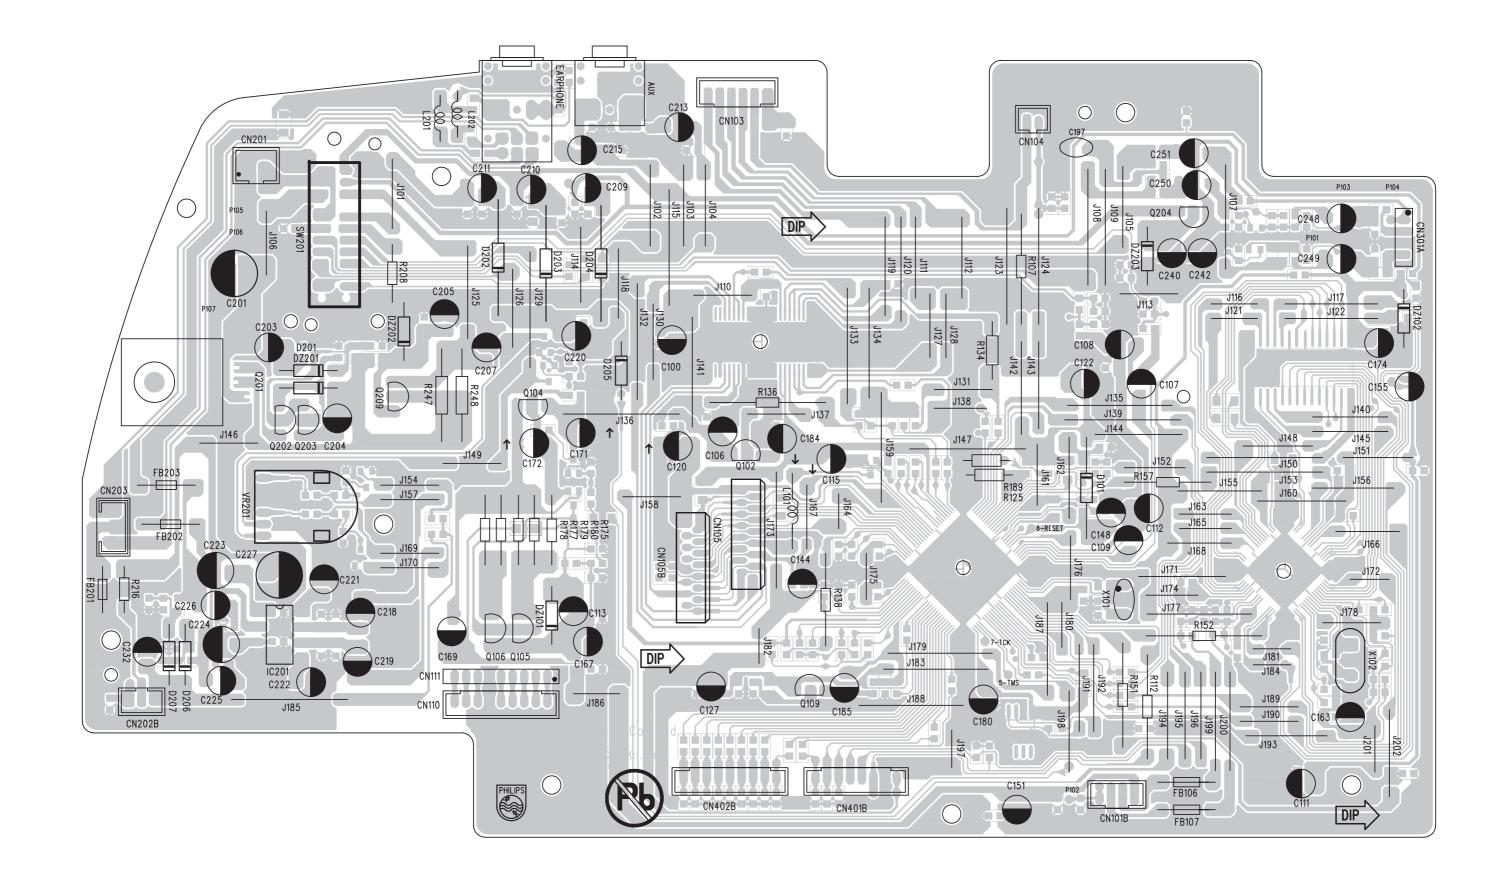

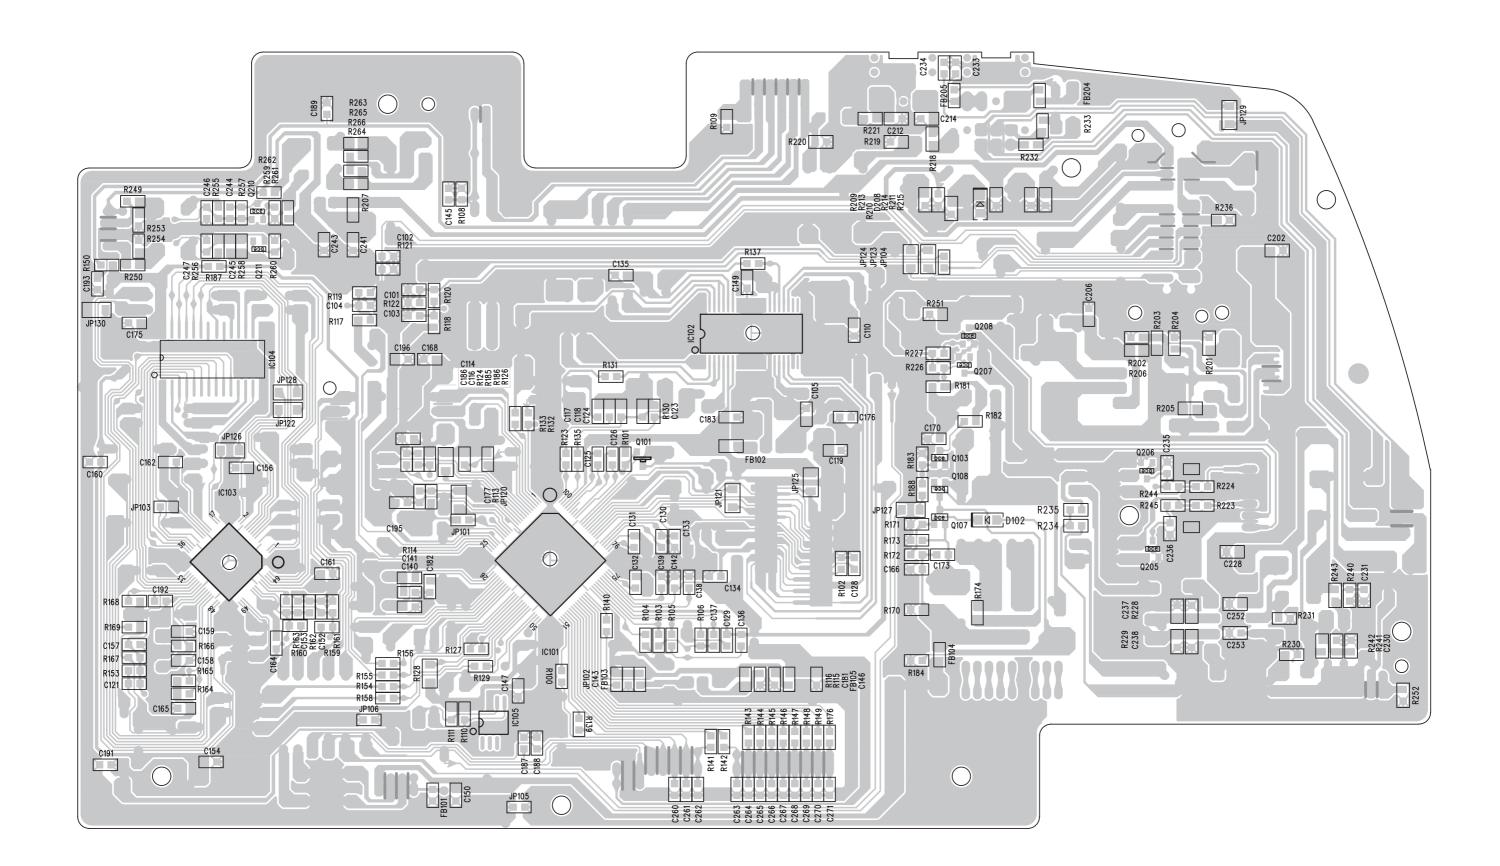

Service parts list

994000005114 996510000397 994000005115 994000005116 996510000928	CD DOOR SPRING SUS304 CD CD DAMPER PINK COLOR 658F CD DAMPER BLACK COLOR 658PH BATTERY DOOR CD DOOR GEAR HOLDER
996510000929	HANDLE
996510000930	CD DOOR
996510000931	CD DOOR GEAR
994000003392	CD MECHANISM DA11B3VF (SANYO)
994000002364	ROD ANTENNA 2 SECTIONS L:420MM
996510000932	77MM SPEAKER 8 OHM 1W 3INCH
996510000933	CD DOOR SWITCH 1P2T
994000005096	TRANSFOMER EI-41 230V 50Hz 120V 60Hz
996510000934	AC POWER CORD (for -55)
996500042089	5 FEET VDE AC POWER CORD (for -/79)
996510000935	2 PINS PLUG ADAPTOR

Note: Only these parts mentioned in the list are normal service parts.