

MP3-CD Soundmachine

AZ1833

Register your product and get support at
www.philips.com/welcome

 
User Manual



PHILIPS

Meet Philips at the Internet
<http://www.philips.com>

English

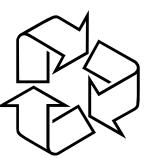


AZ1833



Printed in China

 JS-0731

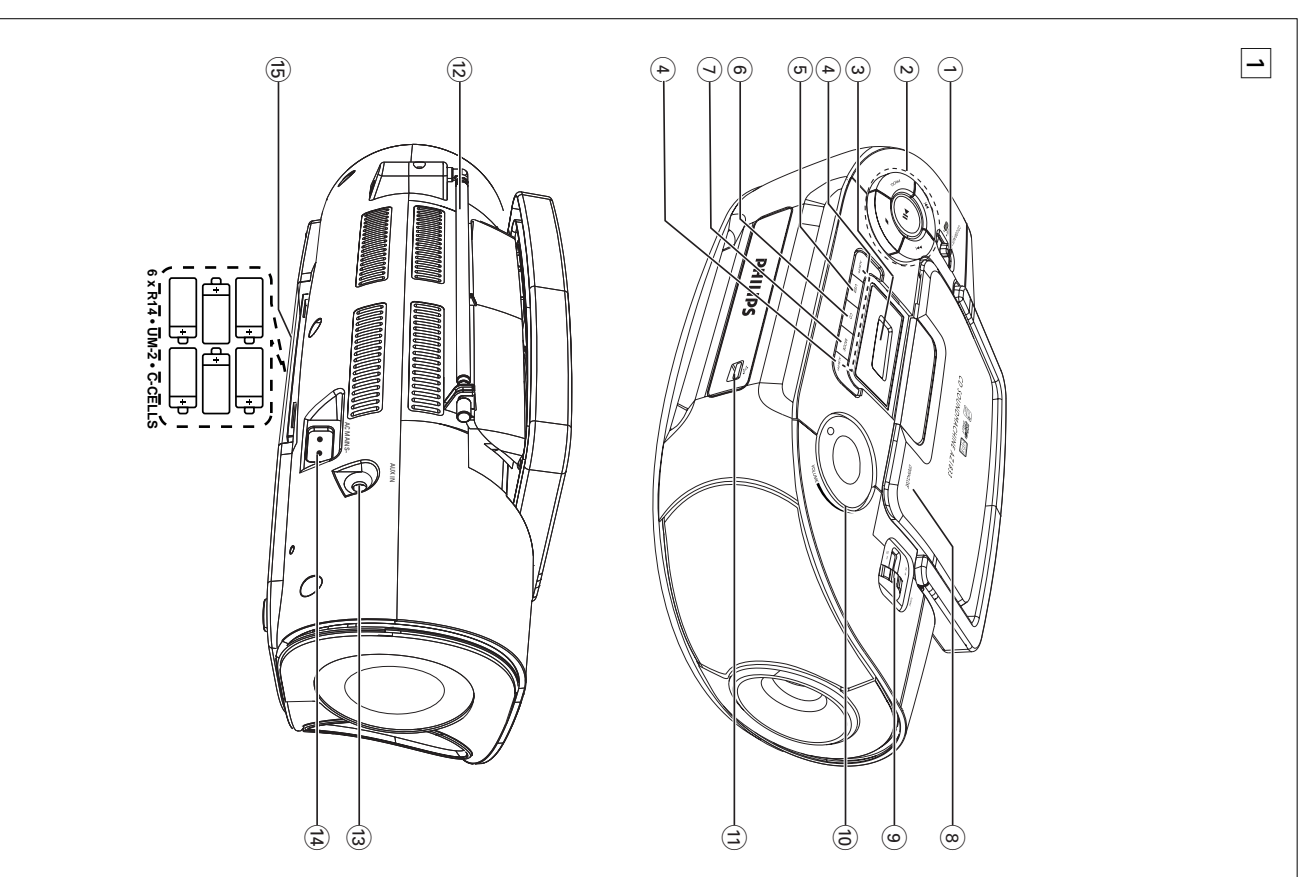

1

Important notes for users in the U.K.

Mains plug
 This apparatus is fitted with an approved 13 Amp plug. To change a fuse in this type of plug proceed as follows:

1. Remove fuse cover and fuse.
2. Fix new fuse which should be a BS1362 5 Amp AS,TA or BSI approved type.
3. Refit the fuse cover.

If the fitted plug is not suitable for your socket outlets, it should be cut off and an appropriate plug fitted in its place. If the mains plug contains a fuse, this should have a value of 5 Amp. If a plug without a fuse is used the fuse at the distribution board should not be greater than 5 Amp.

Note: The severed plug must be disposed of to avoid a possible shock hazard should it be inserted into a 13 Amp socket elsewhere.

How to connect a plug

The wires in the mains lead are coloured with the following code: blue = neutral (N), brown = live (L). As these colours may not correspond with the colour markings identifying the terminals in your plug, proceed as follows:

- Connect the blue wire to the terminal marked N or coloured black.
- Connect the brown wire to the terminal marked L or coloured red.
- Do not connect either wire to the earth terminal in the plug, marked E (or e) or coloured green (or green and yellow).

Before replacing the plug cover, make certain that the cord grip is clamped over the sheath of the lead - not simply over the two wires.

 
Copyright in the U.K.

Recording and playback of material may require consent. See Copyright Act 1956 and The Performers' Protection Acts 1958 to 1972.


Power Supply



2 If your set is equipped with a voltage selector, adjust the selector so that it matches with the local power supply.



 
- 3 Connect the power cord to the AC-MAINS inlet and the wall socket. The set is now ready for use.
- 4 To switch the set off completely, withdraw the power cord from the wall socket.

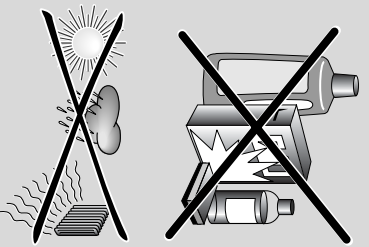


- 5 Install the unit near the AC outlet and where the AC power plug can be easily reached. Disconnect the power cord from the wall socket to protect your set during heavy thunderstorms. Children could seriously injure themselves as the free end of the cable may still be live if only the connector is removed from the MAINS socket at the back of the unit.



 - 5 The type plate is located on the bottom of the set

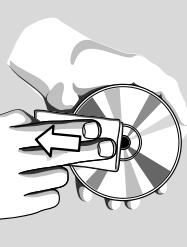

 
- 6 **Helpful hints:**
 To avoid unnecessary energy consumption, always adjust the **source selector** to **OFF** after using the set.

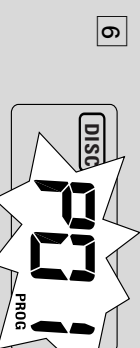

- 6 **CAUTION**
 Use of controls or adjustments or performance of procedures other than herein may result in unsafe operation.



 - 7 For users in the U.K., please follow the boxed instructions 'Important notes for users in the U.K.'.

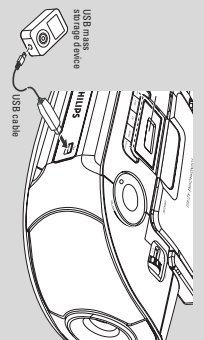

- 7 This set complies with the radio interference requirements of the European Community.

English

Congratulations on your purchase and welcome to Philips!

To fully benefit from the support that Philips offers, register your product at www.philips.com/welcome.

Controls / Power Supply

- 11 **USB DIRECT** – connects an external USB mass storage device

Back panel (See 1)

- 12 **Telescopic antenna** – improves FM reception
- 13 **AUX IN jack** – connects to external audio source
- 14 **AC-MAINS** – inlet for power cord
- 15 **Battery door** – open to insert 6 x 1.5V R-14/UM2 C-cells

Supplied accessories

- AC power cord
- Audio cable

Top and front panels (See 1)

- 1 **Source selector CD/USB/AUX, FM, MW, OFF**
 – selects CD/MP3-CD, USB, AUX or radio
 – switches off the set
- 2 **MI** – starts or pauses disc/USB playback
◀▶ MI
 – skips to the beginning of a current/previous/ later track
 – fast searches backwards and forwards within a track
 – stops disc/USB playback
 – erases a program
- 3 **PROG** – programs tracks and reviews the program
- 4 **ALBUM +/-**
 – For **MP3-CD/ WMA/USB play**: select albums
- 5 **USB** – enters USB mode
- 6 **CD** – enters disc mode
- 7 **MODE** – selects different play modes: e.g. REPEAT or SHUFFLE (random order)
- 8 **OPEN-CLOSE** – opens/closes the CD door
- 9 **TUNING** – tunes to radio stations
- 10 **VOLUME** – adjusts volume level

MP3-CD / CD Player

About MP3

The music compression technology/ MP3 (MPEG1 Audio Layer 3) significantly reduce the digital data of an audio CD while maintaining CD quality sound.

- **Getting MP3 files:** you can either download legal music files from the internet to your computer, hard disc, or create such files by converting audio CD files in your computer through appropriate encoder software. (128kbps bit rate or higher is recommended for MP3 files.)
- **Creating a MP3 CD:** burn the music files from your computer hard disc on a CDR or CDRW using your CD burner.

Helpful hints:

- Make sure that the file names of the MP3 files end with **.mp3** or **.wma**.
- Number of albums: maximum 256
- Number of tracks: maximum 511
- The length of file names affects the number of tracks for playback. With shorter file names, more files can be burned on a disc.

Playing a disc

This player plays Audio Discs including CD-R, CD-RW, MP3 CD and WMA. Do not try to play a CD-ROM, CD-I, CD-V, VCD, DVD or computer CD.

IMPORTANT!

- CDs encoded with **copyright protection technologies** by some record companies may be unplayable by this product.
- DRM-protected WMA disc is not supported

Selecting a different track

- Press **MI** or **MI** once or repeatedly until the desired track number appears in the display.
- For **MP3-CD/WMA**: first press **ALBUM/+**, once or more to find your album.
- In the pause/stop position, press **MI** to start playback.

- 1 Check if the power/mains voltage, as shown on the type plate located on the bottom of the set, corresponds to your local power supply. If it does not, consult your dealer or service center.

- 2 Press **CD** to enter CD mode if USB is displayed.

- 3 Open the disc door: → Display will show --- with "DISC". (See 12).

- 4 Insert a disc with the printed side facing up and press the disc door gently to close. → Display: The total number of tracks appears.

 
- 5 The disc scanning of MP3-CD may run longer than audio CD.
 Press **MI** to start playback.
 → Display: **▶** and the current track number.

- 6 For **MP3-CD/WMA only**:
 → The current track number "0:00" and album number "0:00" with "ALB" will be displayed interchangeably. (See 14, 15).

- 7 To pause playback, press **MI**
 → Display: **▶** and the current track number flash.
- 8 Press **MI** again to resume playback.
 To stop playback, press **■**

Helpful hints:

- The disc playback will also stop when you open the disc compartment door.
- you select **FM MW** or **OFF** position.
- the disc has reached the end of the playback

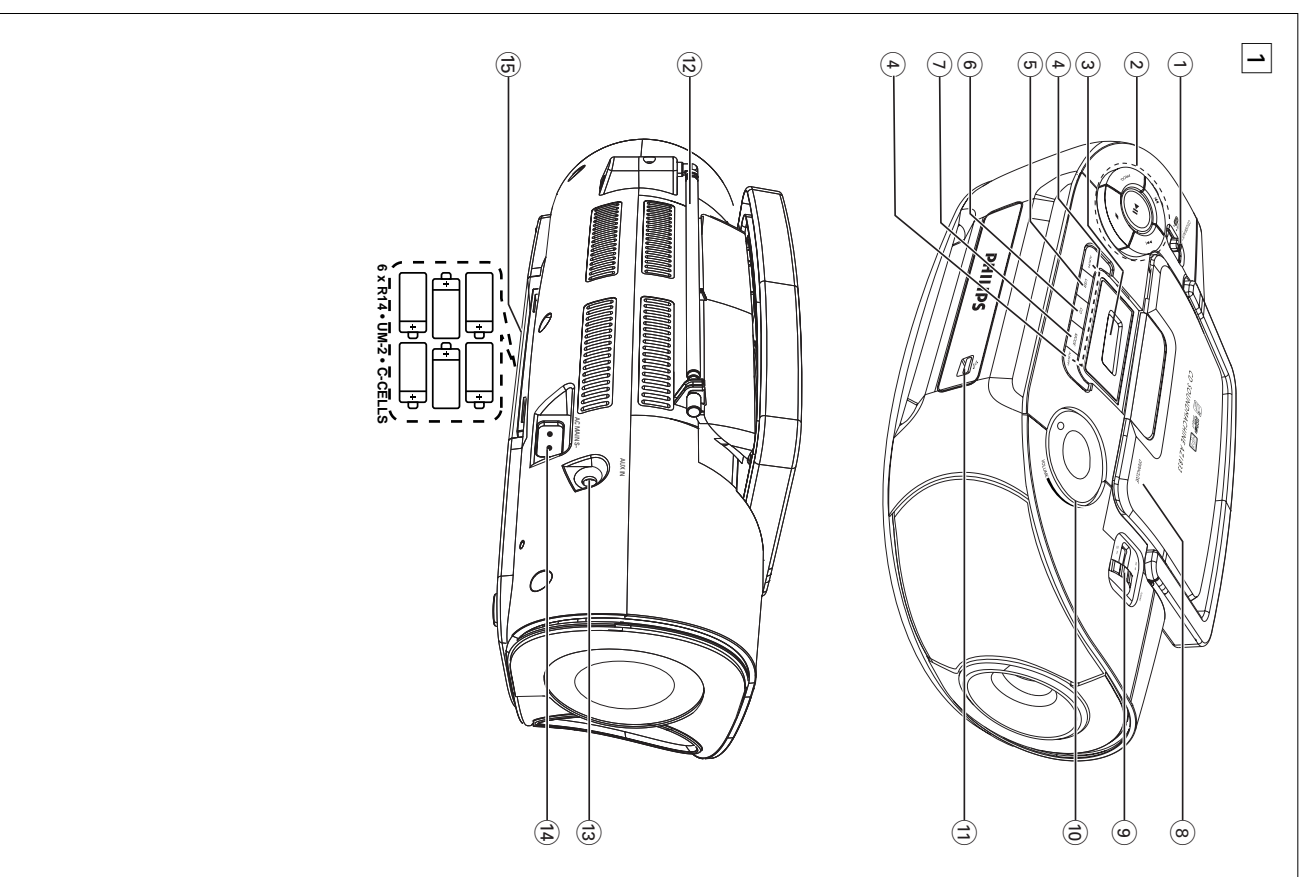

MP3-CD / CD Player

Finding a passage within a track

- 1 During playback, press and hold down **◀** or **▶**.
- The disc is played at high speed and low volume.
- 2 When you recognize the passage you want, release **◀** or **▶** to resume normal playback.

Programming tracks

You may store up to 20 tracks in the desired sequence. If you like, store any track more than once.

- 1 In the stop position, press **PROG** to activate programming.
 - Display shows *P2 1*, indicating the start of the program and **PROG** flashes. (See [6].)
- 2 Press **◀** or **▶** to select your desired track number.
- 3 For **MP3-CD/WMA**: First press **ALBUM/▶**, once or more to find your album. Press **PROG** to store the desired track.
 - Display shows *P2 2*, indicating the next program location available.
- 4 Repeat steps **2** to **3** to select and store all desired tracks.
- 5 Press **▶▶** to play the program.

In the stop position, press and hold **PROG** 3 seconds.

- The display shows all the stored tracks in sequence.
- Helpful hints:**
- Display shows *P2 1*; if no track is programmed.
 - If you try to store more than 20 tracks, no track can be stored and the display will show - - - with "PROG".

Erasing a program

- You can erase a program by:
- pressing **■** (twice during playback or once in the stop position);
 - selecting **FM MW** or **OFF** position;
 - opening the disc door.
- Display, **PROG** disappears.

Selecting different play modes (See [7])

You can select and change the various play modes before or during playback, and combine **REP** or **REP ALL** play modes with **PROG**.

- **REP** – plays the current track continuously.
- **REP ALL** – plays the entire disc/program continuously.
- **SHUF** – plays all tracks in random order (not available with **PROG**).
- **▶▶** – To select play modes, press **MODE** once or more.
- **▶▶▶** – Press **▶▶** to start playback; if in the stop position.
- **▶▶▶▶** – To select normal playback, press **MODE** repeatedly until the various modes are no longer displayed.
- You can also press **■** to cancel your play modes.

Safety & Maintenance (See [8])

Safety information

- Place the set on a hard, flat and stable surface so that the system does not tilt.
- Do not expose the set, batteries, CDs to humidity, rain, sand or excessive heat caused by heating equipment or direct sunlight.
- Where the MAINS plug or an appliance coupler is used as the disconnect device, the disconnect device shall remain readily operable.
- The apparatus shall not be exposed to dripping or splashing.
- Adequate ventilation with a minimum gap of 15 cm between the ventilation holes and surrounding surfaces is necessary to prevent heat build-up.
- The ventilation should not be impeded by covering the ventilation openings with items such as newspapers, table-cloths, curtains, etc.
- No objects filled with liquids such as vases, shall be placed on the apparatus.
- No naked flame sources, such as lighted candles, should be placed on the apparatus.
- The mechanical parts of the set contain self-lubricating bearings and must not be oiled or lubricated.
- To clean the set, use a dry cloth. Do not use any cleaning agents containing alcohol, ammonia, benzene or abrasives as these may harm the housing.

CD player and CD handling

- If the CD player cannot read CDs correctly, use a cleaning CD to clean the lens before taking the set to repair.
- The lens of the CD player should never be touched!
- Sudden changes in the surrounding temperature can cause condensation on the lens of your CD player. Playing a CD is then not possible. Do not attempt to clean the lens but leave the set in a warm environment until the moisture evaporates.
- Always close the CD door to avoid dust on the lens.
- To clean the CD wipe in a straight line from the center towards the edge using a soft, lint-free cloth. Do not use cleaning agents as they may damage the disc.
- Never write on a CD or attach any stickers to it.

USB Connection

Using USB connectivity

- AZ1833 is fitted with a USB port in the front panel, offering a plug and play feature which allows you to play from your AZ1833, digital music and spoken contents stored on a USB mass storage device.

- Using a USB mass storage device, you can also enjoy all the features offered by AZ1833 which are explained and instructed in the sections of disc operation.

Compatible USB mass storage devices

- With the AZ1833, you can use
 - USB flash memory (USB 2.0 or USB 1.1)
 - USB flash player (USB 2.0 or USB 1.1)
- USB device which requires driver installation under Windows XP is not supported.

Note:

- In some USB flash players (or memory devices), the stored contents are recorded using copyright protection technology. Such protected contents will be unplayable on any other devices (such as AZ1833 device).

Supported formats:

- USB or memory file format FAT12, FAT16, FAT32 (sector size: 512, 4096 bytes)
- MP3 bit rate (data rate): 32, 320 kbps and variable bit rate
- WMA V9 or earlier
- Directory nesting up to a maximum of 8 levels
- Number of albums: maximum 500
- Number of tracks: maximum 999
- ID3 tag: 2.0 or later
- File name in Unicode UTF8 (maximum length: 30 bytes)

The system will not play or support the following:

- Empty albums an empty album is an album that does not contain MP3/WMA files, and will not be shown in the display.

Troubleshooting

If a fault occurs, first check the points listed below before taking the set for repair.

WARNING: Do not open the set as there is a risk of electric shock. Under no circumstances should you try to repair the set yourself, as this will invalidate the guarantee.

No sound/ power

- Volume not adjusted
- Adjust the VOLUME
- Power cord not securely connected
- Connect the AC power cord properly
- Batteries dead/ incorrectly inserted
- Insert (fresh) batteries correctly
- Disc contains non-audio files
- Insert a suitable disc or press **◀** or **▶** once or more skip to an audio track, instead of the data files.

Display does not function properly/No reaction to operation of any of the controls

- Electronic discharge
- Switch off and unplug the set. Reconnect after a few seconds.

no indication

- It is set in the USB mode.
- Press **CD** to select CD mode.
- No disc inserted
- Insert a suitable disc
- Disc badly scratched or dirty
- Replace/clean CD (See Maintenance)
- CD(RW) is blank or the disc is not finalized
- Use a finalized CD-R(W)
- Laser lens steam up
- Wait until lens has cleared.

Note:

 
 
 
Make sure the CD is not encoded with Copyright protection technologies, as some do not conform to the Compact Disc standard.

The disc skips tracks






- Disc damaged or dirty
- Replace or clean disc
- Shuffle or program is active
- Quit shuffle/program

INFORMATION REGARDING USB DIRECT:

1. Compatibility of the USB connection on this product.
 - a) This product supports most USB Mass storage devices (MSSD) that these devices are compliant to the USB MSSD standards.
 - i) Most common Mass storage class devices are flash drives, memory sticks, jump drives and etc.
 - ii) If you see a "Disc Drive" showing up on your computer after you have plugged the mass storage device into your computer, most likely it is MSSD compliant and it will work with this product.
 - b) If your Mass storage device requires a battery/power source, please make sure you have a fresh battery in it, or charge the USB device first and then plug it into this product again.
2. Supported Music type:
 - a) This device only supports unprotected music with file extension: .mp3, .wma
 - b) Music bought from on-line music stores are not supported because they are secured by Digital Rights Management protection (DRM).
 - c) File name extensions that ended with the following are not supported: .wav, .m4a, .m4p, .mp4, .aac and etc.
3. No Direct connection can be made from a Computer USB port to this product even you have either or both mp3 or wma file in your computer.

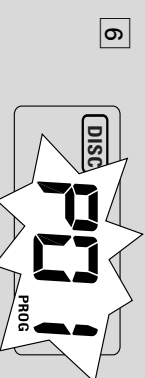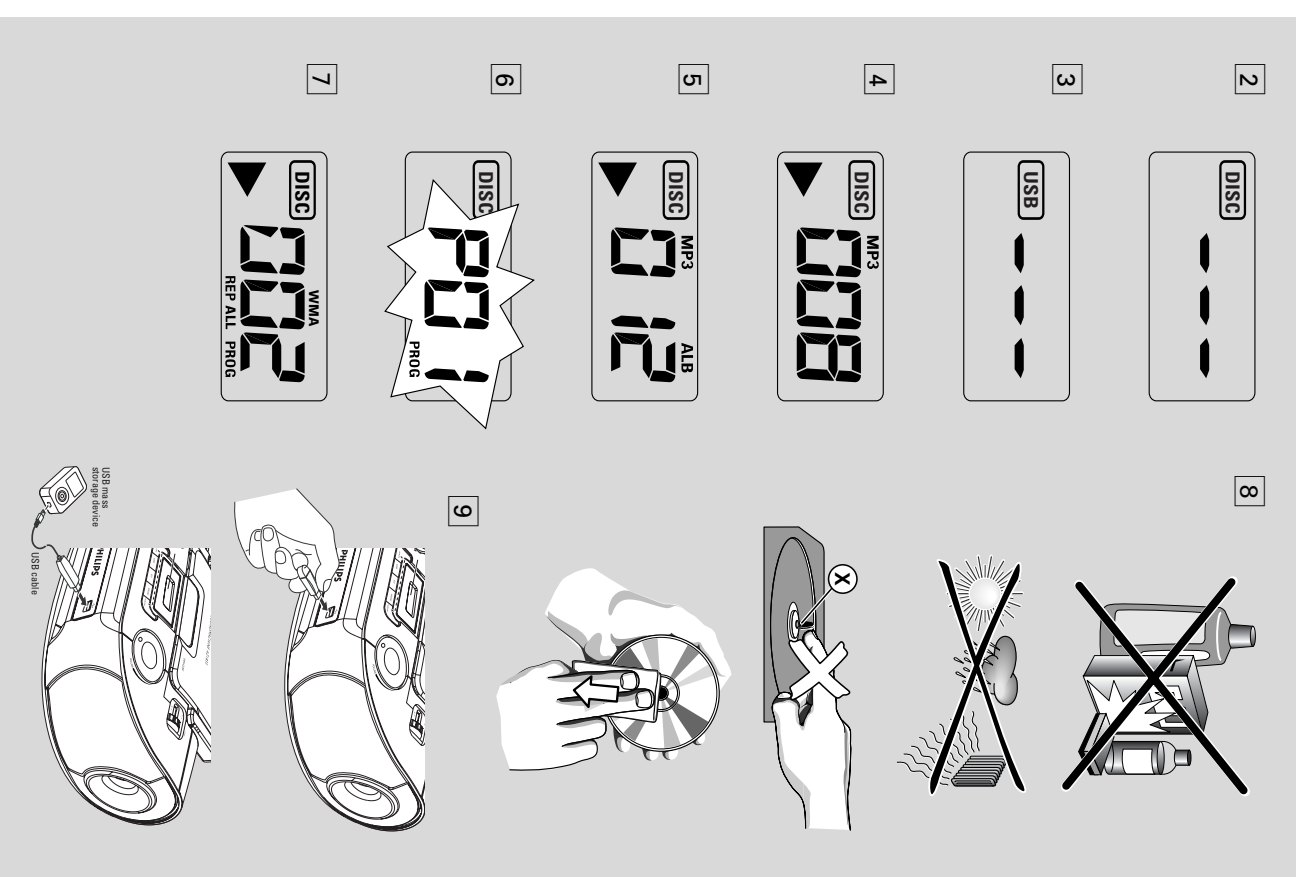

8

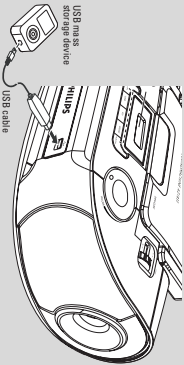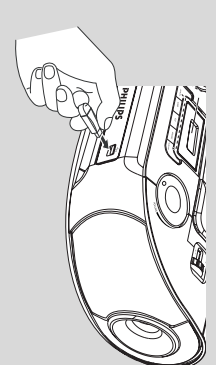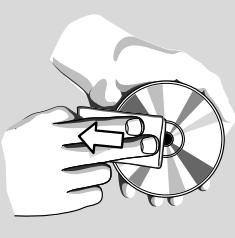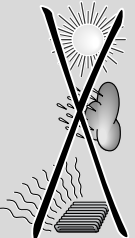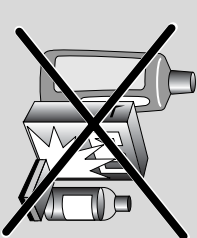     

Environmental information

All unnecessary packaging material has been omitted. The packaging can be easily separated into three materials: cardboard, polystyrene and plastic.

Your set consists of materials which can be recycled if disassembled by a specialized company. Please observe the local regulations regarding the disposal of packaging, dead batteries and old equipment.

Disposal of your old product

Your product is designed and manufactured with high quality materials and components, which can be recycled and reused.

When this crossed-out wheeled bin symbol is attached to a product it means the product is covered by the European Directive 2002/96/EC

Please inform yourself about the local separate collection system for electrical and electronic products.

Please act according to your local rules and do not dispose of your old products with your normal household waste. The correct disposal of your old product will help prevent potential negative consequences for the environment and human health.

