

VCD MP3 CD Soundmachine

AZ5130



EX-PANIUM

PHILIPS

## Important notes for users in the U.K.

### Mains plug

This apparatus is fitted with an approved 13 Amp plug. To change a fuse in this type of plug proceed as follows:

- 1 Remove fuse cover and fuse.
- 2 Fix new fuse which should be a BS1362 5 Amp, A.S.T.A. or BSI approved type.
- 3 Refit the fuse cover.

If the fitted plug is not suitable for your socket outlets, it should be cut off and an appropriate plug fitted in its place.

If the mains plug contains a fuse, this should have a value of 5 Amp. If a plug without a fuse is used, the fuse at the distribution board should not be greater than 5 Amp.

**Note:** The severed plug must be disposed of to avoid a possible shock hazard should it be inserted into a 13 Amp socket elsewhere.

### How to connect a plug

The wires in the mains lead are coloured with the following code: blue = neutral (N), brown = live (L).

As these colours may not correspond with the colour markings identifying the terminals in your plug, proceed as follows:

- Connect the blue wire to the terminal marked N or coloured black.
- Connect the brown wire to the terminal marked L or coloured red.
- Do not connect either wire to the earth terminal in the plug, marked E (or  $\perp$ ) or coloured green (or green and yellow).

Before replacing the plug cover, make certain that the cord grip is clamped over the sheath of the lead - not simply over the two wires.

### Copyright in the U.K.

Recording and playback of material may require consent. See Copyright Act 1956 and The Performer's Protection Acts 1958 to 1972.

## Italia

### DICHIARAZIONE DI CONFORMITA'

Si dichiara che l'apparecchio AZ5130, Philips risponde alle prescrizioni dell'art. 2 comma 1 del D.M. 28 Agosto 1995 n. 548.

Fatto a Eindhoven

Philips Consumer Electronics  
Philips, Glaslaan 2  
5616 JB Eindhoven, The Netherlands

## Norge

Typeskilt finnes på apparatens underside.

**Observer:** *Nettbryteren er sekundert innkoplet. Den innebygde nettdelen er derfor ikke frakoplet nettet så lenge apparatet er tilsluttet nettkontakten.*


For å redusere faren for brann eller elektrisk støt, skal apparatet ikke utsettes for regn eller fuktighet.

## CAUTION

**Use of controls or adjustment or performance of procedures other than herein may result in hazardous radiation exposure or other unsafe operation.**

## VAROITUS

**Muiden kuin tässä esitettyjen toimintojen säädön tai asetusten muutto saattaa altistaa vaaralliselle säteilylle tai muille vaarallisille toiminnolle.**

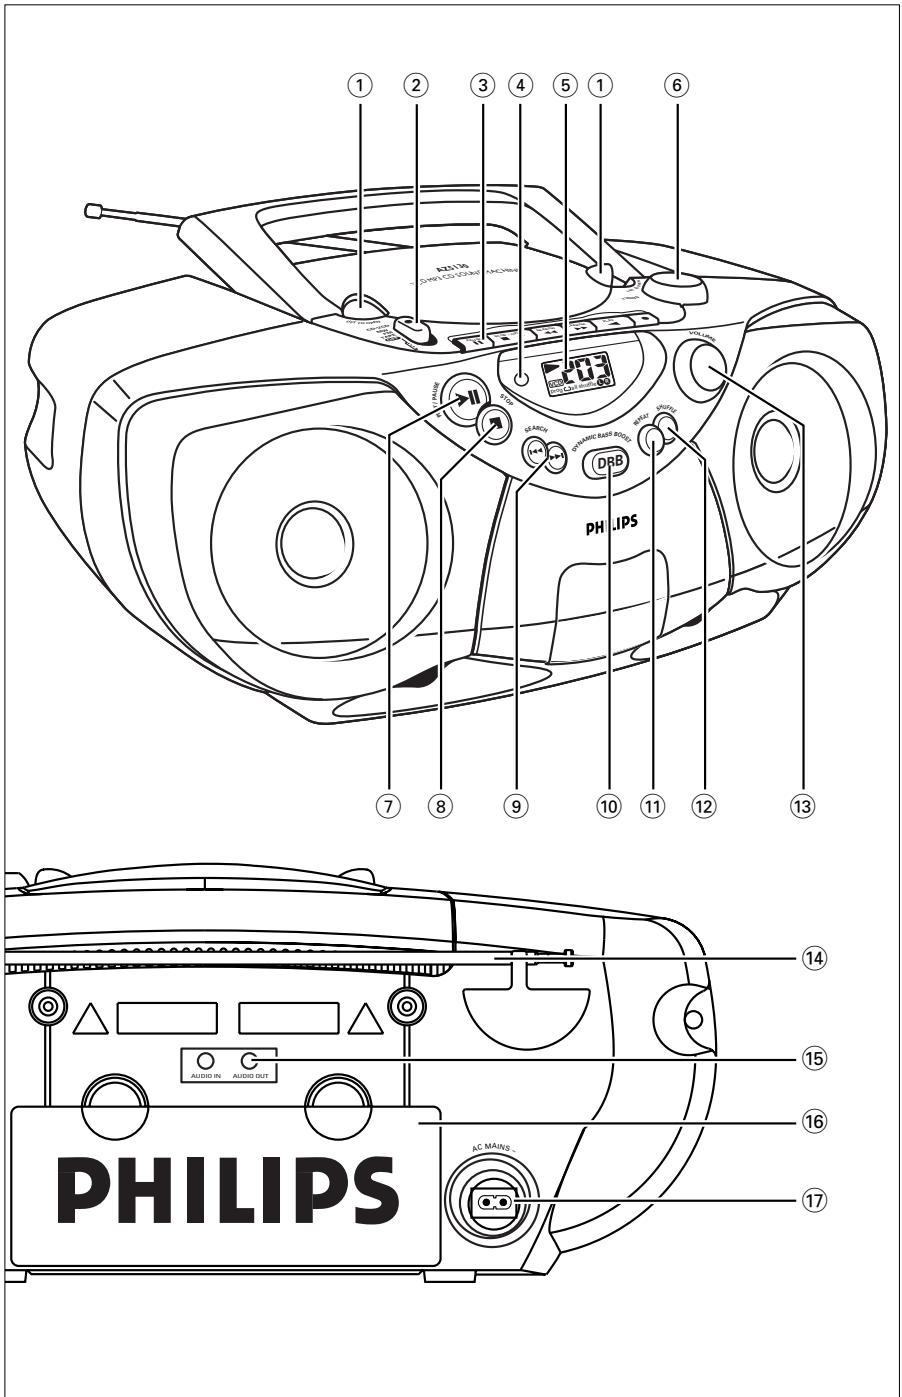

English .....	5
Français .....	21
Español .....	37
Deutsch .....	53
Nederlands .....	69
Italiano .....	85
Svenska .....	101
Dansk .....	117
Suomi .....	133
Português .....	149
Ελληνικά .....	165

English

Français

Español

Deutsch

Nederlands

Italiano

Svenska

Dansk

Suomi

Português

Ελληνικά

# MP3 General Information

## Dear Customer,

Thank you for buying the Philips MP3-CD Soundmachine. Your great new acquisition will allow you to listen to up to 10 hours of CD-like quality music, using the revolutionary new music compression technology MP3.

### MP3 technology

MP3 is short for MPEG1 Layer-3 encoding and decoding technology, a very powerful encoding algorithm with which you can shrink down the original digital audio sound data with a factor of up to 10 without losing significant sound quality.

### Recording and Playback

**It is recommended to set your recording bit rate to 128kbps, sampling frequency at 44.1kHz to achieve CD-like music playback quality.**

Since downloading MP3 files from the Internet, ripping songs from your own legal CD's and burning MP3 songs onto a CD-R, are a delicate process, the quality of a MP3 song may vary by these process. Subsequently, making a MP3-CD may not be entirely perfect.

**As a result of the above imperfection, you may experience an occasional "skip" while listening, or an occasional delay in accessing "previous/next" title to MP3-CD's. This is considered to be normal.**

A comparison chart is enclosed as below:

Sound Quality	Bit Rate	Approximate Reduction Ratio	Approximate total MP3-CD time	Comment
MW radio	32 kbps	40 : 1	40 hrs	Sound quality significantly affected-not recommended.
FM radio	64 kbps	20 : 1	20 hrs	
Near-CD	96 kbps	15 : 1	15 hrs	Balanced sound quality compression rate.
CD-like	128 kbps	10 : 1	10 hrs	
CD	256 kbps	5 : 1	5 hrs	Compression rate low suggest to play CDs instead.
CD	320 kbps	3 : 1	3 hrs	

# CONTROLS

## TOP AND FRONT PANEL

- ① **LIFT TO OPEN** - to open the CD door.
- ② **Source selector** - POWER ON/OFF switch and to select source of sound source:  
**CD•VCD/MW/FM/TAPE.**
- ③ **Cassette keys:**  
**PAUSE II** - to interrupt recording or playback.  
**STOP•OPEN ■ ▲** - To stop the tape and to open the cassette holder.  
**SEARCH ◀◀ or ▶▶** - to fast wind/rewind the tape.  
**PLAY ◀** - to start playback.  
**RECORD ●** - to start recording.
- ④ **REMOTE SENSOR** - infrared sensor for remote control
- ⑤ **LCD Display** - to show the VCD, MP3 functions and disc status.
- ⑥ **TUNING** - to tune to radio stations
- ⑦ **PLAY•PAUSE ▶II** - To start or interrupt CD playback.
- ⑧ **STOP ■** - to stop playback
- ⑨ **SEARCH ◀◀ or ▶▶** - to skip or search a passage or a track
- ⑩ **DBB (Dynamic Bass Boost)** - for a more vivid bass response.
- ⑪ **REPEAT** - to repeat a track/programme/entire CD playback
- ⑫ **SHUFFLE** - to play all tracks in random order
- ⑬ **VOLUME** - to adjust volume level.

## BACK PANEL

- ⑭ **Telescopic aerial** - to improve FM radio reception
- ⑮ **VIDEO/AUDIO OUT** - connect to the TV or VCR VIDEO/AUDIO IN
- ⑯ **Battery door** - to open the battery compartment
- ⑰ **AC MAINS ~** - socket for mains lead


## SUPPLIED ACCESSORIES

Remote Control	.....1 pc
Mains Cord	.....1 pc
Audio / Video Cable	.....1 pc

## REMOTE CONTROL

- ① **PBC (PLAYBACK CONTROL)** - to switch on or off PBC mode (for VCD version 2.0 only).
- ② **RETURN** - to return to the previous MENU level during playback (for VCD with PBC on).
- ③ **VIEW** - to scan through a VCD with 9 pictures display on TV screen. Only when PBC mode is switched off (for VCD operation only).
- ④ **OSD** - to switch on/off the on screen display on the TV screen.
- ⑤ **SLOW** - to watch a VCD at a slower speed (for VCD operation only).
- ⑥ **RESUME** - to resume playback in stop mode.
- ⑦ **GOTO** - to start playback at any chosen time on the disc (for CD/VCD operation only and PBC mode is off).
- ⑧ **PROG**  
for CD/VCD/MP3-CD . . . to programme disc tracks.

- ⑨ **REPEAT**  
for MP3-CD . . . . . to repeat a track, or whole disc.  
for CD/VCD . . . . . to repeat a disc track or the whole disc.
- ⑩ **A - B** - to playback a certain scene or passage repeatedly (for CD/VCD operation only).
- ⑪ **ZOOM**  
for VCD only . . . . . to zoom in or zoom out picture.
- ⑫ **SHUFFLE** - When in CD/VCD mode, press to start or stop shuffle play mode.
- ⑬ **MIX/SEL** - to select disc format (CD / MP3-CD) in a mixed mode disc.
- ⑭ **NTSC/PAL** - to select the video output for NTSC or PAL system.
- ⑮ **R/L/ST** - to select channel left / channel right / stereo sound, or to select a language in a bilingual VCD.
- ⑯ **DIGITS 0 - 9**  
for CD/VCD/MP3-CD - to select a track number.  
*(numbers consisting more than 2 figures must be keyed in within 2 seconds)*
- ⑰ **PLAY/PAUSE ►||**  
- to start or interrupt playback.
- ⑱ **SEARCH ◀◀ or ▶▶** (for CD/VCD/MP3-CD)  
- to search back or forward.
- ⑲ **ALBUM ◀▶**  
for MP3-CD only . . . . to select previous / next album
- ⑳ **TRACK ◀◀▶▶**  
for MP3-CD only . . . . to select previous/next title.  
for CD/VCD . . . . . to search backward/forward track.
- ㉑ **STOP ■**  
- to stop playback or to clear a programme.

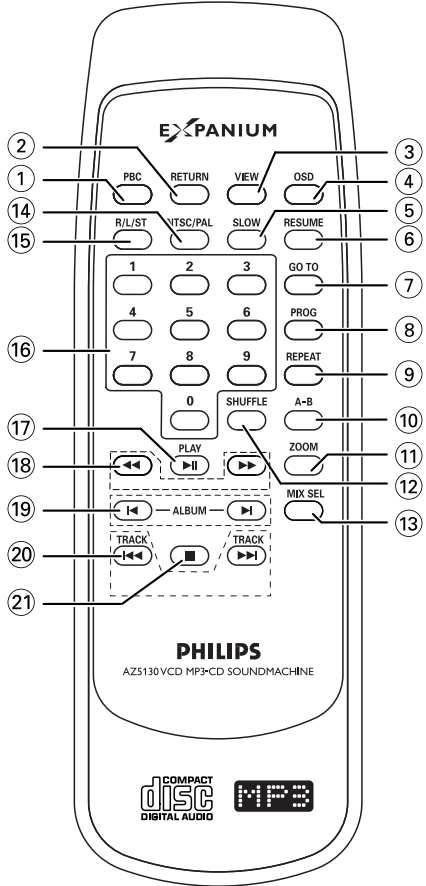

***This product complies with the radio interference requirements of the European Union.***

# POWER SUPPLY

## IMPORTANT!

For best CD/MP3-CD/VCD playback, please plug in your set to an AC power supply where convenient.

If operated in DC mode, see below approximate playtime. (Playtime is also varied from different brand batteries) :

Battery type	Playtime
Alkaline	approximate 9 hrs
Zinc Carbonate	approximate 45 minutes

The CD part of this system also serves as a Video CD player if you connect it to your TV set.


Before viewing the Video CD, ensure that the set is switched to corresponding PAL or NTSC system of your TV set (exception Multi-system TV).

## BATTERIES (NOT SUPPLIED)

Whenever convenient, use the mains supply if you want to conserve battery life. The battery supply will be switched off when the set is connected to the mains. Make sure you remove the plug from the set and wall outlet before inserting batteries.

### Batteries

1. Open the battery compartment and insert six batteries, type **R14, UM2** or **C-cells**, (preferably alkaline) with the correct polarity as indicated by the "+" and "-" symbols inside the compartment.

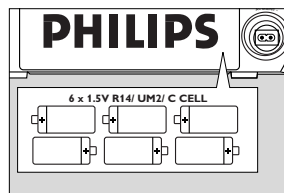

### Remote control

Open the battery compartment and insert two batteries, type **AAA, R03** or **UM4** (preferably alkaline).

2. Replace the compartment door, making sure the batteries are firmly and correctly in place.

3. Remove the batteries if they are exhausted or if they will not be used for a long period.

- The incorrect use of batteries can cause electrolyte leakage and will corrode the compartment or cause the batteries to burst. Therefore:
- Do not mix battery types, e.g. alkaline with zinc carbonate.
- When inserting new batteries, replace all at the same time.
- Remove the batteries if the set is not to be used for a long time.

### Note :

- The battery supply is switched off when the set is connected to the mains.


**TV screen is disabled during CD / MP3-CD playing if your AZ5130 is battery powered.**

**Batteries contain chemical substances, so they should be disposed of properly**



## MAINS


1. Check if the mains voltage as shown on the type plate (on the bottom of the set) corresponds to your local mains voltage. If it does not consult your dealer or service organization.
2. Connect the mains lead to the **AC MAINS ~** socket and the wall socket.  
→ The set is now ready for use.
3. To switch off the mains supply completely, pull the mains plug out of the wall socket.  
→ Disconnect the mains lead when you change over to battery supply, or to protect the set during heavy thunderstorms.

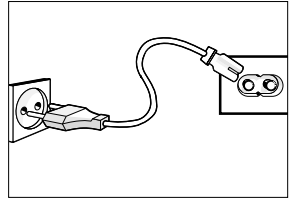

*The type plate is located on the bottom of the set.*



## GENERAL OPERATION

1. To switch on the set, adjust the source selector.
2. Adjust the sound using the **VOLUME** and **DBB** controls.
3. To switch off the set, adjust the source selector to the **TAPE/OFF** position, with the cassette keys released.

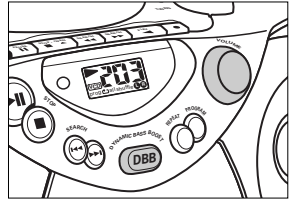

## RADIO RECEPTION

1. Set the source selector to **FM** or **MW**.
2. Adjust the sound using the **VOLUME** controls and the **DBB** switch.
3. Tune to a radio station using the **TUNING** knob.
  - For FM, pull out the telescopic aerial. To improve FM-reception, incline and turn the aerial. Reduce its length if the FM-signal is too strong (very close to a transmitter).
  - For MW, the set is provided with a built-in aerial, so the telescopic aerial is not needed. Direct the aerial by turning the whole set.
4. To switch off, set the source selector to the **TAPE/OFF** position (with the cassette keys released).

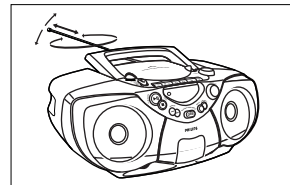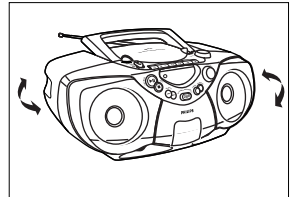

# CD/VCD/MP3-CD

## CAUTION

Use of controls or adjustments or performance of procedures other than herein may result in hazardous radiation exposure or other unsafe operation.

### Environmental information

All unnecessary packaging material has been omitted. We have done our utmost to make the packaging easily separable into three mono materials: cardboard, polystyrene and plastic.

**Your set consists of materials which can be recycled if disassembled by a specialized company. Please observe the local regulations regarding the disposal of packaging materials, exhausted batteries and old equipment.**

## DISCS FOR PLAYBACK

This set can play all digital audio CD, video CD, finalised digital audio CD-Recordable (CDR) discs and finalised digital audio CD-Rewritable (CDRW) discs.

### Support following MP3-CD formats:

- ISO 9660 or ISO 9660 + Joliet format - Max. 30 characters
- Max. Track number is 400
- Max. nested directory is 8 levels
- The max. album number is 99
- The max. MP3 programme track number is 20
- The max. length of each track is 99 minutes 59 seconds
- The player can play mixed mode disc of CD / MP3-CD
- Supported VBR bit-rate
- Supported sampling frequencies for MP3 disc : 8 kHz to 48 kHz (44.1kHz preferably)
- Supported bit-rates of MP3 disc are: 32 - 320 kbps (128 kbps preferably)



### Following formats are not supported

- The files like \*.WMA, \*.AAC, \*.DLF, \*.M3U, \*.PLS, MP3 PRO
- The non-session closed discs

## LOADING A DISC

1. Set the source selector to **CD/VCD**.
2. Lift to open the CD door.  
→ "CD" will be displayed
3. Insert a disc with the label side facing up.
4. Close the CD door.  
→ The total number of tracks of the disc appear on the display.  
→ "00" will be displayed if no disc is inserted or error in CD operation



### For MP3-CD only

→ The total track number "xxx" and album number "Rxx" will be displayed interchangeably.

→ On TV screen, the total ALBUM and TRACK number will display, also with the album list (max. 10 lines per page). The current selected music is highlighted.

**Notes :** - To ensure good system performance, wait until the disc completely reads before proceeding.

- For MP3-CD, the disc reading time may exceed 1 minute due to the large number of songs compiled into one disc.

## PLAYING A NORMAL DISC

1. Press ►|| to start playback.

→ The track number of the current track and ► appear on the display.

• To interrupt playback, press ►||.

→ ► will disappear and the current track number will start flashing.

• To resume playback, press ►|| again.

2. To stop playback, press ■.



## SELECTING A DESIRED TRACK/PASSAGE

### To select a desired track

• Press ◀◀ or ▶▶ on the set repeatedly (or use digits 0 - 9 buttons on the remote control) until the desired track appears on the display.

• If playback is stopped, press ►|| to start playback.

### To search for a particular passage during playback

1. Press and hold ◀◀ or ▶▶ on the set

→ During searching, the volume will be muted.

2. When you recognize the passage you want release the **SEARCH** button.

→ Normal playback resumes.

## For MP3-CD only

### To select a desired album

• On the remote control, press ◀ or ▶ until the desired album number appear on the display.

→ "R X X" will be displayed.

→ On TV screen, the arrow will move forward/backward in the ALBUM menu.

### To select a desired track

• Press ◀◀ or ▶▶ on the set repeatedly (or on the remote control, press ◀◀ or ▶▶) to select a desired track from the current album.

→ "X X X" will be displayed.

→ On TV screen, the arrow will move forward/backward in the TRACK menu.

• Use the digital keys on the remote control to select the track under current album directly.

### To select and playback another track during playback mode

1. Press ◀◀ or ▶▶ repeatedly to select another track.

→ The new selected track will show on the display screen and TV screen and playback continuously.

## For VCD only

• Either press ◀◀ or ▶▶ on the remote control repeatedly to select fast search speed (x1, x2, x3 or x4) or

press & hold ◀◀ or ▶▶ on the set for 1 second and then release ◀◀ or ▶▶ to select fast search speed (x1). Repeat this step to select other speed (x2, x3, x4).

## PROGRAMMING TRACKS

### For CD only

Programming tracks of disc is possible when playback is stopped. Up to 20 tracks can be stored in the memory in any order.

1. In stop mode, press **PROG** (on remote control) to enter programme setting.  
→ **PROG** will flash on the display.
2. Press **digits 0 - 9** on the remote control or **◀◀ / ▶▶** to select the desired track.
3. Press **PROG** to store the select track. The number "XXXX" represents the track no.
  - Repeat steps **1** to **3** to store other tracks.
4. Press **■** to end programme setting.  
→ **PROG** will remain on the display.
  - Press **PROG** (on remote control) in stop mode to review the programme sequence.
5. Press **▶||** to play the programmed tracks.
  - If you press **REPEAT** during programme playback, the current track or all programmed tracks will be played repeatedly.  
→ **REPEAT/REPEAT ALL** icon and **PROG** will appear on the display.
6. Press **■** in stop mode to clear the programme.  
→ **PROG** will disappear from the display.

**Notes :** -The programming is automatically cleared as soon as the CD compartment is opened.  
- The function of programme setting is disabled in PLAY/PAUSE mode.  
- Programme cannot be used for VCDs when PBC is switched on. Switch off PBC before storing tracks from such a VCD.

### For MP3-CD only

1. In stop mode, press **PROG** on the remote control to enter programme setting.  
→ **PROG** will start flashing and "PG I" will be displayed.  
→ On TV screen, "PROG" program list (5 lines per page) will be displayed.
2. Press **digits 0 - 9** on the remote control or **◀ / ▶** to select the desired album.
3. Press **PROG** to store the select album. The number "A:XX" represents the album no.
4. Press **◀◀ / ▶▶** repeatedly (or **digits 0 - 9** on the remote control) to select the desired TRACK for programming.
5. Press **PROG** to store the select track.  
→ **PROG** will remain on the display.
  - Repeat steps **1** to **5** to store other desired album and track.
6. Press **■** to end programme setting.
  - Press **PROG** in stop mode can review the programme sequence.
7. Press **▶** to start programme playback. You can press **◀◀ / ▶▶** to select the programmed track to play.
8. Press **■ once** stop programme playback or **twice** to clear the programme.

**SHUFFLE**


 
You can play all the tracks in random order.

1. During playing, pause or stop mode, press **SHUFFLE** to enable SHUFFLE play mode.  
→ **SHUFFLE** will appear on the display.
2. To exit shuffle mode, press **SHUFFLE** again or **■**.  
→ **SHUFFLE** will disappear from the display.

**Note** : - If the Shuffle function enabled, and the Repeat function is set on, will disable the Shuffle play mode.

**REPEAT**

You can play the current track or the whole disc repeatedly.

1. During CD/ MP3-CD playing or pause mode, press **REPEAT** on the remote control or on the set.  
→ **REPEAT** icon  - to repeat the current track.  
→ **REPEAT ALL** icon  all- to repeat the whole disc.
2. To exit the repeat mode, press **REPEAT** until the **REPEAT/REPEAT ALL** icon disappears from the display.

**Notes** : - If the Repeat function is enable, and the Shuffle function is set on, will disable all the Repeat play modes.  
- If the Repeat function is enable, and the Stop button is pressed, will disable all the Repeat play modes.

**VIDEO CD****Adjusting the TV System**

Before viewing the Video CD, ensure that the set is switched to corresponding PAL or NTSC system of your TV set (exception Multi - system TV).

1. On the remote control, press **NTSC/PAL** to switch between NTSC and PAL TV system.

**OSD - On Screen Display**

If you insert VCD/CD, your TV screen will serve as an additional display for messages (e.g. PLAY, STOP), and information stored on the VCD/CD.

- Press OSD on the remote control to select viewing various information.  
→ The current track and current /elapsed time in the track/disc appear on the display.

## VIDEO CD

### Playing a Video CD with PBC

VCD with PBC (Playback Control) will be indicated on your TV screen as soon as they are inserted. PBC is a predefined play sequence stored on the VCD.

1. Switch on the TV, insert a VCD with PBC.
2. Menu appears on the TV screen.

### If the menu consists of a list of titles, you can select a sequence directly

1. Press **digits 0 - 9** on the remote control to select your choice.  
→ The VCD starts playing of the selected sequence automatically.
  2. Press **RETURN** on the remote control to go back to the previous menu.
- Note :** - If a menu consists of more than one page, press **◀◀/▶▶** to go through the pages.

### Switching off PBC

- In stop mode, press **PBC**.  
→ On TV screen, "PBC OFF" will be displayed shortly.

**Notes :** - Programme mode is not available whenever PBC mode is switched on.  
- The menu structure depends on the programme stored on the VCD. Please refer to the information supplied with the disc.

### Pause

1. During playback, press **▶II** to have a still picture on the TV screen.  
→ The sound will be muted.  
→ On TV screen, "PAUSE" will be displayed.
2. Press **▶II** again to continue playback.

### Goto

1. Press **GOTO** on the remote control.  
→ On TV screen, "GOTO --:--" will be displayed.
2. Press **digits 0 - 9** on the remote control to key in the disc time which you want the disc to begin playback.

**Notes :** - The disc time entered should not be greater than the total disc time.  
- Goto mode is not available whenever PBC mode is switched on.

### Slow

1. Press **SLOW** on the remote control to watch a VCD at a slower speed. There are 4 types of slow modes to select.  
→ The sound will be muted.  
→ On TV screen, "SLOW 1/2", "SLOW 1/4", "SLOW 1/8" or "SLOW 1/16" will be displayed.
2. To resume playback at normal speed, press **SLOW** repeatedly until "PLAY" appears on the TV screen or press **▶II**.

### A-B repeat

This feature is also applicable to audio CD (except for MP3-CD). To Play a certain scene or passage of the disc repeatedly.

## VIDEO CD

1. Press **A-B** on the remote control during playback to mark the start point of the chosen scene or passage.  
→ "**REPEAT A**" will appear on the screen.
2. Press **A-B** again to mark the end of the chosen scene or passage.  
→ "**REPEAT AB**" will appear on the screen.  
→ The selected scene or passage will start playing repeatedly.
3. Press **A-B** once more to return to normal playback.  
→ "**REPEAT AB**" will disappear from the display.

**Notes :** - You can also cancel A-B repeat by pressing **◀◀** or **▶▶**.  
- A-B repeat marking can cross from one track to another. But for VCD 2.0, you are only able to set the A-B repeat marking within the same track.

## Resume

- In stop mode, press **RESUME** on the remote control to start playback again from where you have stopped.

**Note :** - Resume will not be available if you have changed the disc, opened the disc tray or disconnected the system from the power supply.

## View

This feature allows you to scan through a VCD for a quick review. PBC mode must be switched off.

1. In stop mode, press **VIEW** on the remote control to go to disc view function.  
→ On TV screen, up to 9 pictures will be displayed. If a menu consists of more than one page, press **◀◀** or **▶▶** to view the previous/next page.  
→ The first several seconds of each track will be played.  
To exit review mode, press **digits 0 - 9** to play the desired track or **▶▶** to play the current selected track.
2. In playback mode, press **VIEW** on the remote control to go to track view function.  
→ press **◀◀** or **▶▶** to select the track.  
→ On TV screen, up to 9 pictures within the track will be displayed.  
→ The first several seconds of each picture will be played.  
To exit review mode, press **digits 0 - 9** to play the desired position within the track or **▶▶** to play the current selected position.

**Note :** - If the disc is AVCD disc and there're no video tracks on the same viewed page, cannot use the direct digital key to play the track.

## Return

- Press **RETURN** on the remote control to return to the previous VCD disc MENU level. It is functional only for Video CD when PBC is switched on.

## R/L/ST

You can use it to select the different audio modes.

- Press **R/L/ST** on the remote control repeatedly to select the following modes:  
**L** → **R** → **L R** on the LCD represents channel left/channel right / dual channel on a bilingual VCD or mono left / mono right / stereo on single language VCD.

# CD/VCD/MP3-CD

## PLAYING A MIXED MODE DISC

This set can play a mixed mode disc.

- mixture of audio CD and MP3-CD
- mixture of other combination may not be operated normally.

1. As default, audio CD tracks will be read first.

→ **L** **R** will be displayed.


→ TV screen, "MIX, CD-DA" will be displayed.

2. Press **MIX/SEL** (on the remote control) repeatedly to select other disc modes.

• **MP3-CD:**

→ **MP3** is displayed.

→ TV screen, MP3 menu is displayed.

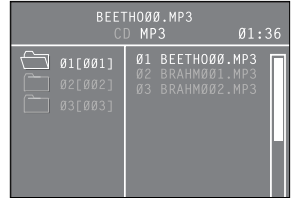


**Note :** - For protected CDs, "MIX CD-DA" is displayed on your TV screen even if the disc does not have other format. The **MIX/SEL** normal functions are not available for protected CDs.



## CASSETTE PLAYBACK

1. Set the source selector to **TAPE/OFF**.
2. Press **STOP•OPEN** ■ ▲ to open the cassette holder.
3. Insert a recorded cassette.
4. Press **PLAY** ◀ and playback will start.
5. Adjust the sound using the **VOLUME** and **DBB** controls.
6. For brief interruptions, press **PAUSE II**. Press **PAUSE II** again to resume playback.
7. By pressing ◀◀ or ▶▶, fast winding of the tape is possible in both directions.
8. To stop playback, press **STOP•OPEN** ■ ▲  
→ The keys are automatically released at the end of the tape.
9. Set the source selector to **TAPE/OFF** position (with the cassette keys are released) to switch off the set.

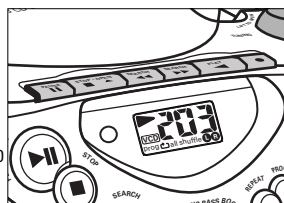


## CASSETTE RECORDING

### General information on cassette recording

- Recording is permissible insofar as copyright or other rights of third parties are not infringed.
- This deck is not suitable for recording on CHROME (IEC II) or METAL (IEC IV) type cassettes. For recording you should use NORMAL type cassettes (IEC I) on which the tabs have not been broken.
- Check and tighten slack tape before use with a pencil, to avoid jamming the deck mechanism.
- The recording level is set automatically.

**Note** : - No recording will take place during the 7 seconds in the beginning of the tape.


- To prevent the accidental erasure of a recording, keep the cassette side to be safeguarded in front of you and break out the left tab. Recording on this side is no longer possible.

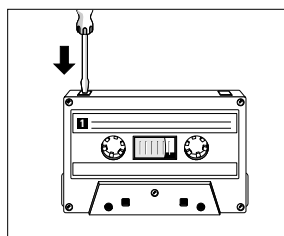

# CASSETTE RECORDER


## RECORDING FROM THE RADIO

1. Set the source selector to **FM** or **MW**.
2. Tune to the desired radio station using the TUNING knob.
3. Press **STOP•OPEN** ■ ▲ to open the cassette holder.
4. Insert a blank tape.
5. Press **RECORD** ● to start recording.
6. For brief interruptions, press **PAUSE II**. To resume recording, press **PAUSE II** again.
7. To stop recording, press **STOP•OPEN** ■ ▲

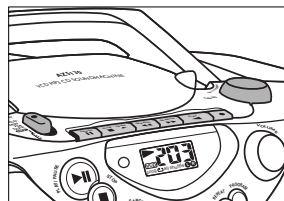

## SYNCHRO START CD RECORDING

1. Set the source selector to **CD•VCD**.
2. Insert a CD and if desired, programme track numbers.
3. Press **STOP•OPEN** ■ ▲ to open the cassette holder.
4. Insert a blank cassette.
5. Press **RECORD** ● to start recording.  
→ Playing of the CD programme starts automatically from the beginning of the programme.
6. For brief interruptions, press **PAUSE II**. To resume recording, press **PAUSE II** again.
7. To stop recording press **STOP•OPEN** ■ ▲

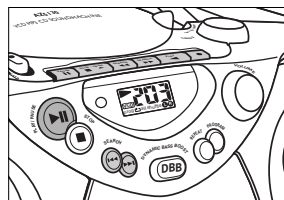


### To select and record a particular passage within a track

1. Press and hold **SEARCH** ◀◀ or ▶▶ on the set to select a passage.  
→ Recording will start from this exact point when you press **RECORD** ●.
2. Put the CD player in **PAUSE II** position at the selected passage.
3. Press ▶▶ to start recording.



## PRECAUTIONS & GENERAL MAINTENANCE

- Place the set on a hard, flat surface so that the system does not tilt.
- Always shut the CD door to keep the CD compartment dust-free. To clean, dust the compartment with a soft dry cloth.
- The mechanical parts of the set contain self-lubricating bearings and must not be oiled or lubricated.
- To clean the set, use a soft, slightly dampened chamois leather. Do not use any cleaning agents containing alcohol, ammonia, benzene or abrasives as these may harm the housing.
- Do not expose the system, batteries or discs to humidity, rain, sand or excessive heat (caused by heating equipment or direct sunlight). Always keep the disc tray closed to avoid dust on the lens.
- No objects filled with liquids, such as vases, shall be placed on the apparatus.

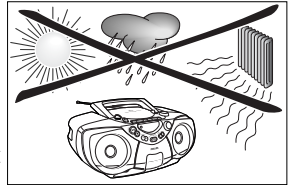

## CD PLAYER AND CD HANDLING


- The lens of the CD player should *never be touched*.
- Sudden changes in the surrounding temperature can cause condensation to form and the lens of your CD player to cloud over. Playing a CD is then not possible. Do not attempt to clean the lens but leave the set in a warm environment until the moisture evaporates.
- Use only Digital Audio CDs.
- To take a CD out of its box, press the centre spindle while lifting the CD. Always pick up the CD by the edge and replace the CD back in its box after use to avoid scratching and dust.
- To clean the CD, wipe in a straight line from the centre towards the edge using a soft, lint-free cloth. Do not use cleaning agents as they may damage the disc.
- *Never write* on a CD or attach stickers to it.

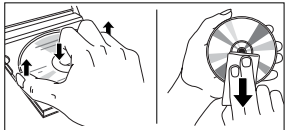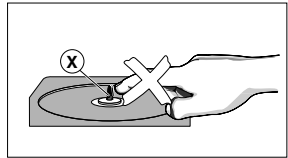

## TAPE DECK MAINTENANCE

To ensure a good recording and playback of the tape deck, clean parts (A), (B) and (C) show in the diagram below, after approx. 50 hours of operation, or on average once a month. Use a cotton bud slightly moistened with alcohol or a special head cleaning fluid to clean the deck.

- Open the cassette holder by pressing **STOP•OPEN** ■ ▲.
- Press **PLAY** ◀ and clean the rubber pressure rollers (C).
- Press **PAUSE** || and clean the magnetic heads (A) and also the capstans (B).
- After cleaning, press **STOP•OPEN** ■ ▲.

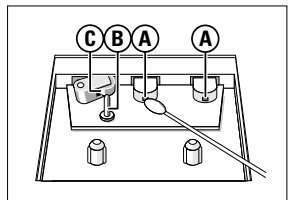

Cleaning of the heads can also be done by playing a cleaning cassette through once.

# TROUBLESHOOTING

If a fault occurs, first check the points listed below before taking the set for repair.  
If you are unable to remedy a problem by following these hints, consult your dealer or service centre.

**WARNING:** *Do not open the set as there is a risk of electric shock. Under no circumstances should you try to repair the set yourself, as this will invalidate the guarantee.*

## Problem

## Solution

---

### CD/VCD OPERATION

"NO DISC" is displayed

- Insert a disc.
- Check if the disc is inserted upside down.
- Wait until the moisture condensation at the lens has cleared.
- Replace or clean the disc, see "Maintenance"
- Use a readable disc or correct recorded format MP3-CD.

No picture on TV screen

No colour on TV

- Connect the cable between the system and TV.
- Change the system to the respective PAL or NTSC setting.

---

### RADIO RECEPTION

Radio reception is poor

- If the signal is too weak, adjust the antenna for better reception.
- Increase the distance between the Receiver and your TV or VCR.

---

### TAPE OPERATION/RECORDING

Recording or playback cannot be made

- Clean deck parts, see "Maintenance".
- Use only NORMAL (IEC I) tape.
- Apply a piece of adhesive tape over the missing tab space.

---

### GENERAL

The system does not react when buttons pressed/set does not work/no display on LCD.


Sound cannot be heard or is of poor quality

The remote control does not function properly


- Slide the source selector to TAPE/OFF. Remove and reconnect the AC power plug for 30 seconds and switch on the set again.
- Adjust the volume.
- Make sure the MP3-CD was recorded within 32-320 kbps (128kbps preferably) with sampling frequencies at 8 - 48 kHz (44.1kHz preferably).
- Reduce the distance between the remote control and the system.
- Insert the batteries with their polarities (+/- signs) aligned as indicated.
- Replace the batteries.
- Point the remote control in the direction of the system's IR sensor.

**Meet Philips at the Internet**

**<http://www.philips.com>**

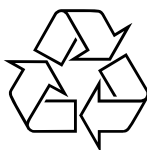

AZ 5130

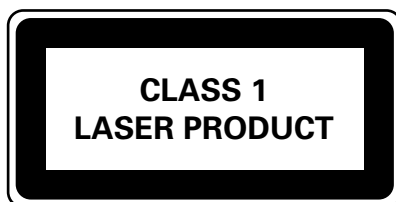

YM/JW-346-A