

VCD MP3 CD Soundmachine

AZ5155



EXPANIAM

PHILIPS

# INDEX

English




## English


MP3 General Information.....	5	CD/VCD/MP3-CD	
Controls .....	6	.....	10–16
Remote Controls.....	6-7	Cassette recorder .....	17–18
Power Supply .....	8-9	Karaoke.....	18
General Operation .....	9	Maintenance .....	19
General Radio.....	9	Troubleshooting .....	20

中文

## 中文

MP3 General Information.....	23	CD/VCD/MP3-CD	
Controls .....	24	.....	28–34
Remote Controls.....	24-25	Cassette recorder .....	35–36
Power Supply .....	26-27	Karaoke.....	36
General Operation .....	27	Maintenance .....	37
General radio.....	27	Troubleshooting .....	38

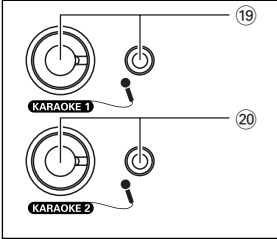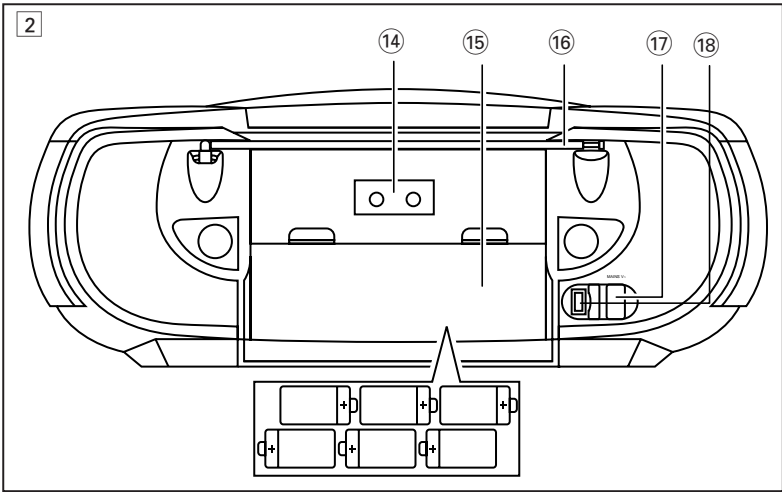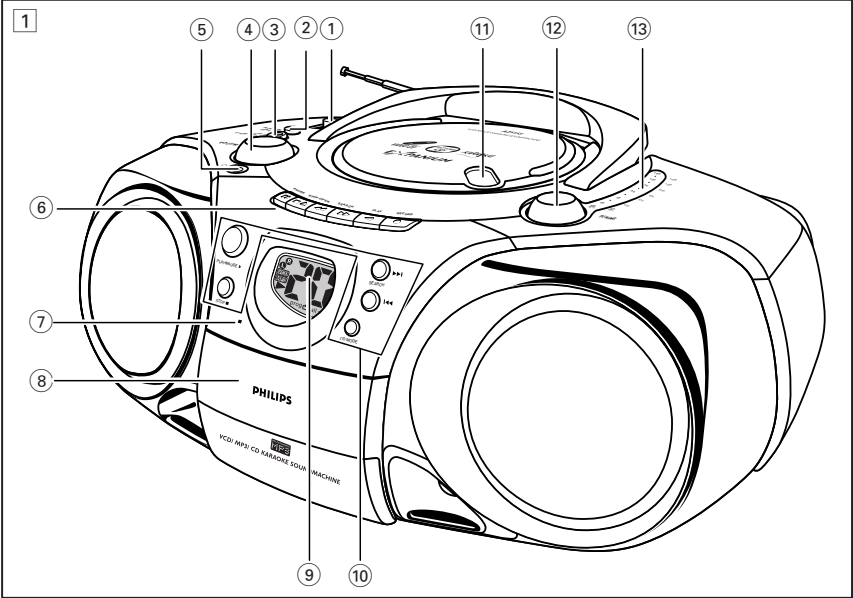

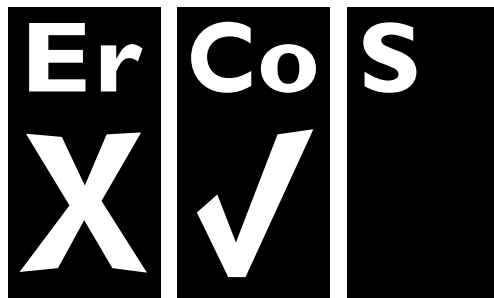

### **Optimum disc playability : ensuring excellent picture quality**

Philips components and modules for the various CD applications have always enjoyed an excellent reputation in the market place for super disc playability - the ability to play discs which may be scratched, soiled or not fully according to the standard specification. This position has been underlined by tests showing the superior performance of the various Philips players, as well as by the positive experiences of millions of individual consumers around the world.

### **Constantly improving performance**

As the penetration of the CD system has increased, and new applications like CD-ROM and Video CD have become commonplace, Philips Components - as the CD technology inventor and as one of the major suppliers of CD player modules in the industry - has constantly improved the performance of its products.

One of the ways in which this benefits users is by optimum disc playability. This is an important parameter for CD players other than CD Audio, and especially for the Video CD applications, because any loss of data from the disc will at best cause disturbances in the reproduced picture, and at worst can cause the player to lose track so that disc playing fails.

### **Presenting Super Error Correction**

To ensure consistently good results when playing Video CD discs of all quality grades and conditions, Philips has introduced further improvements in the system's playability. These developments together are called Super Error Correction, a proprietary Philips technology optimizing the system's ability to handle less than perfect discs with the minimum disturbance to normal playing.

By effectively eliminating virtually all errors arising under normal playing conditions, Super Error Correction ensures that the picture quality as seen by the user is independent of disc play. The video encoding and processing during mastering of the disc, and the MPEG-1 decoding and video encoding in the signal processing stages, are now the only limiting factors for picture quality.

# MP3 General Information

## Dear Customer,

Thank you for buying the Philips MP3-CD Soundmachine. Your great new acquisition will allow you to listen to up to 10 hours of CD-like quality music, using the revolutionary new music compression technology MP3.

## MP3 technology

MP3 is short for MPEG1 Layer-3 encoding and decoding technology, a very powerful encoding algorithm with which you can shrink down the original digital audio sound data with a factor of up to 10 without losing significant sound quality.

## Recording and Playback

**It is recommended to set your recording bit rate to 128kbps, sampling frequency at 44.1kHz to achieve CD-like music playback quality.**

Since downloading MP3 files from the Internet, ripping songs from your own legal CD's and burning MP3 songs onto a CD-R, are a delicate process, the quality of a MP3 song may vary by these process. Subsequently, making a MP3-CD may not be entirely perfect.

**As a result of the above imperfection, you may experience an occasional "skip" while listening, or an occasional delay in accessing "previous/next" title to MP3-CD's. This is considered to be normal.**


A comparison chart is enclosed as below:

Sound Quality	Bit Rate	Approximate Reduction Ratio	Approximate total MP3-CD time	Comment
AM radio	32 kbps	40 : 1	40 hrs	Sound quality significantly affected-not recommended.
FM radio	64 kbps	20 : 1	20 hrs	
Near-CD	96 kbps	15 : 1	15 hrs	Balanced sound quality compression rate.
CD-like	128 kbps	10 : 1	10 hrs	
CD	256 kbps	5 : 1	5 hrs	Compression rate low suggest to play CDs instead.
CD	320 kbps	3 : 1	3 hrs	







## SUPPLIED ACCESSORIES

Remote Control .....	1 pc
Mains Cord .....	1 pc
Audio / Video Cable .....	1 pc





## TOP AND FRONT PANEL(see figure 1)

- ① **Source selector :**  
**FM, MW, CD/VCD, TAPE/OFF** - to select source of sound/radio waveband, and also the POWER OFF switch.
- ② **INCREDIBLE SURROUND** - to create a phenomenal surround sound stereo effect.
- ③ **DYNAMIC BASS BOOST** - for a more vivid bass response.
- ④ **VOLUME** - to adjust volume level.
- ⑤  - 3.5 mm stereo headphone socket

### CASSETTE RECORDER :

- ⑥ **PAUSE II** - to interrupt recording or playback.  
**STOP•OPEN**   - To stop the tape and to open the cassette holder.  
**SEARCH**  or  - to fast wind/rewind the tape.  
**PLAY**  - to start playback.  
**RECORD**  - to start recording.
- ⑦ **REMOTE SENSOR** - infrared sensor for remote control
- ⑧ **Cassette compartment**

### CD PLAYER :

- ⑨ **CD/VCD Display** - to show the CD/VCD/MP3-CD functions and disc status.
- ⑩ **PLAY/PAUSE**  **II** - To start or interrupt CD/VCD/MP3-CD playback.  
**STOP**  - to stop CD/VCD/MP3-CD playback.  
**CD MODE** - to select a different play mode e.g. SHUFFLE/REPEAT.  
**SEARCH**  or  - to skip or search a passage or a track.
- ⑪ **OPEN** - to open / close the CD door.

### RADIO:

- ⑫ **TUNING** - to tune to radio stations.
- ⑬ **Tuning dial pointer**

## BACK PANEL(see figure 2)

- ⑭ **AUDIO / VIDEO SOCKET** - to connect to a TV set.
- ⑮ **Battery door** - to open the battery compartment.
- ⑯ **Telescopic aerial** - to improve FM reception.
- ⑰ **AC MAINS** - Socket for mains lead.
- ⑱ **Voltage selector** (some version only) - to adjust to match the local voltage 110/220V before plugging in the set.

## KARAOKE PANEL(see figure 3)


- ⑲ **KARAOKE 1 LEVEL / MIC**
- ⑳ **KARAOKE 2 LEVEL / MIC**  
- to connect microphone jack.  
- to adjust the mixing level for karaoke.

## REMOTE CONTROL (see figure 4)

- ① **PBC (PLAYBACK CONTROL)** - to switch on or off PBC mode (for VCD version 2.0 only).
- ② **RETURN** - to return to the previous MENU level during playback (for VCD with PBC on).
- ③ **VIEW** - to scan through a VCD with 9 pictures display on TV screen. Only when PBC mode is switched off (for VCD operation only).
- ④ **OSD** - to switch on/off the on screen display on the TV screen.
- ⑤ **SLOW** - to watch a VCD at a slower speed (for VCD operation only).
- ⑥ **RESUME** - to resume playback in stop mode.
- ⑦ **GOTO** - to start playback at any chosen time on the disc (for CD/VCD operation only and PBC mode is off).

- ⑧ **PROG**  
for CD/VCD/MP3-CD . . . to programme disc tracks.
- ⑨ **REPEAT**  
for MP3-CD . . . . . to repeat a track, or whole disc.  
for CD/VCD . . . . . to repeat a disc track or the whole disc.
- ⑩ **A - B** - to playback a certain scene or passage repeatedly (for CD/VCD operation only).
- ⑪ **ZOOM**  
for VCD only . . . . . to zoom in or zoom out picture.
- ⑫ **SHUFFLE** - When in CD/VCD mode, press to start or stop shuffle play mode.
- ⑬ **MIX/SEL** - to select disc format (CD / MP3-CD) in a mixed mode disc.
- ⑭ **NTSC/PAL** - to select the video output for NTSC or PAL system.
- ⑮ **R/L/ST** - to select channel left / channel right / stereo sound, or to select a language in a bilingual VCD.
- ⑯ **DIGITS 0 - 9**  
for CD/VCD/MP3-CD - to select a track number.  
*(numbers consisting more than 2 figures must be keyed in within 2 seconds)*
- ⑰ **PLAY/PAUSE ►||**  
- to start or interrupt playback.
- ⑱ **SEARCH ◀◀ or ▶▶** (for CD/VCD/MP3-CD)  
- to search back or forward.
- ⑲ **ALBUM ◀▶**  
for MP3-CD only . . . . to select previous / next album
- ⑳ **TRACK ◀◀▶▶**  
for MP3-CD only . . . . to select previous/next title.  
for CD/VCD . . . . . to search backward/forward track.
- ㉑ **STOP ■**  
- to stop playback or to clear a programme.

- ㉒ **KEY+ / KEY-** - to change the VCD key tone to suit to your vocal range.
- ㉓ **ECHO + / ECHO -** - to adjust the VCD echo level for karaoke after you inserted a microphone.

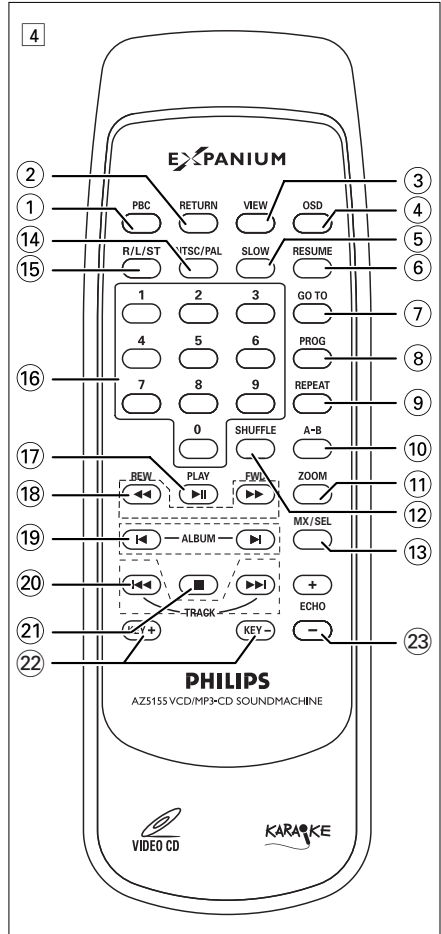

# POWER SUPPLY

## IMPORTANT!

For best CD/MP3-CD/VCD playback, please plug in your set to an AC power supply where convenient.

If operated in DC mode, see below approximate playtime. (Playtime is also varied from different brand batteries) :

Battery type	Playtime
Alkaline	approximate 9 hrs
Zinc Carbonate	approximate 45 minutes

The CD part of this system also serves as a Video CD player if you connect it to your TV set.

Before viewing the Video CD, ensure that the set is switched to corresponding PAL or NTSC system of your TV set (exception Multi-system TV).

## BATTERIES (NOT SUPPLIED)

Whenever convenient, use the mains supply if you want to conserve battery life. The battery supply will be switched off when the set is connected to the mains. Make sure you remove the plug from the set and wall outlet before inserting batteries.

### Batteries

1. Open the battery compartment and insert six batteries, type **R20, UM1** or **D-cells**, (preferably alkaline) with the correct polarity as indicated by the "+" and "-" symbols inside the compartment.



### Remote control

Open the battery compartment and insert two batteries, type **AAA, R03** or **UM4** (preferably alkaline).

2. Replace the compartment door, making sure the batteries are firmly and correctly in place.

3. Remove the batteries if they are exhausted or if they will not be used for a long period.

- The incorrect use of batteries can cause electrolyte leakage and will corrode the compartment or cause the batteries to burst. Therefore:
- Do not mix battery types, e.g. alkaline with zinc carbonate.
- When inserting new batteries, replace all at the same time.
- Remove the batteries if the set is not to be used for a long time.

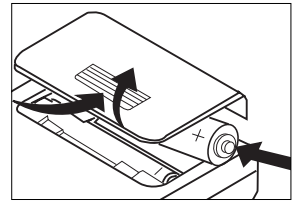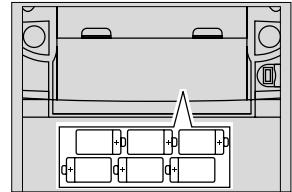

### Notes :

- The battery supply is switched off when the set is connected to the mains.


**TV screen is disabled during CD / MP3-CD playing if your AZ5155 is battery powered.**

**Batteries contain chemical substances, so they should be disposed of properly**



## MAINS


1. Check if the mains voltage as shown on the type plate (on the bottom of the set) corresponds to your local mains voltage. Select 110 or 220V by the selector (for some version only).
2. If your set is equipped with a voltage selector, adjust the selector so that it matches with the local mains.
3. Connect the mains lead to the **AC MAINS ~** socket and the wall socket.  
→ The set is now ready for use.
4. To switch off the mains supply completely, pull the mains plug out of the wall socket.  
→ Disconnect the mains lead when you change over to battery supply, or to protect the set during heavy thunderstorms.

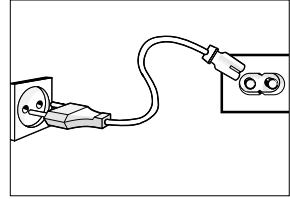

**The type plate is located on the bottom of the set.**



## GENERAL OPERATION

1. To switch on the set, adjust the source selector.
2. Adjust the sound using the **VOLUME, DYNAMIC BASS BOOST** and **INCREDIBLE SURROUND** control buttons.
3. To switch off the set, adjust the source selector to the **TAPE/OFF** position, with the cassette keys released.

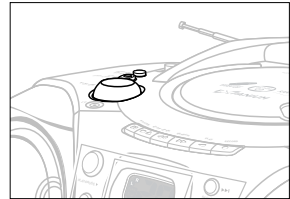

## RADIO RECEPTION

1. Set the source selector to **FM** or **MW**.
2. Adjust the sound using the **VOLUME, DYNAMIC BASS BOOST** and **INCREDIBLE SURROUND** control buttons.
3. Tune to a radio station using the **TUNING** knob.
  - For FM, pull out the telescopic aerial. To improve FM-reception, incline and turn the aerial. Reduce its length if the FM-signal is too strong (very close to a transmitter).
  - For MW, the set is provided with a built-in aerial, so the telescopic aerial is not needed. Direct the aerial by turning the whole set.
4. To switch off, set the source selector to the **TAPE/OFF** position (with the cassette keys released).

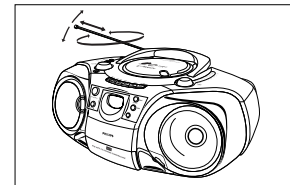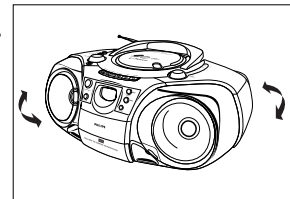

# CD/VCD/MP3-CD

## CAUTION

Use of controls or adjustments or performance of procedures other than herein may result in hazardous radiation exposure or other unsafe operation.

### Environmental information

All unnecessary packaging material has been omitted. We have done our utmost to make the packaging easily separable into three mono materials: cardboard, polystyrene and plastic.

**Your set consists of materials which can be recycled if disassembled by a specialized company. Please observe the local regulations regarding the disposal of packaging materials, exhausted batteries and old equipment.**

## DISCS FOR PLAYBACK

This set can play all digital audio CD, video CD, finalised digital audio CD-Recordable (CDR) discs and finalised digital audio CD-Rewritable (CDRW) discs.

### Support following MP3-CD formats:

- ISO 9660 or ISO 9660 + Joliet format - Max. 30 characters
- Max. Track number is 400
- Max. nested directory is 8 levels
- The max. album number is 99
- The max. MP3 programme track number is 20
- The max. length of each track is 99 minutes 59 seconds
- The player can play mixed mode disc of CD / MP3-CD
- Supported VBR bit-rate
- Supported sampling frequencies for MP3 disc : 8 kHz to 48 kHz (44.1kHz preferably)
- Supported bit-rates of MP3 disc are: 32 - 320 kbps (128 kbps preferably)




### Following formats are not supported

- The files like \*.WMA, \*AAC, \*.DLF, \*.M3U, \*.PLS, MP3 PRO
- The non-session closed discs

## LOADING A DISC

1. Set the source selector to **CD/VCD**.
2. Lift to open the CD door.  
→ "CD" will be displayed
3. Insert a disc with the label side facing up.
4. Close the CD door.  
→ The total number of tracks of the disc appear on the display.  
→ "00" will be displayed if no disc is inserted or error in CD operation

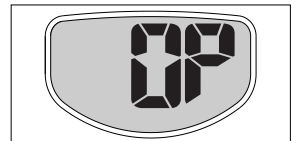

### For MP3-CD only

- The total track number "XXXX" and album number "RXXX" will be displayed interchangeably.

→ On TV screen, the total ALBUM and TRACK number will display, also with the album list (max. 10 lines per page). The current selected music is highlighted.

**Notes :** - To ensure good system performance, wait until the disc completely reads before proceeding.

- For MP3-CD, the disc reading time may exceed 1 minute due to the large number of songs compiled into one disc.

## PLAYING A NORMAL DISC

1. Press ►► to start playback.

→ The track number of the current track and ► appear on the display.

• To interrupt playback, press ►►.

→ ► will disappear and the current track number will start flashing.

• To resume playback, press ►► again.

2. To stop playback, press ■.



## SELECTING A DESIRED TRACK/PASSAGE

### To select a desired track

• Press ◀◀ or ▶▶ on the set repeatedly (or use digits 0 - 9 buttons on the remote control) until the desired track appears on the display.

• If playback is stopped, press ►► to start playback.

### To search for a particular passage during playback

• Press and hold ◀◀ or ▶▶ on the set for 1 second (or on the remote control, press ◀◀ or ▶▶)

→ During searching, the volume will be muted.

## For MP3-CD only

### To select a desired album

• On the remote control, press ◀ or ▶ until the desired album number appear on the display.

→ "R: X" will be displayed.

→ On TV screen, the arrow will move forward/backward in the ALBUM menu.

### To select a desired track

• Press ◀◀ or ▶▶ on the set repeatedly (or on the remote control, press ◀◀ or ▶▶) to select a desired track from the current album.

→ "X X X" will be displayed.

→ On TV screen, the arrow will move forward/backward in the TRACK menu.

• Use the digital keys on the remote control to select the track under current album directly.

### To select and playback another track during playback mode

1. Press ◀◀ or ▶▶ repeatedly to select another track.

→ The new selected track will show on the display screen and TV screen and playback continuously.

2. Press ►► to start playback the new selected track.

## For VCD only

• Either press ◀◀ or ▶▶ on the remote control repeatedly to select fast search speed (x1, x2, x3 or x4) or

press & hold ◀◀ or ▶▶ on the set for 1 second and then release ◀◀ or ▶▶ to select fast search speed (x1). Repeat this step to select other speed (x2, x3, x4).

# CD/VCD/MP3-CD

## PROGRAMMING TRACKS

Programming tracks of disc is possible when playback is stopped. Up to 20 tracks can be stored in the memory in any order.

1. In stop mode, press **PROG** on the remote control to enter programme setting.  
→ **PROG** will flash on the display.
2. Press **digits 0 - 9** on the remote control or **◀/▶** to select the desired track.
3. Press **PROG** to store the select track. The number "×××" represents the track no.
  - Repeat steps **1** to **3** to store other tracks.
4. Press **■** to end programme setting.  
→ **PROG** will remain on the display.
  - Press **PROG** (on remote control) in stop mode to review the programme sequence.
5. Press **▶||** to play the programmed tracks.
  - If you press **REPEAT** during programme playback, the current track or all programmed tracks will be played repeatedly.  
→ **REPEAT/REPEAT ALL** icon and **PROG** will appear on the display.
6. Press **■** in stop mode to clear the programme.  
→ **PROG** will disappear from the display.

**Notes :** -The programming is automatically cleared as soon as the CD compartment is opened.  
- The function of programme setting is disabled in PLAY/PAUSE mode.  
- Programme cannot be used for VCDs when PBC is switched on. Switch off PBC before storing tracks from such a VCD.

### For MP3-CD only

1. In stop mode, press **PROG** on the remote control to enter programme setting.  
→ **PROG** will start flashing and "P□!" will be displayed.  
→ On TV screen, "PROG" program list (5 lines per page) will be displayed.
2. Press **digits 0 - 9** on the remote control or **◀/▶** to select the desired album.
3. Press **PROG** to store the select album. The number "P××" represents the album no.
4. Press **◀/▶** repeatedly (or **digits 0 - 9** on the remote control) to select the desired TRACK for programming.
5. Press **PROG** to store the select track.  
→ **PROG** will remain on the display.
  - Repeat steps **1** to **5** to store other desired album and track.
6. Press **■** to end programme setting.
  - Press **PROG** in stop mode can review the programme sequence.
7. Press **▶** to start programme playback. You can press **◀/▶** to select the programmed track to play.
8. Press **■** **once** stop programme playback or **twice** to clear the programme.


 
## SHUFFLE

You can play all the tracks in random order.

1. During playing, pause or stop mode, press **SHUFFLE** on the remote control or press **CD MODE** on the set to enable SHUFFLE play mode.  
→ **SHUFFLE** will appear on the display.
2. To exit shuffle mode, press **SHUFFLE** again or **■**.  
→ **SHUFFLE** will disappear from the display.

## REPEAT

You can play the current track or the whole disc repeatedly.

1. During CD/ MP3-CD playing or pause mode, press **REPEAT** on the remote control or **CD MODE** on the set.  
→ **REPEAT** icon  - to repeat the current track.  
→ **REPEAT ALL** icon  all- to repeat the whole disc.
2. To exit the repeat mode, press **REPEAT** on the remote control or **CD MODE** on the set until the **REPEAT/REPEAT ALL** icon disappears from the display.

**Notes :** - If the Repeat function is enable, and the Stop button is pressed, will disable all the repeat play modes.

## VIDEO CD

### Adjusting the TV System

Before viewing the Video CD, ensure that the set is switched to corresponding PAL or NTSC system of your TV set (exception Multi - system TV).

1. On the remote control, press **NTSC/PAL** to switch between NTSC and PAL TV system.

### OSD - On Screen Display

If you insert VCD/CD, your TV screen will serve as an additional display for messages (e.g. PLAY, STOP), and information stored on the VCD/CD.

- Press OSD on the remote control to select viewing various information.  
→ The current track and current /elapsed time in the track/disc appear on the display.

# CD/VCD/MP3-CD

## VIDEO CD

### Playing a Video CD with PBC

VCD with PBC (Playback Control) will be indicated of the set and on your TV screen as soon as they are inserted. PBC is a predefined play sequence stored on the VCD.

1. Switch on the TV, insert a VCD with PBC.
2. Menu appears on the TV screen.

### If the menu consists of a list of titles, you can select a sequence directly

1. Press **digits 0 - 9** on the remote control to select your choice.  
→ The VCD starts playing of the selected sequence automatically.
  2. Press **RETURN** on the remote control to go back to the previous menu.
- Note** : - If a menu consists of more than one page, press **◀◀/▶▶** to go through the pages.

### Switching off PBC

- In stop mode, press **PBC**.  
→ On TV screen, "PBC OFF" will be displayed shortly.

**Notes** : - Programme mode is not available whenever PBC mode is switched on.  
- The menu structure depends on the programme stored on the VCD. Please refer to the information supplied with the disc.

### Pause

1. During playback, press **▶II** to have a still picture on the TV screen.  
→ The sound will be muted.  
→ On TV screen, "PAUSE" will be displayed.
2. Press **▶II** again to continue playback.

### Goto

1. Press **GOTO** on the remote control.  
→ On TV screen, "GOTO --:--" will be displayed.
2. Press **digits 0 - 9** on the remote control to key in the disc time which you want the disc to begin playback.

**Note** : - The disc time entered should not be greater than the total disc time.  
- Goto mode is not available whenever PBC mode is switched on.

### Slow

1. Press **SLOW** on the remote control to watch a VCD at a slower speed. There are 4 types of slow modes to select.  
→ The sound will be muted.  
→ On TV screen, "SLOW 1/2", "SLOW 1/4", "SLOW 1/8" or "SLOW 1/16" will be displayed.
2. To resume playback at normal speed, press **SLOW** repeatedly until "PLAY" appears on the TV screen or press **▶II**.

### A-B repeat

This feature is also applicable to audio CD (except for MP3-CD). To Play a certain scene or passage of the disc repeatedly.

1. Press **A-B** on the remote control during playback to mark the start point of the chosen scene or passage.

→ "REPEAT A" will appear on the screen.

2. Press **A-B** again to mark the end of the chosen scene or passage.

→ "REPEAT AB" will appear on the screen.

→ The selected scene or passage will start playing repeatedly.

3. Press **A-B** once more to return to normal playback.

→ "REPEAT AB" will disappear from the display.

**Notes :** - You can also cancel A-B repeat by pressing ◀◀ or ▶▶.

- A-B repeat marking can cross from one track to another. But for VCD 2.0, you are only able to set the A-B repeat marking within the same track.

## Resume

- In stop mode, press **RESUME** on the remote control to start playback again from where you have stopped.

**Note :** - Resume will not be available if you have changed the disc, opened the disc tray or disconnected the system from the power supply.

## View

This feature allows you to scan through a VCD for a quick review. PBC mode must be switched off.

1. In stop mode, press **VIEW** on the remote control to go to disc view function.

→ On TV screen, up to 9 pictures will be displayed. If a menu consists of more than one page, press ◀◀ or ▶▶ to view the previous/next page.

→ The first several seconds of each track will be played.

To exit review mode, press **digits 0 - 9** to play the desired track or ▶▶ to play the current selected track.

2. In playback mode, press **VIEW** on the remote control to go to track view function.

→ press ◀◀ or ▶▶ to select the track.

→ On TV screen, up to 9 pictures within the track will be displayed.

→ The first several seconds of each picture will be played.

To exit review mode, press **digits 0 - 9** to play the desired position within the track or ▶▶ to play the current selected position.

**Note :** - If the disc is AVCD disc and there're no video tracks on the same viewed page, cannot use the direct digital key to play the track.

## Return

- Press **RETURN** on the remote control to return to the previous VCD disc MENU level. It is functional only for Video CD when PBC is switched on.

## R/L/ST

You can use it to select the different audio modes.

- Press **R/L/ST** on the remote control repeatedly to select the following modes:

Ⓕ → Ⓔ → Ⓕ → Ⓔ on the LCD represents channel left/channel right / dual channel on a bilingual VCD or mono left / mono right / stereo on single language VCD.

# CD/VCD/MP3-CD

## PLAYING A MIXED MODE DISC

This set can play a mixed mode disc.

- mixture of audio CD and MP3-CD
- mixture of other combination may not be operated normally.


1. As default, audio CD tracks will be read first.

- **L** **R** will be displayed.
- TV screen, "MIX, CD-DA" will be displayed.

2. Press **MIX/SEL** (on the remote control) repeatedly to select other disc modes.

• **MP3-CD:**

- **MP3** is displayed.
- TV screen, MP3 menu is displayed.

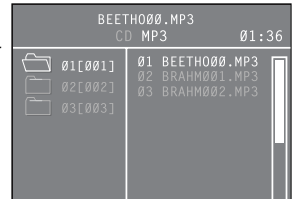


**Notes :** - For protected CDs, "MIX CD-DA" is displayed on your TV screen even if the disc does not have other format. The **MIX/SEL** normal functions are not available for protected CDs.



## CASSETTE PLAYBACK


1. Set the source selector to **TAPE/OFF**.
2. Press **STOP•OPEN** ■ ▲ to open the cassette holder.
3. Insert a recorded cassette.
4. Press **PLAY** ◀ and playback will start.
5. Adjust the sound using the **VOLUME** and **DYNAMIC BASS BOOST** controls.
6. For brief interruptions, press **PAUSE II**. Press **PAUSE II** again to resume playback.
7. By pressing ◀◀ or ▶▶, fast winding of the tape is possible in both directions.
8. To stop playback, press **STOP•OPEN** ■ ▲  
→ The keys are automatically released at the end of the tape.
9. Set the source selector to **TAPE/OFF** position (with the cassette keys are released) to switch off the set.

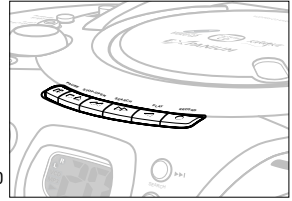

## CASSETTE RECORDING

### General information on cassette recording

- Recording is permissible insofar as copyright or other rights of third parties are not infringed.
- This deck is not suitable for recording on CHROME (IEC II) or METAL (IEC IV) type cassettes. For recording you should use NORMAL type cassettes (IEC I) on which the tabs have not been broken.
- Check and tighten slack tape before use with a pencil, to avoid jamming the deck mechanism.
- The recording level is set automatically. Altering the VOLUME and DYNAMIC BASS BOOST controls will not affect the recording in progress.
- No recording will take place during the 3 seconds, when the leader tape passes the recorder heads.

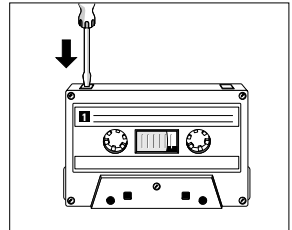


**Notes :** -No recording will take place during the 7 seconds in the beginning of the tape.

- To prevent the accidental erasure of a recording, keep the cassette side to be safeguarded in front of you and break out the left tab. Recording on this side is no longer possible.

# CASSETTE RECORDER



## RECORDING FROM THE RADIO

1. Set the source selector to **FM** or **MW**.
2. Tune to the desired radio station using the TUNING knob.
3. Press **STOP•OPEN** ■ ▲ to open the cassette holder.
4. Insert a blank tape.
5. Press **RECORD** ● to start recording.
6. For brief interruptions, press **PAUSE II**. To resume recording, press **PAUSE II** again.
7. To stop recording, press **STOP•OPEN** ■ ▲

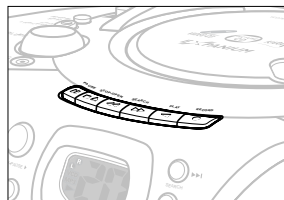

## SYNCHRO START CD RECORDING

 1. Set the source selector to **CD•VCD**.
2. Insert a CD and if desired, programme track numbers.
3. Press **STOP•OPEN** ■ ▲ to open the cassette holder.
4. Insert a blank cassette.
5. Press **RECORD** ● to start recording.  
→ Playing of the CD programme starts automatically from the beginning of the programme. It is not necessary to start the CD player separately.
6. For brief interruptions, press **PAUSE II**. To resume recording, press **PAUSE II** again.
7. To stop recording press **STOP•OPEN** ■ ▲

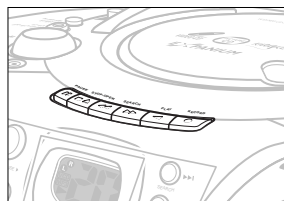

### To select and record a particular passage within a track

1. Press and hold **SEARCH** ◀◀ or ▶▶ on the set to select a passage.
2. Put the CD player in **PAUSE II** position at the selected passage.  
→ Recording will start from this exact point when you press **RECORD** ●.

# KARAOKE

## Microphone mixing


Connect microphones (not supplied) to the system allowing you to sing along with the music source.

1. Connect microphones to the jacks ③ .
  - Before connecting the microphone, set the microphone level with KARAOKE 1/KARAOKE 2 volume knobs to the lower level to prevent howling sound.
2. Select **VCD** and press ▶II to start playback.
3. Adjust the volume level of the source with **VOLUME** control.
4. Press **ECHO +/-** to adjust the ECHO level to the desired mixing level.
5. Start singing or talking through the microphone.
6. Press **KEY +/-** to select key tone if necessary.

**Notes :** - Keep the microphones away from the speakers to prevent howling.  
- Microphone mixing only available in VCD mode.



## PRECAUTIONS & GENERAL MAINTENANCE

- Place the set on a hard, flat surface so that the system does not tilt.
- Do not expose the set, CDs, batteries or cassettes to humidity, rain, sand or excessive heat caused by heating equipment or direct sunlight.
- Always shut the CD door to keep the CD compartment dust-free. To clean, dust the compartment with a soft dry cloth.
- Do not cover the set. Adequate ventilation with a minimum gap of 15 cms between the ventilation holes and surrounding surfaces is necessary to prevent heat build-up.
- The mechanical parts of the set contain self-lubricating bearings and must not be oiled or lubricated.
- To clean the set, use a soft, slightly dampened chamois leather. Do not use any cleaning agents containing alcohol, ammonia, benzene or abrasives as these may harm the housing.

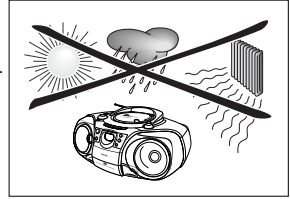

## CD PLAYER AND CD HANDLING


- The lens of the CD player should *never be touched*.
- Sudden changes in the surrounding temperature can cause condensation to form and the lens of your CD player to cloud over. Playing a CD is then not possible. Do not attempt to clean the lens but leave the set in a warm environment until the moisture evaporates.
- Use only Digital Audio CDs.
- To take a CD out of its box, press the centre spindle while lifting the CD.  
Always pick up the CD by the edge and replace the CD back in its box after use to avoid scratching and dust.
- To clean the CD, wipe in a straight line from the centre towards the edge using a soft, lint-free cloth. Do not use cleaning agents as they may damage the disc.
- *Never write* on a CD or attach stickers to it.

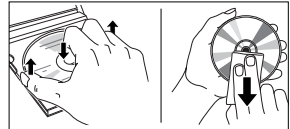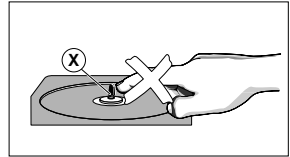

## TAPE DECK MAINTENANCE

To ensure a good recording and playback of the tape deck, clean parts (A), (B) and (C) show in the diagram below, after approx. 50 hours of operation, or on average once a month. Use a cotton bud slightly moistened with alcohol or a special head cleaning fluid to clean the deck.

- Open the cassette holder by pressing **STOP•OPEN** ■ ▲.
- Press **PLAY** ◀ and clean the rubber pressure rollers (C).
- Press **PAUSE** II and clean the magnetic heads (A) and also the capstans (B).
- After cleaning, press **STOP•OPEN** ■ ▲.

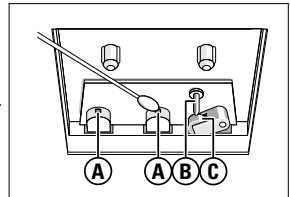

Cleaning of the heads can also be done by playing a cleaning cassette through once.

# TROUBLESHOOTING

If a fault occurs, first check the points listed below before taking the set for repair.  
If you are unable to remedy a problem by following these hints, consult your dealer or service centre.

**WARNING:** *Do not open the set as there is a risk of electric shock. Under no circumstances should you try to repair the set yourself, as this will invalidate the guarantee.*

## Problem

## Solution

### CD/VCD OPERATION

"NO DISC" is displayed

- Insert a disc.
- Check if the disc is inserted upside down.
- Wait until the moisture condensation at the lens has cleared.
- Replace or clean the disc, see "Maintenance"
- Use a readable disc or correct recorded format MP3-CD.

No picture on TV screen

- Connect the cable between the system and TV.

No colour on TV

- Change the system to the respective PAL or NTSC setting.

### RADIO RECEPTION

Radio reception is poor

- If the signal is too weak, adjust the antenna for better reception.
- Increase the distance between the Receiver and your TV or VCR.

### TAPE OPERATION/RECORDING

Recording or playback cannot be made

- Clean deck parts, see "Maintenance".
- Use only NORMAL (IEC I) tape.
- Apply a piece of adhesive tape over the missing tab space.

### GENERAL

The system does not react when buttons pressed/set does not work/no display on LCD.

- Slide the source sector to TAPE/OFF. Remove and reconnect the AC power plug for 30 seconds and switch on the system again.

Sound cannot be heard or is of poor quality

- Adjust the volume.
- Make sure the MP3-CD was recorded within 32-320 kbps (128kbps preferably) with sampling frequencies at 8 - 48 kHz (44.1kHz preferably).

The remote control does not function properly

- Reduce the distance between the remote control and the system.
- Insert the batteries with their polarities (+/- signs) aligned as indicated.
- Replace the batteries.
- Point the remote control in the direction of the system's IR sensor.



# AUSTRALIA - Philips 3 years Manufacturers Warranty for Australia only

**These warranty conditions are valid for the following consumer electronics products: Colour Televisions, Video Cassette Recorders, CD Players and Recorders, DVD Players and Recorders, Audio Systems and Portable Audio.**

**The benefits given to the purchaser by this warranty are in addition to all other rights and remedies which the purchaser has in respect of the product under the Trade Practices Act or other Commonwealth or State Law.**

Philips Consumer Electronics warrants its products to the purchaser as follows and subject to the stated conditions.

### 3 YEARS free Repair Service

Colour Televisions, CD Players and Recorders, DVD Players and Recorders and Audio Systems.

### 3 YEARS free Replacement – at your Retailer

All Portable Audio products and all Video Cassette recorders (VCR's) only.

### Conditions of Repair Warranty

1. All claims for warranty service should be made to your nearest Philips Authorised Service Centre. Reasonable evidence of date of purchase must be provided.
2. This warranty extends only to defects in material or workmanship occurring under normal use of the product when operated in accordance with the instructions.
3. This warranty applies for original purchase only. It is not transferable if sold.
4. Home service within the normal service area of one of our Authorised Service Centres will only be provided for television receivers with screen size 48 cm and above. All other products are to be taken or sent to the workshop of your nearest Authorised Service Centre (at Consumer's expense).
5. This Manufacturers Warranty is limited to 3 months for above listed Consumer Electronics products if used in commercial applications.
6. Philips may, at its discretion choose to replace rather than repair any product covered by this warranty.
7. This Manufacturers Warranty is neither transferable nor valid in countries other than Australia.

### This warranty does not cover:

- a) Mileage or travelling time, pickup or delivery, installations and cost of insurance.
- b) Mileage or travel outside the normal service area covered by selected Authorised Service Centre.
- c) Service costs arising from failure to correctly adjust the controls of the product or to observe the instructions, or inspections that reveal that the product is in normal working order.

d) Product failures caused by misuse, neglect, accidental breakage, transit damage, inexpert repairs or modification by un-authorised persons, external fires, lightning strikes, floods, vermin infestation or liquid spillage.

e) Cleaning of video or audio heads.

f) Inadequate receiving antennae.

g) Replacement of worn or used batteries or other consumables.

h) Consumer products used in commercial applications (This warranty is limited to 3 months only).

i) Second hand products.

The conditions contained in this warranty card replace and override the provision of the Philips World-Wide Guarantee for products purchased in Australia and used in Australia.

### Philips Authorised Service Centres

Service is provided through 200 accredited Authorised Service Centres throughout Australia. For direct contact with your nearest recommended Authorised Service Centre in major cities:

<b>Adelaide</b>	<b>Launceston</b>
<b>Brisbane</b>	<b>Melbourne</b>
<b>Canberra</b>	<b>Newcastle</b>
<b>Geelong</b>	<b>Perth</b>
<b>Gold Coast</b>	<b>Sydney</b>
<b>Hobart</b>	<b>Wollongong</b>

or to find the location of your nearest recommended Authorised Service Centre outside the above cities please call our National Service telephone number:

**1300 361 392**

Please record the following information for your records and keep in a safe place.

Model number:.....

Serial number:.....

Date of purchase:.....

Retailer:.....

**We recommend you retain your purchase receipt to assist in any warranty claim.**

Philips Consumer Electronics  
a division of Philips Electronics Australia Limited  
ABN 24 008 445 743,  
Level 2, 65 Epping Road NORTH RYDE NSW 2113

3 year Warranty valid for all new products purchased after 1<sup>st</sup> July 2002

## **NEW ZEALAND - Guarantee and Service for New Zealand**

Thank-you for purchasing this quality Philips product.

Philips New Zealand Ltd guarantees this product against defective components and faulty workmanship for a period of 12 months. Any defect in materials or workmanship occurring within 12 months from the date of purchase subject to the following conditions will be rectified free of charge by the retailer from whom this product was purchased.

### **Conditions**

- 1.** The product must have been purchased in New Zealand. As proof of purchase, retain the original sales docket indicating the date of purchase.
- 2.** The guarantee applies only to faults caused by defective components, or faulty workmanship on the part of the manufacturer.
- 3.** The guarantee does not cover failures caused by misuse, neglect, normal wear and tear, accidental breakage, use on the incorrect voltage, use contrary to operating instructions, or unauthorised modification to the product or repair by an unauthorised technician.
- 4.** Reasonable evidence (in the form of a sales docket) must be supplied to indicate that the product was purchased no more than 12 months prior to the date of your claim.
- 5.** In the event of a failure, Philips shall be under no liability for any injury, or any loss or damage caused to property or products other than the product under guarantee.

This guarantee does not prejudice your rights under common law and statute, and is in addition to the normal responsibilities of the retailer and Philips.

### **How to claim**

Should your Philips product fail within the guarantee period, please return it to the retailer from whom it was purchased. In most cases the retailer will be able to satisfactorily repair or replace the product.

However, should the retailer not be able to conclude the matter satisfactorily, or if you have other difficulties claiming under this guarantee, please contact

### **The Guarantee Controller**

**Philips New Zealand Ltd.**

✉ **P.O. Box 41.021**

**Auckland**

☎ **(09) 84 94 160**

fax ☎ **(09) 84 97 858**






English

中文

**Meet Philips at the Internet**

**<http://www.philips.com>**

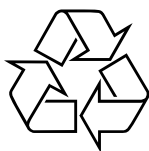

AZ 5155



PDCC/JW-03519