

Service
Service
Service



Version: 1.0

Service Manual



CONTENTS

	Page
1 Technical specifications	2
2 Warnings	2
3 Service hints	3
4 Revision information	3
5 Dismantling instruction and exploded view	4
6 Block- and wiring diagram	6
7 Electrical diagrams and print-layouts	8
Power board	8
MPEG board.....	10
Front board	16
Mic board	18
8 Spare parts list DVD730K/691	20
9 Spare parts list DVD730K/751	25
10 Spare parts list DVD730K/781	30
 Appendix	
1 Instruction for use	35



© Copyright 2001 Philips Consumer Electronics BPAVC
All rights reserved. No part of this publication may be reproduced, stored in a retrieval system or transmitted, in any form or by any means, electronic, mechanical, photocopying, or otherwise without the prior permission of Philips.

Published by Jianfeng Liu 0170 BPAVC

GB 3122 785 11850



PHILIPS

1. Technical Specifications

DVD730K / 6917751781

Specifications

Playback System

- DVD-Video
- Super VCD
- Video CD
- CD Audio
- MP3-CD
- CD-R
- CD-RW

Audio Format

Mpeg/ AC-3/ DTS PCM	Compressed Digital, 16, 20, 24 bits fs, 44.1, 48, 96 kHz
---------------------	--

- Analog Sound Stereo
- Dolby digital downmix 2 channels

Audio Performance

DVD:	Fs 96 kHz	4 Hz- 44 kHz
	Fs 48 kHz	4 Hz- 22 kHz
Video CD:	Fs 48 kHz	4 Hz- 20 kHz
CD:	Fs 44.1 kHz	4 Hz- 20 kHz

DVD Disc Format

- Medium: Optical disc
 - Diameter: 12cm (8cm)
 - Playing time(12cm)
- | | |
|------------------------|---------------------|
| One layer | 2.15h ¹ |
| Dual layer | 4 h ¹ |
| Two side, single layer | 4.30 h ¹ |
| Two side, dual layer | 8 h ¹ |

TV System

- PAL NTSC
- 50Hz 60Hz
- Number of lines 625 525
- Playback PAL/NTSC

Video Format

- DA Converter 10bit
- Signal handing Components
- Digital Compression MPEG2 for DVD MPEG1 for VCD

DVD	50Hz	60Hz
Horiz. resolution	720 pixels	720 pixels
Vertical resolution	576 lines	480 lines
VCD	50Hz	60Hz
Horiz. resolution	352 pixels	352 pixels
Vertical resolution	288 lines	240 lines

Video Performance

- Video output: 1V_{pp} into 75 Ohm
- S-Video output Y: 1V_{pp} into 75 Ohm
- C: 0.3V_{pp} into 75 Ohm
- Component Video output
- Y 1V_{pp} into 75 Ohm
- CR 0.7V_{pp} into 75 Ohm
- CB 0.7V_{pp} into 75 Ohm

Connections

- DA Converter 24bit
- S/N (1KHz) >90dB
- Dynamic range(1KHz) >80dB
- Component Video Output: Cinch 1x
- S-Video Output: Mini DIN 4-pins
- Video Output : Cinch 1x
- Audio Output(L+R): Cinch 1x
- Digital Audio Output : Coaxial 1x Optical 1x
- Microphone: 6.3mm
- Headphone: 6.3mm

Power Supply

- Power Inlet: 110~240V 50, 60Hz
- Power Usage: <25W

Cabinet

- Dimensions: 435x92x320mm (WxHxD)
- Weight: estimated 4.0Kg

Package Contents

- DVD-Video player
- Remote Control with batteries
- Instructions for Use
- AC Cord
- Audio Cord
- Video Cord



General

- Stop/Play/Pause
- Fast Forward/Backward(x2, x4, x8, x20)
- Time Search
- Slow Forward(x1/2, x1/4, x1/6)
- Step Forward
- Title/Chapte/Track Select
- Next/Previous
- Repeat(Title/Chapter/Track/All)
- A-B Repeat

DVD Functionality

- Multi-Angle Selection
- Audio Selection(1 of max. 8 Languages)
- Subtitle Selection(1 of max. 32 Languages)
- Aspect Ratio conversion (16:9, 4:3Letterbox, 4:3Panscan)
- Parental Control
- Disc Menu support(title menu/root menu)
- Programming with Favourite Selection

VCD Functionality

- Playback Control for VCD2.0 discs
- Disc Lock
- Programming with Favourite Selection
- Multiple Sound Effect

CD Functionality

- Time Display(All/Track/Remaining Track Time)
- Full audio functionality with remote control
- Programming with Favourite Selection

Karaoke Functionality

- Echo Effect
- Voice Cancel

2. Warnings

GB WARNING

All ICs and many other semiconductors are susceptible to electrostatic discharges (ESD). Careless handling during repair can reduce life drastically. When repairing, make sure that you are connected with the same potential as the mass of the set via a wristband with resistance. Keep components and tools at this potential.



F ATTENTION

Tous les IC et beaucoup d'autres semi-conducteurs sont sensibles aux décharges statiques (ESD). Leur longévité pourrait être considérablement réduite par le fait qu'aucune précaution n'est prise lors de leur manipulation. Lors de réparations, s'assurer de bien être relié au même potentiel que la masse de l'appareil et enfilez le bracelet anti-statique. Veillez à ce que les composants ainsi que les outils que vous utilisez soient également à ce potentiel.

D WARNUNG

Alle ICs und viele andere Halbleiter sind empfindlich gegen ber elektrostatischen Entladungen (ESD). Unvorsorgliche Behandlung im Reparaturfall kann die Lebensdauer drastisch reduzieren. Sorgen Sie dafür, da Sie im Reparaturfall ber ein Pulsarmband mit Widerstand mit dem Massepotential des Ger tes verbunden sind. Halten Sie Bauteile und Hilfsmittel ebenfalls auf diesem Potential.

NL WAARSCHUWING

Alle IC's en vele andere halfgeleiders zijn gevoelig voor electrostatische ontladingen (ESD). Onzorgvuldig behandelen tijdens reparatie kan de levensduur drastisch doen verminderen. Zorg ervoor dat u tijdens reparatie via een polsband met weerstand verbonden bent met hetzelfde potentiaal als de massa van het apparaat. Houd componenten en hulpmiddelen ook op ditzelfde potentiaal.

I AVVERTIMENTO

Tutti IC e parecchi semi-conduttori sono sensibili alle scariche statiche (ESD). La loro longevità potrebbe essere fortemente ridotta in caso di non osservazione della più grande cautela alla loro manipolazione. Durante le riparazioni occorre quindi essere collegato allo stesso potenziale che quello della massa dell'apparecchio tramite un bracciale a resistenza. Assicurarsi che i componenti e anche gli utensili con quali si lavora siano anche a questo potenziale.

GB

Safety regulations require that the set be restored to its original condition and that parts which are identical with those specified be used. Safety components are marked by the symbol ⚠

SAFETY



F

Les normes de sécurité exigent que l'appareil soit remis à l'état d'origine et que soient utilisés les pièces de rechange identiques à celles spécifiées. Les composants de sécurité sont marqués ⚠

D

Bei jeder Reparatur sind die geltenden Sicherheitsvorschriften zu beachten. Der Originalzustand des Ger tes darf nicht verändert werden. Für Reparaturen sind Originalersatzteile zu verwenden. Sicherheitsbauteile sind durch das Symbol ⚠ markiert.

NL

Veiligheidsbepalingen vereisen, dat het apparaat in zijn oorspronkelijke toestand wordt teruggebracht en dat onderdelen, identiek aan de gespecificeerde, worden toegepast. De Veiligheidsonderdelen zijn aangeduid met het symbool ⚠

I

Le norme di sicurezza estigono che l'apparecchio venga rimesso nelle condizioni originali e che siano utilizzati i pezzi di ricambio identici a quelli specificati. Componenti di sicurezza sono marcati con ⚠

GB

After servicing and before returning the set to customer perform a leakage current measurement test from all exposed metal parts to earth ground, to assure no shock hazard exists. The leakage current must not exceed 0.5mA.

GB

DANGER: Invisible laser radiation when open. AVOID DIRECT EXPOSURE TO BEAM.



S

Varning ! Osynlig laserstråling när apparaten är påslagen och strålar ut. Undvik direkt exponering för strålingen.

F

"Pour votre sécurité, ces documents doivent être utilisés par des spécialistes agréés, seuls habilités à réparer votre appareil en panne".

Advarsel !

Usynlig laserstråling ved åbning af apparatet. Undgå direkte udsættelse for strålingen.

FIN Varoitus !

Avatussa laitteessa ja suojalukituksen ohitettaessa olet alttiina näkymättömälle laserisäteilylle. Katso suojakirje!

Warning for powersupply on primary side


The primary side of the powersupply including the heatsink carries live mains voltage when the player is connected to the mains even when the player is switched off !

This primary area is not shielded so it is possible to touch copper tracks and/or components when servicing the player. Service personnel have to take precautions to prevent touching this area or components in this area.

The primary side of the powersupply has been indicated with a stripe-marked printed on the printed wiring board.

3. Service hints

HANDLING CHIP COMPONENTS

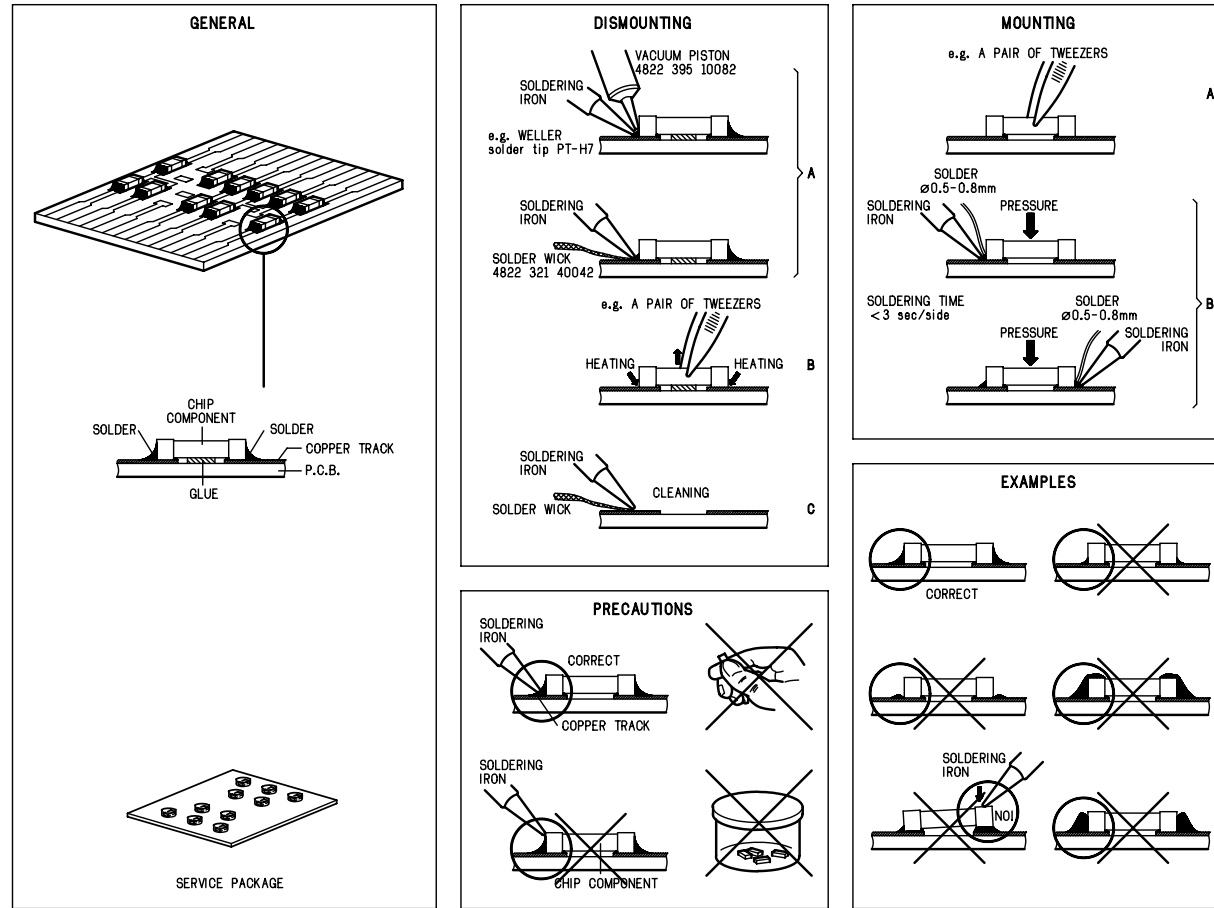

4. Revision information

Service manual version: 1.0

Issue Date : 15th, October, 2001

Revision information: N/A

SERVICE TOOLS

Test discs

Audio signals disc -----4822 397 30184


Torx screwdrivers

Set (straight, T2 to T20) -----4822 395 50145

Set (square, T10, T15, T20) -----4822 395 50132


5. Dismantling instructions and exploded view

DISMANTLING INSTRUCTIONS DVD730K/691/751/781
See exploded view for item numbers

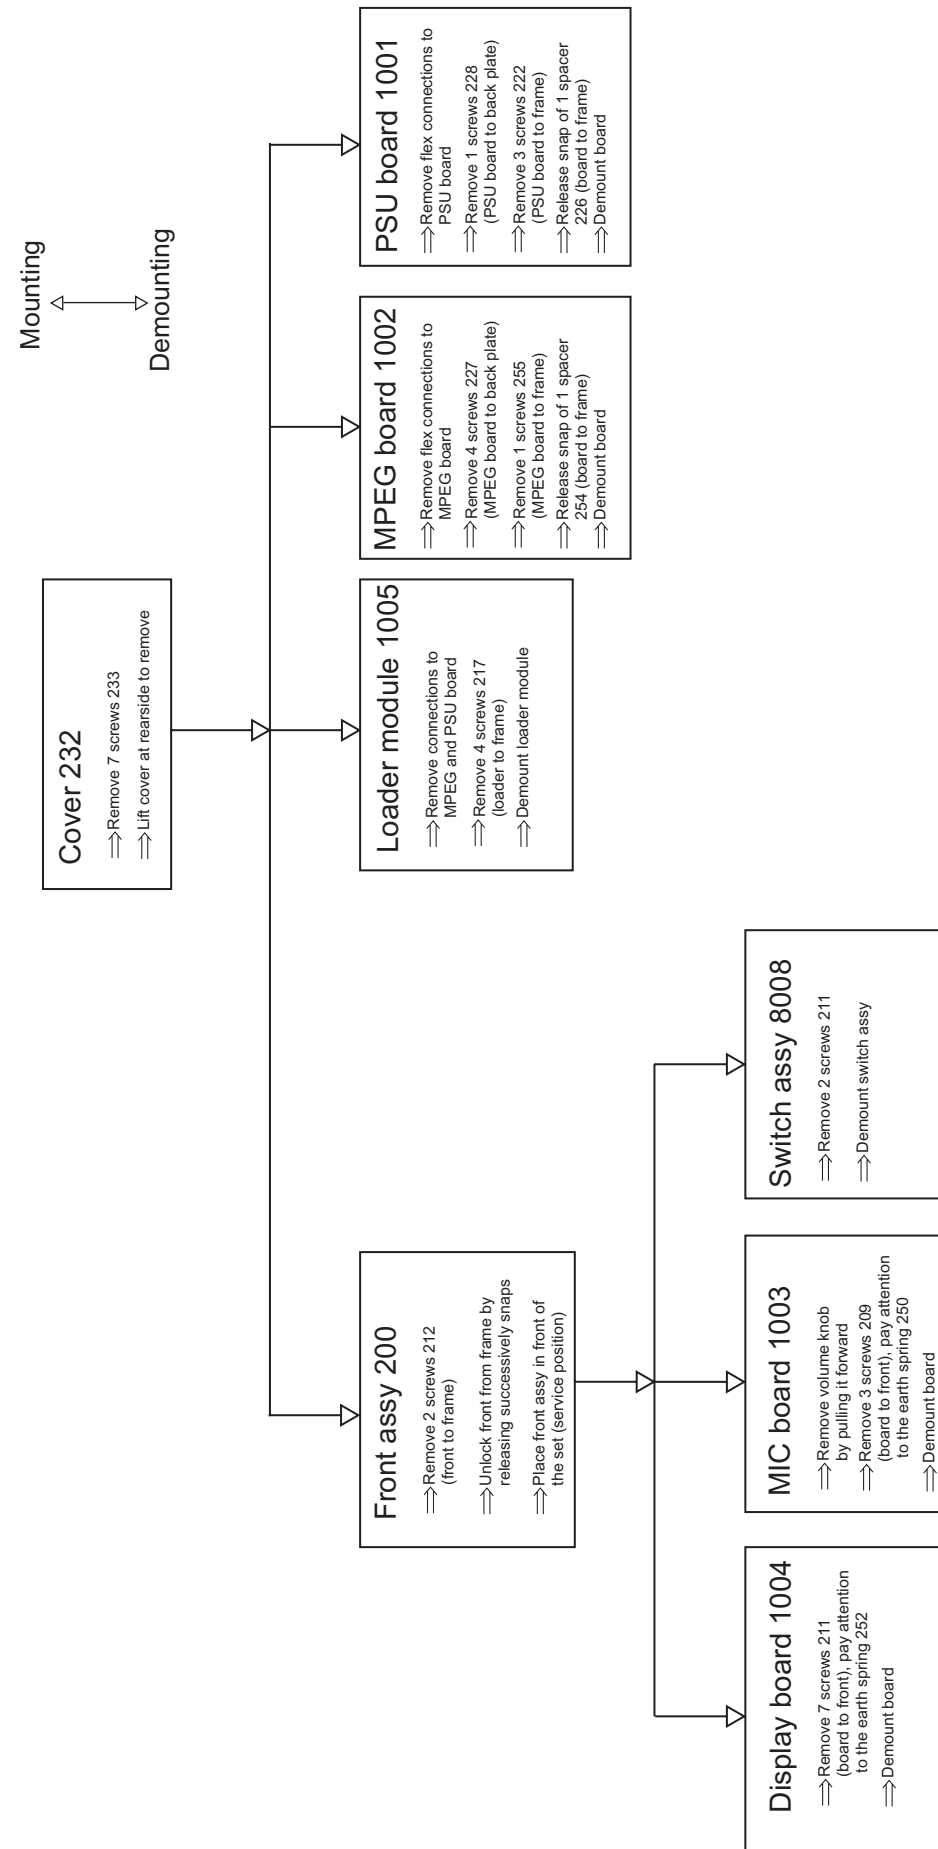

5. Dismantling instructions and exploded view

PCB LOCATION DVD730K/691/751/781

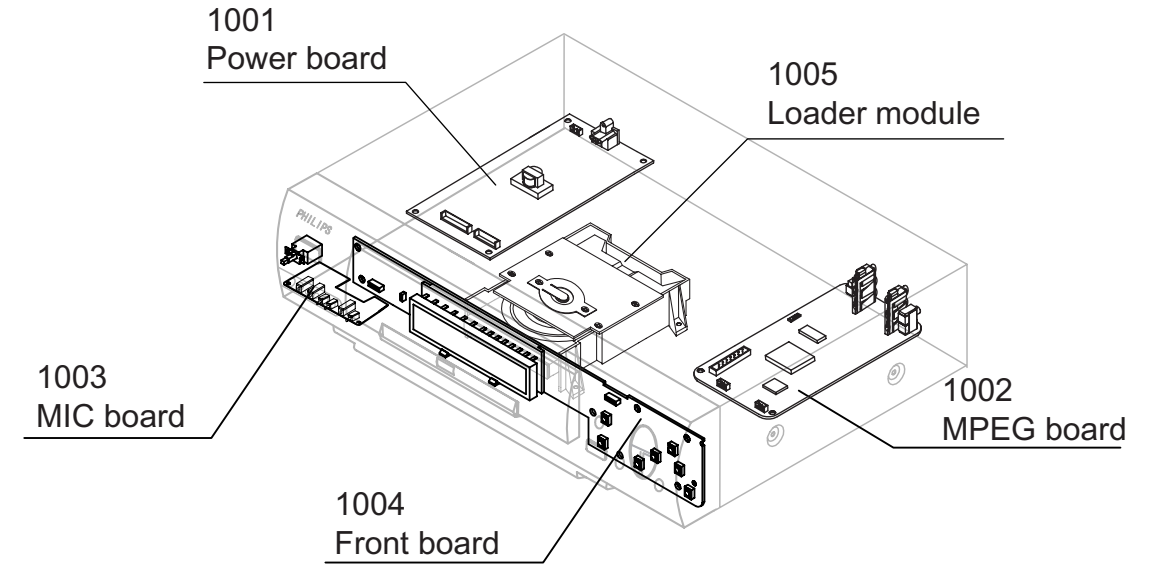


PARTS 12NC LIST

	DVD730K/691	DVD730K/751	DVD730K/781
1001 PSU board	3141 018 02490	3141 018 02490	3141 018 02490
1002 MPEG board	3141 018 02430	3141 018 02440	3141 018 02460
1003 MIC board	3141 018 02280	3141 018 02280	3141 018 02280
1004 Front board	3141 018 02510	3141 018 02510	3141 018 02510
1005 Loader module	3141 018 02190	3141 018 02190	3141 018 02190

5. Dismantling instructions and exploded view

MECHANICAL PARTS LIST DVD730K/691


ITEM	QUANTITY	CODE NUMBER	DESCRIPTION
200	1	3141 017 75470	CAB FRONT DVD730K PNT PRT
201	1	3139 247 51830	BADGE PHILIPS ASSY SILVER
202	1	3139 240 00090	BADGE DVD SILVER 2
204	1	3141 017 73990	WINDOW DVD728K PNT PRT
205	1	3141 017 75060	BUTTON POWER DVD729K PNT
208	3	3141 017 75070	VOLUME KNOB DVD729K PNT
209	3	2511 076 50013	SCR PAN TORX TAP ST ZN BK 3*10
211	9	2511 076 50013	SCR PAN TORX TAP ST ZN BK 3*10
212	2	2511 077 00039	SCR PAN TORX TAP ST ZN BK M3*6
213	1	3141 011 21160	FRAME DVD729K
215	4	2511 077 00039	SCR PAN TORX TAP ST ZN BK M3*6
217	4	2511 077 00041	SCR PAN TORX TAP ST ZN BK M3*8
219	1	3141 017 75410	DOOR DVD729K PNT PRT
220	1	3139 241 20110	DOOR SPRING
222	3	2511 077 00039	SCR PAN TORX TAP ST ZN BK M3*6
224	1	3141 017 75490	BACK PLATE DVD730K PNT PRT
225	3	2511 077 00039	SCR PAN TORX TAP ST ZN BK M3*6
226	1	2422 015 19105	SPACER LOCKING CARD NY 17.7 B
227	4	2511 076 50013	SCR PAN TORX TAP ST ZN BK 3*10
228	1	2511 076 50013	SCR PAN TORX TAP ST ZN BK 3*10
231	2	3139 114 28180	CABLE TIE
232	1	3141 017 75100	COVER TOP DVD729K PNT
233	7	2511 077 01039	SCR PAN TORX TAP ST NI M3*6
240	1	3141 017 75110	BUTTON CONTROL DVD729K PNT PRT
241	1	2511 076 50013	SCR PAN TORX TAP ST ZN BK 3*10
242	1	3141 017 75120	RING DVD729K PNT PRT
244	2	3139 244 00410	FOOT DVD711
245	2	3139 247 50750	FOOT ASSY DVD711
249	2	3139 243 10010	CUSHION
250	1	3139 241 20090	EARTH PLATE HEADPHONE
252	1	3141 011 60390	EMC SPRING
254	1	2422 015 19105	SPACER LOCKING CARD NY 17.7 B
255	1	2511 077 00039	SCR PAN TORX TAP ST ZN BK M3*6
384	1	3141 017 90120	REMOTE CONTROL
1001	1	3141 018 02490	PBAS PSU DVD729K/031
1002	1	3141 018 02430	PBAS MPEG DVD730K/691
1003	1	3141 018 02280	PBAS MIC DVD729K/691
1004	1	3141 018 02510	PBAS FRONT DVD0707/781
1005	1	3141 018 02190	DVD LOADER MODULE A90H
5001	1	3139 118 72780	MAINS CORD IEC
8002	1	3141 010 20900	CWAS 40RK/40RK 230 28S LOADER- MPEG
8003	1	3141 010 20910	CWAS 08XH/08XH 500 26S PSU-MPEG
8004	1	3141 010 20880	CWAS 08EH/08PH 460 26S MIC-MPEG
8006	1	3141 010 20850	CWAS 04XH/04LC 260 22S PSU-LOADER
8008	1	3141 010 21000	SWI ASSY 1X2 M7.92 260 18S

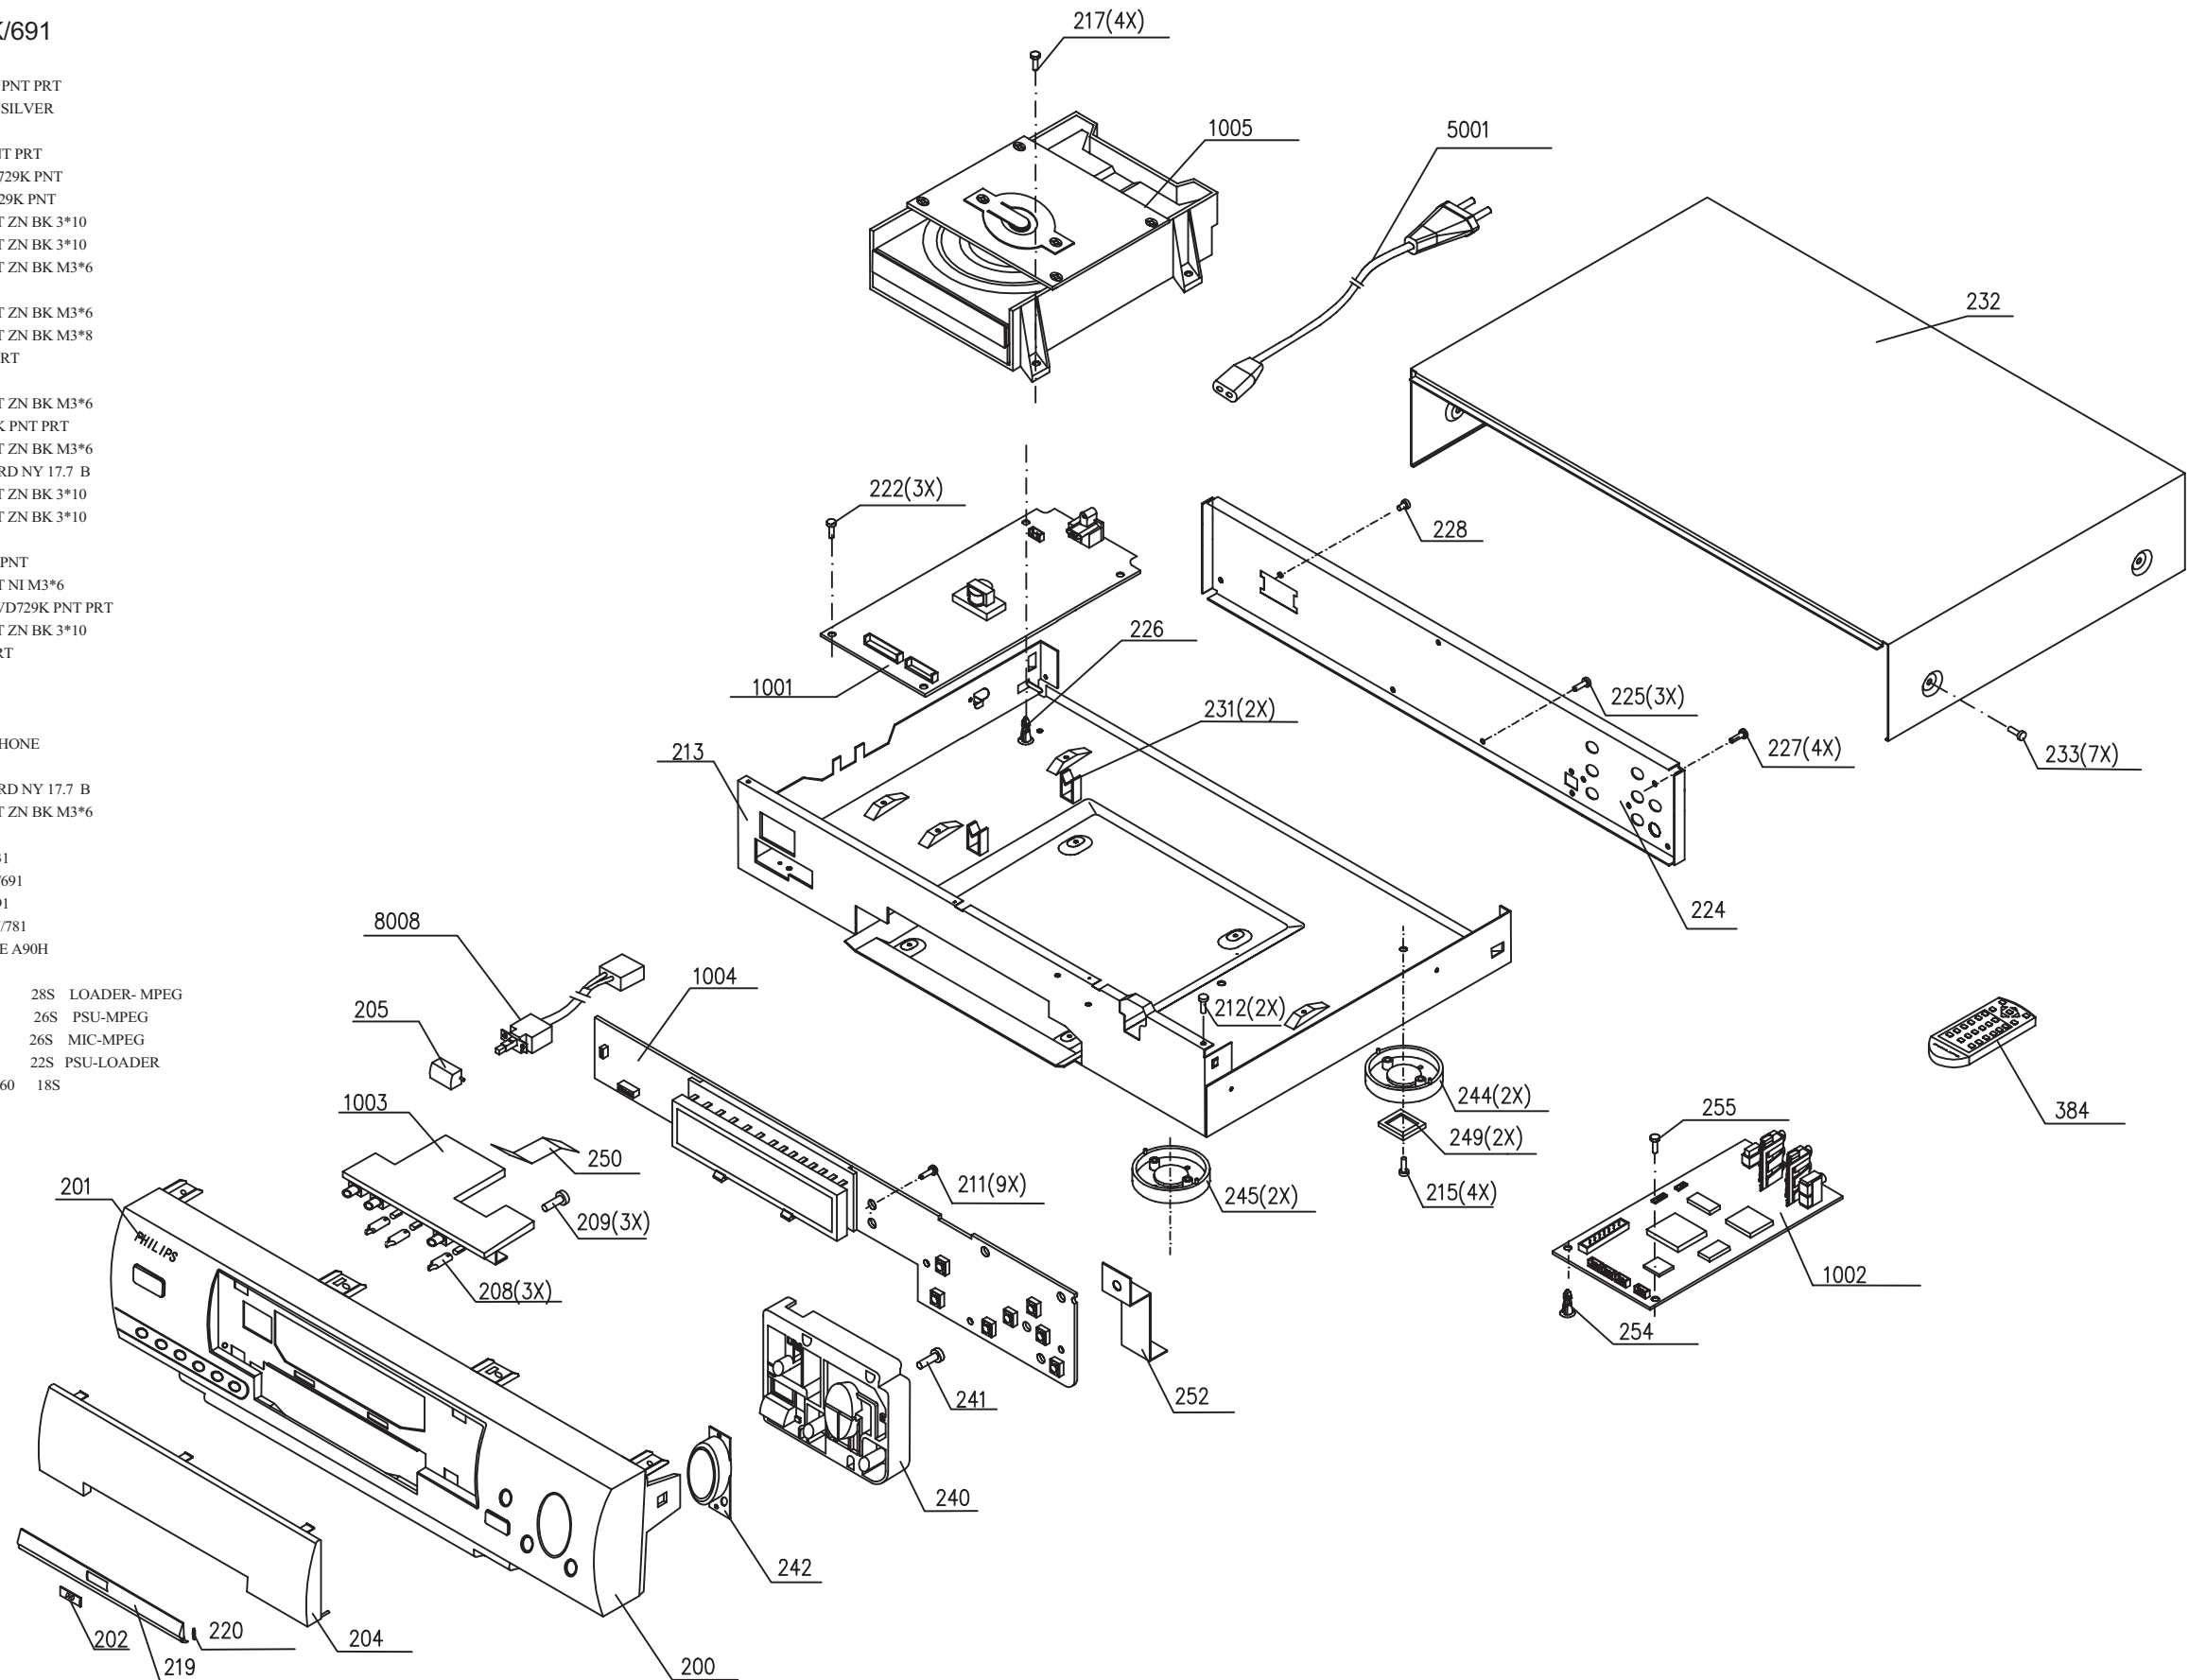

DVD730K/691/751/781 EXPLODED VIEW


6. Block- and wiring diagram

Block diagram DVD730K/691/751/781

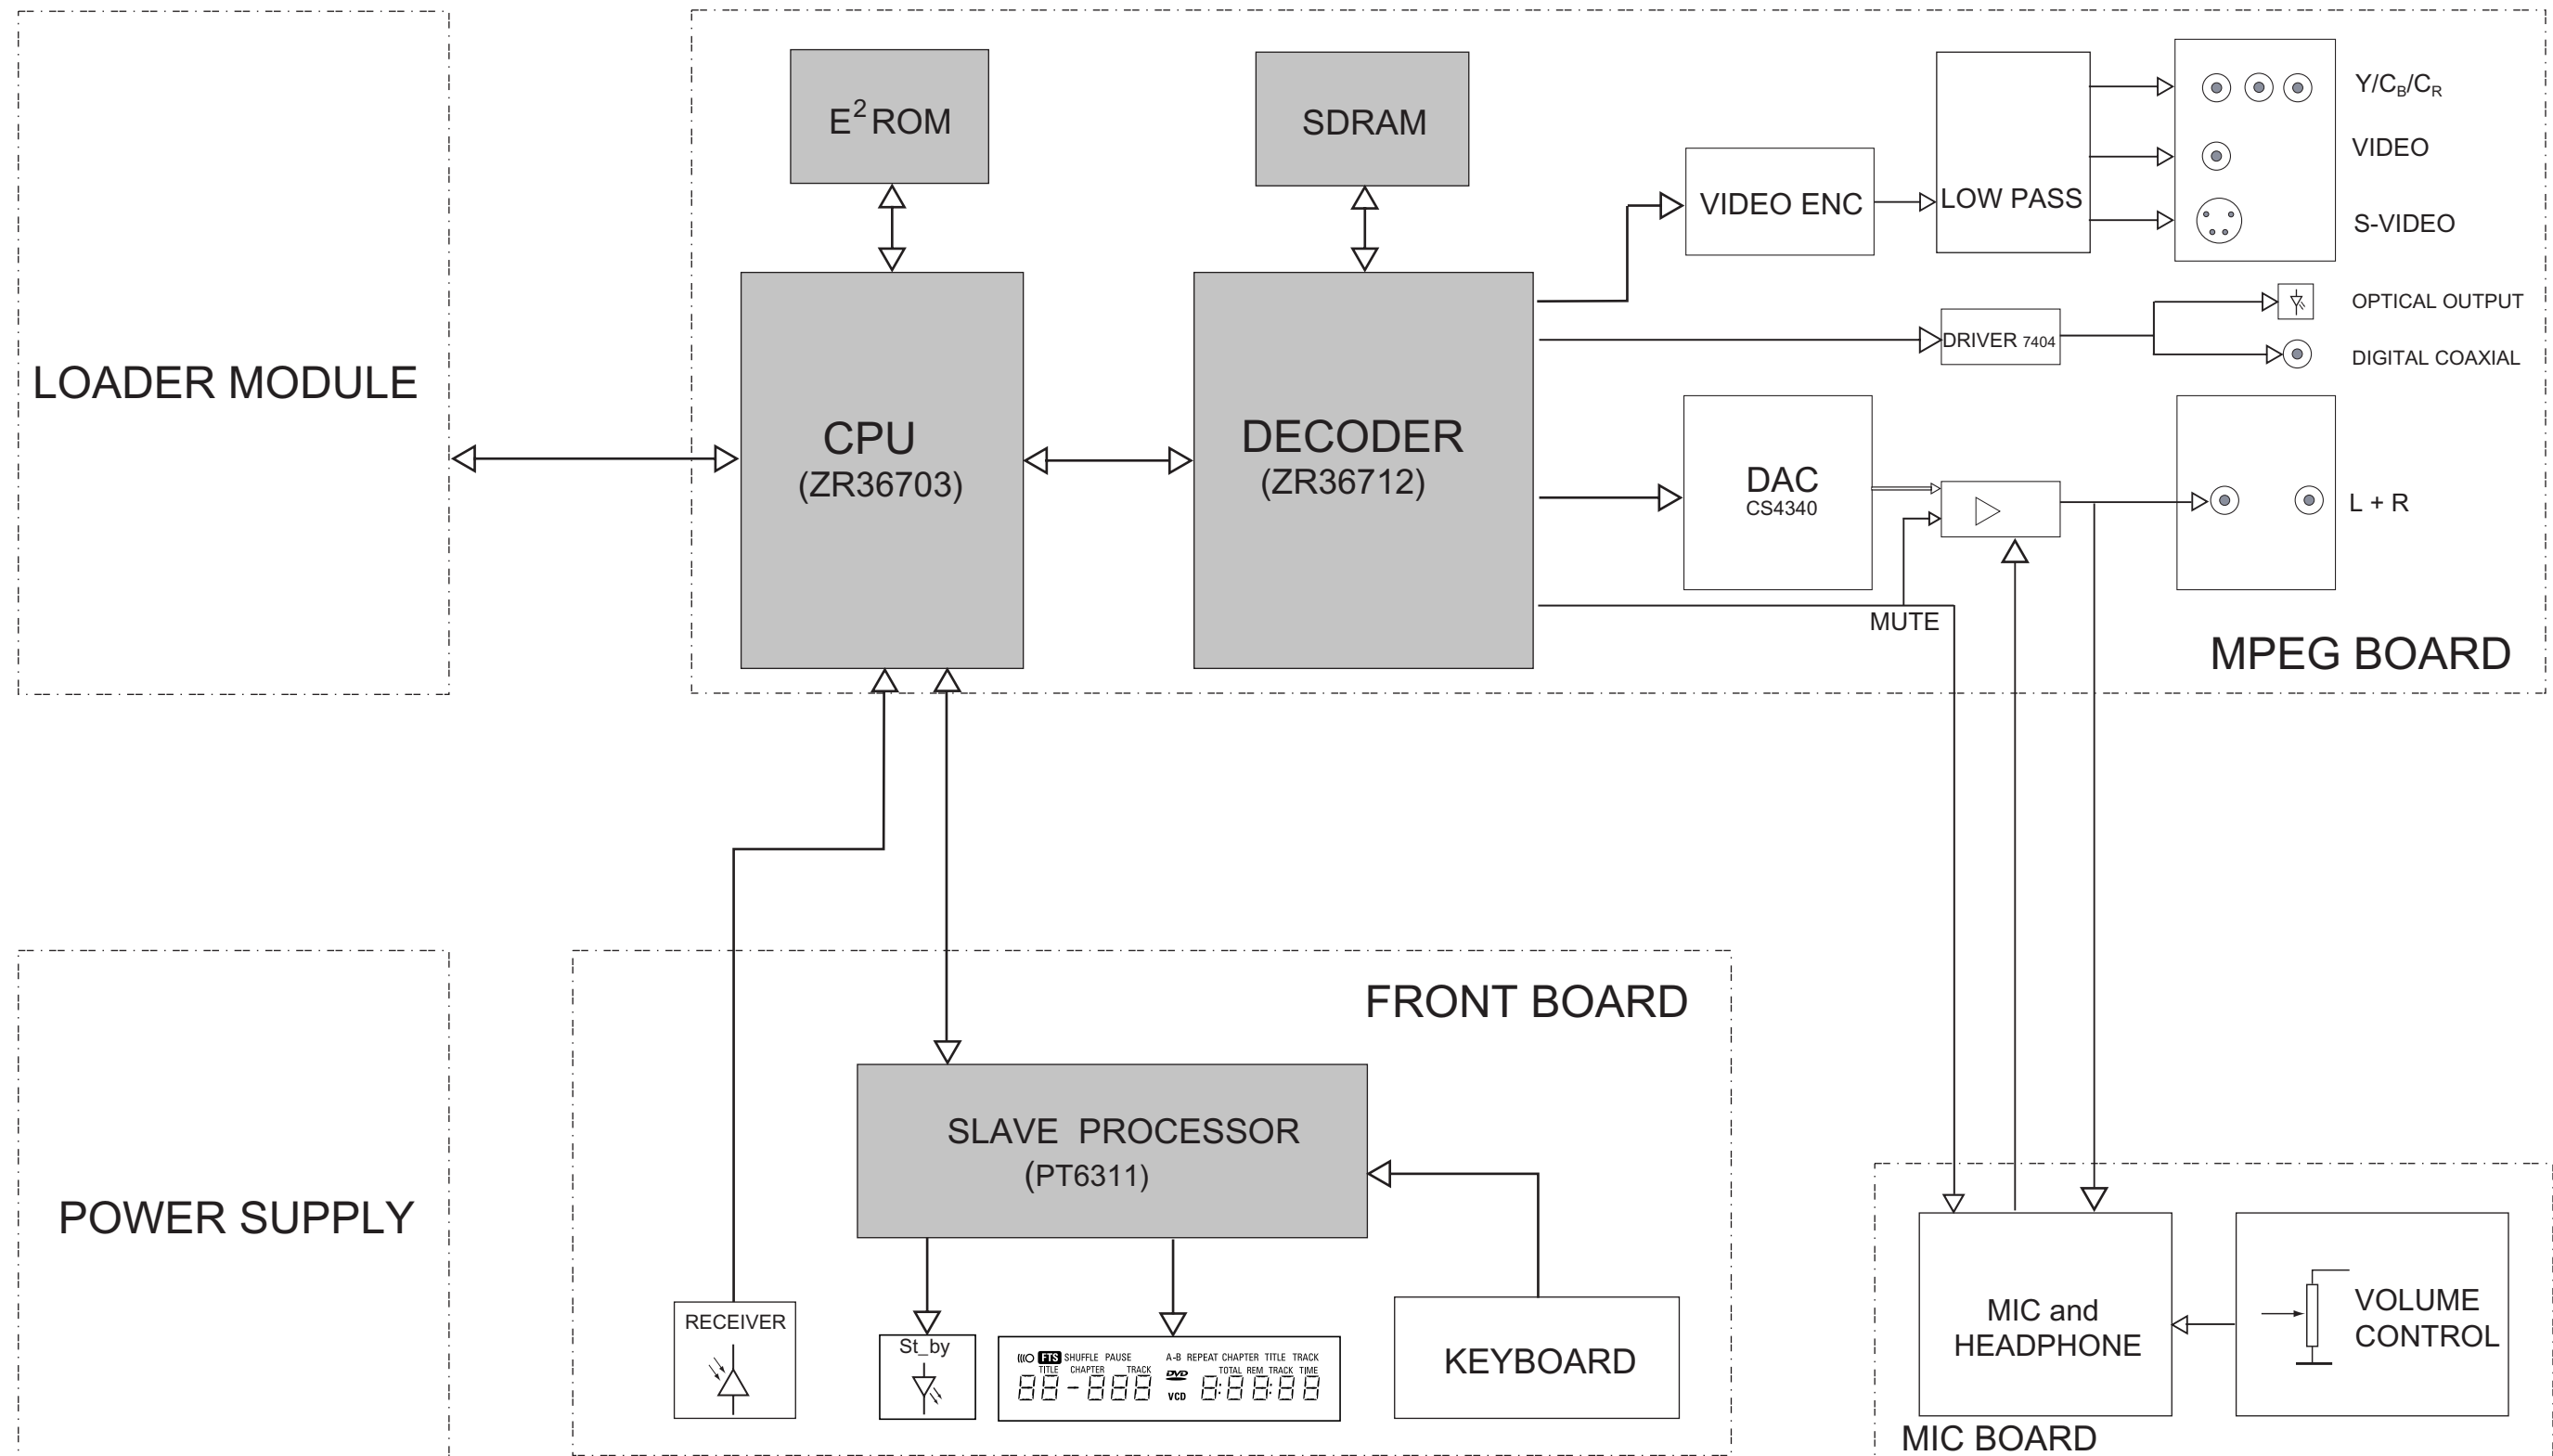


6. Block- and wiring diagram

Wiring diagram DVD730K/691/751/781

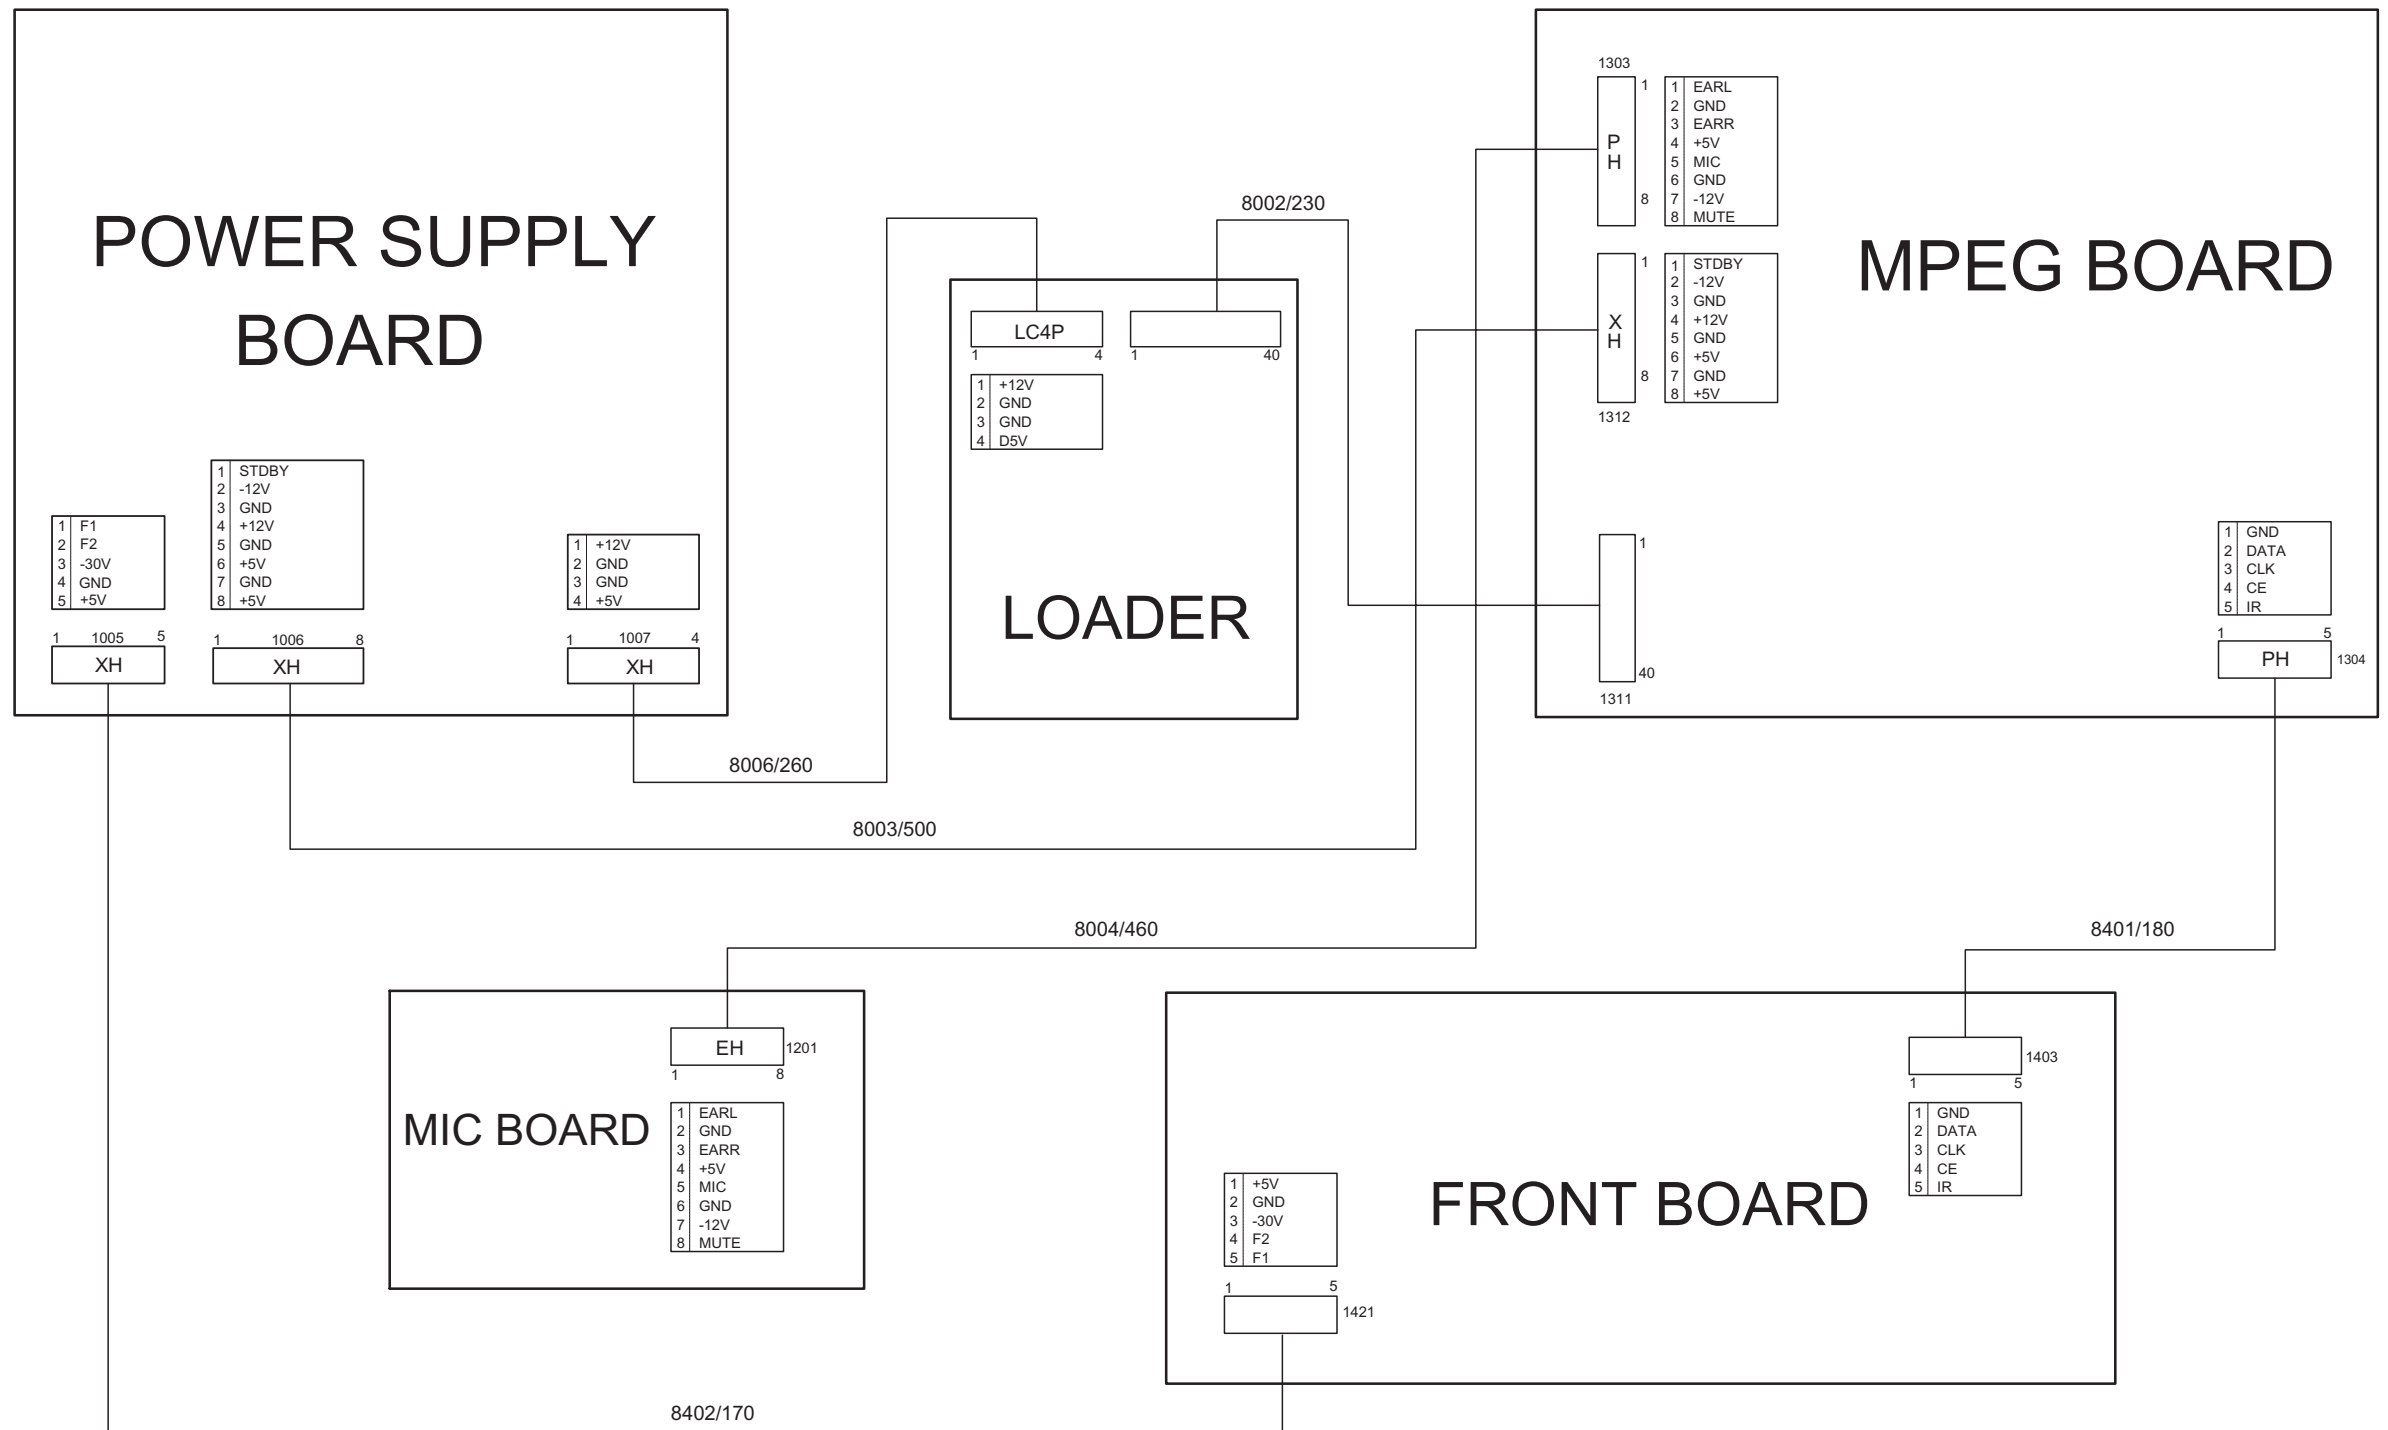


7. Electrical diagrams and Print-layouts

Power supply board DVD730K/691/751/781

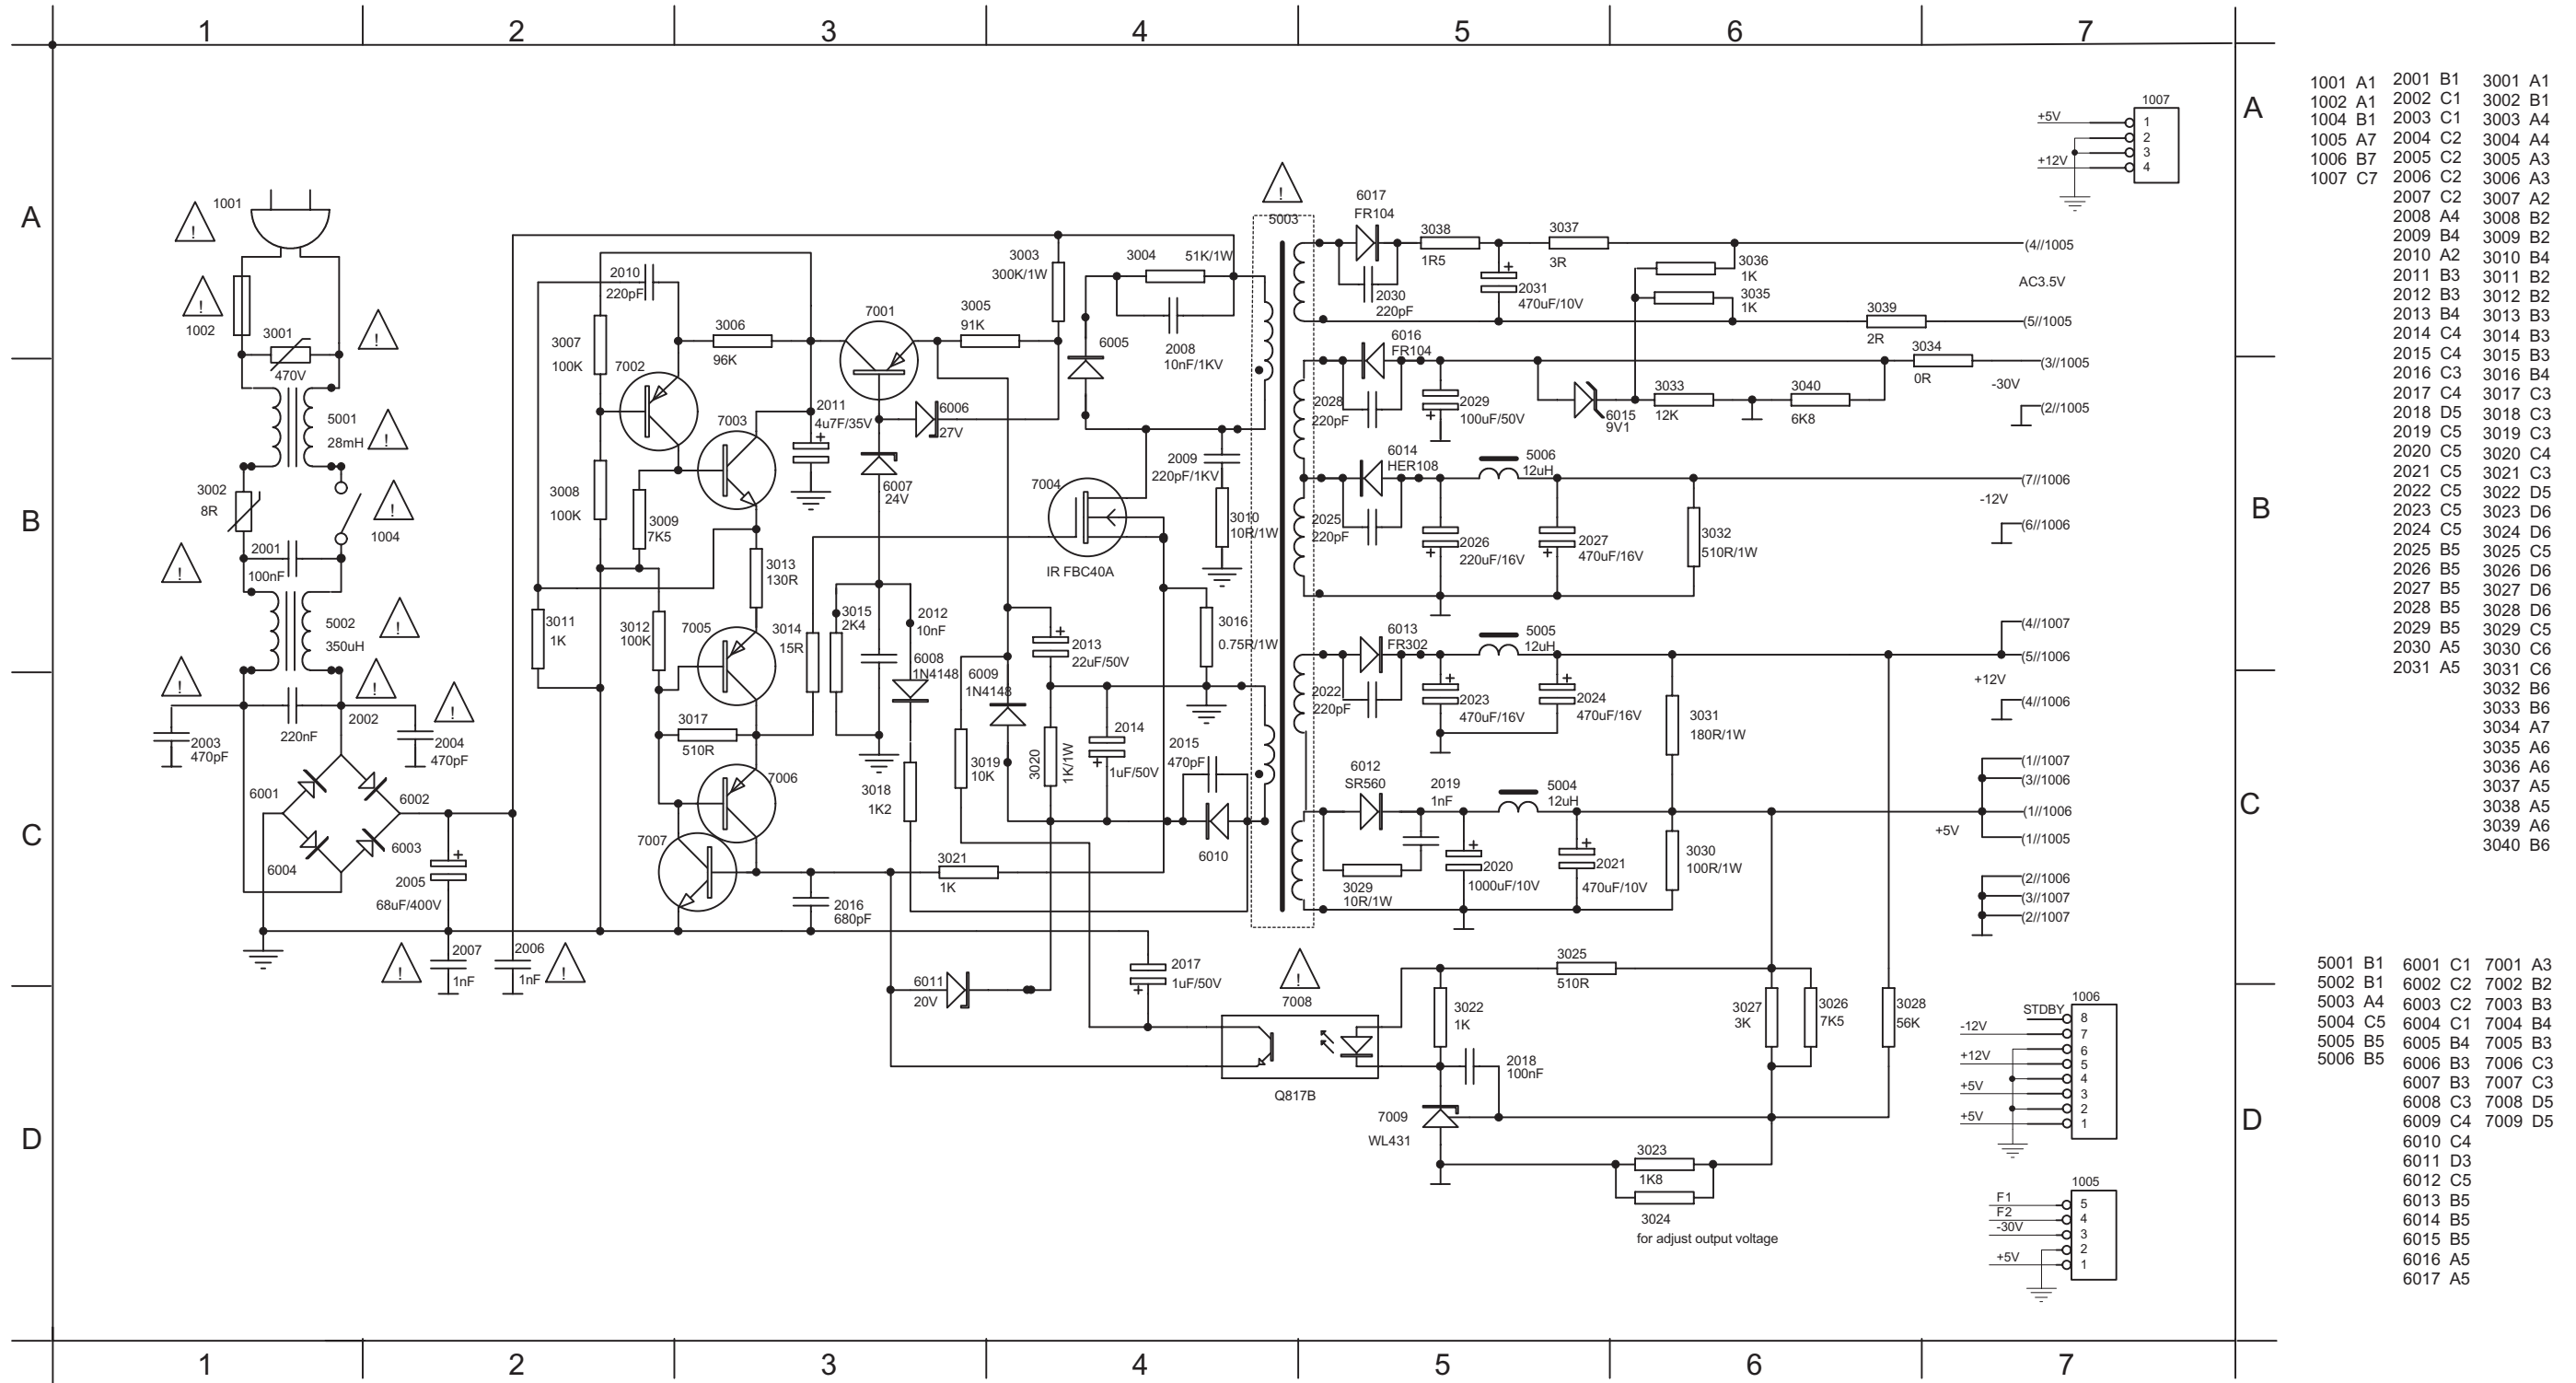


1001 A1	2001 B1	3001 A1
1002 A1	2002 C1	3002 B1
1004 B1	2003 C1	3003 A4
1005 A7	2004 C2	3004 A4
1006 B7	2005 C2	3005 A3
1007 C7	2006 C2	3006 A3
	2007 C2	3007 A2
	2008 A4	3008 B2
	2009 B4	3009 B2
	2010 A2	3010 B4
	2011 B3	3011 B2
	2012 B3	3012 B2
	2013 B4	3013 B3
	2014 C4	3014 B3
	2015 C4	3015 B3
	2016 C3	3016 B4
	2017 C4	3017 C3
	2018 D5	3018 C3
	2019 C5	3019 C3
	2020 C5	3020 C4
	2021 C5	3021 C3
	2022 C5	3022 D5
	2023 C5	3023 D6
	2024 C5	3024 D6
	2025 B5	3025 C5
	2026 B5	3026 D6
	2027 B5	3027 D6
	2028 B5	3028 D6
	2029 B5	3029 C5
	2030 A5	3030 C6
	2031 A5	3031 C6
		3032 B6
		3033 B6
		3034 A7
		3035 A6
		3036 A6
		3037 A5
		3038 A5
		3039 A6
		3040 B6
5001 B1	6001 C1	7001 A3
5002 B1	6002 C2	7002 B2
5003 A4	6003 C2	7003 B3
5004 C5	6004 C1	7004 B4
5005 B5	6005 B4	7005 B3
5006 B5	6006 B3	7006 C3
	6007 B3	7007 C3
	6008 C3	7008 D5
	6009 C4	7009 D5
	6010 C4	
	6011 D3	
	6012 C5	
	6013 B5	
	6014 B5	
	6015 B5	
	6016 A5	
	6017 A5	

Layout Power supply board DVD730K/691/751/781

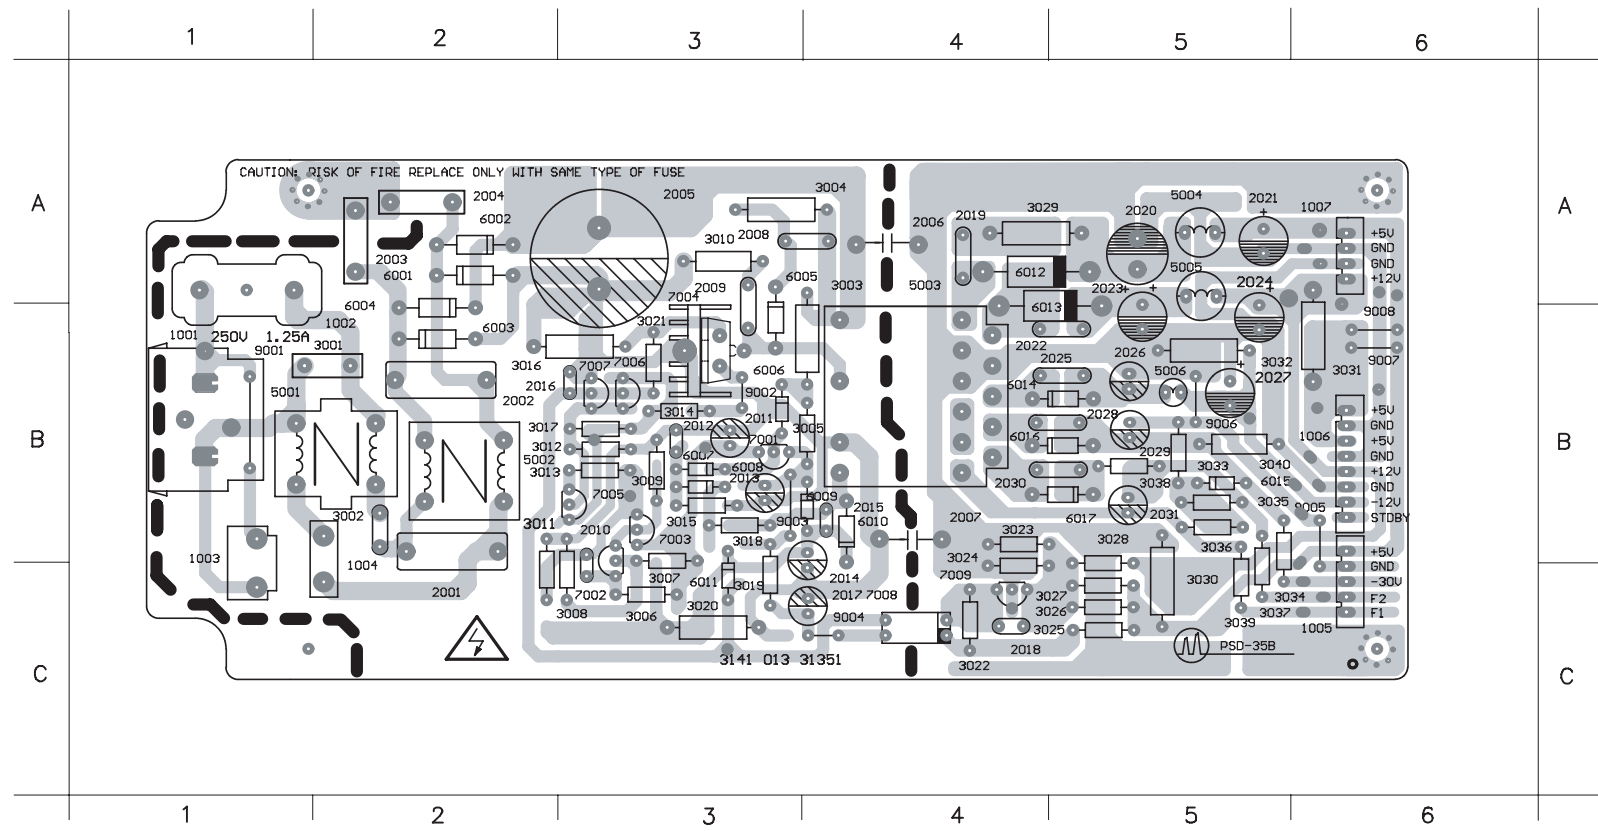

Component side

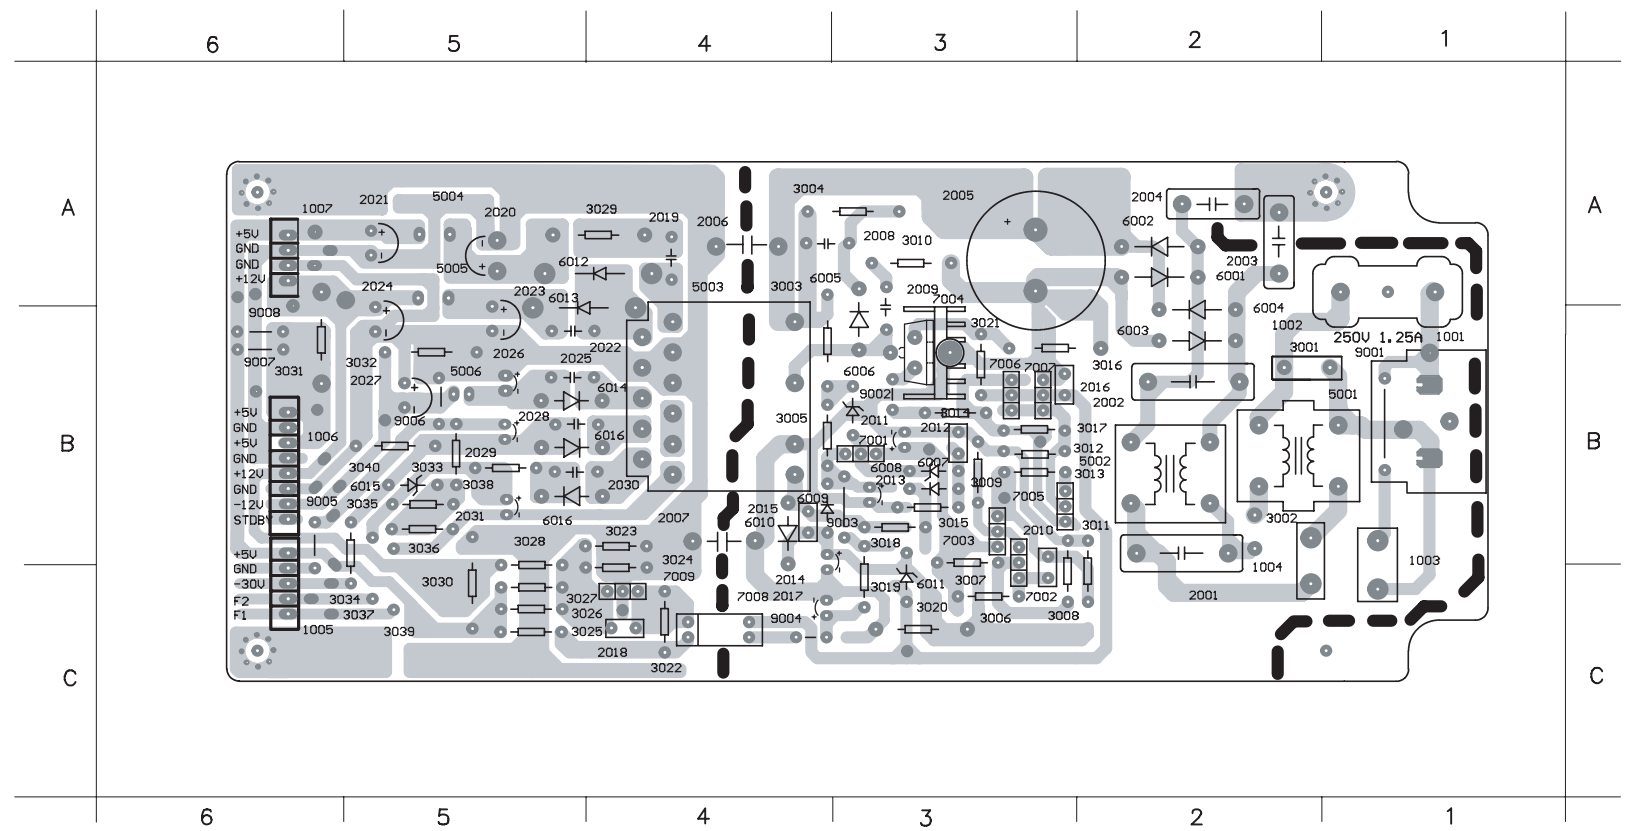


Copper side

1001	B1	3024	C4
1002	A1	3025	C5
1003	C1	3026	C5
1004	B2	3027	C5
1005	C6	3028	C5
1006	B6	3029	A4
1007	A6	3030	C5
2001	B2	3031	B6
2002	B2	3032	B5
2003	A2	3033	B5
2004	A2	3034	B5
2005	A3	3035	B5
2008	A4	3036	B5
2009	B3	3037	C5
2010	C3	3038	B5
2011	B3	3039	C5
2012	B3	3040	B5
2013	B3	5001	B2
2014	B4	5002	B2
2015	B4	5003	B4
2016	B3	5004	A5
2017	C4	5005	A5
2018	C4	5006	B5
2019	A4	6001	A2
2020	A5	6002	A2
2021	A5	6003	B2
2022	B5	6004	B2
2023	B5	6005	B3
2024	B5	6006	B3
2025	B5	6007	B3
2026	B5	6008	B3
2027	B5	6009	B4
2028	B5	6010	B4
2029	B5	6011	C3
2030	B5	6012	A4
2031	B5	6013	B5
3001	B2	6014	B5
3002	B2	6015	B5
3003	B4	6016	B5
3004	A3	6017	B5
3005	B4	7001	B3
3006	C3	7002	B3
3007	B3	7003	B3
3008	C3	7004	B3
3009	B3	7005	B3
3010	A3	7006	B3
3011	C2	7007	B3
3012	B3	7008	C4
3013	B3	7009	C4
3014	B3	9001	B1
3015	B3	9002	B3
3016	B3	9003	B3
3017	B3	9004	C4
3018	B3	9005	B6
3019	C3	9006	B5
3020	C3	9007	B6
3021	B3	9008	B6
3022	C4		
3023	B4		


MPEG board DVD730K/691/751/781

Main Circuit

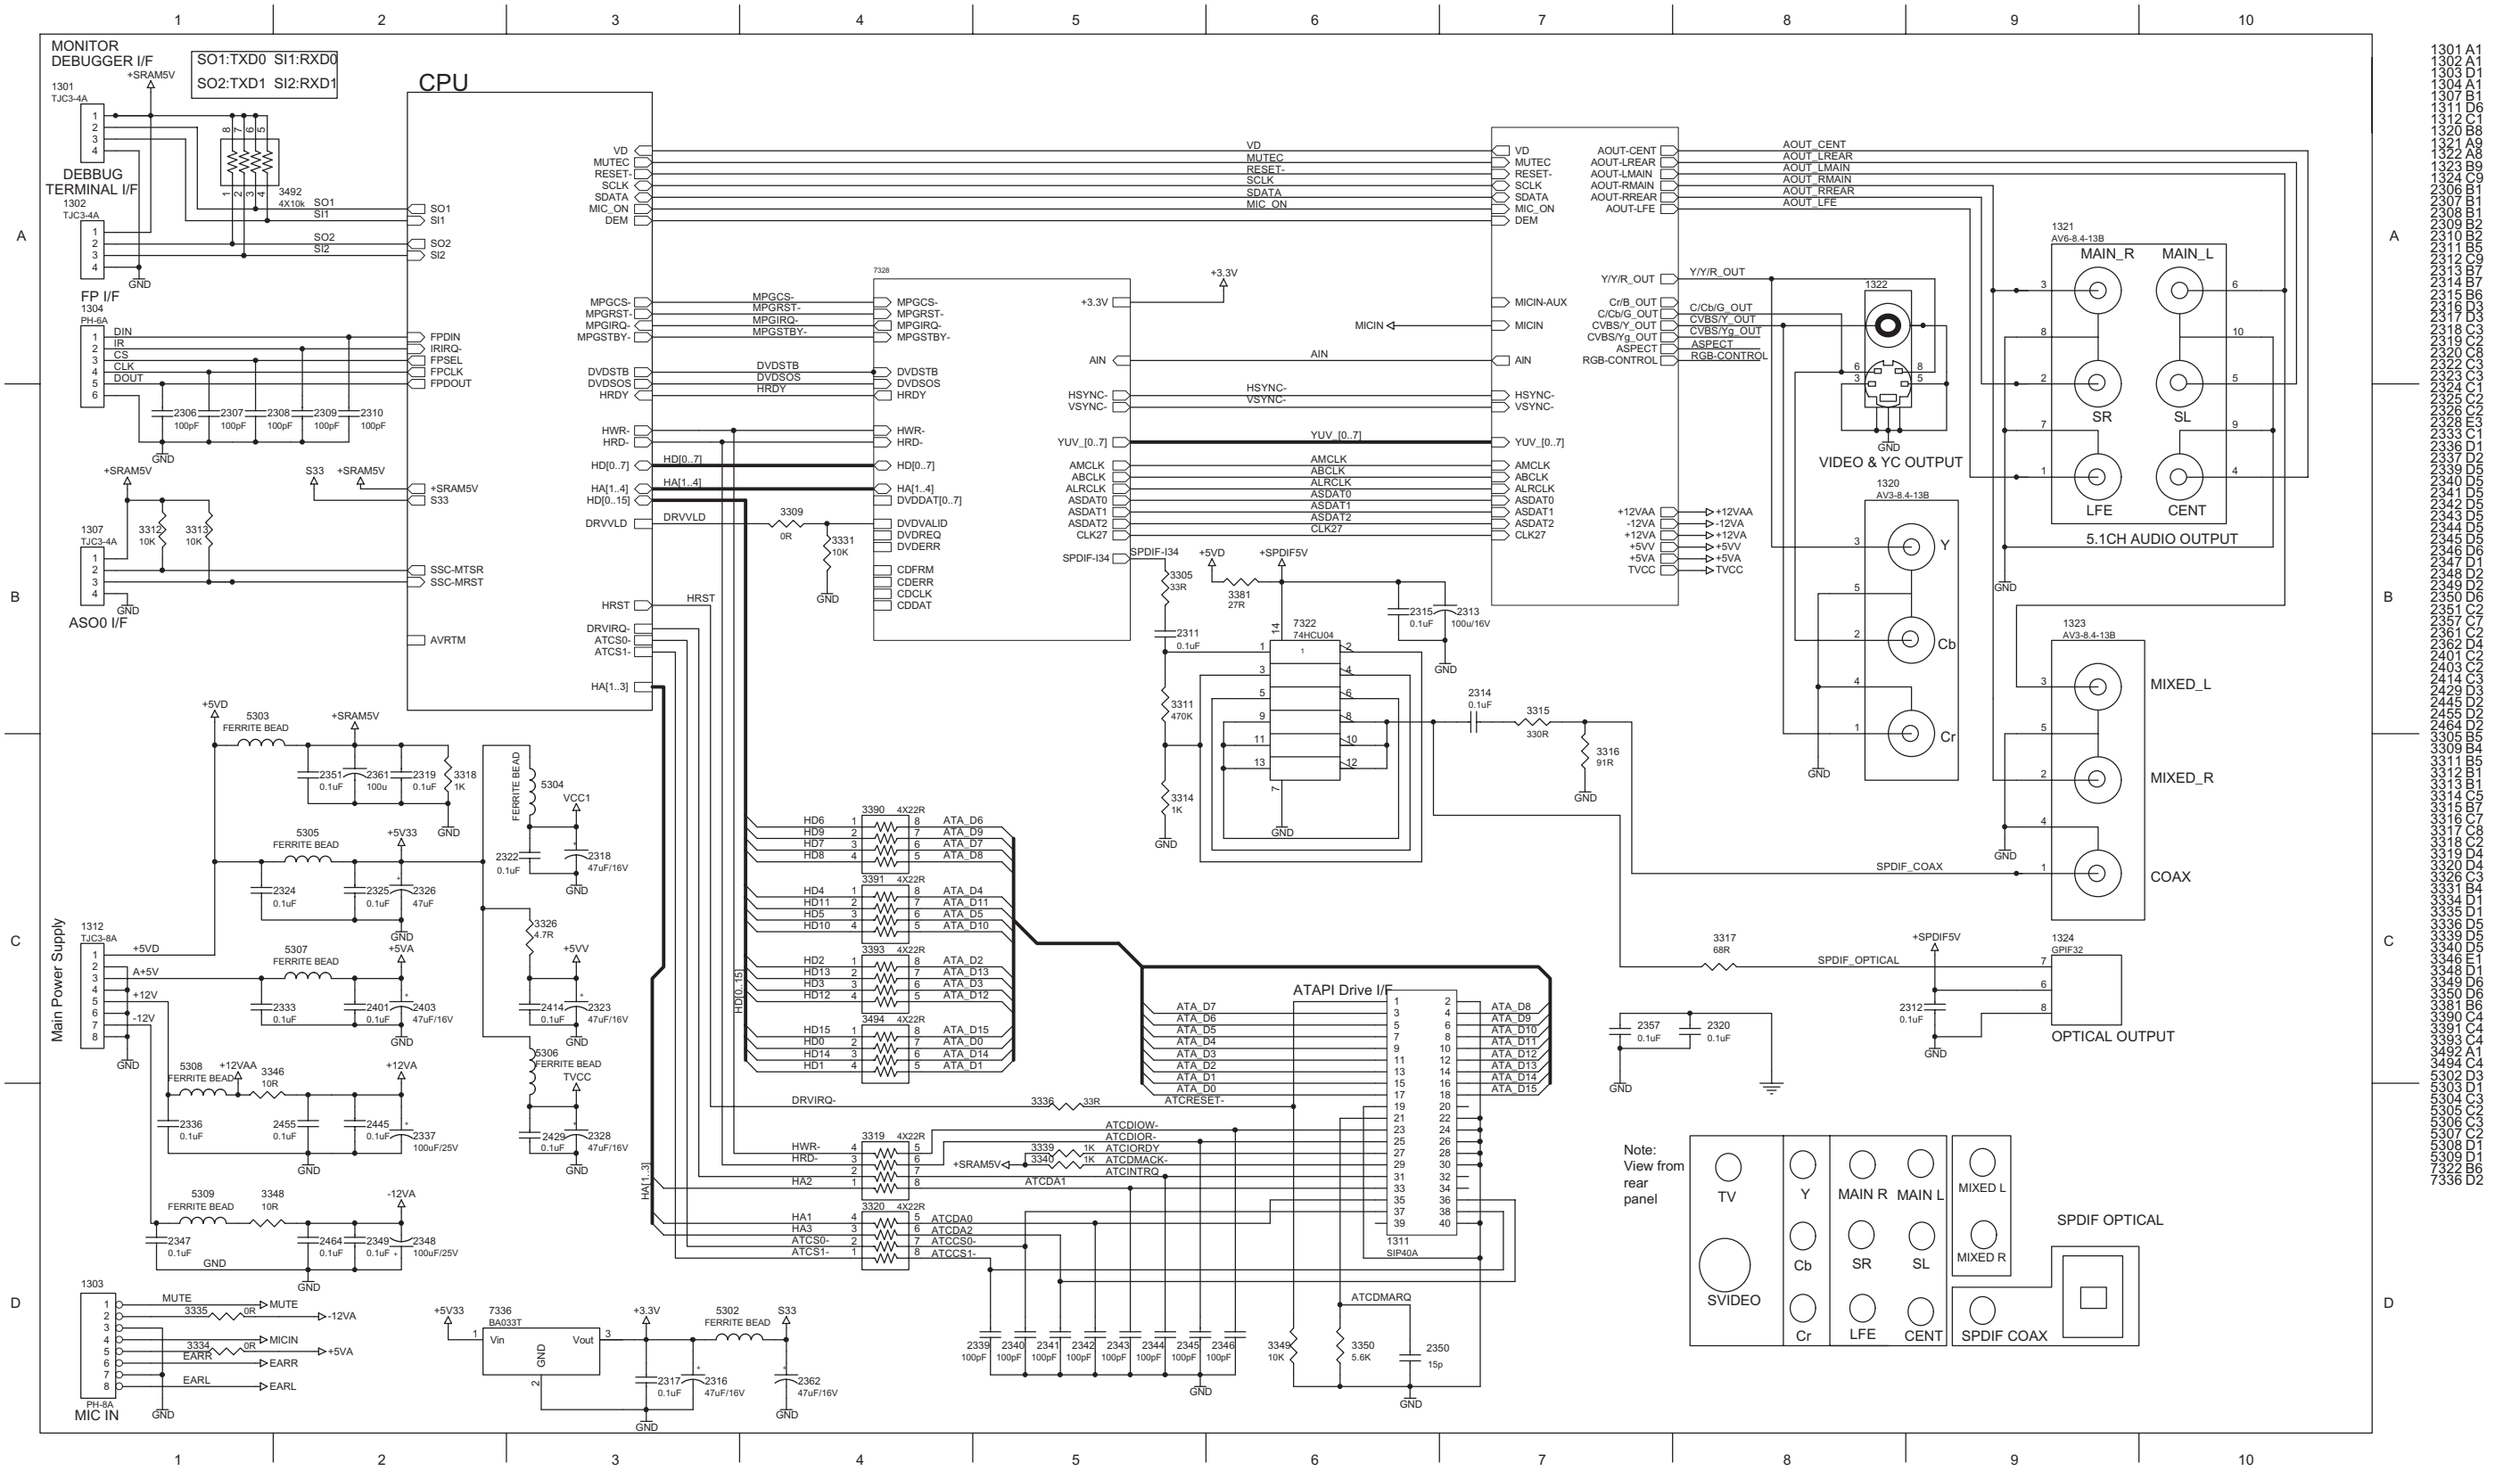

MPEG board DVD730K/691/751/781


CPU - ZR36703

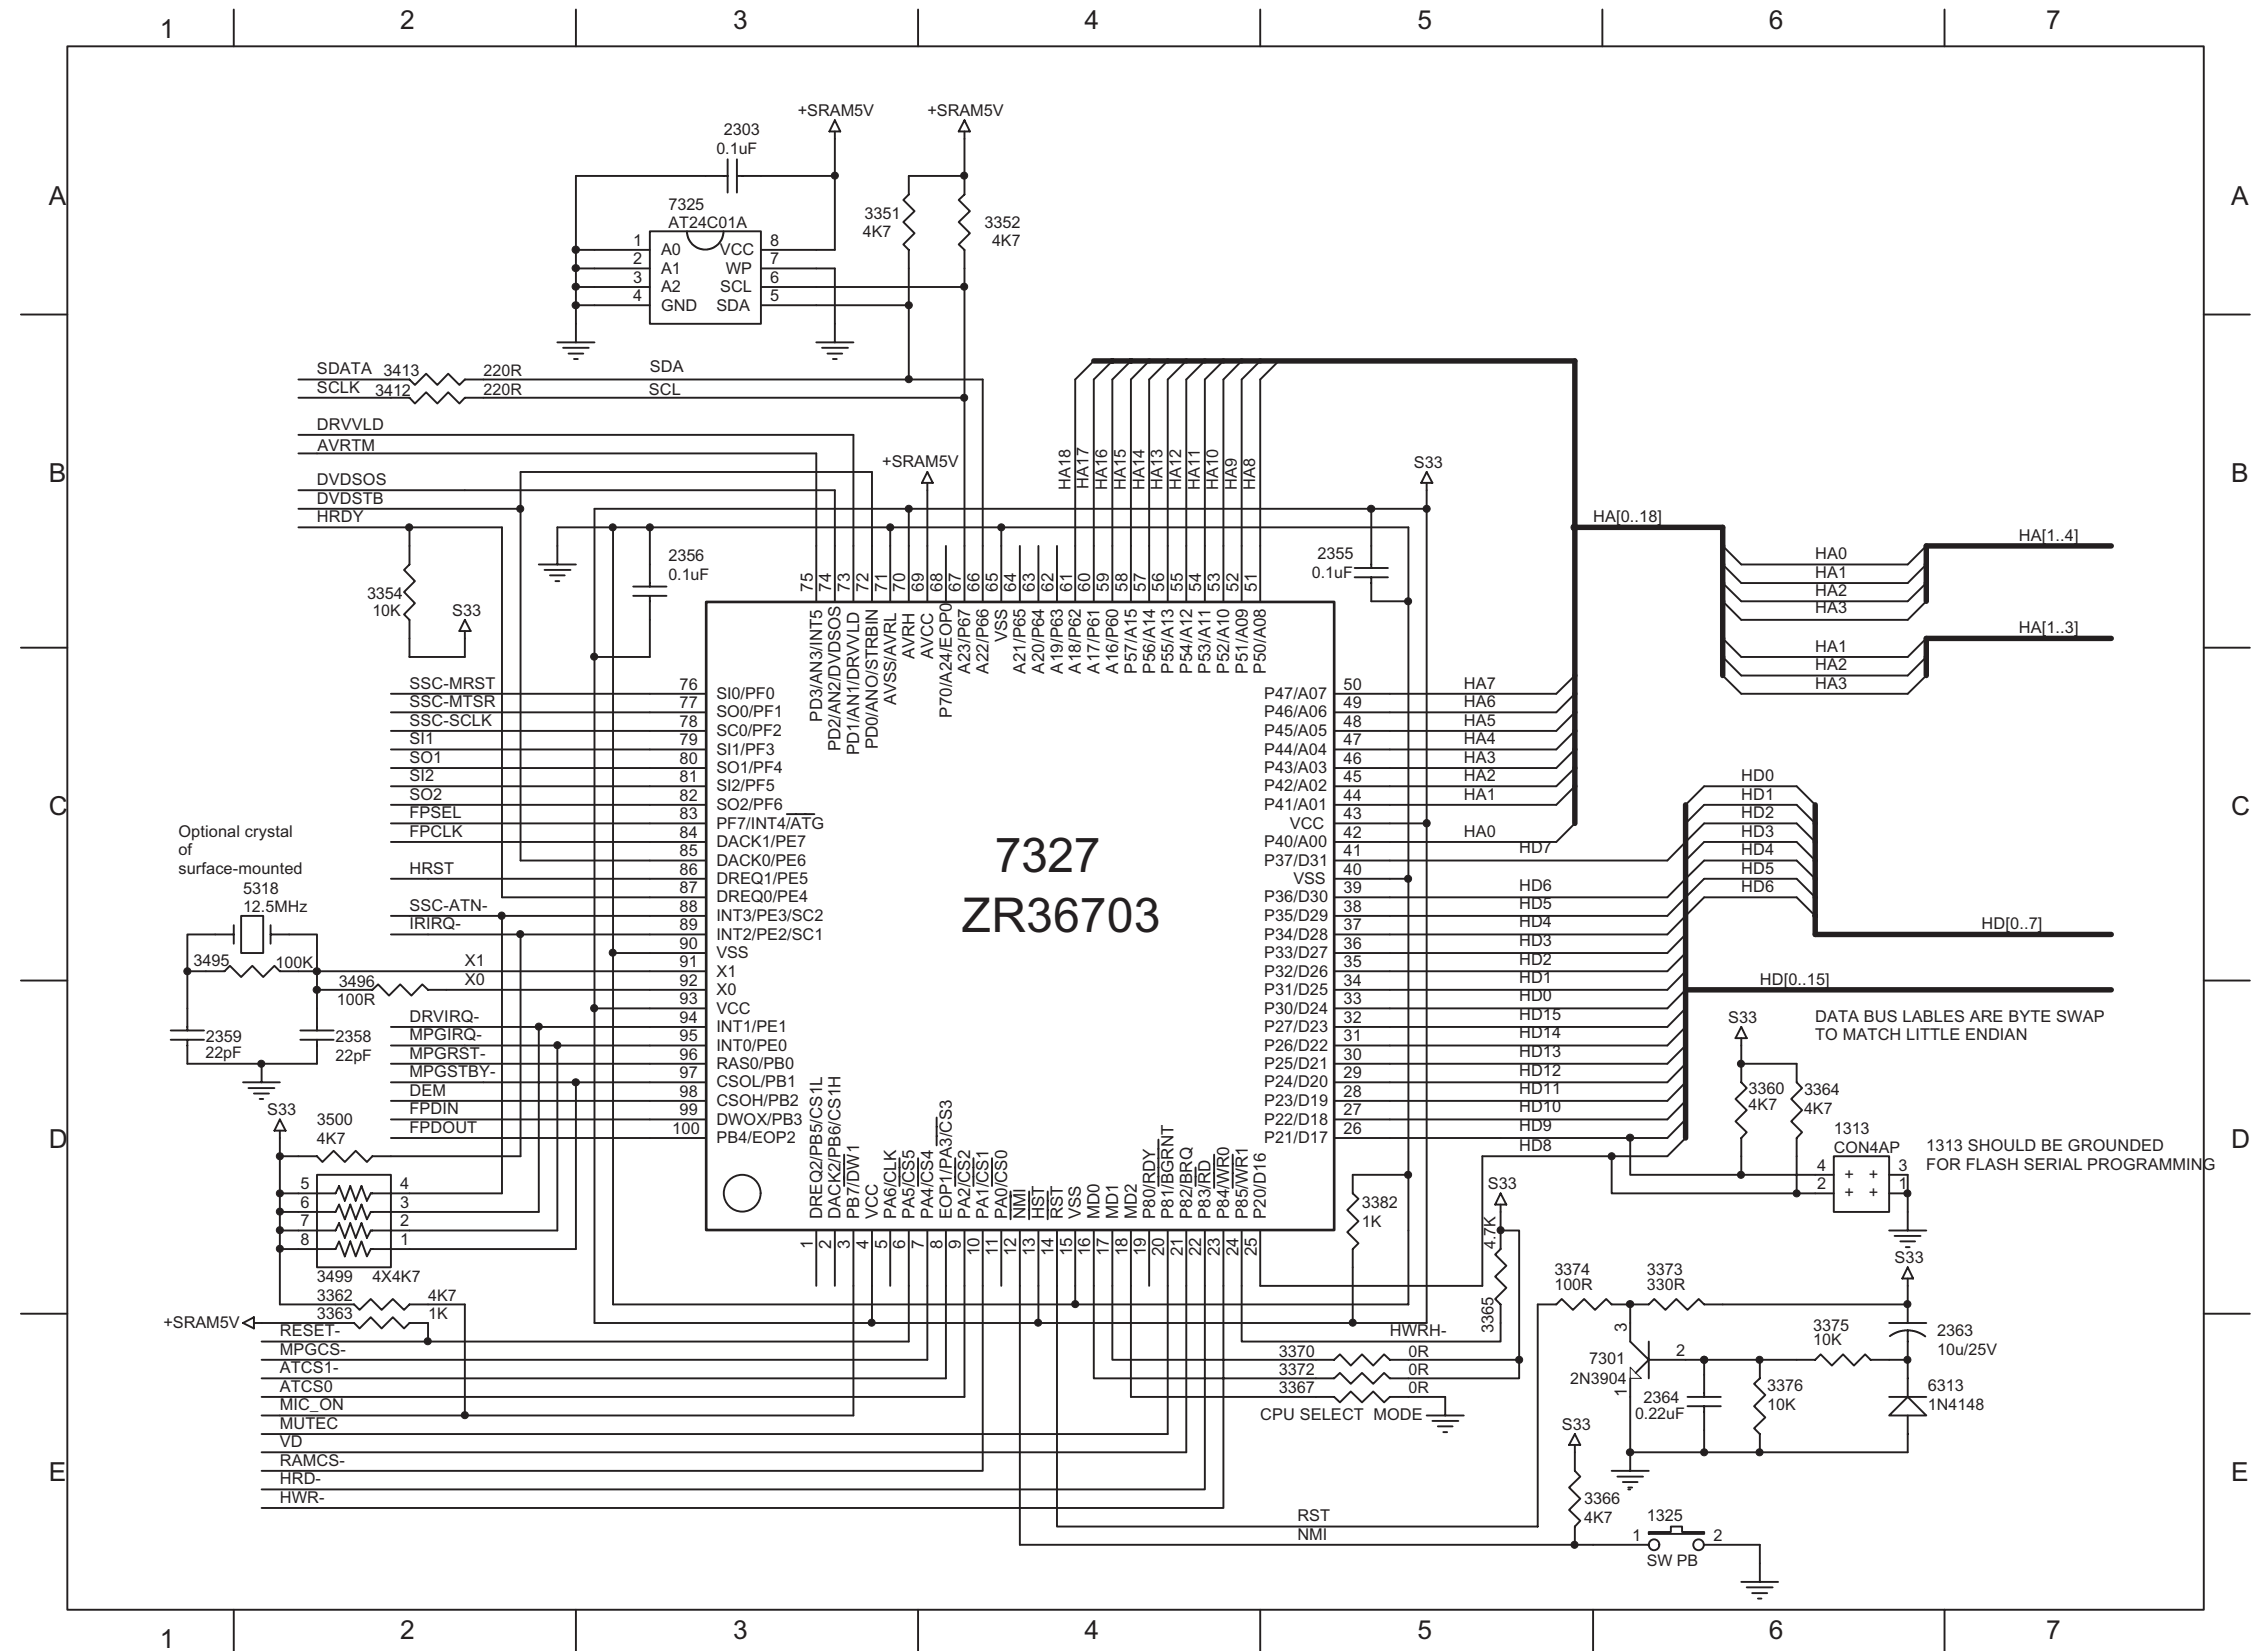

- 1313 D6
- 1325 E6
- 2303 A3
- 2355 B5
- 2356 B3
- 2358 D2
- 2359 D1
- 2363 E6
- 2364 E6
- 3351 A3
- 3352 A4
- 3354 B2
- 3360 D5
- 3362 D2
- 3363 E2
- 3364 D6
- 3365 D5
- 3366 E5
- 3367 E5
- 3370 E5
- 3372 E5
- 3373 D6
- 3374 D5
- 3375 E6
- 3376 E6
- 3382 D5
- 3412 B2
- 3413 B2
- 3495 C1
- 3496 D2
- 3499 D2
- 3500 D2
- 5318 C2
- 6313 E6
- 7301 E6
- 7325 A3
- 7327 C4


MPEG board DVD730K/691/751/781

Decoder - ZR36712

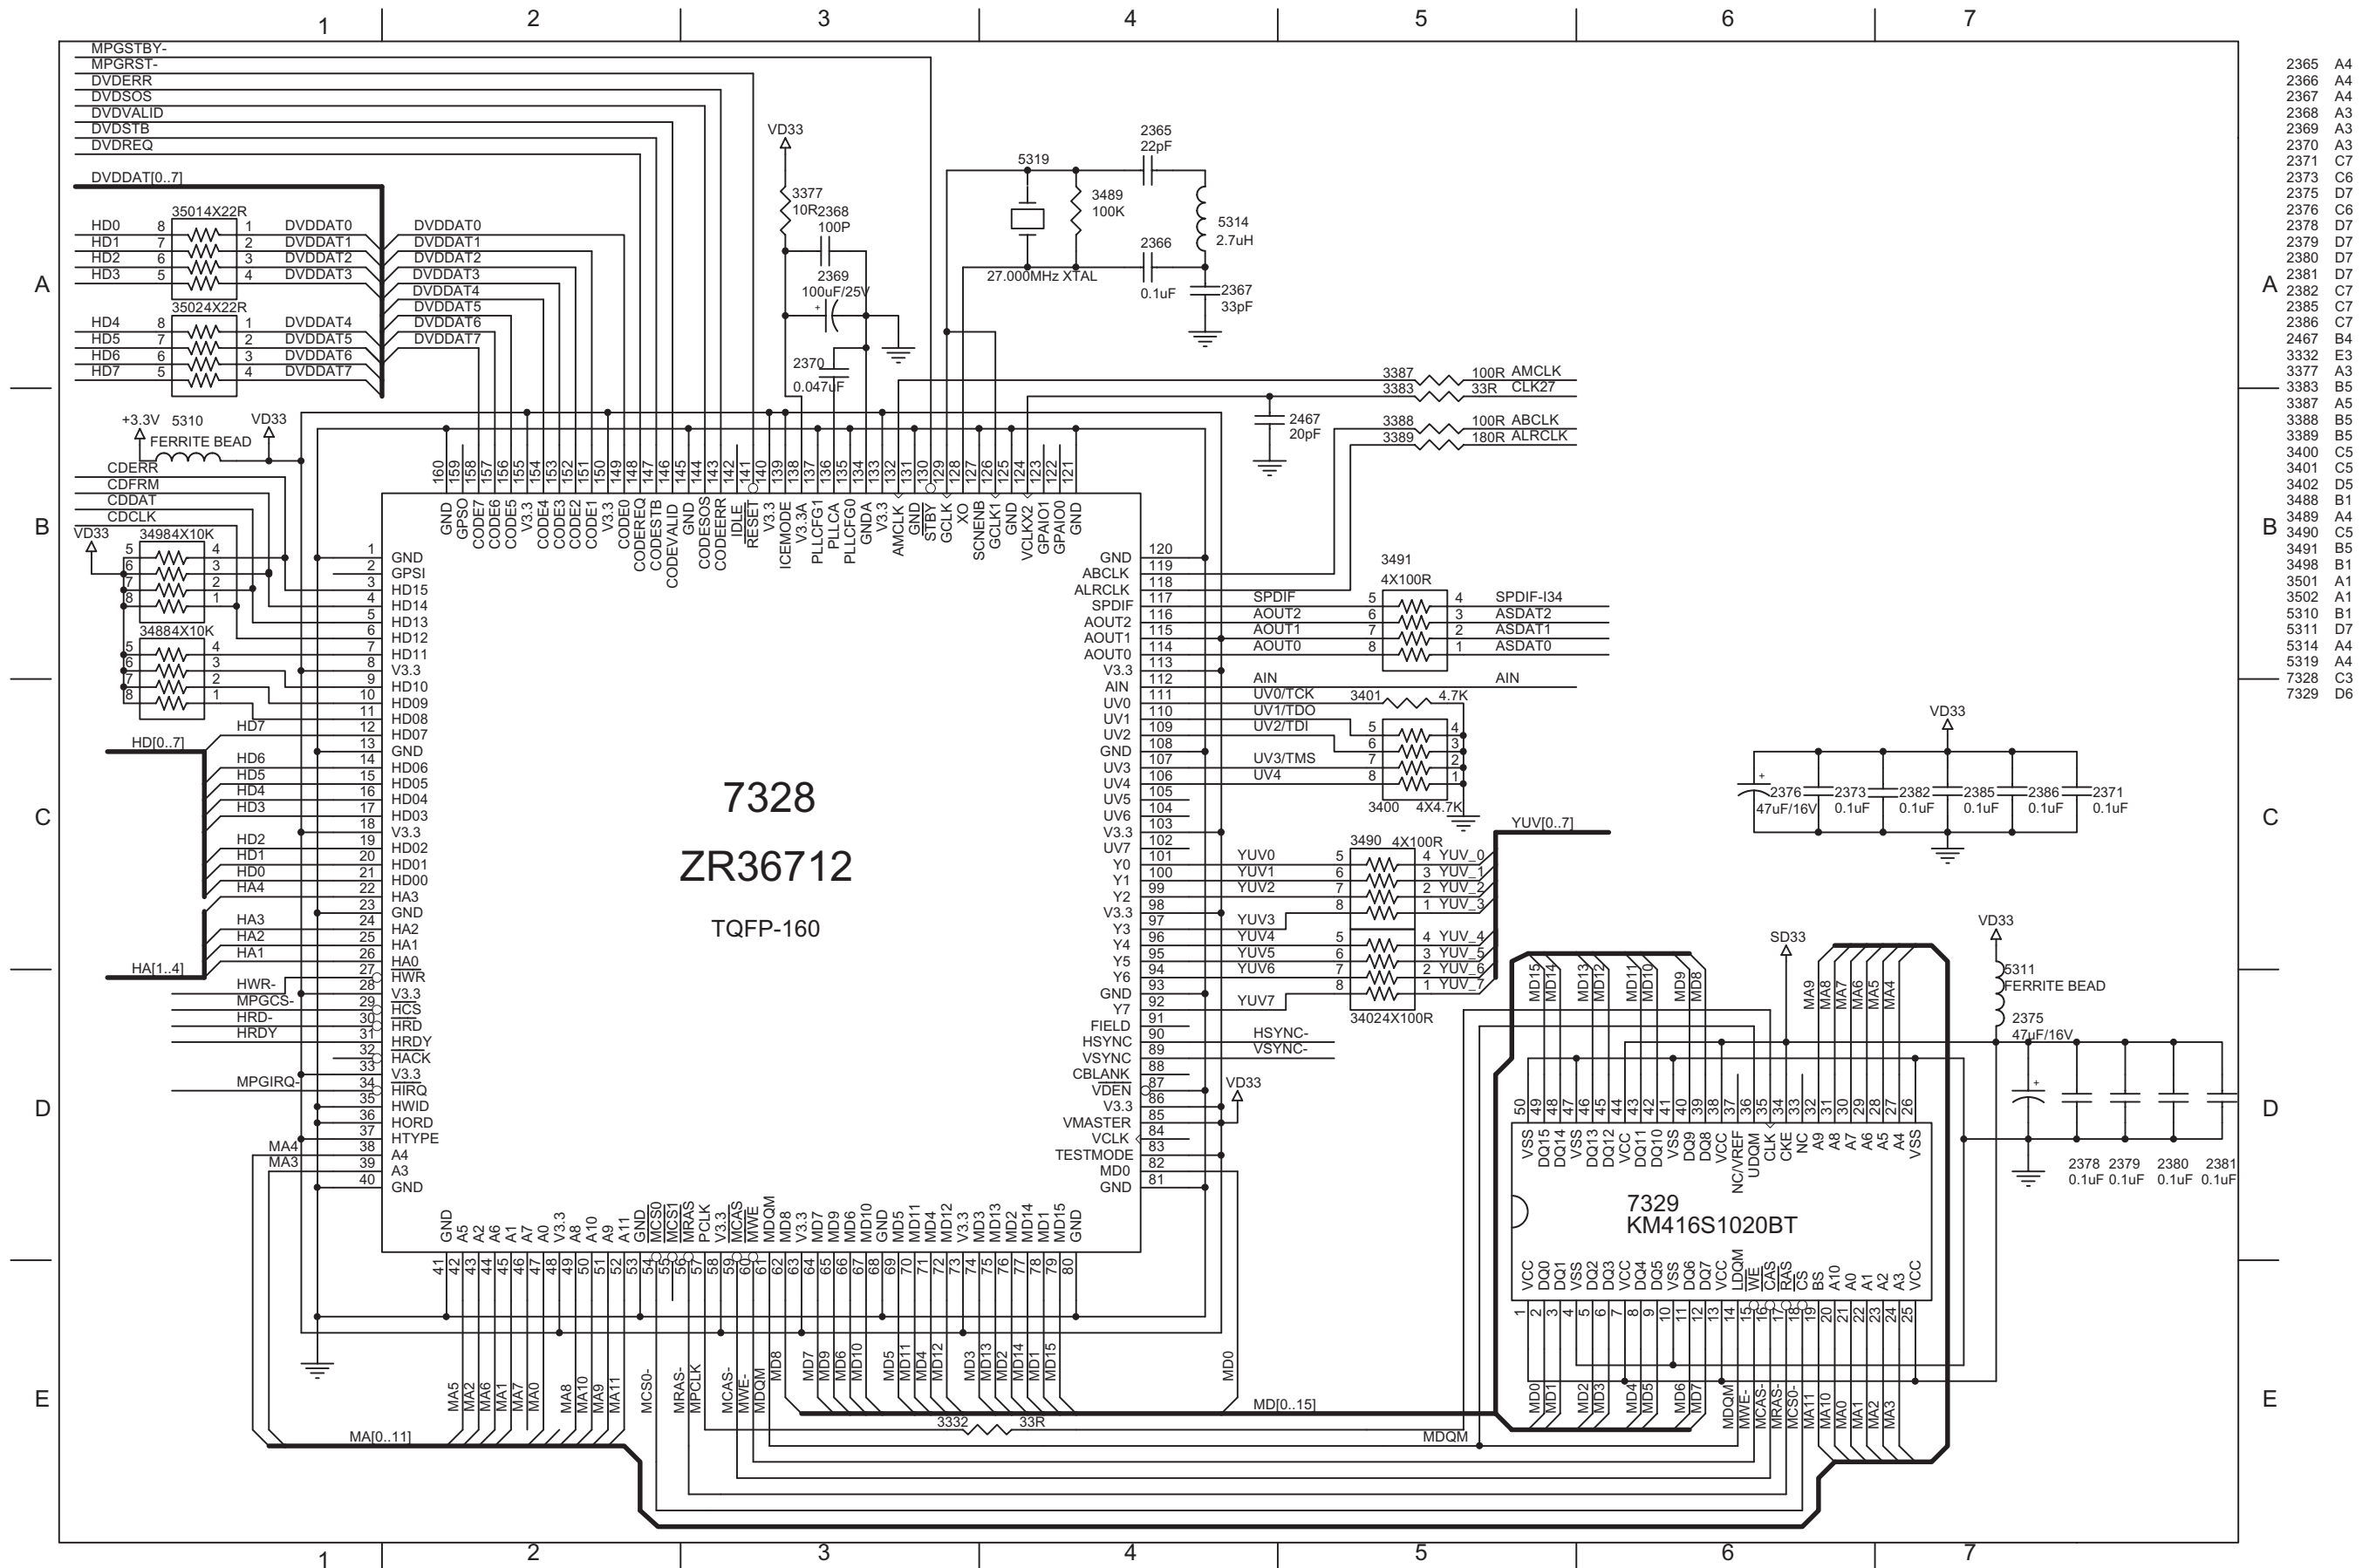


MPEG board DVD730K/691/751/781

Video ENC & Audio DAC

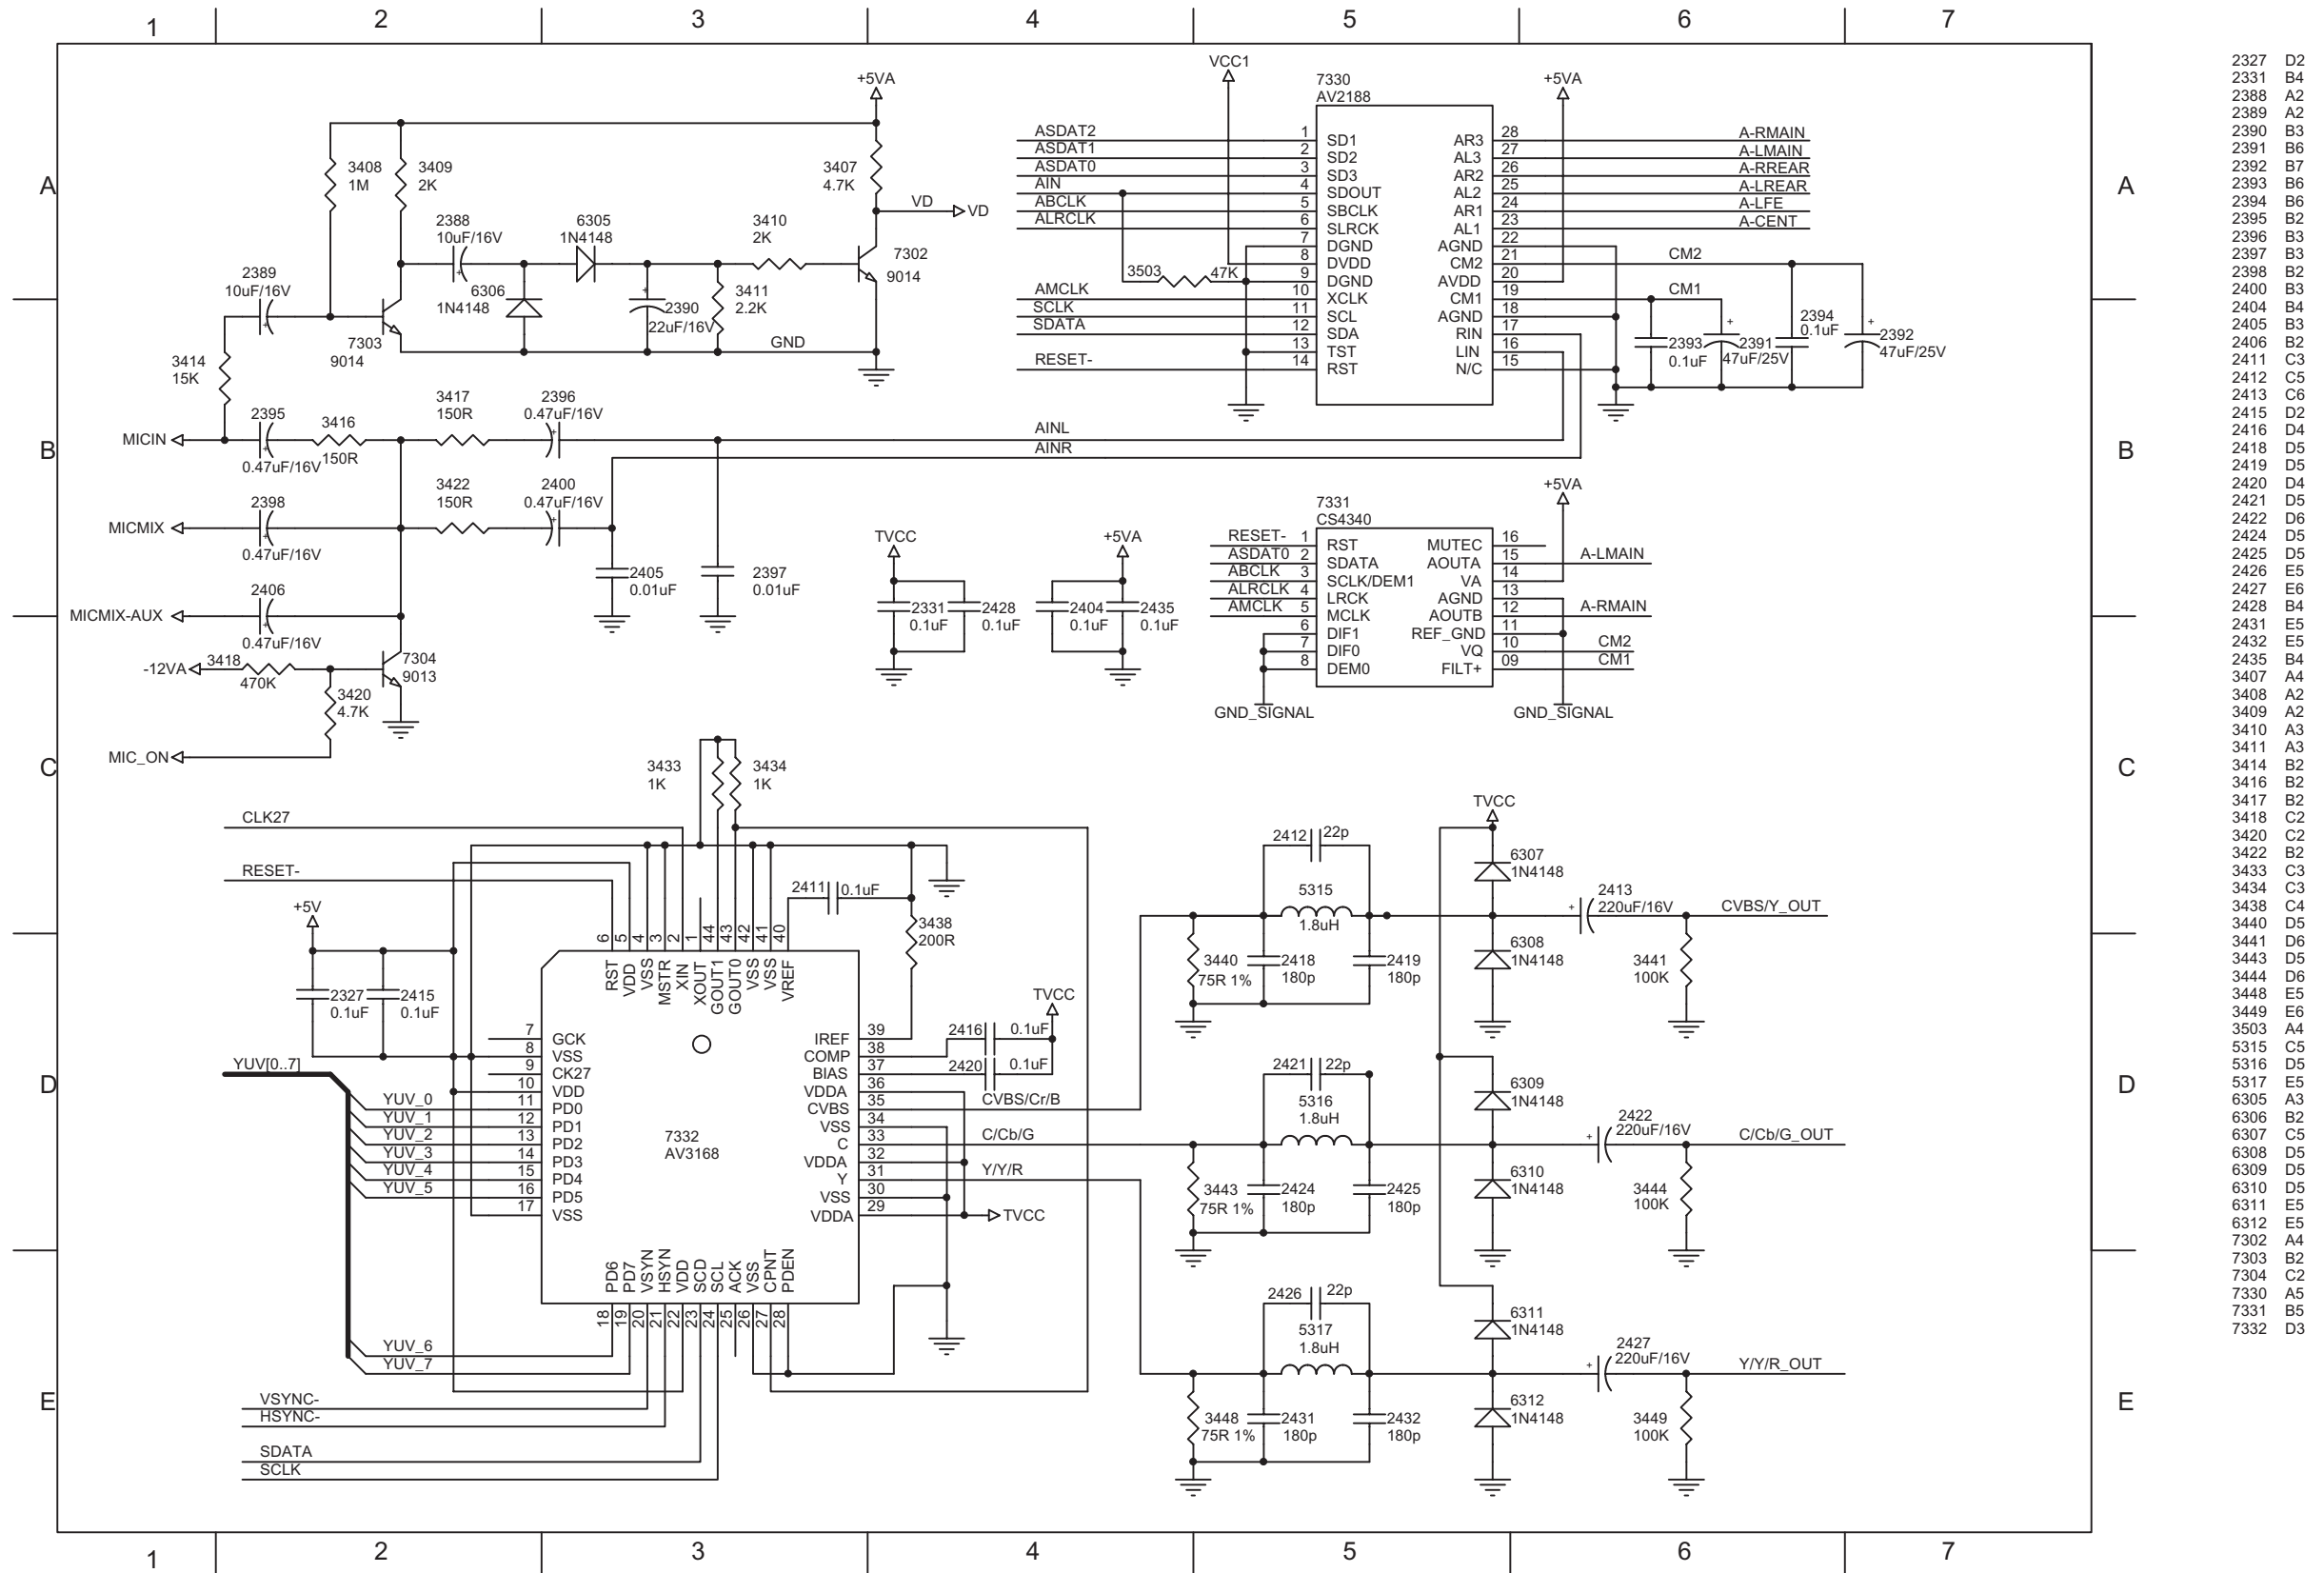

MPEG board DVD730K/691/751/781


Audio - 6 & 2 Channels

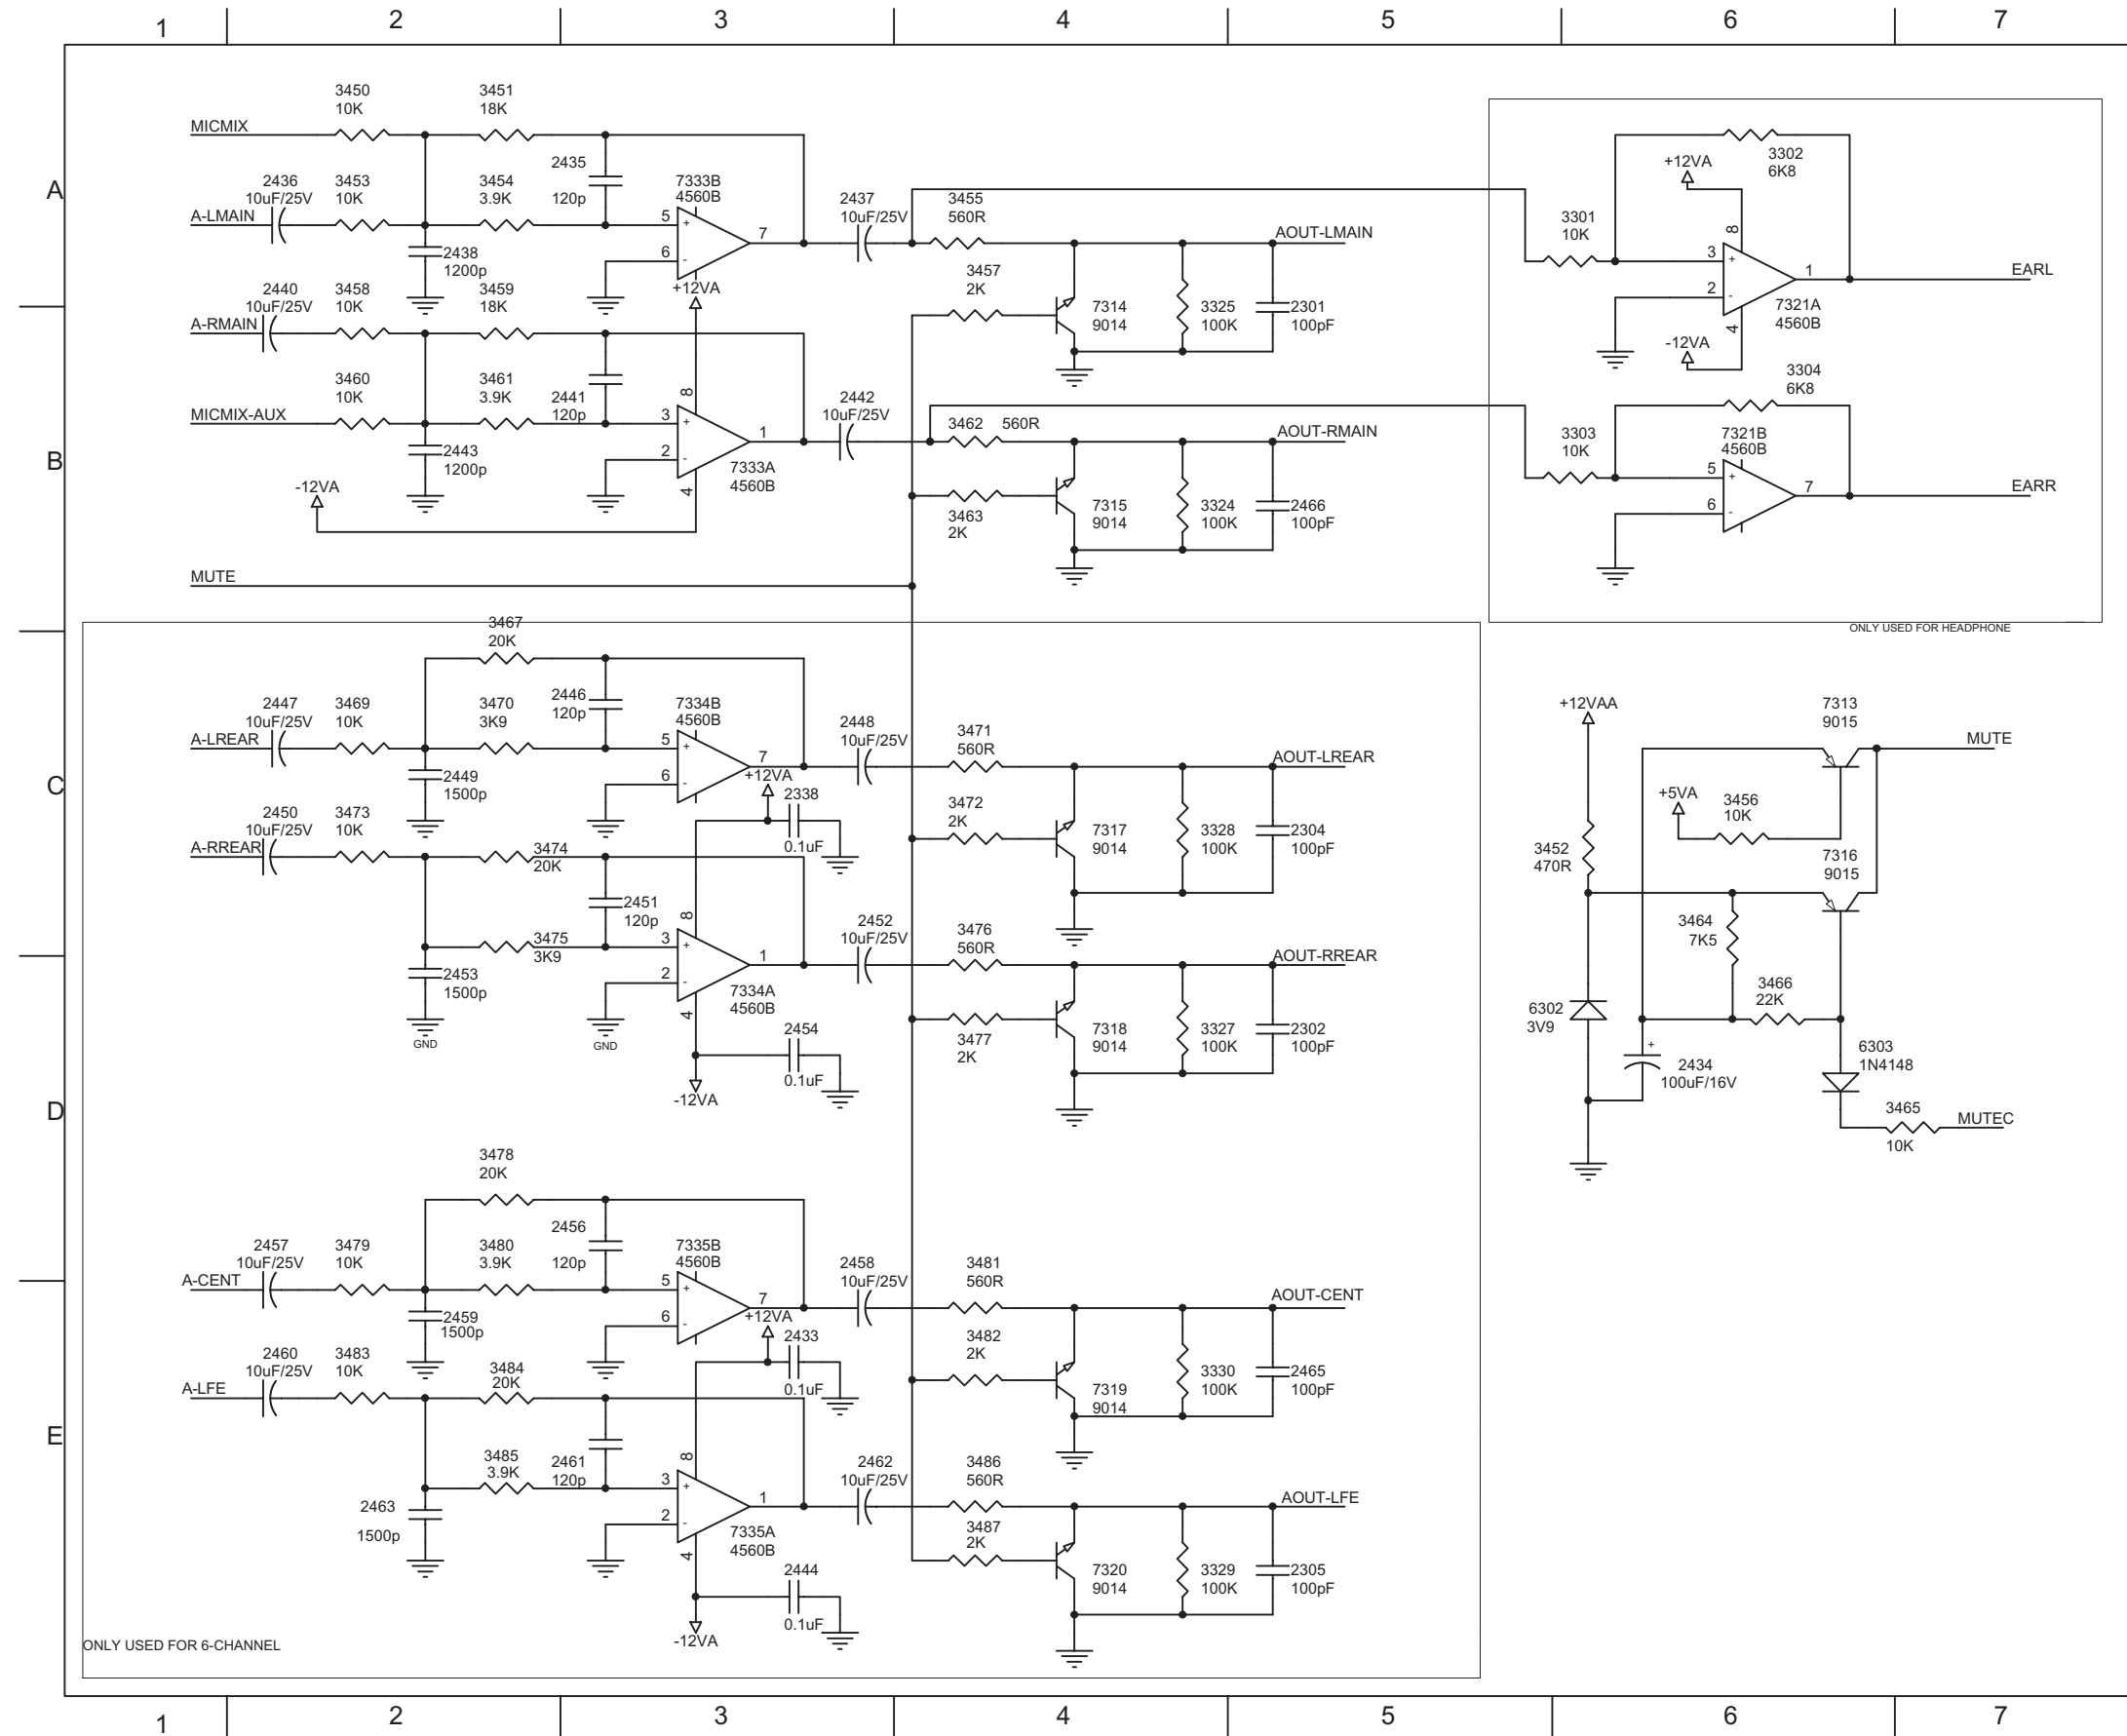

2301	B5	7321A	A6
2302	D5	7321B	B6
2304	C5	7333A	B3
2305	E5	7333B	A3
2338	C3	7334A	D4
2433	E3	7334B	C3
2434	D6	7335A	E3
2435	A3	7335B	E3
2436	A1		
2437	A3		
2438	A2		
2440	B2		
2441	B3		
2442	B3		
2443	B2		
2444	E3		
2446	C3		
2447	C2		
2448	C3		
2449	C2		
2450	C2		
2451	C3		
2452	D3		
2453	D2		
2454	D3		
2456	D2		
2457	E2		
2458	E3		
2459	E2		
2460	E2		
2461	E3		
2462	E3		
2463	E2		
2465	E5		
2466	B5		
3301	A6		
3302	A6		
3303	B6		
3304	B6		
3324	B4		
3325	B4		
3327	D4		
3328	C4		
3329	E4		
3330	E4		
3450	A2		
3451	A2		
3452	C6		
3453	A2		
3454	A2		
3455	A4		
3456	C6		
3457	B4		
3458	B2		
3459	B2		
3460	B2		
3461	B2		
3462	B4		
3463	B4		
3464	C6		
3465	D7		
3466	D6		
3467	C2		
3469	C2		
3470	C2		
3471	C4		
3472	C4		
3473	C2		
3474	C2		
3475	C2		
3476	D4		
3477	D4		
3478	D2		
3479	E2		
3480	E2		
3481	E4		
3482	E4		
3483	E2		
3484	E2		
3485	E2		
3486	E4		
3487	E4		
6302	D6		
6303	D6		
7313	C6		
7314	B4		
7315	B4		
7316	C6		
7317	C4		
7318	D4		
7319	E4		
7320	E4		

Layout MPEG board (component side) DVD730K/691/751/781


1301	C1	1320	C7	2310	D1	2326	B4	2345	A1	2363	D1	2381	D3	2400	A4	2421	D5	2437	B6	2453	B5	3301	A5	3316	A7	3334	A6	3362	D1	3377	B3	3409	A5	3438	C5	3458	B5
1302	C1	1321	B7	2311	A6	2327	D4	2346	A1	2364	D1	2382	B4	2401	B4	2422	D6	2438	B5	2454	B5	3302	A5	3317	A7	3335	A5	3363	D1	3381	A6	3410	A5	3440	D5	3459	B5
1303	A5	1322	D7	2312	A7	2328	C4	2347	A4	2365	B3	2385	C3	2403	B4	2423	C4	2440	B4	2455	A6	3303	A6	3318	D1	3336	A2	3364	D2	3382	D2	3411	A5	3441	C6	3460	B5
1304	C1	1323	A7	2313	A6	2331	D5	2348	B6	2366	B3	2386	D3	2404	B5	2424	D5	2441	B5	2456	C5	3304	A5	3319	B2	3339	A1	3365	D2	3383	C4	3412	C4	3443	D5	3461	B5
1305	A1	1324	A7	2314	A6	2332	A4	2349	A6	2367	B3	2388	B6	2405	C4	2425	D6	2442	B6	2457	C5	3305	A6	3320	B2	3340	A1	3366	D1	3387	B3	3413	C4	3444	D6	3462	B6
1306	A1	1325	D2	2315	A6	2333	A4	2350	A2	2368	B3	2389	B5	2406	B5	2426	D5	2443	B5	2458	C6	3306	C6	3324	B6	3346	A6	3367	D2	3388	C4	3414	A5	3448	D5	3463	B6
1307	B1	2301	B6	2316	A3	2336	A4	2351	B1	2369	B3	2390	B5	2411	C5	2427	D6	2444	C5	2459	C5	3307	C6	3325	B6	3348	A6	3368	D2	3389	C4	3416	A5	3449	D6	3464	B6
1308	A2	2302	B6	2317	A4	2337	B6	2354	D1	2370	B3	2391	C4	2412	C5	2428	D5	2445	A5	2460	B5	3308	C6	3326	C4	3349	A2	3369	D2	3390	B2	3417	A5	3450	B5	3465	B6
1309	A2	2303	B2	2318	B4	2338	B5	2355	D1	2371	B3	2392	B4	2413	C6	2429	C5	2446	B5	2461	C5	3309	C1	3327	B6	3350	A2	3370	D2	3391	B2	3418	B5	3451	B5	3466	B6
1310	A3	2304	B6	2319	D1	2339	A1	2356	C1	2373	C2	2393	C5	2414	C4	2431	D5	2447	B5	2462	B6	3310	C6	3328	B6	3351	C1	3371	D1	3393	B2	3420	B5	3452	B6	3467	B5
1311	A3	2305	C6	2320	A1	2340	A1	2357	D1	2375	D3	2394	B5	2415	D4	2432	D5	2448	B6	2463	C5	3311	A6	3329	C6	3352	C1	3372	D1	3400	C3	3422	B5	3453	B5	3469	B5
1312	A4	2306	D1	2321	A1	2341	A1	2358	C1	2376	C3	2395	A5	2416	C5	2433	C5	2449	B5	2464	A5	3312	B1	3330	C6	3353	C1	3373	D1	3401	C4	3429	C5	3454	B5	3470	B5
1313	D2	2307	D1	2322	B4	2342	A1	2359	B1	2378	D2	2396	A4	2418	C5	2434	B6	2450	B5	2465	C6	3313	B1	3331	B2	3354	D2	3374	D1	3402	C3	3431	C5	3455	B6	3471	B6
1314	D4	2308	D1	2324	A4	2343	A1	2361	B1	2379	D2	2397	C4	2419	C5	2435	B5	2451	B5	2466	B6	3314	A6	3332	D3	3355	B1	3375	D1	3403	A5	3433	C4	3456	B6	3472	B6
1315	D2	2309	D1	2325	B4	2344	A1	2362	B2	2380	D3	2398	B4	2420	D5	2436	B5	2452	B6	2467	D4	3315	A6	3333	A6	3360	D2	3376	D1	3404	A5	3434	D5	3457	B6	3473	B5

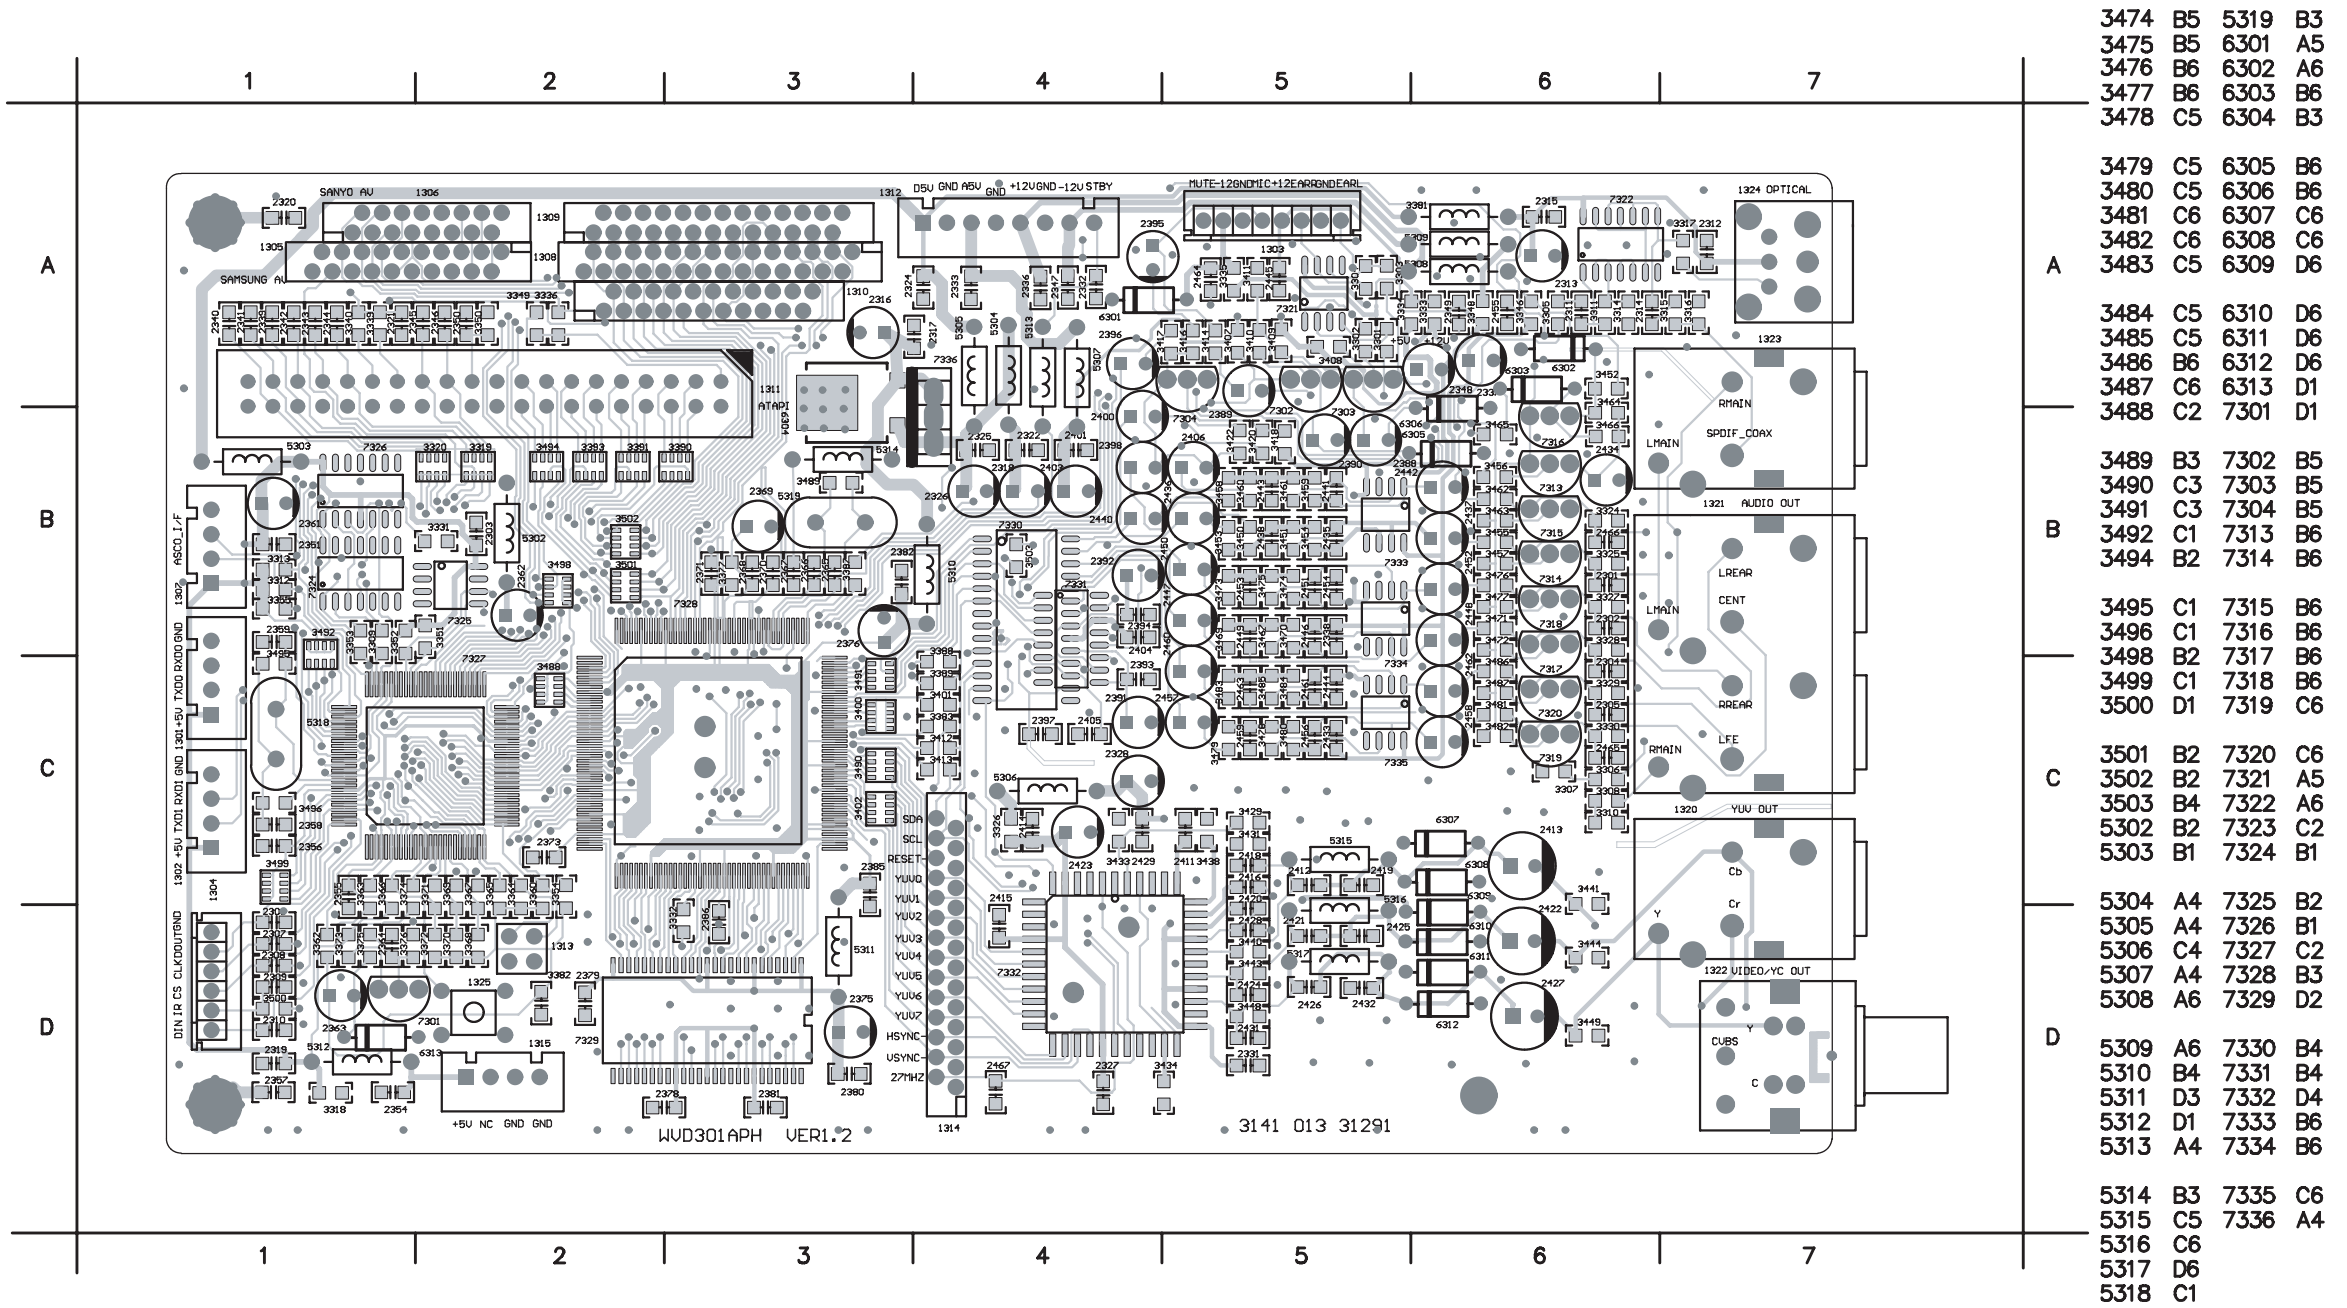

3474	B5	5319	B3
3475	B5	6301	A5
3476	B6	6302	A6
3477	B6	6303	B6
3478	C5	6304	B3
3479	C5	6305	B6
3480	C5	6306	B6
3481	C6	6307	C6
3482	C6	6308	C6
3483	C5	6309	D6
3484	C5	6310	D6
3485	C5	6311	D6
3486	B6	6312	D6
3487	C6	6313	D1
3488	C2	7301	D1
3489	B3	7302	B5
3490	C3	7303	B5
3491	C3	7304	B5
3492	C1	7313	B6
3494	B2	7314	B6
3495	C1	7315	B6
3496	C1	7316	B6
3498	B2	7317	B6
3499	C1	7318	B6
3500	D1	7319	C6
3501	B2	7320	C6
3502	B2	7321	A5
3503	B4	7322	A6
5302	B2	7323	C2
5303	B1	7324	B1
5304	A4	7325	B2
5305	A4	7326	B1
5306	C4	7327	C2
5307	A4	7328	B3
5308	A6	7329	D2
5309	A6	7330	B4
5310	B4	7331	B4
5311	D3	7332	D4
5312	D1	7333	B6
5313	A4	7334	B6
5314	B3	7335	C6
5315	C5	7336	A4
5316	C6		
5317	D6		
5318	C1		


Front board DVD730K/691/751/781

1400	A5	1411	D2	1417	D1	2403	C2	2416	D5	3405	B1	3411	D2	3430	B1	6403	B5	7401	C1	9443	C1
1401	D8	1412	D2	1418	C8	2404	B5	3400	A3	3406	C1	3412	C5	3431	B1	6404	C6	7402	B6	9444	B6
1403	B1	1413	D2	1421	D6	2405	B6	3401	A2	3407	C2	3413	B6	3432	B1	6413	B7	7406	B7	9445	B6
1404	A2	1414	D2	2400	A2	2406	D7	3402	B2	3408	D1	3414	D7	6400	D2	6414	C7	9440	C1	9446	B7
1405	B8	1415	D2	2401	B1	2407	C5	3403	B2	3409	D1	3423	B7	6401	D2	6420	B3	9441	C1	9447	B7
1406	C8	1416	D2	2402	C1	2415	B7	3404	B2	3410	D2	3424	D6	6402	B5	7400	B4	9442	C1		

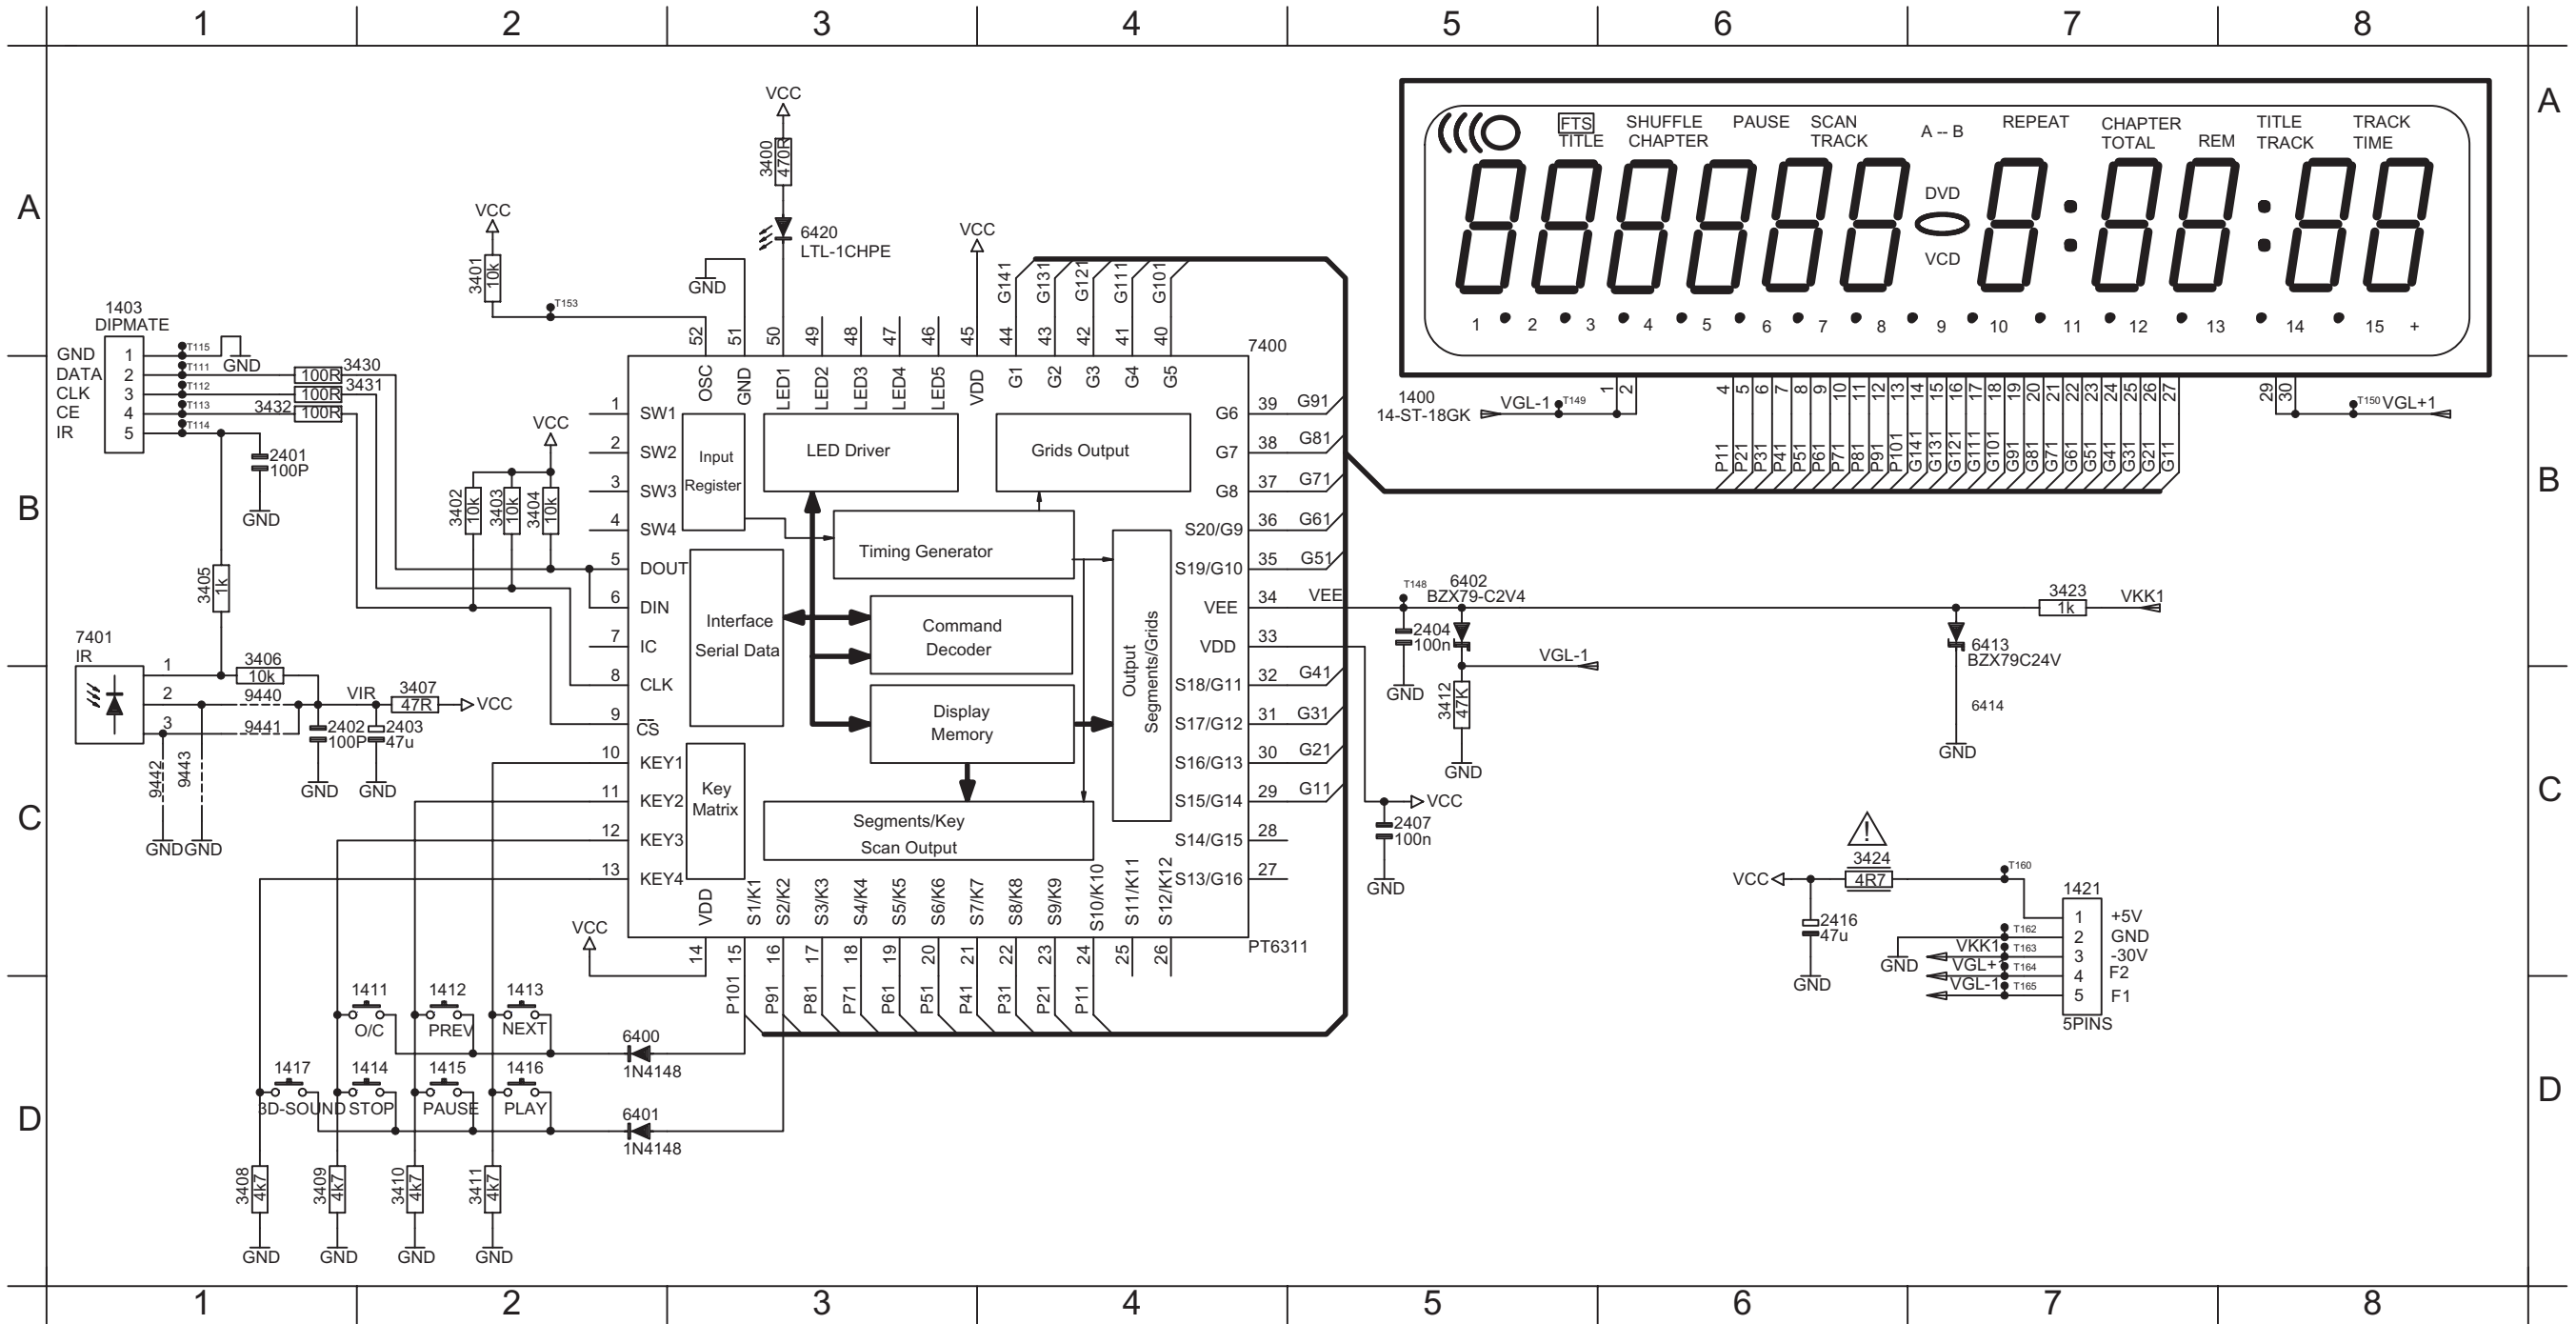


Layout Front board DVD730K/691/751/781 (component side)

1400 A3 1413 B8 1417 A6 2402 A1 2416 A1 3403 A5 3407 A1 3411 A8 3430 A6 6401 A3 6420 A2 9402 A2 9406 A3 9410 A3 9414 A4 9418 A4 9422 A4 9426 A6 9430 B6 9443 A2
 1403 A6 1414 B8 1421 B1 2403 A1 3400 B2 3404 A5 3408 A6 3412 A5 3431 A6 6402 A5 7400 A3 9403 A3 9407 A3 9411 A3 9415 A4 9419 A4 9423 A4 9427 A6 9440 A1
 1411 B6 1415 B7 2400 B3 2404 A4 3401 B4 3405 A2 3409 B6 3423 A2 3432 A6 6413 A2 7401 A2 9404 A3 9408 A3 9412 A3 9416 A4 9420 A4 9424 A5 9428 A6 9441 A1
 1412 B7 1416 A7 2401 A6 2407 A4 3402 A5 3406 A2 3410 D7 3424 A1 6400 A3 6414 B2 9401 B1 9405 A3 9409 A3 9413 A4 9417 A4 9421 A4 9425 A6 9429 A6 9442 A2

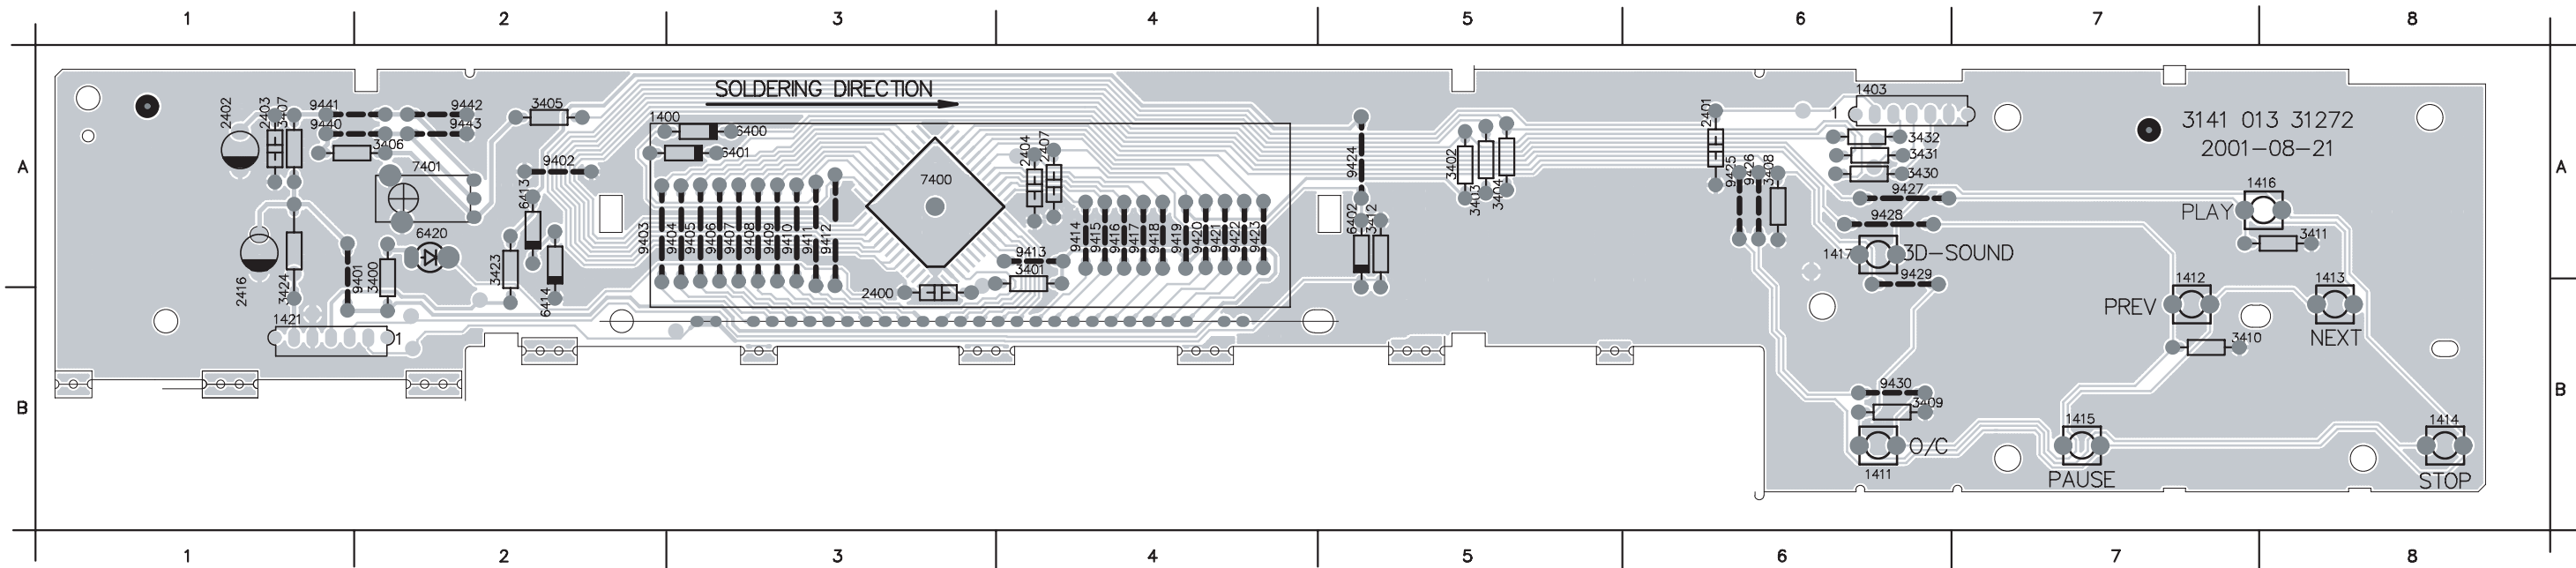

MIC board DVD730K/691/751/781

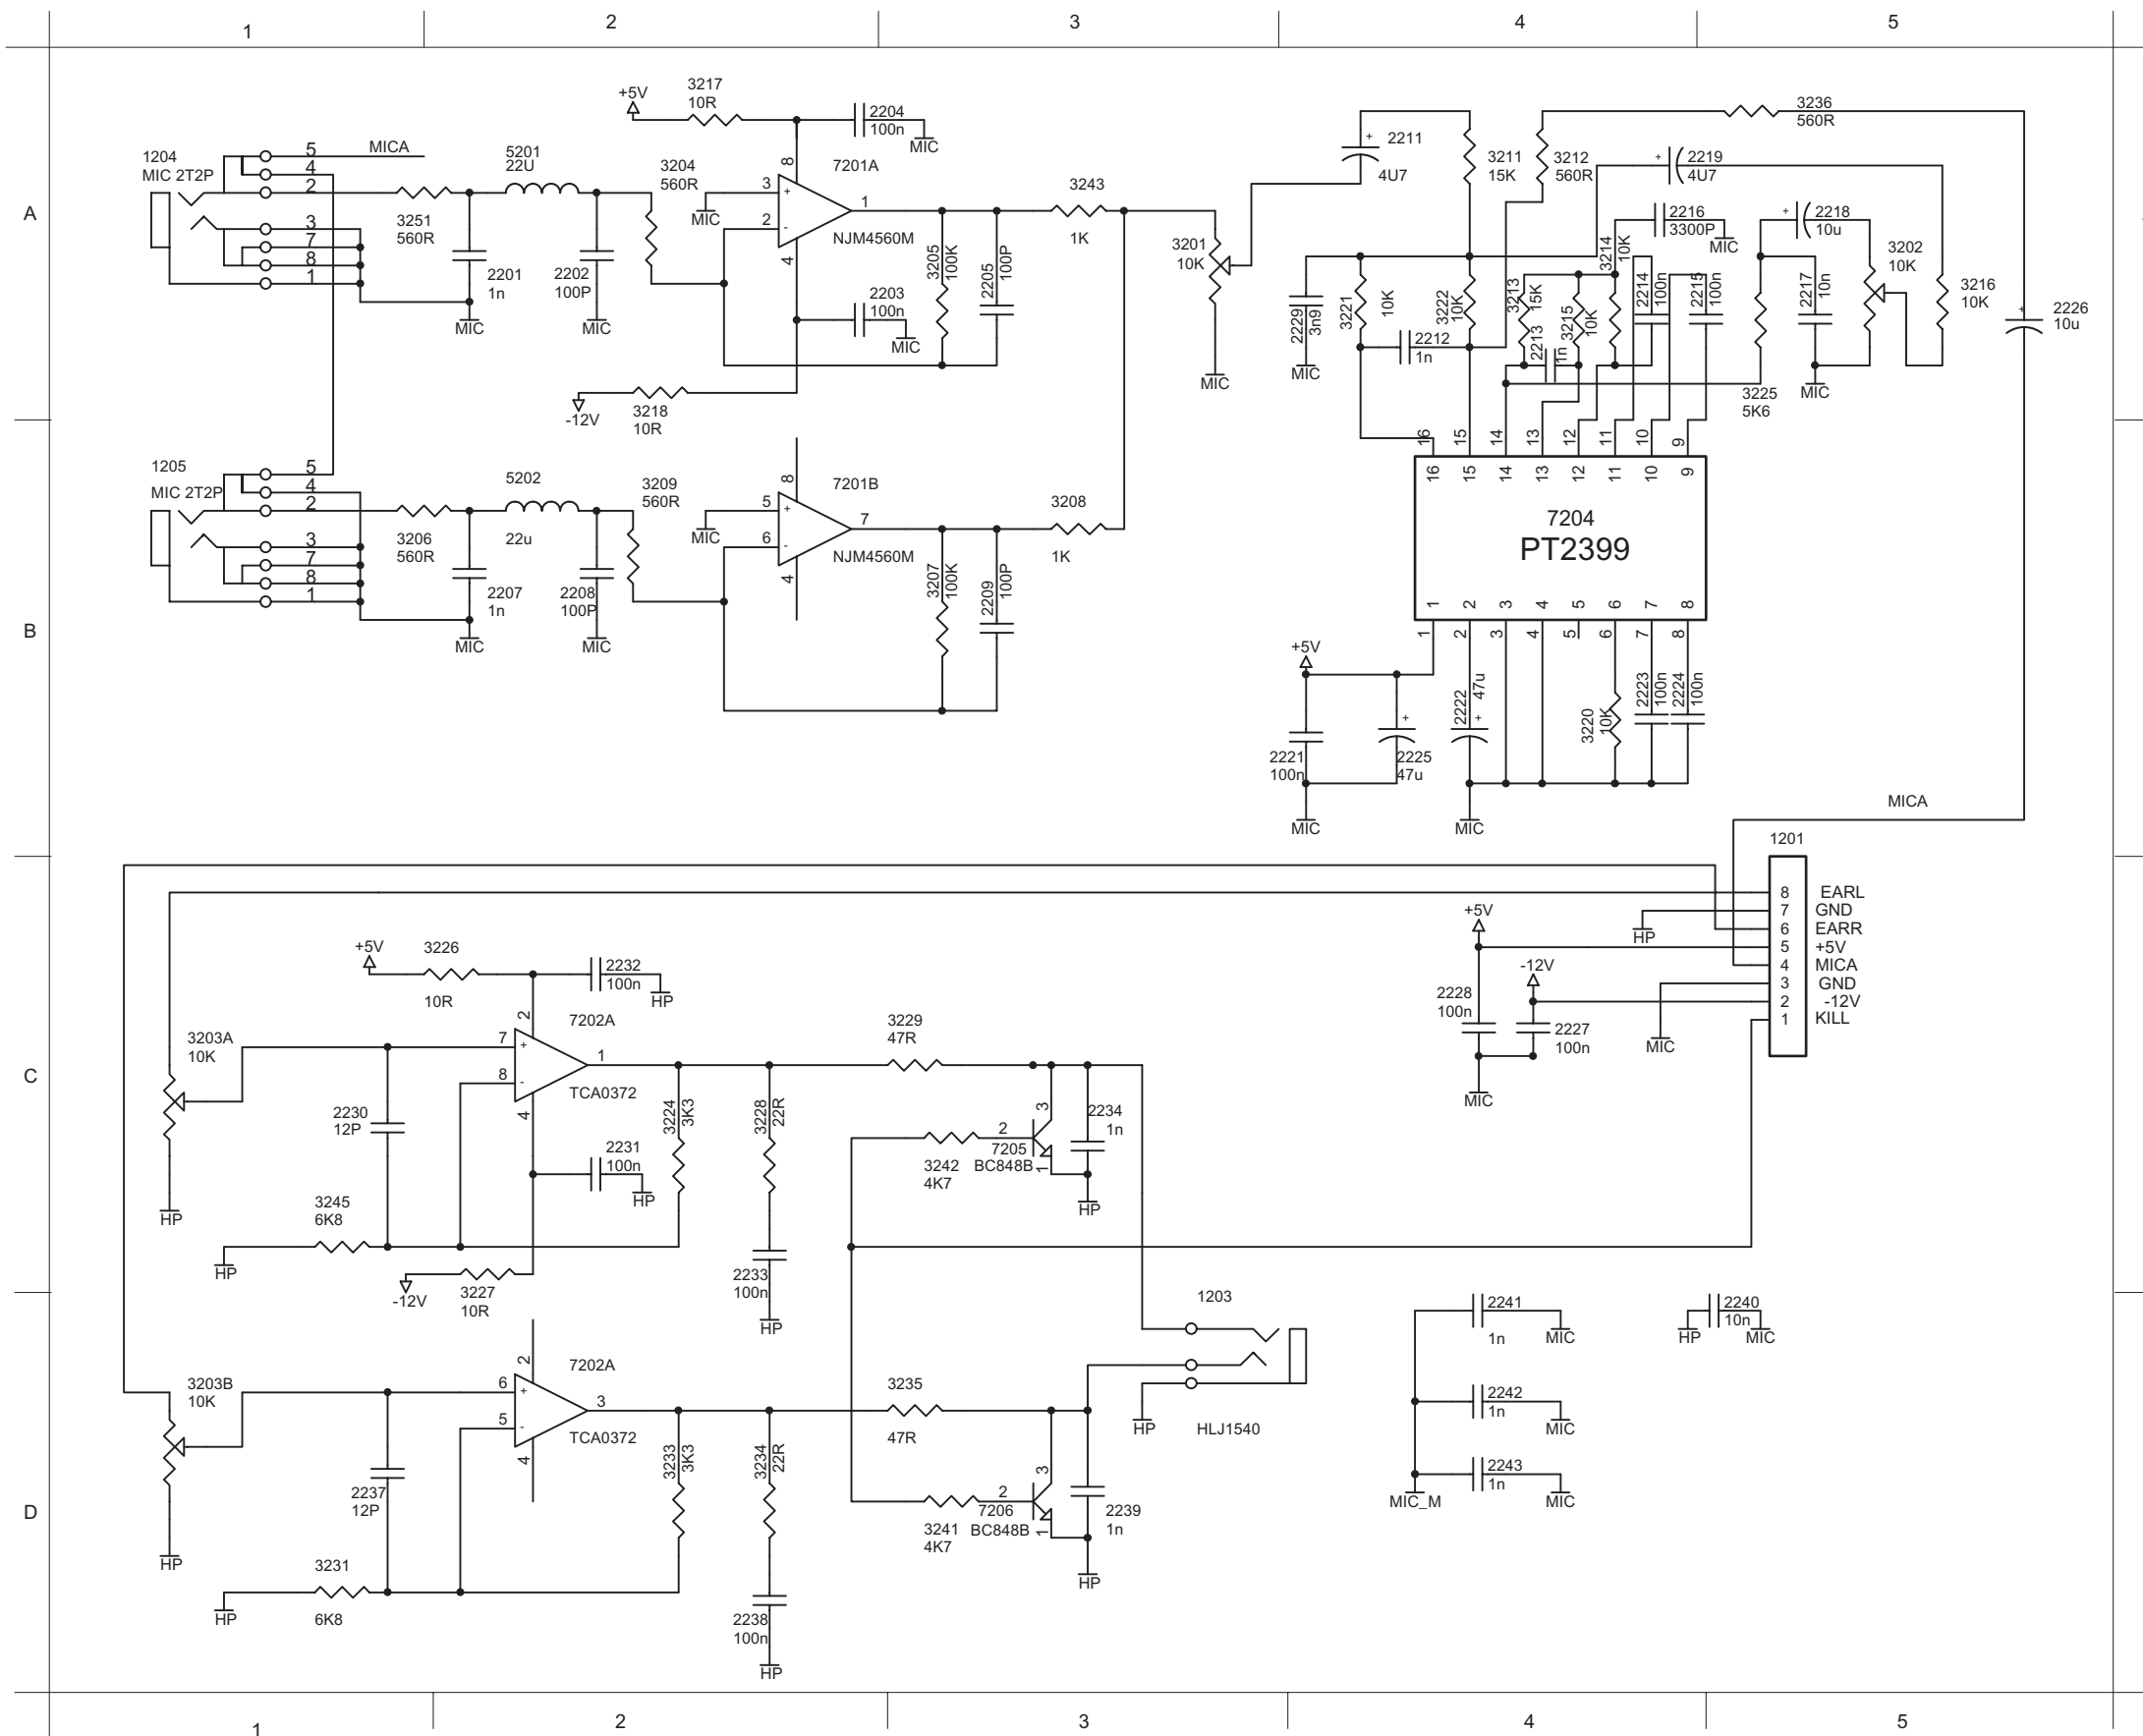

- 1201 C5
- 1203 D3
- 1204 A1
- 1205 B1
- 2201 A2
- 2202 A2
- 2203 A2
- 2204 A2
- 2205 A3
- 2207 B2
- 2208 B2
- 2209 B3
- 2211 A4
- 2212 A4
- 2213 A4
- 2214 A4
- 2215 A5
- 2216 A4
- 2217 A5
- 2218 A5
- 2219 A4
- 2221 B4
- 2222 B4
- 2223 B4
- 2224 B4
- 2225 B4
- 2226 A5
- 2227 C4
- 2228 C4
- 2229 A4
- 2230 C1
- 2231 C2
- 2232 C2
- 2233 C2
- 2234 C3
- 2237 D1
- 2238 D2
- 2239 D3
- 2240 D5
- 2241 D4
- 2242 D4
- 2243 D4
- 3201 A3
- 3202 A5
- 3203 D1
- 3204 A2
- 3205 A3
- 3206 B1
- 3207 B3
- 3208 B3
- 3209 B2
- 3211 A4
- 3212 A4
- 3213 A4
- 3214 A4
- 3215 A4
- 3216 A5
- 3217 A2
- 3218 A2
- 3220 B4
- 3221 A4
- 3222 A4
- 3224 C2
- 3225 A5
- 3226 C2
- 3227 C2
- 3228 C2
- 3229 C3
- 3231 D1
- 3233 D2
- 3234 D2
- 3235 D3
- 3236 A5
- 3241 D3
- 3242 C3
- 3243 A3
- 3245 C1
- 3251 A1
- 5201 A2
- 5202 B2
- 7201 B2
- 7202 D2
- 7204 B4
- 7205 C3
- 7206 D3

8. Spare parts list DVD730K/691

Mechanical

200	3141 017 75470	CAB FRONT DVD730K PNT PRT
204	3141 017 73990	WINDOW DVD728K PNT PRT
205	3141 017 75060	BUTTON POWER DVD729K PNT
208	3141 017 75070	VOLUME KNOB DVD729K PNT
219	3141 017 75410	DOOR DVD729K PNT PRT
240	3141 017 75110	BUTTON CONTROL DVD729K PNT PRT
242	3141 017 75120	RING DVD729K PNT PRT
244	3139 244 00410	FOOT DVD711
245	3139 247 50750	FOOT ASSY DVD711
249	3139 243 10010	CUSHION
384	3141 017 90120	REMOTE CONTROL
1001	3141 018 02490	PBAS PSU DVD729K/031
1002	3141 018 02430	PBAS MPEG DVD730K/691
1003	3141 018 02280	PBAS DVD729K MIC
1004	3141 018 02510	PBAS FRONT DVD0707/781
1005	3141 018 02190	DVD729K LOADER MODULE
△ 5001	2422 070 98133	MAINSCORD EUR 1M5 BK B
8002	3141 010 20900	CWAS 40RK/40RK 230 28S LOADER- MPEG
8003	3141 010 20910	CWAS 08XH/08XH 500 26S PSU-MPEG
8004	3141 010 20880	CWAS 08EH/08PH 460 26S MIC-MPEG
8006	3141 010 20850	CWAS 04XH/04LC 260 22S PSU-LOADER
△ 8008	3141 010 21000	SWI ASSY 1X2 M7.92 260 18S

POWER SUPPLY BOARD 3141 018 02490

MISCELLANEOUS

△ 1001	4822 265 31015	CONNECTOR
△ 1002	8241 010 03090	FUSE T1.25A 250V
△ 1004	3141 010 30330	CON BM B 2P M 7.92 B
1005	2422 025 09013	CON BM V 5P M 2.50 XH A B
1006	2422 025 09074	CONNECTOR 8P TOP
1007	2422 025 09904	CON BM V 4P M 2.50 XH B

CAPACITORS

2001	3141 018 80530	CAP MPP 275V S 100N PM10 B
△ 2002	3141 018 80520	CAP MPP 275V S 220N PM10 B
△ 2003	3141 018 80370	CERSAF NSA 400V S 470P PM10 B
△ 2004	3141 018 80370	CERSAF NSA 400V S 470P PM10 B
2005	3141 018 80450	ELCAP CD294 400V 68U PM20 B
△ 2006	3141 018 80380	CERSAF NSA 400V S 1N PM20 B
△ 2007	3141 018 80380	CERSAF NSA 400V S 1N PM20 B
2008	3141 018 80550	CER2 DC 1KV S 10N PM20 B
2009	3141 018 80560	CER2 DC 1KV S 220P PM10 B

2010	4822 126 13499	220PF 5% NP0 50V
2011	4822 124 23057	"4,7UF 20% 50V"
2012	4822 121 51304	10NF 10% 50V
2013	4822 124 81151	22UF 50V
2014	4822 124 21913	1UF20% 63V
2015	5322 122 32311	470PF 10% 100V
2016	5322 122 32052	680PF 10% 100V
2017	4822 124 21913	1UF20% 63V
2018	4822 126 14217	100NF 20% Y5V 0805 50V
2019	3141 018 80570	CER2 DC 1KV S 1N P8020 B
2020	3141 018 80470	ELCAP WLR 10V 1000U PM20
2021	4822 124 80195	470UF20% 10V
2022	3141 018 80560	CER2 DC 1KV S 220P PM10 B
2023	3141 018 80490	ELCAP 16V 470U PM20
2024	4822 124 80791	"470UF 16V 20% 105C DXH=8X11,5"
2025	3141 018 80560	CER2 DC 1KV S 220P PM10 B
2026	3141 018 80500	ELCAP 16V 220U PM20
2027	4822 124 80791	"470UF 16V 20% 105C DXH=8X11,5"
2028	3141 018 80560	CER2 DC 1KV S 220P PM10 B
2029	3141 018 80510	ELCAP 50V 100U PM20
2030	3141 018 80560	CER2 DC 1KV S 220P PM10 B
2031	3141 018 80480	ELCAP CD263 10V 470U PM20

RESISTORS

△ 3001	3141 018 80440	VDR DC 10K 470V
△ 3002	3141 018 80430	NTC THERMISTOR 3A 8R PM10 B
3003	3141 018 80390	RST MLFM 1W S 300K PM5
3004	3141 018 80400	RST MLFM 1W S 51K PM5
3005	4822 116 52307	"91K 5% 0,5W"
3006	3141 018 80540	RST CRB CR25 A 96K PM5 A
3007	4822 050 21004	"100K00 1% 0,6W"
3008	4822 050 21004	"100K00 1% 0,6W"
3009	4822 050 27502	"7K50 1% 0,6W"
3010	4822 116 52176	"10E 5% 0,5W"
3011	4822 050 21002	"1K00 1% 0,6W"
3012	4822 050 21004	"100K00 1% 0,6W"
3013	4822 050 21301	"130R00 1% 0,6W"
3014	4822 050 21509	"15R00 1% 0,6W"
3015	4822 050 22402	"2K40 1% 0,6W"
3016	3141 018 80410	RST MLFM 1W A 0R75 PM5
3017	4822 050 25101	"510R00 1% 0,6W"
3018	4822 050 21202	"1K20 1% 0,6W"
3019	4822 050 21003	"10K00 1% 0,6W"
3020	4822 053 10102	1K00 5% 1W
3021	4822 050 21002	"1K00 1% 0,6W"
3022	4822 050 21002	"1K00 1% 0,6W"
3023	4822 050 21802	"1K80 1% 0,6W"
3025	4822 050 25101	"510R00 1% 0,6W"
3026	4822 050 27502	"7K50 1% 0,6W"
3027	4822 050 23002	"3K00 1% 0,6W"
3028	4822 050 25603	"56K00 1% 0,6W"

3029	2120 105 93387	RST MOX 1W ERG1F S 10R PM5 B
3030	4822 116 82958	100R 5% 1W
3031	4822 053 10181	180R00 5% 1W
3032	3141 018 80420	RST MLFM 1W A 510R PM5
3033	2341 211 13123	RST CRB CR25 A 12K PM5 A
3035	4822 050 21002	"1K00 1% 0,6W"
3036	4822 050 21002	"1K00 1% 0,6W"
3037	2322 211 73308	RST CRB CR25 A 3R PM5 A
3038	2122 101 02083	RST CRB CFR25S A 1R5 PM5 A
3039	4822 050 22008	"2R00 1% 0,6W"
3040	4822 053 10682	6K80 5% 1W

COILS & QUARTZ

△ 5001	3141 018 20470	CHOKO COIL 300UH 7TS X 0.4 PM17
△ 5002	3141 018 20460	CHOKO COIL 31MH 160TS X 0.2 PM10
△ 5003	3141 018 31200	TFM POW EF TFS-3001
5004	3141 018 20480	IND FXD Ø8 X 0.5 12UH PM5
5005	3141 018 20480	IND FXD Ø8 X 0.5 12UH PM5
5006	3141 018 20490	IND FXD Ø5 X 0.35 12UH PM5

DIODES

6001	5322 130 34574	1N4004G
6002	5322 130 34574	1N4004G
6003	5322 130 34574	1N4004G
6004	5322 130 34574	1N4004G
6005	3141 018 51160	DIO REC HER108
6006	4822 130 34379	BZX79-B27
6007	4822 130 34398	BZX79-B24
6008	4822 130 30621	1N4148
6009	4822 130 30621	1N4148
6010	3141 018 51230	DIO REC FR104
6011	4822 130 34499	BZX79-B20
6012	3141 018 51240	DIO REC SR560
6013	9965 000 09322	RECTIFIER DIODE FR302
6014	3141 018 51160	DIO REC HER108
6015	4822 130 30862	BZX79-B9V1
6016	3141 018 51230	DIO REC FR104
6017	3141 018 51230	DIO REC FR104

TRANSISTORS & INTEGRATED CIRCUITS

7001	3141 018 51170	TRA SIG S9012
7002	3141 018 51170	TRA SIG S9012
7003	3141 018 50960	TRA SIG C9013 T
7004	3141 018 51200	FET SIG IRFBC40A
7005	3141 018 51170	TRA SIG S9012
7006	3141 018 51180	TRA SIG H1015
7007	3141 018 50960	TRA SIG C9013 T
△ 7008	3141 018 51260	OPT CP Q817B
7009	3141 018 51190	TRA SIG WL431

Spare parts list DVD730K/691

MPEG BOARD

3141 018 02430

MISCELLANEOUS

1303	4822 265 11352	CONN. 8P
1304	4822 267 40624	5-FOLD X
1307	2422 025 09904	CON BM V 4P M 2.50 XH B
1311	2422 025 16501	CON BM V 40P M 2.54 103308B
1312	4822 267 10574	CON BM V 8P 2.50
1313	3141 010 30070	MICRO-SHUNT V 2P M 2.54
1320	3141 010 30300	CON BM CINCH V 3P F GNBURD
1322	3141 010 30250	CON S-VEDIO AND CVBS
1323	3141 010 30310	CON BM CINCH V 3P F WHRDBK B
1324	3141 010 30080	RCA-108
1325	4822 276 13114	SWITCH, PUSH BUTTON

CAPACITORS

2301	5322 122 32531	100PF 5%NP0 50V
2303	4822 126 14585	100NF 10% X7R 0805 50V
2306	5322 122 32531	100PF 5%NP0 50V
2307	5322 122 32531	100PF 5%NP0 50V
2308	5322 122 32531	100PF 5%NP0 50V
2309	5322 122 32531	100PF 5%NP0 50V
2310	5322 122 32531	100PF 5%NP0 50V
2311	4822 126 14585	100NF 10% X7R 0805 50V
2312	4822 126 14585	100NF 10% X7R 0805 50V
2313	2020 012 93504	ELCAP KA 16V S 100U PM20 A
2314	4822 126 14585	100NF 10% X7R 0805 50V
2315	4822 126 14585	100NF 10% X7R 0805 50V
2316	4822 124 23624	47UF20% 16V
2317	4822 126 14585	100NF 10% X7R 0805 50V
2318	4822 124 23624	47UF20% 16V
2319	4822 126 14585	100NF 10% X7R 0805 50V
2320	4822 126 14585	100NF 10% X7R 0805 50V
2322	4822 126 14585	100NF 10% X7R 0805 50V
2324	4822 126 14585	100NF 10% X7R 0805 50V
2325	4822 126 14585	100NF 10% X7R 0805 50V
2326	4822 124 23624	47UF20% 16V
2327	4822 126 14585	100NF 10% X7R 0805 50V
2328	4822 124 23624	47UF20% 16V

2331	4822 126 14585	100NF 10% X7R 0805 50V
2333	4822 126 14585	100NF 10% X7R 0805 50V
2336	4822 126 14585	100NF 10% X7R 0805 50V
2337	4822 124 40207	100UF20% 25V
2339	5322 122 32531	100PF 5%NP0 50V
2340	5322 122 32531	100PF 5%NP0 50V
2341	5322 122 32531	100PF 5%NP0 50V
2342	5322 122 32531	100PF 5%NP0 50V
2343	5322 122 32531	100PF 5%NP0 50V
2344	5322 122 32531	100PF 5%NP0 50V
2345	5322 122 32531	100PF 5%NP0 50V
2346	5322 122 32531	100PF 5%NP0 50V
2347	4822 126 14585	100NF 10% X7R 0805 50V
2348	4822 124 40207	100UF20% 25V
2349	4822 126 14585	100NF 10% X7R 0805 50V
2350	4822 126 13486	15PF 2% NP0 63V
2351	4822 126 14585	100NF 10% X7R 0805 50V
2355	4822 126 14585	100NF 10% X7R 0805 50V
2356	4822 126 14585	100NF 10% X7R 0805 50V
2357	4822 126 14585	100NF 10% X7R 0805 50V
2358	5322 122 32658	22PF 5% 50V
2359	5322 122 32658	22PF 5% 50V
2361	2020 012 93504	ELCAP KA 16V S 100U PM20 A
2362	4822 124 23624	47UF20% 16V
2363	2020 012 93505	ELCAP KA 25V S 10U PM20 A
2364	4822 126 13473	220NF80-20% 50V
2365	5322 122 32658	22PF 5% 50V
2366	4822 126 14585	100NF 10% X7R 0805 50V
2367	5322 122 32659	33PF 5% 50V
2368	4822 126 14585	100NF 10% X7R 0805 50V
2369	4822 124 81136	100U 25V
2370	2222 580 19809	CER2 0805 Y5V 50V 47N COL R
2371	4822 126 14585	100NF 10% X7R 0805 50V
2373	4822 126 14585	100NF 10% X7R 0805 50V
2375	4822 124 23624	47UF20% 16V
2376	4822 124 23624	47UF20% 16V
2378	4822 126 14585	100NF 10% X7R 0805 50V
2379	4822 126 14585	100NF 10% X7R 0805 50V
2380	4822 126 14585	100NF 10% X7R 0805 50V
2381	4822 126 14585	100NF 10% X7R 0805 50V
2382	4822 126 14585	100NF 10% X7R 0805 50V
2385	4822 126 14585	100NF 10% X7R 0805 50V
2386	4822 126 14585	100NF 10% X7R 0805 50V
2388	4822 124 11947	10UF 20% 16V
2389	4822 124 11947	10UF 20% 16V

2390	4822 124 11946	22UF 20% 16V
2391	4822 124 40433	47UF20% 25V
2392	4822 124 40433	47UF20% 25V
2393	4822 126 14585	100NF 10% X7R 0805 50V
2394	4822 126 14585	100NF 10% X7R 0805 50V
2395	4822 124 81108	0,47UF20% 50V
2398	4822 124 81108	0,47UF20% 50V
2401	4822 126 14585	100NF 10% X7R 0805 50V
2403	4822 124 81286	47UF20% 16V
2404	4822 126 14585	100NF 10% X7R 0805 50V
2406	4822 124 81108	0,47UF20% 50V
2411	4822 126 14585	100NF 10% X7R 0805 50V
2412	5322 122 32658	22PF 5% 50V
2413	4822 124 40196	220UF20% 16V
2414	4822 126 14585	100NF 10% X7R 0805 50V
2415	4822 126 14585	100NF 10% X7R 0805 50V
2416	4822 126 14585	100NF 10% X7R 0805 50V
2418	2222 586 15713	CER2 0805 X7R 50V 180P PM20 R
2419	2222 586 15713	CER2 0805 X7R 50V 180P PM20 R
2420	4822 126 14585	100NF 10% X7R 0805 50V
2421	5322 122 32658	22PF 5% 50V
2422	4822 124 40196	220UF20% 16V
2423	4822 124 23624	47UF20% 16V
2424	2222 586 15713	CER2 0805 X7R 50V 180P PM20 R
2425	2222 586 15713	CER2 0805 X7R 50V 180P PM20 R
2426	5322 122 32658	22PF 5% 50V
2427	4822 124 40196	220UF20% 16V
2428	4822 126 14585	100NF 10% X7R 0805 50V
2429	4822 126 14585	100NF 10% X7R 0805 50V
2431	2222 586 15713	CER2 0805 X7R 50V 180P PM20 R
2432	2222 586 15713	CER2 0805 X7R 50V 180P PM20 R
2434	2020 012 93504	ELCAP KA 16V S 100U PM20 A
2435	5322 122 33861	120PF10% 50V
2436	2020 012 93505	ELCAP KA 25V S 10U PM20 A
2437	2020 012 93505	ELCAP KA 25V S 10U PM20 A
2438	4822 122 32614	CER2 0805 X7R 63V 1N2 PM10 R
2440	2020 012 93505	ELCAP KA 25V S 10U PM20 A
2441	5322 122 33861	120PF10% 50V
2442	2020 012 93505	ELCAP KA 25V S 10U PM20 A
2443	4822 122 32614	CER2 0805 X7R 63V 1N2 PM10 R
2445	4822 126 14585	100NF 10% X7R 0805 50V
2455	4822 126 14585	100NF 10% X7R 0805 50V
2464	4822 126 14585	100NF 10% X7R 0805 50V
2466	5322 122 32531	100PF 5%NP0 50V
2467	5322 122 32658	22PF 5% 50V

Spare parts list DVD730K/691

RESISTORS

3301	4822 117 10833	10K	1%	0,1W
3302	4822 117 11507	6K8	1%	0,1W
3303	4822 117 10833	10K	1%	0,1W
3304	4822 117 11507	6K8	1%	0,1W
3305	4822 051 20339	33R00	5%	0,1W
3309	4822 051 20008	0R00 JUMP. (0805)		
3311	4822 051 20474	470K00	5%	0,1W
3312	4822 117 10833	10K	1%	0,1W
3313	4822 117 10833	10K	1%	0,1W
3314	4822 051 20102	1K00	5%	0,1W
3315	4822 117 13577	330R 1% RC12H 0805 1,25W		
3316	4822 051 20919	91R00	5%	0,1W
3317	4822 117 12521	68R	1%	0,1W
3318	4822 051 20102	1K00	5%	0,1W
3319	2120 108 94042	RST NETW SM RAC16 4X22R PM5 R		
3320	2120 108 94042	RST NETW SM RAC16 4X22R PM5 R		
3324	4822 117 10837	100K	1%	0,1W
3325	4822 117 10837	100K	1%	0,1W
3326	4822 051 20478	4R70	5%	0,1W
3331	4822 117 10833	10K	1%	0,1W
3332	4822 051 20339	33R00	5%	0,1W
3334	4822 051 20008	0R00 JUMP. (0805)		
3335	4822 051 20008	0R00 JUMP. (0805)		
3336	4822 051 20339	33R00	5%	0,1W
3339	4822 051 20102	1K00	5%	0,1W
3340	4822 051 20102	1K00	5%	0,1W
3346	4822 051 20109	10R00	5%	0,1W
3348	4822 051 20109	10R00	5%	0,1W
3349	4822 117 10833	10K	1%	0,1W
3350	4822 051 20562	5K6 5% 0,1W 0805		
3351	4822 051 20472	4K70	5%	0,1W
3352	4822 051 20472	4K70	5%	0,1W
3354	4822 117 10833	10K	1%	0,1W
3360	4822 051 20472	4K70	5%	0,1W
3362	4822 051 20472	4K70	5%	0,1W
3363	4822 051 20102	1K00	5%	0,1W
3364	4822 051 20472	4K70	5%	0,1W
3365	4822 051 20472	4K70	5%	0,1W
3366	4822 051 20472	4K70	5%	0,1W
3367	4822 051 20008	0R00 JUMP. (0805)		
3370	4822 051 20008	0R00 JUMP. (0805)		
3372	4822 051 20008	0R00 JUMP. (0805)		
3373	4822 117 13577	330R 1% RC12H 0805 1,25W		
3374	4822 051 20101	100R00	5%	0,1W

3375	4822 117 10833	10K	1%	0,1W
3376	4822 117 10833	10K	1%	0,1W
3377	4822 051 20109	10R00	5%	0,1W
3381	4822 116 52188	27E	5%	0,5W
3382	4822 051 20102	1K00	5%	0,1W
3383	4822 051 20339	33R00	5%	0,1W
3387	4822 051 20101	100R00	5%	0,1W
3388	4822 051 20101	100R00	5%	0,1W
3389	4822 117 11448	180R	1%	0,1W
3390	2120 108 94042	RST NETW SM RAC16 4X22R PM5 R		
3391	2120 108 94042	RST NETW SM RAC16 4X22R PM5 R		
3393	2120 108 94042	RST NETW SM RAC16 4X22R PM5 R		
3400	2120 108 94049	RST NETW SM RAC16 4X4K7 PM5 R		
3401	4822 051 20472	4K70	5%	0,1W
3402	2120 108 94025	RST NETW SM RAC16 4X100R PM5 R		
3407	4822 051 20472	4K70	5%	0,1W
3408	4822 051 20105	1M00	5%	0,1W
3409	4822 051 20202	2K00	5%	0,1W
3410	4822 051 20202	2K00	5%	0,1W
3411	4822 117 11449	2K2 5% 0,1W 0805		
3412	4822 117 11503	220R	1%	0,1W
3413	4822 117 11503	220R	1%	0,1W
3414	4822 116 83933	15K	1%	0,1W
3416	4822 117 10353	150R	1%	0,1W
3418	4822 051 20474	470K00	5%	0,1W
3420	4822 051 20472	4K70	5%	0,1W
3433	4822 051 20102	1K00	5%	0,1W
3434	4822 051 20102	1K00	5%	0,1W
3438	4822 117 13528	200R 1% 0,125W 0805		
3440	4822 117 11927	75R	1%	0,1W
3441	4822 117 10837	100K	1%	0,1W
3443	4822 117 11927	75R	1%	0,1W
3444	4822 117 10837	100K	1%	0,1W
3448	4822 117 11927	75R	1%	0,1W
3449	4822 117 10837	100K	1%	0,1W
3450	4822 117 10833	10K	1%	0,1W
3451	4822 117 10965	18K	1%	0,1W
3452	4822 051 20471	470R00	5%	0,1W
3453	4822 117 10833	10K	1%	0,1W
3454	4822 051 20392	3K90	5%	0,1W
3455	4822 051 20561	560R00	5%	0,1W
3456	4822 117 10833	10K	1%	0,1W
3457	4822 051 20202	2K00	5%	0,1W
3458	4822 117 10833	10K	1%	0,1W
3459	4822 117 10965	18K	1%	0,1W

3460	4822 117 10833	10K	1%	0,1W
3461	4822 051 20392	3K90	5%	0,1W
3462	4822 051 20561	560R00	5%	0,1W
3463	4822 051 20202	2K00	5%	0,1W
3464	4822 117 10362	7K5	1%	0,1W
3465	4822 117 10833	10K	1%	0,1W
3466	4822 051 20223	22K00	5%	0,1W
3488	2120 108 94027	RST NETW SM RAC16 4X10K PM5 R		
3489	4822 117 10837	100K	1%	0,1W
3490	2120 108 94025	RST NETW SM RAC16 4X100R PM5 R		
3491	2120 108 94025	RST NETW SM RAC16 4X100R PM5 R		
3492	2120 108 94027	RST NETW SM RAC16 4X10K PM5 R		
3494	2120 108 94042	RST NETW SM RAC16 4X22R PM5 R		
3495	4822 117 10837	100K	1%	0,1W
3496	4822 051 20101	100R00	5%	0,1W
3498	2120 108 94027	RST NETW SM RAC16 4X10K PM5 R		
3499	2120 108 94049	RST NETW SM RAC16 4X4K7 PM5 R		
3500	4822 051 20472	4K70	5%	0,1W
3501	2120 108 94042	RST NETW SM RAC16 4X22R PM5 R		
3502	2120 108 94042	RST NETW SM RAC16 4X22R PM5 R		
3503	4822 117 10834	47K	1%	0,1W

COILS & CRYSTAL QUARTZ

5302	8241 010 40420	LEADED FERRITE BEADS		
5303	8241 010 40420	LEADED FERRITE BEADS		
5304	8241 010 40420	LEADED FERRITE BEADS		
5305	8241 010 40420	LEADED FERRITE BEADS		
5306	8241 010 40420	LEADED FERRITE BEADS		
5307	8241 010 40420	LEADED FERRITE BEADS		
5308	8241 010 40420	LEADED FERRITE BEADS		
5309	8241 010 40420	LEADED FERRITE BEADS		
5310	8241 010 40420	LEADED FERRITE BEADS		
5311	8241 010 40420	LEADED FERRITE BEADS		
5314	4822 157 11868	2.7UH 5%		
5315	2422 535 94163	IND FXD LAL02 A 1U8 PM5 T		
5316	2422 535 94163	IND FXD LAL02 A 1U8 PM5 T		
5317	2422 535 94163	IND FXD LAL02 A 1U8 PM5 T		
5318	3141 018 80340	CRYSTAL QUARTZ 12.5 MHZ		
5319	4822 242 10906	27.000 000 MHZ		

DIODES

6302	4822 130 31981	BZX79-B3V9		
6303	4822 130 30621	1N4148		
6305	4822 130 30621	1N4148		
6306	4822 130 30621	1N4148		

Spare parts list DVD730K/691

6307	4822 130 30621	1N4148
6308	4822 130 30621	1N4148
6309	4822 130 30621	1N4148
6310	4822 130 30621	1N4148
6311	4822 130 30621	1N4148
6312	4822 130 30621	1N4148
6313	4822 130 30621	1N4148

TRANSISTORS & INTEGRATED CIRCUITS

7301	5322 130 40217	2N3904
7302	3141 018 50970	TRA SIG C9014 T
7303	3141 018 50970	TRA SIG C9014 T
7304	3141 018 50960	TRA SIG C9013 T
7313	3141 018 50980	TRA SIG C9015 T
7314	3141 018 50970	TRA SIG C9014 T
7315	3141 018 50970	TRA SIG C9014 T
7316	3141 018 50980	TRA SIG C9015 T
7321	8241 010 45120	IC SMD NJM4560
7322	5322 209 11517	PC74HCU04T
7325	3141 018 51060	IC SM AT24C01A
7327	3141 017 40220	IC SM ZR36703 PROG DVD730K/691
7328	3141 018 51140	IC SM ZR36712
7329	3141 018 51010	IC SM KM416S1020 BT
7331	3141 018 51050	IC SM CS4340
7332	3141 018 51030	IC SM AV3168
7333	8241 010 45120	IC SMD NJM4560
7336	3141 018 50260	BA033T

FRONT BOARD 3141 018 02510

MISCELLANEOUS

1400	3141 018 80310	VFD 14-ST-18GAK
1403	4822 265 30735	5 PINS
1411	4822 276 13114	SWITCH, PUSH BUTTON
1412	4822 276 13114	SWITCH, PUSH BUTTON
1413	4822 276 13114	SWITCH, PUSH BUTTON
1414	4822 276 13114	SWITCH, PUSH BUTTON
1415	4822 276 13114	SWITCH, PUSH BUTTON
1416	4822 276 13114	SWITCH, PUSH BUTTON
1417	4822 276 13114	SWITCH, PUSH BUTTON
1421	4822 265 30735	5 PINS
8401	3141 010 20890	CWAS 05PH/05OP 180 5 WH 26S

8402	3141 010 20860	CWAS XH5P/050P 170 5 26S
------	----------------	--------------------------

CAPACITORS

2401	4822 122 10183	100PF 5% 50V
2402	4822 124 40433	47UF20% 25V
2403	4822 122 10183	100PF 5% 50V
2404	4822 126 12882	100NF+80-20% 50V
2407	4822 126 12882	100NF+80-20% 50V
2416	4822 124 40433	47UF20% 25V

RESISTORS

3400	4822 116 83883	470R 5% 0,5W
3401	4822 050 21003	10K00 1% 0,6W
3402	4822 050 21003	10K00 1% 0,6W
3403	4822 050 21003	10K00 1% 0,6W
3404	4822 050 21003	10K00 1% 0,6W
3405	4822 050 21002	1K00 1% 0,6W
3406	4822 050 21003	10K00 1% 0,6W
3407	4822 116 52195	47E 5% 0,5W
3408	4822 116 52283	4K7 5% 0,5W
3409	4822 116 52283	4K7 5% 0,5W
3410	4822 116 52283	4K7 5% 0,5W
3411	4822 116 52283	4K7 5% 0,5W
3412	4822 116 83884	47K 5% 0,5W
3423	4822 050 21002	1K00 1% 0,6W
△ 3424	4822 052 10478	4R70 5% 0,33W
3430	4822 116 52175	100E 5% 0,5W
3431	4822 116 52175	100E 5% 0,5W
3432	4822 116 52175	100E 5% 0,5W

DIODES

6400	4822 130 30621	1N4148
6401	4822 130 30621	1N4148
6402	4822 130 31253	BZX79-C2V4
6413	4822 130 34398	BZX79-B24
6420	4822 130 82978	LTL-16KPE-P

TRANSISTORS & INTEGRATED CIRCUITS

7400	3141 018 50700	IC VFDDDRIVER PT6311
7401	8241 010 45320	HEG836-16GP

MIC BOARD 3141 018 02280

MISCELLANEOUS

1201	4822 267 10573	CON BM H 8P 2.50
1203	4822 267 31453	CONNECTOR, CABLE/WIRE
1204	2422 026 04309	SOC PHONE H 1P F 6.3 ST B
1205	2422 026 04309	SOC PHONE H 1P F 6.3 ST B

CAPACITORS

2201	2222 580 15623	1NF 10% X7R 50V 0805
2202	5322 122 32531	100PF 5%NP0 50V
2203	4822 126 14585	100NF 10% X7R 0805 50V
2204	4822 126 14585	100NF 10% X7R 0805 50V
2205	5322 122 32531	100PF 5%NP0 50V
2207	2222 580 15623	1NF 10% X7R 50V 0805
2208	5322 122 32531	100PF 5%NP0 50V
2209	5322 122 32531	100PF 5%NP0 50V
2211	4822 124 23057	4,7UF 20% 50V
2212	4822 126 14124	220PF 2%
2213	2222 580 15623	1NF 10% X7R 50V 0805
2214	4822 126 14585	100NF 10% X7R 0805 50V
2215	4822 126 14585	100NF 10% X7R 0805 50V
2216	4822 122 33891	3,3NF10%X7R 63V
2217	5322 122 34098	10NF10%X7R 63V
2218	4822 124 40248	10UF20% 63V
2219	4822 124 23057	4,7UF 20% 50V
2221	4822 126 14585	100NF 10% X7R 0805 50V
2222	4822 124 40433	47UF20% 25V
2223	4822 126 14585	100NF 10% X7R 0805 50V
2224	4822 126 14585	100NF 10% X7R 0805 50V
2225	4822 124 40433	47UF20% 25V
2226	4822 124 40248	10UF20% 63V
2227	4822 126 14585	100NF 10% X7R 0805 50V
2228	4822 126 14585	100NF 10% X7R 0805 50V

Spare parts list DVD730K/691

2229	5322 126 10465	3,9NF 10% X7R 50V 0805 CER2
2230	4822 122 33926	12PF 50V
2231	4822 126 14585	100NF 10% X7R 0805 50V
2232	4822 126 14585	100NF 10% X7R 0805 50V
2233	4822 126 14585	100NF 10% X7R 0805 50V
2234	2222 580 15623	1NF 10% X7R 50V 0805
2237	4822 122 33926	12PF 50V
2238	4822 126 14585	100NF 10% X7R 0805 50V
2239	2222 580 15623	1NF 10% X7R 50V 0805
2240	5322 122 34098	10NF10%X7R 63V
2241	2222 580 15623	1NF 10% X7R 50V 0805
2242	2222 580 15623	1NF 10% X7R 50V 0805
2243	2222 580 15623	1NF 10% X7R 50V 0805

RESISTORS

3201	4822 051 20472	4K70 5% 0,1W
3202	4822 051 20472	4K70 5% 0,1W
3203	4822 051 20102	1K00 5% 0,1W
3204	4822 051 20561	560R00 5% 0,1W
3205	4822 117 10837	100K 1% 0,1W
3206	4822 051 20561	560R00 5% 0,1W
3207	4822 117 10837	100K 1% 0,1W
3208	4822 051 20102	1K00 5% 0,1W
3209	4822 051 20561	560R00 5% 0,1W
3211	4822 117 12955	2K7 1% 0,1W 0805
3212	4822 051 20561	560R00 5% 0,1W
3213	4822 116 83933	15K 1% 0,1W
3214	4822 117 10833	10K 1% 0,1W
3215	4822 051 20562	5K6 5% 0,1W 0805
3216	4822 117 10833	10K 1% 0,1W
3217	4822 051 20109	10R00 5% 0,1W
3218	4822 051 20109	10R00 5% 0,1W
3220	4822 117 10833	10K 1% 0,1W
3221	4822 051 20683	68K00 5% 0,1W
3222	4822 117 10833	10K 1% 0,1W
3223	4822 117 10833	10K 1% 0,1W
3224	4822 051 20332	3K30 5% 0,1W
3226	4822 051 20109	10R00 5% 0,1W
3227	4822 051 20109	10R00 5% 0,1W
3228	4822 051 20229	22R00 5% 0,1W
3229	4822 051 20479	47R00 5% 0,1W
3231	4822 117 11507	6K8 1% 0,1W
3233	4822 051 20332	3K30 5% 0,1W

3234	4822 051 20229	22R00 5% 0,1W
3235	4822 051 20479	47R00 5% 0,1W
3236	4822 051 20561	560R00 5% 0,1W
3245	4822 117 11507	6K8 1% 0,1W
3251	4822 051 20561	560R00 5% 0,1W
3261	3141 010 60170	POTM CAR LOG 10K H AR09711B B
3262	3141 010 60170	POTM CAR LOG 10K H AR09711B B
3263	3141 010 60180	POTM CAR LOG 10K H AR09712B B

COILS & CRYSTAL QUARTZ

5201	4822 157 11235	22UH LANO2TB220J PM5 A
5202	4822 157 11235	22UH LANO2TB220J PM5 A

TRANSISTORS & INTEGRATED CIRCUITS

4201	5322 130 60159	BC846B
4202	5322 130 60159	BC846B
7201	8241 010 45120	IC SMD NJM4560
7202	4822 209 62059	TCA0372DPI
7204	4822 209 17186	PT2399

9. Spare parts list DVD730K/751

Mechanical

200	3141 017 75470	CAB FRONT DVD730K PNT PRT
204	3141 017 73990	WINDOW DVD728K PNT PRT
205	3141 017 75060	BUTTON POWER DVD729K PNT
208	3141 017 75070	VOLUME KNOB DVD729K PNT
219	3141 017 75410	DOOR DVD729K PNT PRT
240	3141 017 75110	BUTTON CONTROL DVD729K PNT PRT
242	3141 017 75120	RING DVD729K PNT PRT
244	3139 244 00410	FOOT DVD711
245	3139 247 50750	FOOT ASSY DVD711
249	3139 243 10010	CUSHION
384	3141 017 90120	REMOTE CONTROL
1001	3141 018 02490	PBAS PSU DVD729K/031
1002	3141 018 02440	PBAS MPEG DVD730K/751
1003	3141 018 02280	PBAS DVD729K MIC
1004	3141 018 02510	PBAS FRONT DVD0707/781
1005	3141 018 02190	DVD729K LOADER MODULE
△ 5001	4822 321 10954	CORD, MAINS
8002	3141 010 20900	CWAS 40RK/40RK 230 28S LOADER- MPEG
8003	3141 010 20910	CWAS 08XH/08XH 500 26S PSU-MPEG
8004	3141 010 20880	CWAS 08EH/08PH 460 26S MIC-MPEG
8006	3141 010 20850	CWAS 04XH/04LC 260 22S PSU-LOADER
△ 8008	3141 010 21000	SWI ASSY 1X2 M7.92 260 18S

Power supply board 3141 018 02490

MISCELLANEOUS

△ 1001	4822 265 31015	CONNECTOR
△ 1002	8241 010 03090	FUSE T1.25A 250V
△ 1004	3141 010 30330	CON BM B 2P M 7.92 B
1005	2422 025 09013	CON BM V 5P M 2.50 XH A B
1006	2422 025 09074	CONNECTOR 8P TOP
1007	2422 025 09904	CON BM V 4P M 2.50 XH B

CAPACITORS

2001	3141 018 80530	CAP MPP 275V S 100N PM10 B
△ 2002	3141 018 80520	CAP MPP 275V S 220N PM10 B
△ 2003	3141 018 80370	CERSAF NSA 400V S 470P PM10 B
△ 2004	3141 018 80370	CERSAF NSA 400V S 470P PM10 B
2005	3141 018 80450	ELCAP CD294 400V 68U PM20 B
△ 2006	3141 018 80380	CERSAF NSA 400V S 1N PM20 B
△ 2007	3141 018 80380	CERSAF NSA 400V S 1N PM20 B
2008	3141 018 80550	CER2 DC 1KV S 10N PM20 B
2009	3141 018 80560	CER2 DC 1KV S 220P PM10 B

2010	4822 126 13499	220PF 5% NP0 50V
2011	4822 124 23057	"4,7UF 20% 50V"
2012	4822 121 51304	10NF 10% 50V
2013	4822 124 81151	22UF 50V
2014	4822 124 21913	1UF20% 63V
2015	5322 122 32311	470PF 10% 100V
2016	5322 122 32052	680PF 10% 100V
2017	4822 124 21913	1UF20% 63V
2018	4822 126 14217	100NF 20% Y5V 0805 50V
2019	3141 018 80570	CER2 DC 1KV S 1N P8020 B
2020	3141 018 80470	ELCAP WLR 10V 1000U PM20
2021	4822 124 80195	470UF20% 10V
2022	3141 018 80560	CER2 DC 1KV S 220P PM10 B
2023	3141 018 80490	ELCAP 16V 470U PM20
2024	4822 124 80791	"470UF 16V 20% 105C DXH=8X11,5"
2025	3141 018 80560	CER2 DC 1KV S 220P PM10 B
2026	3141 018 80500	ELCAP 16V 220U PM20
2027	4822 124 80791	"470UF 16V 20% 105C DXH=8X11,5"
2028	3141 018 80560	CER2 DC 1KV S 220P PM10 B
2029	3141 018 80510	ELCAP 50V 100U PM20
2030	3141 018 80560	CER2 DC 1KV S 220P PM10 B
2031	3141 018 80480	ELCAP CD263 10V 470U PM20

RESISTORS

△ 3001	3141 018 80440	VDR DC 10K 470V
△ 3002	3141 018 80430	NTC THERMISTOR 3A 8R PM10 B
3003	3141 018 80390	RST MLFM 1W S 300K PM5
3004	3141 018 80400	RST MLFM 1W S 51K PM5
3005	4822 116 52307	"91K 5% 0,5W"
3006	3141 018 80540	RST CRB CR25 A 96K PM5 A
3007	4822 050 21004	"100K00 1% 0,6W"
3008	4822 050 21004	"100K00 1% 0,6W"
3009	4822 050 27502	"7K50 1% 0,6W"
3010	4822 116 52176	"10E 5% 0,5W"
3011	4822 050 21002	"1K00 1% 0,6W"
3012	4822 050 21004	"100K00 1% 0,6W"
3013	4822 050 21301	"130R00 1% 0,6W"
3014	4822 050 21509	"15R00 1% 0,6W"
3015	4822 050 22402	"2K40 1% 0,6W"
3016	3141 018 80410	RST MLFM 1W A 0R75 PM5
3017	4822 050 25101	"510R00 1% 0,6W"
3018	4822 050 21202	"1K20 1% 0,6W"
3019	4822 050 21003	"10K00 1% 0,6W"
3020	4822 053 10102	1K00 5% 1W
3021	4822 050 21002	"1K00 1% 0,6W"
3022	4822 050 21002	"1K00 1% 0,6W"
3023	4822 050 21802	"1K80 1% 0,6W"
3025	4822 050 25101	"510R00 1% 0,6W"
3026	4822 050 27502	"7K50 1% 0,6W"
3027	4822 050 23002	"3K00 1% 0,6W"
3028	4822 050 25603	"56K00 1% 0,6W"
3029	2120 105 93387	RST MOX 1W ERG1F S 10R PM5 B

3030	4822 116 82958	100R 5% 1W
3031	4822 053 10181	180R00 5% 1W
3032	3141 018 80420	RST MLFM 1W A 510R PM5
3033	2341 211 13123	RST CRB CR25 A 12K PM5 A
3035	4822 050 21002	"1K00 1% 0,6W"
3036	4822 050 21002	"1K00 1% 0,6W"
3037	2322 211 73308	RST CRB CR25 A 3R PM5 A
3038	2122 101 02083	RST CRB CFR25S A 1R5 PM5 A
3039	4822 050 22008	"2R00 1% 0,6W"
3040	4822 053 10682	6K80 5% 1W

COILS & QUARTZ

△ 5001	3141 018 20470	CHOKE COIL 300UH 7TS X 0.4 PM17
△ 5002	3141 018 20460	CHOKE COIL 31MH 160TS X 0.2 PM10
△ 5003	3141 018 31200	TFM POW EF TFS-3001
5004	3141 018 20480	IND FXD Ø8 X 0.5 12UH PM5
5005	3141 018 20480	IND FXD Ø8 X 0.5 12UH PM5
5006	3141 018 20490	IND FXD Ø5 X 0.35 12UH PM5

DIODES

6001	5322 130 34574	1N4004G
6002	5322 130 34574	1N4004G
6003	5322 130 34574	1N4004G
6004	5322 130 34574	1N4004G
6005	3141 018 51160	DIO REC HER108
6006	4822 130 34379	BZX79-B27
6007	4822 130 34398	BZX79-B24
6008	4822 130 30621	1N4148
6009	4822 130 30621	1N4148
6010	3141 018 51230	DIO REC FR104
6011	4822 130 34499	BZX79-B20
6012	3141 018 51240	DIO REC SR560
6013	9965 000 09322	RECTIFIER DIODE FR302
6014	3141 018 51160	DIO REC HER108
6015	4822 130 30862	BZX79-B9V1
6016	3141 018 51230	DIO REC FR104
6017	3141 018 51230	DIO REC FR104

TRANSISTORS & INTEGRATED CIRCUITS

7001	3141 018 51170	TRA SIG S9012
7002	3141 018 51170	TRA SIG S9012
7003	3141 018 50960	TRA SIG C9013 T
7004	3141 018 51200	FET SIG IRFBC40A
7005	3141 018 51170	TRA SIG S9012
7006	3141 018 51180	TRA SIG H1015
7007	3141 018 50960	TRA SIG C9013 T
△ 7008	3141 018 51260	OPT CP Q817B
7009	3141 018 51190	TRA SIG WL431

Spare parts list DVD730K/751

MPEG BOARD

3141 018 02440

MISCELLANEOUS

1303	4822 265 11352	CONN. 8P
1304	4822 267 40624	5-FOLD X
1307	2422 025 09904	CON BM V 4P M 2.50 XH B
1311	2422 025 16501	CON BM V 40P M 2.54 103308B
1312	4822 267 10574	CON BM V 8P 2.50
1313	3141 010 30070	MICRO-SHUNT V 2P M 2.54
1320	3141 010 30300	CON BM CINCH V 3P F GNBURD
1322	3141 010 30250	CON S-VEDIO AND CVBS
1323	3141 010 30310	CON BM CINCH V 3P F WHRDBK B
1324	3141 010 30080	RCA-108
1325	4822 276 13114	SWITCH, PUSH BUTTON

CAPACITORS

2301	5322 122 32531	100PF 5%NP0 50V
2303	4822 126 14585	100NF 10% X7R 0805 50V
2306	5322 122 32531	100PF 5%NP0 50V
2307	5322 122 32531	100PF 5%NP0 50V
2308	5322 122 32531	100PF 5%NP0 50V
2309	5322 122 32531	100PF 5%NP0 50V
2310	5322 122 32531	100PF 5%NP0 50V
2311	4822 126 14585	100NF 10% X7R 0805 50V
2312	4822 126 14585	100NF 10% X7R 0805 50V
2313	2020 012 93504	ELCAP KA 16V S 100U PM20 A
2314	4822 126 14585	100NF 10% X7R 0805 50V
2315	4822 126 14585	100NF 10% X7R 0805 50V
2316	4822 124 23624	47UF20% 16V
2317	4822 126 14585	100NF 10% X7R 0805 50V
2318	4822 124 23624	47UF20% 16V
2319	4822 126 14585	100NF 10% X7R 0805 50V
2320	4822 126 14585	100NF 10% X7R 0805 50V
2322	4822 126 14585	100NF 10% X7R 0805 50V
2324	4822 126 14585	100NF 10% X7R 0805 50V
2325	4822 126 14585	100NF 10% X7R 0805 50V
2326	4822 124 23624	47UF20% 16V
2327	4822 126 14585	100NF 10% X7R 0805 50V
2328	4822 124 23624	47UF20% 16V

2331	4822 126 14585	100NF 10% X7R 0805 50V
2333	4822 126 14585	100NF 10% X7R 0805 50V
2336	4822 126 14585	100NF 10% X7R 0805 50V
2337	4822 124 40207	100UF20% 25V
2339	5322 122 32531	100PF 5%NP0 50V
2340	5322 122 32531	100PF 5%NP0 50V
2341	5322 122 32531	100PF 5%NP0 50V
2342	5322 122 32531	100PF 5%NP0 50V
2343	5322 122 32531	100PF 5%NP0 50V
2344	5322 122 32531	100PF 5%NP0 50V
2345	5322 122 32531	100PF 5%NP0 50V
2346	5322 122 32531	100PF 5%NP0 50V
2347	4822 126 14585	100NF 10% X7R 0805 50V
2348	4822 124 40207	100UF20% 25V
2349	4822 126 14585	100NF 10% X7R 0805 50V
2350	4822 126 13486	15PF 2% NP0 63V
2351	4822 126 14585	100NF 10% X7R 0805 50V
2355	4822 126 14585	100NF 10% X7R 0805 50V
2356	4822 126 14585	100NF 10% X7R 0805 50V
2357	4822 126 14585	100NF 10% X7R 0805 50V
2358	5322 122 32658	22PF 5% 50V
2359	5322 122 32658	22PF 5% 50V
2361	2020 012 93504	ELCAP KA 16V S 100U PM20 A
2362	4822 124 23624	47UF20% 16V
2363	2020 012 93505	ELCAP KA 25V S 10U PM20 A
2364	4822 126 13473	220NF80-20% 50V
2365	5322 122 32658	22PF 5% 50V
2366	4822 126 14585	100NF 10% X7R 0805 50V
2367	5322 122 32659	33PF 5% 50V
2368	4822 126 14585	100NF 10% X7R 0805 50V
2369	4822 124 81136	100U 25V
2370	2222 580 19809	CER2 0805 Y5V 50V 47N COL R
2371	4822 126 14585	100NF 10% X7R 0805 50V
2373	4822 126 14585	100NF 10% X7R 0805 50V
2375	4822 124 23624	47UF20% 16V
2376	4822 124 23624	47UF20% 16V
2378	4822 126 14585	100NF 10% X7R 0805 50V
2379	4822 126 14585	100NF 10% X7R 0805 50V
2380	4822 126 14585	100NF 10% X7R 0805 50V
2381	4822 126 14585	100NF 10% X7R 0805 50V
2382	4822 126 14585	100NF 10% X7R 0805 50V
2385	4822 126 14585	100NF 10% X7R 0805 50V
2386	4822 126 14585	100NF 10% X7R 0805 50V
2388	4822 124 11947	10UF 20% 16V
2389	4822 124 11947	10UF 20% 16V

2390	4822 124 11946	22UF 20% 16V
2391	4822 124 40433	47UF20% 25V
2392	4822 124 40433	47UF20% 25V
2393	4822 126 14585	100NF 10% X7R 0805 50V
2394	4822 126 14585	100NF 10% X7R 0805 50V
2395	4822 124 81108	0,47UF20% 50V
2398	4822 124 81108	0,47UF20% 50V
2401	4822 126 14585	100NF 10% X7R 0805 50V
2403	4822 124 81286	47UF20% 16V
2404	4822 126 14585	100NF 10% X7R 0805 50V
2406	4822 124 81108	0,47UF20% 50V
2411	4822 126 14585	100NF 10% X7R 0805 50V
2412	5322 122 32658	22PF 5% 50V
2413	4822 124 40196	220UF20% 16V
2414	4822 126 14585	100NF 10% X7R 0805 50V
2415	4822 126 14585	100NF 10% X7R 0805 50V
2416	4822 126 14585	100NF 10% X7R 0805 50V
2418	2222 586 15713	CER2 0805 X7R 50V 180P PM20 R
2419	2222 586 15713	CER2 0805 X7R 50V 180P PM20 R
2420	4822 126 14585	100NF 10% X7R 0805 50V
2421	5322 122 32658	22PF 5% 50V
2422	4822 124 40196	220UF20% 16V
2423	4822 124 23624	47UF20% 16V
2424	2222 586 15713	CER2 0805 X7R 50V 180P PM20 R
2425	2222 586 15713	CER2 0805 X7R 50V 180P PM20 R
2426	5322 122 32658	22PF 5% 50V
2427	4822 124 40196	220UF20% 16V
2428	4822 126 14585	100NF 10% X7R 0805 50V
2429	4822 126 14585	100NF 10% X7R 0805 50V
2431	2222 586 15713	CER2 0805 X7R 50V 180P PM20 R
2432	2222 586 15713	CER2 0805 X7R 50V 180P PM20 R
2434	2020 012 93504	ELCAP KA 16V S 100U PM20 A
2435	5322 122 33861	120PF10% 50V
2436	2020 012 93505	ELCAP KA 25V S 10U PM20 A
2437	2020 012 93505	ELCAP KA 25V S 10U PM20 A
2438	4822 122 32614	CER2 0805 X7R 63V 1N2 PM10 R
2440	2020 012 93505	ELCAP KA 25V S 10U PM20 A
2441	5322 122 33861	120PF10% 50V
2442	2020 012 93505	ELCAP KA 25V S 10U PM20 A
2443	4822 122 32614	CER2 0805 X7R 63V 1N2 PM10 R
2445	4822 126 14585	100NF 10% X7R 0805 50V
2455	4822 126 14585	100NF 10% X7R 0805 50V
2464	4822 126 14585	100NF 10% X7R 0805 50V
2466	5322 122 32531	100PF 5%NP0 50V
2467	5322 122 32658	22PF 5% 50V

Spare parts list DVD730K/751

RESISTORS

3301	4822 117 10833	10K	1%	0,1W
3302	4822 117 11507	6K8	1%	0,1W
3303	4822 117 10833	10K	1%	0,1W
3304	4822 117 11507	6K8	1%	0,1W
3305	4822 051 20339	33R00	5%	0,1W
3309	4822 051 20008	0R00	JUMP. (0805)	
3311	4822 051 20474	470K00	5%	0,1W
3312	4822 117 10833	10K	1%	0,1W
3313	4822 117 10833	10K	1%	0,1W
3314	4822 051 20102	1K00	5%	0,1W
3315	4822 117 13577	330R 1% RC12H 0805	1,25W	
3316	4822 051 20919	91R00	5%	0,1W
3317	4822 117 12521	68R	1%	0,1W
3318	4822 051 20102	1K00	5%	0,1W
3319	2120 108 94042	RST NETW SM RAC16 4X22R	PM5 R	
3320	2120 108 94042	RST NETW SM RAC16 4X22R	PM5 R	
3324	4822 117 10837	100K	1%	0,1W
3325	4822 117 10837	100K	1%	0,1W
3326	4822 051 20478	4R70	5%	0,1W
3331	4822 117 10833	10K	1%	0,1W
3332	4822 051 20339	33R00	5%	0,1W
3334	4822 051 20008	0R00	JUMP. (0805)	
3335	4822 051 20008	0R00	JUMP. (0805)	
3336	4822 051 20339	33R00	5%	0,1W
3339	4822 051 20102	1K00	5%	0,1W
3340	4822 051 20102	1K00	5%	0,1W
3346	4822 051 20109	10R00	5%	0,1W
3348	4822 051 20109	10R00	5%	0,1W
3349	4822 117 10833	10K	1%	0,1W
3350	4822 051 20562	5K6 5% 0,1W	0805	
3351	4822 051 20472	4K70	5%	0,1W
3352	4822 051 20472	4K70	5%	0,1W
3354	4822 117 10833	10K	1%	0,1W
3360	4822 051 20472	4K70	5%	0,1W
3362	4822 051 20472	4K70	5%	0,1W
3363	4822 051 20102	1K00	5%	0,1W
3364	4822 051 20472	4K70	5%	0,1W
3365	4822 051 20472	4K70	5%	0,1W
3366	4822 051 20472	4K70	5%	0,1W
3367	4822 051 20008	0R00	JUMP. (0805)	
3370	4822 051 20008	0R00	JUMP. (0805)	
3372	4822 051 20008	0R00	JUMP. (0805)	

3373	4822 117 13577	330R 1% RC12H 0805	1,25W	
3374	4822 051 20101	100R00	5%	0,1W
3375	4822 117 10833	10K	1%	0,1W
3376	4822 117 10833	10K	1%	0,1W
3377	4822 051 20109	10R00	5%	0,1W
3381	4822 116 52188	27E	5%	0,5W
3382	4822 051 20102	1K00	5%	0,1W
3383	4822 051 20339	33R00	5%	0,1W
3387	4822 051 20101	100R00	5%	0,1W
3388	4822 051 20101	100R00	5%	0,1W
3389	4822 117 11448	180R	1%	0,1W
3390	2120 108 94042	RST NETW SM RAC16 4X22R	PM5 R	
3391	2120 108 94042	RST NETW SM RAC16 4X22R	PM5 R	
3393	2120 108 94042	RST NETW SM RAC16 4X22R	PM5 R	
3400	2120 108 94049	RST NETW SM RAC16 4X4K7	PM5 R	
3401	4822 051 20472	4K70	5%	0,1W
3402	2120 108 94025	RST NETW SM RAC16 4X100R	PM5 R	
3407	4822 051 20472	4K70	5%	0,1W
3408	4822 051 20105	1M00	5%	0,1W
3409	4822 051 20202	2K00	5%	0,1W
3410	4822 051 20202	2K00	5%	0,1W
3411	4822 117 11449	2K2 5% 0,1W	0805	
3412	4822 117 11503	220R	1%	0,1W
3413	4822 117 11503	220R	1%	0,1W
3414	4822 116 83933	15K	1%	0,1W
3416	4822 117 10353	150R	1%	0,1W
3418	4822 051 20474	470K00	5%	0,1W
3420	4822 051 20472	4K70	5%	0,1W
3433	4822 051 20102	1K00	5%	0,1W
3434	4822 051 20102	1K00	5%	0,1W
3438	4822 117 13528	200R 1% 0,125W	0805	
3440	4822 117 11927	75R	1%	0,1W
3441	4822 117 10837	100K	1%	0,1W
3443	4822 117 11927	75R	1%	0,1W
3444	4822 117 10837	100K	1%	0,1W
3448	4822 117 11927	75R	1%	0,1W
3449	4822 117 10837	100K	1%	0,1W
3450	4822 117 10833	10K	1%	0,1W
3451	4822 117 10965	18K	1%	0,1W
3452	4822 051 20471	470R00	5%	0,1W
3453	4822 117 10833	10K	1%	0,1W
3454	4822 051 20392	3K90	5%	0,1W
3455	4822 051 20561	560R00	5%	0,1W
3456	4822 117 10833	10K	1%	0,1W
3457	4822 051 20202	2K00	5%	0,1W

3458	4822 117 10833	10K	1%	0,1W
3459	4822 117 10965	18K	1%	0,1W
3460	4822 117 10833	10K	1%	0,1W
3461	4822 051 20392	3K90	5%	0,1W
3462	4822 051 20561	560R00	5%	0,1W
3463	4822 051 20202	2K00	5%	0,1W
3464	4822 117 10362	7K5	1%	0,1W
3465	4822 117 10833	10K	1%	0,1W
3466	4822 051 20223	22K00	5%	0,1W
3488	2120 108 94027	RST NETW SM RAC16 4X10K	PM5 R	
3489	4822 117 10837	100K	1%	0,1W
3490	2120 108 94025	RST NETW SM RAC16 4X100R	PM5 R	
3491	2120 108 94025	RST NETW SM RAC16 4X100R	PM5 R	
3492	2120 108 94027	RST NETW SM RAC16 4X10K	PM5 R	
3494	2120 108 94042	RST NETW SM RAC16 4X22R	PM5 R	
3495	4822 117 10837	100K	1%	0,1W
3496	4822 051 20101	100R00	5%	0,1W
3498	2120 108 94027	RST NETW SM RAC16 4X10K	PM5 R	
3499	2120 108 94049	RST NETW SM RAC16 4X4K7	PM5 R	
3500	4822 051 20472	4K70	5%	0,1W
3501	2120 108 94042	RST NETW SM RAC16 4X22R	PM5 R	
3502	2120 108 94042	RST NETW SM RAC16 4X22R	PM5 R	
3503	4822 117 10834	47K	1%	0,1W

COILS & CRYSTAL QUARTZ

5302	8241 010 40420	LEADED FERRITE BEADS		
5303	8241 010 40420	LEADED FERRITE BEADS		
5304	8241 010 40420	LEADED FERRITE BEADS		
5305	8241 010 40420	LEADED FERRITE BEADS		
5306	8241 010 40420	LEADED FERRITE BEADS		
5307	8241 010 40420	LEADED FERRITE BEADS		
5308	8241 010 40420	LEADED FERRITE BEADS		
5309	8241 010 40420	LEADED FERRITE BEADS		
5310	8241 010 40420	LEADED FERRITE BEADS		
5311	8241 010 40420	LEADED FERRITE BEADS		
5314	4822 157 11868	2.7UH 5%		
5315	2422 535 94163	IND FXD LAL02 A 1U8	PM5 T	
5316	2422 535 94163	IND FXD LAL02 A 1U8	PM5 T	
5317	2422 535 94163	IND FXD LAL02 A 1U8	PM5 T	
5318	3141 018 80340	CRYSTAL QUARTZ 12.5 MHZ		
5319	4822 242 10906	27.000 000 MHZ		

Spare parts list DVD730K/751

DIODES

6302	4822 130 31981	BZX79-B3V9
6303	4822 130 30621	1N4148
6305	4822 130 30621	1N4148
6306	4822 130 30621	1N4148
6307	4822 130 30621	1N4148
6308	4822 130 30621	1N4148
6309	4822 130 30621	1N4148
6310	4822 130 30621	1N4148
6311	4822 130 30621	1N4148
6312	4822 130 30621	1N4148
6313	4822 130 30621	1N4148

TRANSISTORS & INTEGRATED CIRCUITS

7301	5322 130 40217	2N3904
7302	3141 018 50970	TRA SIG C9014 T
7303	3141 018 50970	TRA SIG C9014 T
7304	3141 018 50960	TRA SIG C9013 T
7313	3141 018 50980	TRA SIG C9015 T
7314	3141 018 50970	TRA SIG C9014 T
7315	3141 018 50970	TRA SIG C9014 T
7316	3141 018 50980	TRA SIG C9015 T
7321	8241 010 45120	IC SMD NJM4560
7322	5322 209 11517	PC74HCU04T
7325	3141 018 51060	IC SM AT24C01A
7327	3141 017 40230	IC SM ZR36703 PROG DVD730K/751
7328	3141 018 51140	IC SM ZR36712
7329	3141 018 51010	IC SM KM416S1020 BT
7331	3141 018 51050	IC SM CS4340
7332	3141 018 51030	IC SM AV3168
7333	8241 010 45120	IC SMD NJM4560
7336	3141 018 50260	BA033T

FRONT BOARD 3141 018 02510

MISCELLANEOUS

1400	3141 018 80310	VFD 14-ST-18GAK
1403	4822 265 30735	5 PINS
1411	4822 276 13114	SWITCH, PUSH BUTTON
1412	4822 276 13114	SWITCH, PUSH BUTTON
1413	4822 276 13114	SWITCH, PUSH BUTTON
1414	4822 276 13114	SWITCH, PUSH BUTTON
1415	4822 276 13114	SWITCH, PUSH BUTTON
1416	4822 276 13114	SWITCH, PUSH BUTTON
1417	4822 276 13114	SWITCH, PUSH BUTTON
1421	4822 265 30735	5 PINS
8401	3141 010 20890	CWAS 05PH/05OP 180 5 WH 26S
8402	3141 010 20860	CWAS XH5P/05OP 170 5 26S

CAPACITORS

2401	4822 122 10183	100PF 5% 50V
2402	4822 124 40433	47UF20% 25V
2403	4822 122 10183	100PF 5% 50V
2404	4822 126 12882	100NF+80-20% 50V
2407	4822 126 12882	100NF+80-20% 50V
2416	4822 124 40433	47UF20% 25V

RESISTORS

3400	4822 116 83883	470R 5% 0,5W
3401	4822 050 21003	10K00 1% 0,6W
3402	4822 050 21003	10K00 1% 0,6W
3403	4822 050 21003	10K00 1% 0,6W
3404	4822 050 21003	10K00 1% 0,6W
3405	4822 050 21002	1K00 1% 0,6W
3406	4822 050 21003	10K00 1% 0,6W
3407	4822 116 52195	47E 5% 0,5W
3408	4822 116 52283	4K7 5% 0,5W
3409	4822 116 52283	4K7 5% 0,5W
3410	4822 116 52283	4K7 5% 0,5W
3411	4822 116 52283	4K7 5% 0,5W
3412	4822 116 83884	47K 5% 0,5W

3423	4822 050 21002	1K00 1% 0,6W
△ 3424	4822 052 10478	4R70 5% 0,33W
3430	4822 116 52175	100E 5% 0,5W
3431	4822 116 52175	100E 5% 0,5W
3432	4822 116 52175	100E 5% 0,5W

DIODES

6400	4822 130 30621	1N4148
6401	4822 130 30621	1N4148
6402	4822 130 31253	BZX79-C2V4
6413	4822 130 34398	BZX79-B24
6420	4822 130 82978	LTL-16KPE-P

TRANSISTORS & INTEGRATED CIRCUITS

7400	3141 018 50700	IC VFDDRIVER PT6311
7401	8241 010 45320	HEG836-16GP

Spare parts list DVD730K/751

MIC BOARD 3141 018 02280

MISCELLANEOUS

1201	4822 267 10573	CON BM H 8P 2.50
1203	4822 267 31453	CONNECTOR, CABLE/WIRE
1204	2422 026 04309	SOC PHONE H 1P F 6.3 ST B
1205	2422 026 04309	SOC PHONE H 1P F 6.3 ST B

CAPACITORS

2201	2222 580 15623	1NF 10% X7R 50V 0805
2202	5322 122 32531	100PF 5%NP0 50V
2203	4822 126 14585	100NF 10% X7R 0805 50V
2204	4822 126 14585	100NF 10% X7R 0805 50V
2205	5322 122 32531	100PF 5%NP0 50V
2207	2222 580 15623	1NF 10% X7R 50V 0805
2208	5322 122 32531	100PF 5%NP0 50V
2209	5322 122 32531	100PF 5%NP0 50V
2211	4822 124 23057	4,7UF 20% 50V
2212	4822 126 14124	220PF 2%
2213	2222 580 15623	1NF 10% X7R 50V 0805
2214	4822 126 14585	100NF 10% X7R 0805 50V
2215	4822 126 14585	100NF 10% X7R 0805 50V
2216	4822 122 33891	3,3NF10%X7R 63V
2217	5322 122 34098	10NF10%X7R 63V
2218	4822 124 40248	10UF20% 63V
2219	4822 124 23057	4,7UF 20% 50V
2221	4822 126 14585	100NF 10% X7R 0805 50V
2222	4822 124 40433	47UF20% 25V
2223	4822 126 14585	100NF 10% X7R 0805 50V
2224	4822 126 14585	100NF 10% X7R 0805 50V
2225	4822 124 40433	47UF20% 25V
2226	4822 124 40248	10UF20% 63V
2227	4822 126 14585	100NF 10% X7R 0805 50V
2228	4822 126 14585	100NF 10% X7R 0805 50V
2229	5322 126 10465	3,9NF 10% X7R 50V 0805 CER2
2230	4822 122 33926	12PF 50V
2231	4822 126 14585	100NF 10% X7R 0805 50V
2232	4822 126 14585	100NF 10% X7R 0805 50V
2233	4822 126 14585	100NF 10% X7R 0805 50V
2234	2222 580 15623	1NF 10% X7R 50V 0805
2237	4822 122 33926	12PF 50V

2238	4822 126 14585	100NF 10% X7R 0805 50V
2239	2222 580 15623	1NF 10% X7R 50V 0805
2240	5322 122 34098	10NF10%X7R 63V
2241	2222 580 15623	1NF 10% X7R 50V 0805
2242	2222 580 15623	1NF 10% X7R 50V 0805
2243	2222 580 15623	1NF 10% X7R 50V 0805

RESISTORS

3201	4822 051 20472	4K70 5% 0,1W
3202	4822 051 20472	4K70 5% 0,1W
3203	4822 051 20102	1K00 5% 0,1W
3204	4822 051 20561	560R00 5% 0,1W
3205	4822 117 10837	100K 1% 0,1W
3206	4822 051 20561	560R00 5% 0,1W
3207	4822 117 10837	100K 1% 0,1W
3208	4822 051 20102	1K00 5% 0,1W
3209	4822 051 20561	560R00 5% 0,1W
3211	4822 117 12955	2K7 1% 0,1W 0805
3212	4822 051 20561	560R00 5% 0,1W
3213	4822 116 83933	15K 1% 0,1W
3214	4822 117 10833	10K 1% 0,1W
3215	4822 051 20562	5K6 5% 0,1W 0805
3216	4822 117 10833	10K 1% 0,1W
3217	4822 051 20109	10R00 5% 0,1W
3218	4822 051 20109	10R00 5% 0,1W
3220	4822 117 10833	10K 1% 0,1W
3221	4822 051 20683	68K00 5% 0,1W
3222	4822 117 10833	10K 1% 0,1W
3223	4822 117 10833	10K 1% 0,1W
3224	4822 051 20332	3K30 5% 0,1W
3226	4822 051 20109	10R00 5% 0,1W
3227	4822 051 20109	10R00 5% 0,1W
3228	4822 051 20229	22R00 5% 0,1W
3229	4822 051 20479	47R00 5% 0,1W
3231	4822 117 11507	6K8 1% 0,1W
3233	4822 051 20332	3K30 5% 0,1W
3234	4822 051 20229	22R00 5% 0,1W
3235	4822 051 20479	47R00 5% 0,1W
3236	4822 051 20561	560R00 5% 0,1W
3245	4822 117 11507	6K8 1% 0,1W
3251	4822 051 20561	560R00 5% 0,1W
3261	3141 010 60170	POTM CAR LOG 10K H AR09711B B
3262	3141 010 60170	POTM CAR LOG 10K H AR09711B B
3263	3141 010 60180	POTM CAR LOG 10K H AR09712B B

COILS & CRYSTAL QUARTZ

5201	4822 157 11235	22UH LANO2TB220J PM5 A
5202	4822 157 11235	22UH LANO2TB220J PM5 A

TRANSISTORS & INTEGRATED CIRCUITS

4201	5322 130 60159	BC846B
4202	5322 130 60159	BC846B
7201	8241 010 45120	IC SMD NJM4560
7202	4822 209 62059	TCA0372DP1
7204	4822 209 17186	PT2399

10. Spare parts list DVD730K/781

Mechanical

200	3141 017 75470	CAB FRONT DVD730K PNT PRT
204	3141 017 73990	WINDOW DVD728K PNT PRT
205	3141 017 75060	BUTTON POWER DVD729K PNT
208	3141 017 75070	VOLUME KNOB DVD729K PNT
219	3141 017 75410	DOOR DVD729K PNT PRT
240	3141 017 75110	BUTTON CONTROL DVD729K PNT PRT
242	3141 017 75120	RING DVD729K PNT PRT
244	3139 244 00410	FOOT DVD711
245	3139 247 50750	FOOT ASSY DVD711
249	3139 243 10010	CUSHION
384	3141 017 90120	REMOTE CONTROL
1001	3141 018 02490	PBAS PSU DVD729K/031
1002	3141 018 02460	PBAS MPEG DVD730K/781
1003	3141 018 02280	PBAS DVD729K MIC
1004	3141 018 02510	PBAS FRONT DVD0707/781
1005	3141 018 02190	DVD729K LOADER MODULE
△ 5001	2422 070 98133	MAINSCORD EUR 1M5 BK B
8002	3141 010 20900	CWAS 40RK/40RK 230 28S LOADER- MPEG
8003	3141 010 20910	CWAS 08XH/08XH 500 26S PSU-MPEG
8004	3141 010 20880	CWAS 08EH/08PH 460 26S MIC-MPEG
8006	3141 010 20850	CWAS 04XH/04LC 260 22S PSU-LOADER
△ 8008	3141 010 21000	SWI ASSY 1X2 M7.92 260 18S

Power supply board 3141 018 02490

MISCELLANEOUS

△ 1001	4822 265 31015	CONNECTOR
△ 1002	8241 010 03090	FUSE T1.25A 250V
△ 1004	3141 010 30330	CON BM B 2P M 7.92 B
1005	2422 025 09013	CON BM V 5P M 2.50 XH A B
1006	2422 025 09074	CONNECTOR 8P TOP
1007	2422 025 09904	CON BM V 4P M 2.50 XH B

CAPACITORS

2001	3141 018 80530	CAP MPP 275V S 100N PM10 B
△ 2002	3141 018 80520	CAP MPP 275V S 220N PM10 B
△ 2003	3141 018 80370	CERSAF NSA 400V S 470P PM10 B
△ 2004	3141 018 80370	CERSAF NSA 400V S 470P PM10 B
2005	3141 018 80450	ELCAP CD294 400V 68U PM20 B
△ 2006	3141 018 80380	CERSAF NSA 400V S 1N PM20 B
△ 2007	3141 018 80380	CERSAF NSA 400V S 1N PM20 B
2008	3141 018 80550	CER2 DC 1KV S 10N PM20 B
2009	3141 018 80560	CER2 DC 1KV S 220P PM10 B

2010	4822 126 13499	220PF 5% NP0 50V
2011	4822 124 23057	"4,7UF 20% 50V"
2012	4822 121 51304	10NF 10% 50V
2013	4822 124 81151	22UF 50V
2014	4822 124 21913	1UF20% 63V
2015	5322 122 32311	470PF 10% 100V
2016	5322 122 32052	680PF 10% 100V
2017	4822 124 21913	1UF20% 63V
2018	4822 126 14217	100NF 20% Y5V 0805 50V
2019	3141 018 80570	CER2 DC 1KV S 1N P8020 B
2020	3141 018 80470	ELCAP WLR 10V 1000U PM20
2021	4822 124 80195	470UF20% 10V
2022	3141 018 80560	CER2 DC 1KV S 220P PM10 B
2023	3141 018 80490	ELCAP 16V 470U PM20
2024	4822 124 80791	"470UF 16V 20% 105C DXH=8X11,5"
2025	3141 018 80560	CER2 DC 1KV S 220P PM10 B
2026	3141 018 80500	ELCAP 16V 220U PM20
2027	4822 124 80791	"470UF 16V 20% 105C DXH=8X11,5"
2028	3141 018 80560	CER2 DC 1KV S 220P PM10 B
2029	3141 018 80510	ELCAP 50V 100U PM20
2030	3141 018 80560	CER2 DC 1KV S 220P PM10 B
2031	3141 018 80480	ELCAP CD263 10V 470U PM20

RESISTORS

△ 3001	3141 018 80440	VDR DC 10K 470V
△ 3002	3141 018 80430	NTC THERMISTOR 3A 8R PM10 B
3003	3141 018 80390	RST MLFM 1W S 300K PM5
3004	3141 018 80400	RST MLFM 1W S 51K PM5
3005	4822 116 52307	"91K 5% 0,5W"
3006	3141 018 80540	RST CRB CR25 A 96K PM5 A
3007	4822 050 21004	"100K00 1% 0,6W"
3008	4822 050 21004	"100K00 1% 0,6W"
3009	4822 050 27502	"7K50 1% 0,6W"
3010	4822 116 52176	"10E 5% 0,5W"
3011	4822 050 21002	"1K00 1% 0,6W"
3012	4822 050 21004	"100K00 1% 0,6W"
3013	4822 050 21301	"130R00 1% 0,6W"
3014	4822 050 21509	"15R00 1% 0,6W"
3015	4822 050 22402	"2K40 1% 0,6W"
3016	3141 018 80410	RST MLFM 1W A 0R75 PM5
3017	4822 050 25101	"510R00 1% 0,6W"
3018	4822 050 21202	"1K20 1% 0,6W"
3019	4822 050 21003	"10K00 1% 0,6W"
3020	4822 053 10102	1K00 5% 1W
3021	4822 050 21002	"1K00 1% 0,6W"
3022	4822 050 21002	"1K00 1% 0,6W"
3023	4822 050 21802	"1K80 1% 0,6W"
3025	4822 050 25101	"510R00 1% 0,6W"
3026	4822 050 27502	"7K50 1% 0,6W"
3027	4822 050 23002	"3K00 1% 0,6W"
3028	4822 050 25603	"56K00 1% 0,6W"
3029	2120 105 93387	RST MOX 1W ERG1F S 10R PM5 B
3030	4822 116 82958	100R 5% 1W
3031	4822 053 10181	180R00 5% 1W

3032	3141 018 80420	RST MLFM 1W A 510R PM5
3033	2341 211 13123	RST CRB CR25 A 12K PM5 A
3035	4822 050 21002	"1K00 1% 0,6W"
3036	4822 050 21002	"1K00 1% 0,6W"
3037	2322 211 73308	RST CRB CR25 A 3R PM5 A
3038	2122 101 02083	RST CRB CFR25S A 1R5 PM5 A
3039	4822 050 22008	"2R00 1% 0,6W"
3040	4822 053 10682	6K80 5% 1W

COILS & QUARTZ

△ 5001	3141 018 20470	CHOKO COIL 300UH 7TS X 0.4 PM17
△ 5002	3141 018 20460	CHOKO COIL 31MH 160TS X 0.2 PM10
△ 5003	3141 018 31200	TFM POW EF TFS-3001
5004	3141 018 20480	IND FXD Ø8 X 0.5 12UH PM5
5005	3141 018 20480	IND FXD Ø8 X 0.5 12UH PM5
5006	3141 018 20490	IND FXD Ø5 X 0.35 12UH PM5

DIODES

6001	5322 130 34574	1N4004G
6002	5322 130 34574	1N4004G
6003	5322 130 34574	1N4004G
6004	5322 130 34574	1N4004G
6005	3141 018 51160	DIO REC HER108
6006	4822 130 34379	BZX79-B27
6007	4822 130 34398	BZX79-B24
6008	4822 130 30621	1N4148
6009	4822 130 30621	1N4148
6010	3141 018 51230	DIO REC FR104
6011	4822 130 34499	BZX79-B20
6012	3141 018 51240	DIO REC SR560
6013	9965 000 09322	RECTIFIER DIODE FR302
6014	3141 018 51160	DIO REC HER108
6015	4822 130 30862	BZX79-B9V1
6016	3141 018 51230	DIO REC FR104
6017	3141 018 51230	DIO REC FR104

TRANSISTORS & INTEGRATED CIRCUITS

7001	3141 018 51170	TRA SIG S9012
7002	3141 018 51170	TRA SIG S9012
7003	3141 018 50960	TRA SIG C9013 T
7004	3141 018 51200	FET SIG IRFBC40A
7005	3141 018 51170	TRA SIG S9012
7006	3141 018 51180	TRA SIG H1015
7007	3141 018 50960	TRA SIG C9013 T
△ 7008	3141 018 51260	OPT CP Q817B
7009	3141 018 51190	TRA SIG WL431

Spare parts list DVD730K/781

MPEG BOARD 3141 018 02460

MISCELLANEOUS

1303	4822 265 11352	CONN. 8P
1304	4822 267 40624	5-FOLD X
1307	2422 025 09904	CON BM V 4P M 2.50 XH B
1311	2422 025 16501	CON BM V 40P M 2.54 103308B
1312	4822 267 10574	CON BM V 8P 2.50
1313	3141 010 30070	MICRO-SHUNT V 2P M 2.54
1320	3141 010 30300	CON BM CINCH V 3P F GNBURD
1322	3141 010 30250	CON S-VEDIO AND CVBS
1323	3141 010 30310	CON BM CINCH V 3P F WHRDBK B
1324	3141 010 30080	RCA-108
1325	4822 276 13114	SWITCH, PUSH BUTTON

CAPACITORS

2301	5322 122 32531	100PF 5%NP0 50V
2303	4822 126 14585	100NF 10% X7R 0805 50V
2306	5322 122 32531	100PF 5%NP0 50V
2307	5322 122 32531	100PF 5%NP0 50V
2308	5322 122 32531	100PF 5%NP0 50V
2309	5322 122 32531	100PF 5%NP0 50V
2310	5322 122 32531	100PF 5%NP0 50V
2311	4822 126 14585	100NF 10% X7R 0805 50V
2312	4822 126 14585	100NF 10% X7R 0805 50V
2313	2020 012 93504	ELCAP KA 16V S 100U PM20 A
2314	4822 126 14585	100NF 10% X7R 0805 50V
2315	4822 126 14585	100NF 10% X7R 0805 50V
2316	4822 124 23624	47UF20% 16V
2317	4822 126 14585	100NF 10% X7R 0805 50V
2318	4822 124 23624	47UF20% 16V
2319	4822 126 14585	100NF 10% X7R 0805 50V
2320	4822 126 14585	100NF 10% X7R 0805 50V
2322	4822 126 14585	100NF 10% X7R 0805 50V
2324	4822 126 14585	100NF 10% X7R 0805 50V
2325	4822 126 14585	100NF 10% X7R 0805 50V
2326	4822 124 23624	47UF20% 16V
2327	4822 126 14585	100NF 10% X7R 0805 50V
2328	4822 124 23624	47UF20% 16V
2331	4822 126 14585	100NF 10% X7R 0805 50V
2333	4822 126 14585	100NF 10% X7R 0805 50V
2336	4822 126 14585	100NF 10% X7R 0805 50V
2337	4822 124 40207	100UF20% 25V
2339	5322 122 32531	100PF 5%NP0 50V
2340	5322 122 32531	100PF 5%NP0 50V
2341	5322 122 32531	100PF 5%NP0 50V
2342	5322 122 32531	100PF 5%NP0 50V
2343	5322 122 32531	100PF 5%NP0 50V
2344	5322 122 32531	100PF 5%NP0 50V
2345	5322 122 32531	100PF 5%NP0 50V
2346	5322 122 32531	100PF 5%NP0 50V

2347	4822 126 14585	100NF 10% X7R 0805 50V
2348	4822 124 40207	100UF20% 25V
2349	4822 126 14585	100NF 10% X7R 0805 50V
2350	4822 126 13486	15PF 2% NP0 63V
2351	4822 126 14585	100NF 10% X7R 0805 50V
2355	4822 126 14585	100NF 10% X7R 0805 50V
2356	4822 126 14585	100NF 10% X7R 0805 50V
2357	4822 126 14585	100NF 10% X7R 0805 50V
2358	5322 122 32658	22PF 5% 50V
2359	5322 122 32658	22PF 5% 50V
2361	2020 012 93504	ELCAP KA 16V S 100U PM20 A
2362	4822 124 23624	47UF20% 16V
2363	2020 012 93505	ELCAP KA 25V S 10U PM20 A
2364	4822 126 13473	220NF80-20% 50V
2365	5322 122 32658	22PF 5% 50V
2366	4822 126 14585	100NF 10% X7R 0805 50V
2367	5322 122 32659	33PF 5% 50V
2368	4822 126 14585	100NF 10% X7R 0805 50V
2369	4822 124 81136	100U 25V
2370	2222 580 19809	CER2 0805 Y5V 50V 47N COL R
2371	4822 126 14585	100NF 10% X7R 0805 50V
2373	4822 126 14585	100NF 10% X7R 0805 50V
2375	4822 124 23624	47UF20% 16V
2376	4822 124 23624	47UF20% 16V
2378	4822 126 14585	100NF 10% X7R 0805 50V
2379	4822 126 14585	100NF 10% X7R 0805 50V
2380	4822 126 14585	100NF 10% X7R 0805 50V
2381	4822 126 14585	100NF 10% X7R 0805 50V
2382	4822 126 14585	100NF 10% X7R 0805 50V
2385	4822 126 14585	100NF 10% X7R 0805 50V
2386	4822 126 14585	100NF 10% X7R 0805 50V
2388	4822 124 11947	10UF 20% 16V
2389	4822 124 11947	10UF 20% 16V
2390	4822 124 11946	22UF 20% 16V
2391	4822 124 40433	47UF20% 25V
2392	4822 124 40433	47UF20% 25V
2393	4822 126 14585	100NF 10% X7R 0805 50V
2394	4822 126 14585	100NF 10% X7R 0805 50V
2395	4822 124 81108	0,47UF20% 50V
2398	4822 124 81108	0,47UF20% 50V
2401	4822 126 14585	100NF 10% X7R 0805 50V
2403	4822 124 81286	47UF20% 16V
2404	4822 126 14585	100NF 10% X7R 0805 50V
2406	4822 124 81108	0,47UF20% 50V
2411	4822 126 14585	100NF 10% X7R 0805 50V
2412	5322 122 32658	22PF 5% 50V
2413	4822 124 40196	220UF20% 16V
2414	4822 126 14585	100NF 10% X7R 0805 50V
2415	4822 126 14585	100NF 10% X7R 0805 50V
2416	4822 126 14585	100NF 10% X7R 0805 50V
2418	2222 586 15713	CER2 0805 X7R 50V 180P PM20 R
2419	2222 586 15713	CER2 0805 X7R 50V 180P PM20 R
2420	4822 126 14585	100NF 10% X7R 0805 50V
2421	5322 122 32658	22PF 5% 50V
2422	4822 124 40196	220UF20% 16V
2423	4822 124 23624	47UF20% 16V

2424	2222 586 15713	CER2 0805 X7R 50V 180P PM20 R
2425	2222 586 15713	CER2 0805 X7R 50V 180P PM20 R
2426	5322 122 32658	22PF 5% 50V
2427	4822 124 40196	220UF20% 16V
2428	4822 126 14585	100NF 10% X7R 0805 50V
2429	4822 126 14585	100NF 10% X7R 0805 50V
2431	2222 586 15713	CER2 0805 X7R 50V 180P PM20 R
2432	2222 586 15713	CER2 0805 X7R 50V 180P PM20 R
2434	2020 012 93504	ELCAP KA 16V S 100U PM20 A
2435	5322 122 33861	120PF10% 50V
2436	2020 012 93505	ELCAP KA 25V S 10U PM20 A
2437	2020 012 93505	ELCAP KA 25V S 10U PM20 A
2438	4822 122 32614	CER2 0805 X7R 63V 1N2 PM10 R
2440	2020 012 93505	ELCAP KA 25V S 10U PM20 A
2441	5322 122 33861	120PF10% 50V
2442	2020 012 93505	ELCAP KA 25V S 10U PM20 A
2443	4822 122 32614	CER2 0805 X7R 63V 1N2 PM10 R
2445	4822 126 14585	100NF 10% X7R 0805 50V
2455	4822 126 14585	100NF 10% X7R 0805 50V
2464	4822 126 14585	100NF 10% X7R 0805 50V
2466	5322 122 32531	100PF 5%NP0 50V
2467	5322 122 32658	22PF 5% 50V

RESISTORS

3301	4822 117 10833	10K 1% 0,1W
3302	4822 117 11507	6K8 1% 0,1W
3303	4822 117 10833	10K 1% 0,1W
3304	4822 117 11507	6K8 1% 0,1W
3305	4822 051 20339	33R00 5% 0,1W
3309	4822 051 20008	0R00 JUMP. (0805)
3311	4822 051 20474	470K00 5% 0,1W
3312	4822 117 10833	10K 1% 0,1W
3313	4822 117 10833	10K 1% 0,1W
3314	4822 051 20102	1K00 5% 0,1W
3315	4822 117 13577	330R 1% RC12H 0805 1,25W
3316	4822 051 20919	91R00 5% 0,1W
3317	4822 117 12521	68R 1% 0,1W
3318	4822 051 20102	1K00 5% 0,1W
3319	2120 108 94042	RST NETW SM RAC16 4X22R PM5 R
3320	2120 108 94042	RST NETW SM RAC16 4X22R PM5 R
3324	4822 117 10837	100K 1% 0,1W
3325	4822 117 10837	100K 1% 0,1W
3326	4822 051 20478	4R70 5% 0,1W
3331	4822 117 10833	10K 1% 0,1W
3332	4822 051 20339	33R00 5% 0,1W
3334	4822 051 20008	0R00 JUMP. (0805)
3335	4822 051 20008	0R00 JUMP. (0805)
3336	4822 051 20339	33R00 5% 0,1W
3339	4822 051 20102	1K00 5% 0,1W
3340	4822 051 20102	1K00 5% 0,1W
3346	4822 051 20109	10R00 5% 0,1W
3348	4822 051 20109	10R00 5% 0,1W
3349	4822 117 10833	10K 1% 0,1W
3350	4822 051 20562	5K6 5% 0,1W 0805
3351	4822 051 20472	4K70 5% 0,1W

Spare parts list DVD730K/781

3352	4822 051 20472	4K70	5%	0,1W
3354	4822 117 10833	10K	1%	0,1W
3360	4822 051 20472	4K70	5%	0,1W
3362	4822 051 20472	4K70	5%	0,1W
3363	4822 051 20102	1K00	5%	0,1W
3364	4822 051 20472	4K70	5%	0,1W
3365	4822 051 20472	4K70	5%	0,1W
3366	4822 051 20472	4K70	5%	0,1W
3367	4822 051 20008	0R00	JUMP. (0805)	
3370	4822 051 20008	0R00	JUMP. (0805)	
3372	4822 051 20008	0R00	JUMP. (0805)	
3373	4822 117 13577	330R	1% RC12H 0805	1,25W
3374	4822 051 20101	100R00	5%	0,1W
3375	4822 117 10833	10K	1%	0,1W
3376	4822 117 10833	10K	1%	0,1W
3377	4822 051 20109	10R00	5%	0,1W
3381	4822 116 52188	27E	5%	0,5W
3382	4822 051 20102	1K00	5%	0,1W
3383	4822 051 20339	33R00	5%	0,1W
3387	4822 051 20101	100R00	5%	0,1W
3388	4822 051 20101	100R00	5%	0,1W
3389	4822 117 11448	180R	1%	0,1W
3390	2120 108 94042	RST NETW SM RAC16	4X22R	PM5 R
3391	2120 108 94042	RST NETW SM RAC16	4X22R	PM5 R
3393	2120 108 94042	RST NETW SM RAC16	4X22R	PM5 R
3400	2120 108 94049	RST NETW SM RAC16	4X4K7	PM5 R
3401	4822 051 20472	4K70	5%	0,1W
3402	2120 108 94025	RST NETW SM RAC16	4X100R	PM5 R
3407	4822 051 20472	4K70	5%	0,1W
3408	4822 051 20105	1M00	5%	0,1W
3409	4822 051 20202	2K00	5%	0,1W
3410	4822 051 20202	2K00	5%	0,1W
3411	4822 117 11449	2K2	5% 0,1W	0805
3412	4822 117 11503	220R	1%	0,1W
3413	4822 117 11503	220R	1%	0,1W
3414	4822 116 83933	15K	1%	0,1W
3416	4822 117 10353	150R	1%	0,1W
3418	4822 051 20474	470K00	5%	0,1W
3420	4822 051 20472	4K70	5%	0,1W
3433	4822 051 20102	1K00	5%	0,1W
3434	4822 051 20102	1K00	5%	0,1W
3438	4822 117 13528	200R	1% 0,125W	0805
3440	4822 117 11927	75R	1%	0,1W
3441	4822 117 10837	100K	1%	0,1W
3443	4822 117 11927	75R	1%	0,1W
3444	4822 117 10837	100K	1%	0,1W
3448	4822 117 11927	75R	1%	0,1W
3449	4822 117 10837	100K	1%	0,1W
3450	4822 117 10833	10K	1%	0,1W
3451	4822 117 10965	18K	1%	0,1W
3452	4822 051 20471	470R00	5%	0,1W
3453	4822 117 10833	10K	1%	0,1W
3454	4822 051 20392	3K90	5%	0,1W
3455	4822 051 20561	560R00	5%	0,1W
3456	4822 117 10833	10K	1%	0,1W
3457	4822 051 20202	2K00	5%	0,1W

3458	4822 117 10833	10K	1%	0,1W
3459	4822 117 10965	18K	1%	0,1W
3460	4822 117 10833	10K	1%	0,1W
3461	4822 051 20392	3K90	5%	0,1W
3462	4822 051 20561	560R00	5%	0,1W
3463	4822 051 20202	2K00	5%	0,1W
3464	4822 117 10362	7K5	1%	0,1W
3465	4822 117 10833	10K	1%	0,1W
3466	4822 051 20223	22K00	5%	0,1W
3488	2120 108 94027	RST NETW SM RAC16	4X10K	PM5 R
3489	4822 117 10837	100K	1%	0,1W
3490	2120 108 94025	RST NETW SM RAC16	4X100R	PM5 R
3491	2120 108 94025	RST NETW SM RAC16	4X100R	PM5 R
3492	2120 108 94027	RST NETW SM RAC16	4X10K	PM5 R
3494	2120 108 94042	RST NETW SM RAC16	4X22R	PM5 R
3495	4822 117 10837	100K	1%	0,1W
3496	4822 051 20101	100R00	5%	0,1W
3498	2120 108 94027	RST NETW SM RAC16	4X10K	PM5 R
3499	2120 108 94049	RST NETW SM RAC16	4X4K7	PM5 R
3500	4822 051 20472	4K70	5%	0,1W
3501	2120 108 94042	RST NETW SM RAC16	4X22R	PM5 R
3502	2120 108 94042	RST NETW SM RAC16	4X22R	PM5 R
3503	4822 117 10834	47K	1%	0,1W

COILS & CRYSTAL QUARTZ

5302	8241 010 40420	LEADED FERRITE BEADS	
5303	8241 010 40420	LEADED FERRITE BEADS	
5304	8241 010 40420	LEADED FERRITE BEADS	
5305	8241 010 40420	LEADED FERRITE BEADS	
5306	8241 010 40420	LEADED FERRITE BEADS	
5307	8241 010 40420	LEADED FERRITE BEADS	
5308	8241 010 40420	LEADED FERRITE BEADS	
5309	8241 010 40420	LEADED FERRITE BEADS	
5310	8241 010 40420	LEADED FERRITE BEADS	
5311	8241 010 40420	LEADED FERRITE BEADS	
5314	4822 157 11868	2.7UH 5%	
5315	2422 535 94163	IND FXD LAL02 A	1U8 PM5 T
5316	2422 535 94163	IND FXD LAL02 A	1U8 PM5 T
5317	2422 535 94163	IND FXD LAL02 A	1U8 PM5 T
5318	3141 018 80340	CRYSTAL QUARTZ	12.5 MHZ
5319	4822 242 10906	27.000 000 MHZ	

DIODES

6302	4822 130 31981	BZX79-B3V9	
6303	4822 130 30621	1N4148	
6305	4822 130 30621	1N4148	
6306	4822 130 30621	1N4148	
6307	4822 130 30621	1N4148	
6308	4822 130 30621	1N4148	
6309	4822 130 30621	1N4148	
6310	4822 130 30621	1N4148	
6311	4822 130 30621	1N4148	

6312	4822 130 30621	1N4148	
6313	4822 130 30621	1N4148	

TRANSISTORS & INTEGRATED CIRCUITS

7301	5322 130 40217	2N3904	
7302	3141 018 50970	TRA SIG C9014	T
7303	3141 018 50970	TRA SIG C9014	T
7304	3141 018 50960	TRA SIG C9013	T
7313	3141 018 50980	TRA SIG C9015	T
7314	3141 018 50970	TRA SIG C9014	T
7315	3141 018 50970	TRA SIG C9014	T
7316	3141 018 50980	TRA SIG C9015	T
7321	8241 010 45120	IC SMD NJM4560	
7322	5322 209 11517	PC74HCU04T	
7325	3141 018 51060	IC SM AT24C01A	
7327	3141 017 40210	IC SM ZR36703	PROG DVD730K/781
7328	3141 018 51140	IC SM ZR36712	
7329	3141 018 51010	IC SM KM416S1020	BT
7331	3141 018 51050	IC SM CS4340	
7332	3141 018 51030	IC SM AV3168	
7333	8241 010 45120	IC SMD NJM4560	
7336	3141 018 50260	BA033T	

FRONT BOARD 3141 018 02510

MISCELLANOUS

1400	3141 018 80310	VFD 14-ST-18GAK	
1403	4822 265 30735	5 PINS	
1411	4822 276 13114	SWITCH, PUSH BUTTON	
1412	4822 276 13114	SWITCH, PUSH BUTTON	
1413	4822 276 13114	SWITCH, PUSH BUTTON	
1414	4822 276 13114	SWITCH, PUSH BUTTON	
1415	4822 276 13114	SWITCH, PUSH BUTTON	
1416	4822 276 13114	SWITCH, PUSH BUTTON	
1417	4822 276 13114	SWITCH, PUSH BUTTON	
1421	4822 265 30735	5 PINS	
8401	3141 010 20890	CWAS 05PH/05OP 180 5 WH	26S
8402	3141 010 20860	CWAS XH5P/050P 170 5	26S

CAPACITORS

2401	4822 122 10183	100PF 5%	50V
2402	4822 124 40433	47UF20%	25V

Spare parts list DVD730K/781

2403	4822 122 10183	100PF 5% 50V
2404	4822 126 12882	100NF+80-20% 50V
2407	4822 126 12882	100NF+80-20% 50V
2416	4822 124 40433	47UF20% 25V

RESISTORS

3400	4822 116 83883	470R 5% 0,5W
3401	4822 050 21003	10K00 1% 0,6W
3402	4822 050 21003	10K00 1% 0,6W
3403	4822 050 21003	10K00 1% 0,6W
3404	4822 050 21003	10K00 1% 0,6W
3405	4822 050 21002	1K00 1% 0,6W
3406	4822 050 21003	10K00 1% 0,6W
3407	4822 116 52195	47E 5% 0,5W
3408	4822 116 52283	4K7 5% 0,5W
3409	4822 116 52283	4K7 5% 0,5W
3410	4822 116 52283	4K7 5% 0,5W
3411	4822 116 52283	4K7 5% 0,5W
3412	4822 116 83884	47K 5% 0,5W
3423	4822 050 21002	1K00 1% 0,6W
△3424	4822 052 10478	4R70 5% 0,33W
3430	4822 116 52175	100E 5% 0,5W
3431	4822 116 52175	100E 5% 0,5W
3432	4822 116 52175	100E 5% 0,5W

DIODES

6400	4822 130 30621	1N4148
6401	4822 130 30621	1N4148
6402	4822 130 31253	BZX79-C2V4
6413	4822 130 34398	BZX79-B24
6420	4822 130 82978	LTL-16KPE-P

TRANSISTORS & INTEGRATED CIRCUITS

7400	3141 018 50700	IC VFDDRIVER PT6311
7401	8241 010 45320	HEG836-16GP

MIC BOARD 3141 018 02280

MISCELLANEOUS

1201	4822 267 10573	CON BM H 8P 2.50
1203	4822 267 31453	CONNECTOR, CABLE/WIRE
1204	2422 026 04309	SOC PHONE H 1P F 6.3 ST B
1205	2422 026 04309	SOC PHONE H 1P F 6.3 ST B

CAPACITORS

2201	2222 580 15623	1NF 10% X7R 50V 0805
2202	5322 122 32531	100PF 5%NP0 50V
2203	4822 126 14585	100NF 10% X7R 0805 50V
2204	4822 126 14585	100NF 10% X7R 0805 50V
2205	5322 122 32531	100PF 5%NP0 50V
2207	2222 580 15623	1NF 10% X7R 50V 0805
2208	5322 122 32531	100PF 5%NP0 50V
2209	5322 122 32531	100PF 5%NP0 50V
2211	4822 124 23057	4,7UF 20% 50V
2212	4822 126 14124	220PF 2%
2213	2222 580 15623	1NF 10% X7R 50V 0805
2214	4822 126 14585	100NF 10% X7R 0805 50V
2215	4822 126 14585	100NF 10% X7R 0805 50V
2216	4822 122 33891	3,3NF10%X7R 63V
2217	5322 122 34098	10NF10%X7R 63V
2218	4822 124 40248	10UF20% 63V
2219	4822 124 23057	4,7UF 20% 50V
2221	4822 126 14585	100NF 10% X7R 0805 50V
2222	4822 124 40433	47UF20% 25V
2223	4822 126 14585	100NF 10% X7R 0805 50V
2224	4822 126 14585	100NF 10% X7R 0805 50V
2225	4822 124 40433	47UF20% 25V
2226	4822 124 40248	10UF20% 63V
2227	4822 126 14585	100NF 10% X7R 0805 50V
2228	4822 126 14585	100NF 10% X7R 0805 50V
2229	5322 126 10465	3,9NF 10% X7R 50V 0805 CER2
2230	4822 122 33926	12PF 50V
2231	4822 126 14585	100NF 10% X7R 0805 50V
2232	4822 126 14585	100NF 10% X7R 0805 50V
2233	4822 126 14585	100NF 10% X7R 0805 50V

2234	2222 580 15623	1NF 10% X7R 50V 0805
2237	4822 122 33926	12PF 50V
2238	4822 126 14585	100NF 10% X7R 0805 50V
2239	2222 580 15623	1NF 10% X7R 50V 0805
2240	5322 122 34098	10NF10%X7R 63V
2241	2222 580 15623	1NF 10% X7R 50V 0805
2242	2222 580 15623	1NF 10% X7R 50V 0805
2243	2222 580 15623	1NF 10% X7R 50V 0805

RESISTORS

3201	4822 051 20472	4K70 5% 0,1W
3202	4822 051 20472	4K70 5% 0,1W
3203	4822 051 20102	1K00 5% 0,1W
3204	4822 051 20561	560R00 5% 0,1W
3205	4822 117 10837	100K 1% 0,1W
3206	4822 051 20561	560R00 5% 0,1W
3207	4822 117 10837	100K 1% 0,1W
3208	4822 051 20102	1K00 5% 0,1W
3209	4822 051 20561	560R00 5% 0,1W
3211	4822 117 12955	2K7 1% 0,1W 0805
3212	4822 051 20561	560R00 5% 0,1W
3213	4822 116 83933	15K 1% 0,1W
3214	4822 117 10833	10K 1% 0,1W
3215	4822 051 20562	5K6 5% 0,1W 0805
3216	4822 117 10833	10K 1% 0,1W
3217	4822 051 20109	10R00 5% 0,1W
3218	4822 051 20109	10R00 5% 0,1W
3220	4822 117 10833	10K 1% 0,1W
3221	4822 051 20683	68K00 5% 0,1W
3222	4822 117 10833	10K 1% 0,1W
3223	4822 117 10833	10K 1% 0,1W
3224	4822 051 20332	3K30 5% 0,1W
3226	4822 051 20109	10R00 5% 0,1W
3227	4822 051 20109	10R00 5% 0,1W
3228	4822 051 20229	22R00 5% 0,1W
3229	4822 051 20479	47R00 5% 0,1W
3231	4822 117 11507	6K8 1% 0,1W
3233	4822 051 20332	3K30 5% 0,1W
3234	4822 051 20229	22R00 5% 0,1W
3235	4822 051 20479	47R00 5% 0,1W
3236	4822 051 20561	560R00 5% 0,1W
3245	4822 117 11507	6K8 1% 0,1W
3251	4822 051 20561	560R00 5% 0,1W
3261	3141 010 60170	POTM CAR LOG 10K H AR09711B B

Spare parts list DVD730K/781

3262 3141 010 60170 POTM CAR LOG 10K H AR09711B B
3263 3141 010 60180 POTM CAR LOG 10K H AR09712B B

COILS & CRYSTAL QUARTZ

5201 4822 157 11235 22UH LANO2TB220J PM5 A
5202 4822 157 11235 22UH LANO2TB220J PM5 A

TRANSISTORS & INTEGRATED CIRCUITS

4201 5322 130 60159 BC846B
4202 5322 130 60159 BC846B
7201 8241 010 45120 IC SMD NJM4560
7202 4822 209 62059 TCA0372DP1
7204 4822 209 17186 PT2399

DVD Video Player
Owner's Manual



Let's make things better.



PHILIPS

Introduction

Entertainment for new millennium	4
Introduction	4
Unpacking	5
Placement	5

Functional overview

Front panel	6
Rear panel	7
Display	8
Remote control	9

Connection

General explanation	10
Video connection	10
Audio connection	11

General operation

Connecting the power supply.....	12
Turning on the power	12
Loading discs	12
Option between component video and S-Video	12
Remote control battery installation	12
Remote control operation	12

Playing a DVD-video disc

Video control during playback	13
Audio control during playback.....	13
Playing title/chapter.....	14
Special DVD features	15
Favorite Track Selection (DVD).....	15

Playing a SuperVCD/VCD/CD disc

Video control during playback	16
Audio control during playback.....	16
Playing title/track.....	17-19
Video control.....	19
Favorite Track Selection (SVCD,VCD,CD).....	19

KARAOKE

General operation of karaoke function.....	20
--	----

Setup menu

Enter the setup menu	21
The way of operations.....	21
OSD language.....	21
Subtitle language.....	21
Audio language.....	21
DVD menu language.....	22
On-Screen-Display	22
Factory default.....	22
Screen size.....	23
TV system.....	23
Audio output.....	23
Password.....	24
Parental control.....	24
Disc lock.....	25

Disc maintains

Disc maintains	26
----------------------	----

Environmental information

Environmental information	26
---------------------------------	----

Before requesting service

Before requesting service	27
---------------------------------	----

Australia Warranty

Australia Warrasnty.....	28
--------------------------	----

New Zealand Warranty

New Zealand Warranty.....	29
---------------------------	----

Specifications

Specifications	30
----------------------	----

Entertainment for the new millennium

Video was never like this before! Digital video discs provide perfect digital, studio-quality pictures; three dimensional digital, multi-channel audio; story sequences screened from your choice of camera angle; sound tracks in as many as eight languages; and up to 32 subtitles (if available on disc). Whether you watch DVD-Video on wide-screen or regular TV, you always see it the way it was meant to be.

Digital video

DVD-Video uses state-of-the-art MPEG2 data compression technology to register an entire movie on a single 5-inch disc. DVD's variable bitrate compression, running at up to 9.8 Mbits/second, captures even the most complex pictures in their original quality.

The crystal-clear digital pictures have a horizontal resolution of over 500 lines, with 720 pixels (picture elements) to each line. This resolution is more than double that of VHS, superior to Laser Disc, and entirely comparable with digital masters made in recording studios.

DVD-Video discs conform to either the PAL or NTSC video standard.

This player can play both PAL and NTSC discs, presenting them in the best possible way on your multi-standard TV screen.

As the universal video system of the future, DVD-Video offers optimal pictures on any TV screen.

Introduction

Your Philips DVD-Video player will play digital video discs conforming to the universal DVD-Video standard. With it, you will be able to enjoy full-length movies with true cinema picture quality, as well as stereo or multi-channel sound (depending on the disc and your playback setup).


The unique features of DVD-Video, such as selection of sound track, subtitle languages and different camera angles (again depending on the disc), are all included. What's more, Philips Child Lock lets you decide which discs your children will be able to see. You will find the On-Screen Display, player display, and remote control make the player easy to use. This manual provides all the information you will need, so read on!




DVD-Video

You will recognize DVD-Video discs by the logo shown on left.

Depending on the material on the disc (a movie, video clips, a drama series, etc.) the disc may have one or more Titles. Each title may have one or more chapters. To make playback easy and convenient, your player lets you select titles and playback chapters.

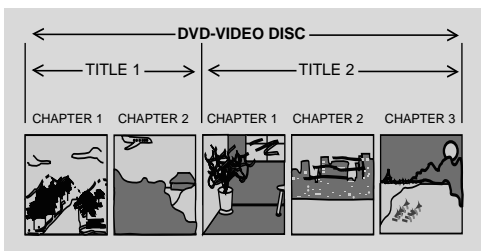

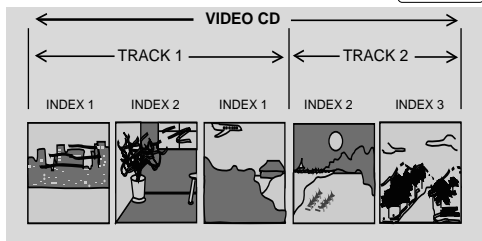

Video CD

You will recognize Video CDs by the logo shown on left.

Depending on the material on the disc (a movie, video clips, a drama series, ect) the disc may have one or many tracks. Tracks may have one or more indexes, as indicated on the disc case. To make playback easy and convenient, your player lets you select tracks and indexes.

Some Video CDs have Play Back Control (PBC), which is a predefined playback sequence stored on the disc.



Super VCD

Super VCD discs are based on the super VCD 1.0 Standard, referring to the Standard of the Information Industry Department of the People's Republic of China.



Audio CD

Audio CDs contain music tracks only.

You will recognize Audio CDs by their logo which is shown on left.

You can play them in conventional style through a stereo system, using the keys on the remote control and/or front panel, or via the TV using the On-Screen Display (OSD).

You can play audio CDs using the OSD or, through a stereo system only, using keys on the remote control and/or front panel.

Unpacking

First check and identify the contents of your DVD-Video player package.


You should have the following items.

- DVD-Video player
- Remote Control with batteries
- Audio/video cable
- AC cord
- Instructions for use

If any item is damaged or missing, contact your retailer or Philips.

Keep the packaging materials; you may need them to transport your player in the future.


Placement

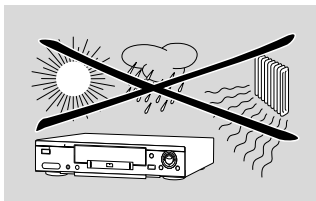


- Place the player on a firm, flat surface.
- Keep the player away from domestic heating equipment and direct sunlight.
- In a cabinet, allow about 2.5cm (1 inch) of free space all around the player for adequate ventilation.
- The lens may cloud over when the DVD-Video player is suddenly moved from cold to warm surroundings. Playing a CD/DVD is not possible then. Leave the DVD-Video player in a warm environment until the moisture evaporates.
- To view the typeplate, please refer to the bottom of the player.

Functional overview

Front panel

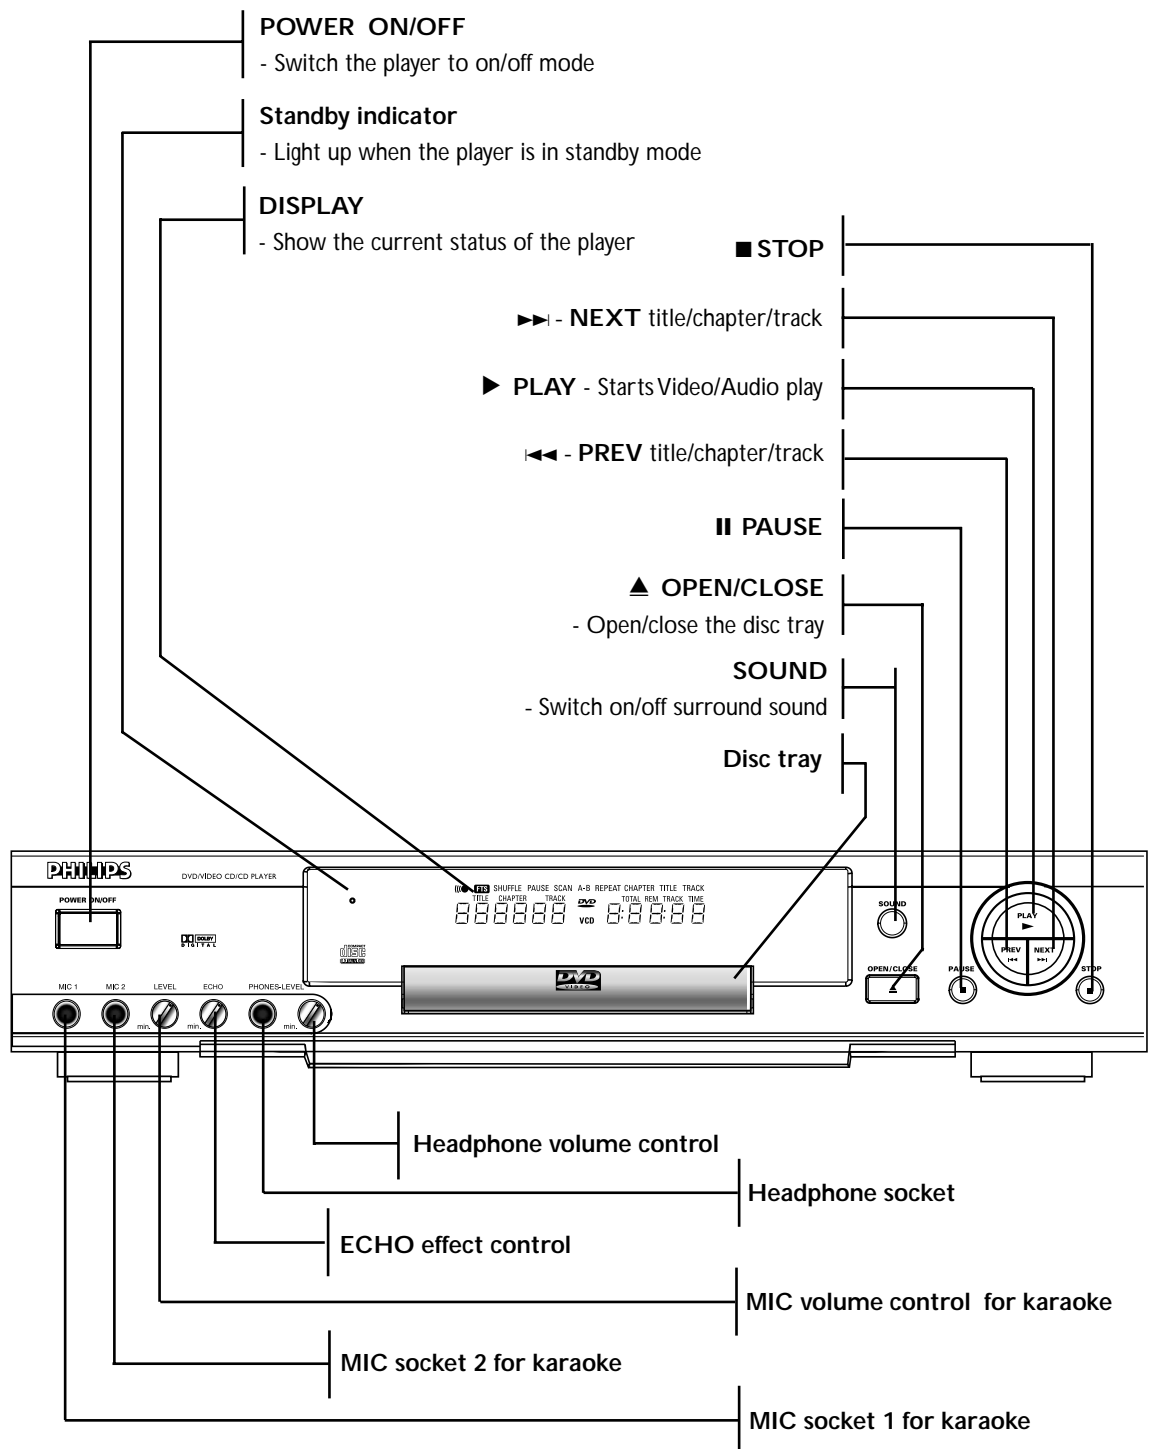

Rear panel

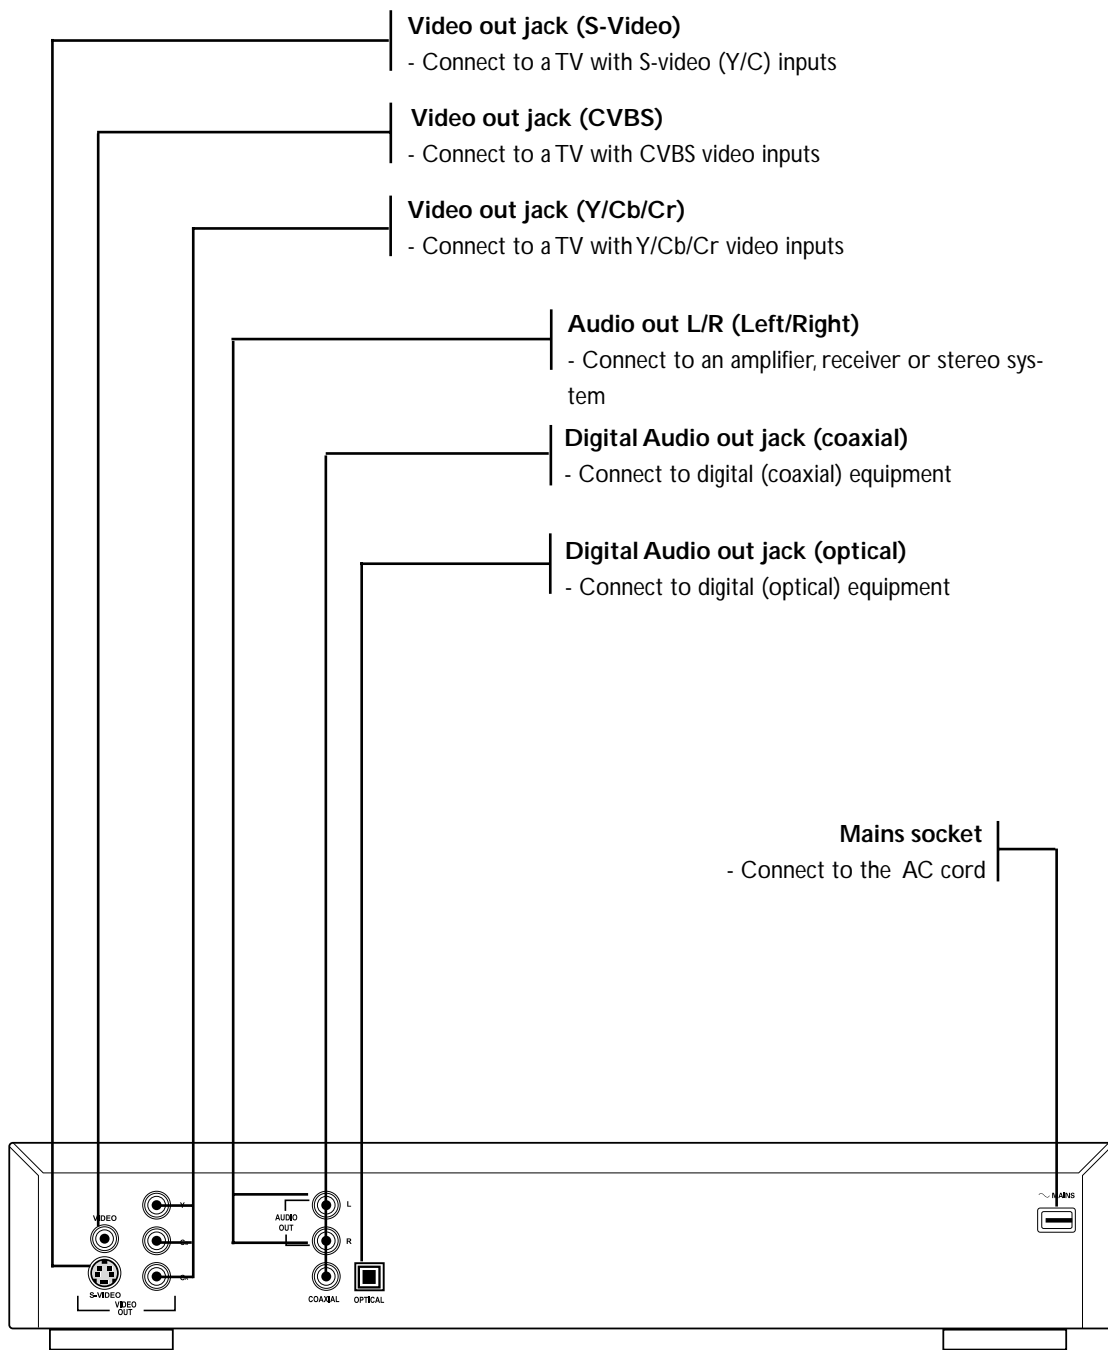


CAUTION:

- Do not touch the inner pins of the jacks on the rear panel connectors, Electrostatic discharge may cause permanent damage to the unit.


Functional overview

Display

- 1 Favorite Track Selection
- 2 Play/Pause
- 3 Repeat A-B/Chapter/Title/Track
- 4 Time in hours, minutes and seconds
- 5 (V)CD disc indicator
- 6 DVD disc indicator
- 7 The number of DVD chapters or (V)CD tracks
- 8 The number of DVD titles

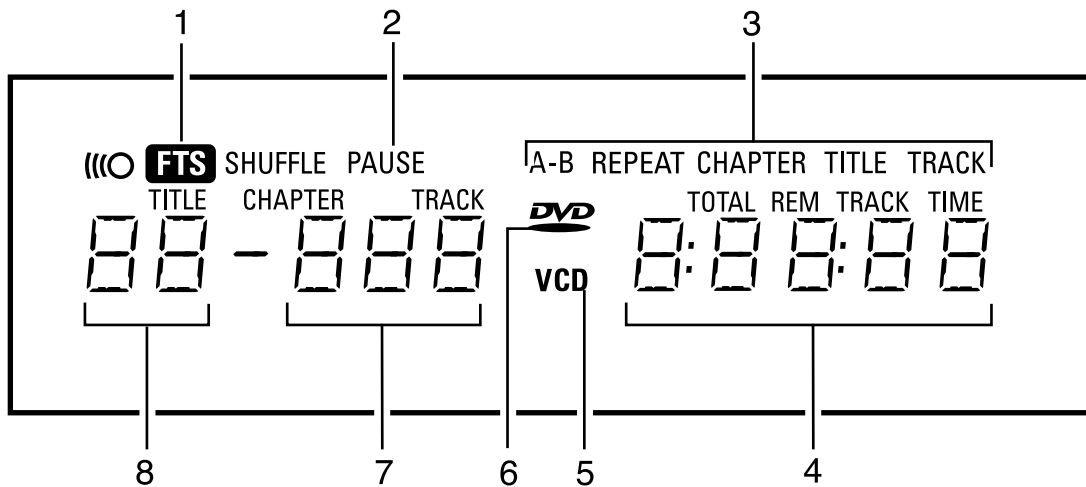

Remote control

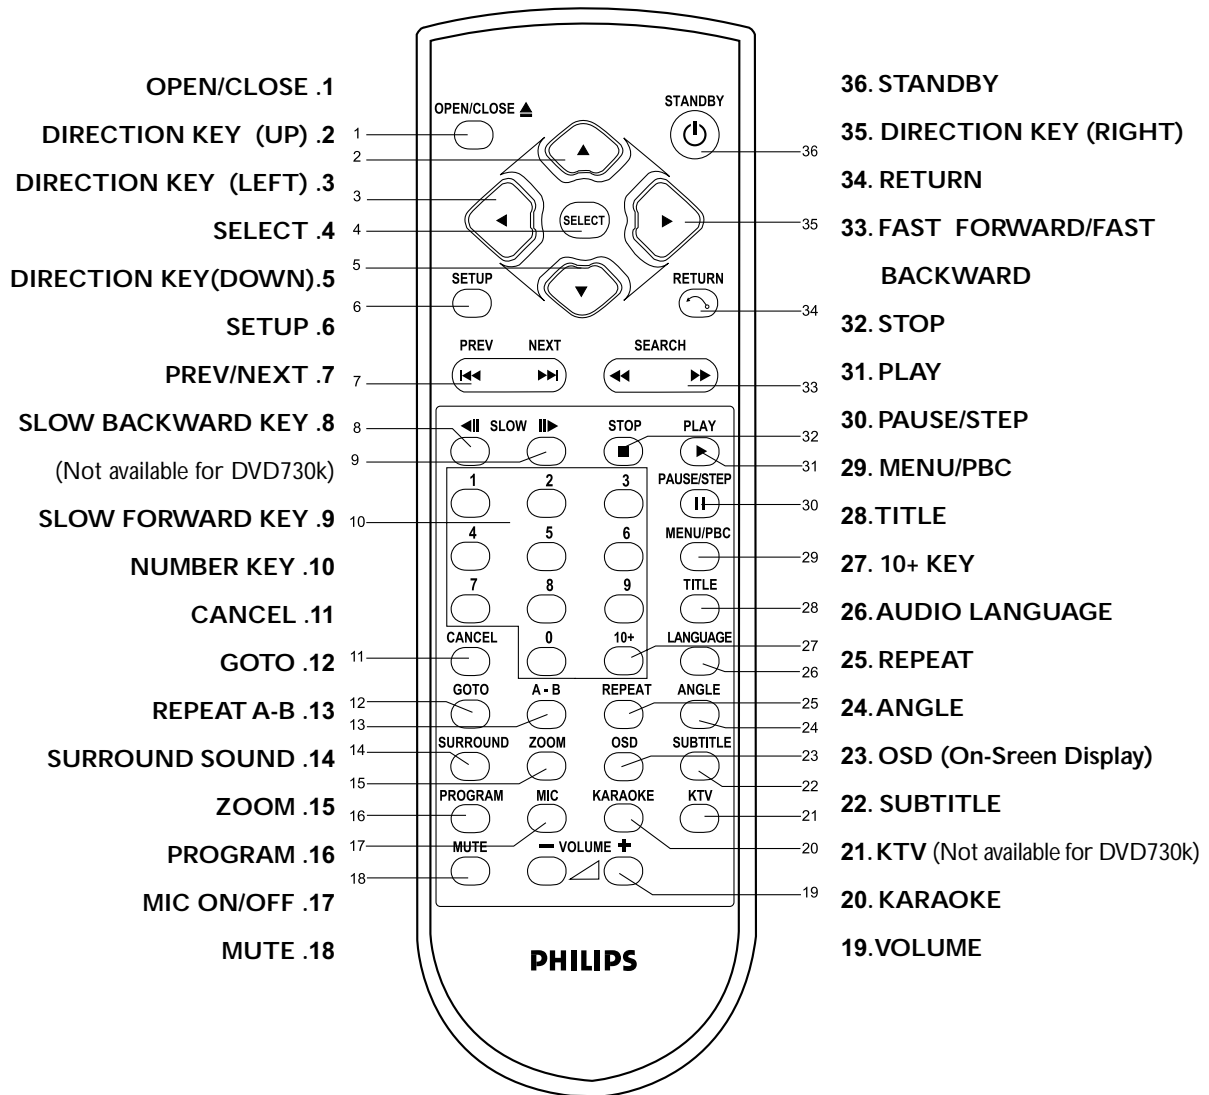

NOTE :


- The usage of the key **SETUP(6)** and **RETURN(34)**, please refer to chapter [Setup Menu].
- The usage of the key **CANCEL(11)** please refer to chapter [Favorite Track Selection (DVD)/(SVCD,VCD,CD)].
- The other keys are used for general operation, please see the chapter [Playing a DVD-video disc] and [Playing a SuperVCD/VCD/CD disc] for details.

General explanation

- Depending on the TV and other equipment you want to connect, you could connect the player by various ways. Possible connections are shown in the following drawings.
- Please refer to the manuals of your TV, VCR, Stereo System or other devices to make the best.
- For better sound reproduction, connect the player's audio out jacks to the audio in jacks of your amplifier, receiver, stereo or A/V equipment. See [Audio Connection].

Caution:


- Do not connect the player's audio out jack to the PHONO IN jack of your audio system.
- Do not connect your DVD player to the TV via your VCR. The DVD image could be distorted by the copy protection system.

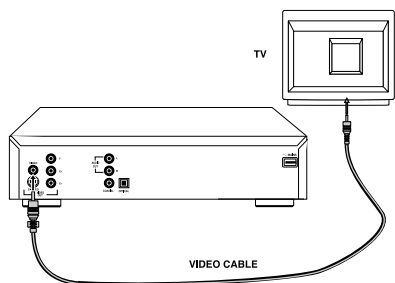

Video connection


Video CVBS connection

- CVBS video output is the most common video format. It combines brightness signal and chroma signal together by using only one cable for output. Plugs of the cable are both in yellow.
- Connect the (CVBS) VIDEO OUT jack on the DVD player to the video in jack on the TV using the video cable supplied.

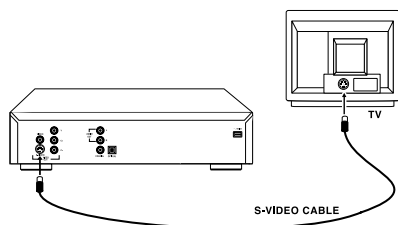

S-Video connection.

- S-video output is a video output that refers to two separated signals, brightness signal and chroma signal. The advantage of this connection is by reproducing a high quality picture.
- Connect the S-Video OUT jack on the rear of the player to the S-Video in jack on the TV using an optional S-Video cable (not supplied).

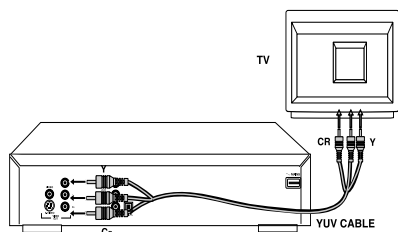


Component video connection (Y/CB/CR)

- Component video of Y/CB/CR format includes three types of signals, they are Y; C_{BLUE}; C_{RED}.
- Connect the Y/CB/CR OUT jack on the rear of the player to the corresponding in jacks on the TV using the component video cable (not supplied).

Caution:

- Do not connect the component video and S-Video connection to the TV at the same time (see the chapter [Option between component video and S-Video] for details).

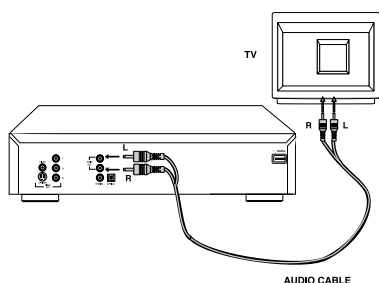


Audio connection

Connect Audio output to TV

- Use the TV speaker for sound reproduction, connect the audio left and right channel sockets on the player rear panel to the corresponding sockets on your TV with the audio cable. (supplied)


Connecting to an A/V receiver equipment

Digital multi-channel connection provides the best sound quality. For this you need a multi-channel receiver that supports one or more of the audio formats supplied by your DVD player (Dolby Digital™, MPEG 2 and DTS). Check the receiver manual and the logos on the front of the receiver.

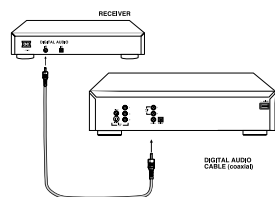

Connect to A/V receiver with digital coaxial cable

- Connect the player's digital coaxial output to the corresponding input on the receiver using the normal audio or video cable which is supplied in the package.
- You might need to set the item [AUDIO] in setup menu for adapting your receiver. Please refer to the chapter [Setup Menu] for details.
- In this case, do not use the player's audio left and right output.

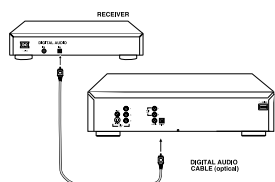

Connect to A/V receiver with digital optical cable



- Connect the player's digital optical output to the corresponding input on the receiver using the digital optical cable (not supplied).
- You might need to set the item [AUDIO] in setup menu for adapting your receiver. Please refer to the chapter [Setup Menu] for details.

NOTE:

- *If the audio format of the digital output does not match the capabilities of your receiver, the sound will be muted.*

Connecting the power supply

1. Plug the female end of the power cable supplied into the Power connector on the rear of the player.
2. Plug the male end of the cord into an AC outlet.

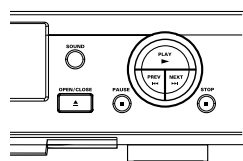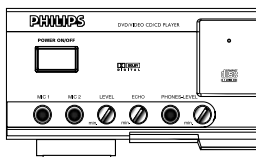

Turning on the power

- Be sure that audio and video output has been well connected to your TV.
- Choose the available AV input connection on your TV set to connect to the DVD player.
- Press the **POWER ON/OFF** button on the front panel to turn on the player.

Loading discs

- Press the **OPEN/CLOSE** button on the front of the player, the disc tray opens.
- Load your chosen disc in the tray with label side up (also when a double sided DVD is inserted). Make sure the disc is placed properly in the correct recess.
- Press **OPEN/CLOSE** button to close the tray, then the disc will be played back automatically.

NOTE:

- If the system of your TV set doesn't accord with that of the DVD player, the picture will not display normally. If so, open the tray and then press the **ZOOM** key to force the system to adapt your TV set. After that you can enjoy DVD.

Option between component video and S-Video

- You can only choose S-Video or Component Video Connection between DVD player and TV set.
- At OPEN mode, press the **SLOW BACKWARD** key, then choose one available setting (please refer to the chapter [Video Connection] at page 10 for details) and meanwhile, "CVBS+ SVIDEO" or "YCbCr" is appeared on screen.
- The DVD player will execute the corresponding setup automatically.

NOTE:

- The simultaneous connection of component video and S-Video is not allowable.

- If the operation cause some image distortion, maybe the video connection doesn't accord with the setting. If so, press the **SLOW BACKWARD** key again to revert.

Remote control battery installation


- Open the battery compartment cover.
- Insert two batteries inside the battery compartment.
- Close the cover.

CAUTION:

- Don't mix old and new batteries. Never mix different types of batteries (standard, alkaline, etc.)

Remote control operation


- Unless especially stated, all operations can be performed by the remote control. Always point the remote control directly at the player, making sure there are no obstructions between the remote and the player.
- Corresponding keys on the front panel of the player can also be used.

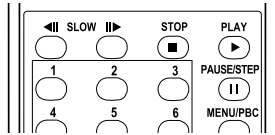

Video control during playback

STOP

- You can resume the play from the point at which you stopped last time if you just press the **STOP** key once. It will start from the beginning if you press the **STOP** key twice to stop playbacking.

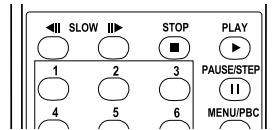

PAUSE/STEP

- To get a still picture, press **PAUSE/STEP** key during playback.
- To step forward to the next frame picture, press **PAUSE/STEP** key again.
- To resume normal playback, press **PLAY** key.

Search

- To search the contents in fast speed, press the **SEARCH** key for fast forward/backward searching.
- Press the **SEARCH** key again to increase the speed for searching.
- Press **PLAY** to return to the normal playback.

Slow Forward

- To get slow motion effect during playback, press **SLOW FORWARD** key.
- Press the **SLOW FORWARD** key again, you can get different playback speeds.
- Press the **PLAY** key to return to the normal playback.

Audio control during playback

Mute


- Press the **MUTE** key to mute the sound output.
- Press the **MUTE** key again to remove the mute.

Volume




- Press the **VOLUME +** or **VOLUME -** to adjust the loudness.

Surround sound

- The DVD player can reproduce virtual surround sound effects. You can press the **SURROUND** key on the remote control or the **SOUND** button on the front panel to switch on/off the surround sound effect.

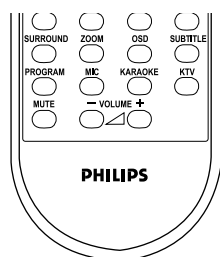

Playing a DVD-video disc

 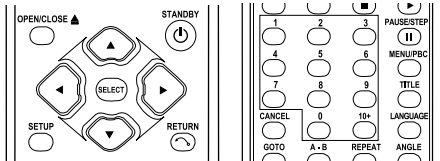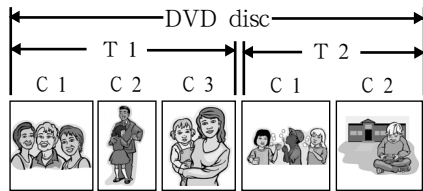

Playing title/chapter

Title & chapter

A DVD disc may have one or more titles, and each title may have one or more chapters. This depends on the contents (a movie, video clips, a drama series, etc) on the disc.

Playing a title

- After you load a disc, information about the contents shown on the screen waiting for your selection. Likewise, you can press the **TITLE** key on the remote control to turn back to the title menu during playback.
- If the items of the menu are numbered, press the appropriate numerical key on the remote control, if not, press the **▲▼◀▶** keys to highlight your selection.
- Press the **SELECT** key to confirm your selection.

Playing a chapter

- While you have selected a title, it may include one or more chapters. To select a chapter is the same as to select a title.
- Any time you want to watch another chapter during playback, then press **MENU/PBC** key to turn back to the chapter menu and choose it again, if not, please press the **PREV/NEXT** key to do it.

REPEAT

You can playback repeatedly a title or a chapter by pressing the **REPEAT** key. Pay attention to the hint on the screen.

- Press the **REPEAT** key once to repeat the current chapter.
- Press the **REPEAT** key again to repeat the current title.
- Press the **REPEAT** key the third time to quit the repeat state.

Repeat A-B

A-B key enables you to choose a certain piece of program to repeat. Pay attention to the hint on the screen.

- Press the **A-B** key once to set a start point **A**.
- Press the **A-B** key again to set an end point **B**. At the moment, DVD player begins to playback from the start point **A**.
- Press the **A-B** key again to exit the function.

GOTO

- Press the **GOTO** key on the remote control.
- Press the **▲▼** keys to highlight the item **TIME**, you can set a start point.
 - Enter an available number (e.g. 0:34:27), then press the **SELECT** key.
- Press the **▲▼** keys to highlight the item **TITLE/CHAPTER**, you can set a desired chapter.
 - Enter an available number, then press the **SELECT** key.
- Press the **▲▼** keys to highlight the item **TITLE/CHAPTER**, you can set a certain title.
 - Enter an available number, then press the **SELECT** key.
- Press the **GOTO** key to quit.

NOTE: This function is not available for some DVD discs.



original picture





zoomed picture




angle 1




angel 2

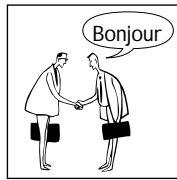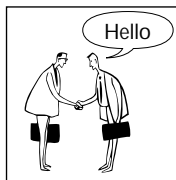

Good night

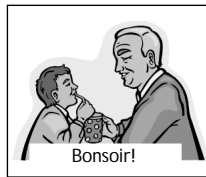

Bonsoir!

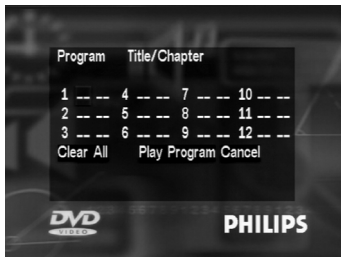

Special DVD features

Zoom

- Press the **ZOOM** key on the remote control, to get the picture zoomed in. Press the **▲▼◀▶** key to view the rest part of the zoomed picture.
- Press the **ZOOM** key again to return to the original size.

NOTE: This function may not be available for some DVD discs.

Camera angle

- Scenes which photoed from different camera angles can be recorded in a DVD disc, it enables you to watch a scene from different angles. You can switch the camera angles by just pressing the **ANGLE** key on your remote control.

NOTE:

- The function is only available for the DVD discs which contains sequences recorded from different camera angles.

Changing audio languages

- If the DVD is recorded with multi-language audio tracks, you can select the language you want by pressing the **LANGUAGE** key on your remote control.

Changing subtitles

- If the DVD is recorded with multi-subtitles, you can select the subtitle by pressing the **SUBTITLE** key on the remote control.

FTS - Favorite Track Selection (DVD)

- This function enables the player to playback your favorite tracks in sequence.
- Edit the playing orders.
 1. Press the **PROGRAM** key to enter the submenu.(shown on the left)
 2. In the submenu, please input available titles by pressing the numerical key.
 3. Then press the **▶** key to highlight the CHAPTER position. Repeat the steps above to input the selected chapter, until the whole program is completed.
 4. Press the **▲▼◀▶** keys to highlight the PLAY PROGRAM item and press the **SELECT** key to confirm.
 - Cancel the program.
 1. Press the **▲▼◀▶** keys to move the cursor to the item you want to exclude.
 2. Press the **CANCEL** key, then this selected item will be cancelled.
 3. If you want to clear all items, use the **▲▼◀▶** keys to highlight the CLEAR ALL item and press the **SELECT** key.
 - Quit the PROGRAM menu.
 1. Press the **STOP** key twice.
 2. Use the **▲▼◀▶** keys to move the cursor to the item of CANCEL and press the **SELECT** key to quit this menu.

Playing a Super VCD/VCD/CD Disc

CD

VCD


SuperVCD

Disc Specification Icons

This icon indicates the following description of functions are available for CD.

This icon indicates the following description of functions are available for VCD.

This icon indicates the following description of functions are available for SVCD.

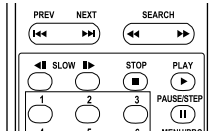

SuperVCD VCD

PAUSE/STEP

- To get a still picture, press the **PAUSE/STEP** key during play.
- To step forward to the next picture frame, press the **PAUSE/STEP** key again.
- To resume normal playback, press **PLAY** key.

SuperVCD VCD


Search

- To search the contents in fast speed, press the **SEARCH** key for fast forward/backward searching.
- Press the **SEARCH** key again to increase the speed for searching.
- Press **PLAY** key to return to the normal playback.

SuperVCD VCD

Slow Forward

- To get slow motion effect during playback, press the **SLOW FORWARD** key.
- Press the **SLOW FORWARD** key again to get different playback speeds.
- Use the **PLAY** key to return to the normal playback.

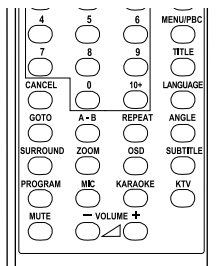

SuperVCD VCD CD

Audio control during playback

Mute

- Press the **MUTE** key to mute the sound.
- When the sound is mute, the video will continue playing.

NOTE: This function don't influence digital coaxial output and digital optical output.

SuperVCD VCD CD

Surround sound

- The DVD player can reproduce the virtual surround sound effect. You can press the **SURROUND** key or the **SOUND** button on the front panel to switch on/off surround sound effect.


SuperVCD VCD

Audio channel selection

- SVCD has two stereo audio channels which are used for playing karaoke or the audio language selection. (for instance, you can choose only one channel to playback the music background of the song)
- Press the **LANGUAGE** key on the remote control to select the audio channels.
- VCD has only one stereo audio channel, you can select mono left audio channel or mono right audio channel by pressing the **LANGUAGE** key on the remote control.

Playing title/track

SuperVCD VCD

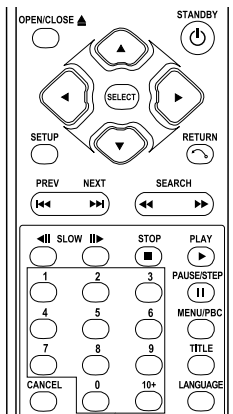

PBC ON (PlayBack Control)

- Playback control is a kind of title/track index protocol between player and discs. When a disc is recorded in a standard VCD or SVCD format, there will be a menu which include titles/tracks for users to select the contents of a movie or other video programs.
- When you switch on the PBC function you can enter the index menu which is used for selection after loading the SVCD or VCD disc.
- You can switch the PBC function simply by pressing the **MENU/PBC** key on the remote control. Pay attention to the hint on screen.
- Use the **PREV/NEXT** key on the remote control or on the front panel to select the page you like.
- If the items of the index menu are numbered, press the numerical key on the remote control, if not, use the **▲▼◀▶** keys to highlight the available item, then press the **SELECT** key to confirm your selection.

- Press the **RETURN** key to enter the index menu during playback.

NOTE:

- *The contents of the index menu depend on the disc. Please refer to the disc instruction for details.*
- *If the disc doesn't include the PBC information, this function will have no effect.*

SuperVCD VCD

PBC OFF

- If you switch PBC function off, the disc will just playback from the beginning.
- When you play a karaoke disc, you still can use the **PREV/NEXT** key on the remote control or on the front panel to select the page you like, even if PBC function is off.

Playing a Super VCD/VCD/CD Disc

SuperVCD VCD CD

Repeat A-B

A-B key enables you to choose a certain portion of program to repeat.

Pay attention to the hint on the screen.

- Press the **A-B** key once to set a start point **A**.
- Press the **A-B** key again to set the end point **B**. At the moment, DVD player begins to playback from the start point **A**.
- Press the **A-B** key again to quit A-B repeat mode.

SuperVCD VCD CD

REPEAT

You can repeat to playback a track or a chapter by pressing the **REPEAT** key.

Please turn the PBC off at advance.

Pay attention to the hint on screen.

Repeat playback [track]

- Press the **REPEAT** key once to repeat the current track.

Repeat playback [disc]

- Press the **REPEAT** key again to repeat the whole disc.


Repeat playback [off]

- Press the **REPEAT** key again to quit repeat state.

SuperVCD VCD CD


GOTO

You can switch tracks or play from any point of the playing disc by using the **GOTO** key. The operation will have some difference in PBC ON and PBC OFF.

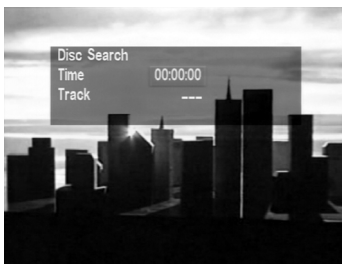

When PBC is OFF:

- Press the **▲▼** keys to highlight the item **TIME**, you can set a start point.
 - Enter an available time(e.g. 0:34:27), then press the **SELECT** key to confirm .
- Press the **▲▼** keys to highlight the item **TRACK** and you can set a desired track.
 - Enter an available number then press the **SELECT** key to confirm.
- Press the **GOTO** key again to quit the mode.

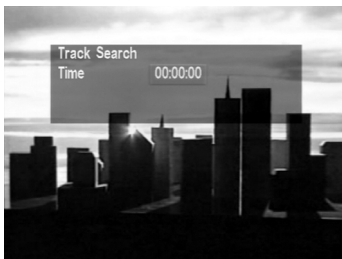

When PBC is ON:

- Press the **GOTO** key once and you can set a start point of the current disc.
 - Enter an available time(e.g. 0:34:27) then press the **SELECT** key to confirm.
- Press the **GOTO** key again to quit the mode.

SuperVCD VCD



SuperVCD

Video control

Zoom

- Press the **ZOOM** key on the remote control, you will get the magnified picture at different sizes. Press the **▲▼◀▶** key to view the rest part of the zoomed picture.
- Press the **ZOOM** key to return to the original size.

Changing subtitles

- If the disc is recorded with multi-subtitle tracks, you can select the subtitle you want by pressing the **SUBTITLE** key on your remote control.

OSD (On-Screen-Display)

- This function will provide some information about the disc being played on screen by pressing the **OSD** key.

NOTE:

- Some display information, such as **REPEAT,PREV/NEXT,PAUSE**, will not display when OSD is set ON, but it won't influence their normal work. If you want to display them, press the **OSD** key.

SuperVCD VCD CD

Resume

When PBC is OFF,



- Press the **STOP** key once seeing the hint: Stop (play the resume)
- Press the **PLAY** key, you can resume the play from the stop point.

SuperVCD VCD



FTS - Favorite Track Selection (SVCD,VCD,CD)

- This function enables you to select your favorite tracks in sequence.
- Edit the playing orders.
 1. Press the **PROGRAM** key to enter the submenu.(shown on the left)
 2. In the submenu, input your favorite tracks by pressing the numerical keys.
 3. Press the **▲▼** keys to move the cursor to the next position and input another track until the whole program is completed.
 4. Press the **▲▼** keys to highlight the **PLAY PROGRAM** item and press the **SELECT** key to confirm selection.
- Cancel the program.
 1. Press the **▲▼** keys to move the cursor to the item you want to exclude.
 2. Press the **CANCEL** key and this selected item will be cancelled.
 3. If you want to clear all programs, you can use the **▲▼** keys to highlight the **CLEAR ALL** item and press the **SELECT** key.
- Quit the PROGRAM menu.
 1. Press the **STOP** key twice.
 2. Press the **▲▼◀▶** keys to move the cursor to highlight the item **CANCEL** and press the **SELECT** key to quit this menu.

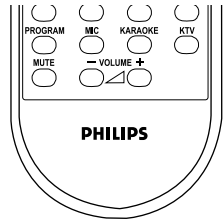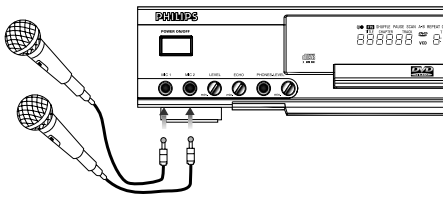

General operation of karaoke function


- Connect microphone to MIC1, MIC2 or to both sockets. Be sure the player has been properly connected to your TV or audio system.
- Press the **MIC** key on the remote control to switch the MIC function on. You can see the function menu appear on the screen.
- Load a karaoke disc, press the **PLAY** key to playback.
- **ECHO** :
You can adjust echo level by turning the knob **ECHO** beside the front panel.
- **Audio channels option** :
Press the **LANGUAGE** key to choose Stereo, Left, Right, Mix.
- Remember to turn your microphone on.

Microphone volume adjustment

- You can adjust the volume of microphone connected to MIC 1 jack & MIC 2 jack by turning the knob **LEVEL** beside the MIC jack.
- When you stop playing karaoke, press the **MIC** key once to switch off MIC input.

NOTE:

- Some display information, such as **REPEAT,PREV/NEXT,PAUSE**, will not display when karaoke is ON, but it won't influence their normal work. If you want them to display, press the **KARAOKE** key to quit.
- When you press the **KARAOKE** key, you can see the relative information on screen.

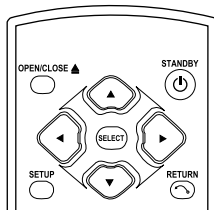

Enter the setup menu - Press the STOP key first

- Enter the Setup Menu by pressing the **STOP** key in the STOP mode. Remember that the **STOP** key will not have any response if you press it during playback.
- When you quit the setup menu, the setting will be stored in the player's memory even when the power is switched to power off.



The way of operations

- Press the ◀▶ keys on the remote control to highlight an item in the top menu.
- Press the SELECT key to open the first level submenu to select an option.
- Press the ▲▼ keys to choose an item in the first level submenu.
- Press the SELECT key to select an option. Sometimes you'd better to enter the second level submenu to continue setup.
- When the cursor highlights the item of the first level submenu, press the ▲ key to return to the top menu.
- When you finish setup, press **SETUP** key to quit the setup menu.



OSD language

- There are two options available for information displayed on TV screen.
- Follow the steps below:
 - Press the ◀▶ keys to highlight the item LANGUAGE in the top menu, then press the SELECT key to open the first level submenu.
 - Press the ▲▼ keys to select item OSD MENU.
 - Press the SELECT key to open the second level submenu.
 - Press the ▲▼ keys to select the desired language.
 - Press the SELECT key to confirm selection.



Subtitle language

- DVD discs are available for multi-subtitle languages. This item is used to choose the default subtitle language.
- Follow the steps below:
 - Press the ◀▶ keys to highlight the item LANGUAGE in the top menu, then press the SELECT key to open the first level submenu.
 - Press the ▲▼ keys to select item SUBTITLE.
 - Press the SELECT key to open the second level submenu.
 - Press the ▲▼ keys to select the desired language.
 - Press the SELECT key to confirm selection.



Audio language

- DVD discs are available for multiple audio languages. Use this item to choose your preferred default audio language.
- Follow the steps below:
 - Press the ◀▶ keys to highlight the item LANGUAGE in the top menu, then press the SELECT key to open the first level submenu.
 - Press the ▲▼ keys to select the item AUDIO.
 - Press the SELECT key to open the second level submenu.
 - Press the ▲▼ keys to select the desired language.
 - Press the SELECT key to confirm selection.

NOTE:

- Some DVD discs may not include the selected audio and subtitle languages. If so, the player will use other audio and subtitle languages instead.



DVD menu language

- DVD discs are available for multi disc menu languages. This item is used to choose the default DVD menu language.
- Setup the item as follows:
 - Press the ◀▶ keys to highlight the item LANGUAGE in the top menu, then press the **SELECT** key to open the first level submenu.
 - Press the ▲▼ keys to select DVD MENU item.
 - Press the **SELECT** key to open the second level submenu.
 - Press the ▲▼ keys to select the desired language.
 - Press the **SELECT** key to confirm.

NOTE:

- *If your DVD disc doesn't include the selected DVD menu language, the player will use other language instead.*



OSD (On-Screen-Display)

- You can use this item to decide whether display some information on screen. When OSD is set OFF, the DVD player will disable to display any information on screen, even if you press the **OSD** key.
- Follow the steps below:
 - Press the ◀▶ keys to highlight the item LANGUAGE in the top menu, then press the **SELECT** key to open the first level submenu.
 - Press the ▲▼ keys to select OSD item.
 - Press the **SELECT** key to confirm.



Factory default

- If some problems occur during your setup, the item DEFAULT is used to reset all items to factory default and all your personal setting will be erased.
- Follow the steps below:
 - Press the ◀▶ keys to highlight the item LANGUAGE in the top menu, then press the **SELECT** key to open the first level submenu.
 - Press the ▲▼ keys to select DEFAULT item.
 - Press the **SELECT** key to open the second level submenu.
 - Press the ▲▼ keys to select ON or OFF.
 - Press the **SELECT** key to confirm.

NOTE: *When this function is executed, all setups will be reset to factory defaults.*

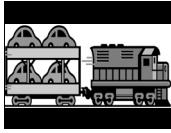


fig. 1

4:3 Letter Box

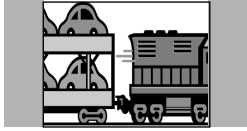


fig. 2

4:3 Pan Scan

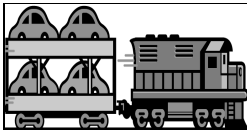


fig. 3

16:9 Wide Screen



Screen size

- The common TV screen size rate is 4:3, but there is also a kind of TV screen which its size rate is 16:9, as wide as the screen in cinema. It is what we call 'wide-screen'.
- If a disc is recorded in the size of wide-screen, it will have some problem, like distortion or narrowing, in playing on a normal TV set with the screen size of 4:3 and the function SCREEN SIZE is used.
- There are three selections in the item to modify the distorted screen picture:
 1. 4:3 LB --- used for 16:9 format movie discs played in 4:3 TV set. It sacrifices certain top and bottom screen space for getting 16:9 picture size. (refer to fig .1)
 2. 4:3 PS --- used for 16:9 format movie discs played in 4:3 TV set. It sacrifices certain picture part for getting 4:3 effect. (refer to fig .2)
 3. 16:9 wide-screen --- used for 16:9 format movie discs played in 16:9 TV set. if the disc is recorded in 4:3 format, the picture will also have some distortion.
- Setup the item as follows:
 - Press the ◀▶ keys to highlight the item VIDEO in the top menu, then press the SELECT key to open the first level submenu.
 - Press the ▲▼ keys to select TV SHAPE item.
 - Press the SELECT key to open the second level submenu.
 - Press the ▲▼ keys to highlight the selected item.
 - Press the SELECT key to confirm.

TV system

- There are two major television systems, PAL and NTSC. Normally both of them are available in our modern TV set. Setup this item to make the system of the player be according with your TV's (PAL,NTSC or AUTO).
- Setup the item as follows:
 - Press the ◀▶ keys to highlight the item VIDEO in the top menu, then press the SELECT key to open the first level submenu.
 - Press the ▲▼ keys to select TV SYSTEM item.
 - Press the SELECT key to open the second level submenu.
 - Press the ▲▼ keys to highlight the selected item.
 - Press the SELECT key to confirm.

Audio output

- In this item, you can choose either analog audio output or digital audio output.
- The item DOLBY D is only available for DVD discs and the item OTHER is available for others. Setup the item following the steps below:
 - Use the ◀▶ keys to highlight item AUDIO in the top menu, then use the SELECT key to open its submenu.
 - Press the ▲▼ keys to highlight the choice and press the SELECT key to confirm.

[Dolby d]

[Analog out]

- [2CH] If connect the player to a stereo amplifier or Dolby Prologic amplifier.
- [OFF] Disable to output analogue signals.

[Digital output] Such option as [RAW] or [PCM] will be supplied.

[Others]


[Analog out] Such option as [2CH] or [OFF] will be supplied. You can select the proper option.

[Digital output] Such option as [RAW], [PCM] or [OFF] will be supplied.

- Press the SETUP key to complete the function.

NOTE: The digital output of DTS discs must be setup RAW.

Setup Menu

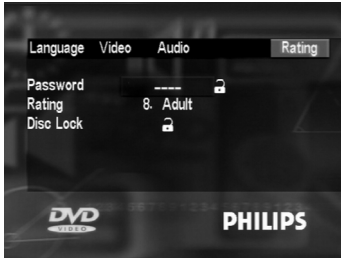

Password

- This password is used to the parental control and disc lock.
- Press the ◀▶ keys to highlight the item RATING in the top menu, then press the SELECT key to open its submenu.
- Press the ▲▼ keys to highlight the item PASSWORD and enter your password.
- Press the SELECT key to confirm and press the SETUP key to quit.

NOTE:

- *If you forget the password, you can enter the default password 9999 and replace your code after logging on.*




Parental control

- DVD disc can be set with levels which define the movie degrees of violence, horror or isticism. There are 8 levels included in the parental control. From level 1 to level 8, the ponderance increases gradually. If the parental control is activated, only the movies with lower degree than you set can be admitted to show, otherwise, you have to enter the password for authorization.
- VCD, SVCD, CD has no level defination, so parental control function has no effect on those kinds of discs as well as most of illegal DVD discs.
- You can follow the steps below to setup the parental control:
 - Highlight the item RATING in the top menu by pressing the ◀▶ keys, press the SELECT key to enter the submenu.
 - Press the ▲▼ keys to select the item PASSWORD and enter your password to log on. You can enter the default password 9999 firstly by pressing the numerical keys on the remote control, and press the SELECT key to confirm.
 - Press the SELECT key to open the icon of the lock shown on right.
 - Move the cursor to highlight the RATING item and press the SELECT key to change the level.
 - Press the ▲▼ keys to select the item PASSWORD and enter your password.
 - Press the SELECT key to confirm.
 - You can press the key SETUP to quit the setup menu.

NOTE:

- *You can use the default password 9999 to log on, even if you have set a password.*
- *DVD discs beyond the setting range will not play in the player having parental control, but that won't influence its normal play in other players.*

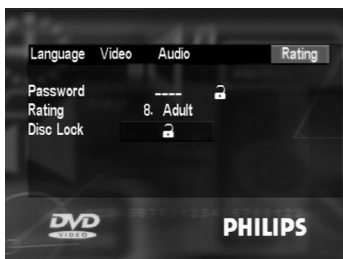

Disc lock

- Although you can't use parental control on VCD and SVCD discs, you still can apply the function of disc lock to exclude them from your player.
- When you lock the current disc, the player will store its typical code into the memory for the future identification. The DVD player will prompt to enter the password for the next playback.
- The password in DISC LOCK is the same as in PARENTAL CONTROL. But you still can use the default password 9999 to unlock the disc.
- You can follow the steps below to setup the parental control.
 - Highlight the item RATING in the top menu by pressing the ◀▶ keys, and press the **SELECT** key to enter the submenu.
 - Press the ▲▼ keys to select the item PASSWORD and enter your code to log on. You can enter the default password 9999 firstly by pressing the numerical keys, and then press the **SELECT** key to confirm.
 - Highlight the item DISC LOCK by pressing the ▲▼ keys and press the **SELECT** key to change the setup.
 - There are two options. One is unlocked that indicates the disc is unlocked, the other is locked that means the disc is locked.
 - Press the ▲▼ keys to select the item PASSWORD and enter your password.
 - Press the **SELECT** key to confirm.
 - You can press the key **SETUP** to quit the setup menu.

NOTE:


- *DVD discs beyond the setting range will not play in the player having parental control, but that won't influence its normal playback in other players.*

Disc maintains

Disc maintains

Some problems occur because the disc inside the player is dirty. To avoid those problems clean your discs regularly, in the following way:

- When the disc becomes dirty, clean it with a cleaning cloth. Wipe the disc from center to out side.

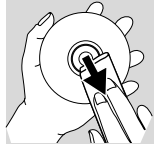

Caution:

- Do not use solvents such as benzene, thinner, commercially available cleaners, or anti-static spray intended for analog discs.

Environmental information

Environmental information

All redundant packing material has been omitted. We have done our utmost to make the packaging easily separable into three mono materials: cardboard (box), polystyrene foam (buffer) and polyethylene (bags, protective foam sheet.)

Your set consists of material which can be recycled if disassembled by a specialized company. please observe the local regulations regarding to the disposal of packing materials, dead batteries and old equipment.

Before requesting service

If it appears that the DVD-Video player is faulty, first consult this checklist. It may be that something has been overlooked. ***Under no circumstances should you try to repair the yourself; as this will invalidate the warranty. Only qualified service personnel can remove the cover or service this player.***

Look for the specific symptom(s). Then perform only the actions listed to remedy the specific symptom(s).

Symptom	Remedy
No power	Check if the on/off button on the front of the player is set to on. Check if there is power at the AC outlet by plugging in another appliance.
No picture	Check if the TV is switched on. Select the same channel and source on the TV as on the player. Check the video connection.
Distorted picture	Check the disc for fingerprints and clean with a soft cloth, wiping from center to edge. sometimes a small amount of picture distortion may appear. This is not a malfunction.
Completely distorted picture or no color with player menu.	If the picture is distorted completely or if the picture rolls vertically, make sure the NTSC/PAL setting at the DVD player matches the video signal of your television. If your TV video signal is NTSC, select the NTSC setting at the DVD player. If your video signal is PAL, select the PAL setting.
Distorted or Black/White picture with DVD or Video CD.	The disc format does not match your TV's video signal (PAL/NTSC).
No sound	Check audio connections. If you are using a HiFi amplifier, try another sound source.
Distorted sound from HiFi amplifier.	Check to make sure that no audio connections are made to the amplifier phono input
No audio at digital output.	Check the digital connections. Check the settings menu to make sure the digital output is set to ALL or PCM. Check if the audio format of the selected audio language matches your receiver capabilities.
Disc can't be played.	Ensure the disc label is facing up. Clean the disc. Check if the disc is defective by trying another disc. Check to see if the disc is defective, badly scratched or warped (not flat).
No return to start-up screen when disc is removed.	Reset by switching the player off, then on again. Check to see if the program requires another disc to be loaded.
The player does not respond to the remote control.	Aim the remote control directly at the sensor on the front of the player. Remove any obstacles between the player and the remote control. Inspect or replace the batteries in the remote control.
Buttons do not work.	In order to completely reset the player, unplug the AC cord from the AC outlet for outlet for a few seconds.
Player does not respond to some operating commands during playback.	Operations are not permitted by the disc. Refer to the instructions of the disc.