

Service  
Service  
**Service**



# Service Manual



## LIST OF CONTENTS

|                           | Page |
|---------------------------|------|
| PCB position .....        | 1    |
| Instruction for use ..... | 2    |
| Block diagram .....       | 17   |
| Power board .....         | 18   |
| Servo module .....        | 22   |
| Mpeg board .....          | 24   |
| AV board .....            | 34   |
| Front board .....         | 41   |
| Mic board .....           | 44   |
| Dismantling drawing ..... | 47   |
| Service hints .....       | 48   |

© Copyright 2001 Philips Consumer Electronics BPAVC  
All rights reserved. No part of this publication may be reproduced, stored in a retrieval system or transmitted, in any form or by any means, electronic, mechanical, photocopying, or otherwise without the prior permission of Philips.

Published by Green 0106 BPAVC



GB 3141 785 22061

PCS 103 083




# PHILIPS

---

## PCB Location

---

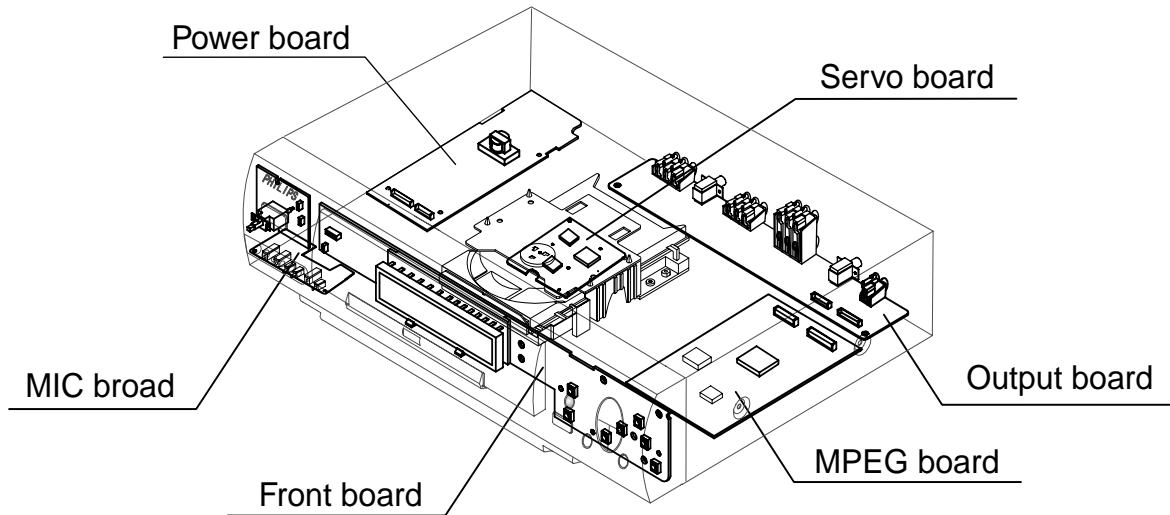

### Power board

*Assembly 12NC: 3122 427 22530*

### Front board

*Assembly 12NC: 3141 018 02040*

### MPEG board

*Assembly 12NC: 3141 018 02020*

### MIC board

*Assembly 12NC: 3141 018 01980*

### Loader module

*Assembly 12NC: 3141 018 02010*

### Output board

*Assembly 12NC: 3141 018 02030*

Note: Power board is not mounted at BPAVC

English instruction ..... 1-32

Australia & New Zealand Warranty ..... 33-34

Specification ..... 35

**Region Code**

Since it is usual for DVD movies to be released at different times in different regions of the world, all players have region codes and discs can have an option region code. If you load a disc of a different region code to your player, you will see the region code notice on the screen. The disc will not play, and should be unloaded.



The region code for **Singapore** is 3  
The apparatus type is DVD761/69X



The region code for **Australia & New Zealand** is 4  
The apparatus type is DVD761/75X



The region code for **China** is 6  
The apparatus type is DVD761/93X

**LASER SAFETY**

This unit employs a laser. Due to possible eye injury, only a qualified service person should remove the cover or attempt to service this device.

**CAUTION:**

USE OF CONTROLS OR ADJUSTMENTS OR PERFORMANCE OF PROCEDURES OTHER THAN THOSE SPECIFIED HEREIN MAY RESULT IN HAZARDOUS RADIATION EXPOSURE.

**LASER TYPE**

|                 |                            |
|-----------------|----------------------------|
| Type            | semiconductor laser GaAlAs |
| Wave length     | 668nm                      |
| Output power    | 8.5mW                      |
| Beam divergence | 60 degree                  |

This product incorporates copyright protection technology that is protected by method claims of certain U.S. patents and other intellectual property rights owned by Macrovision corporation, and its intended for home and the other limited viewing uses only unless otherwise authorized by Macrovision Corporation. Reverse engineering or disassembly is prohibited.

*Manufactured under license from Dolby laboratories. "Dolby", "AC-3" and the double-D symbol are trademarks of Dolby laboratories. Confidential Unpublished Works. © 1992-1997 Dolby Laboratories, Inc. All right reserved.*

**Contents**

**Introduction**

Entertainment for new century .....2

Introduction .....2

Unpack .....3

Maintains .....3

---

**Functional overview**

Front panel .....4

Rear panel .....5

Display .....6

Remote control .....7

---

**Connection**

General explanation .....8

Video connection .....8

Audio connection .....9

---

**General operation**

Turn on the power .....10

Load disc .....10

Remote control battery installation .....10

Remote control operation .....10

---

**Playing a DVD-video disc**

Icons and OSD bar .....11

Video control during playback .....12

Audio control during playback .....12

Playing title/chapter .....13

Playing repeat .....13

Special DVD-features .....14

---

**Playing a SuperVCD/VCD/CD disc**

Icons and OSD bar .....15

Video control during playback .....16

Audio control during playback .....16

Playing title/track .....17

Special VCD-features .....19

---

**KARAOKE**

General operation .....20

Extra functions .....20

---

**Setup Menu**

Audio language .....22

Subtitle language .....22

Menu language .....22

Parental control .....23

Disc lock .....23

Screen size .....24

Video output .....24

Speaker setup .....24

Favorite Track Selection .....25

Digital output .....26

Dynamic range .....26

TV output .....26

Color scheme .....27

On-Screen Display language .....27

---

**Mode key**

General introduction .....28

Function explanation .....28

---

**Disc maintains**

Disc maintains .....31

---

**Environmental information**

Recycle announcement .....31

---

**Before requesting service**

Before requesting service .....32

---

**Warranty**

Australia & New Zealand warranty .....33

---

**Specifications**

Specifications .....35

**Entertainment for the new millennium**

Video was never like this before! Digital video discs provide perfect digital, studio-quality pictures; three dimensional digital, multi-channel audio; story sequences screened from your choice of camera angle; sound tracks in as many as eight languages; and up to 32 subtitles (if available on disc). Whether you watch DVD-Video on wide-screen or regular TV, you always see it the way it was meant to be.

**Digital video**

DVD-Video uses state-of-the-art MPEG2 data compression technology to register an entire movie on a single 5-inch disc. DVD's variable bitrate compression, running at up to 9.8 Mbits/second, captures even the most complex pictures in their original quality.

The crystal-clear digital pictures have a horizontal resolution of over 500 lines, with 720 pixels (picture elements) to each line. This resolution is more than double that of VHS, superior to Laser Disc, and entirely comparable with digital masters made in recording studios.

DVD-Video discs conform to either the PAL or NTSC video standard.

This player can play both PAL and NTSC discs, presenting them in the best possible way on your multi-standard TV screen.


As the universal video system of the future, DVD-Video offers optimal pictures on any TV screen.

**Introduction**

Your Philips DVD-Video player will play digital video discs conforming to the universal DVD-Video standard. With it, you will be able to enjoy full-length movies with true cinema picture quality, as well as stereo or multi-channel sound (depending on the disc and your playback setup).

The unique features of DVD-Video, such as selection of sound track, subtitle languages and different camera angles (again depending on the disc), are all included. What's more, Philips Child Lock lets you decide which discs your children will be able to see.

In addition to DVD-Video discs, you will be able to play all Video CDs and Audio CDs (excluding finalized CD Recordable and CD Rewritable). You will find the On-Screen Display, player display, and remote control make the player easy to use. This manual provides all the information you will need, so read on!

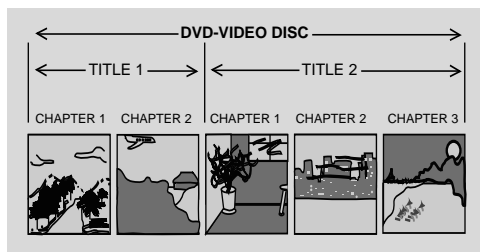


**DVD-Video**

You will recognize DVD-Video discs by the logo shown on left. Depending on the material on the disc (a movie, video clips, a drama series, etc.) the disc may have one or more Titles. Each Title may have one or more Chapters. To make playback easy and convenient, your player lets you select Titles and playback Chapters.

**Video CD**

You will recognize Video CDs by the logo shown at left. Depending on the material on the disc (a movie, video clips, a drama series, etc.) the disc may have one or more tracks. Tracks may have one or more indexes, as indicated on the disc case. To make playback easy and convenient, your player lets you select tracks and indexes. Some Video CDs have Play Back Control (PBC), which is a predefined playback sequence stored on the disc.

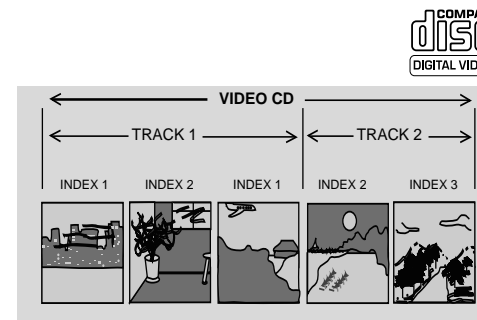

**Super VCD**

SVCD discs based on the Super VCD IO Standard based on the Standard of the Information Industry Department of the People's Republic of China

**Audio CD**

Audio CDs contain music tracks only. You will recognize Audio CDs by their logo which is shown at left. You can play them in conventional style through a stereo system, using the keys on the remote control and/or front panel, or via the TV using the On-Screen Display (OSD). You can play audio CDs using the OSD or, through a stereo system only, using keys on the remote control and/or front panel.



**Unpacking**

First check and identify the contents of your DVD-Video player package. You should have the following items.


- DVD-Video player
- Remote Control with batteries
- Audio/Video cable
- Instructions for use

If any item is damaged or missing, contact your retailer or Philips.


Keep the packaging materials; you may need them to transport your player in the future.

**Placement**


Place the player on a firm, flat surface. Keep the player away from domestic heating equipment and direct sunlight. In a cabinet, allow about 2.5 cm (1 inch) of free space all around the player for adequate ventilation. If the DVD-Video player cannot read CDs/DVDs correctly, use a commonly available cleaning CD/DVD to clean the lens before taking the DVD-Video player to be repaired. Other cleaning methods may destroy the lens. Always keep the tray closed to avoid dust on the lens. The lens may cloud over when the DVD-Video player is suddenly moved from cold to warm surroundings. Playing a CD/DVD is not possible then. Leave the DVD-Video player in a warm environment until the moisture evaporates. To view the typeplate, please refer to the bottom of the player.

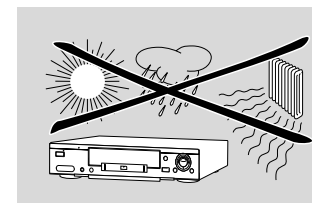

FRONT

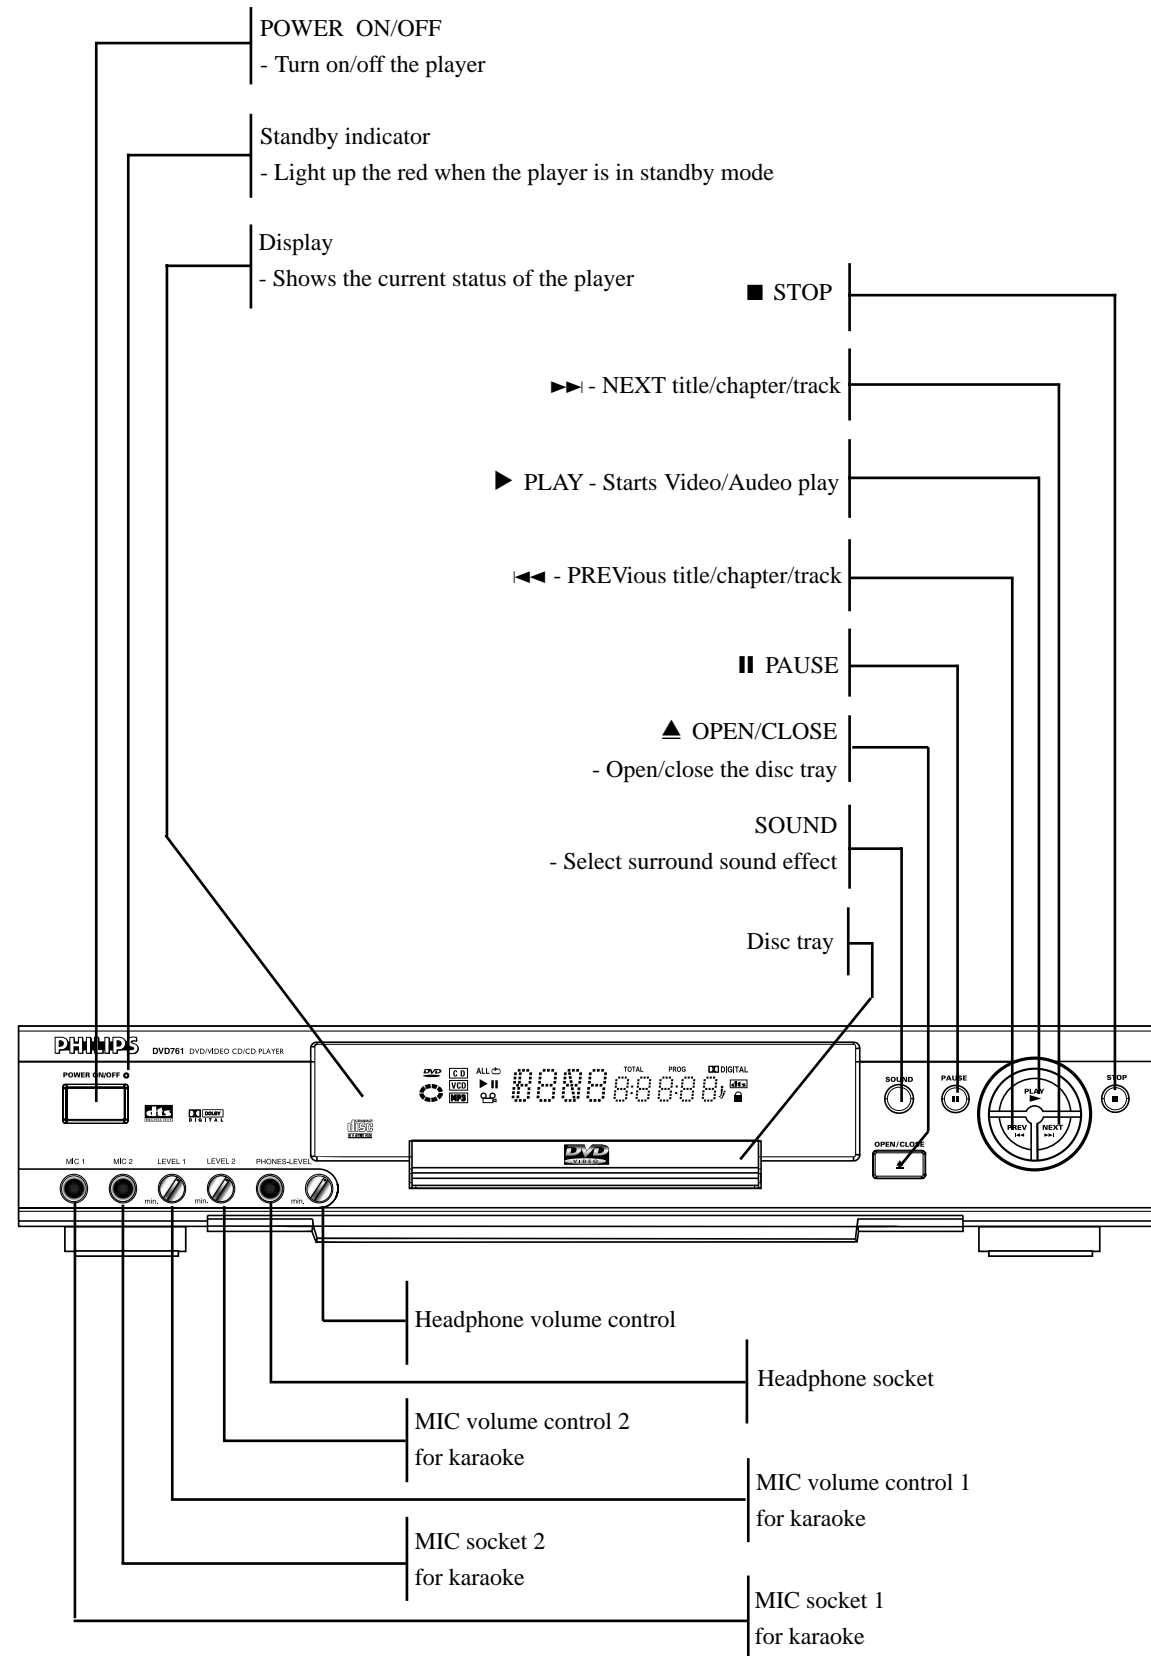


REAR

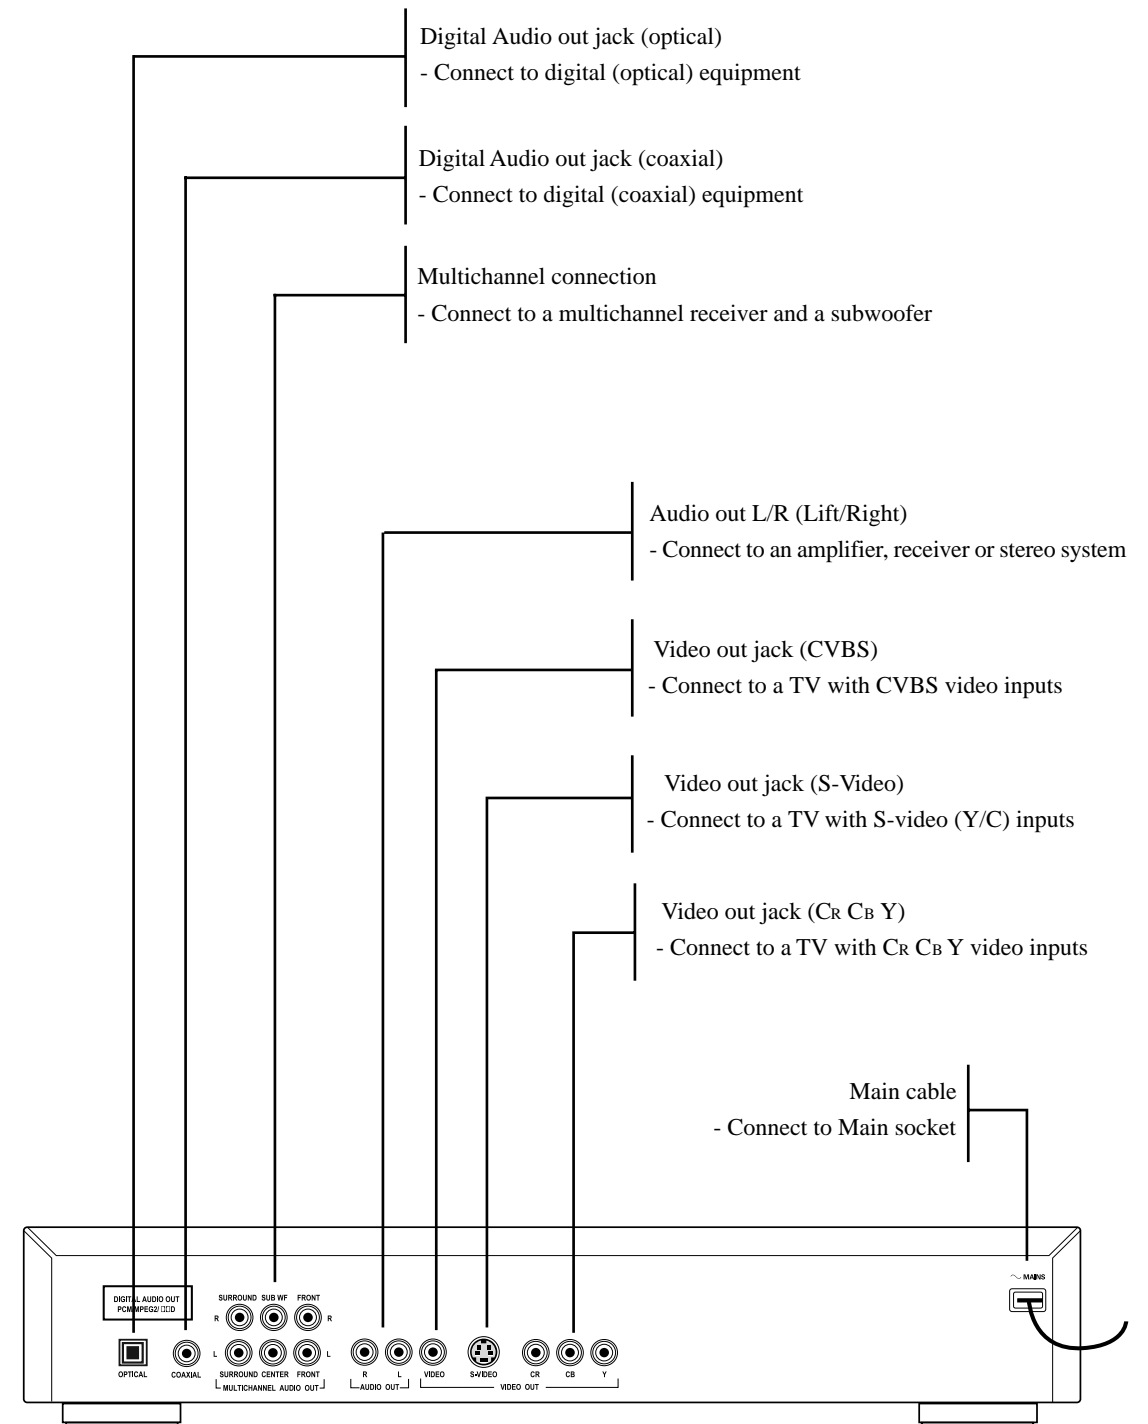


*CAUTION: Do not touch the inner pins of the jacks on the rear panel connectors. Electrostatic discharge may cause permanent damage to the unit.*

Display

- 1 Disc format indicate
- 2 Repeat function active
- 3 PLAY/STOP
- 4 Total time in hours, minutes and seconds
- 5 Playback program
- 6 Dolby digital audio output active
- 7 reserved
- 8 Disc locked
- 9 Play karaoke
- 10 Time in hours, minutes and seconds
- 11 Statues indicate
- 12 Multi-angle of camera active (DVD only)
- 13 Unit is running

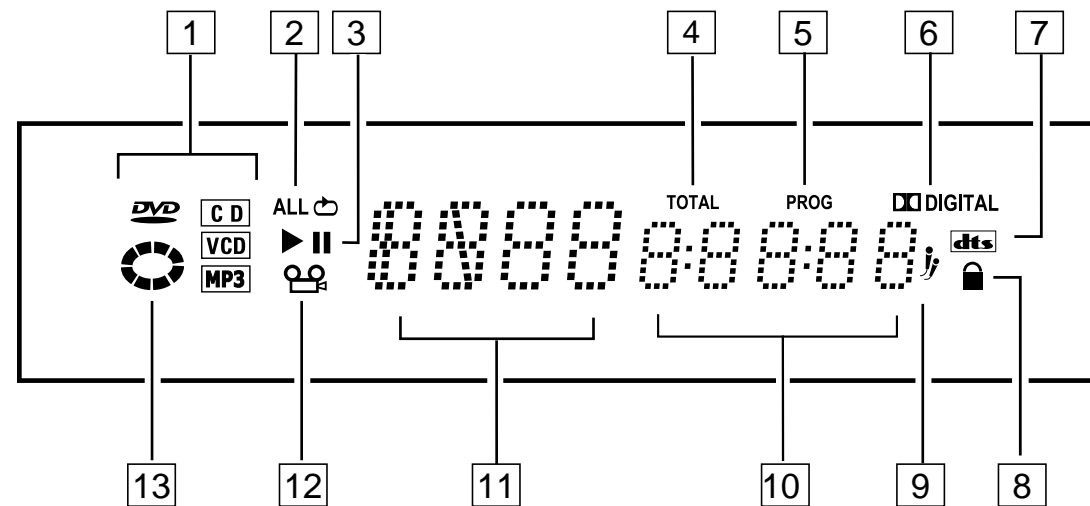

Remote control

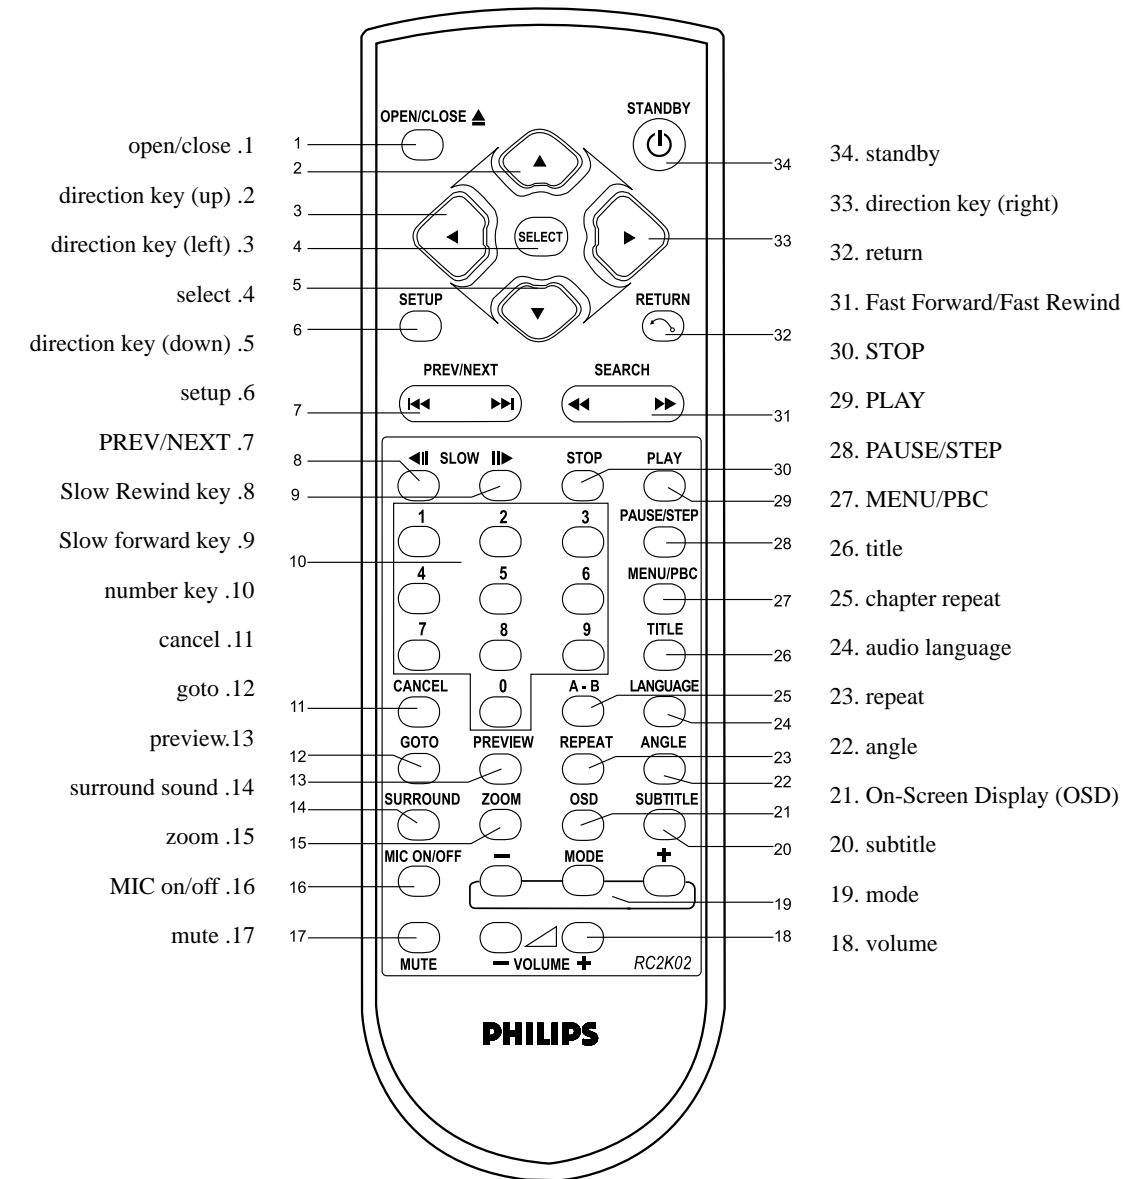

NOTE :

- The usage of the key **setup**(6), **cancel**(11) and **return**(32), please refer to chapter [ Setup Menu ].
- The usage of the key **mode**(19) please refer to chapter [ Mode key] and [ KARAOKE ].
- The rest keys are used for general operation, please see the chapter [ Playback DVD] and [ Playback VCD ] for details.

**General explanation**


- Video connection and Audio connection can be totally separate. That means you can connect the Video output to one equipment and connect the Audio output to another with no problems. Depending on your TV and other equipment you wish to connect, there are various ways you connect the player. Possible connections are shown in the following drawings.
- Please refer to the manuals of your TV, VCR, stereo system or other devices as necessary to make the best connections.
- Do not connect your DVD-player via your VCR. The video quality could be distorted by the copy protection system.
- For better sound reproduction, connect the player's audio out jacks to the audio in jacks of your amplifier, receiver, stereo or A/V equipment. see [ Audio Connection].

Caution: Do not connect the player's audio out jack to the phono in jack of your audio system.

**Video connection**


Video CVBS connection

- CVBS video output is the most common video format we are using now, it combines brightness signal and chroma signal together and only uses one cable for output. Plugs of the cable are both in yellow.
- connect the Video socket on the rear of the player to the corresponding socket on the TV using the cable supplied.

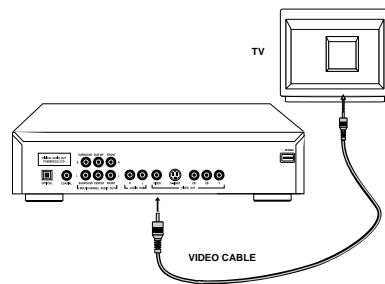


S-Video connection.

- S-video is a kind of component video output. It includes two separated signals, they are brightness and chroma. Reproducing high quality picture is its advantage.
- connect the S-Video connector on the rear of the player to the corresponding connector on the TV using the S-Video cable(not supplied).

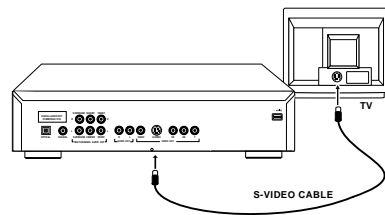

Y/Cr/Cb connection.

- Y/Cr/Cb is another kind of component video output. It includes three sort of signals, they are Y; CRED; CBLUE. This video format can be compatible with monochromatic TV. (use Y only)
- connect the Y/Cr/Cb connector on the rear of the player to the corresponding connector on the TV using the Y/Cr/Cb cable (not supplied).

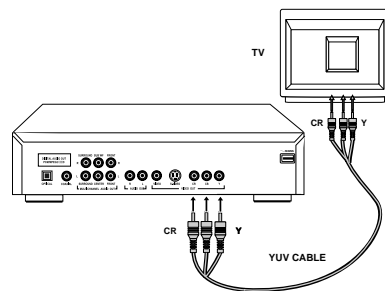


Caution: Y/Cr/Cb video and S-video can not work at the same time, so you have to set one of them to be active in setup menu. Please refer to the chapter [Setup Menu] for details.

**Audeo connection**

Connect Audio output to TV

- Use the TV speaker for sound reproduction, connect the audio left and right channel sockets on the player rear panel to the corresponding sockets on your TV with the audio cable. (supplied)

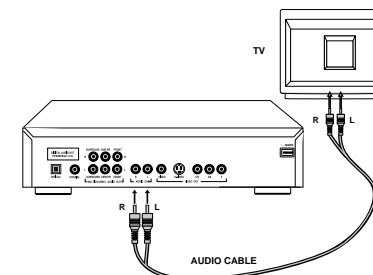


**Connecting to an A/V receiver equipment**

Digital multi-channel connection provides the best sound quality. For this you need a multi-channel receiver that supports one or more of the audio formats supplied by your DVD player ( Dolby Digital(TM) (AC-3), MPEG 2 and DTS). Check the receiver manual and the logos on the front of the receiver.


Connect to A/V receiver with digital coaxial cable

- Connect the player's digital coaxial output to the corresponding input on the receiver using the digital coaxial cable(not supplied), it is just the same as audio cable which supplied in the package.
- You might need to set the item[ DIGITAL OUTPUT] in setup menu for adapting your receiver. Please refer to the chapter [ Setup Menu] for details.
- In this case, do not use the player's audio left and right output.

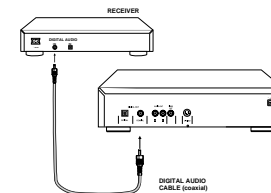

Connect to A/V receiver with digital optical cable


- Connect the player's digital optical output to the corresponding input on the receiver using the digital optical cable(not supplied), it is just the same as audio cable which supplied in the package.
- You might need to set the item[ DIGITAL OUTPUT] in setup menu for adapting your receiver. Please refer to the chapter [ Setup Menu] for details.
- In this case, do not use the player's audio left and right output.

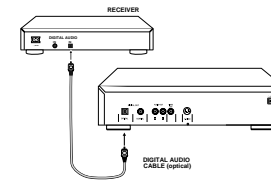

*NOTE: If the audio format of the digital output does not match the capabilities of your receiver, the sound will be muted.*


Analog connection to a multi-channel A/V receiver with 6CH connectors

- This DVD player contains a multi-channel decoder. This enables playback of DVDs recorded in multi-channel surround without the need of optional decoder.
- Connect the audio out jacks for center speaker; front speakers; surround speakers and subwoofer to the corresponding jacks on your receiver.
- Make the appropriate sound settings for [ Speaker settings] in the setup menu. Please refer to the chapter [Setup Menu] for details.
- Only DVD discs have the multi-channel audio output, SVCD; VCD and CD have only audio left and right output.

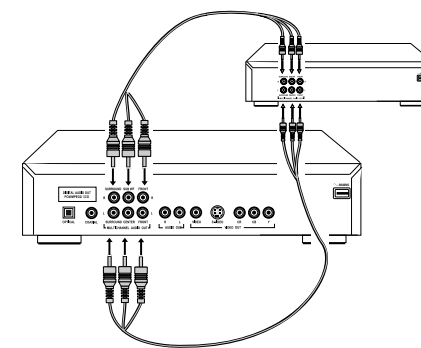


*NOTE : If the subwoofer is equipped with its own amplifier, the subwoofer connection should be connected directly to the subwoofer.*

## General operation

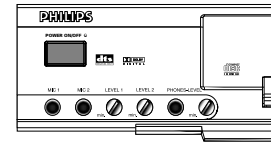

### Turning on the power

- Press the power on/off button on the front panel to turn on or turn off the player.

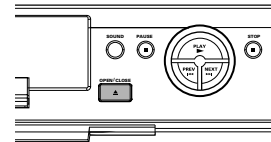


### Loading discs

- Press OPEN/CLOSE button on the front of the player, the disc tray opens.
- Load your chosen disc in the tray, label side up (also when a double sided DVD is inserted). Make sure the disc is placed properly in the correct recess.
- Gently push the tray, or press OPEN/CLOSE button to close the tray.



### Remote control battery installation

 - Open the battery compartment cover.
- Insert two [AA] batteries as indicated inside the battery compartment.
- Close the cover.



Caution: Don't mix old and new batteries. Never mix different types of batteries (standard, alkaline, etc.)

### Remote control operation

- Unless otherwise mentioned, all operations can be carried out with the remote control. Always point the remote control directly at the player, making sure there are no obstructions in the path of the infrared beam.
- When there are corresponding keys in the front panel, they can also be used.

## Playing a DVD-video disc



### Icons and menu bar

During play, various icons will appear on the TV screen to confirm the function has been selected. You can get rid of these icons by pressing OSD button on remote control.

|  |                                |  |                              |
|--|--------------------------------|--|------------------------------|
|  | .....Open the disc tray        |  | .....Slow forward 1/2        |
|  | .....Close the disc tray       |  | .....Slow forward 1/4        |
|  | .....No disc in disc tray      |  | .....Slow forward 1/8        |
|  | .....play                      |  | .....Slow forward 1/16       |
|  | .....pause                     |  | .....Slow backward 1/2       |
|  | .....stop at current position  |  | .....Slow backward 1/4       |
|  | .....Search forward(X1)        |  | .....Slow backward 1/8       |
|  | .....Search backward(X1)       |  | .....Slow backward 1/16      |
|  | .....Search forward(X2)        |  | .....Next                    |
|  | .....Search backward(X2)       |  | .....Prev                    |
|  | .....Pause (Shows on display)  |  | .....Return                  |
|  | .....Stop(play from the start) |  | .....Menu Selection          |
|  |                                |  | .....Operation not available |

### OSD (On Screen Display) banner icons


Any time during play, you can call up the OSD banner by pressing OSD button on remote control to check which functions are active.

|  |                                 |
|--|---------------------------------|
|  | .....Title /Track               |
|  | .....Chapter                    |
|  | .....Total time/Playing time    |
|  | .....Angle                      |
|  | .....Subtitle                   |
|  | .....Language                   |
|  | .....Repeat off                 |
|  | .....Title/Track Repeat         |
|  | .....Chapter Repeat             |
|  | .....Start point of A-B         |
|  | .....Repeat from A to B         |
|  | .....Repeat Disc                |
|  | .....Dolby digital audio output |
|  | .....Program                    |
|  | .....Bad disc                   |

NOTE : The BAD DISC icon indicates you to clean the disc.




## Playing a DVD-video disc

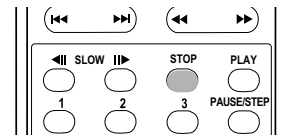

### Video control during playback


#### STOP key on the remote control

- You can resume the play from the point at which you stopped last time if you just pressed the STOP key once. It will start from the beginning if you pressed the STOP key twice to stop a play back.
- If you unload the disc by press the key OPEN/CLOSE key on the remote control (or OPEN/CLOSE button on front panel) during playback, you can also achieve the resume play when you reload it again. Please pay attention to the mention 'resume' on screen and press PLAY key at the moment.
- The player can memorize five latest discs for resume play.

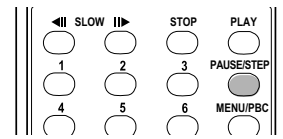


#### PAUSE/STEP key on the remote control

- To get a still picture, press PAUSE/STEP key during play.
- To step forward to the next picture frame, press PAUSE/STEP key again.
- To return to play, press PLAY key.

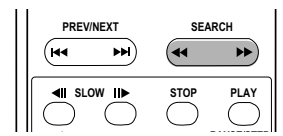


#### Search

 - To search the content in fast speed, press SEARCH key for fast forward/rewind searching.
- Press the SEARCH key again to accelerate the speed during searching.
- While you find the point you want, press PLAY key to return to the normal play state.



#### Slow Forward / Rewind

- To get slow motion effect during playback, press SLOW forward/rewind key.
  - Press the SLOW key again, you can get different playback speeds.
  - Use the PLAY key to return to the normal play state.
  - Also you can return to the normal play state by just pressing the SLOW key.
- Refer to the diagram of the function loop.

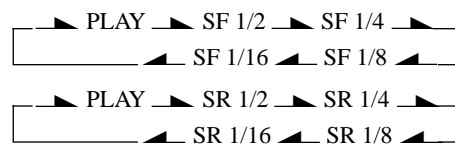


## Audio control during playback

#### Mute

- Press the mute key to switch on/off the sound output.


#### Volume

- Press the volume + or volume - to adjust the loudness.

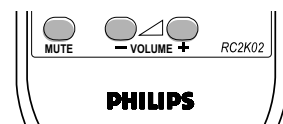

#### Surround sound key

- The DVD decoder circuit can simulate seven virtual surround sound effect. they are stadium; Amphitheater; live; concert; church; passive; wide.
- Press the surround key ( or the sound button in the front pannel) to switch the sound effect. Refer to the chapter [ Mode key] for details.

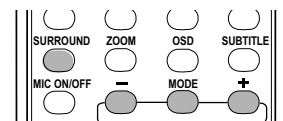


*NOTE: The mute function; volume function and surround sound function won't have effect on digital coaxial output or digital optical output.*

## Playing a DVD-video disc

## Playing title/chapter


### Title & chapter

A DVD disc may have one or more titles , and each title may have one or more chapters. It depends on the content (a movie, video clips, a drama series, etc) on the disc.

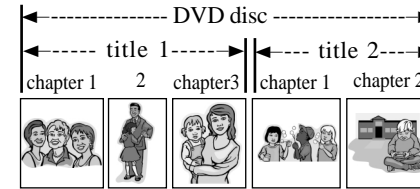

### Playing a title

- After you load a disc, information about the content shows on the screen waiting for your selection. Likewise, you can press the TITLE key on the remote control to turn back to the title menu during playback.
- If the items of the menu are numbered, press the appropriate number key on the remote control, if not, use the ▲▼◀▶ keys to highlight your selection.
- Press the SELECT key to confirm your selection.

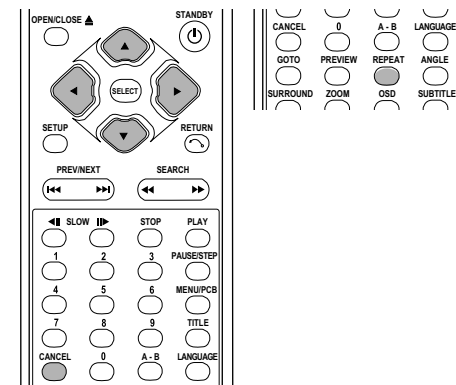

### Playing a chapter


- While you have selected a title, it may include one or more chapters. To select a chapter is the same as to select a title.
- Any time you want to watch another chapter during playback, press MENU/PBC key to turn back to the chapter menu and chose it again.

### REPEAT key

You can repeat playback a title or a chapter by press REPEAT key.

Pay attention to the hint on the screen.

- Press the REPEAT key once, repeat the current title.
- Press the REPEAT key twice, repeat the current chapter.
- Press the REPEAT key third time, quit repeat state.

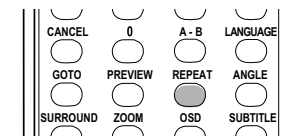


### A-B key

A-B key enables you to chose a certain piece of program to repeat.

Pay attention to the hint on the screen.


- Press the A-B key once to set a start point.
- Press the A-B key twice to set an end point. At the same moment, it begins to repeat from the start point.
- Press the A-B key third time, quit A-B repeat state.

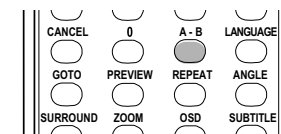

### GOTO key

You can switch titles or chapters or play beginning from any point of the disc by using GOTO key.

- Press the GOTO key once, you can set a certain title.
- Enter an available number then press the SELECT key to confirm it.
- Press the GOTO key twice, you can set a certain chapter.
- Enter an available number then press the SELECT key to confirm it.
- Press the GOTO key third times, you can set a start piont time.
- Enter an available number( e.g. 0:34:27) then press the SELECT key to confirm it.
- Press the GOTO key fourth times, quit the state.

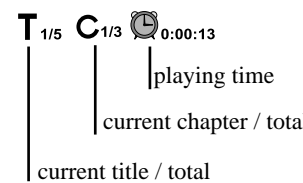

*NOTE: GOTO key may have no effect on some DVD disc.*

### Special DVD feature



original size



zoomed size

#### Zoom

- Press the ZOOM key on the remote control, you will get the picture twice than the original size, press it again, you get it four times in size. Use the ▲▼◀▶ key to view the rest part of the zoomed picture.
- Press the ZOOM key the third times to return to the original size.




angle 1





angle 2


#### Camera angle


- Scenes which photoed from different camera angles can be recorded in a DVD disc, it enables you to watch a scene from different angles. You can switch the camera angles by just pressing the ANGLE key on your remote control.

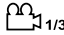NOTE: the function can only be achieved with a DVD which has recorded several angles on it. When this kind of DVD disc is loaded, you can see the hint in OSD bar on the screen. 

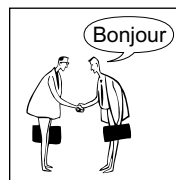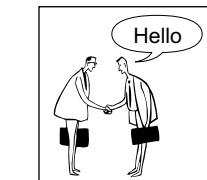


#### Changing audio languages

- If the DVD is recorded with multi-language audio track, you can select the language you want by pressing the LANGUAGE key on your remote control.
- When this kind of DVD disc is loaded, you can see the hint in OSD bar on the screen. 

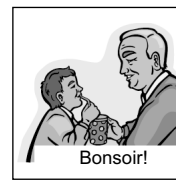


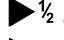



















#### Changing subtitles

- If the DVD is recorded with multi-subtitle track, you can select the subtitle you want by pressing the SUBTITLE key on your remote control.
- When this kind of DVD disc is loaded, you can see the hint in OSD bar on the screen. 

### Icons and menu bar



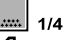








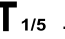



During play, various icons will appear on the TV screen to confirm the function has been selected. You can get rid of these icons by pressing OSD button on remote control.

- |   |                                |   |                              |
|---|--------------------------------|---|------------------------------|
|  | .....Open the disc tray        |  | .....Slow forward 1/2        |
|  | .....Close the disc tray       |  | .....Slow forward 1/4        |
|  | .....No disc in disc tray      |  | .....Slow forward 1/8        |
|  | .....play                      |  | .....Slow forward 1/16       |
|  | .....pause                     |  | .....Next                    |
|  | .....stop at current position  |  | .....Prev                    |
|  | .....Search forward(X1)        |  | .....Return                  |
|  | .....Search backward(X1)       |  | .....Menu Selection          |
|  | .....Search forward(X2)        |  | .....Operation not available |
|  | .....Search backward(X2)       |   |                              |
|  | .....Pause (Shows on display)  |   |                              |
|  | .....Stop(play from the start) |   |                              |

#### OSD (On Screen Display) banner icons

Any time during play, you can call up the OSD banner by pressing OSD button on remote control to check which functions are active.

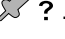-  T 1/5 .....Title /Track
-  0:00:13 .....Total time/Playing time
-  1/4 .....Subtitle
-  DEF/1 .....Language
-  OFF .....Repeat off
-  T .....Title/Track Repeation
-  A .....Chapter Repeation
-  AB .....Start point of A-B
-  D .....Repeat from A to B
-  PBC .....PBC OFF
-  PBC .....PBC ON
-  ? .....program
-  ! .....Bad disc

NOTE : The BAD DISC icon indicates you to clean the disc.

## Playing a SuperVCD/VCD/CD

### Disc Specification Icons


- CD** This icon indicates the following description of functions are available for CD.
- VCD** This icon indicates the following description of functions are available for VCD.
- SuperVCD** This icon indicates the following description of functions are available for SVCD.

### Video control during playback

#### PAUSE/STEP key on the remote control

- To get a still picture, press PAUSE/STEP key during play.
- To step forward to the next picture frame, press PAUSE/STEP key again.
- To return to play, press PLAY key.


SuperVCD VCD

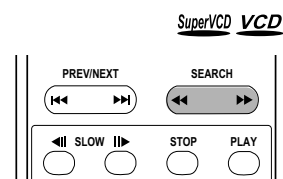

#### Search


- To search the content in fast speed, press SEARCH key for fast forward/rewind searching.
- Press the SEARCH key again to accelerate the speed during searching.
- While you find the point you want, press PLAY key to return to the normal play state.

 SuperVCD VCD



#### Slow Forward

 - To get slow motion effect during playback, press SLOW key.
- Press the SLOW key again, you can get different playback speeds.
- Use the PLAY key to return to the normal play state.
- Also you can return to the normal play state by just pressing the SLOW key. Refer to the diagram of the function loop.




### Audio control during playback

#### Mute

- Press the mute key to switch on/off the sound output.


#### Volume

- Press the volume + or volume - to adjust the loudness.

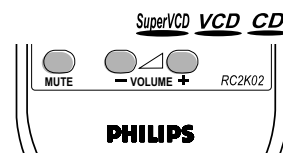


#### Surround sound key

- The DVD decoder circuit can simulate seven virtual surround sound effects. they are stadium; Amphitheater; live; concert; church; passive; wide.
- Press the SURROUND key ( or the sound button in the front pannel) to switch the sound effect. Refer to the chapter [ Mode key] for details.

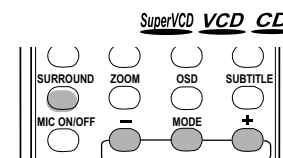

#### Audio channel selection

- SVCD has two stereo audio channels which are used for playing karaoke or the audio language selection. ( for a instance, you can chose one channel for only the music background of the song while you play the karaoke.)
- Press the LANGUAGE key on the remote control to select the audio channels you want.
- VCD has only one stereo audio channel, you can mute the left speaker or the right speaker by pressing the LANGUAGE key on the remote control.

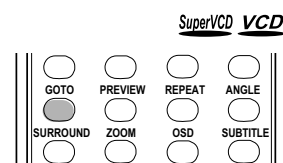


## Playing a SuperVCD/VCD/CD

### Playing title/track


#### Use PBC (PlayBack Control)

- Playback control is a kind of title/track index protocol between player and discs. When a disc is recorded with a standard VCD or SVCD format, there will be a menu which include titles/tracks for user to select the content of a movie or other video programs.
- When you switch on the PBC function you will enter the index menu which are available for selection after loading the SVCD or VCD disc. On the contrary, if you switch PCB function off, you will just start the disc from the beginning.
- You can switch the PCB function simply by pressing the MENU/PBC key on the remote control. Pay attention to the icon in the menu bar on the screen.
- If the items of the index menu are numbered, press the appropriate number key on the remote control, if not, use the ▲▼◀▶ keys to highlight it, then press the SELECT key to confirm your selection.

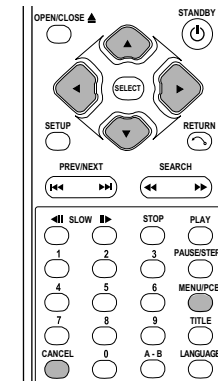


#### Nine pictures preview

- Some SVCD/VCD discs do not have standard menu structure, so you can't use PBC to select titles or tracks. But this player also offers you NINE PICTURES DIGEST function for the content preview. Remember when the NINE PICTURES DIGEST function is active, the PBC function is turned off automatically.
- The nine pictures function is a function which averagely divides the content of the disc into nine parts and shows the start picture of every part on the screen. With the nine pictures screen show, you can easy to search the part you want to watch by pressing PREVIEW key on remote control.
- Karaoke discs have their certain format, when you use this function, it shows in tracks. In most cases the tracks in a disc will be more than nine, at the moment you can use the keys PREV/NEXT to turn to the next page for more pictures.
- Not only you can view the tracks, but also view a track by pressing the PREVIEW key again. The function will averagely divides the track into nine parts as well as it does to the whole disc.
- Press PREVIEW key on the remote control to view the nine pictures on the screen, both you can use the number keys or the ▲▼◀▶ keys on the remote control to select the start picture of the divided content which you want to watch.

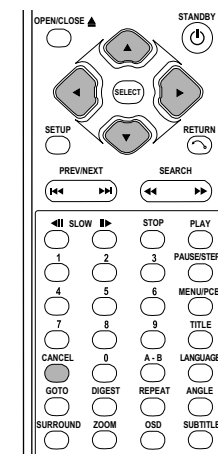

## Playing a SuperVCD/VCD/CD

SuperVCD VCD CD

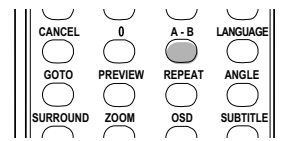


### A-B key

A-B key enables you to choose a certain piece of program to repeat. Pay attention to the hint on the screen.

- Press the A-B key once to set a start point.
- Press the A-B key twice to set an end point. At the same moment, it begins to repeat from the start point.
- Press the A-B key third time, quit A-B repeat state.

SuperVCD VCD CD

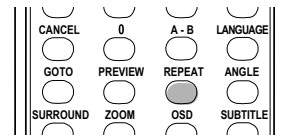


### REPEAT key

You can repeat to playback a track or a chapter by press REPEAT key. Please turn the PBC off at the moment.

- Pay attention to the hint on the screen.
- Press the REPEAT key once, repeat the current track.
  - Press the REPEAT key twice, repeat the whole disc.
  - Press the REPEAT key third time, quit repeat state.

SuperVCD VCD CD

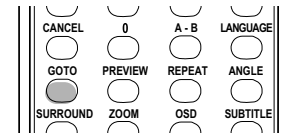

### GOTO key

You can switch titles or play beginning from any point of the disc by using the GOTO key. The operation will be some different between PBC ON and PBC OFF.

With the state of PBC OFF:

- Press the GOTO key once, you can set a certain title.
  - Enter an available number then press the SELECT key to confirm it.
- Press the GOTO key twice, you can set a start point time.
  - Enter an available number (e.g. 0:34:27) then press the SELECT key to confirm it.
- Press the GOTO key the third times, quit the state.

With the state of PBC ON:

- Press the GOTO key once, you can set a start point time.
  - Enter an available number (e.g. 0:34:27) then press the SELECT key to confirm it.
- Press the GOTO key the again, quit the state.

NOTE: GOTO key may have no effect on some VCD/SVCD disc.

## Playing a SuperVCD/VCD/CD

SuperVCD VCD

### Special VCD feature

#### Zoom

- Press the ZOOM key on the remote control, you will get the picture twice than the original size. Use the key to view the rest part of the zoomed picture.
- Press the ZOOM key the again to return to the original size.


#### RESUME

- At the state of PBC OFF, you can resume the play from the point at which you stopPed last time if you just pressed the STOP key once. It will start from the beginning if you pressed the STOP key twice to stop a play back.
- If you unload the disc by press the key OPEN/CLOSE key on the remote control (or OPEN/CLOSE button on front panel) during the playback, you can also achieve the resume play when you reload it again. Please pay attention to the mention 'resume' on screen and press PLAY key at the moment.
- The player can memorize five latest discs for resume play.

PCS 103 094

## KARAOKE


### General operation

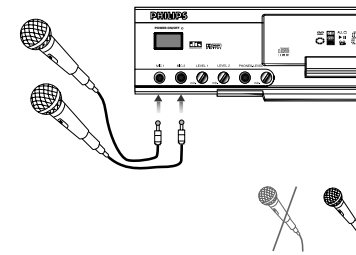

- Insert the plug of microphone into MIC jack. Be sure the player has properly connected to your TV or audio system.

- Press the MIC key on the remote control to switch the karaoke function on. You can see the function menu appears on the screen shows the mention of the reaction.

- Load a karaoke disc, press PLAY key to start to play. Remember to turn your microphone on.

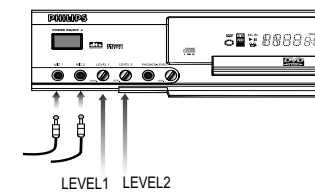


#### Microphone volume adjustment

- You can adjust the volume of microphone connected to MIC 1 jack by turning the knob LEVEL 1.
- You can adjust the volume of microphone connected to MIC 2 jack by turning the knob LEVEL 2.

### Extra functions


You can enter the function menu by pressing the MODE key on the remote control. The appeared menu enable you to play karaoke with different ways and to simulate different sound effects. Likewise, there are some other functions in three other pages ( you can turn the page by pressing MODE key) which concern to more functions besides karaoke, you can find the introduction of them in chapter [ MODE key].

Pressing the MODE key to active the function menu and turn to page karaoke. You will see a menu with nine items appearing on the screen. In this menu you can use keys on remote control to change the items, use the +/- key to select choices you want, use the CANCEL key to quit the function menu.

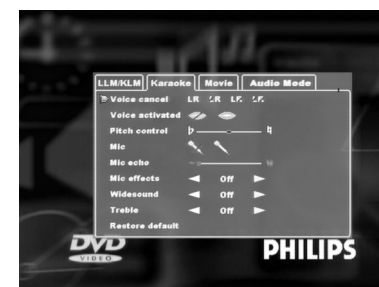

VOICE CANCEL available for only VCD and SVCD karaoke discs

- Stereo audio output includes two channels, they are left channel and right channel. The function VOICE CANCEL enables you to mute one or both of that two channels, so you can play karaoke only with music background or vocal sound.
- Press the key to turn to the item VOICE CANCEL, use the key to choose the option.

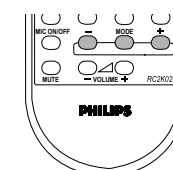


PCS 103 094

## KARAOKE

 **VOICE ACTIVATE** available for only VCD karaoke discs

- This function is designed especially for karaoke. You can imagine the situation that a song need both male and female singer to performance, how do you enjoy it yourself only? That is the point of the function.
- First, switch the VOICE ACTIVATE on, turn back to item VOICE CANCEL chosing the **LR** to mute vocal sound in /the song, then you will find that the vocal sound still exist unless you start to sing. While you are singing, only the music background is active, when you stop singing, the vocal sound comes back immediately.




**Pitch control**

- You can adjust the pitch to adapt your vocal by using the +/- key.

**MIC**

 - This item is the switch of turning on/off the microphone. The effect is just the same as the key MIC on remote control.
- Press the **▲▼** key to select the item and use **◀▶** key to turn on or turn off the microphone.



**MIC echo**

- You can increase MIC echo or decrease it by pressing the **◀▶** key.

**Mic effects**

- This function is used to simulate special effect of your vocal, it makes your voice sounds like the harmony, chorus or flange.
- Press the **▲▼** key to select the item and use **◀▶** key to chose the MIC effect.

**Wide sound**


- This function simulates a wide environment space. There are three options for you choose: low; medium; high.
- Press the **▲▼** key to select the item and use **◀▶** key to set wide sound effect.

**Treble**



- This function is used to increase the volume of treble. It makes you more relax in singing a high pitch song.
- Press the **▲▼** key to select the item and use **◀▶** key to chose a certain treble increase.

**Restore default**

- This item is used to reset all items to factory default, all your personal setting will be erased.
- Press the **▲▼** key to select the item and then press the SELECT key to confirm your decision.

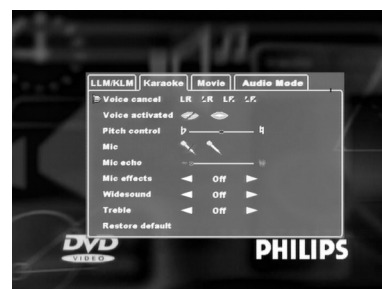

## Setup Menu

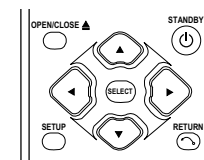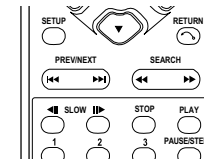


Enter setup menu --- **Press STOP key first**

- Press the SETUP key on your remote control to enter the Setup Menu. Remember that you can only enter the Setup Menu at the state of STOP, the SETUP key will not have any respond if you press it during playback.
- The setup menu will appear on the screen when you press the SETUP key, operation in the menu only needs DIRECTION keys, SELECT keys, RETURN key and SETUP key. You can use DIRECTION keys **▲▼** to choose an item, use DIRECTION keys **◀▶** to select an option in the item, use SELECT key to enter a submenu or confirm your selection, use the SETUP to save and quit setup.
- When you quit the setup, the setting will be stored in the player and it won't lost even if it is powered off.



**Audio language**

- DVD discs are available for recording maximum to 8 audio languages. So this item is used to choose one of them as default audio language.
- You can use **▲▼** keys to highlight it then use **◀▶** keys to select one of the audio languages in the list of the item. Press SETUP key to save and quit the Setup Menu.
- Your DVD disc may not include the audio language which you set in the Setup Menu. If so, the player will use the first audio language track as the default audio language.
- You can use the LANGUAGE key on the remote control to switch the audio languages you want. If the DVD records with multi\_language, the icon will appear on the screen. See the chapter [ Playing a DVD video disc ] for details.

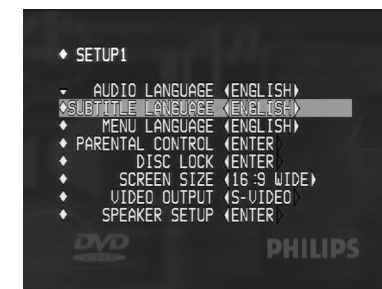

**Subtitle Language**

- DVD discs are available for recording maximum to 8 subtitle languages. So this item is used to choose one of them as default subtitle language.
- You can use **▲▼** keys to highlight it then use **◀▶** keys to select one of the subtitle languages in the list of the item. Press SETUP key to save and quit the Setup Menu.
- Your DVD disc may not include the subtitle language which you set in the Setup Menu. If so, the player will use the first subtitle track as the default subtitle language.
- You can use the SUBTITLE key on the remote control to switch the subtitle languages you want. If the DVD records with multi\_subtitle, the icon will appear on the screen. See the chapter [ Playing a DVD video disc ] for details.



**Menu Language**

- A DVD movie may have a menu which let you choose which chapter do you want to start with or something. Also the menu may be made in different languages, so the item is set for the selection of multi menu language.
- You can use **▲▼** keys to highlight it then use **◀▶** keys to select one of the subtitle languages in the list of the item. Press SETUP key to save and quit the Setup Menu.

## Setup Menu



fig .1

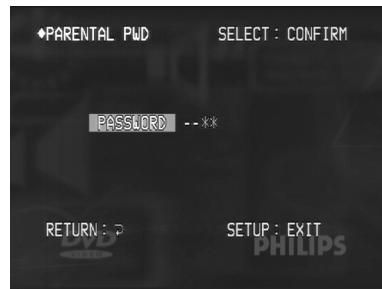


fig .2

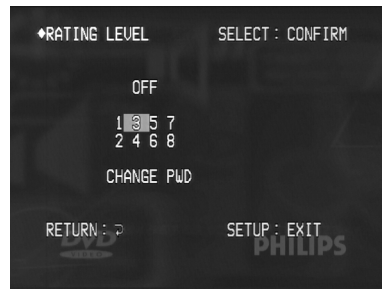


fig .3

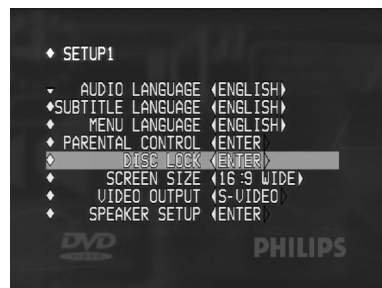


fig .4

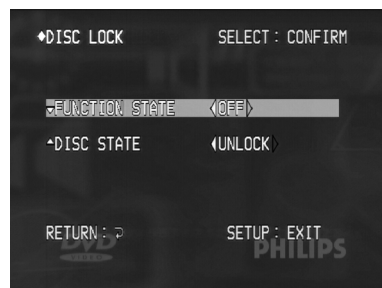


fig .5

### Parental control

- DVD disc can be set with levels which define the movie degrees of violence, horror or irticism. There are 8 degrees defined in a standard literature for the setting by distributors. Form level 1 to level 8, the ponderance increases gradually. If the parental control is activated, only the movies which the digree is lower than the level you set can be admitted to show, ortherwise, you have to enter the password for authorization.
- VCD, SVCD, CD has no level defination, so parental control function has no effect on those kind of discs. Most of illegal DVD discs don't have level defination.
- You can follow the steps below to setup the parental control:
  1. Highlight the item PARENTEL CONTROL by using the ▲▼ key , press the key SELECT to enter the submenu. ( Refer to the illustration fig. 1)
  2. Enter the password to log in. You can enter the superuser code 7890 to log in the submenu at the first time by pressing the number keys on the remote control, then press SELECT key to confirm it. ( Refer to the illustration fig. 2)
  3. Use the ▲▼ keys to set the item: OFF denotes parental control to be closed; number 1- 8 denotes the authorized level; CHANGE PASSWORD enables you to reset a user password by pressing SELECT key on the remote control to enter the sub menu. ( Refer to the illustration fig. 3)
  4. Press SETUP key to save and quit setup when you finish it. The parental control is active right away.


### NOTE:

- a. You can use the superuser password 7890 log in or open the parental lock at any time, even if you have set a password.
- b. The parental control only limits the player to playback a high level DVD, it doesn't lock the DVD disc. So the disc can still be played in another apparatus.

### Disc lock


- Although you can't use parental control on VCD and SVCD disc, but you still have the choise of using disc lock to limit them playing on your player.
- The function disc lock can lock discs maximum to 80s. When lock the current disc, the player will record its serial number for the recognition. Next time it is loaded, the user will be asked to enter password, if the password is wrong, it will be forbidden to playback.
- The password is the same as it in parental control. Also, you can use the superuser code 7890 to open the disc lock if you forget the password.
- You can follow the steps below to set the disc lock:
  1. Highlight the item DISC LOCK by using the ▲▼ key , press the key SELECT to enter the submenu. ( Refer to the illustration fig. 4)
  2. Enter the password to log in. You can enter the superuser code 7890 to log in the submenu at the first time by pressing the number keys on the remote control, then press SELECT key to confirm it. ( Refer to the illustration fig. 5)
  3. There are two items in the submenu, they are FUNCTION STATE and DISC STATE. The first item, FUNCTION STATE, determines whether the disc lock function is active or not; the DISC STATE determines the operation to the current disc, you can chose LOCK or UNLOCK. If you see INAVAILABLE showing in the item, it means the disc can't be lock.
  4. Press the SETUP key to save and quit the setup when you finish setting.

## Setup Menu

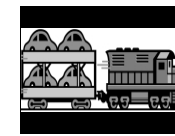


4:3 LB

fig .1

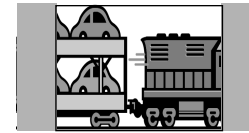




4:3 PS

fig .2

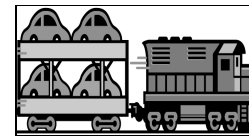

16:9 wide screen

fig .3

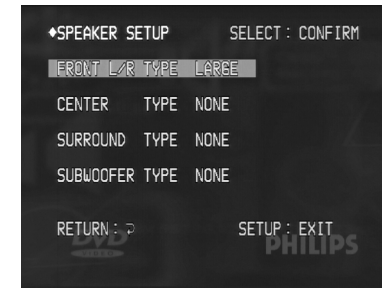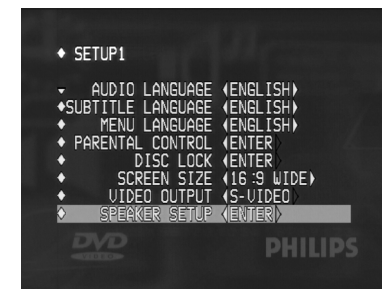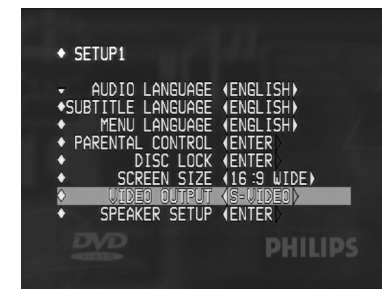

### Screen size

- The common TV screen size rate is 4:3, but there is also a kind of TV screen which its size rate is 16:9, as wide as the screen in cenima. It is what we call 'wide-screen'.
- If a disc is recoded in the size of wide-screen, it will have some trouble in playing on a normal TV set. That is what the function SCREEN SIZE is designed for.
- There are three selections in the item to modify the distorted screen picture:
  1. 4:3 LB --- used for 16:9 format movie discs play in 4:3 TV set. it sacrifices certain top and bottom screen space for getting 16:9 picture size. ( refer to fig .1 )
  2. 4:3 PS --- used for 16:9 format movie discs play in 4:3 TV set. it sacrifices certain picture part for getting 4:3 effect. ( refer to fig .2 )
  3. 16:9 wide-screen --- used for 16:9 format movie discs play in 16:9 TV set. if the disc is recorded in 4:3 format, the picture will also have some distortion.
- You can use ▲▼ keys to highlight item SREEN SIZE then use ◀▶ keys to select a proper option. Press SETUP key to save and quit the Setup Menu.

### Video output

- The item is used to choose the way of the video output. There are two options in the item: S-video and YUV ( Y/CR/Cb). Refer to the chapter [ video connection].
- You can use ▲▼ keys to highlight item SREEN SIZE then use ◀▶ keys to select a proper option. Press SETUP key to save and quit the Setup Menu.
- Whether you choose S-video or YUV output, the CVBS video output will work as usual.

### Speaker setup

- It is necessary for you to setup SPEAKER SETUP when you use multi\_channel audio output, turn on the center speaker, surround speaker and subwoofer. ( refer to the chapter [ connection] )
- You can use ▲▼ keys to highlight item SPEAKER SETUP then press SELECT key to enter the submenu.

- After entering the submenu, you can see there are four items set in factory default. It is for the stereo audio output, not for the multi\_channel audio output. Changing the option you can use ▲▼ keys to highlight items then press SELECT key to enter the second level submenu. Refer to the illustration.

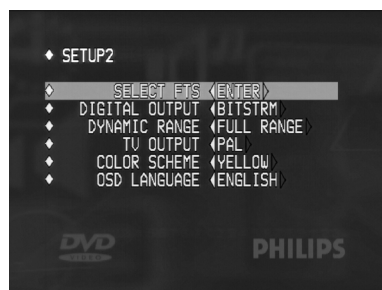
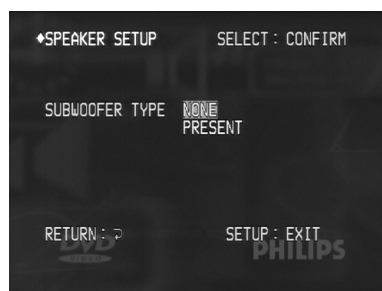
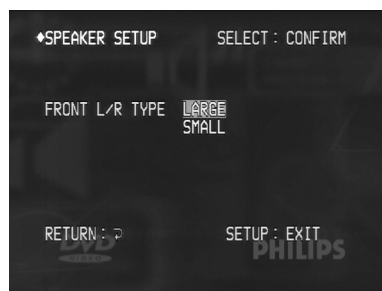


fig .1

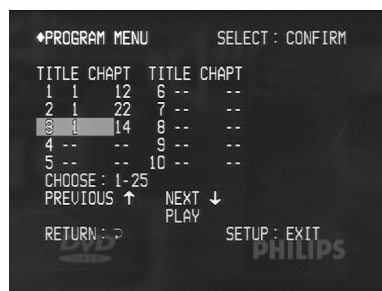


fig .2

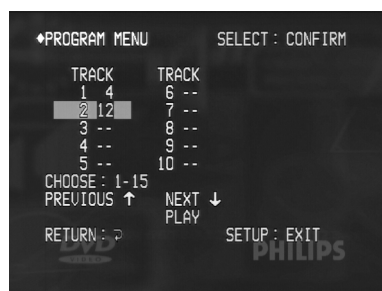


fig .3

## Setup Menu

- At second level submenu, you can simply use ▲▼ key and SELECT key to change and confirm options, use RETURN key to turn back to the main menu.
- For a instance, set the front speaker. There are two options in the item, one is LARGE, the other is SMALL. LARGE means the large speaker which can reproduce the sound lower than 50Hz; small means the contrary, the speaker have no the capability of reproducing bass. The option is set for the substitution of subwoofer, if you don't have subwoofer, the LARGE option makes the bass component output from front speaker instead. Follow this way, you can set the items CENTER, SURROUND and SUBWOOFER.

APPENDIX: Here are some useful information which can help you to setup speakers.

1. A standard DVD disc is recorded with multi\_channel audio tracks, and these audio channels cooperate reproducing the sound environment which is so called HOME CINEMA. The center speaker is used to output dialogs in a movie. So if the item CENTER TYPE is closed, you won't hear the conversation of a movie.
2. Sound which comes from rear place is not as sensitive as it comes from front, so it is enough to use small speaker for surround type.
3. People can't distinguish the direction of low frequency sound, so you can furnish the subwoofer in any place in the room.

## FTS - Favorite Track Selection

- FTS enables you to play a VCD or DVD karaoke disc in a certain order of tracks, the maximum quantity can be 20 and every track can be stored several times.

- You can set your FTS for a DVD karaoke disc following the steps below:
  1. Use ▲▼ keys to highlight item SELECT FTS then press SELECT key to enter the submenu. ( Refer to fig .2)
  2. In the submenu, you need to input titles and chapters you like. ( You can see the hint on the screen which shows the range you can choose, if you enter a umber which is out of the range, it won't be accepted.)
  3. Pressing the SELECT key on the remote control, input a number of title in the highlighted line, then press SELECT key again. Now the cursor moves to the chapter column. Input an available number of chapter, press SELECT key to close setting this track.
  4. Use ▲▼ keys to move the cursor to next line, set another track in this way. Pressing PLAY key to start playing FTS.

- VCD karaoke discs don't have titles and chapters, only have tracks. So you need only set the tracks.

- You can set your FTS for a DVD karaoke disc following the steps below:
  1. Use ▲▼ keys to highlight item SELECT FTS then press SELECT key to enter the submenu. ( Refer to fig .3)
  2. In the submenu, you need to input the number of your favorite tracks. ( Also see the hint on the screen which shows the range you can choose, if you enter a umber which is out of the range, it won't be accepted.)
  3. Press SELECT key on the remote control, input an available number of tracks in the highlighted line then press the SELECT key again to confirm it.
  4. Use ▲▼ keys to move the cursor to next line, set another track in this way. Pressing PLAY key to start playing FTS.

## Setup Menu



## Digital output

- Audio output has two ways, they are digital audio output and analog audio output. The digital audio output combines multi\_channel analog audio output through an optical cable or a coaxial cable, it can't be reproduced directly to sound unless it is analysed by a decoder circuit in the DVD player or a receiver.
- Digital audio output has different format, one of them is bit-stream ( BITSTRM ), it is for the Dolby Digital (also known as AC-3 or Dolby 5.1) decode; the other is LPCM, it is for the Linear Palus Coder Modulate decoder.
- After you verify your decoder instrument, you can setup the item by this way: Use ▲▼ keys to highlight item DIGITAL OUTPUT then use ◀▶ keys to select a proper option. Press SETUP key to save and quit the Setup Menu.

## Dynamic range

- Dynamic range is used to control original sound loudness of a movie automatically.
- There are three options in the item:
  1. FULL RANGE : Do not compress the dynamic range.
  2. STANDARD TV : Compress the dynamic range for standard TV.
  3. NIGHT TIME : Reduce the loud sound and increase faint soud, make it fit for watching during night time.

NOTE: The D.R.C function compress only has effect on low frequency signal.

## TV output

- There are two major Television standards, one is PAL, it is popular in Asia; the other is NTSC (National Television Systems Committee) which is popular in America. Now most of TV can play with both of these two standards, but if your TV is old fashioned, you should setup the item to make it fit your TV.
- You can setup the item by this way: Use ▲▼ keys to highlight item TV OUTPUT then use ◀▶ keys to select a proper option. Press SETUP key to save and quit the Setup Menu.



## Color scheme

- You can choose the color of letters and icons as you like.
- Setup the item by this way: Use ▲▼ keys to highlight item COLOR SCHEME then use ◀▶ keys to select a proper option. Press SETUP key to save and quit the Setup Menu.




## OSD language

- You can change the On-Screen Display language.
- Setup the item by this way: Use ▲▼ keys to highlight item OSD LANGUAGE then use ◀▶ keys to select a proper option. Press SETUP key to save and quit the Setup Menu.

## MODE key

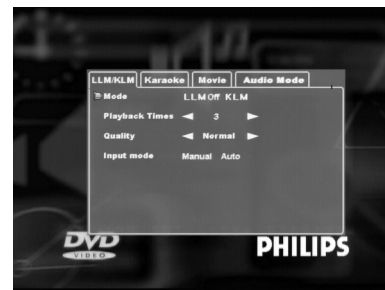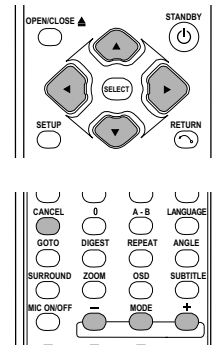

LLM OFF KLM

 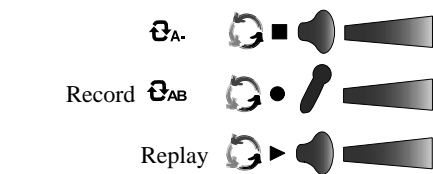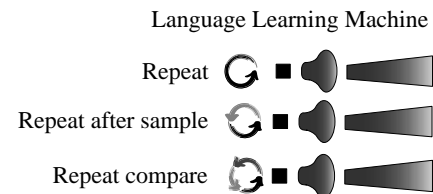

### General introduction

- You can call the function menu by pressing MODE key on the remote control.
- There are four pages in the function menu: LLM & KLM, Karaoke, Movie, Audio Mode. You can turn the page by pressing MODE key.
- You can use CANCEL key on the remote control to save and quit function menu.

NOTE: If the sound is some strange when you play a movie, it may because of the function menu is still in Karaoke state with special sound effect setup. If so, you need to turn the page to Movie, or, for DVD disc, turn to Audio Mode page for DVD disc.

### Function explanation

Page LLM & KLM only available for VCD and SVCD

There are four items in this page, they are : LLM OFF KLM; Playback time; Quality; Input mode.

#### 1. LLM and KLM

- LLM means Language Learning Machine, it designed for learning language --- repeat a certain paragraph and record your pronunciation. It helps you to study language through a movie.
- There are three playback functions in LLM, you can see the icons on the screen.
  - Repeat: repeating the selected paragraph certain times. ( Playback times)
  - Repeat after sample: repeating the selected paragraph once, then mute the sound, repeat picture only for you to read it. The process recycles certain times. ( Playback times)
  - Repeat compare: recording the selected paragraph and your reading, then repeat it. You can compare the original sound and your voice.
- Press the - key on the remote control to chose LLM mode.

- Use 'Repeat after sample' you have to choose a paragraph for repeating first. Press A-B key on the remote control once, set the start point, you will see the hint **A-** on the OSD bar; press it again, set the end point, see the hint **AB** .
- When you set the end point, the player turns back to play from the start point with the sound muted, so that you can read after the sample.


- Use 'Repeat compare' you also need to set the paragraph, also, use the key A-B to set the start point and the end point. when you set the end point, the player turns back to play from the start point and begins to record your voice. ( See the icon left )
- When the recording comes to the end point, it stops and replay this paragraph with both original voice and your voice.
- Remember the recording time is limited, see the item Quality for details.

## MODE key

Karaoke Learning Machine



- You can use the + key on the remote control to choose the KLM mode. See the icon on the screen.
- You need to set a start point for recording your singing. Press A-B key to start recording, see the icon on screen **A-** ; when you finish recording, press A-B key again to set the end point, see the icon **AB** on the screen. Then the player start to replay the paragraph with both your voice and music background.
- Remember the recording time is limited, see the item Quality for details.

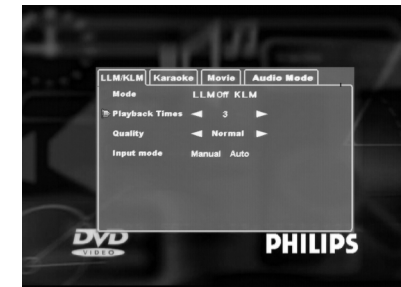

#### 2. Playback times


- This item set the playback times for LLM and KLM, so it won't repeat umpteenth times like it is in common play.
- you can use **▲▼** keys to select items and use +/- keys or **◀▶** keys to change the Playback times, the number is up to 8 times.

#### 3. Quality

- Sound record quality determines how long you can record. If you use high quality to record, it can last about 75 seconds; if it is low, it is about 150 second.
- you can use **▲▼** keys to select items and use +/- keys or **◀▶** keys to change the Quality of sound record.

#### 4. Manual Auto

- You can set the paragraph for LLM or KLM manually or automatically.
- If you select Manual, you need to set the start point and the end point by using the key A-B.
- If you select Auto, the player will repeat or record ( depends on the function you selected in LLM or KLM) automatically. That means it will start when the voice starts, end when the voice disappears.
- you can use **▲▼** keys to select items and use +/- keys or **◀▶** keys to select whether use Manual or Auto.

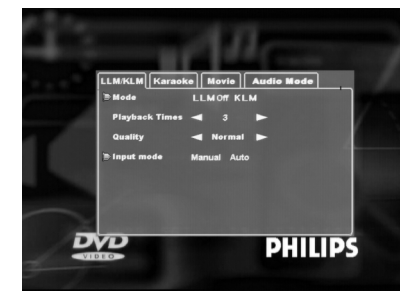


#### Page Karaoke

- Press the MODE key on the remote control to turn to page Karaoke, the sound effect setting for karaoke is active right away. Refer to chapter [ KARAOKE] for details.
- you can use **▲▼** keys to select items and use +/- keys or **◀▶** keys to change the options of the item in this page.




### Page Movie

- There are two items in this page: Sound fields and Graphics equalizer.

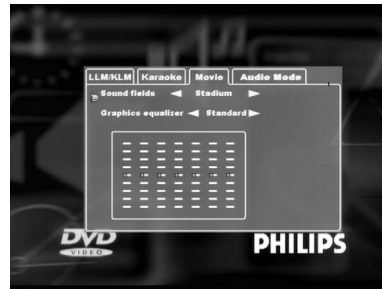

- Sound field provide you seven kind of virtual surround sound effect. they are stadium; Amphitheater; live; concert; church; passive; wide.
- You can use +/- keys or ◀▶ keys to change the options of the item.
- Also you can use the SOUND key on remote control to switch the options, it is the same to use the SOUND button on front panel.
- Graphic equalizer includes four options: Standard; Classic; Rock; User. You can either use the option Standard; Classic; Rock, or personalize the option User yourself.
- You can setup the User option following the steps below:
  1. Use ◀▶ keys to select the User option, press the SELECT key on remote control to enter the further setup.
  2. Use ◀▶ keys to select different frequency, use ▲▼ keys to adjust the loudness on this frequency. Press SELECT key to save and quit the option.


### Page Audio Mode

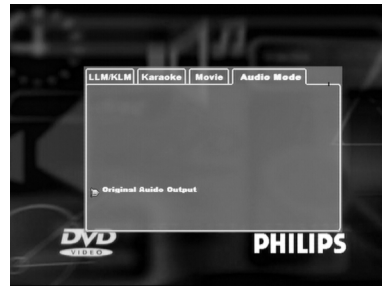

- There are only one item in this page --- Digital Audio Output. It outputs audio signal without doing any handling. It's usually used for DVD movie with perfect digital audio output such as DTS or Dolby Digital.
- You can use MODE key on the remote control to turn to the page Audio Mode, press SELECT key to confirm it.

### Disc maintains

Some problems occur because the disc inside the player is dirty. To avoid those problems clean your discs regularly, in the following way:

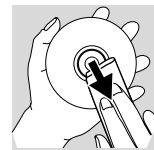

- When the disc becomes dirty, clean it with a cleaning cloth. Wipe the disc from center to out side.

**CAUTION:** Do not use solvents such as benzine, thinner, commercially available cleaners, or anti-static spray intended for analog discs.

### Environmental information

All redundant packing material has been omitted. We have done our utmost to make the packaging easily separable into three mono materials: cardboard (box), polystyrene foam (buffer) and polyethylene (bags, protective foam sheet.)


Your set consists of material which can be recycled if disassembled by a specialized company. please observe the local regulations regarding to the disposal of packing materials, dead batteries and old equipment.

### Before requesting service

If it appears that the DVD-Video player is faulty, first consult this checklist. It may be that something has been overlooked. **Under no circumstances should you try to repair the player yourself; as this will invalidate the warranty. Only qualified service personnel can remove the cover or service this player.**

Look for the specific symptom(s). Then perform only the actions listed to remedy the specific symptom(s).

| Symptom   | Remedy   |
|---|--|
| <b>No power</b>   | Check if the on/off button on the front of the player is set to on.<br>Check if there is power at the AC outlet by plugging in another appliance.  |
| <b>No picture</b>   | Check if the TV is switched on.<br>Select the same channel and source on the TV as on the player.<br>Check the video connection.   |
| <b>Distorted picture</b>  | Check the disc for fingerprints and clean with a soft cloth, wiping from center to edge.<br>Sometimes a small amount of picture distortion may appear .This is not a malfunction.  |
| <b>Completely distorted picture or no color with player menu.</b>         | If the picture is distorted completely or if the picture rolls vertically, make sure the NTSC/PAL setting at the DVD player matches the video signal of your television.<br>If your TV video signal is NTSC, select the NTSC setting at the DVD player.<br>If your video signal is PAL, select the PAL setting - see <b>NTSC/PAL SETTINGS.</b> |
| <b>Distorted or Black/White picture with DVD or Video CD.</b>             | The disc format does not match your TV's video signal (PAL/NTSC).  |
| <b>No sound</b>   | Check audio connections.<br>If you are using a HiFi amplifier, try another sound source.   |
| <b>Distorted sound from HiFi amplifier.</b>                               | Check to make sure that no audio connections are made to the amplifier phono input.  |
| <b>No audio at digital output.</b>  | Check the digital connections.<br>Check the settings menu to make sure the digital output is set to ALL or PCM.<br>Check if the audio format of the selected audio language matches your receiver capabilities.  |
| <b>Disc can't be played.</b>  | Ensure the disc label is facing up.<br>Clean the disc.<br>Check if the disc is defective by trying another disc.<br>Check to see if the disc is defective, badly scratched or warped (not flat)  |
| <b>No return to start-up screen when disc is removed.</b>                 | Reset by switching the player off, then on again.<br>Check to see if the program requires another disc to be loaded.   |
| <b>The player does not respond to the remote control.</b>                 | Aim the remote control directly at the sensor on the front of the player.<br>Remove any obstacles between the player and the remote control.<br>Inspect or replace the batteries in the remote control.  |
| <b>Buttons do not work.</b>   | In order to completely reset the player, unplug the AC cord from the AC outlet for a few seconds.  |
| <b>Player does not respond to all operating commands during playback.</b> | Operations are not permitted by the disc. Refer to the instructions of the disc.   |

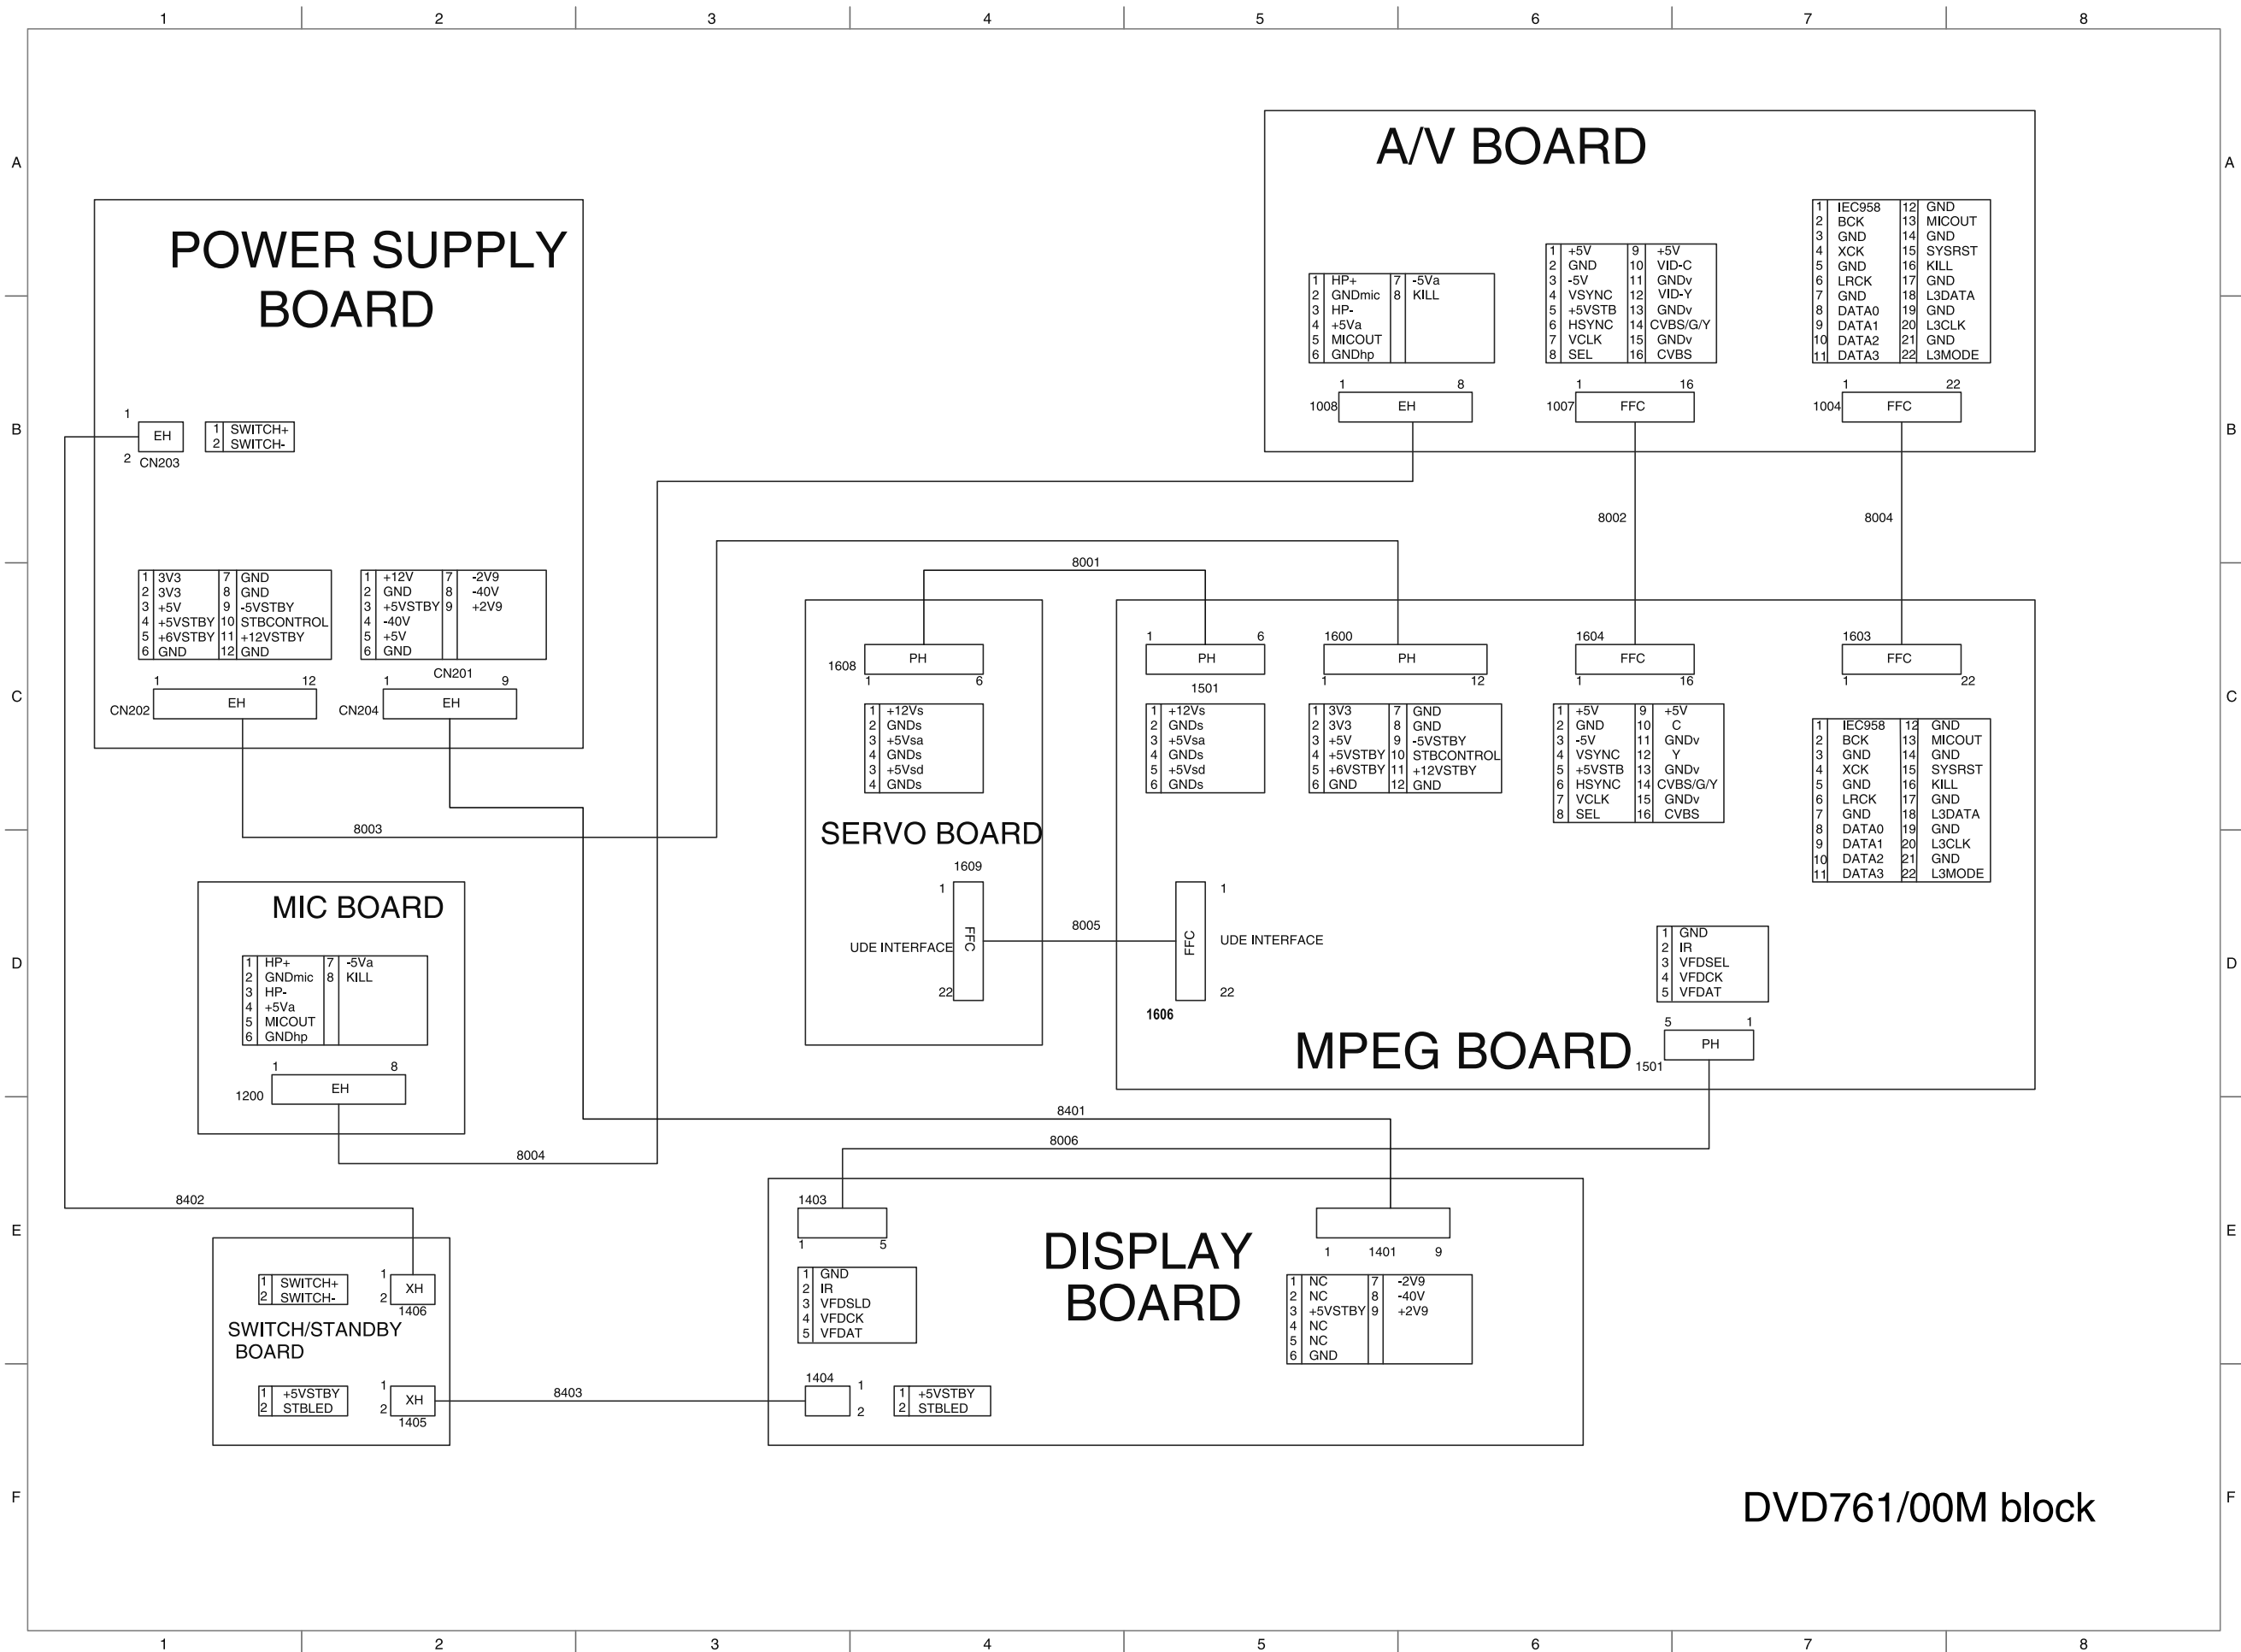

# POWER SUPPLY BOARD

# AV BOARD

# SERVO BOARD

# MIC BOARD

# MPEG BOARD

# DISPLAY BOARD

# SWITCH/STANDBY BOARD

DVD761/00M block

|   |         |    |            |
|---|---------|----|------------|
| 1 | 3V3     | 7  | GND        |
| 2 | 3V3     | 8  | GND        |
| 3 | +5V     | 9  | -5VSTBY    |
| 4 | +5VSTBY | 10 | STBCONTROL |
| 5 | +6VSTBY | 11 | +12VSTBY   |
| 6 | GND     | 12 | GND        |

|   |         |   |      |
|---|---------|---|------|
| 1 | +12V    | 7 | -2V9 |
| 2 | GND     | 8 | -40V |
| 3 | +5VSTBY | 9 | +2V9 |
| 4 | -40V    |   |      |
| 5 | +5V     |   |      |
| 6 | GND     |   |      |

|   |        |   |      |
|---|--------|---|------|
| 1 | HP+    | 7 | -5Va |
| 2 | GNDmic | 8 | KILL |
| 3 | HP-    |   |      |
| 4 | +5Va   |   |      |
| 5 | MICOUT |   |      |
| 6 | GNDhp  |   |      |

|   |        |    |          |
|---|--------|----|----------|
| 1 | +5V    | 9  | +5V      |
| 2 | GND    | 10 | VID-C    |
| 3 | -5V    | 11 | GNDv     |
| 4 | VSYNC  | 12 | VID-Y    |
| 5 | +5VSTB | 13 | GNDv     |
| 6 | HSYNC  | 14 | CVBS/G/Y |
| 7 | VCLK   | 15 | GNDv     |
| 8 | SEL    | 16 | CVBS     |

|    |        |    |        |
|----|--------|----|--------|
| 1  | IEC958 | 12 | GND    |
| 2  | BCK    | 13 | MICOUT |
| 3  | GND    | 14 | GND    |
| 4  | XCK    | 15 | SYSRST |
| 5  | GND    | 16 | KILL   |
| 6  | LRCK   | 17 | GND    |
| 7  | GND    | 18 | L3DATA |
| 8  | DATA0  | 19 | GND    |
| 9  | DATA1  | 20 | L3CLK  |
| 10 | DATA2  | 21 | GND    |
| 11 | DATA3  | 22 | L3MODE |

|   |    |    |  |
|---|----|----|--|
| 1 | EH | 12 |  |
|---|----|----|--|

|   |    |   |  |
|---|----|---|--|
| 1 | EH | 9 |  |
|---|----|---|--|

|   |       |  |  |
|---|-------|--|--|
| 1 | +12Vs |  |  |
| 2 | GNDs  |  |  |
| 3 | +5Vsa |  |  |
| 4 | GNDs  |  |  |
| 5 | +5Vsd |  |  |
| 6 | GNDs  |  |  |

|   |       |  |  |
|---|-------|--|--|
| 1 | +12Vs |  |  |
| 2 | GNDs  |  |  |
| 3 | +5Vsa |  |  |
| 4 | GNDs  |  |  |
| 5 | +5Vsd |  |  |
| 6 | GNDs  |  |  |

|   |         |    |            |
|---|---------|----|------------|
| 1 | 3V3     | 7  | GND        |
| 2 | 3V3     | 8  | GND        |
| 3 | +5V     | 9  | -5VSTBY    |
| 4 | +5VSTBY | 10 | STBCONTROL |
| 5 | +6VSTBY | 11 | +12VSTBY   |
| 6 | GND     | 12 | GND        |

|   |        |    |          |
|---|--------|----|----------|
| 1 | +5V    | 9  | +5V      |
| 2 | GND    | 10 | C        |
| 3 | -5V    | 11 | GNDv     |
| 4 | VSYNC  | 12 | Y        |
| 5 | +5VSTB | 13 | GNDv     |
| 6 | HSYNC  | 14 | CVBS/G/Y |
| 7 | VCLK   | 15 | GNDv     |
| 8 | SEL    | 16 | CVBS     |

|    |        |    |        |
|----|--------|----|--------|
| 1  | IEC958 | 12 | GND    |
| 2  | BCK    | 13 | MICOUT |
| 3  | GND    | 14 | GND    |
| 4  | XCK    | 15 | SYSRST |
| 5  | GND    | 16 | KILL   |
| 6  | LRCK   | 17 | GND    |
| 7  | GND    | 18 | L3DATA |
| 8  | DATA0  | 19 | GND    |
| 9  | DATA1  | 20 | L3CLK  |
| 10 | DATA2  | 21 | GND    |
| 11 | DATA3  | 22 | L3MODE |

|   |        |   |      |
|---|--------|---|------|
| 1 | HP+    | 7 | -5Va |
| 2 | GNDmic | 8 | KILL |
| 3 | HP-    |   |      |
| 4 | +5Va   |   |      |
| 5 | MICOUT |   |      |
| 6 | GNDhp  |   |      |

|   |               |    |  |
|---|---------------|----|--|
| 1 | UDE INTERFACE | 22 |  |
|---|---------------|----|--|

|   |               |    |  |
|---|---------------|----|--|
| 1 | UDE INTERFACE | 22 |  |
|---|---------------|----|--|

|   |        |  |  |
|---|--------|--|--|
| 1 | GND    |  |  |
| 2 | IR     |  |  |
| 3 | VFDSEL |  |  |
| 4 | VFDCK  |  |  |
| 5 | VFDAT  |  |  |

|   |        |  |  |
|---|--------|--|--|
| 1 | GND    |  |  |
| 2 | IR     |  |  |
| 3 | VFDSLD |  |  |
| 4 | VFDCK  |  |  |
| 5 | VFDAT  |  |  |

|   |         |   |      |
|---|---------|---|------|
| 1 | NC      | 7 | -2V9 |
| 2 | NC      | 8 | -40V |
| 3 | +5VSTBY | 9 | +2V9 |
| 4 | NC      |   |      |
| 5 | NC      |   |      |
| 6 | GND     |   |      |

|   |         |   |    |
|---|---------|---|----|
| 1 | SWITCH+ | 1 | XH |
| 2 | SWITCH- | 2 | XH |

|   |         |   |    |
|---|---------|---|----|
| 1 | +5VSTBY | 1 | XH |
| 2 | STBLED  | 2 | XH |

|   |         |   |    |
|---|---------|---|----|
| 1 | +5VSTBY | 1 | XH |
| 2 | STBLED  | 2 | XH |


---

# POWER BOARD

---


## TABLE OF CONTENTS

|                            |    |
|----------------------------|----|
| Circuit diagram.....       | 20 |
| Component layout.....      | 21 |
| Electrical parts list..... | 21 |

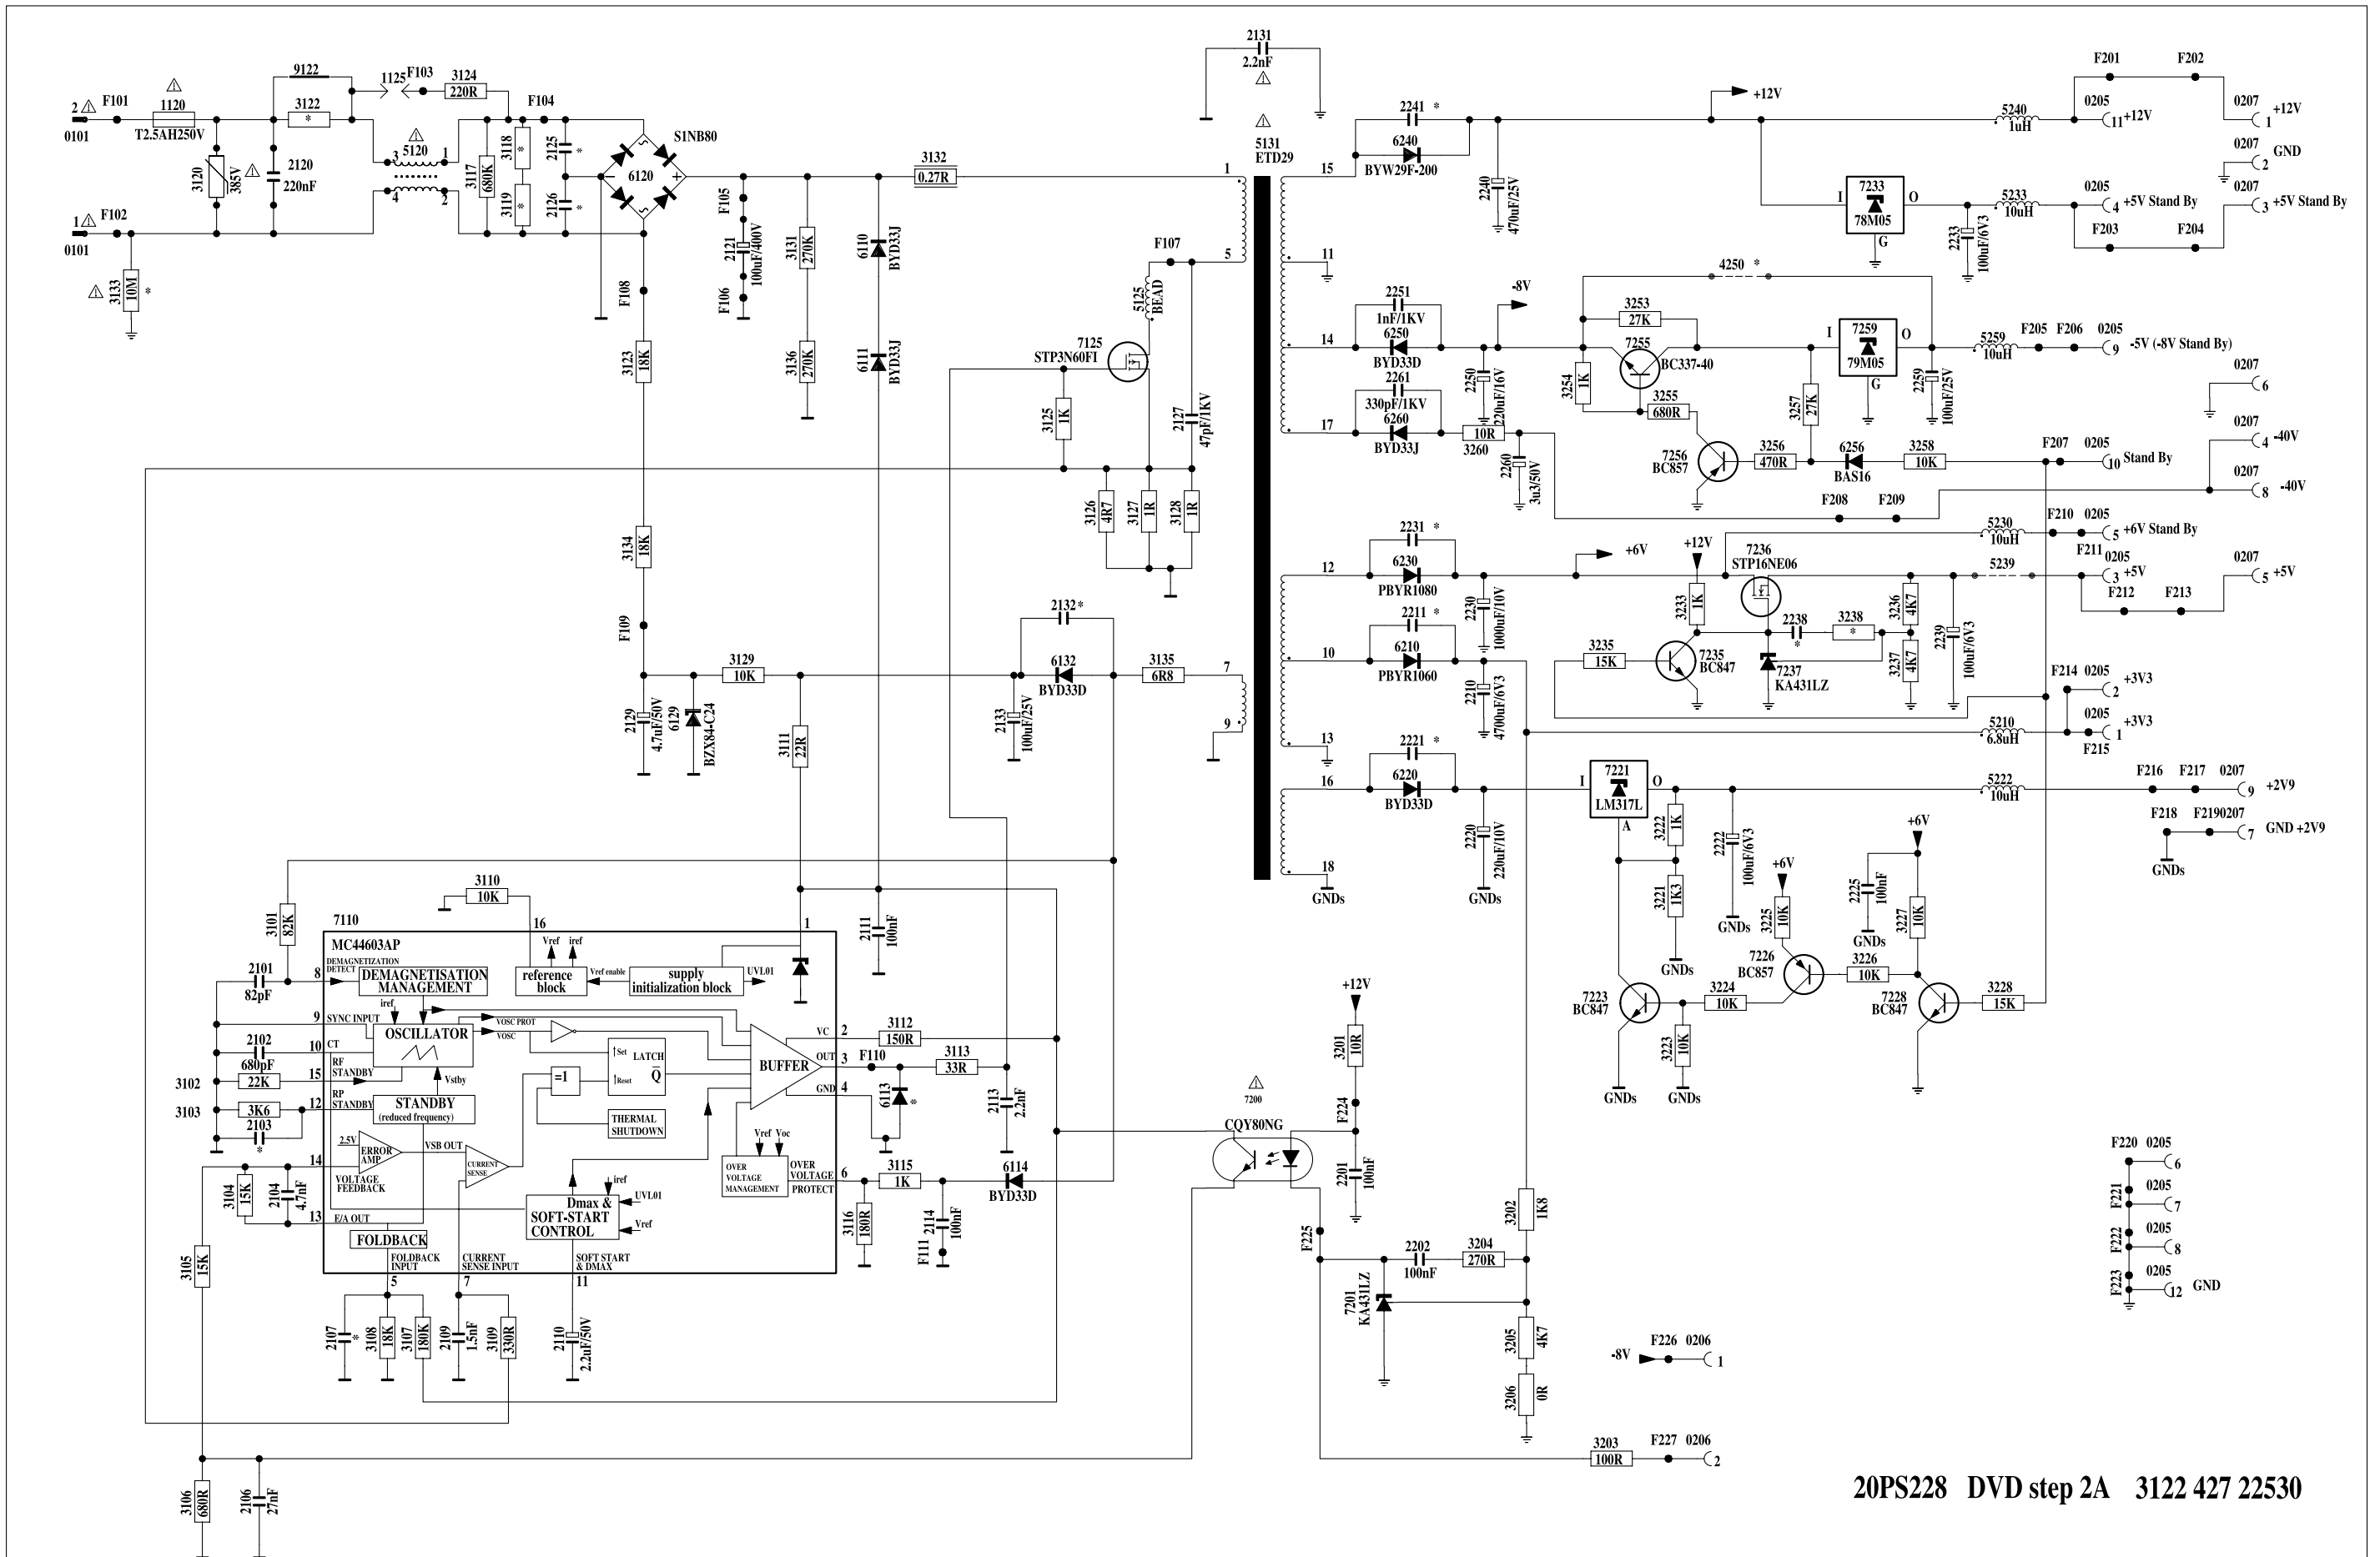

|           |          |          |          |          |           |          |           |          |          |           |           |           |          |          |          |           |           |          |
|-----------|----------|----------|----------|----------|-----------|----------|-----------|----------|----------|-----------|-----------|-----------|----------|----------|----------|-----------|-----------|----------|
| 0000 C 5  | 1120 D 2 | 2121 C 4 | 2131 C 7 | 2220 A 8 | 2233 B 10 | 2251 B 8 | 3115 D 4  | 3123 B 3 | 3128 B 5 | 3135 B 6  | 5125 B 5  | 5233 B 10 | 6111 C 5 | 6210 C 8 | 6260 A 8 | 7221 A 9  | 7259 B 9  | 9260 B 7 |
| 0101 B 1  | 1125 C 3 | 2125 B 3 | 2132 C 6 | 2221 A 8 | 2239 D 9  | 2259 B 9 | 3117 A 3  | 3124 B 3 | 3129 D 3 | 3228 B 11 | 5131 B 6  | 5239 C 10 | 6113 D 4 | 6220 A 7 | 7110 D 3 | 7233 B 10 | 9210 A 10 | 9261 D 7 |
| 0205 C 10 | 2110 D 3 | 2126 A 3 | 2133 D 6 | 2222 A 9 | 2240 A 8  | 2260 A 9 | 3120 C 2  | 3125 D 5 | 3132 A 5 | 3233 B 9  | 5210 D 10 | 5240 A 9  | 6114 C 6 | 6230 B 8 | 7125 C 5 | 7236 C 9  | 9214 A 11 | 9262 B 8 |
| 0206 D 10 | 2120 C 2 | 2127 B 5 | 2210 C 8 | 2230 B 8 | 2241 A 8  | 2261 A 8 | 3120a C 2 | 3126 B 5 | 3133 A 3 | 3235 C 10 | 5222 A 9  | 5259 C 10 | 6120 B 3 | 6240 A 8 | 7200 D 7 | 7237 D 9  | 9230 C 9  |          |
| 0207 A 10 | 2121 C 4 | 2129 D 3 | 2211 C 8 | 2231 B 8 | 2250 B 8  | 3101 D 4 | 3122 C 3  | 3127 B 5 | 3134 D 2 | 5120 A 2  | 5230 C 10 | 6110 B 4  | 6132 C 6 | 6250 B 7 | 7201 D 8 | 7255 B 9  | 9250 B 9  |          |

1 2 3 4 5 6 7 8 9 10 11

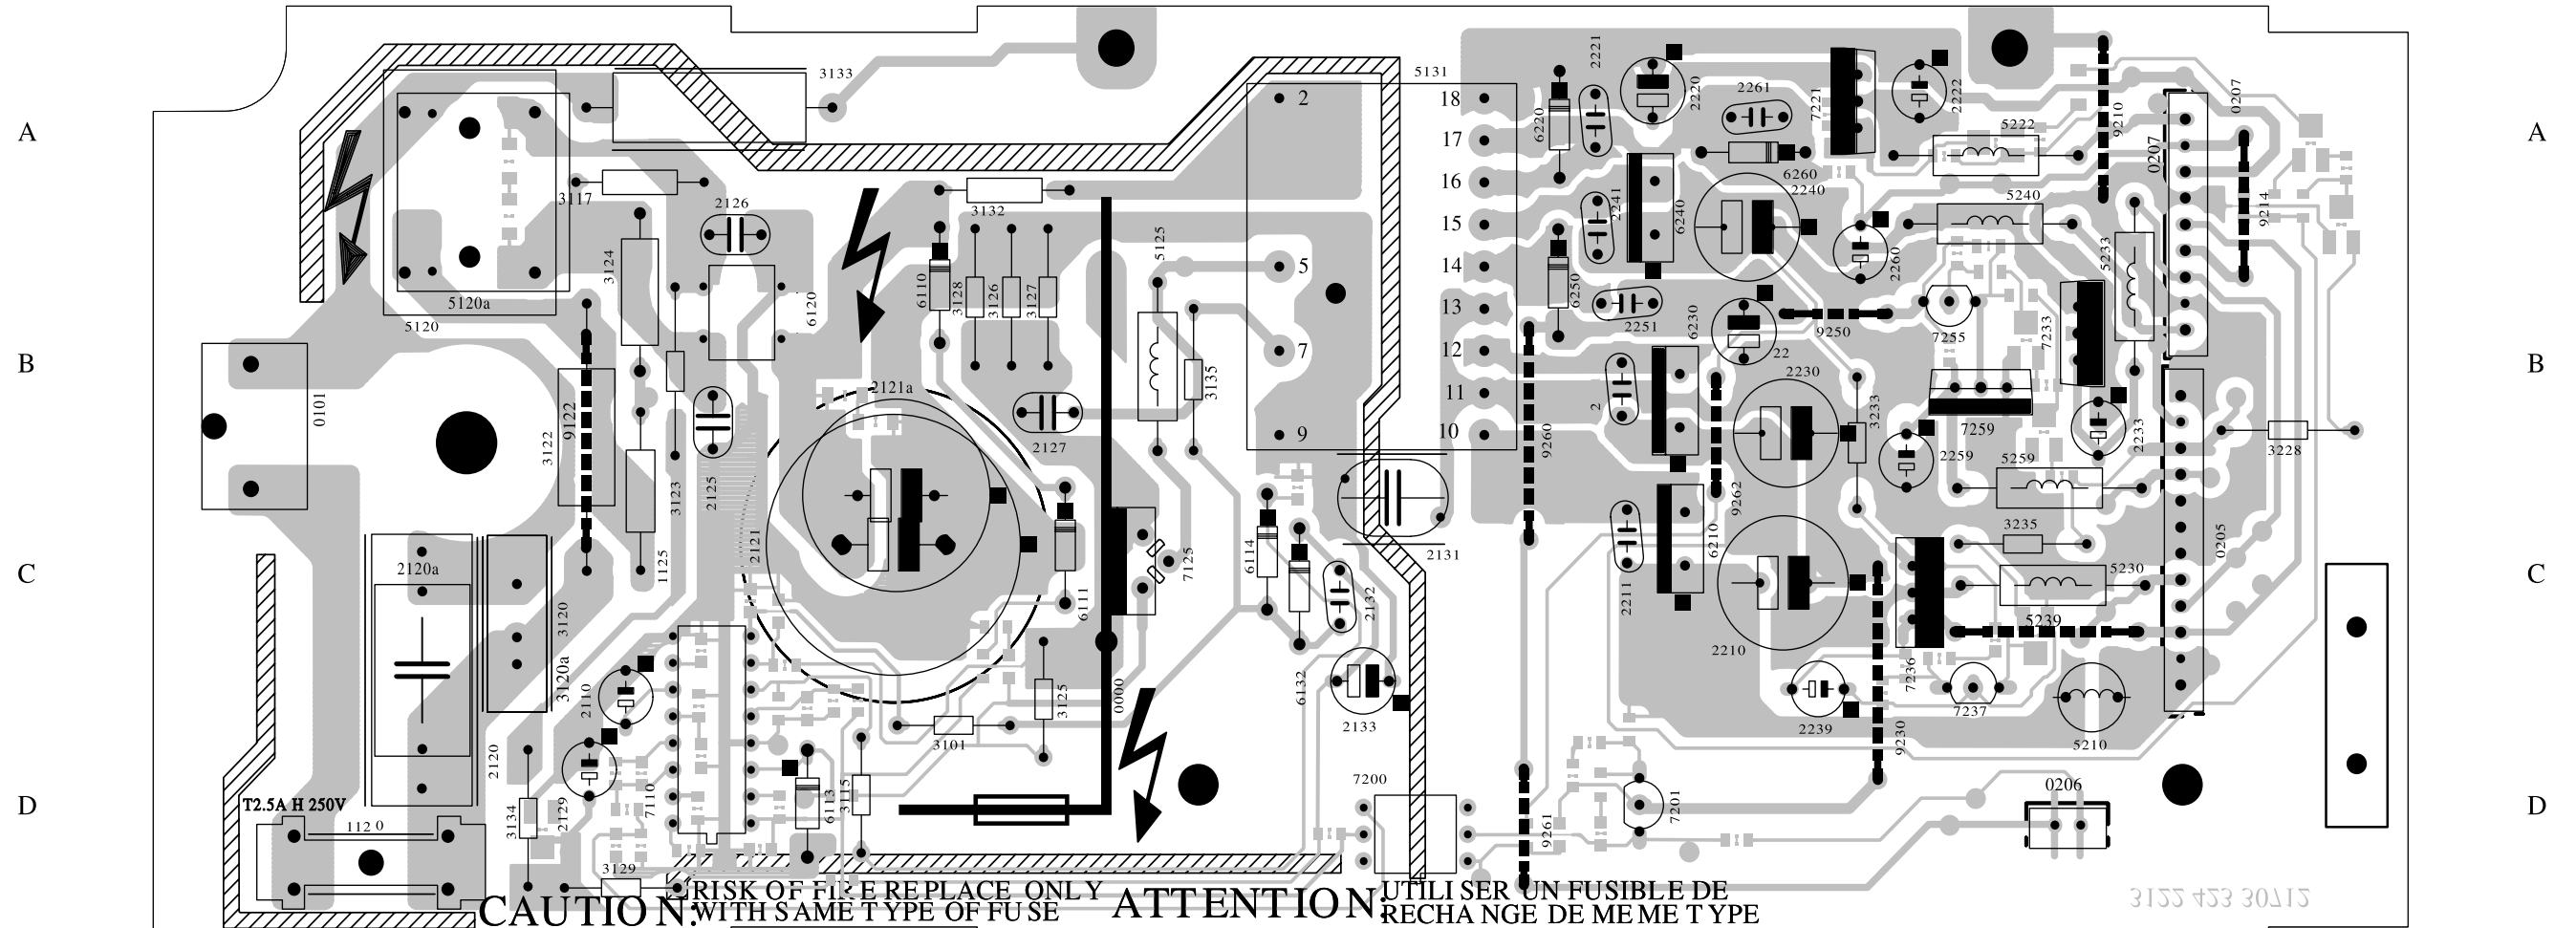

1 2 3 4 5 6 7 8 9 10 11

20 PS 228

DVD Step 2a

3122 427 2253


---

# SERVO BOARD

---

## TABLE OF CONTENTS

|                      |    |
|----------------------|----|
| Circuit diagram..... | 23 |
|----------------------|----|

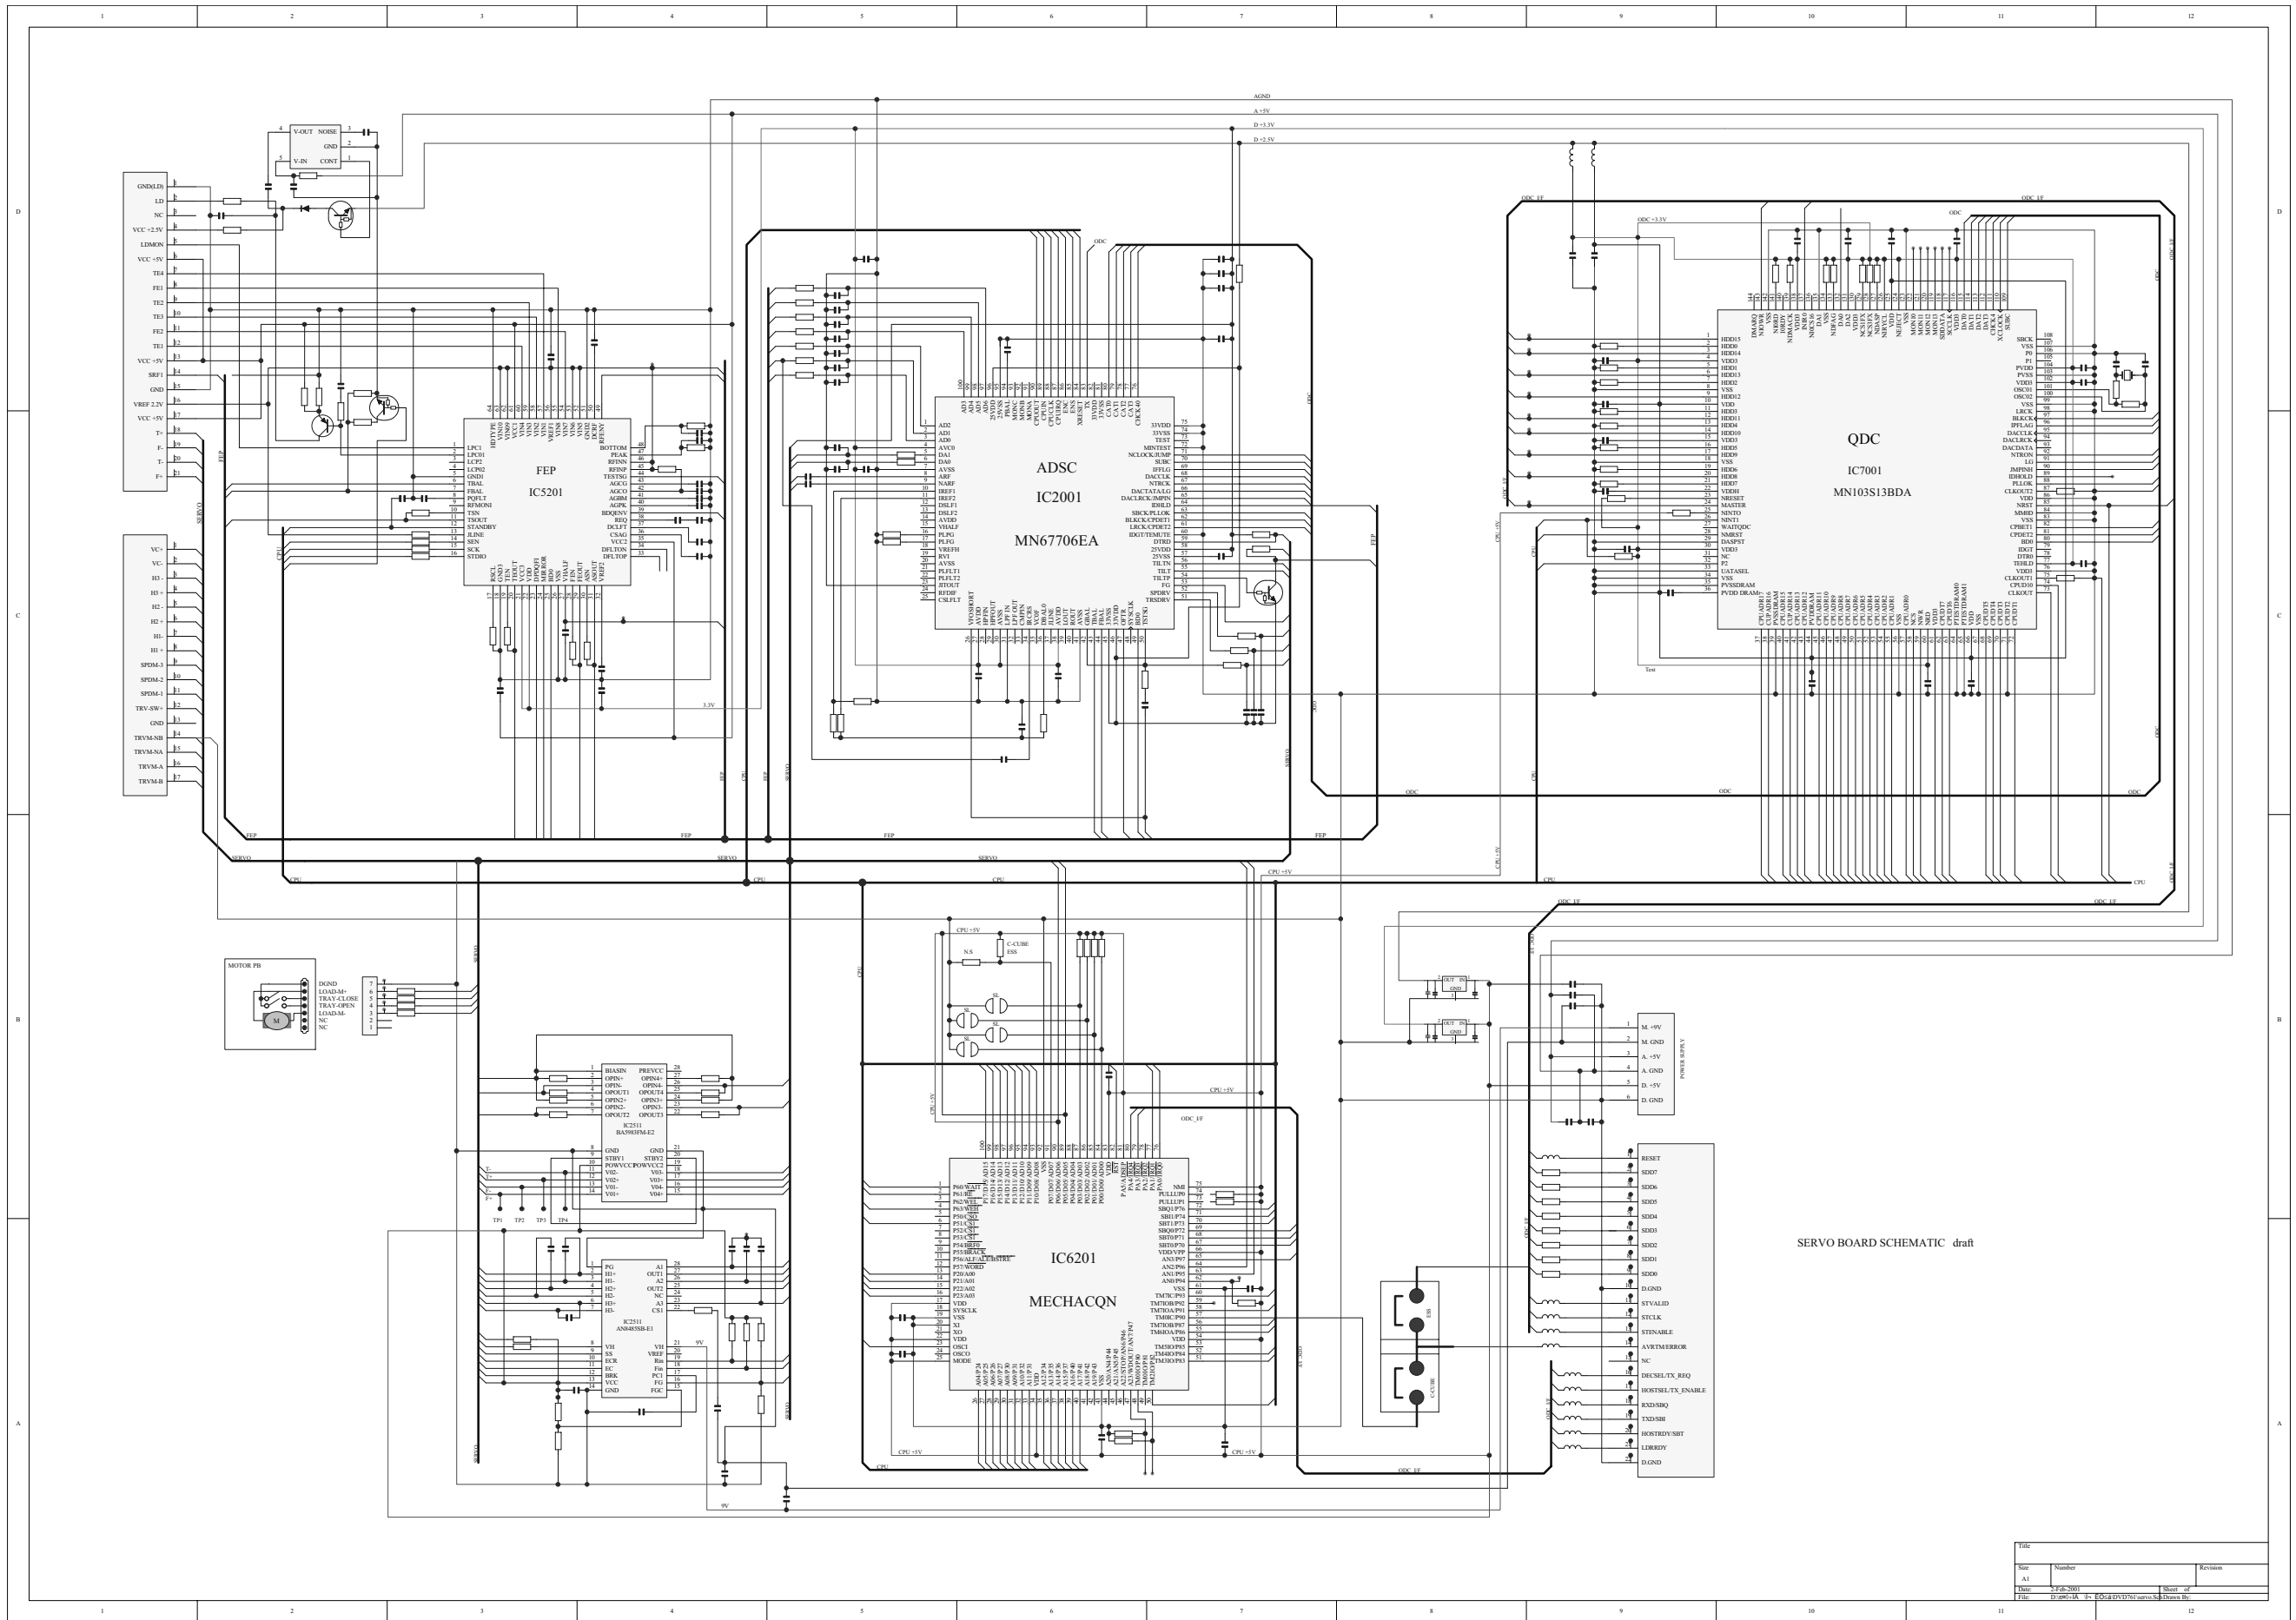

SERVO BOARD SCHEMATIC draft

| File | Number     | Revision |
|------|------------|----------|
| AS   | 14-08-2001 | Sheet of |
| FILE | 01-08-2001 | Sheet of |

---

# MPEG BOARD


---

## TABLE OF CONTENTS

|                            |    |
|----------------------------|----|
| Circuit diagram.....       | 25 |
| Component layout.....      | 30 |
| Electrical parts list..... | 32 |




|      |    |      |    |      |    |      |    |      |    |      |    |      |    |      |    |      |    |      |    |      |    |      |    |      |    |      |    |      |    |      |    |      |    |
|------|----|------|----|------|----|------|----|------|----|------|----|------|----|------|----|------|----|------|----|------|----|------|----|------|----|------|----|------|----|------|----|------|----|
| 2630 | C1 | 2639 | F6 | 2648 | E7 | 2654 | C7 | 2660 | A6 | 2688 | F7 | 2714 | E1 | 3653 | D2 | 3659 | E7 | 3665 | D6 | 3671 | C6 | 3677 | A6 | 3762 | D2 | 5633 | A7 | 5655 | E1 | 6606 | C8 | 7613 | A7 |
| 2631 | C1 | 2640 | F6 | 2649 | E7 | 2655 | C7 | 2661 | A8 | 2692 | C1 | 2715 | C1 | 3654 | F5 | 3660 | D6 | 3666 | D6 | 3672 | C7 | 3678 | A7 | 3763 | D2 | 5634 | A6 | 5656 | E1 | 6607 | C7 | 7620 | E7 |
| 2633 | C2 | 2641 | F6 | 2650 | E7 | 2656 | C7 | 2662 | A7 | 2693 | C1 | 2716 | C1 | 3655 | F5 | 3661 | D6 | 3667 | D6 | 3673 | B6 | 3752 | D2 | 5626 | E8 | 5635 | A7 | 6602 | F6 | 6608 | C7 |      |    |
| 2634 | C2 | 2645 | E6 | 2651 | D7 | 2657 | B6 | 2663 | A7 | 2711 | D1 | 3650 | C2 | 3656 | F5 | 3662 | D6 | 3668 | C7 | 3674 | A6 | 3753 | D2 | 5630 | B7 | 5636 | A7 | 6603 | C7 | 6609 | C6 |      |    |
| 2635 | F6 | 2646 | E6 | 2652 | C6 | 2658 | B7 | 2686 | F8 | 2712 | D1 | 3651 | C3 | 3657 | F5 | 3663 | D6 | 3669 | C8 | 3675 | E2 | 3754 | B7 | 5631 | B7 | 5633 | D1 | 6604 | C7 | 6610 | C6 |      |    |
| 2638 | F6 | 2647 | E6 | 2653 | C7 | 2659 | A6 | 2687 | E8 | 2713 | E1 | 3652 | D2 | 3658 | F5 | 3664 | D6 | 3670 | C7 | 3676 | A4 | 3755 | E2 | 5632 | B7 | 5654 | D1 | 6605 | C8 | 7612 | D4 |      |    |

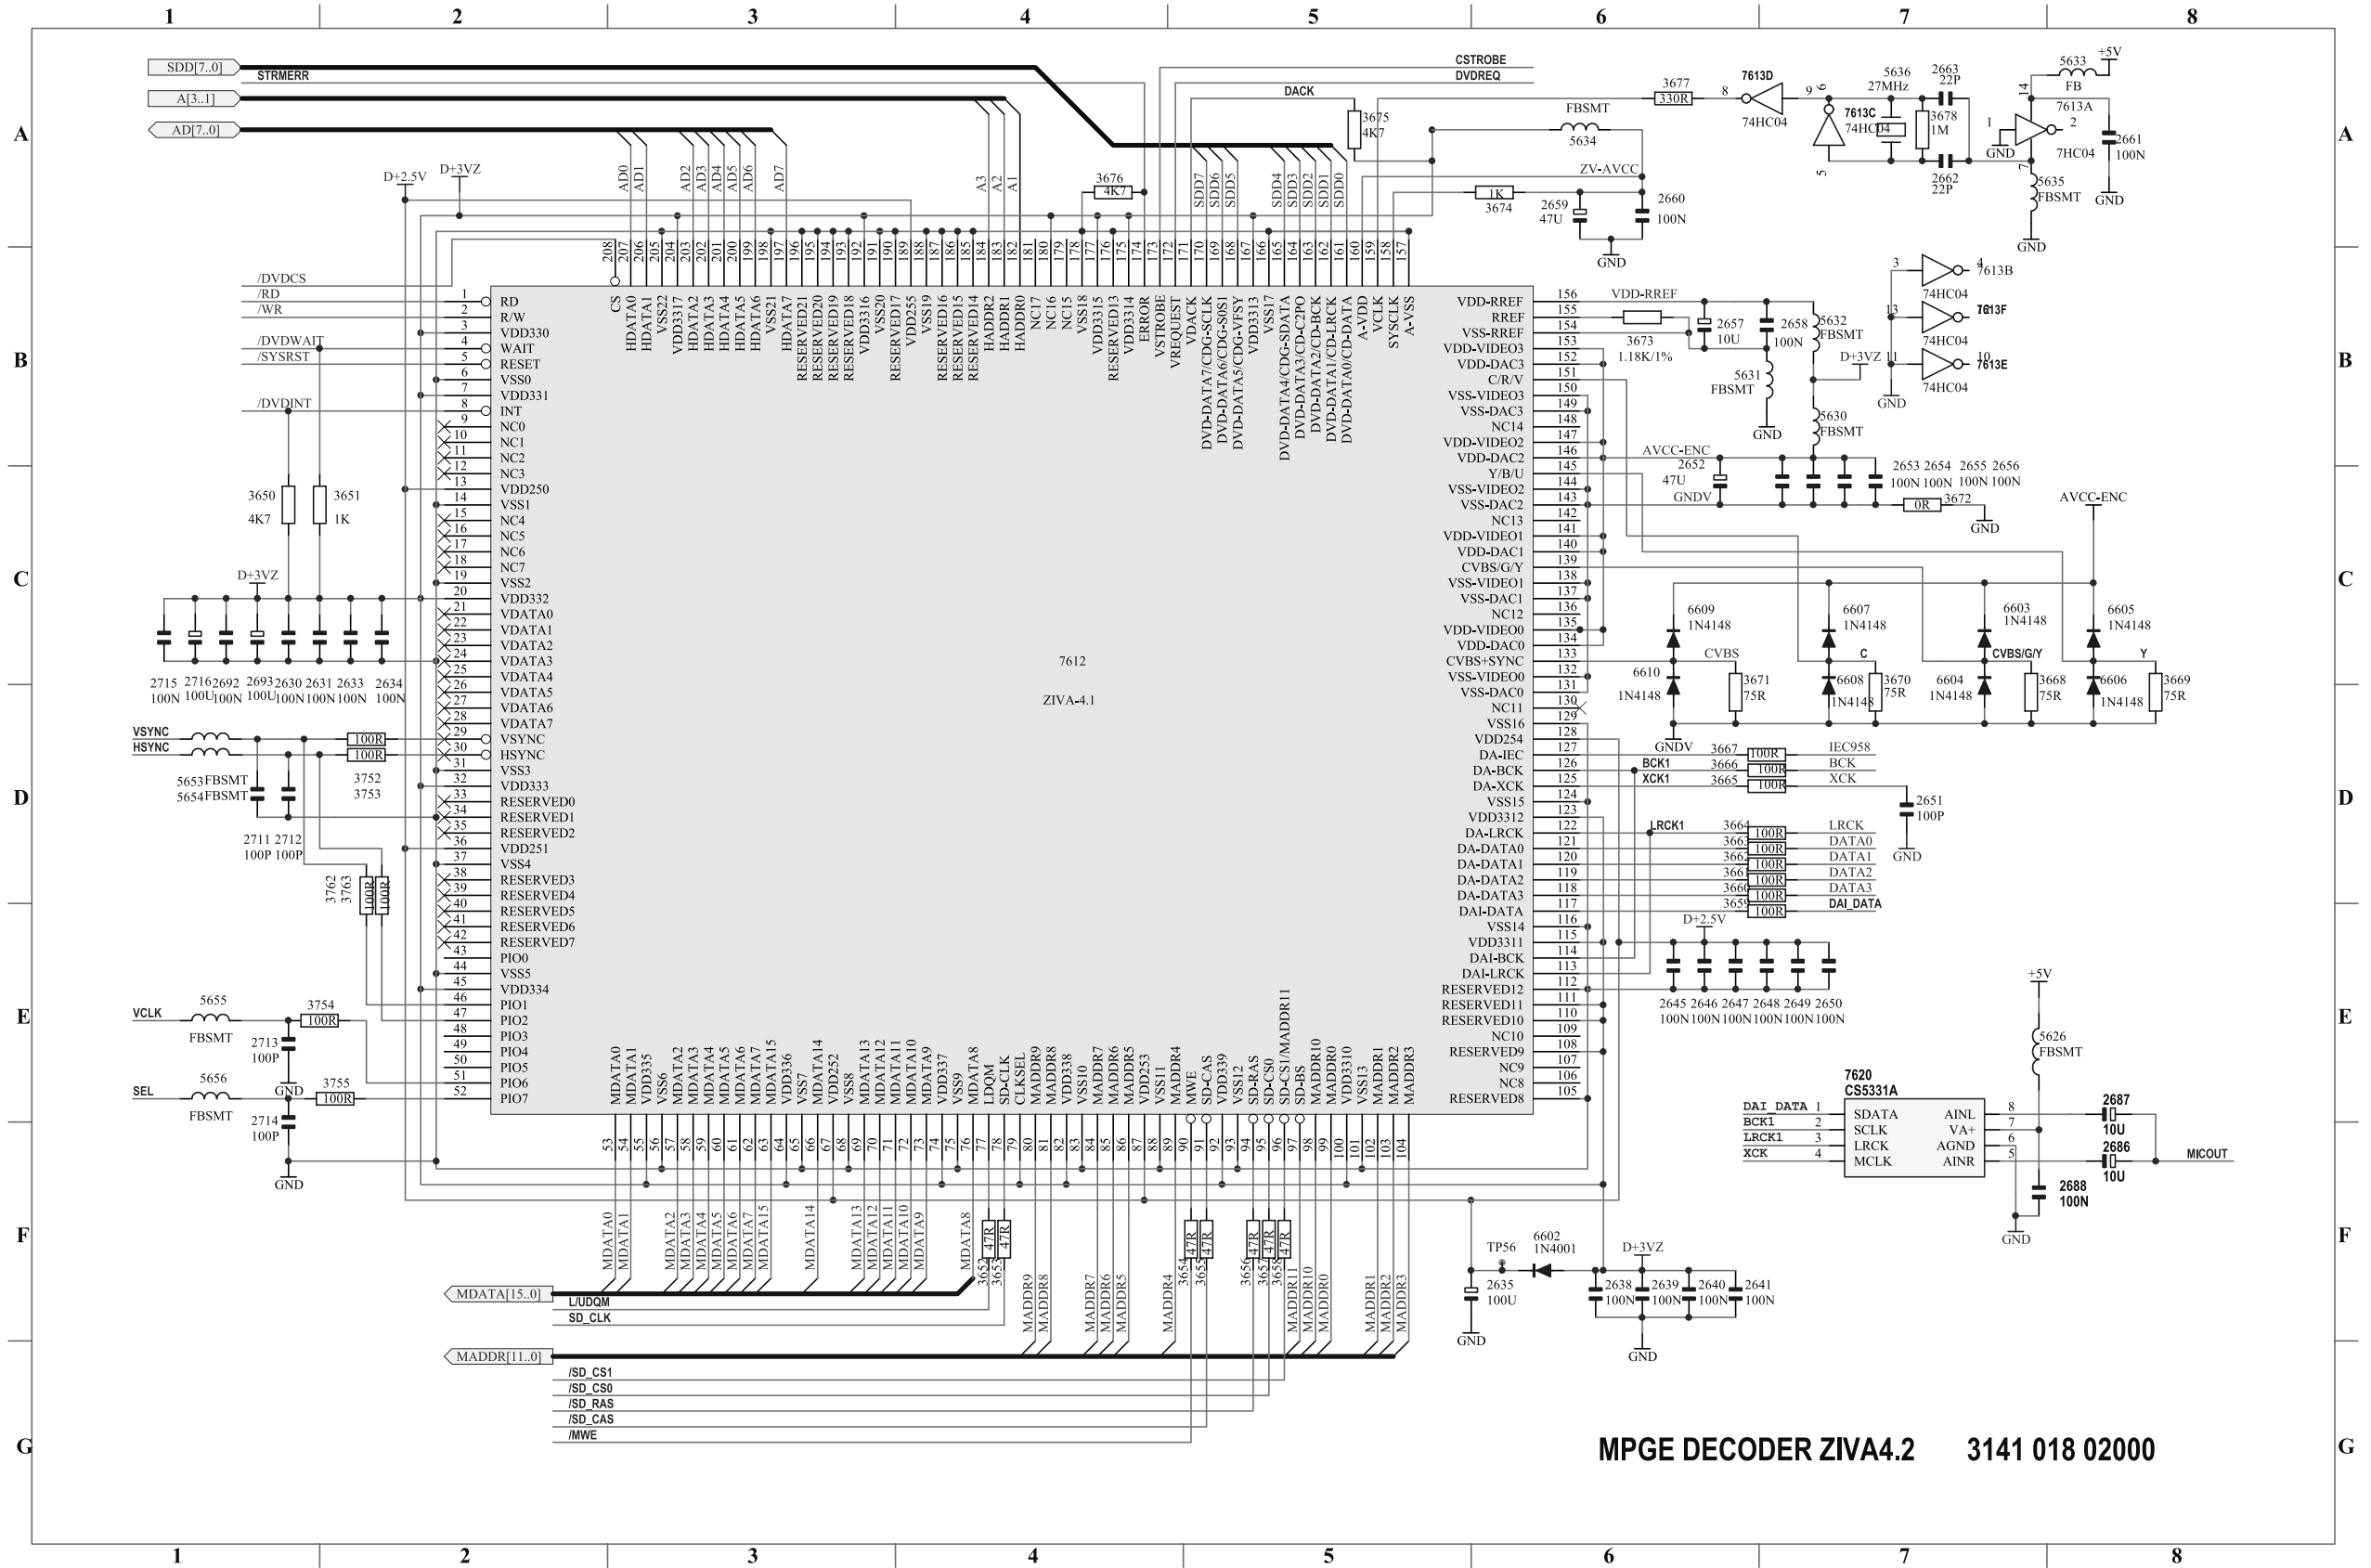


MPGE DECODER ZIVA4.2 3141 018 0200

|      |    |      |    |      |    |      |    |      |    |      |    |      |    |      |    |      |    |      |    |      |    |      |    |      |    |      |    |      |    |      |    |      |    |
|------|----|------|----|------|----|------|----|------|----|------|----|------|----|------|----|------|----|------|----|------|----|------|----|------|----|------|----|------|----|------|----|------|----|
| 1606 | D7 | 2602 | C7 | 2609 | B5 | 2615 | A2 | 2623 | E7 | 3608 | B2 | 3615 | F5 | 3621 | C5 | 3627 | D5 | 3633 | E3 | 3639 | B5 | 3731 | D6 | 3737 | E6 | 3743 | D8 | 3749 | C7 | 3759 | B2 | 7601 | B3 |
| 1607 | A6 | 2603 | C8 | 2610 | B5 | 2616 | E6 | 3600 | E3 | 3609 | B2 | 3616 | C2 | 3622 | C5 | 3628 | E5 | 3634 | E3 | 3640 | B5 | 3732 | D6 | 3738 | E6 | 3744 | D8 | 3750 | D7 | 3760 | B2 | 7603 | D1 |
| 1608 | B6 | 2604 | C7 | 2611 | B4 | 2618 | C1 | 3602 | D5 | 3610 | C2 | 3617 | F4 | 3623 | D5 | 3629 | E5 | 3635 | D5 | 3641 | A6 | 3733 | D6 | 3739 | E6 | 3745 | D8 | 3751 | E4 | 3761 | B2 | 7604 | F4 |
| 1609 | B1 | 2605 | C7 | 2612 | B5 | 2619 | D1 | 3604 | C2 | 3612 | C3 | 3618 | C5 | 3624 | C1 | 3630 | E4 | 3636 | D5 | 3642 | A6 | 3734 | D6 | 3740 | D8 | 3746 | D8 | 3756 | B2 | 5601 | F7 |      |    |
| 2600 | C7 | 2606 | C7 | 2613 | E2 | 2620 | E2 | 3605 | A2 | 3613 | C2 | 3619 | A2 | 3625 | D5 | 3631 | E4 | 3637 | B2 | 3645 | C2 | 3735 | D6 | 3741 | D8 | 3747 | E8 | 3757 | B3 | 5602 | D2 |      |    |
| 2601 | C7 | 2607 | C6 | 2614 | E2 | 2622 | D2 | 3606 | A3 | 3614 | B3 | 3620 | A2 | 3626 | D5 | 3632 | E3 | 3638 | F5 | 3730 | D6 | 3736 | D6 | 3742 | D8 | 3748 | E8 | 3758 | B2 | 5622 | C1 |      |    |

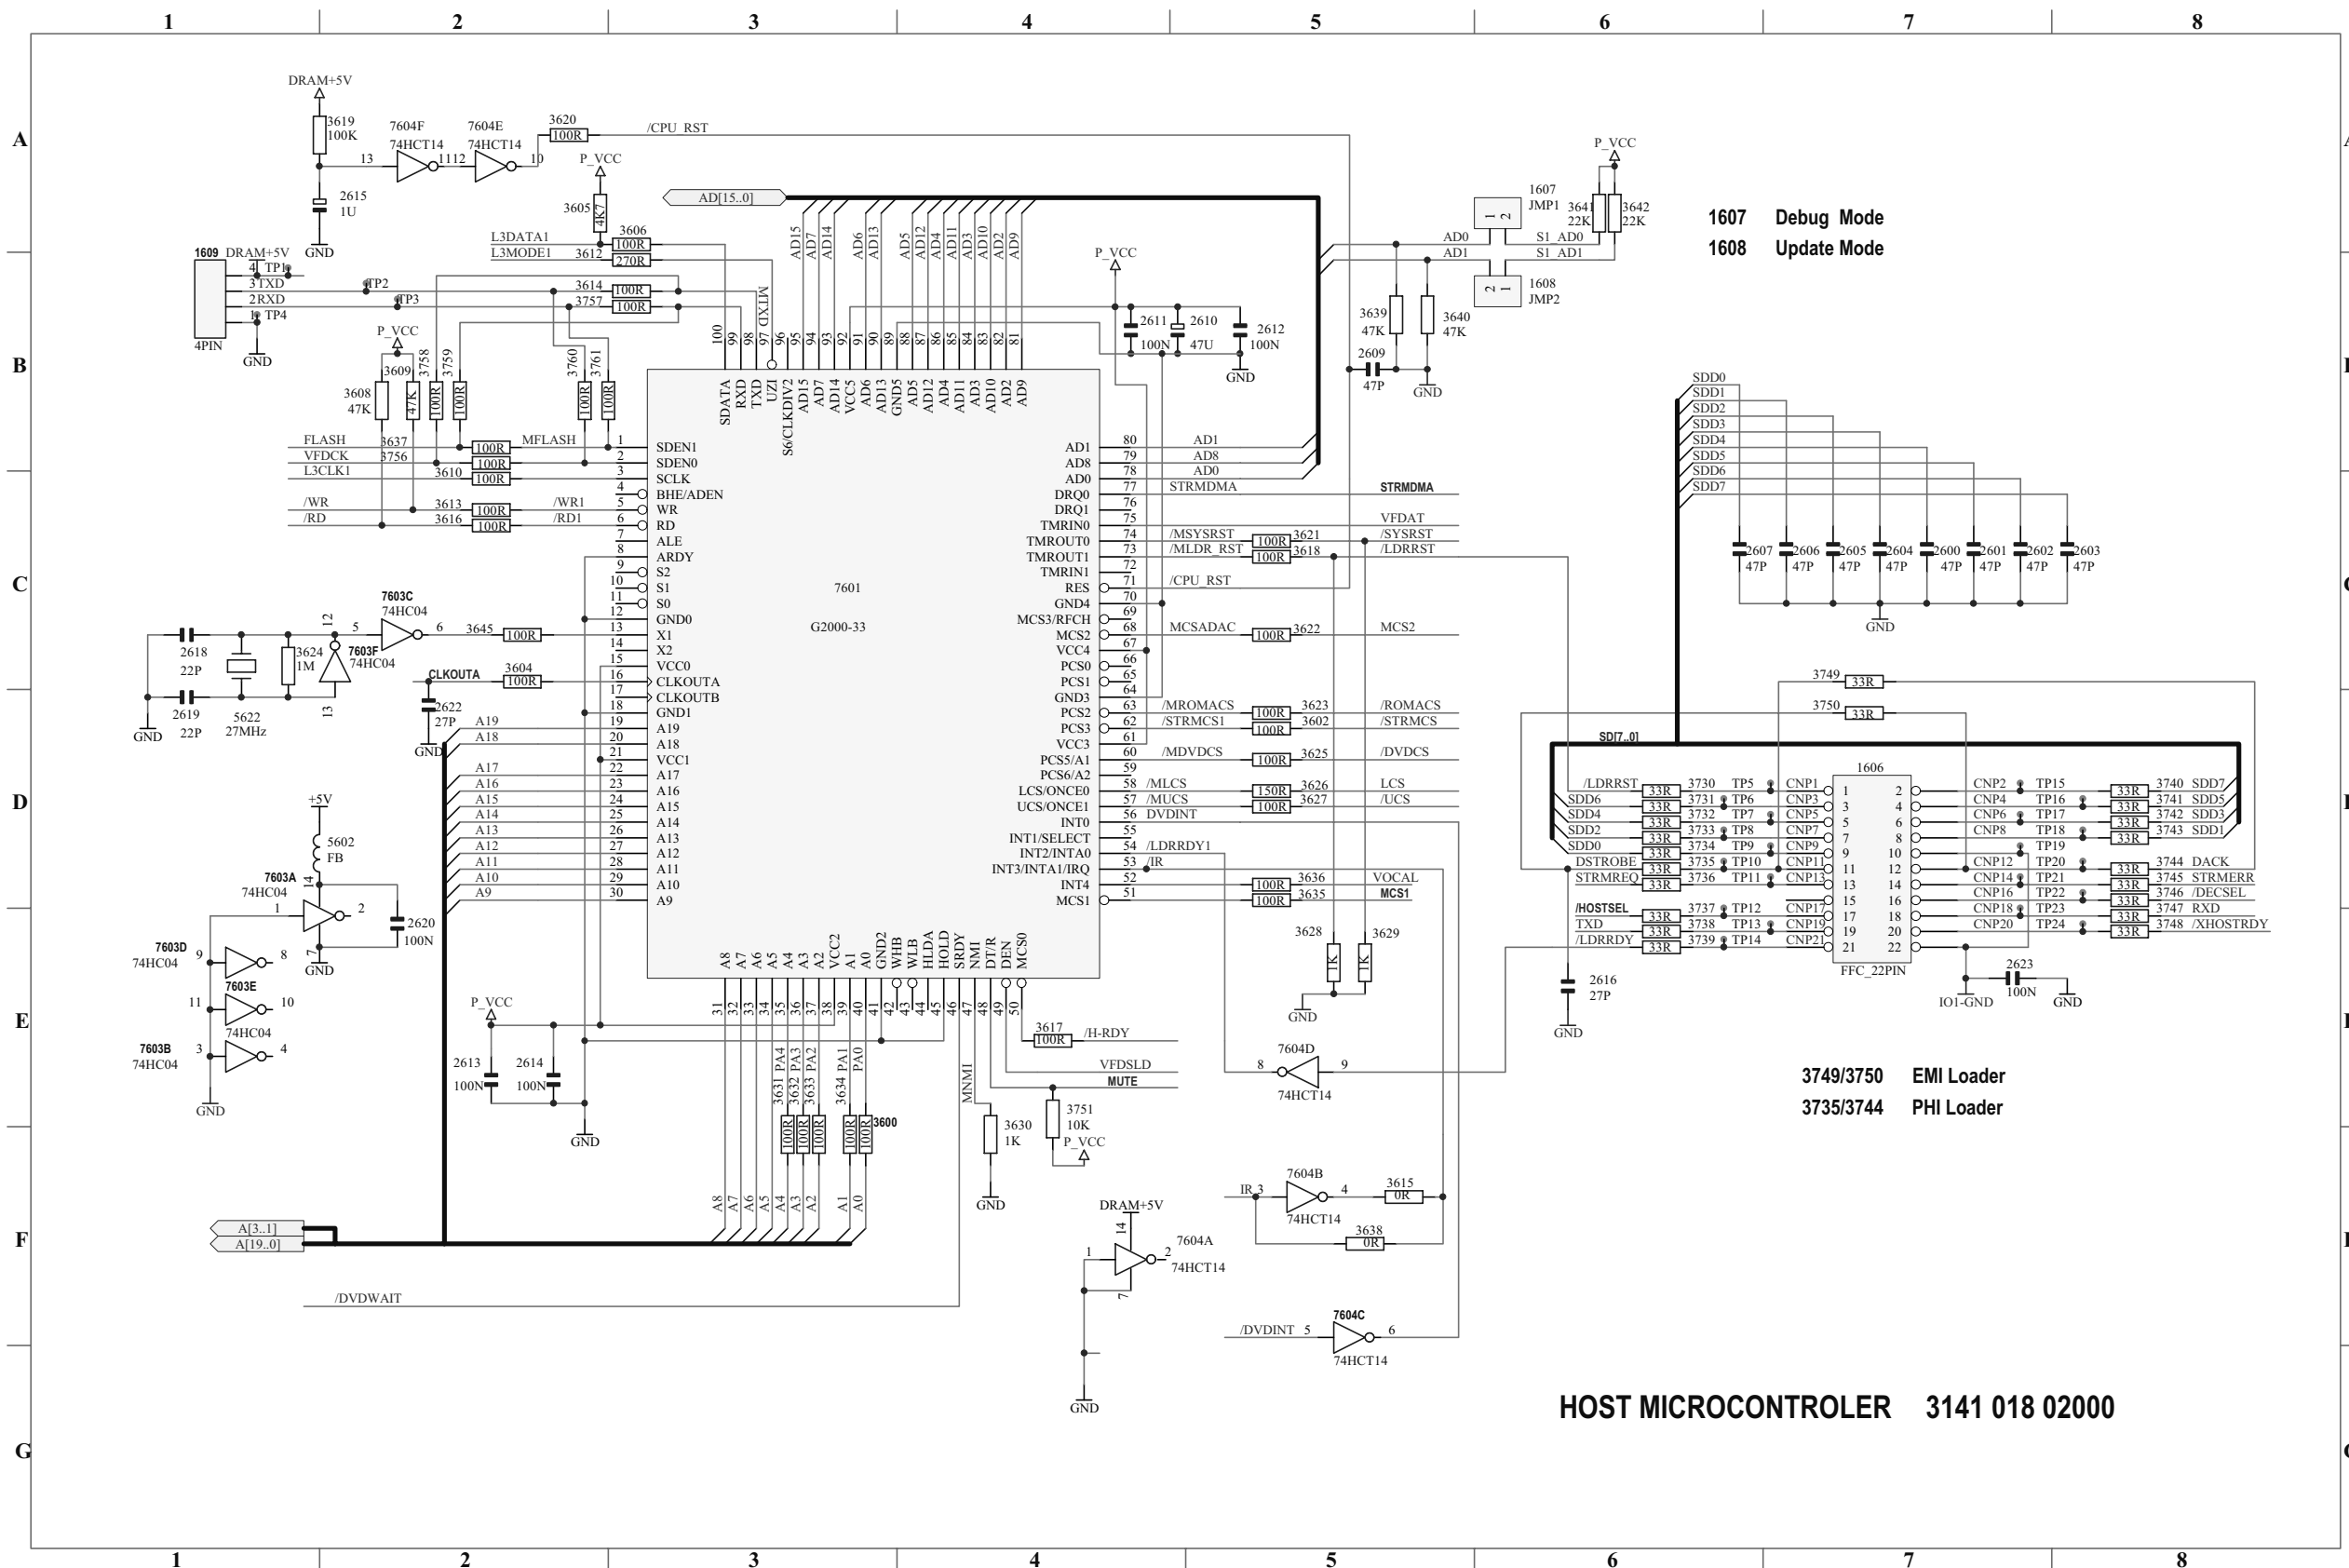

|      |    |      |    |      |    |
|------|----|------|----|------|----|
| 2691 | D4 | 2698 | D6 | 5650 | E5 |
| 2694 | D5 | 2699 | D6 | 5651 | F5 |
| 2695 | D5 | 2700 | D6 | 5652 | F5 |
| 2696 | D5 | 2701 | F7 | 7618 | B3 |
| 2697 | D6 | 2702 | F7 | 7619 | B5 |

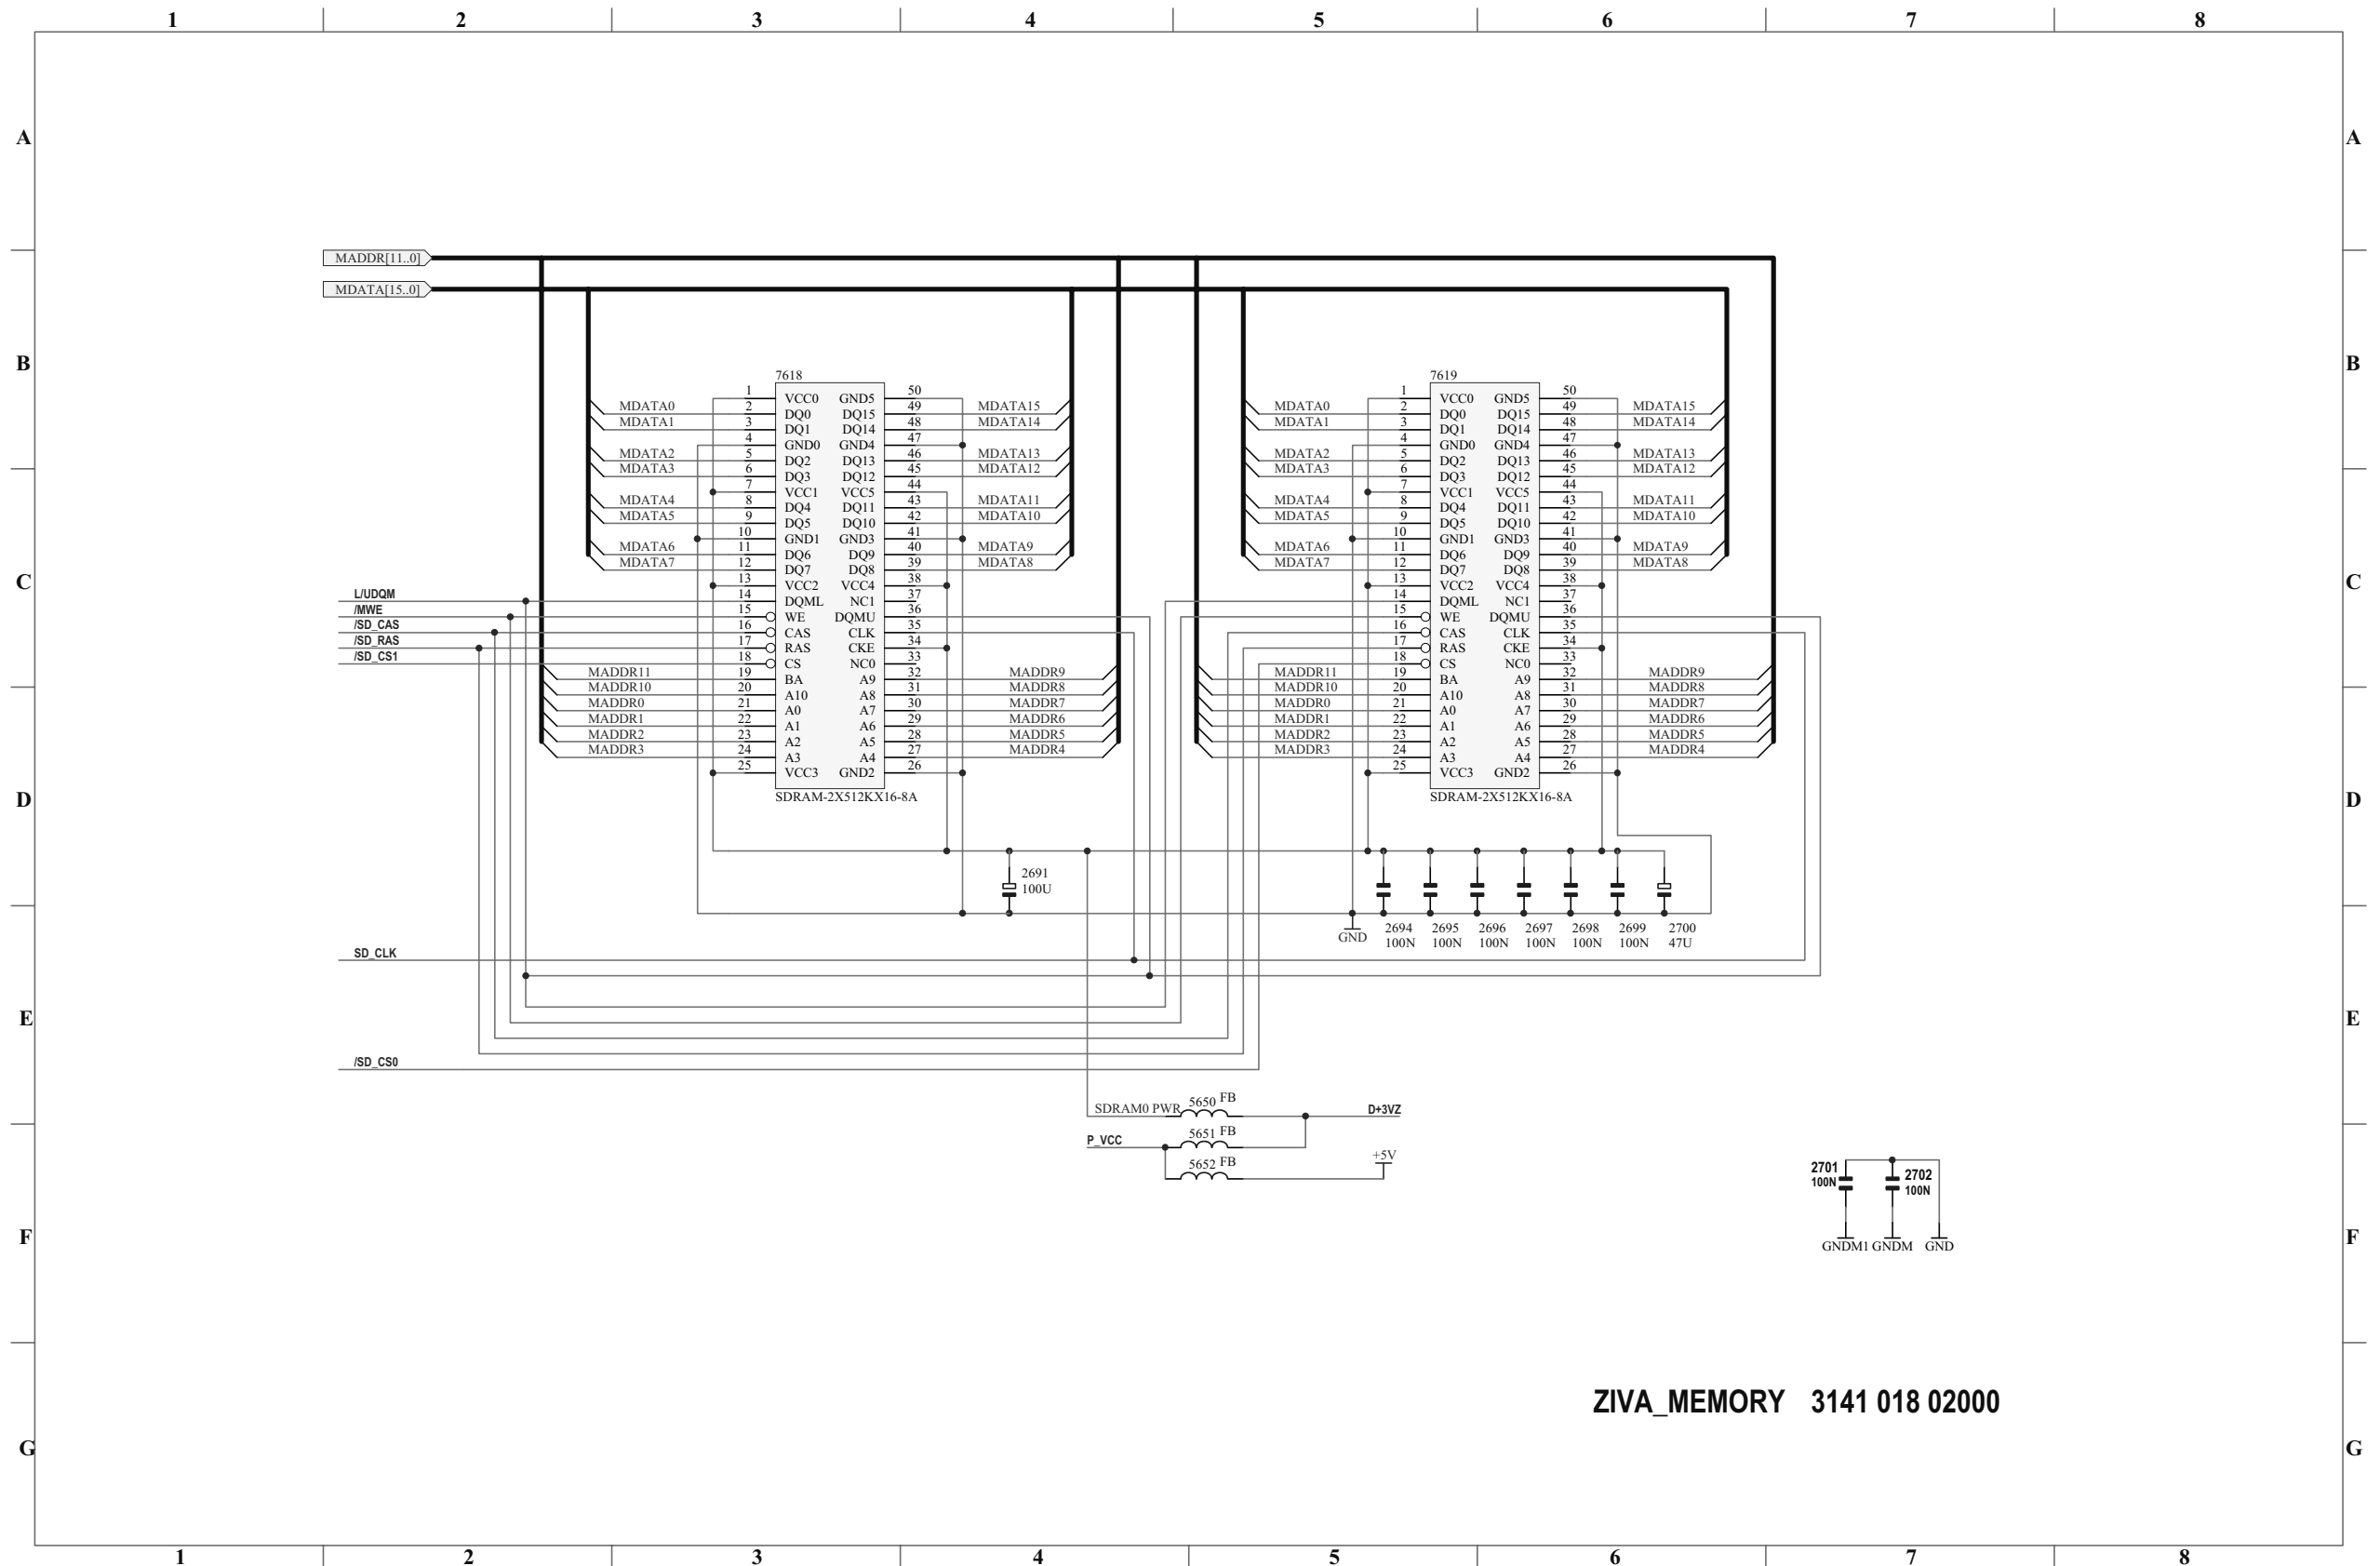


ZIVA\_MEMORY 3141 018 02000






|      |    |      |    |      |    |      |    |      |    |      |    |      |    |      |    |      |    |      |    |      |    |      |    |      |    |      |    |      |    |      |    |
|------|----|------|----|------|----|------|----|------|----|------|----|------|----|------|----|------|----|------|----|------|----|------|----|------|----|------|----|------|----|------|----|
| 1600 | A5 | 2600 | A3 | 2611 | C2 | 2623 | A3 | 2642 | B2 | 2654 | C5 | 2665 | D5 | 2675 | D1 | 2694 | D4 | 2704 | F1 | 2714 | F5 | 3609 | D2 | 3620 | C3 | 3630 | F2 | 3640 | D3 | 3753 | C3 |
| 1601 | D1 | 2601 | A3 | 2612 | D3 | 2630 | C3 | 2645 | C5 | 2655 | B5 | 2666 | D5 | 2676 | D1 | 2695 | D3 | 2705 | F1 | 2715 | D3 | 3610 | D2 | 3621 | D3 | 3631 | F3 | 3641 | C3 | 3754 | C3 |
| 1602 | A1 | 2602 | A3 | 2613 | F2 | 2631 | C3 | 2646 | C3 | 2656 | C5 | 2667 | D5 | 2677 | D3 | 2696 | D4 | 2706 | F1 | 2716 | D3 | 3611 | C2 | 3622 | C2 | 3632 | F3 | 3642 | C3 | 3755 | C3 |
| 1603 | C5 | 2603 | A3 | 2614 | D2 | 2633 | C3 | 2647 | B4 | 2657 | B5 | 2668 | D5 | 2678 | D3 | 2697 | F4 | 2707 | F1 | 2717 | A1 | 3612 | D2 | 3623 | D3 | 3633 | F2 | 3643 | D2 | 3756 | D2 |
| 1604 | B5 | 2604 | A3 | 2615 | C3 | 2634 | B4 | 2648 | D4 | 2658 | B5 | 2669 | D5 | 2686 | D5 | 2698 | F3 | 2708 | B1 | 3600 | F2 | 3614 | C2 | 3624 | D2 | 3634 | F2 | 3645 | D2 | 3757 | C2 |
| 1605 | E1 | 2605 | A4 | 2616 | A4 | 2635 | B5 | 2649 | C3 | 2659 | B4 | 2670 | A2 | 2687 | D5 | 2699 | D4 | 2709 | A2 | 3602 | D3 | 3615 | D3 | 3625 | D3 | 3635 | C2 | 3651 | B3 | 3762 | C3 |
| 1606 | A3 | 2606 | A3 | 2618 | D2 | 2638 | B4 | 2650 | D4 | 2660 | B4 | 2671 | B2 | 2688 | D5 | 2700 | D4 | 2710 | A1 | 3604 | D2 | 3616 | D2 | 3626 | D3 | 3636 | D3 | 3652 | D4 | 3763 | C3 |
| 1607 | C3 | 2607 | A3 | 2619 | D2 | 2639 | B4 | 2651 | C5 | 2661 | B5 | 2672 | C2 | 2691 | D4 | 2701 | F5 | 2711 | F5 | 3605 | C2 | 3617 | F3 | 3627 | D3 | 3637 | C2 | 3653 | D4 | 3764 | F2 |
| 1608 | C3 | 2609 | C3 | 2620 | D2 | 2640 | D3 | 2652 | B5 | 2662 | A4 | 2673 | B3 | 2692 | B5 | 2702 | F3 | 2712 | F5 | 3606 | C2 | 3618 | D3 | 3628 | D3 | 3638 | D3 | 3654 | D4 | 3765 | B5 |
| 1609 | C2 | 2610 | E3 | 2622 | D2 | 2641 | C4 | 2653 | B5 | 2663 | A4 | 2674 | C3 | 2693 | B5 | 2703 | D1 | 2713 | F5 | 3608 | D2 | 3619 | C3 | 3629 | D3 | 3639 | D3 | 3655 | D4 | 3766 | B5 |

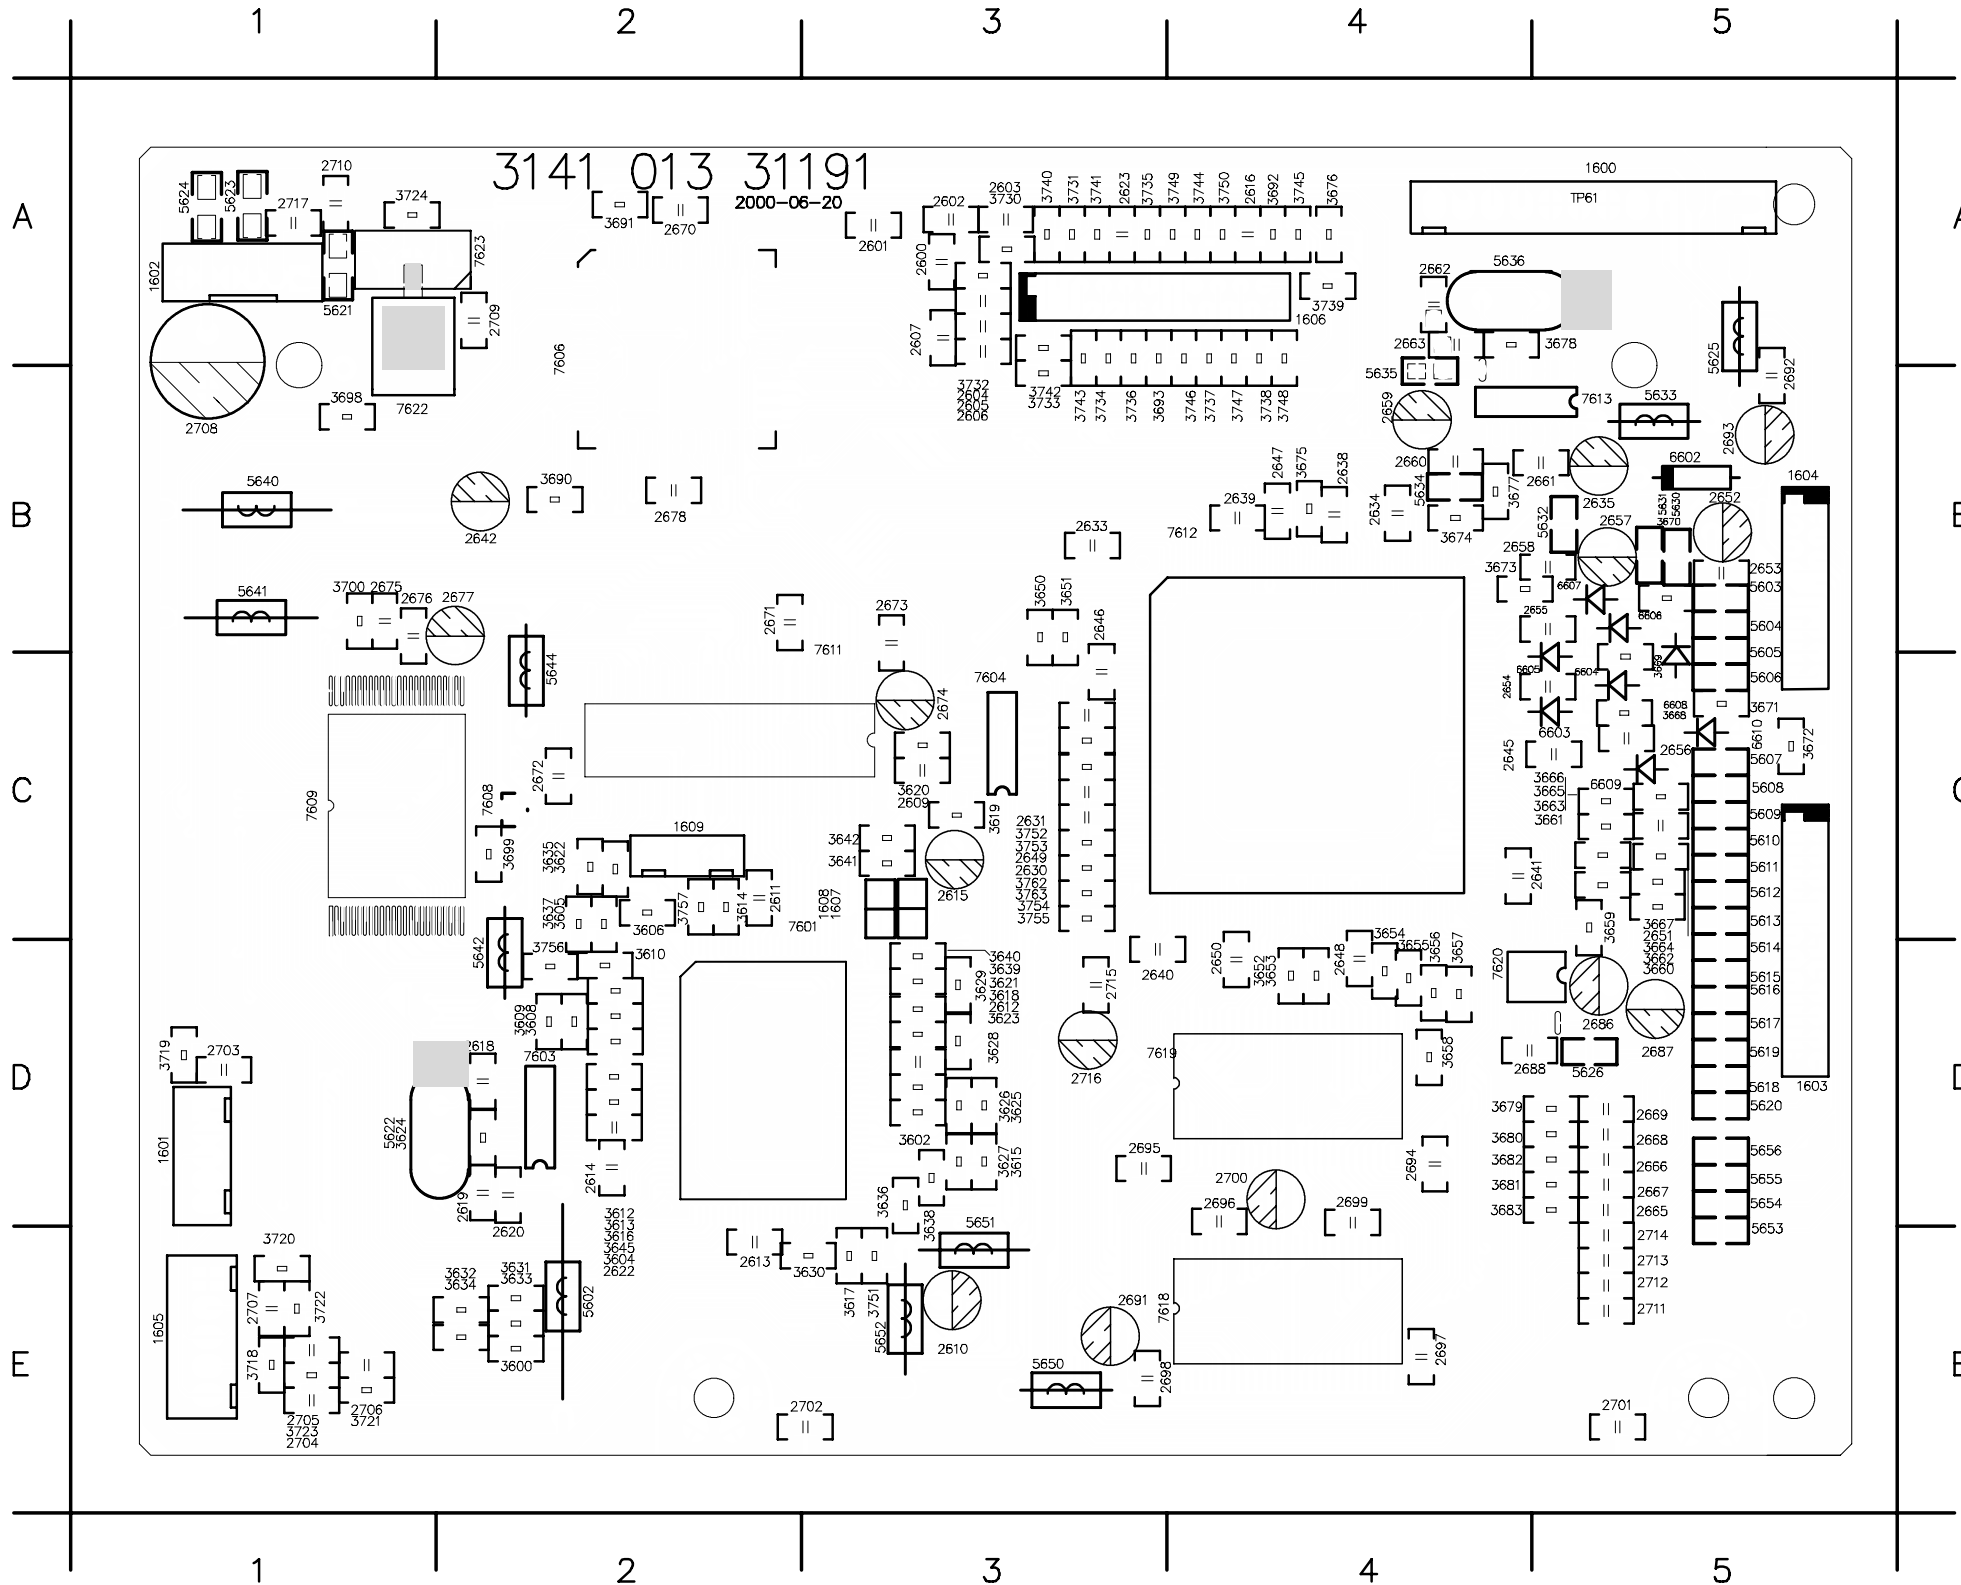

|      |    |      |    |
|------|----|------|----|
| 3656 | D4 | 5605 | B5 |
| 3657 | D4 | 5606 | C5 |
| 3658 | D4 | 5607 | C5 |
| 3659 | C5 | 5608 | C5 |
| 3660 | C5 | 5609 | C5 |
| 3661 | C5 | 5610 | C5 |
| 3662 | C5 | 5611 | C5 |
| 3663 | C5 | 5612 | C5 |
| 3664 | C5 | 5613 | C5 |
| 3665 | C5 | 5614 | D5 |
| 3666 | C5 | 5615 | D5 |
| 3667 | C5 | 5616 | D5 |
| 3668 | C5 | 5617 | D5 |
| 3669 | C5 | 5618 | D5 |
| 3670 | B5 | 5619 | D5 |
| 3671 | C5 | 5620 | D5 |
| 3672 | C5 | 5621 | A1 |
| 3673 | B4 | 5622 | D1 |
| 3674 | B4 | 5623 | A1 |
| 3675 | B4 | 5624 | A1 |
| 3676 | A4 | 5625 | B5 |
| 3677 | B4 | 5626 | D5 |
| 3678 | A5 | 5630 | B5 |
| 3679 | D4 | 5631 | B5 |
| 3680 | D4 | 5632 | B5 |
| 3681 | D4 | 5633 | B5 |
| 3682 | D4 | 5634 | B4 |
| 3683 | D4 | 5635 | B4 |
| 3684 | B2 | 5636 | A5 |
| 3685 | B2 | 5637 | A5 |
| 3686 | A2 | 5640 | B1 |
| 3687 | A4 | 5641 | B1 |
| 3688 | B3 | 5642 | C2 |
| 3689 | B1 | 5644 | C2 |
| 3690 | C2 | 5645 | F2 |
| 3691 | C2 | 5646 | F2 |
| 3692 | A4 | 5641 | B1 |
| 3693 | B3 | 5642 | C2 |
| 3694 | B1 | 5644 | C2 |
| 3695 | C2 | 5645 | F2 |
| 3696 | C2 | 5646 | F2 |
| 3697 | B1 | 5647 | F2 |
| 3698 | B1 | 5648 | F2 |
| 3699 | B1 | 5649 | F2 |
| 3700 | B1 | 5650 | F2 |
| 3701 | B1 | 5651 | F2 |
| 3702 | B1 | 5652 | F2 |
| 3703 | B1 | 5653 | F2 |
| 3704 | B1 | 5654 | F2 |
| 3705 | B1 | 5655 | F2 |
| 3706 | B1 | 5656 | F2 |
| 3707 | B1 | 5657 | F2 |
| 3708 | B1 | 5658 | F2 |
| 3709 | B1 | 5659 | F2 |
| 3710 | B1 | 5660 | F2 |
| 3711 | B1 | 5661 | F2 |
| 3712 | B1 | 5662 | F2 |
| 3713 | B1 | 5663 | F2 |
| 3714 | B1 | 5664 | F2 |
| 3715 | B1 | 5665 | F2 |
| 3716 | B1 | 5666 | F2 |
| 3717 | B1 | 5667 | F2 |
| 3718 | F1 | 5652 | F3 |
| 3719 | D1 | 5653 | F5 |
| 3720 | F1 | 5654 | D5 |
| 3721 | F1 | 5655 | D5 |
| 3722 | F1 | 5656 | D5 |
| 3723 | F1 | 6602 | B5 |
| 3724 | A1 | 6603 | C5 |
| 3730 | A3 | 6604 | C5 |
| 3731 | A3 | 6605 | B5 |
| 3732 | A3 | 6606 | B5 |
| 3733 | B3 | 6607 | B5 |
| 3734 | A3 | 6608 | C5 |
| 3735 | A3 | 6609 | C5 |
| 3736 | A3 | 6610 | C5 |
| 3737 | A4 | 7601 | D2 |
| 3738 | A4 | 7603 | D2 |
| 3739 | A4 | 7604 | C3 |
| 3740 | A3 | 7606 | A2 |
| 3741 | A3 | 7608 | C2 |
| 3742 | B3 | 7609 | C1 |
| 3743 | B3 | 7611 | C3 |
| 3744 | A4 | 7612 | C4 |
| 3745 | A4 | 7613 | B5 |
| 3746 | B4 | 7618 | E4 |
| 3747 | B4 | 7619 | D4 |
| 3748 | B4 | 7620 | D4 |
| 3749 | A4 | 7622 | B1 |
| 3750 | A4 | 7623 | A2 |
| 3751 | E3 |      |    |
| 3752 | C3 |      |    |

TOP VIEW

PBAS MPEG DVD761K 3141 018 02020

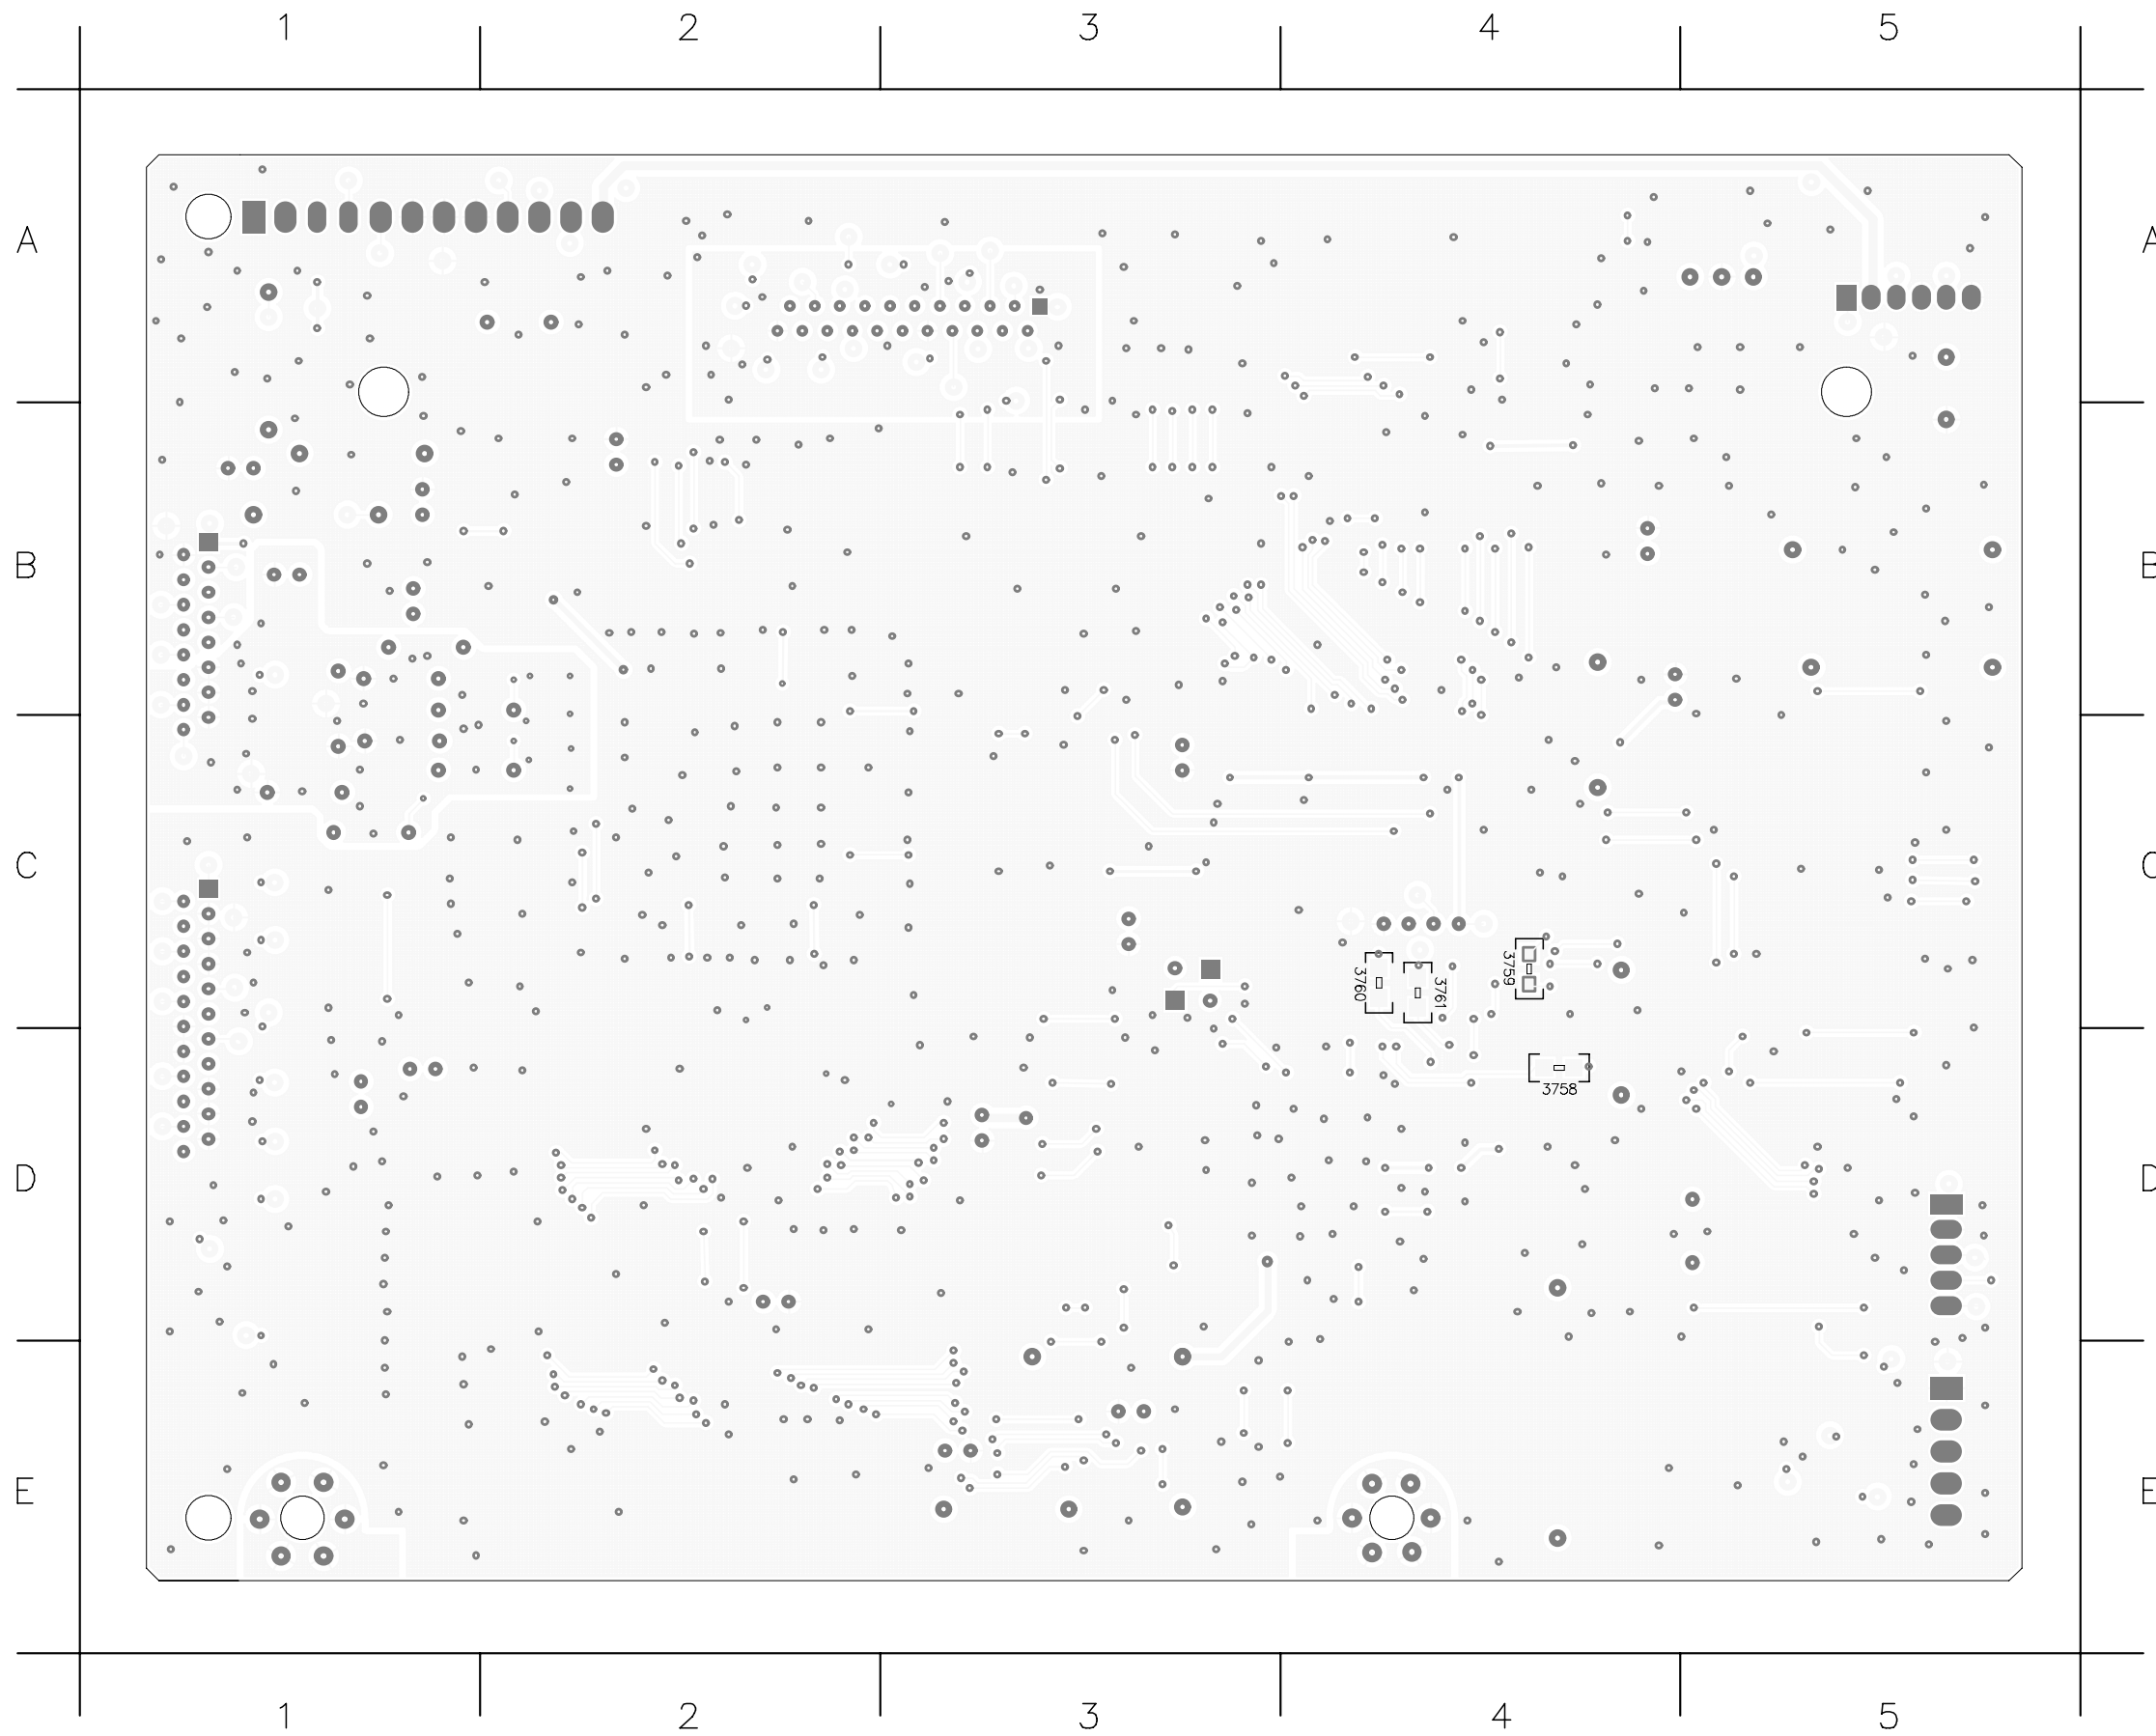

3758 D4  
 3759 C4  
 3760 C4  
 3761 C4

BOTTOM VIEW

MPEG DVD721K 3141 018 02000

MISCELLANEOUS

|            |              |                                 |
|------------|--------------|---------------------------------|
| 0000101600 | 242202508333 | 00CON BM V 12P M 2.50 EH A B    |
| 0000201602 | 242202508149 | 00CON BM V 6P M 2.00 PH B       |
| 0000301603 | 314101030150 | 00CON BM V 22P F 1.00 FFC 0.3 R |
| 0000401604 | 314101030140 | 00CON BM V 16P F 1.00 FFC 0.3 R |
| 0000501605 | 242202509013 | 00CON BM V 5P M 2.50 XH A B     |
| 0000601606 | 824101030030 | 00CON BM V 22P F 1.00 C015-22   |
| 0000701607 | 314101030070 | 00MICRO-SHUNT V 2P M 2.54       |
| 0000801608 | 314101030070 | 00MICRO-SHUNT V 2P M 2.54       |
| 0000901609 | 242202509406 | 00CON BM V 4P M 2.00 PH K B     |

CAPACITORS

|            |              |                                 |
|------------|--------------|---------------------------------|
| 0001002600 | 222286115479 | 00CER1 0805 NPO 50V 47P PM5 R   |
| 0001102601 | 222286115479 | 00CER1 0805 NPO 50V 47P PM5 R   |
| 0001202602 | 222286115479 | 00CER1 0805 NPO 50V 47P PM5 R   |
| 0001302603 | 222286115479 | 00CER1 0805 NPO 50V 47P PM5 R   |
| 0001402604 | 222286115479 | 00CER1 0805 NPO 50V 47P PM5 R   |
| 0001502605 | 222286115479 | 00CER1 0805 NPO 50V 47P PM5 R   |
| 0001602606 | 222286115479 | 00CER1 0805 NPO 50V 47P PM5 R   |
| 0001702607 | 222286115479 | 00CER1 0805 NPO 50V 47P PM5 R   |
| 0001802609 | 222286115479 | 00CER1 0805 NPO 50V 47P PM5 R   |
| 0001902610 | 202202000386 | 00ELCAP NS 25V 47U PM20 T       |
| 0002002611 | 222258018812 | 00CER2 0805 Y5V 50V 100N P8020R |
| 0002102612 | 222258018812 | 00CER2 0805 Y5V 50V 100N P8020R |
| 0002202613 | 222258018812 | 00CER2 0805 Y5V 50V 100N P8020R |
| 0002302614 | 222258018812 | 00CER2 0805 Y5V 50V 100N P8020R |
| 0002402615 | 202202000389 | 00ELCAP NS 63V 1U0 PM20 T       |
| 0002502616 | 222286115279 | 00CERCHIP NPO 63V27P PM5T       |
| 0002602618 | 222286115229 | 00CERCHIP NPO 50V22P PM5T       |
| 0002702619 | 222286115229 | 00CERCHIP NPO 50V22P PM5T       |
| 0002802620 | 222258018812 | 00CER2 0805 Y5V 50V 100N P8020R |
| 0002902622 | 222286115279 | 00CERCHIP NPO 63V27P PM5T       |
| 0003002623 | 222258018812 | 00CER2 0805 Y5V 50V 100N P8020R |
| 0003102630 | 222258018812 | 00CER2 0805 Y5V 50V 100N P8020R |
| 0003202631 | 222258018812 | 00CER2 0805 Y5V 50V 100N P8020R |
| 0003302633 | 222258018812 | 00CER2 0805 Y5V 50V 100N P8020R |
| 0003402634 | 222258018812 | 00CER2 0805 Y5V 50V 100N P8020R |
| 0003502635 | 202202000387 | 00ELCAP NS 25V 100U PM20 T      |
| 0003602638 | 222258018812 | 00CER2 0805 Y5V 50V 100N P8020R |
| 0003702639 | 222258018812 | 00CER2 0805 Y5V 50V 100N P8020R |
| 0003802640 | 222258018812 | 00CER2 0805 Y5V 50V 100N P8020R |
| 0003902641 | 222258018812 | 00CER2 0805 Y5V 50V 100N P8020R |
| 0004002642 | 202202000386 | 00ELCAP NS 25V 47U PM20 T       |
| 0004102645 | 222258018812 | 00CER2 0805 Y5V 50V 100N P8020R |
| 0004202646 | 222258018812 | 00CER2 0805 Y5V 50V 100N P8020R |
| 0004302647 | 222258018812 | 00CER2 0805 Y5V 50V 100N P8020R |
| 0004402648 | 222258018812 | 00CER2 0805 Y5V 50V 100N P8020R |
| 0004502649 | 222258018812 | 00CER2 0805 Y5V 50V 100N P8020R |
| 0004602650 | 222258018812 | 00CER2 0805 Y5V 50V 100N P8020R |

|            |              |                                 |
|------------|--------------|---------------------------------|
| 0004702651 | 222286115101 | 00CER1 0805 NPO 50V 100P PM5 R  |
| 0004802652 | 202202000386 | 00ELCAP NS 25V 47U PM20 T       |
| 0004902653 | 222258018812 | 00CER2 0805 Y5V 50V 100N P8020R |
| 0005002654 | 222258018812 | 00CER2 0805 Y5V 50V 100N P8020R |
| 0005102655 | 222258018812 | 00CER2 0805 Y5V 50V 100N P8020R |
| 0005202656 | 222258018812 | 00CER2 0805 Y5V 50V 100N P8020R |
| 0005302657 | 202202000383 | 00ELCAP NS 25V 10U PM20 T       |
| 0005402658 | 222258018812 | 00CER2 0805 Y5V 50V 100N P8020R |
| 0005502659 | 202202000386 | 00ELCAP NS 25V 47U PM20 T       |
| 0005602660 | 222258018812 | 00CER2 0805 Y5V 50V 100N P8020R |
| 0005702661 | 222258018812 | 00CER2 0805 Y5V 50V 100N P8020R |
| 0005802662 | 222286115229 | 00CERCHIP NPO 50V22P PM5T       |
| 0005902663 | 222286115229 | 00CERCHIP NPO 50V22P PM5T       |
| 0006002665 | 222286115101 | 00CER1 0805 NPO 50V 100P PM5 R  |
| 0006102666 | 222286115101 | 00CER1 0805 NPO 50V 100P PM5 R  |
| 0006202667 | 222286115101 | 00CER1 0805 NPO 50V 100P PM5 R  |
| 0006302668 | 222286115101 | 00CER1 0805 NPO 50V 100P PM5 R  |
| 0006402670 | 222258018812 | 00CER2 0805 Y5V 50V 100N P8020R |
| 0006502671 | 222258018812 | 00CER2 0805 Y5V 50V 100N P8020R |
| 0006602672 | 222258018812 | 00CER2 0805 Y5V 50V 100N P8020R |
| 0006702673 | 222258018812 | 00CER2 0805 Y5V 50V 100N P8020R |
| 0006802674 | 202202000386 | 00ELCAP NS 25V 47U PM20 T       |
| 0006902675 | 222258018812 | 00CER2 0805 Y5V 50V 100N P8020R |
| 0007002676 | 222258018812 | 00CER2 0805 Y5V 50V 100N P8020R |
| 0007102677 | 202202000386 | 00ELCAP NS 25V 47U PM20 T       |
| 0007202678 | 222258018812 | 00CER2 0805 Y5V 50V 100N P8020R |
| 0007302686 | 202202000383 | 00ELCAP NS 25V 10U PM20 T       |
| 0007402687 | 202202000383 | 00ELCAP NS 25V 10U PM20 T       |
| 0007502688 | 222258018812 | 00CER2 0805 Y5V 50V 100N P8020R |
| 0007602691 | 202202000387 | 00ELCAP NS 25V 100U PM20 T      |
| 0007702692 | 222258018812 | 00CER2 0805 Y5V 50V 100N P8020R |
| 0007802693 | 202202000387 | 00ELCAP NS 25V 100U PM20 T      |
| 0007902694 | 222258018812 | 00CER2 0805 Y5V 50V 100N P8020R |
| 0008002695 | 222258018812 | 00CER2 0805 Y5V 50V 100N P8020R |
| 0008102696 | 222258018812 | 00CER2 0805 Y5V 50V 100N P8020R |
| 0008202697 | 222258018812 | 00CER2 0805 Y5V 50V 100N P8020R |
| 0008302698 | 222258018812 | 00CER2 0805 Y5V 50V 100N P8020R |
| 0008402699 | 222258018812 | 00CER2 0805 Y5V 50V 100N P8020R |
| 0008502700 | 202202000386 | 00ELCAP NS 25V 47U PM20 T       |
| 0008602701 | 222258018812 | 00CER2 0805 Y5V 50V 100N P8020R |
| 0008702702 | 222258018812 | 00CER2 0805 Y5V 50V 100N P8020R |
| 0008802703 | 222286115101 | 00CER1 0805 NPO 50V 100P PM5 R  |
| 0008902704 | 222286115101 | 00CER1 0805 NPO 50V 100P PM5 R  |
| 0009002705 | 222286115101 | 00CER1 0805 NPO 50V 100P PM5 R  |
| 0009102706 | 222286115101 | 00CER1 0805 NPO 50V 100P PM5 R  |
| 0009202707 | 222286115101 | 00CER1 0805 NPO 50V 100P PM5 R  |
| 0009302709 | 222258018812 | 00CER2 0805 Y5V 50V 100N P8020R |
| 0009402710 | 222258018812 | 00CER2 0805 Y5V 50V 100N P8020R |
| 0009502714 | 222286115101 | 00CER1 0805 NPO 50V 100P PM5 R  |
| 0009602715 | 222258018812 | 00CER2 0805 Y5V 50V 100N P8020R |
| 0009702716 | 202202000387 | 00ELCAP NS 25V 100U PM20 T      |
| 0009802717 | 222258018812 | 00CER2 0805 Y5V 50V 100N P8020R |

RESISTORS

|            |              |                               |
|------------|--------------|-------------------------------|
| 0009903602 | 232273061101 | 00RST SM 0805 RC11 100R PM5 R |
| 0010003604 | 232273061101 | 00RST SM 0805 RC11 100R PM5 R |
| 0010103605 | 232273061472 | 00RST SM 0805 RC11 4K7 PM5 R  |
| 0010203606 | 232273061101 | 00RST SM 0805 RC11 100R PM5 R |
| 0010303608 | 232273061473 | 00RST SM 0805 RC11 47K PM5 R  |
| 0010403609 | 232273061473 | 00RST SM 0805 RC11 47K PM5 R  |
| 0010503610 | 232273061101 | 00RST SM 0805 RC11 100R PM5 R |
| 0010603612 | 232273061271 | 00RST SM 0805 RC11 270R PM5 R |
| 0010703613 | 232273061101 | 00RST SM 0805 RC11 100R PM5 R |
| 0010803614 | 232273061101 | 00RST SM 0805 RC11 100R PM5 R |
| 0010903615 | 232273091003 | 00RST SM 0805 JUMP OR05 COL R |
| 0011003616 | 232273061101 | 00RST SM 0805 RC11 100R PM5 R |
| 0011103617 | 232273061101 | 00RST SM 0805 RC11 100R PM5 R |
| 0011203618 | 232273061101 | 00RST SM 0805 RC11 100R PM5 R |
| 0011303619 | 232273061104 | 00RST SM 0805 RC11 100K PM5 R |
| 0011403620 | 232273061101 | 00RST SM 0805 RC11 100R PM5 R |
| 0011503621 | 232273061101 | 00RST SM 0805 RC11 100R PM5 R |
| 0011603622 | 232273061101 | 00RST SM 0805 RC11 100R PM5 R |
| 0011703623 | 232273061101 | 00RST SM 0805 RC11 100R PM5 R |
| 0011803624 | 232273061105 | 00RST SM 0805 RC11 1M PM5 R   |
| 0011903625 | 232273061101 | 00RST SM 0805 RC11 100R PM5 R |
| 0012003626 | 232273061151 | 00RST SM 0805 RC11 150R PM5 R |
| 0012103627 | 232273061101 | 00RST SM 0805 RC11 100R PM5 R |
| 0012203628 | 232273061102 | 00RST SM 0805 RC11 1K PM5 R   |
| 0012303629 | 232273061102 | 00RST SM 0805 RC11 1K PM5 R   |
| 0012403630 | 232273061102 | 00RST SM 0805 RC11 1K PM5 R   |
| 0012503631 | 232273061101 | 00RST SM 0805 RC11 100R PM5 R |
| 0012603632 | 232273061101 | 00RST SM 0805 RC11 100R PM5 R |
| 0012703633 | 232273061101 | 00RST SM 0805 RC11 100R PM5 R |
| 0012803634 | 232273061101 | 00RST SM 0805 RC11 100R PM5 R |
| 0012903635 | 232273061101 | 00RST SM 0805 RC11 100R PM5 R |
| 0013003639 | 232273061473 | 00RST SM 0805 RC11 47K PM5 R  |
| 0013103640 | 232273061473 | 00RST SM 0805 RC11 47K PM5 R  |
| 0013203641 | 232273061223 | 00RST SM 0805 RC11 22K PM5 R  |
| 0013303642 | 232273061223 | 00RST SM 0805 RC11 22K PM5 R  |
| 0013403645 | 232273061101 | 00RST SM 0805 RC11 100R PM5 R |
| 0013503650 | 232273061472 | 00RST SM 0805 RC11 4K7 PM5 R  |
| 0013603651 | 232273061102 | 00RST SM 0805 RC11 1K PM5 R   |
| 0013703652 | 232273061479 | 00RST SM 0805 RC11 47R PM5 R  |
| 0013803653 | 232273061479 | 00RST SM 0805 RC11 47R PM5 R  |
| 0013903654 | 232273061479 | 00RST SM 0805 RC11 47R PM5 R  |
| 0014003655 | 232273061479 | 00RST SM 0805 RC11 47R PM5 R  |
| 0014103656 | 232273061479 | 00RST SM 0805 RC11 47R PM5 R  |
| 0014203657 | 232273061479 | 00RST SM 0805 RC11 47R PM5 R  |
| 0014303658 | 232273061479 | 00RST SM 0805 RC11 47R PM5 R  |
| 0014403659 | 232273061101 | 00RST SM 0805 RC11 100R PM5 R |
| 0014503660 | 232273061101 | 00RST SM 0805 RC11 100R PM5 R |
| 0014603661 | 232273061101 | 00RST SM 0805 RC11 100R PM5 R |
| 0014703662 | 232273061101 | 00RST SM 0805 RC11 100R PM5 R |



|            |              |                              |   |
|------------|--------------|------------------------------|---|
| 0014803664 | 232273061101 | 00RST SM 0805 RC11 100R PM5  | R |
| 0014903665 | 232273061101 | 00RST SM 0805 RC11 100R PM5  | R |
| 0015003666 | 232273061101 | 00RST SM 0805 RC11 100R PM5  | R |
| 0015103667 | 232273061101 | 00RST SM 0805 RC11 100R PM5  | R |
| 0015203668 | 232273061759 | 00RST SM 0805 RC11 75R PM5   | R |
| 0015303669 | 232273061759 | 00RST SM 0805 RC11 75R PM5   | R |
| 0015403670 | 232273061759 | 00RST SM 0805 RC11 75R PM5   | R |
| 0015503671 | 232273061759 | 00RST SM 0805 RC11 75R PM5   | R |
| 0015603672 | 232273091003 | 00RST SM 0805 JUMP OR05 COL  | R |
| 0015703673 | 232273261182 | 00RST SM 0805 RC12 1180R PM1 | R |
| 0015803674 | 232273061102 | 00RST SM 0805 RC11 1K PM5    | R |
| 0015903675 | 232273061472 | 00RST SM 0805 RC11 4K7 PM5   | R |
| 0016003676 | 232273061472 | 00RST SM 0805 RC11 4K7 PM5   | R |
| 0016103677 | 232273061331 | 00RST SM 0805 RC11 330R PM5  | R |
| 0016203678 | 232273061105 | 00RST SM 0805 RC11 1M PM5    | R |
| 0016303680 | 232273061479 | 00RST SM 0805 RC11 47R PM5   | R |
| 0016403681 | 232273061479 | 00RST SM 0805 RC11 47R PM5   | R |
| 0016503682 | 232273061479 | 00RST SM 0805 RC11 47R PM5   | R |
| 0016603683 | 232273061479 | 00RST SM 0805 RC11 47R PM5   | R |
| 0016703690 | 232273061101 | 00RST SM 0805 RC11 100R PM5  | R |
| 0016803691 | 232273061151 | 00RST SM 0805 RC11 150R PM5  | R |
| 0016903692 | 232273061331 | 00RST SM 0805 RC11 330R PM5  | R |
| 0017003693 | 232273061151 | 00RST SM 0805 RC11 150R PM5  | R |
| 0017103698 | 232273091003 | 00RST SM 0805 JUMP OR05 COL  | R |
| 0017203699 | 232273061103 | 00RST SM 0805 RC11 10K PM5   | R |
| 0017303700 | 232273091003 | 00RST SM 0805 JUMP OR05 COL  | R |
| 0017403719 | 232273061101 | 00RST SM 0805 RC11 100R PM5  | R |
| 0017503720 | 232273061101 | 00RST SM 0805 RC11 100R PM5  | R |
| 0017603721 | 232273061101 | 00RST SM 0805 RC11 100R PM5  | R |
| 0017703722 | 232273061101 | 00RST SM 0805 RC11 100R PM5  | R |
| 0017803723 | 232273061101 | 00RST SM 0805 RC11 100R PM5  | R |
| 0017903730 | 232273061339 | 00RST SM 0805 RC11 33R PM5   | R |
| 0018003731 | 232273061339 | 00RST SM 0805 RC11 33R PM5   | R |
| 0018103732 | 232273061339 | 00RST SM 0805 RC11 33R PM5   | R |
| 0018203733 | 232273061339 | 00RST SM 0805 RC11 33R PM5   | R |
| 0018303734 | 232273061339 | 00RST SM 0805 RC11 33R PM5   | R |
| 0018403736 | 232273061339 | 00RST SM 0805 RC11 33R PM5   | R |
| 0018503737 | 232273061339 | 00RST SM 0805 RC11 33R PM5   | R |
| 0018603738 | 232273061339 | 00RST SM 0805 RC11 33R PM5   | R |
| 0018703739 | 232273061339 | 00RST SM 0805 RC11 33R PM5   | R |
| 0018803740 | 232273061339 | 00RST SM 0805 RC11 33R PM5   | R |
| 0018903741 | 232273061339 | 00RST SM 0805 RC11 33R PM5   | R |
| 0019003742 | 232273061339 | 00RST SM 0805 RC11 33R PM5   | R |
| 0019103743 | 232273061339 | 00RST SM 0805 RC11 33R PM5   | R |
| 0019203745 | 232273061339 | 00RST SM 0805 RC11 33R PM5   | R |
| 0019303746 | 232273061339 | 00RST SM 0805 RC11 33R PM5   | R |
| 0019403747 | 232273061339 | 00RST SM 0805 RC11 33R PM5   | R |
| 0019503748 | 232273061339 | 00RST SM 0805 RC11 33R PM5   | R |
| 0019603749 | 232273061339 | 00RST SM 0805 RC11 33R PM5   | R |
| 0019703750 | 232273061339 | 00RST SM 0805 RC11 33R PM5   | R |
| 0019803751 | 232273061103 | 00RST SM 0805 RC11 10K PM5   | R |

**COILS & CRYSTAL QUARTZ**

|            |              |                                 |
|------------|--------------|---------------------------------|
| 0020205602 | 824101040420 | 00LEADED FERRITE BEADS          |
| 0020305603 | 314101820410 | 00IND SMD BEAD EMI A 4S2        |
| 0020405604 | 314101820410 | 00IND SMD BEAD EMI A 4S2        |
| 0020505605 | 314101820410 | 00IND SMD BEAD EMI A 4S2        |
| 0020605606 | 314101820410 | 00IND SMD BEAD EMI A 4S2        |
| 0020705607 | 314101820410 | 00IND SMD BEAD EMI A 4S2        |
| 0020805608 | 314101820410 | 00IND SMD BEAD EMI A 4S2        |
| 0020905609 | 314101820410 | 00IND SMD BEAD EMI A 4S2        |
| 0021005610 | 314101820410 | 00IND SMD BEAD EMI A 4S2        |
| 0021105612 | 314101820410 | 00IND SMD BEAD EMI A 4S2        |
| 0021205613 | 314101820410 | 00IND SMD BEAD EMI A 4S2        |
| 0021305614 | 314101820410 | 00IND SMD BEAD EMI A 4S2        |
| 0021405615 | 314101820410 | 00IND SMD BEAD EMI A 4S2        |
| 0021505617 | 314101820410 | 00IND SMD BEAD EMI A 4S2        |
| 0021605618 | 314101820410 | 00IND SMD BEAD EMI A 4S2        |
| 0021705619 | 314101820410 | 00IND SMD BEAD EMI A 4S2        |
| 0021805620 | 314101820410 | 00IND SMD BEAD EMI A 4S2        |
| 0021905621 | 242254943409 | 00IND BEAD EMI SM 1206 100M MUA |
| 0022005622 | 824101002390 | 00CRYSTAL QUARTZ 27MHZ          |
| 0022105623 | 242254943409 | 00IND BEAD EMI SM 1206 100M MUA |
| 0022205624 | 242254943409 | 00IND BEAD EMI SM 1206 100M MUA |
| 0022305625 | 824101040420 | 00LEADED FERRITE BEADS          |
| 0022405626 | 314101820410 | 00IND SMD BEAD EMI A 4S2        |
| 0022505630 | 314101820410 | 00IND SMD BEAD EMI A 4S2        |
| 0022605631 | 314101820410 | 00IND SMD BEAD EMI A 4S2        |
| 0022705632 | 314101820410 | 00IND SMD BEAD EMI A 4S2        |
| 0022805633 | 824101040420 | 00LEADED FERRITE BEADS          |
| 0022905634 | 314101820410 | 00IND SMD BEAD EMI A 4S2        |
| 0023005635 | 314101820410 | 00IND SMD BEAD EMI A 4S2        |
| 0023105636 | 824101002390 | 00CRYSTAL QUARTZ 27MHZ          |
| 0023205640 | 824101040420 | 00LEADED FERRITE BEADS          |
| 0023305641 | 824101040420 | 00LEADED FERRITE BEADS          |
| 0023405644 | 824101040420 | 00LEADED FERRITE BEADS          |
| 0023505650 | 824101040420 | 00LEADED FERRITE BEADS          |
| 0023605652 | 824101040420 | 00LEADED FERRITE BEADS          |
| 0023705656 | 314101820410 | 00IND SMD BEAD EMI A 4S2        |

**DIODES**

|            |              |                             |
|------------|--------------|-----------------------------|
| 0023806602 | 933040340113 | 00DIO REC 1N4002            |
| 0023906603 | 933083990133 | 00DIO SIG 1N4148 A (PHSE) A |
| 0024006604 | 933083990133 | 00DIO SIG 1N4148 A (PHSE) A |
| 0024106605 | 933083990133 | 00DIO SIG 1N4148 A (PHSE) A |
| 0024206606 | 933083990133 | 00DIO SIG 1N4148 A (PHSE) A |
| 0024306607 | 933083990133 | 00DIO SIG 1N4148 A (PHSE) A |
| 0024406608 | 933083990133 | 00DIO SIG 1N4148 A (PHSE) A |
| 0024506609 | 933083990133 | 00DIO SIG 1N4148 A (PHSE) A |
| 0024606610 | 933083990133 | 00DIO SIG 1N4148 A (PHSE) A |

**TRANSISTORS & INTERGRATED CIRCUITS**

|            |              |                                     |
|------------|--------------|-------------------------------------|
| 0024707601 | 314101850650 | 00IC SM G2000-33KC                  |
| 0024807603 | 933714260652 | 00IC SM 74HC04                      |
| 0024907604 | 933714440652 | 00IC 74HCT14D                       |
| 0025007606 | 314101850690 | 00IC CY37032P44-125JC(MEI LOADR)    |
| 0025107609 | 314101850720 | 00IC FLASH 8M-90 TSOP48(DVD761/931) |
| 0025207611 | 824101045080 | 00IC DRAM 256KX16-70 SOJ40          |
| 0025307612 | 314101850640 | 00ZIVA4.2 C-CUBE                    |
| 0025407613 | 933714260652 | 00IC SM 74HC04                      |
| 0025507618 | 824101045280 | 00LGS GM72V161621ET8 TSOP50 SDAM    |
| 0025607619 | 824101045280 | 00LGS GM72V161621ET8 TSOP50 SDAM    |
| 0025707620 | 314101850290 | 00CS5331A ADC                       |
| 0025807623 | 824101000520 | 00IC L7809CV ST                     |

NOTE: 1.Only the parts mentioned in this list are available for service.

---


# AV BOARD

---


## TABLE OF CONTENTS

|                            |    |
|----------------------------|----|
| Circuit diagram.....       | 35 |
| Component layout.....      | 37 |
| Electrical parts list..... | 39 |

|      |    |      |    |      |    |      |    |      |    |      |    |      |    |      |    |      |    |      |    |      |    |      |    |      |    |      |    |      |    |      |    |      |    |      |    |      |    |      |    |      |    |      |    |
|------|----|------|----|------|----|------|----|------|----|------|----|------|----|------|----|------|----|------|----|------|----|------|----|------|----|------|----|------|----|------|----|------|----|------|----|------|----|------|----|------|----|------|----|
| 1506 | B1 | 2562 | D2 | 2568 | B5 | 2574 | C5 | 2580 | D6 | 2586 | E5 | 2592 | F4 | 2802 | F3 | 3204 | E2 | 3211 | B4 | 3539 | D2 | 3545 | B6 | 3553 | C5 | 3560 | D5 | 3568 | D7 | 3576 | E5 | 3585 | F6 | 3594 | F5 | 5517 | D2 | 7513 | B6 | 7519 | D6 | 7529 | F2 |
| 1507 | D1 | 2563 | D3 | 2569 | B5 | 2575 | C6 | 2581 | D7 | 2587 | F5 | 2593 | F5 | 2803 | D4 | 3205 | F2 | 3511 | B2 | 3540 | A5 | 3546 | B7 | 3554 | C6 | 3561 | D5 | 3578 | E7 | 3586 | E4 | 3595 | F5 | 6501 | B4 | 7514 | B7 | 7521 | E6 | 7530 | F2 |      |    |
| 1508 | D7 | 2564 | D4 | 2570 | B6 | 2576 | C7 | 2582 | D6 | 2588 | E5 | 2594 | F2 | 2804 | D4 | 3206 | F2 | 3512 | A5 | 3541 | B5 | 3549 | B7 | 3555 | C6 | 3562 | D6 | 3571 | E5 | 3580 | F4 | 3588 | F6 | 3596 | F3 | 6502 | E2 | 7515 | A7 | 7523 | F4 |      |    |
| 2557 | A2 | 2565 | E2 | 2571 | D5 | 2577 | C7 | 2583 | E6 | 2589 | F6 | 2595 | F2 | 3201 | D2 | 3207 | F3 | 3513 | B5 | 3542 | B5 | 3550 | C5 | 3556 | C7 | 3564 | D6 | 3572 | E6 | 3581 | F5 | 3590 | F3 | 3598 | F5 | 7510 | A2 | 7516 | C6 | 7524 | F6 |      |    |
| 2559 | B3 | 2566 | B5 | 2572 | C6 | 2578 | D6 | 2584 | E6 | 2590 | F4 | 2596 | C2 | 3202 | F1 | 3209 | B7 | 3535 | B2 | 3543 | B5 | 3551 | C5 | 3557 | C7 | 3565 | D6 | 3574 | E6 | 3582 | F5 | 3591 | F3 | 5515 | D2 | 7511 | B3 | 7517 | C7 | 7526 | F5 |      |    |
| 2561 | A4 | 2567 | A5 | 2573 | C5 | 2579 | D6 | 2585 | E7 | 2591 | G4 | 2801 | D5 | 3203 | F2 | 3210 | B4 | 3538 | C2 | 3544 | B6 | 3552 | C5 | 3559 | C7 | 3566 | D5 | 3775 | E6 | 3584 | E6 | 3592 | G4 | 5516 | D2 | 7512 | C5 | 7518 | C6 | 7528 | F2 |      |    |

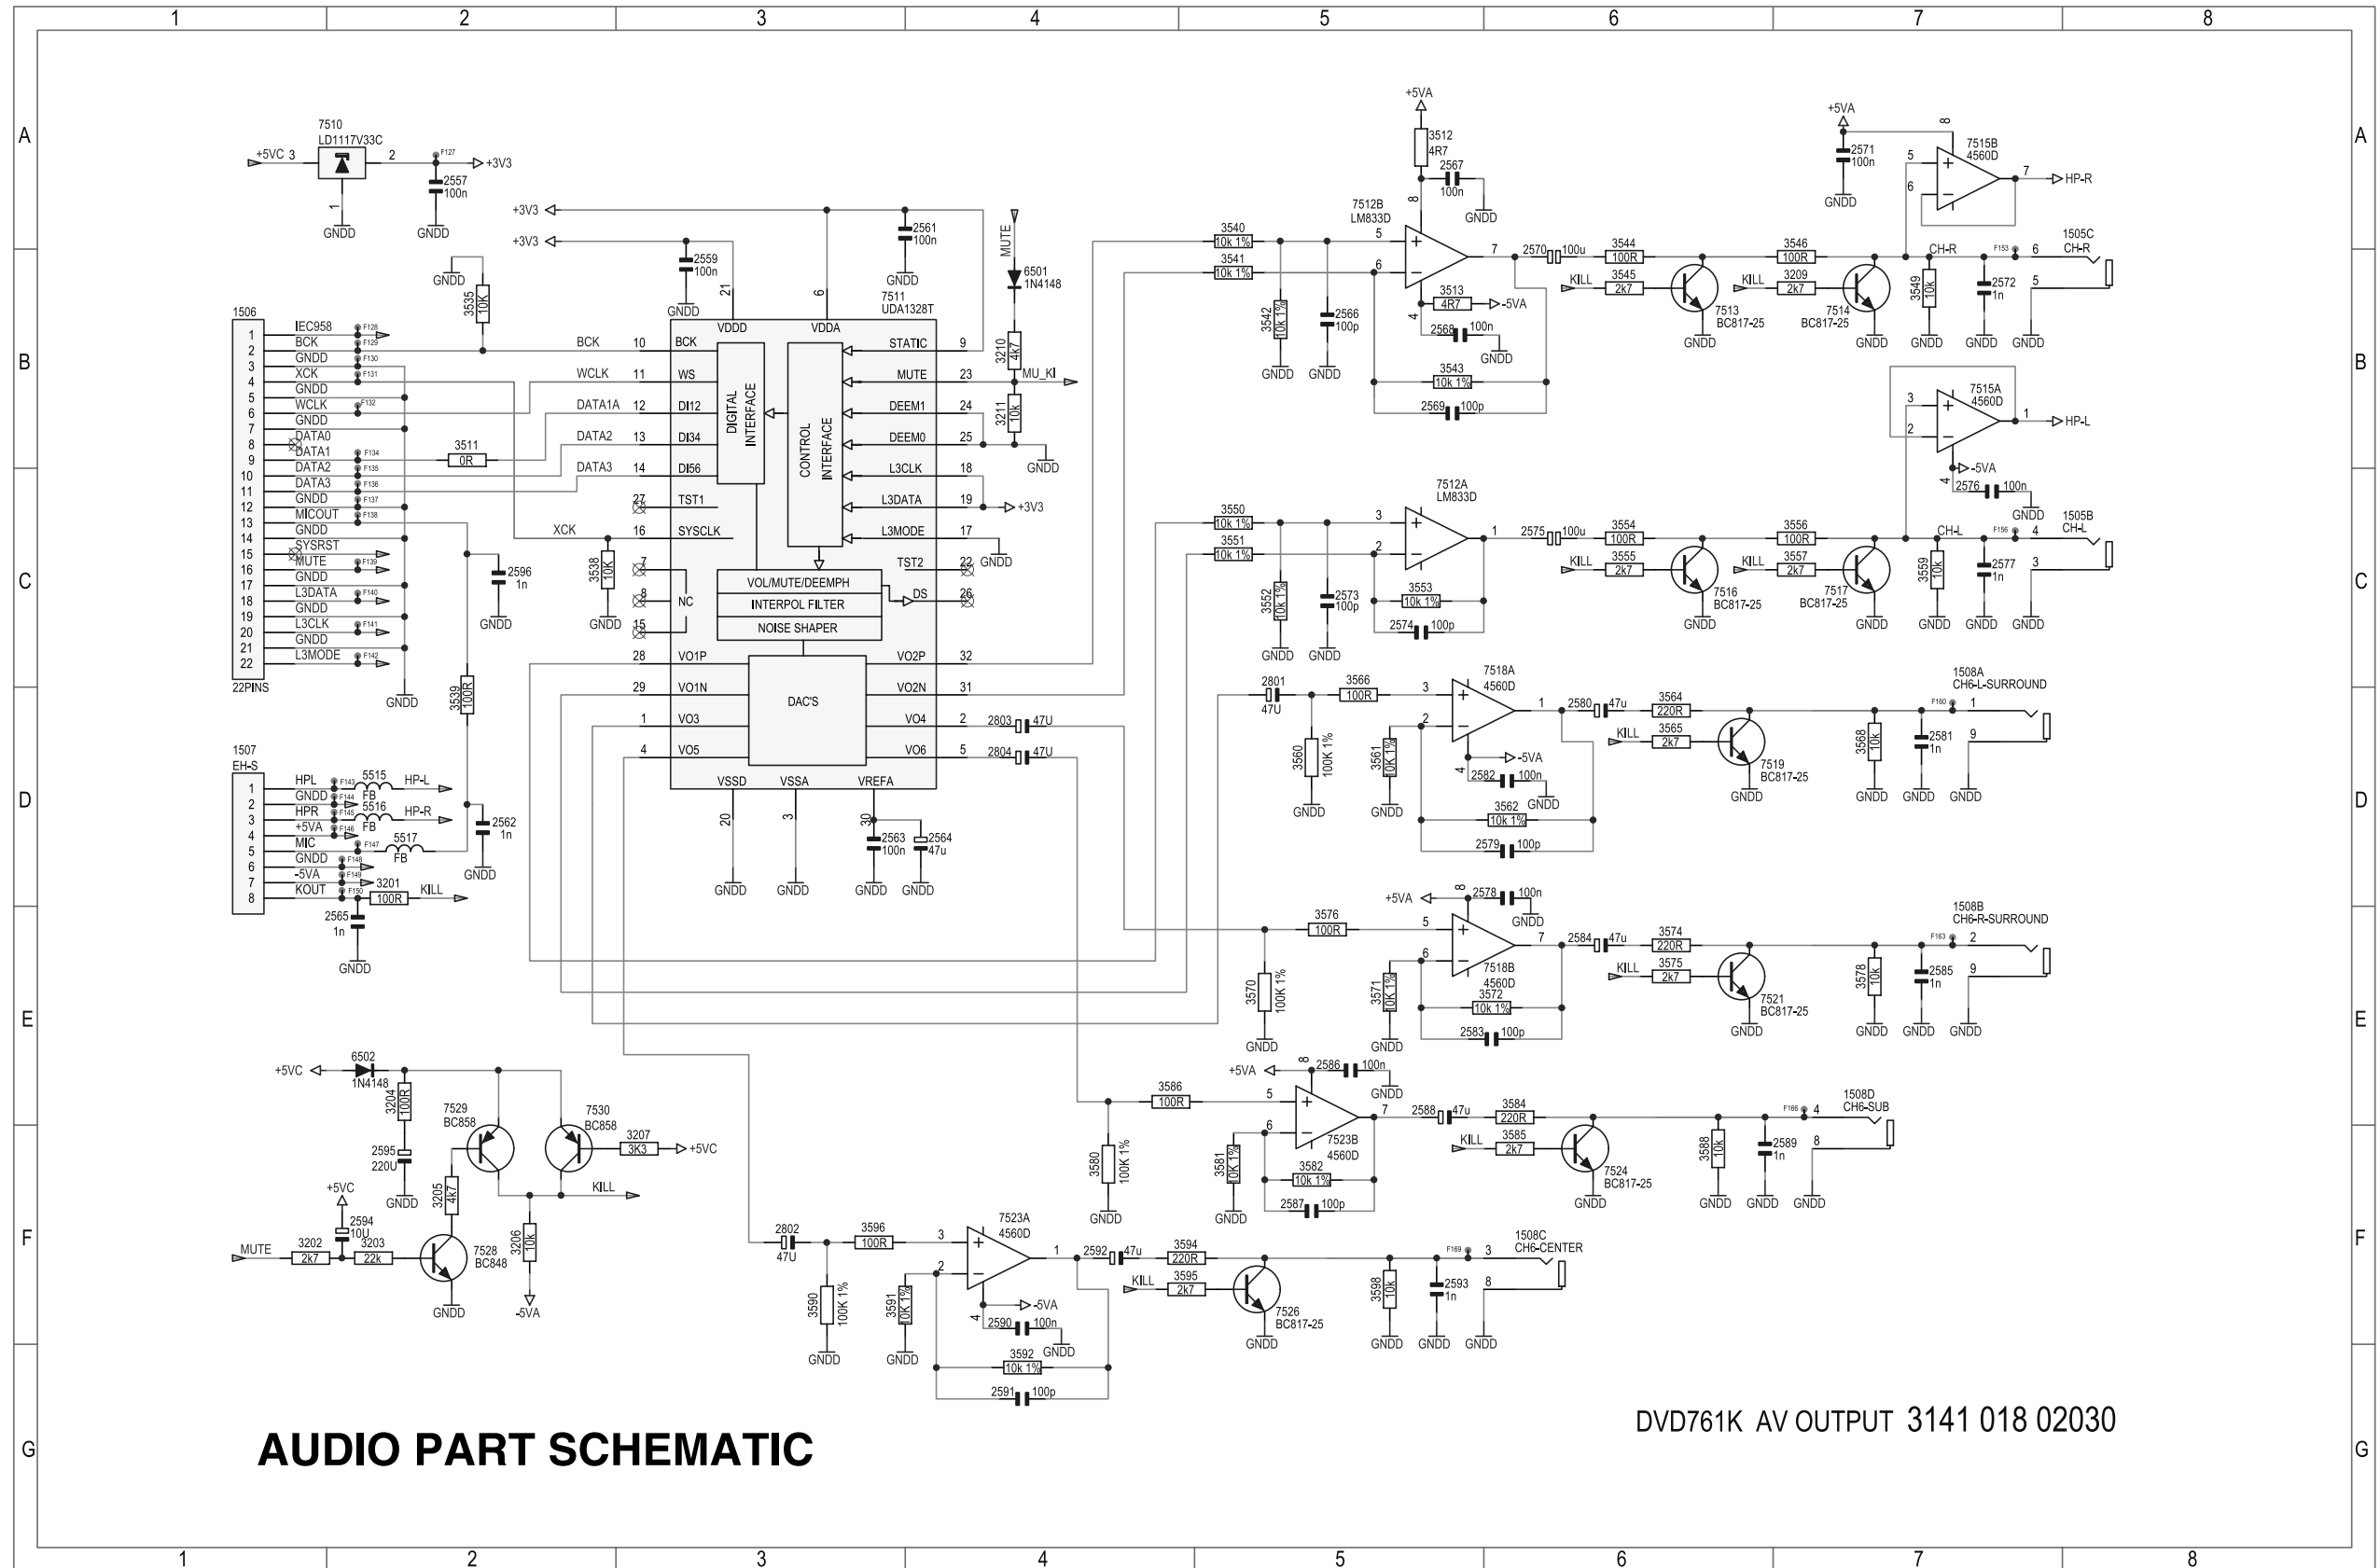


|      |    |      |    |      |    |      |    |      |    |      |    |      |    |      |    |      |    |      |    |      |    |      |    |      |    |      |    |      |    |      |    |
|------|----|------|----|------|----|------|----|------|----|------|----|------|----|------|----|------|----|------|----|------|----|------|----|------|----|------|----|------|----|------|----|
| 1501 | C2 | 2507 | B6 | 2514 | D4 | 2520 | E3 | 2527 | C6 | 2533 | C6 | 2539 | D6 | 2545 | E6 | 2551 | F3 | 3208 | A5 | 3509 | D5 | 3525 | A3 | 5500 | F3 | 5506 | C6 | 5512 | D6 | 7505 | E4 |
| 1502 | C7 | 2508 | C2 | 2515 | D4 | 2522 | A3 | 2528 | C6 | 2534 | D6 | 2540 | D6 | 2546 | E6 | 2552 | E4 | 3212 | D3 | 3510 | F2 | 3528 | A4 | 5501 | C2 | 5507 | C6 | 5513 | E6 | 7506 | B3 |
| 1503 | F4 | 2509 | D3 | 2516 | E3 | 2523 | A4 | 2529 | C6 | 2535 | D6 | 2541 | D6 | 2547 | E6 | 2553 | F4 | 3213 | D3 | 3514 | B3 | 3529 | E3 | 5502 | C2 | 5508 | C6 | 5514 | E6 | 7508 | A3 |
| 1504 | D4 | 2510 | D3 | 2517 | E3 | 2524 | B6 | 2530 | C6 | 2536 | D6 | 2542 | D6 | 2548 | E6 | 2554 | F4 | 3506 | C3 | 3515 | B3 | 3530 | F3 | 5503 | E3 | 5509 | D6 | 7502 | C4 | 7509 | B5 |
| 1505 | E4 | 2512 | B3 | 2518 | E3 | 2525 | B6 | 2531 | C6 | 2537 | D6 | 2543 | D6 | 2549 | F2 | 2555 | B2 | 3507 | C3 | 3518 | B4 | 3531 | E4 | 5504 | E3 | 5510 | D6 | 7503 | A2 |      |    |
| 2504 | B6 | 2513 | B4 | 2519 | E3 | 2526 | C6 | 2532 | C6 | 2538 | D6 | 2544 | E6 | 2550 | F3 | 2556 | B2 | 3508 | D2 | 3524 | A3 | 3532 | F4 | 5505 | C6 | 5511 | D6 | 7504 | A6 |      |    |

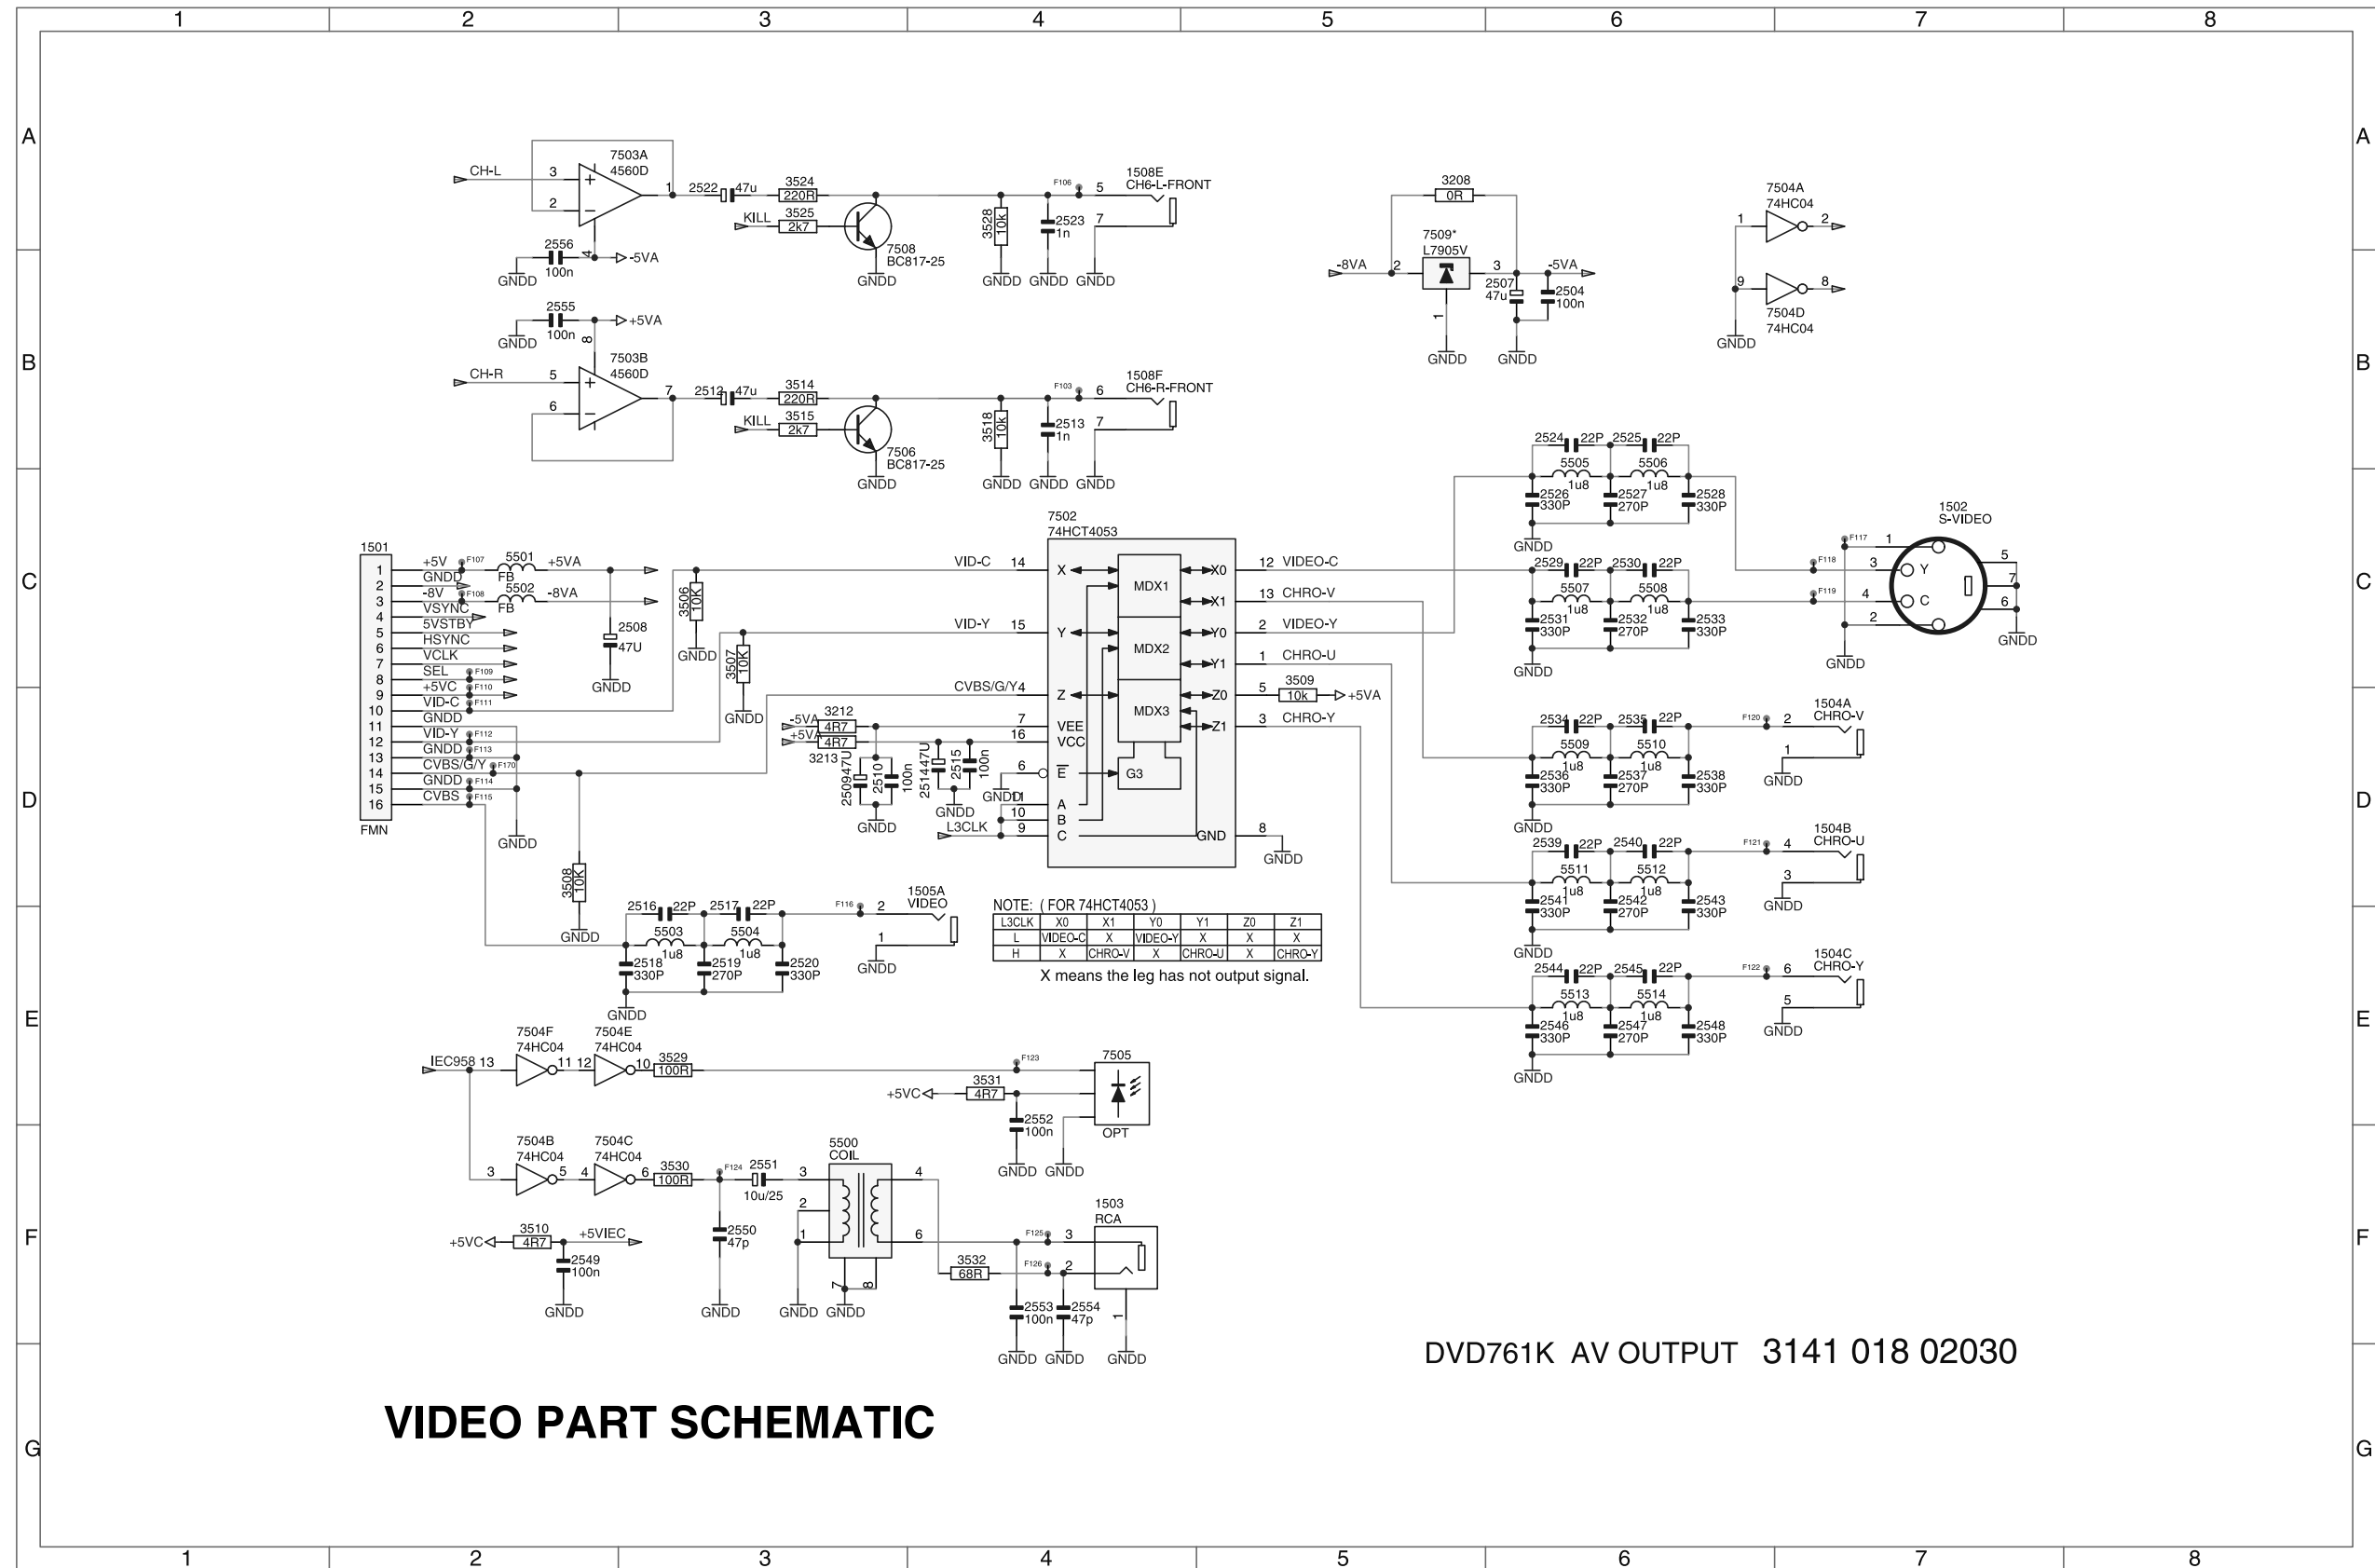

DVD761K AV OUTPUT 3141 018 02030

|      |    |      |    |      |    |      |    |      |    |      |    |      |    |      |    |      |    |      |    |      |    |      |    |      |    |      |    |
|------|----|------|----|------|----|------|----|------|----|------|----|------|----|------|----|------|----|------|----|------|----|------|----|------|----|------|----|
| 1501 | B5 | 1506 | B6 | 2509 | B3 | 2518 | B3 | 2525 | A2 | 2530 | A2 | 2535 | A2 | 2540 | A2 | 2545 | A1 | 2564 | B6 | 2588 | A4 | 2802 | A5 | 5504 | A3 | 5509 | B2 |
| 1502 | A3 | 1507 | B2 | 2512 | B4 | 2519 | A3 | 2526 | B2 | 2531 | B3 | 2536 | B2 | 2541 | B2 | 2546 | B1 | 2570 | A4 | 2592 | A5 | 2803 | A5 | 5505 | B2 | 5510 | A2 |
| 1503 | A6 | 1508 | A4 | 2514 | B3 | 2520 | A3 | 2527 | A2 | 2532 | A3 | 2537 | A2 | 2542 | A2 | 2547 | A1 | 2575 | A4 | 2594 | B7 | 2804 | B5 | 5506 | A2 | 5511 | B2 |
| 1504 | A1 | 2507 | B4 | 2516 | B3 | 2522 | A4 | 2528 | A2 | 2533 | A3 | 2538 | A2 | 2543 | A2 | 2548 | A1 | 2580 | A5 | 2595 | A7 | 5500 | A6 | 5507 | B2 | 5512 | A2 |
| 1505 | A3 | 2508 | B5 | 2517 | A3 | 2524 | B2 | 2529 | B2 | 2534 | B2 | 2539 | B2 | 2544 | B1 | 2551 | A7 | 2584 | A5 | 2801 | A6 | 5503 | B3 | 5508 | A2 | 5513 | B1 |
| 5514 | A1 | 7510 | B7 | 9504 | B3 | 9509 | B3 | 9514 | B3 | 9519 | A4 | 9524 | A4 | 9529 | B4 | 9534 | A4 | 9539 | B5 | 9544 | A5 | 9549 | A6 | 9554 | A6 | 9559 | B6 |
| 6501 | B6 | 9500 | B1 | 9505 | B3 | 9510 | B3 | 9515 | A3 | 9520 | A4 | 9525 | A4 | 9530 | B4 | 9535 | A4 | 9540 | B5 | 9545 | B5 | 9550 | A6 | 9555 | A6 | 9560 | B6 |
| 6502 | A7 | 9501 | B2 | 9506 | B3 | 9511 | B3 | 9516 | A3 | 9521 | A4 | 9526 | A4 | 9531 | B4 | 9536 | A4 | 9541 | B5 | 9546 | B5 | 9551 | A6 | 9556 | B6 | 9561 | B6 |
| 7505 | A6 | 9502 | B2 | 9507 | B3 | 9512 | B3 | 9517 | A3 | 9522 | B4 | 9527 | B4 | 9532 | B4 | 9537 | A5 | 9542 | B5 | 9547 | A6 | 9552 | A6 | 9557 | B6 | 9562 | B6 |
| 7509 | B5 | 9503 | B2 | 9508 | B3 | 9513 | B3 | 9518 | A3 | 9523 | A4 | 9528 | B4 | 9533 | B4 | 9538 | B5 | 9543 | B6 | 9548 | A6 | 9553 | A6 | 9558 | B6 |      |    |

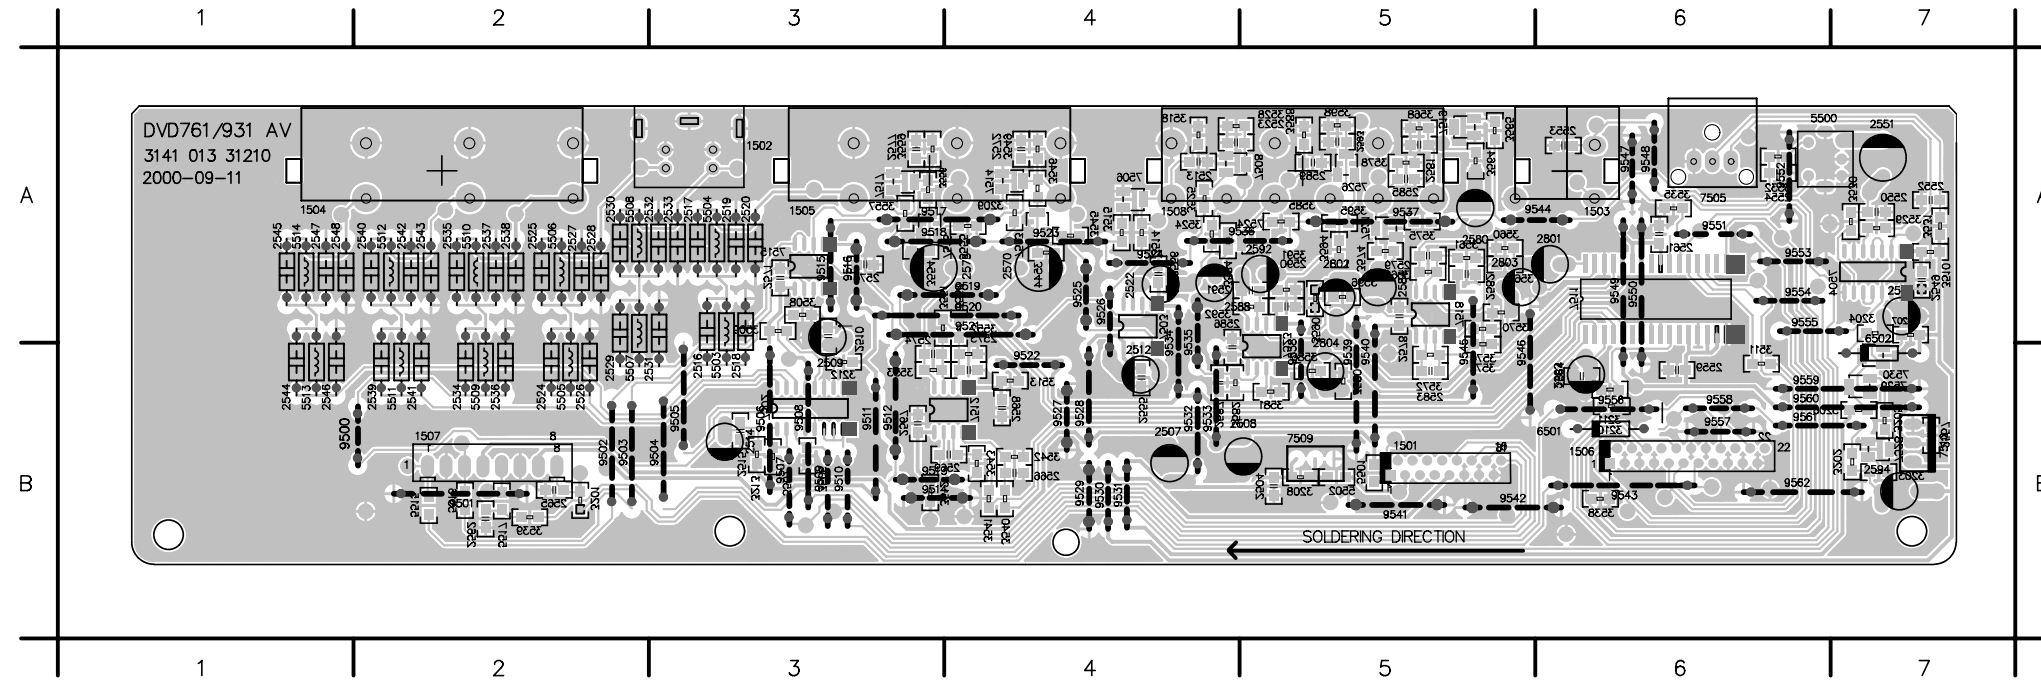

TOP VIEW

DVD761 AV OUTPUT 3141 018 02030



CAPACITORS

|            |              |                                |   |
|------------|--------------|--------------------------------|---|
| 0000102504 | 222258018812 | 00CER2 0805 Y5V 50V 100N P8020 | R |
| 0000202507 | 202202000386 | 00ELCAP NS 25V 47U PM20        | T |
| 0000302508 | 202202000386 | 00ELCAP NS 25V 47U PM20        | T |
| 0000402509 | 202202000386 | 00ELCAP NS 25V 47U PM20        | T |
| 0000502510 | 222258018812 | 00CER2 0805 Y5V 50V 100N P8020 | R |
| 0000602512 | 202202000386 | 00ELCAP NS 25V 47U PM20        | T |
| 0000702513 | 222258015623 | 00CER2 0805 X7R 50V 1N COL     | R |
| 0000802514 | 202202000386 | 00ELCAP NS 25V 47U PM20        | T |
| 0000902515 | 222258018812 | 00CER2 0805 Y5V 50V 100N P8020 | R |
| 0001002516 | 202056190081 | 00CER1 TUB SL 50V A 22P PM5    | A |
| 0001102517 | 202056190081 | 00CER1 TUB SL 50V A 22P PM5    | A |
| 0001202518 | 202056190136 | 00CER2 TUB Y5P 50V A 330P PM10 | T |
| 0001302519 | 202056190135 | 00CER2 TUB Y5P 50V A 270P PM10 | T |
| 0001402520 | 202056190136 | 00CER2 TUB Y5P 50V A 330P PM10 | T |
| 0001502522 | 202202000386 | 00ELCAP NS 25V 47U PM20        | T |
| 0001602523 | 222258015623 | 00CER2 0805 X7R 50V 1N COL     | R |
| 0001702524 | 202056190081 | 00CER1 TUB SL 50V A 22P PM5    | A |
| 0001802525 | 202056190081 | 00CER1 TUB SL 50V A 22P PM5    | A |
| 0001902526 | 202056190136 | 00CER2 TUB Y5P 50V A 330P PM10 | T |
| 0002002527 | 202056190135 | 00CER2 TUB Y5P 50V A 270P PM10 | T |
| 0002102528 | 202056190136 | 00CER2 TUB Y5P 50V A 330P PM10 | T |
| 0002202529 | 202056190081 | 00CER1 TUB SL 50V A 22P PM5    | A |
| 0002302530 | 202056190081 | 00CER1 TUB SL 50V A 22P PM5    | A |
| 0002402531 | 202056190136 | 00CER2 TUB Y5P 50V A 330P PM10 | T |
| 0002502532 | 202056190135 | 00CER2 TUB Y5P 50V A 270P PM10 | T |
| 0002602533 | 202056190136 | 00CER2 TUB Y5P 50V A 330P PM10 | T |
| 0002702534 | 202056190081 | 00CER1 TUB SL 50V A 22P PM5    | A |
| 0002802535 | 202056190081 | 00CER1 TUB SL 50V A 22P PM5    | A |
| 0002902536 | 202056190136 | 00CER2 TUB Y5P 50V A 330P PM10 | T |
| 0003002537 | 202056190135 | 00CER2 TUB Y5P 50V A 270P PM10 | T |
| 0003102538 | 202056190136 | 00CER2 TUB Y5P 50V A 330P PM10 | T |
| 0003202539 | 202056190081 | 00CER1 TUB SL 50V A 22P PM5    | A |
| 0003302540 | 202056190081 | 00CER1 TUB SL 50V A 22P PM5    | A |
| 0003402541 | 202056190136 | 00CER2 TUB Y5P 50V A 330P PM10 | T |
| 0003502542 | 202056190135 | 00CER2 TUB Y5P 50V A 270P PM10 | T |
| 0003602543 | 202056190136 | 00CER2 TUB Y5P 50V A 330P PM10 | T |
| 0003702544 | 202056190081 | 00CER1 TUB SL 50V A 22P PM5    | A |
| 0003802545 | 202056190081 | 00CER1 TUB SL 50V A 22P PM5    | A |
| 0003902546 | 202056190136 | 00CER2 TUB Y5P 50V A 330P PM10 | T |
| 0004002547 | 202056190135 | 00CER2 TUB Y5P 50V A 270P PM10 | T |
| 0004102548 | 202056190136 | 00CER2 TUB Y5P 50V A 330P PM10 | T |
| 0004202549 | 222258018812 | 00CER2 0805 Y5V 50V 100N P8020 | R |
| 0004302550 | 222286115479 | 00CER1 0805 NPO 50V 47P PM5    | R |
| 0004402551 | 202202000383 | 00ELCAP NS 25V 10U PM20        | T |
| 0004502552 | 222258018812 | 00CER2 0805 Y5V 50V 100N P8020 | R |

|            |              |                                |   |
|------------|--------------|--------------------------------|---|
| 0004602553 | 222258018812 | 00CER2 0805 Y5V 50V 100N P8020 | R |
| 0004702554 | 222286115479 | 00CER1 0805 NPO 50V 47P PM5    | R |
| 0004802555 | 222258018812 | 00CER2 0805 Y5V 50V 100N P8020 | R |
| 0004902556 | 222258018812 | 00CER2 0805 Y5V 50V 100N P8020 | R |
| 0005002557 | 222258018812 | 00CER2 0805 Y5V 50V 100N P8020 | R |
| 0005102559 | 222258018812 | 00CER2 0805 Y5V 50V 100N P8020 | R |
| 0005202561 | 222258018812 | 00CER2 0805 Y5V 50V 100N P8020 | R |
| 0005302563 | 222258018812 | 00CER2 0805 Y5V 50V 100N P8020 | R |
| 0005402564 | 202202000386 | 00ELCAP NS 25V 47U PM20        | T |
| 0005502565 | 222258015623 | 00CER2 0805 X7R 50V 1N COL     | R |
| 0005602566 | 222286115101 | 00CER1 0805 NPO 50V 100P PM5   | R |
| 0005702567 | 222258018812 | 00CER2 0805 Y5V 50V 100N P8020 | R |
| 0005802568 | 222258018812 | 00CER2 0805 Y5V 50V 100N P8020 | R |
| 0005902569 | 222286115101 | 00CER1 0805 NPO 50V 100P PM5   | R |
| 0006002570 | 202000990061 | 00ELCAP BP 16V S 100U PM20     | B |
| 0006102571 | 222258018812 | 00CER2 0805 Y5V 50V 100N P8020 | R |
| 0006202572 | 222258015623 | 00CER2 0805 X7R 50V 1N COL     | R |
| 0006302573 | 222286115101 | 00CER1 0805 NPO 50V 100P PM5   | R |
| 0006402574 | 222286115101 | 00CER1 0805 NPO 50V 100P PM5   | R |
| 0006502575 | 202000990061 | 00ELCAP BP 16V S 100U PM20     | B |
| 0006602576 | 222258018812 | 00CER2 0805 Y5V 50V 100N P8020 | R |
| 0006702577 | 222258015623 | 00CER2 0805 X7R 50V 1N COL     | R |
| 0006802578 | 222258018812 | 00CER2 0805 Y5V 50V 100N P8020 | R |
| 0006902579 | 222286115101 | 00CER1 0805 NPO 50V 100P PM5   | R |
| 0007002580 | 202202000386 | 00ELCAP NS 25V 47U PM20        | T |
| 0007102581 | 222258015623 | 00CER2 0805 X7R 50V 1N COL     | R |
| 0007202582 | 222258018812 | 00CER2 0805 Y5V 50V 100N P8020 | R |

RESISTORS

|            |              |                                |   |
|------------|--------------|--------------------------------|---|
| 0007302583 | 222286115101 | 00CER1 0805 NPO 50V 100P PM5   | R |
| 0007402584 | 202202000386 | 00ELCAP NS 25V 47U PM20        | T |
| 0007502585 | 222258015623 | 00CER2 0805 X7R 50V 1N COL     | R |
| 0007602586 | 222258018812 | 00CER2 0805 Y5V 50V 100N P8020 | R |
| 0007702587 | 222286115101 | 00CER1 0805 NPO 50V 100P PM5   | R |
| 0007802588 | 202202000386 | 00ELCAP NS 25V 47U PM20        | T |
| 0007902589 | 222258015623 | 00CER2 0805 X7R 50V 1N COL     | R |
| 0008002590 | 222258018812 | 00CER2 0805 Y5V 50V 100N P8020 | R |
| 0008102591 | 222286115101 | 00CER1 0805 NPO 50V 100P PM5   | R |
| 0008202592 | 202202000386 | 00ELCAP NS 25V 47U PM20        | T |
| 0008302593 | 222258015623 | 00CER2 0805 X7R 50V 1N COL     | R |
| 0008402594 | 202202000383 | 00ELCAP NS 25V 10U PM20        | T |
| 0008502595 | 202001291811 | 00ELCAP SU 25V S 220U PM20     | A |
| 0008602596 | 222258015623 | 00CER2 0805 X7R 50V 1N COL     | R |
| 0008702801 | 202202000386 | 00ELCAP NS 25V 47U PM20        | T |
| 0008802802 | 202202000386 | 00ELCAP NS 25V 47U PM20        | T |
| 0008902803 | 202202000386 | 00ELCAP NS 25V 47U PM20        | T |
| 0009002804 | 202202000386 | 00ELCAP NS 25V 47U PM20        | T |
| 0009103201 | 232273061101 | 00RST SM 0805 RC11 100R PM5    | R |
| 0009203202 | 232273061272 | 00RST SM 0805 RC11 2K7 PM5     | R |
| 0009303203 | 232273061223 | 00RST SM 0805 RC11 22K PM5     | R |
| 0009403204 | 232273061101 | 00RST SM 0805 RC11 100R PM5    | R |
| 0009503205 | 232273061472 | 00RST SM 0805 RC11 4K7 PM5     | R |
| 0009603206 | 232273061103 | 00RST SM 0805 RC11 10K PM5     | R |
| 0009703207 | 232273061332 | 00RST SM 0805 RC11 3K3 PM5     | R |
| 0009803208 | 232273091003 | 00RST SM 0805 JUMP OR05 COL    | R |
| 0009903209 | 232273061272 | 00RST SM 0805 RC11 2K7 PM5     | R |
| 0010003210 | 232273061472 | 00RST SM 0805 RC11 4K7 PM5     | R |
| 0010103211 | 232273061103 | 00RST SM 0805 RC11 10K PM5     | R |
| 0010203212 | 232273061478 | 00RST SM 0805 RC11 4R7 PM5     | R |
| 0010303213 | 232273061478 | 00RST SM 0805 RC11 4R7 PM5     | R |
| 0010403506 | 232273061103 | 00RST SM 0805 RC11 10K PM5     | R |
| 0010503507 | 232273061103 | 00RST SM 0805 RC11 10K PM5     | R |
| 0010603508 | 232273061103 | 00RST SM 0805 RC11 10K PM5     | R |
| 0010703509 | 232273061103 | 00RST SM 0805 RC11 10K PM5     | R |
| 0010803510 | 232273061478 | 00RST SM 0805 RC11 4R7 PM5     | R |
| 0010903511 | 232273091003 | 00RST SM 0805 JUMP OR05 COL    | R |
| 0011003512 | 232273061478 | 00RST SM 0805 RC11 4R7 PM5     | R |
| 0011103513 | 232273061478 | 00RST SM 0805 RC11 4R7 PM5     | R |
| 0011203514 | 232273061221 | 00RST SM 0805 RC11 220R PM5    | R |
| 0011303515 | 232273061272 | 00RST SM 0805 RC11 2K7 PM5     | R |
| 0011403518 | 232273061103 | 00RST SM 0805 RC11 10K PM5     | R |
| 0011503524 | 232273061221 | 00RST SM 0805 RC11 220R PM5    | R |
| 0011603525 | 232273061272 | 00RST SM 0805 RC11 2K7 PM5     | R |
| 0011703528 | 232273061103 | 00RST SM 0805 RC11 10K PM5     | R |
| 0011803529 | 232273061101 | 00RST SM 0805 RC11 100R PM5    | R |

|            |              |       |    |      |       |      |     |   |
|------------|--------------|-------|----|------|-------|------|-----|---|
| 0011903530 | 232273061101 | 00RST | SM | 0805 | RC11  | 100R | PM5 | R |
| 0012003531 | 232273061478 | 00RST | SM | 0805 | RC11  | 4R7  | PM5 | R |
| 0012103532 | 232273061689 | 00RST | SM | 0805 | RC11  | 68R  | PM5 | R |
| 0012203535 | 232273061103 | 00RST | SM | 0805 | RC11  | 10K  | PM5 | R |
| 0012303538 | 232273061103 | 00RST | SM | 0805 | RC11  | 10K  | PM5 | R |
| 0012403539 | 232273061101 | 00RST | SM | 0805 | RC11  | 100R | PM5 | R |
| 0012503540 | 232273261003 | 00RST | SM | 0805 | RC12G | 10K  | PM1 | R |
| 0012603541 | 232273261003 | 00RST | SM | 0805 | RC12G | 10K  | PM1 | R |
| 0012703542 | 232273261003 | 00RST | SM | 0805 | RC12G | 10K  | PM1 | R |
| 0012803543 | 232273261003 | 00RST | SM | 0805 | RC12G | 10K  | PM1 | R |
| 0012903544 | 232273061101 | 00RST | SM | 0805 | RC11  | 100R | PM5 | R |
| 0013003545 | 232273061272 | 00RST | SM | 0805 | RC11  | 2K7  | PM5 | R |
| 0013103546 | 232273061101 | 00RST | SM | 0805 | RC11  | 100R | PM5 | R |
| 0013203549 | 232273061103 | 00RST | SM | 0805 | RC11  | 10K  | PM5 | R |
| 0013303550 | 232273261003 | 00RST | SM | 0805 | RC12G | 10K  | PM1 | R |
| 0013403551 | 232273261003 | 00RST | SM | 0805 | RC12G | 10K  | PM1 | R |
| 0013503552 | 232273261003 | 00RST | SM | 0805 | RC12G | 10K  | PM1 | R |
| 0013603553 | 232273261003 | 00RST | SM | 0805 | RC12G | 10K  | PM1 | R |
| 0013703554 | 232273061101 | 00RST | SM | 0805 | RC11  | 100R | PM5 | R |
| 0013803555 | 232273061272 | 00RST | SM | 0805 | RC11  | 2K7  | PM5 | R |
| 0013903556 | 232273061101 | 00RST | SM | 0805 | RC11  | 100R | PM5 | R |
| 0014003557 | 232273061272 | 00RST | SM | 0805 | RC11  | 2K7  | PM5 | R |
| 0014103559 | 232273061103 | 00RST | SM | 0805 | RC11  | 10K  | PM5 | R |
| 0014203560 | 232273261004 | 00RST | SM | 0805 | RC12G | 100K | PM1 | R |
| 0014303561 | 232273261003 | 00RST | SM | 0805 | RC12G | 10K  | PM1 | R |
| 0014403562 | 232273261003 | 00RST | SM | 0805 | RC12G | 10K  | PM1 | R |
| 0014503564 | 232273061221 | 00RST | SM | 0805 | RC11  | 220R | PM5 | R |
| 0014603565 | 232273061272 | 00RST | SM | 0805 | RC11  | 2K7  | PM5 | R |
| 0014703566 | 232273061101 | 00RST | SM | 0805 | RC11  | 100R | PM5 | R |
| 0014803568 | 232273061103 | 00RST | SM | 0805 | RC11  | 10K  | PM5 | R |
| 0014903570 | 232273261004 | 00RST | SM | 0805 | RC12G | 100K | PM1 | R |
| 0015003571 | 232273261003 | 00RST | SM | 0805 | RC12G | 10K  | PM1 | R |
| 0015103572 | 232273261003 | 00RST | SM | 0805 | RC12G | 10K  | PM1 | R |
| 0015203574 | 232273061221 | 00RST | SM | 0805 | RC11  | 220R | PM5 | R |
| 0015303575 | 232273061272 | 00RST | SM | 0805 | RC11  | 2K7  | PM5 | R |
| 0015403576 | 232273061101 | 00RST | SM | 0805 | RC11  | 100R | PM5 | R |
| 0015503578 | 232273061103 | 00RST | SM | 0805 | RC11  | 10K  | PM5 | R |
| 0015603580 | 232273261004 | 00RST | SM | 0805 | RC12G | 100K | PM1 | R |
| 0015703581 | 232273261003 | 00RST | SM | 0805 | RC12G | 10K  | PM1 | R |
| 0015803582 | 232273261003 | 00RST | SM | 0805 | RC12G | 10K  | PM1 | R |
| 0015903584 | 232273061221 | 00RST | SM | 0805 | RC11  | 220R | PM5 | R |
| 0016003585 | 232273061272 | 00RST | SM | 0805 | RC11  | 2K7  | PM5 | R |
| 0016103586 | 232273061101 | 00RST | SM | 0805 | RC11  | 100R | PM5 | R |
| 0016203588 | 232273061103 | 00RST | SM | 0805 | RC11  | 10K  | PM5 | R |
| 0016303590 | 232273261004 | 00RST | SM | 0805 | RC12G | 100K | PM1 | R |
| 0016403591 | 232273261003 | 00RST | SM | 0805 | RC12G | 10K  | PM1 | R |
| 0016503592 | 232273261003 | 00RST | SM | 0805 | RC12G | 10K  | PM1 | R |
| 0016603594 | 232273061221 | 00RST | SM | 0805 | RC11  | 220R | PM5 | R |
| 0016703595 | 232273061272 | 00RST | SM | 0805 | RC11  | 2K7  | PM5 | R |
| 0016803596 | 232273061101 | 00RST | SM | 0805 | RC11  | 100R | PM5 | R |
| 0016903598 | 232273061103 | 00RST | SM | 0805 | RC11  | 10K  | PM5 | R |

### COILS & CRYSTAL QUARTZ

|            |              |       |     |       |      |      |      |   |
|------------|--------------|-------|-----|-------|------|------|------|---|
| 0017005500 | 242254941663 | 00IND | VAR | 7MM   | 7CHA | 100U | PM10 | B |
| 0017105501 | 314101820410 | 00IND | SMD | BEAD  | EMI  | A    | 4S2  |   |
| 0017205502 | 314101820410 | 00IND | SMD | BEAD  | EMI  | A    | 4S2  |   |
| 0017305503 | 242253594163 | 00IND | FXD | LAL02 | A    | 1U8  | PM5  | T |
| 0017405504 | 242253594163 | 00IND | FXD | LAL02 | A    | 1U8  | PM5  | T |
| 0017505505 | 242253594163 | 00IND | FXD | LAL02 | A    | 1U8  | PM5  | T |
| 0017605506 | 242253594163 | 00IND | FXD | LAL02 | A    | 1U8  | PM5  | T |
| 0017705507 | 242253594163 | 00IND | FXD | LAL02 | A    | 1U8  | PM5  | T |
| 0017805508 | 242253594163 | 00IND | FXD | LAL02 | A    | 1U8  | PM5  | T |
| 0017905509 | 242253594163 | 00IND | FXD | LAL02 | A    | 1U8  | PM5  | T |
| 0018005510 | 242253594163 | 00IND | FXD | LAL02 | A    | 1U8  | PM5  | T |
| 0018105511 | 242253594163 | 00IND | FXD | LAL02 | A    | 1U8  | PM5  | T |
| 0018205512 | 242253594163 | 00IND | FXD | LAL02 | A    | 1U8  | PM5  | T |
| 0018305513 | 242253594163 | 00IND | FXD | LAL02 | A    | 1U8  | PM5  | T |
| 0018405514 | 242253594163 | 00IND | FXD | LAL02 | A    | 1U8  | PM5  | T |
| 0018505515 | 314101820410 | 00IND | SMD | BEAD  | EMI  | A    | 4S2  |   |
| 0018605516 | 314101820410 | 00IND | SMD | BEAD  | EMI  | A    | 4S2  |   |
| 0018705517 | 314101820410 | 00IND | SMD | BEAD  | EMI  | A    | 4S2  |   |

### DIODES

|            |              |       |     |        |   |        |   |
|------------|--------------|-------|-----|--------|---|--------|---|
| 0018806501 | 933083990133 | 00DIO | SIG | 1N4148 | A | (PHSE) | A |
| 0018906502 | 933083990133 | 00DIO | SIG | 1N4148 | A | (PHSE) | A |

### TRANSISTORS & INTERGRATED CIRCUITS

|            |              |       |          |             |           |   |
|------------|--------------|-------|----------|-------------|-----------|---|
| 0019007502 | 933715320112 | 00IC  | SM       | 74HCT4053D  | (PHSE)    |   |
| 0019107503 | 824101045120 | 00IC  | SMD      | NJM4560     |           |   |
| 0019207504 | 933714000653 | 00IC  | SM       | 74HCU04D    | (PHSE)    | R |
| 0019307505 | 932210835687 | 00OPT | SEN      | GP1F32T     | (SRPJ)    | L |
| 0019407506 | 933628630215 | 00TRA | SIG      | SM BC817-25 | (PHSE)    | A |
| 0019507508 | 933628630215 | 00TRA | SIG      | SM BC817-25 | (PHSE)    | A |
| 0019607510 | 314101850250 | 00LC  | 1117V33C | VOLTAGE     | REGULATOR | S |
| 0019707511 | 935261617118 | 00IC  | SM       | UDA1328T/N1 | (PHSE)    | R |
| 0019807512 | 932202018668 | 00IC  | SM       | LM833D      | (MOTA)    | B |
| 0019907513 | 933628630215 | 00TRA | SIG      | SM BC817-25 | (PHSE)    | A |
| 0020007514 | 933628630215 | 00TRA | SIG      | SM BC817-25 | (PHSE)    | A |
| 0020107515 | 824101045120 | 00IC  | SMD      | NJM4560     |           |   |
| 0020207516 | 933628630215 | 00TRA | SIG      | SM BC817-25 | (PHSE)    | A |
| 0020307517 | 933628630215 | 00TRA | SIG      | SM BC817-25 | (PHSE)    | A |
| 0020407518 | 824101045120 | 00IC  | SMD      | NJM4560     |           |   |
| 0020507519 | 933628630215 | 00TRA | SIG      | SM BC817-25 | (PHSE)    | A |
| 0020607521 | 933628630215 | 00TRA | SIG      | SM BC817-25 | (PHSE)    | A |
| 0020707523 | 824101045120 | 00IC  | SMD      | NJM4560     |           |   |
| 0020807524 | 933628630215 | 00TRA | SIG      | SM BC817-25 | (PHSE)    | A |
| 0020907526 | 933628630215 | 00TRA | SIG      | SM BC817-25 | (PHSE)    | A |
| 0021007528 | 933589630215 | 00TRA | SIG      | SM BC848B   | (PHSE)    | A |
| 0021107529 | 933589790215 | 00TRA | SIG      | SM BC858B   | (PHSE)    | A |
| 0021207530 | 933589790215 | 00TRA | SIG      | SM BC858B   | (PHSE)    | A |



---


# FRONT BOARD

---

TABLE OF CONTENTS


Circuit diagram.....42  
Component layout.....43  
Electrical parts list.....43

|      |    |      |    |      |    |      |    |      |    |      |    |      |    |      |    |      |    |      |    |      |    |      |    |
|------|----|------|----|------|----|------|----|------|----|------|----|------|----|------|----|------|----|------|----|------|----|------|----|
| 1400 | A7 | 1411 | D2 | 1417 | D1 | 2404 | B5 | 2412 | C6 | 3402 | B2 | 3408 | D1 | 3414 | B6 | 3425 | D6 | 6401 | D2 | 7401 | C1 | 9441 | C1 |
| 1401 | B7 | 1412 | D2 | 1418 | B8 | 2405 | B6 | 2413 | C6 | 3403 | B2 | 3409 | D1 | 3420 | D9 | 3426 | D6 | 6402 | B5 | 7402 | C8 | 9442 | C1 |
| 1403 | B1 | 1413 | D2 | 2400 | A2 | 2406 | B6 | 2414 | C6 | 3404 | B2 | 3410 | D2 | 3421 | D7 | 3430 | B1 | 6403 | C5 | 7403 | D7 | 9443 | C1 |
| 1404 | A2 | 1414 | D2 | 2401 | B1 | 2407 | B6 | 2415 | D6 | 3405 | B1 | 3411 | D2 | 3422 | D7 | 3431 | B1 | 6404 | B5 | 7404 | C6 |      |    |
| 1405 | B8 | 1415 | D2 | 2402 | C1 | 2410 | D8 | 3400 | A3 | 3406 | C1 | 3412 | C5 | 3423 | C7 | 3432 | B1 | 6420 | B8 | 7405 | D6 |      |    |
| 1406 | B8 | 1416 | D2 | 2403 | C2 | 2411 | D7 | 3401 | A2 | 3407 | C2 | 3413 | B5 | 3424 | C7 | 6400 | D2 | 7400 | B3 | 9440 | C1 |      |    |

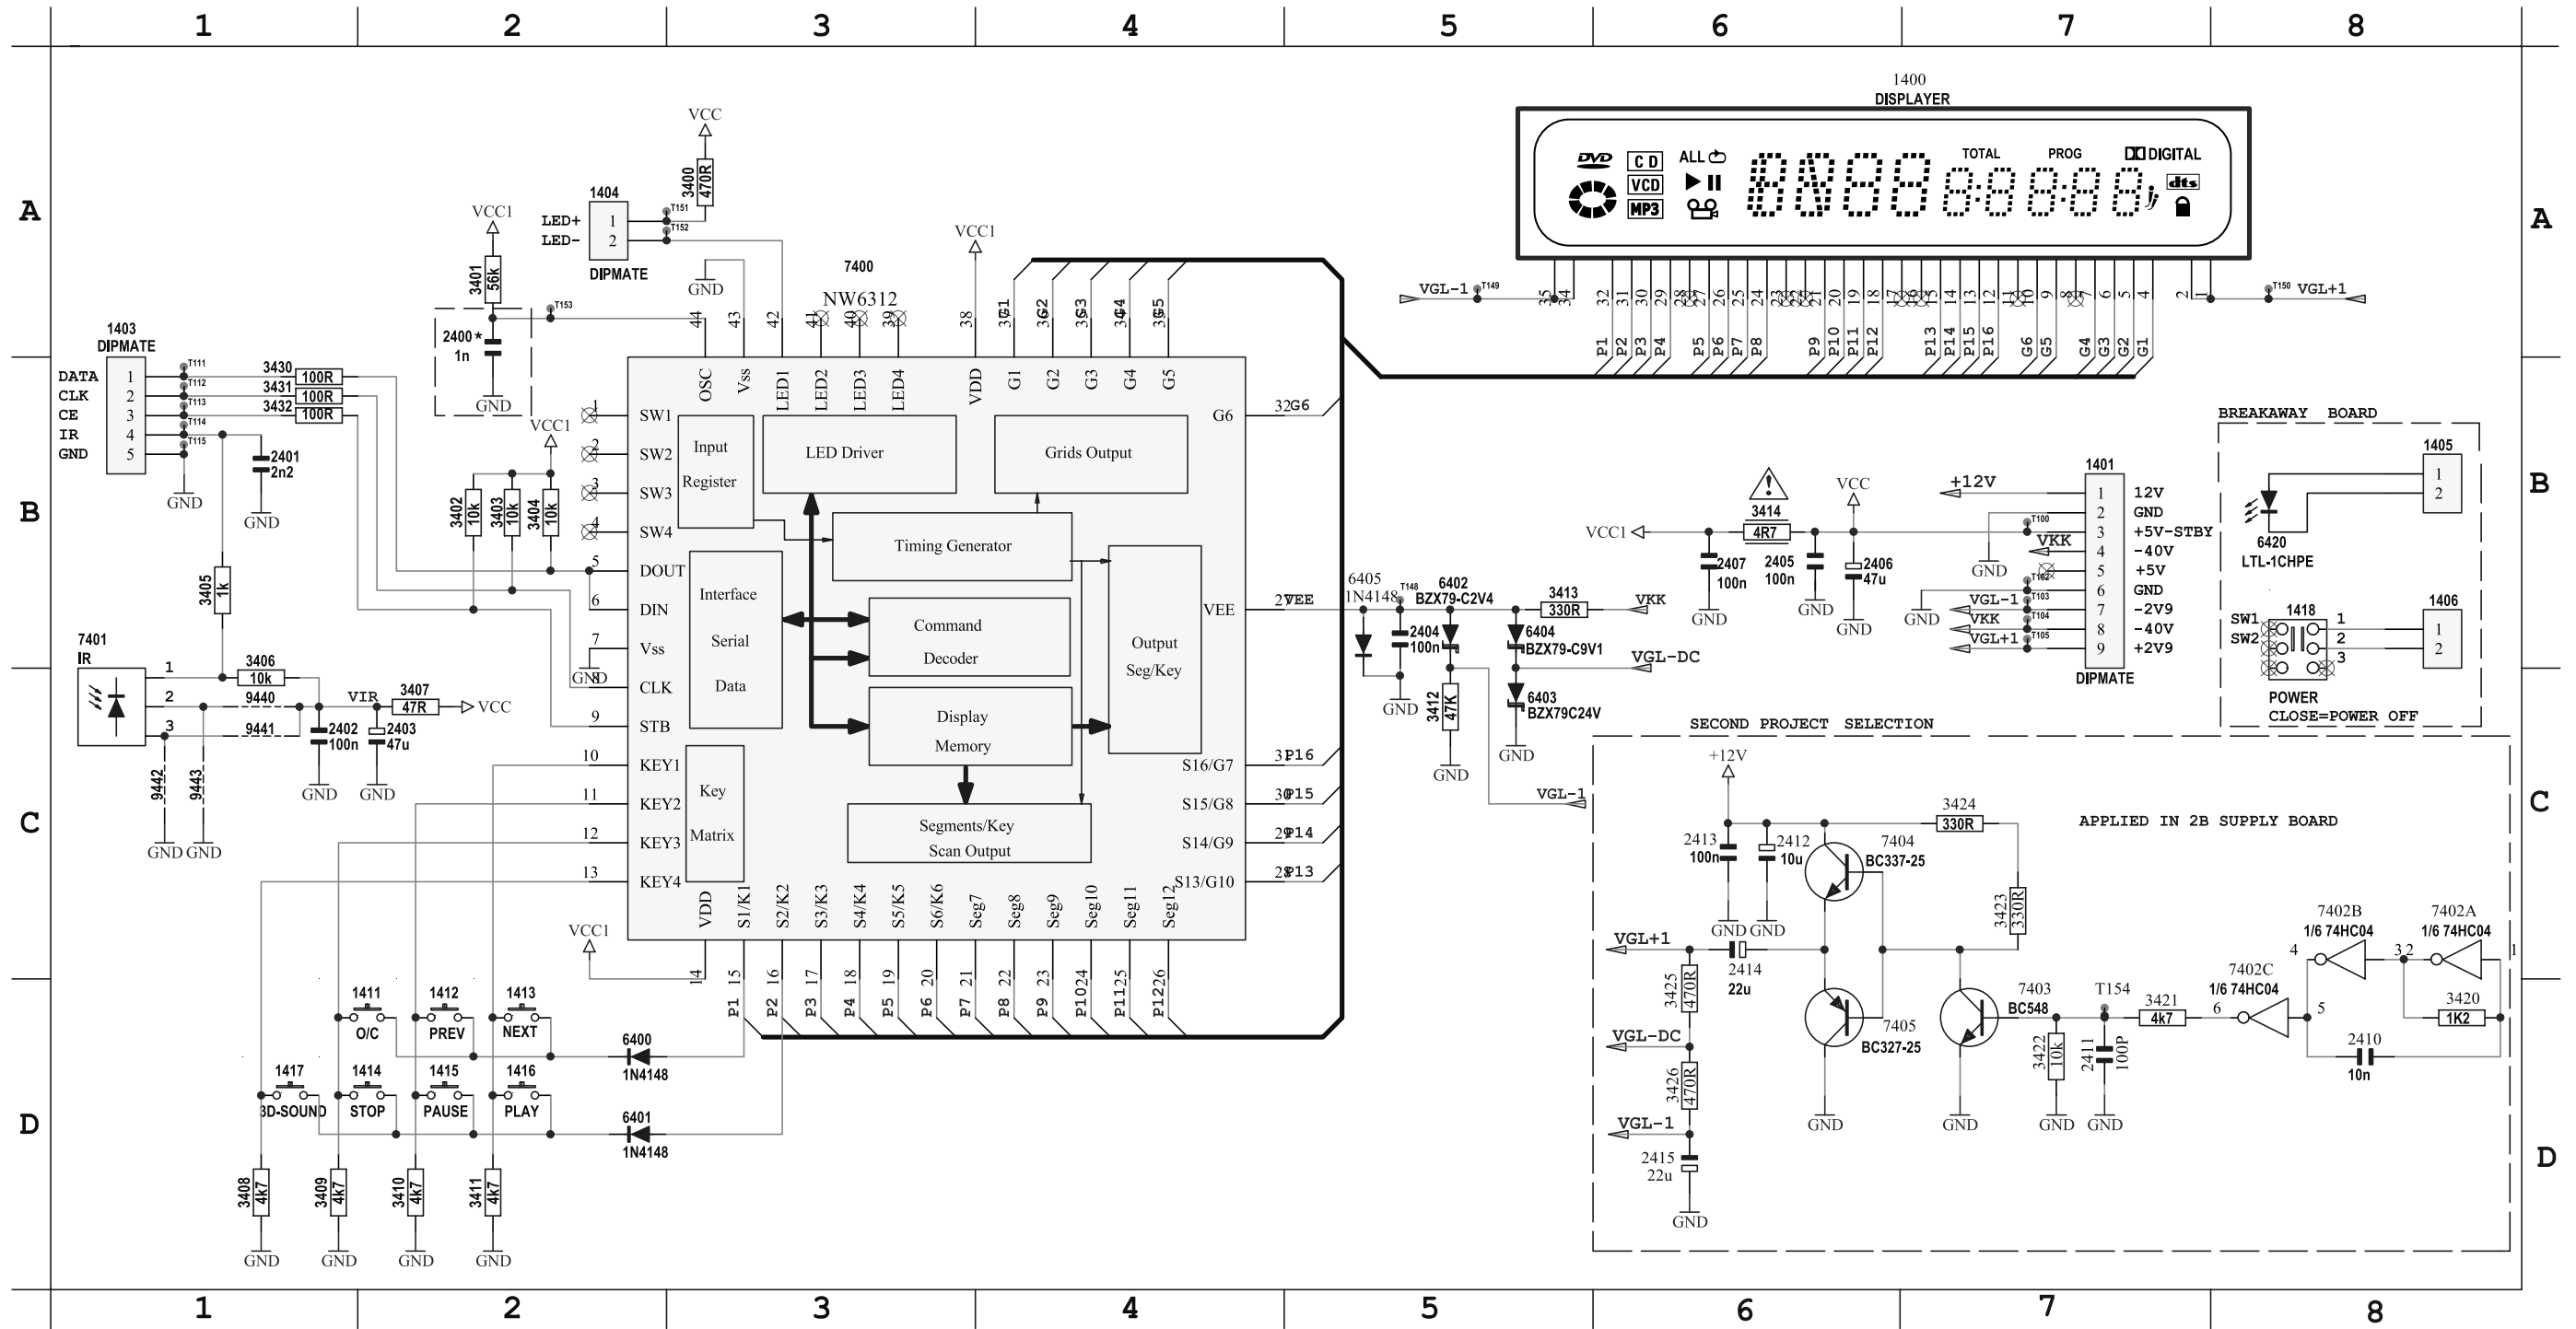

PBAS FRONT DVD761K 3141 018 02040

|      |    |      |    |      |    |      |    |      |    |      |    |      |    |      |    |      |    |      |    |      |    |
|------|----|------|----|------|----|------|----|------|----|------|----|------|----|------|----|------|----|------|----|------|----|
| 1400 | A4 | 1415 | A7 | 2405 | A1 | 2415 | A2 | 3407 | A2 | 3420 | A1 | 3431 | A6 | 7401 | A2 | 9403 | A3 | 9411 | A4 | 9443 | A2 |
| 1401 | B2 | 1416 | A8 | 2406 | B2 | 3400 | B1 | 3408 | B6 | 3421 | A1 | 3432 | A6 | 7402 | A1 | 9404 | A3 | 9412 | A4 |      |    |
| 1403 | A7 | 1417 | A7 | 2407 | A4 | 3401 | A6 | 3409 | B6 | 3422 | A1 | 6400 | B6 | 7403 | A2 | 9405 | A3 | 9413 | B6 |      |    |
| 1404 | B1 | 2400 | A6 | 2410 | A1 | 3410 | A4 | 3410 | B6 | 3423 | A1 | 6401 | A7 | 7404 | A1 | 9406 | A3 | 9414 | B6 |      |    |
| 1411 | C7 | 2401 | A6 | 2411 | A1 | 3403 | A4 | 3411 | B6 | 3424 | A1 | 6402 | A3 | 7405 | A2 | 9407 | A3 | 9415 | A9 |      |    |
| 1412 | B8 | 2402 | B2 | 2412 | A1 | 3404 | A4 | 3412 | A3 | 3425 | A2 | 6403 | A2 | 9400 | A3 | 9408 | A3 | 9440 | B2 |      |    |
| 1413 | B8 | 2403 | B2 | 2413 | A1 | 3405 | A6 | 3413 | A3 | 3426 | A2 | 6404 | A2 | 9401 | A3 | 9409 | A3 | 9441 | B2 |      |    |
| 1414 | A9 | 2404 | A4 | 2414 | A2 | 3406 | B2 | 3414 | A4 | 3430 | A6 | 7400 | A4 | 9402 | A3 | 9410 | A3 | 9442 | A2 |      |    |

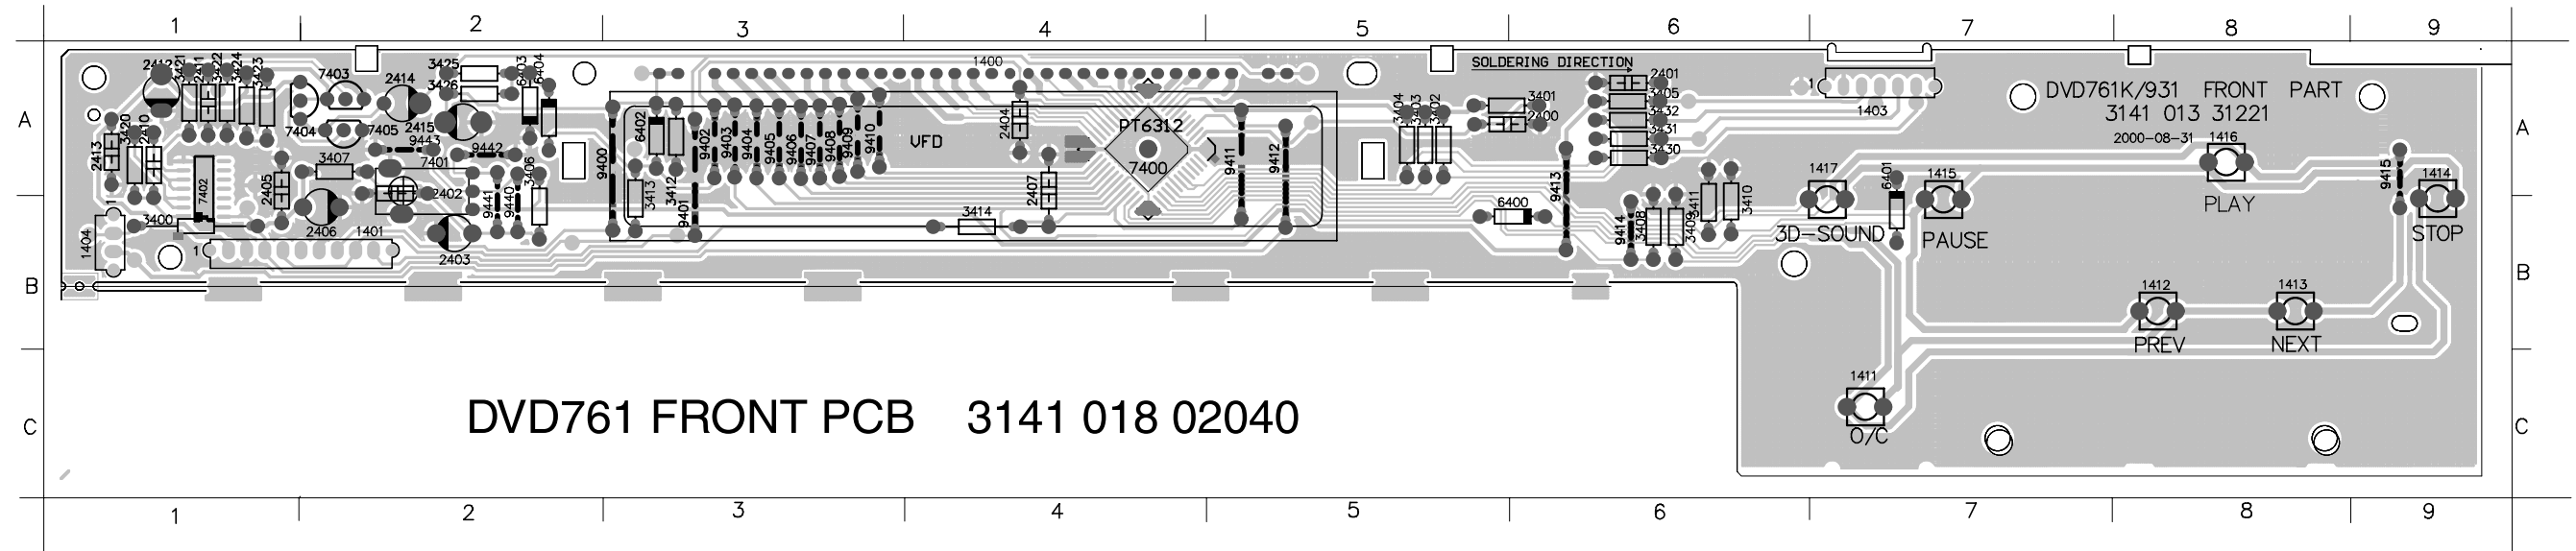

**MISCELLANEOUS**

|            |              |                              |
|------------|--------------|------------------------------|
| 0000101400 | 314101880320 | 00VFD DS HNV-O6SS63T         |
| 0000201405 | 242202509011 | 00CON BM V 2P M 2.50 XH      |
| 0000301406 | 242202509011 | 00CON BM V 2P M 2.50 XH      |
| 0000401411 | 242212802496 | 00SWI TACT 1P 20MA 15V EVQ21 |
| 0000501411 | 242212802496 | 00SWI TACT 1P 20MA 15V EVQ21 |
| 0000601411 | 242212802496 | 00SWI TACT 1P 20MA 15V EVQ21 |
| 0000701411 | 242212802496 | 00SWI TACT 1P 20MA 15V EVQ21 |
| 0000801411 | 242212802496 | 00SWI TACT 1P 20MA 15V EVQ21 |
| 0000901411 | 242212802496 | 00SWI TACT 1P 20MA 15V EVQ21 |
| 0001001411 | 242212802496 | 00SWI TACT 1P 20MA 15V EVQ21 |
| 0001101418 | 242212802939 | 00SWI BM V PUSH 2P2T         |

**CAPACITORS**

|            |              |                               |
|------------|--------------|-------------------------------|
| 0001202401 | 202056190271 | 00CER2 TUB Y5R 16V A 2N2 PM10 |
| 0001302402 | 202056190359 | 00CER2 TUB Y5V 50V 100N P8020 |
| 0001402403 | 202202000386 | 00ELCAP NS 25V 47U PM20       |
| 0001502404 | 202056190359 | 00CER2 TUB Y5V 50V 100N P8020 |
| 0001602405 | 202056190359 | 00CER2 TUB Y5V 50V 100N P8020 |
| 0001702406 | 202202000386 | 00ELCAP NS 25V 47U PM20       |
| 0001802407 | 202056190359 | 00CER2 TUB Y5V 50V 100N P8020 |

**RESISTORS**

|            |              |                                 |
|------------|--------------|---------------------------------|
| 0001903400 | 213810110471 | 00RST CRB R-20 A 470R PM5       |
| 0002003401 | 213810110563 | 00RST CRB R-20 A 56K PM5        |
| 0002103402 | 213810110103 | 00RST CRB R-20 A 10K PM5        |
| 0002203402 | 213810110103 | 00RST CRB R-20 A 10K PM5        |
| 0002303402 | 213810110103 | 00RST CRB R-20 A 10K PM5        |
| 0002403405 | 213810110102 | 00RST CRB R-20 A 1K PM5         |
| 0002503402 | 213810110103 | 00RST CRB R-20 A 10K PM5        |
| 0002603407 | 213810110479 | 00RST CRB R-20 A 47R PM5        |
| 0002703408 | 213810110472 | 00RST CRB R-20 A 4K7 PM5        |
| 0002803408 | 213810110472 | 00RST CRB R-20 A 4K7 PM5        |
| 0002903408 | 213810110472 | 00RST CRB R-20 A 4K7 PM5        |
| 0003003408 | 213810110472 | 00RST CRB R-20 A 4K7 PM5        |
| 0003103408 | 213810110472 | 00RST CRB R-20 A 4K7 PM5        |
| 0003203413 | 213810110331 | 00RST CRB R-20 A 330R PM5       |
| 0003303414 | 232220533478 | 00RST FUSE NFR25 A 4R7 PM5 A \$ |
| 0003403430 | 213810110101 | 00RST CRB R-20 A 100R PM5       |
| 0003503431 | 213810110101 | 00RST CRB R-20 A 100R PM5       |
| 0003603432 | 213810110101 | 00RST CRB R-20 A 100R PM5       |

**DIODES**

|            |              |                               |
|------------|--------------|-------------------------------|
| 0003706400 | 933083990133 | 00DIO SIG 1N4148 A (PHSE)     |
| 0003806401 | 933083990133 | 00DIO SIG 1N4148 A (PHSE)     |
| 0003906402 | 933414680113 | 00DIO REG BZX79C2V4 A (PHSE)  |
| 0004006403 | 933117880133 | 00DIO REG BZX79C-24 A (PHSE)  |
| 0004106404 | 933117780133 | 00DIO REG BZX79-C9V1 A (PHSE) |
| 0004206420 | 314101850630 | 00LED VS LTL-1CHPE (LITO)     |

**TRANSISTORS & INTERGRATED CIRCUITS**

|            |              |               |
|------------|--------------|---------------|
| 0004307400 | 824101040440 | 00IC PT6312   |
| 0004407401 | 824101045320 | 00HEG836-16GP |

NOTE: 1.Only the parts mentioned in this list are available for service.

---

# MIC BOARD



---

## TABLE OF CONTENTS

|                            |    |
|----------------------------|----|
| Circuit diagram.....       | 45 |
| Component layout.....      | 45 |
| Electrical parts list..... | 46 |

|      |    |      |    |      |    |      |    |      |    |      |    |      |    |      |    |      |    |      |    |
|------|----|------|----|------|----|------|----|------|----|------|----|------|----|------|----|------|----|------|----|
| 1000 | B1 | 2207 | B5 | 2218 | D2 | 2229 | C5 | 3201 | A2 | 3213 | C3 | 3224 | E2 | 3235 | D6 | 5201 | D2 | 7205 | E4 |
| 1001 | D1 | 2208 | C2 | 2219 | D3 | 2232 | D5 | 3202 | D1 | 3214 | C2 | 3225 | E3 | 3236 | D2 | 5202 | A1 | 7206 | A4 |
| 1003 | A6 | 2209 | C3 | 2220 | D3 | 2233 | E5 | 3203 | D1 | 3215 | C3 | 3226 | E3 | 3237 | B2 | 6200 | C3 | 7207 | B4 |
| 1200 | A1 | 2210 | B3 | 2221 | C3 | 2234 | E5 | 3204 | E1 | 3216 | C3 | 3227 | E3 | 3238 | A2 | 6201 | C3 | 7210 | B3 |
| 2200 | A2 | 2211 | C3 | 2222 | D3 | 2237 | C5 | 3205 | E1 | 3217 | C3 | 3228 | E4 | 3239 | A3 | 6202 | E3 | 7211 | D5 |
| 2201 | A3 | 2212 | C3 | 2223 | E2 | 2238 | B6 | 3206 | A4 | 3218 | C4 | 3229 | D4 | 3240 | B3 | 6203 | E3 | 7212 | A3 |
| 2202 | A3 | 2213 | C2 | 2224 | E3 | 2239 | B6 | 3207 | A4 | 3219 | C4 | 3230 | C5 | 3241 | C4 | 7200 | C2 |      |    |
| 2203 | A4 | 2214 | C3 | 2225 | E3 | 2240 | B6 | 3209 | B4 | 3220 | C3 | 3231 | C5 | 3242 | D4 | 7201 | C2 |      |    |
| 2204 | A5 | 2215 | C3 | 2226 | E4 | 2241 | E1 | 3210 | B4 | 3221 | D2 | 3232 | C6 | 3244 | A4 | 7202 | C4 |      |    |
| 2205 | B2 | 2216 | C4 | 2227 | E4 | 2242 | E1 | 3211 | C2 | 3222 | D3 | 3233 | E5 | 3245 | B4 | 7203 | E2 |      |    |
| 2206 | B4 | 2217 | C4 | 2228 | C5 | 2243 | C6 | 3212 | C2 | 3223 | E2 | 3234 | E5 | 5200 | C2 | 7204 | E2 |      |    |


|      |    |      |    |      |    |      |    |      |    |      |    |
|------|----|------|----|------|----|------|----|------|----|------|----|
| 1000 | C4 | 2214 | A4 | 3201 | C1 | 3241 | C3 | 5200 | B3 | 6202 | A3 |
| 1001 | C3 | 2224 | B3 | 3204 | B3 | 3242 | C2 | 5201 | B3 | 6203 | A3 |
| 1003 | C2 | 2241 | B3 | 3205 | B2 | 3244 | C2 | 6200 | A4 | 7212 | B1 |
| 1200 | B1 | 2242 | B3 | 3236 | B3 | 3245 | C2 | 6201 | A4 |      |    |

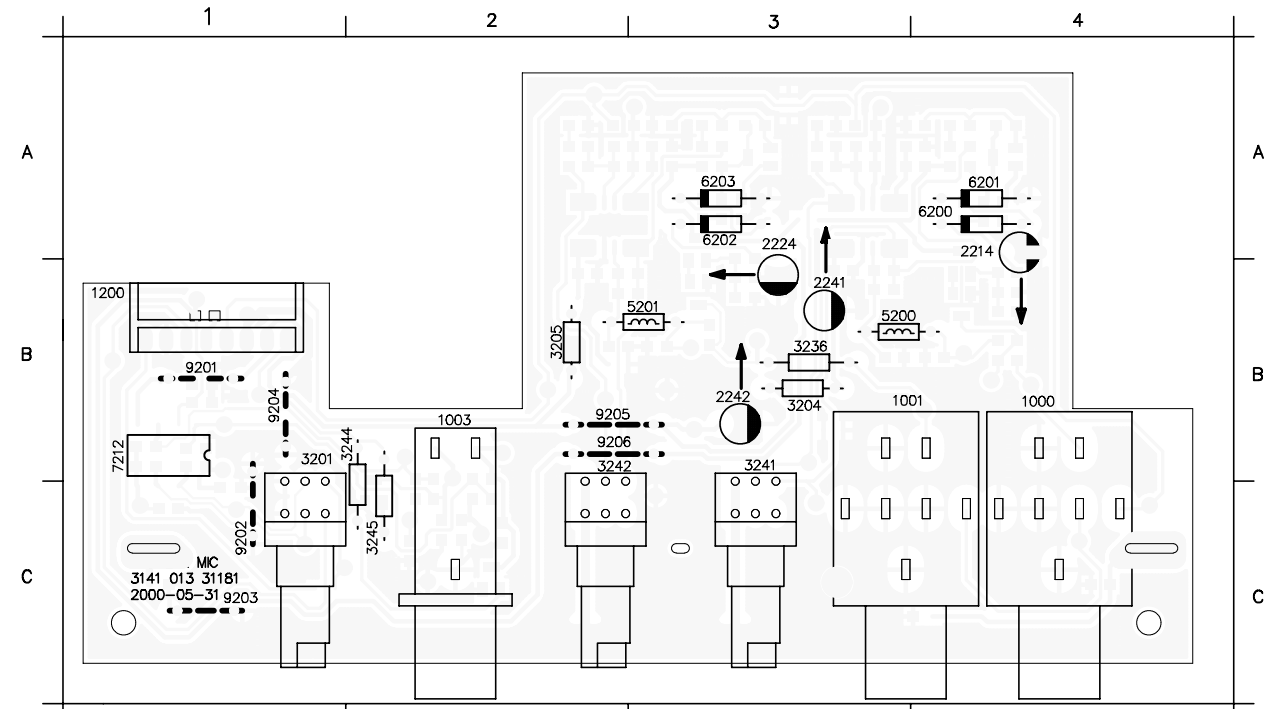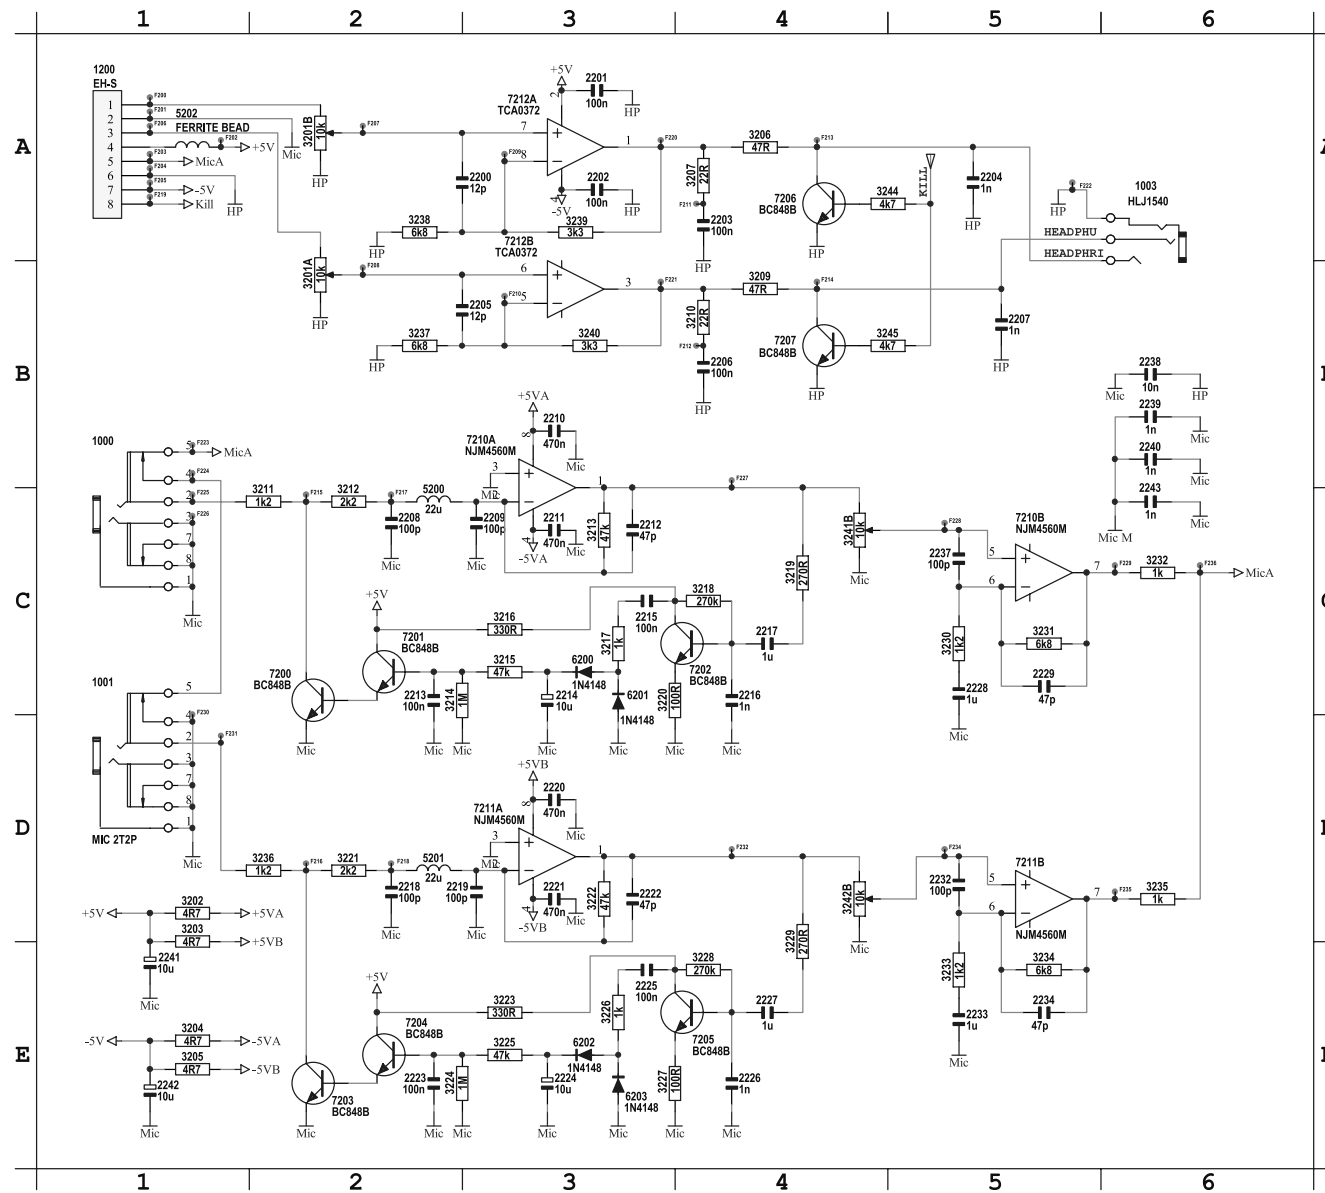

TOP VIEW

PBAS MIC DVD721 3141 018 01980

|      |    |      |    |      |    |      |    |      |    |      |    |      |    |      |    |
|------|----|------|----|------|----|------|----|------|----|------|----|------|----|------|----|
| 2200 | B4 | 2211 | A2 | 2223 | B2 | 2239 | C2 | 3213 | A2 | 3224 | B2 | 3235 | A3 | 7200 | B1 |
| 2201 | B4 | 2212 | B2 | 2225 | A2 | 2240 | C1 | 3214 | B1 | 3225 | A2 | 3237 | C4 | 7201 | A1 |
| 2202 | B4 | 2213 | B1 | 2226 | A3 | 2243 | C4 | 3215 | A1 | 3226 | A2 | 3238 | B4 | 7202 | B2 |
| 2203 | C3 | 2215 | A1 | 2227 | A2 | 3202 | A2 | 3216 | A1 | 3227 | A2 | 3239 | B4 | 7203 | B2 |
| 2204 | C3 | 2216 | A2 | 2228 | A2 | 3203 | A3 | 3217 | A1 | 3228 | A2 | 3240 | B4 | 7204 | A2 |
| 2205 | B4 | 2217 | A1 | 2229 | A2 | 3206 | B3 | 3218 | A1 | 3229 | A2 | 4202 | B3 | 7205 | A2 |
| 2206 | C3 | 2218 | B3 | 2232 | A3 | 3207 | B3 | 3219 | A1 | 3230 | A2 | 4204 | B2 | 7206 | C2 |
| 2207 | C3 | 2219 | B3 | 2233 | A3 | 3209 | B3 | 3220 | A1 | 3231 | A2 | 4205 | A2 | 7207 | C2 |
| 2208 | B2 | 2220 | A3 | 2234 | A3 | 3210 | B3 | 3221 | B2 | 3232 | A2 | 4206 | A2 | 7210 | A2 |
| 2209 | B2 | 2221 | A3 | 2237 | A2 | 3211 | B1 | 3222 | B3 | 3233 | A3 | 4208 | C4 | 7211 | A2 |
| 2210 | A2 | 2222 | A3 | 2238 | B4 | 3212 | B1 | 3223 | A2 | 3234 | A3 | 5202 | B4 |      |    |

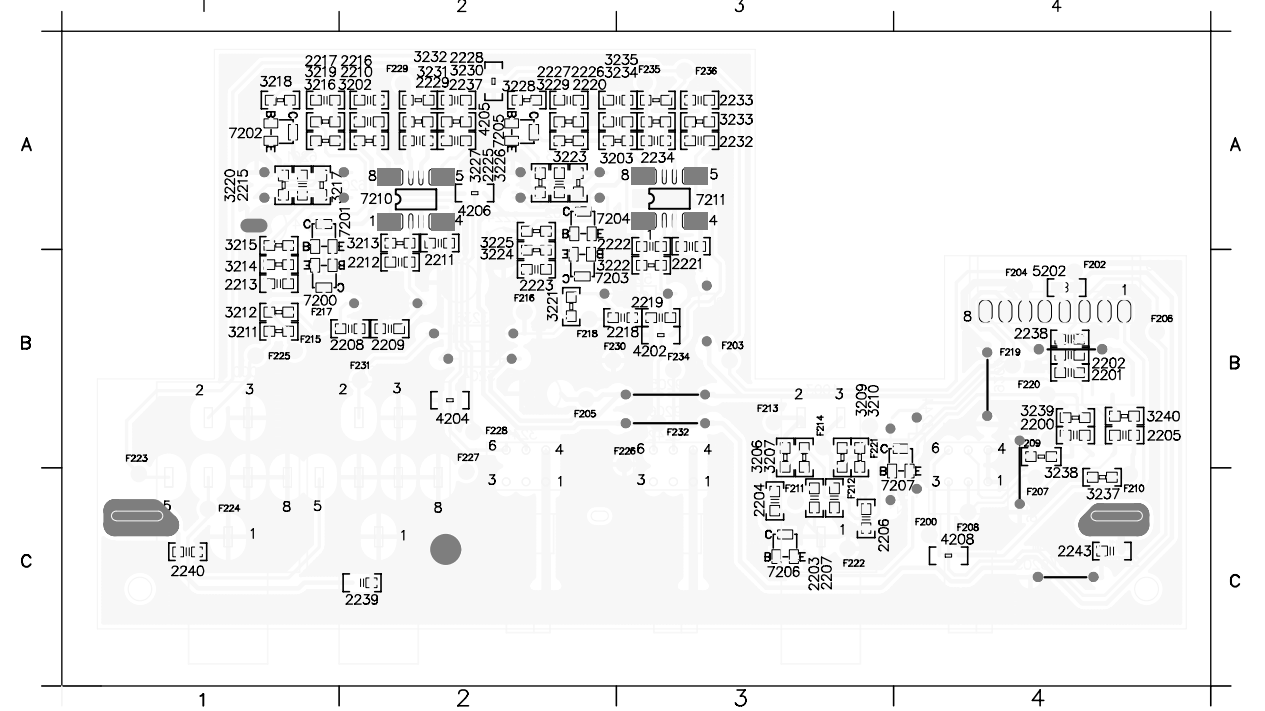

MISCELLANEOUS

Table with 3 columns: Part Number, Description, and Quantity. Rows include items like 0000101000, 0000201001, 0000301003, 0000401200.

CAPACITORS

Table with 3 columns: Part Number, Description, and Quantity. Rows include various capacitor types like 0000502200, 0000602201, 0000702202, etc.

RESISTORS

Table with 3 columns: Part Number, Description, and Quantity. Rows include various resistor types like 0004403201, 0004503202, 0004603203, etc.

0 Ohm resistors for short

Table with 3 columns: Part Number, Description, and Quantity. Rows include 0008704202, 0008804204, 0008904205, etc.

COILS & CRYSTAL QUARTZ

Table with 3 columns: Part Number, Description, and Quantity. Rows include 0009205200, 0009305201, 0009405202.

DIODES

Table with 3 columns: Part Number, Description, and Quantity. Rows include 0009506200, 0009606201, 0009706202, etc.


TRANSISTORS & INTERGRATED CIRCUITS

Table with 3 columns: Part Number, Description, and Quantity. Rows include 0009907200, 0010007201, 0010107202, etc.

NOTE: 1.Only the parts mentioned in this list are available for service.

# DVD761K EXPLODED VIEW

|            |              |                                  |
|------------|--------------|----------------------------------|
| 0000100001 | 314101423750 | 00CABINET FRONT DVD761K          |
| 0000200203 | 313924400160 | 00LIGHT CONDUCTOR DVD950         |
| 0000300204 | 314101773670 | 00WINDOW DVD761K PRT             |
| 0000400205 | 314101773680 | 00BUTTON POWER DVD761K PNT       |
| 0000500206 | 313924400490 | 00LIGHT GUIDE HOLDER             |
| 0000600208 | 314101773690 | 00VOLUME KNOB DVD761K PNT        |
| 0000700219 | 314101773700 | 00DOOR DVD761K PNT               |
| 0000800240 | 314101773730 | 00BUTTON CONTROL DVD761K PNT PRT |
| 0000900242 | 314101773740 | 00RING DVD761K PNT               |
| 0001000244 | 313924400410 | 00FOOT DVD711                    |
| 0001100249 | 314101400270 | 00CUSHION                        |
| 0001200250 | 313924120090 | 00EARTH PLATE HEADPHONE          |
| 0001300252 | 314101160390 | 00EMC SPRING                     |
| 0001401001 | 314101802020 | 00PBAS MPEG DVD761K              |
| 0001501002 | 312242722530 | 00PSU DVD STEP2A                 |
| 0001601003 | 314101802040 | 00PBAS FRONT DVD761K             |
| 0001701004 | 314101802030 | 00PBAS AV DVD761K                |
| 0001801005 | 314101801980 | 00PBAS MIC DVD721K               |
| 0001901006 | 314101802010 | 00DVD LOADER MOULD DU4           |

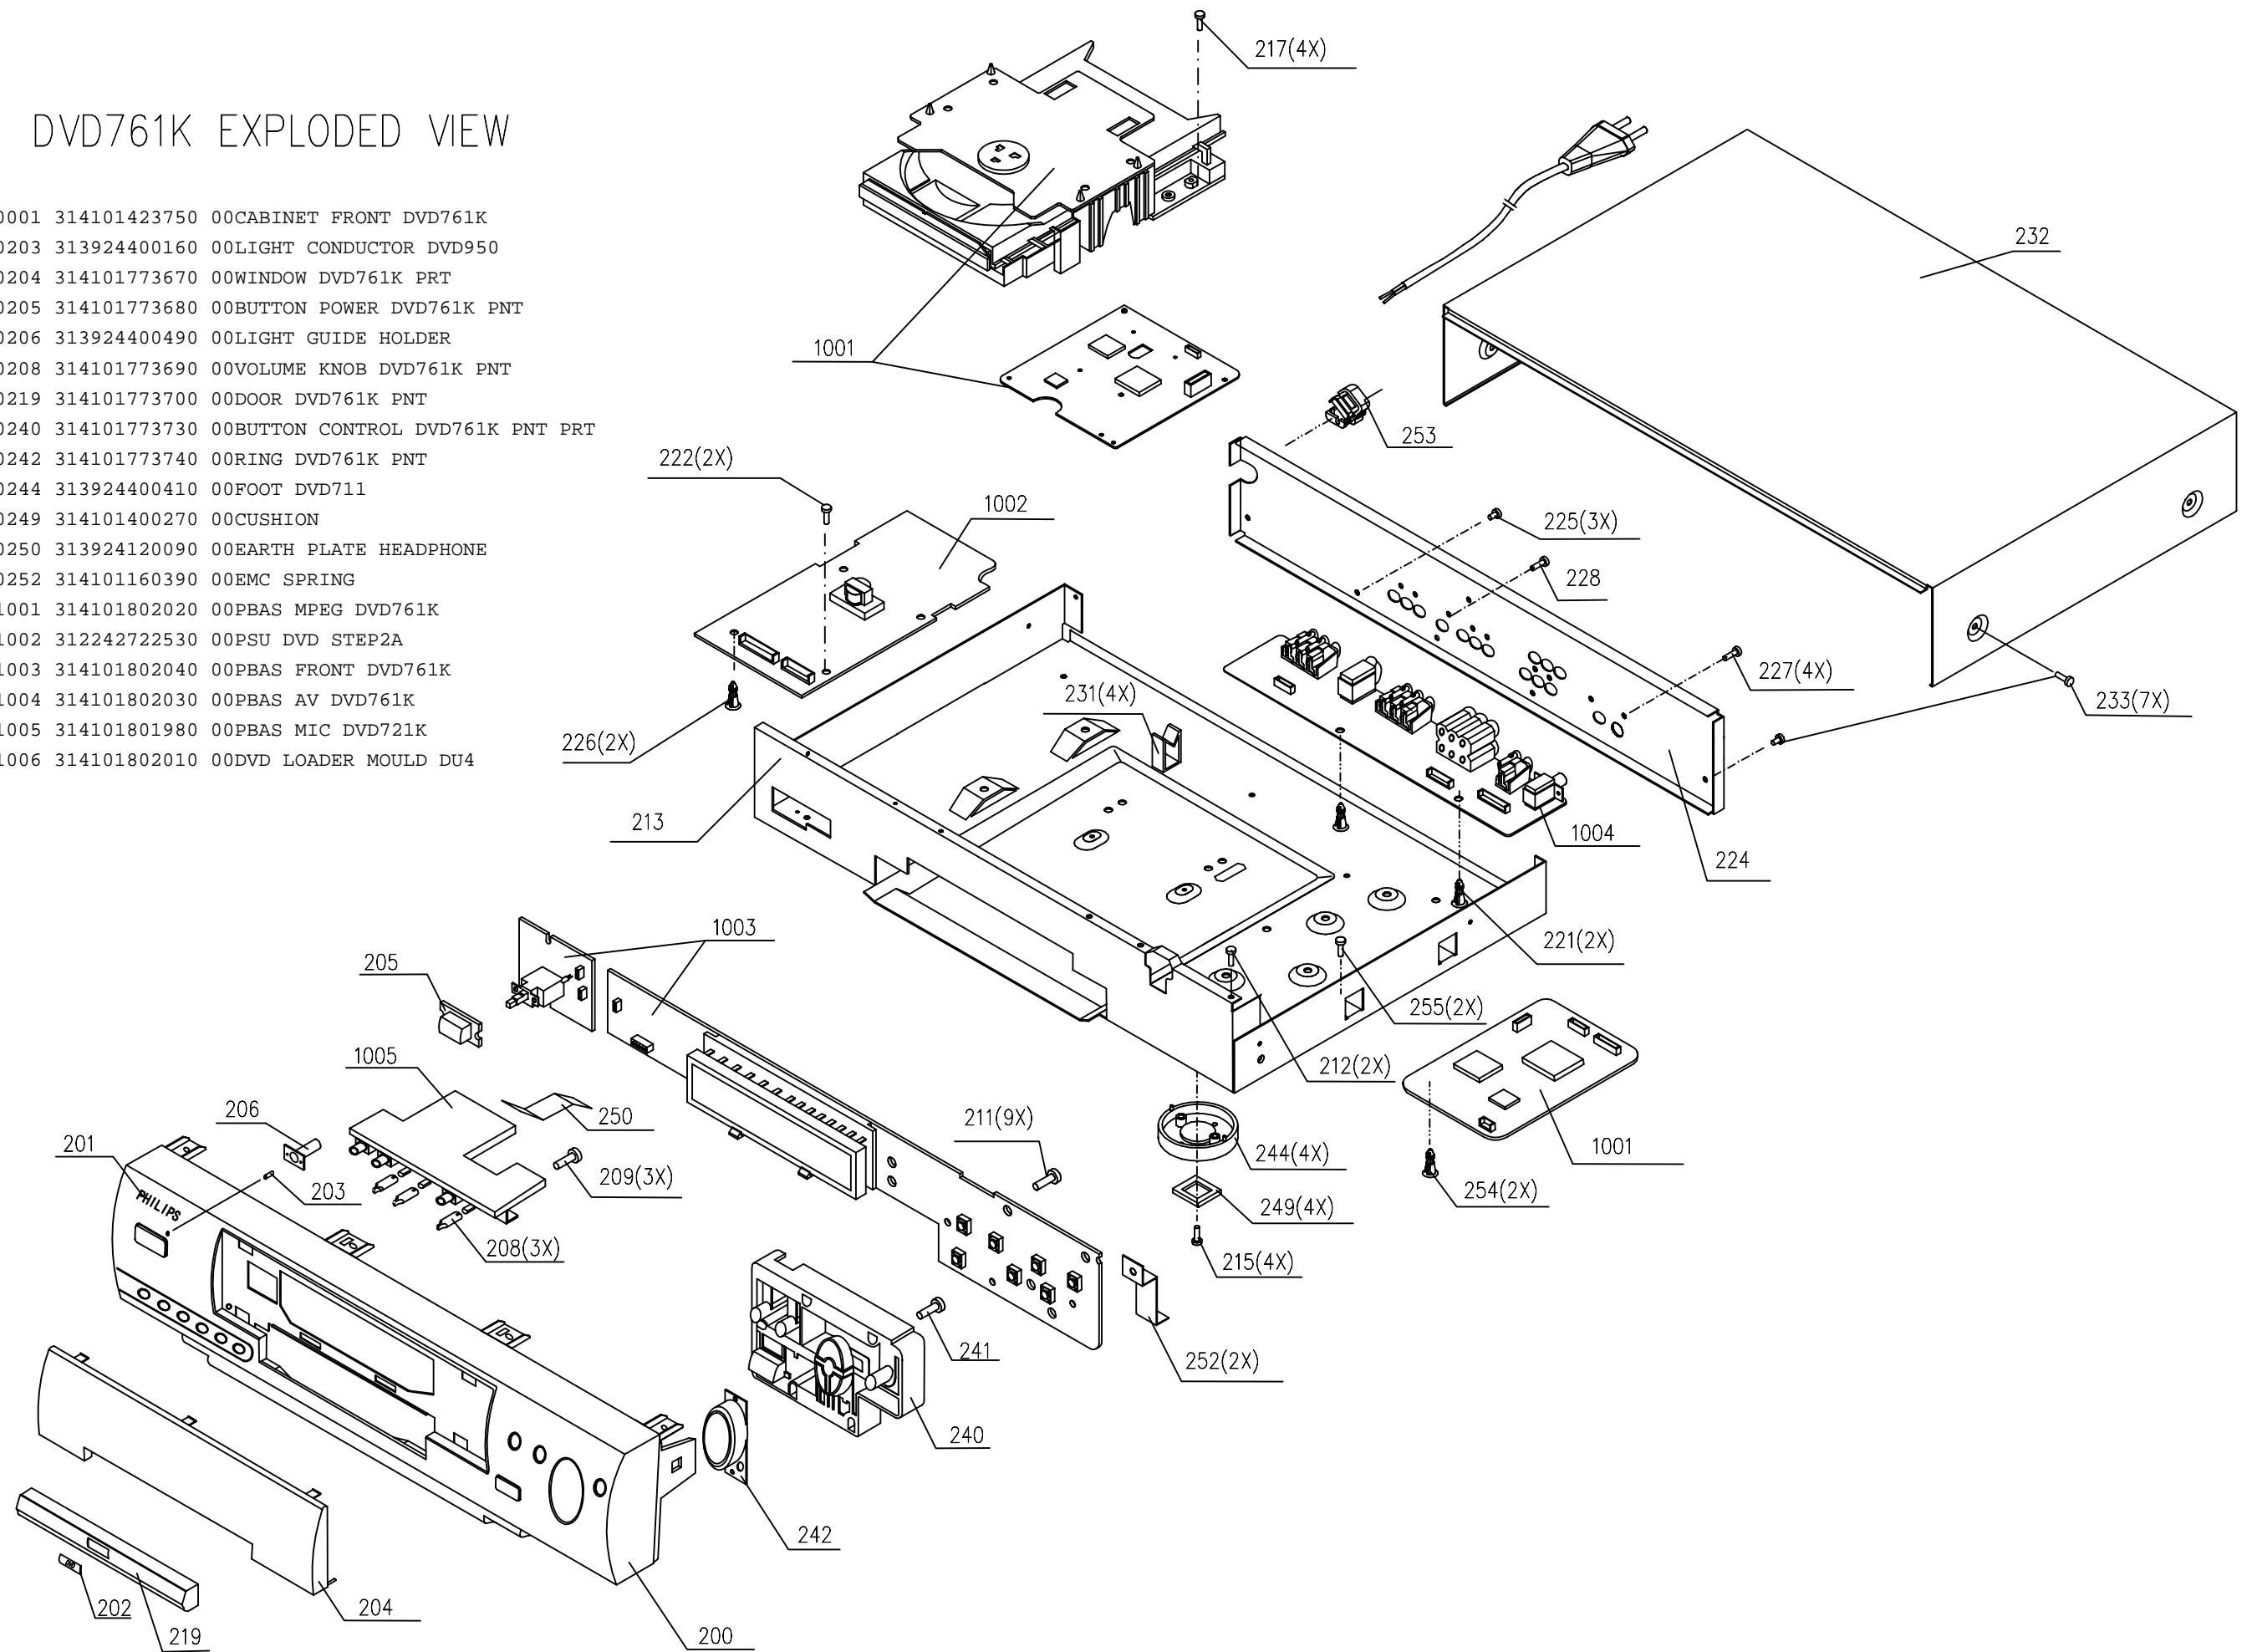

---

# SERVICE HINTS

---

Philips Consumer Electronics

Category: Beijing Philips Audio/video Corporation (BPAVC)

Author: Green.Xu

Date: 2001-02-08

Service Profile DVD761K

## 1. INTRODUCTION

### 1.1 GENERAL INTRODUCTION

\* DVD761K is designed and manufactured in BPAVC (Beijing Philips Audio/Video Corporation) China. Producing started at 2001/1/8.

\* The loader and servo board are integrated unit importing from Panasonic. So it can't performance component level repair. It should be treated as one unit.

\* MPEG board is designed by C-CUBE, both software and hardware, we did the part of customer interface. Although we provide the theory introduction, but we recommended you to change the whole board after soldering concerning pins.

### 1.2 INTRODUCING COUNTRIES

| Model:     | Country:                  |
|------------|---------------------------|
| DVD761/03R | Dubai (middle east Asia)  |
| DVD761/69R | Singapore                 |
| DVD761/75R | Australia and New Zealand |
| DVD761/93R | China                     |

### 1.3 QUANTITIES AND FIRST SHIPMENT DATES PER COUNTRY

| Model:     | First shipment: | Planned quantity: |
|------------|-----------------|-------------------|
| DVD761/03R | Jan 2001        | 3k                |
| DVD761/69R | Jan 2001        | 8k                |
| DVD761/75R | Jan 2001        | 4k                |

## 2. FEATURES

### 2.1 FEATURE SURVEY

\* Disc types capability: DVD, VCD, CD, MP3. CD-R and CD-RW are not available.

\* Video output: CBAV, S-video, Y/Cr/Cb.

\* Audio output: Stereo L/R, 6-channels audio output for home cinema system; digital audio output include optical and coaxial port.

### 2.2 EXPLANATION OF NEW COMMERCIAL FEATURES

What we called LLM (Language learning machine) and KLM (Karaoke Learning Machine) provide you several methods of recording and repeating your reading for the language study.

## 3. ARCHITECTURE AND CHARACTERISTICS

### 3.1 DESCRIPTION OF THE ARCHITECTURE

#### 3.1.1 Architecture of the DVD761

The DVD761 is combined with the following boards:

\* MPEG Board.

\* Loader unit with SERVO Board

\* FRONT Board

\* AV Board

\* MIC Board

\* POWER Board

MPEG board is the most complicated board designed by C-CUBE both in software and hardware. We did the PCB lay out and EMC (Electric Magnetism Compatible) work. The main decoder chip is ZIVA4.2 which developed by C-CUBE.

Loader unit is developed by Panasonic, they do not open the technology to us, all I can get for use is a schematic diagram, (other references is written in Japanese, I don't know Japanese.) So this unit can't be repaired, we can only replace it.

Front board, MIC board and AV board are all designed and manufactured in BPAVC, so we can provide fully technical support. Please refer to the <DVD761K service training>.

Power board uses the type STEP-2A which is used in DVD955, it has been studied for long time, please refer to DVD955 service menu for details. (12NC: 4840 785 10090)

### 3.2 EXPECTED FIELD CALL RATE

|               |      |
|---------------|------|
| Complete set: | FCR: |
| DVD           | 5%   |