

Service
Service
Service



Service Manual

TABLE OF CONTENTS

	Page
Location of PC Boards	1-2
Specifications	1-3
Measurement Setup	1-4
Service Aids, Safety Instruction, etc	1-5 to 1-7
Connections & Functional Overview.....	1-8 to 1-11
Troubleshooting	1-12 to 1-13
Repair Instructions.....	2
Disassembly Instructions & Service positions	3
Set Block Diagram.....	4-1
Set Wiring Diagram	4-2
Control Board	5
Main Board	6
Tuner Board.....	7
Power Board.....	8
Mechanical Exploded View & Parts List	9
Subwoofer Part.....	10



© Copyright 2006 Philips Consumer Electronics B.V. Eindhoven, The Netherlands
All rights reserved. No part of this publication may be reproduced, stored in a retrieval system or transmitted, in any form or by any means, electronic, mechanical, photocopying, or otherwise without the prior permission of Philips.

Published by SL 0623 Service Audio

Printed in The Netherlands

Subject to modification

© 3141 785 30890




Version 1.0



PHILIPS

LOCATION OF PC BOARDS

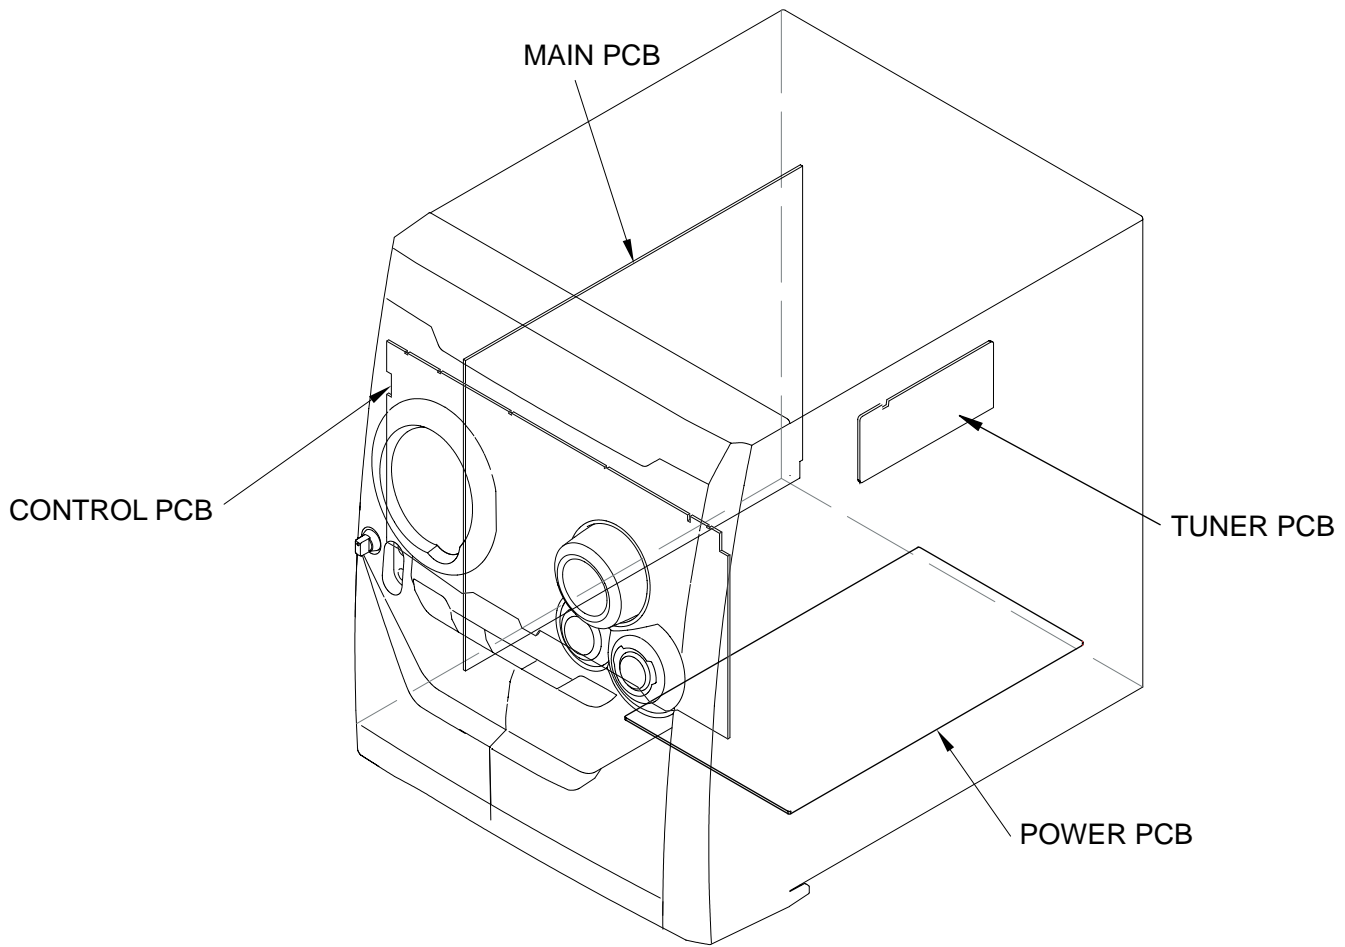

VERSION VARIATION:

Type /Versions	FWD798		
	/98	/55	/37
Features & Board in used			
Main PCB (No ECO Power<10W)	X	X	
Main PCB (ECO Power<10W)			X
Power (Dual Voltage)	X	X	
Power (120V only)			X
AC line Cord (detachable)	X	X	
AC line Cord (fixed)			X

Specifications

AMPLIFIER SECTION

Output power	9800 W PMPO
Stereo mode	750 W RMS
Frequency Response	180 Hz - 16 kHz / \pm 3 dB
Signal-to-Noise Ratio	> 60dB (A-weighted)
Input Sensitivity	
AUX/TV In	500 mV
Output Sensitivity	
Headphone	1000 mV \pm 2dB
Line Out	450 mV – 550 mV

TUNER SECTION

Tuning Range	
.....	FM 87.5 – 108 MHz (50 kHz steps)
.....	MW 531 – 1602 kHz (9 kHz steps)
.....	MW 530 – 1710 kHz (10 kHz steps)
Signal-to-Noise Ratio	FM \geq 55 dB
.....	MW \geq 35 dB

TAPE SECTION

Frequency Response	
Normal tape (type 1)	125Hz-8 Kz
Signal-to-Noise Ratio	
Normal tape (type 1)	\geq 45 dBA
Wow and flutter	\leq 0.35% DIN

DVD SECTION

Laser Type	Semiconductor
Disc Diameter	12cm / 8cm
Video Decoding	MPEG-2 / MPEG-1
Video DAC	10 Bits
Signal System	PAL / NTSC
Video Format	4:3 / 16:9
Video S/N	56 dB (minimum)
Composite Video Output	1.0 Vp-p, 75 Ω
S-Video Output	Y - 0.714 Vp-p, 75 Ω
.....	C - 0.286 Vp-p, 75 Ω
Audio DAC	24 Bits / 96 kHz
Frequency Response	4 Hz - 20 kHz (44.1kHz)
.....	4 Hz - 22 kHz (48kHz)
.....	4 Hz - 44 kHz (96kHz)

MAIN UNIT

Power Supply Rating	110 - 127 / 220 - 240 V
.....	50/60HZ Switchable (/55/98 ver.)
Power Supply Rating	120V
.....	60HZ Switchable (/37 ver.)
Power Consumption	
Active	85 W
Standby	<10 W
Dimensions (w x h x d)	265x 310 x 355 (mm)
Weight	5.52 kg
Packaging Dimensions (w x h x d)	
.....	611 x 885 x 524 (mm)
Gross weight	40Kg

SPEAKERS

Front speakers	
System	3-way, Bass reflex
Impedance	2 Ω
Speaker drivers	6.5" woofer,
.....	2" tweeter
Frequency response	50 Hz – 20 kHz
Dimensions (wx h x d)	
.....	235 x 457 x 246.5 (mm)
Weight	7 kg/each

Center or Surround speakers

System.....	2 multi directional driver
Impedance.....	4 Ω (center) /6 Ω (surround)
Speaker drivers.....	1x4"woofer
.....	1x2.5" tweeter
Frequency response	150HZ--18KHZ
Dimensions(w x h x d).....	
.....	140 x 310 x 310mm (surround speaker)
.....	245.5 x130 x 159.7mm (center speaker)
Weight	1.5 kg (center speaker)
.....	3.41 kg/ each (surround speaker)


SUBWOOFER

Impedance.....	4 W
Speaker driver.....	120W
Frequency response.....	30-200 HZ
Dimensions(w x h x d).....	
.....	200 x 320 x 380 (mm)
Weight	6.2kg

Specifications and external appearance are subject to change without notice.


MEASUREMENT SETUP

Tuner FM

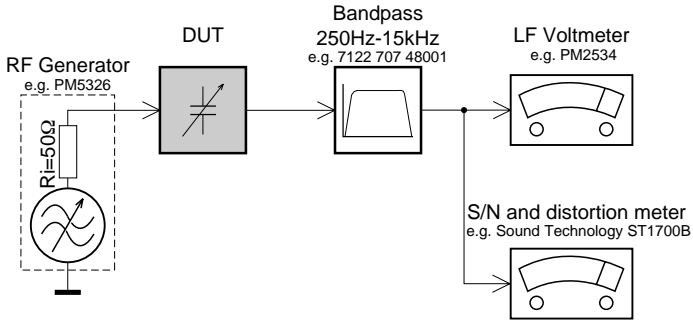

Use a bandpass filter to eliminate hum (50Hz, 100Hz) and disturbance from the pilotone (19kHz, 38kHz).


Tuner AM (MW,LW)

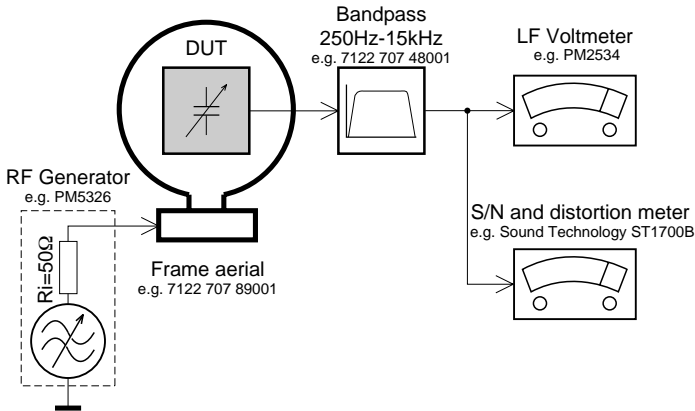

To avoid atmospheric interference all AM-measurements have to be carried out in a Faraday's cage. Use a bandpass filter (or at least a high pass filter with 250Hz) to eliminate hum (50Hz, 100Hz).


CD

Use Audio Signal Disc SBC429 4822 397 30184 (replaces test disc 3)

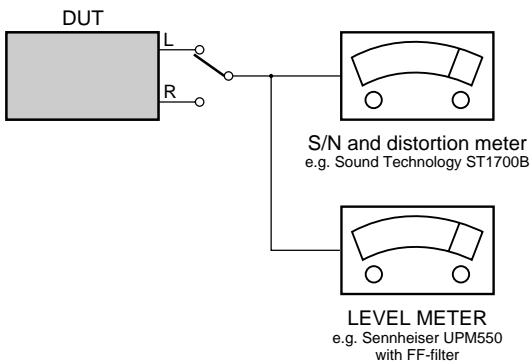

Recorder

Use Universal Test Cassette **CrO2** SBC419 4822 397 30069 or Universal Test Cassette **Fe** SBC420 4822 397 30071

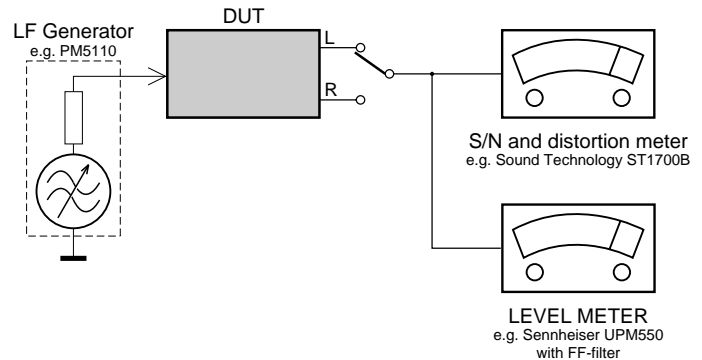

SERVICE AIDS

Service Tools:

Universal Torx driver holder	4822 395 91019
Torx bit T10 150mm	4822 395 50456
Torx driver set T6-T20	4822 395 50145
Torx driver T10 extended	4822 395 50423






Compact Disc:

SBC426/426A Test disc 5 + 5A	4822 397 30096
SBC442 Audio Burn-in test disc 1kHz	4822 397 30155
SBC429 Audio Signals disc	4822 397 30184
Dolby Pro-logic Test Disc	4822 395 10216

ESD Equipment:

Anti-static table mat - large 1200x650x1.25mm	4822 466 10953
anti-static table mat - small 600x650x1.25mm	4822 466 10958
Anti-static wristband	4822 395 10223
Connectorbox (1MΩ)	4822 395 11307
Extension cable (to connect wristband to conn.box)	4822 320 11305
Connecting cable (to connect table mat to conn.box)	4822 320 11306
Earth cable (to Connect product to mat or box) --	4822 320 11308
Complete kit ESD3 (combining all above products)	4822 320 10671
Wristband tester	4822 344 13999

HANDLING CHIP COMPONENTS

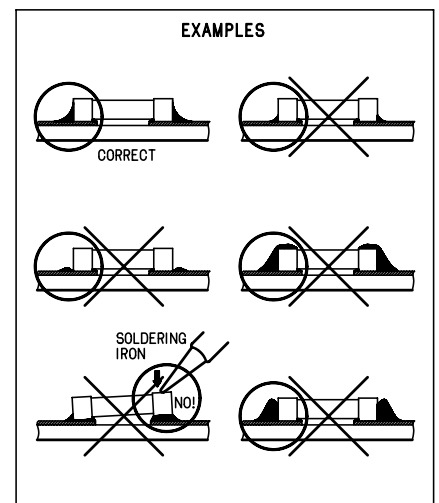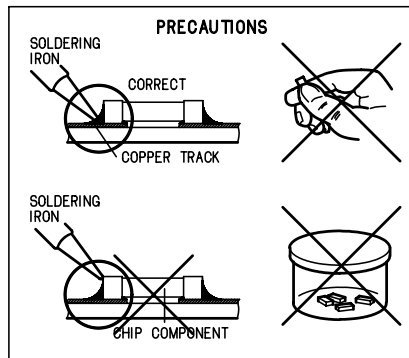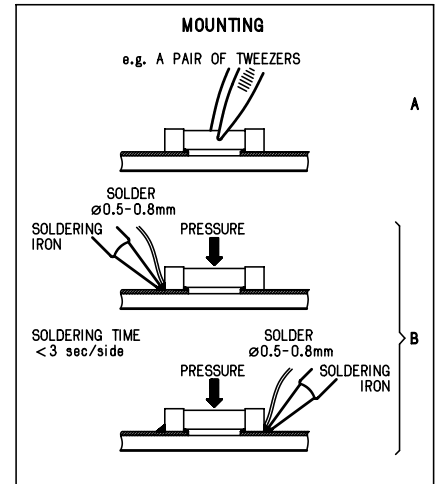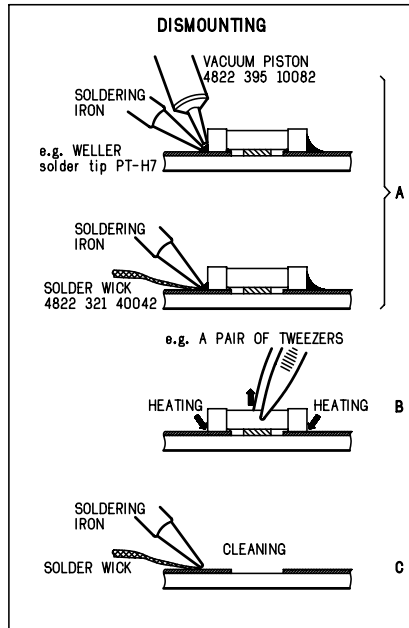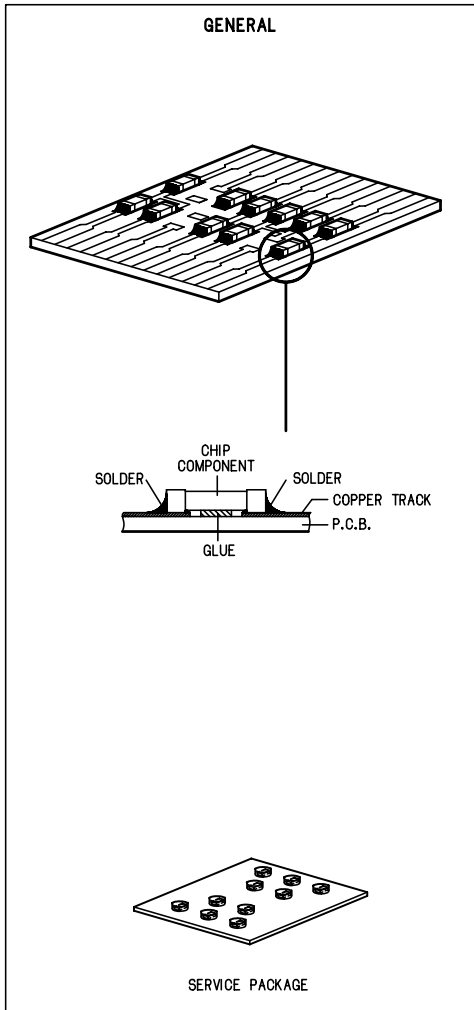

(GB) WARNING

All ICs and many other semi-conductors are susceptible to electrostatic discharges (ESD). Careless handling during repair can reduce life drastically.

When repairing, make sure that you are connected with the same potential as the mass of the set via a wrist wrap with resistance.

Keep components and tools also at this potential.

ESD**(NL) WAARSCHUWING**

Alle IC's en vele andere halfgeleiders zijn gevoelig voor electrostatische ontladingen (ESD).

Onzorgvuldig behandelen tijdens reparatie kan de levensduur drastisch doen verminderen.

Zorg ervoor dat u tijdens reparatie via een polsband met weerstand verbonden bent met hetzelfde potentiaal als de massa van het apparaat.

Houd componenten en hulpmiddelen ook op hetzelfde potentiaal.

(F) ATTENTION

Tous les IC et beaucoup d'autres semi-conducteurs sont sensibles aux décharges statiques (ESD).

Leur longévité pourrait être considérablement écourtée par le fait qu'aucune précaution n'est prise à leur manipulation.

Lors de réparations, s'assurer de bien être relié au même potentiel que la masse de l'appareil et enfilez le bracelet serti d'une résistance de sécurité.

Veiller à ce que les composants ainsi que les outils que l'on utilise soient également à ce potentiel.

(D) WARNUNG

Alle ICs und viele andere Halbleiter sind empfindlich gegenüber elektrostatischen Entladungen (ESD).

Unvorsorgfältige Behandlung im Reparaturfall kann die Lebensdauer drastisch reduzieren.

Veranlassen Sie, dass Sie im Reparaturfall über ein Pulsarmband mit Widerstand verbunden sind mit dem gleichen Potential wie die Masse des Gerätes.

Bauteile und Hilfsmittel auch auf dieses gleiche Potential halten.

(I) AVVERTIMENTO

Tutti IC e parecchi semi-conduttori sono sensibili alle scariche statiche (ESD).

La loro longevità potrebbe essere fortemente ridatta in caso di non osservazione della più grande cauzione alla loro manipolazione.

Durante le riparazioni occorre quindi essere collegato allo stesso potenziale che quello della massa dell'apparecchio tramite un braccialetto a resistenza.

Assicurarsi che i componenti e anche gli utensili con quali si lavora siano anche a questo potenziale.

(GB)

Safety regulations require that the set be restored to its original condition and that parts which are identical with those specified, be used.

"Pour votre sécurité, ces documents doivent être utilisés par des spécialistes agréés, seuls habilités à réparer votre appareil en panne".

(NL)

Veiligheidsbepalingen vereisen, dat het apparaat bij reparatie in zijn oorspronkelijke toestand wordt teruggebracht en dat onderdelen, identiek aan de gespecificeerde, worden toegepast.

(F)

Les normes de sécurité exigent que l'appareil soit remis à l'état d'origine et que soient utilisées les pièces de rechange identiques à celles spécifiées.

(D)

Bei jeder Reparatur sind die geltenden Sicherheitsvorschriften zu beachten. Der Originalzustand des Geräts darf nicht verändert werden; für Reparaturen sind Original-Ersatzteile zu verwenden.

(I)

Le norme di sicurezza esigono che l'apparecchio venga rimesso nelle condizioni originali e che siano utilizzati i pezzi di ricambio identici a quelli specificati.

"After servicing and before returning set to customer perform a leakage current measurement test from all exposed metal parts to earth ground to assure no shock hazard exist. The leakage current must not exceed 0.5mA."

**(GB) Warning !**

Invisible laser radiation when open.
Avoid direct exposure to beam.

(S) Varning !

Osynlig laserstrålning när apparaten är öppnad och spärren är urkopplad. Betrakta ej strålen.

(SF) Varoitus !

Avatussa laitteessa ja suojaletyksen ohitettaessa olet alttiina näkymättömälle laserisäteilylle. Älä katso säteeseen!

(DK) Advarse !

Usynlig laserstråling ved åbning når sikkerhedsafbrydere er ude af funktion. Undgå udsættelse for stråling.

INFORMATION ABOUT LEAD-FREE SOLDERING

Philips CE is producing lead-free sets from 1.1.2005 onwards.

IDENTIFICATION:

Regardless of special logo (not always indicated) one must treat all sets from 1 Jan 2005 onwards, according next rules:



Example S/N:



Bottom line of typeplate gives a 14-digit S/N. Digit 5&6 is the year, digit 7&8 is the week number, so in this case 2005 wk12

So from 0501 onwards = from 1 Jan 2005 onwards

Important note: In fact also products of year 2004 must be treated in this way as long as you avoid mixing solder-alloys (leaded/ lead-free). So best to always use SAC305 and the higher temperatures belong to this.

Due to lead-free technology some rules have to be respected by the workshop during a repair:

- Use only lead-free solder alloy Philips SAC305 with order code 0622 149 00106. If lead-free solder-paste is required, please contact the manufacturer of your solder-equipment. In general use of solder-paste within workshops should be avoided because paste is not easy to store and to handle.
- Use only adequate solder tools applicable for lead-free solder alloy. The solder tool must be able
 - To reach at least a solder-temperature of 400°C,
 - To stabilize the adjusted temperature at the solder-tip
 - To exchange solder-tips for different applications.
- Adjust your solder tool so that a temperature around 360°C – 380°C is reached and stabilized at the solder joint. Heating-time of the solder-joint should not exceed ~ 4 sec. Avoid temperatures above 400°C otherwise wear-out of tips will rise drastically and flux-fluid will be destroyed. To avoid wear-out of tips switch off un-used equipment, or reduce heat.
- Mix of lead-free solder alloy / parts with leaded solder alloy / parts is possible but PHILIPS recommends strongly to avoid mixed solder alloy types (leaded and lead-free).
If one cannot avoid or does not know whether product is lead-free, clean carefully the solder-joint from old solder alloy and re-solder with new solder alloy (SAC305).
- Use only original spare-parts listed in the Service-Manuals. Not listed standard-material (commodities) has to be purchased at external companies.
- Special information for BGA-ICs:
 - always use the 12nc-recognizable soldering temperature profile of the specific BGA (for de-soldering always use the lead-free temperature profile, in case of doubt)
 - lead free BGA-ICs will be delivered in so-called 'dry-packaging' (sealed pack including a silica gel pack) to protect the IC against moisture. After opening, dependent of MSL-level seen on indicator-label in the bag, the BGA-IC possibly still has to be baked dry. (MSL=Moisture Sensitivity Level). This will be communicated via AYS-website. Do not re-use BGAs at all.
- For sets produced before 1.1.2005 (except products of 2004), containing leaded solder-alloy and components, all needed spare-parts will be available till the end of the service-period. For repair of such sets nothing changes.
- On our website www.atyourservice.ce.Philips.com you find more information to:
 - * BGA-de-/soldering (+ baking instructions)
 - * Heating-profiles of BGAs and other ICs used in Philips-sets

You will find this and more technical information within the "magazine", chapter "workshop news".


For additional questions please contact your local repair-helpdesk.

SERVICE INSTRUCTION

Safety regulations require that after a repair, the set must be returned in its original condition. Pay in particular attention to the following points:

- Route the wire trees correctly and fix them with the mounted cable clamps.
- Check the insulation of the AC Power lead for external damage.
- Check the strain relief of the AC Power cord for proper function.
- Check the electrical DC resistance between the AC Power Plug and the secondary side (only for sets which have a AC Power isolated power supply):
 1. Unplug the AC Power cord and connect a wire between the two pins of the AC Power plug.
 2. Set the AC Power switch to the "on" position (keep the AC Power cord unplugged!).
 3. Measure the resistance value between the pins of the AC Power plug and the metal shielding of the tuner or the aerial connection on the set. The reading should be larger than 4.5 Mohm (For U.S. it should be between 4.2 Mohm and 12 Mohm).
 4. Switch "off" the set, and remove the wire between the two pins of the AC Power plug.
- Check the cabinet for defects, to avoid touching of any inner parts by the customer.

Step 1: Placing speakers and subwoofer

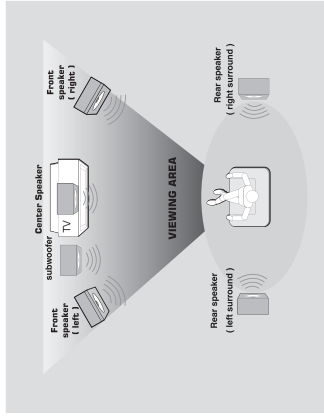

For best possible surround sound, all speakers (except subwoofer) should be placed at the same distance from the listening position.

- Place the front left and right speakers at equal distances from the TV set and at an angle of approximately 45 degrees from the listening position.

- Place the center speaker above the TV set or the system so the center channel's sound is localized.
- Place the surround speakers at normal listening ear level facing each other.
- Place the subwoofer on the floor near the TV set.

Notes:


- To avoid magnetic interference, do not position the front speakers too close to your TV set.
- Allow adequate ventilation around the DVD Mini Hi-Fi System.

IMPORTANT!

The type plate is located on the rear of the system.

To avoid overheating of the system, a safety circuit has been built in. Therefore, your system may switch to Standby mode automatically under extreme conditions. If this happens, let the system cool down before reusing it.

Step 2: Connecting speakers and subwoofer

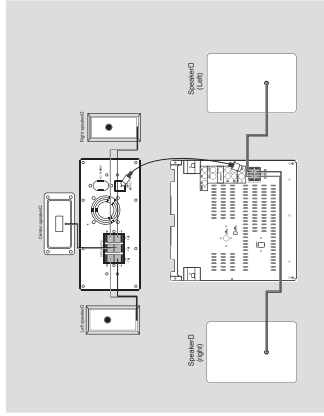

Connect the speaker wires to the SPEAKERS (FRONT) terminals, right speaker to "R", and left speaker to "L", coloured (marked) wire to "+" and black (unmarked) wire to "-". Fully insert the stripped portion of the speaker wire into the terminal as shown.


- Connect the Surround Speakers and Center Speaker system using the supplied speaker cables to the speaker jacks on the SUBWOOFER by matching the colours of the jacks and speaker plugs.
- Connect the subwoofer using the supplied speaker cable to the DIN OUT jack on the DVD Mini Hi-Fi System.
- Connect the AC MAINS.

speakers	(-)	(+)
Front Left(L)	Black	White
Front Right(R)	Black	Red
Center	Black	Green
Surround(Rear) Left(L)	Black	Blue
Surround(Rear) Right(R)	Black	Grey

Notes:

- For optimal sound performance, use the supplied speakers.
- Do not connect more than one speaker to any one pair of +/- speaker terminals.
- Do not connect speakers with an impedance lower than the speakers supplied. Please refer to the SPECIFICATIONS section of this manual.

Step 3: Connecting TV set

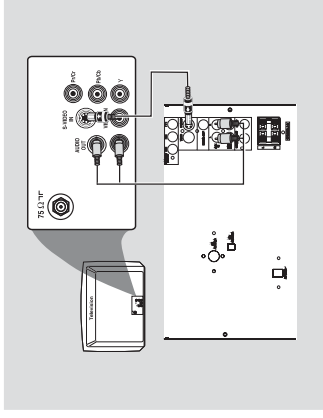

IMPORTANT!

- You only need to make one video connection from the following options, according to the capabilities of your TV system.
 - S-Video or Component Video connection provides higher picture quality. These options must be available on your TV set.
 - Connect the system directly to the TV set.

Using Video In jack (CVBS)


- Use the composite video cable (yellow) to connect the system's VIDEO jack to the video input jack (or labeled as AV In, Video In, Composite or Baseband) on the TV set.
- To listen to TV channels through this system, use the audio cables (white/red) to connect AUX IN (L/R) jacks to the corresponding AUDIO OUT jacks on the TV set.
- Deactivate Progressive Scan through SYSTEM MENU. Refer to "Using the Setup Menu- Using Progressive Scan to improve image quality".

Using component Video In jack (Pr Pb Y)

- Use the component video cables (red/blue/green) to connect the system's Pr Pb Y jacks to the corresponding Component video input jacks (or labeled as Pr/Cr Pb/Cb Y or YUV) on the TV set.
- To listen to TV channels through this system, use the audio cables (white/red) to connect AUX IN jacks to the corresponding AUDIO OUT jacks on the TV set.
- If you are using a Progressive Scan TV set (TV with Progressive Scan or ProScan capability), activate the PROGRESSIVE SCAN function through SYSTEM MENU.


CONNECTIONS

Connections

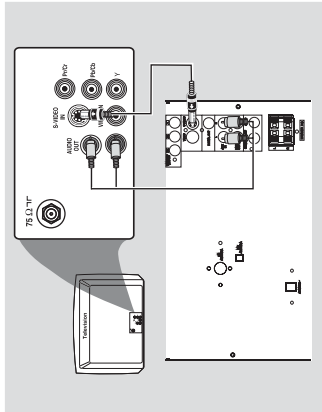

Using S-Video In jack

- Use the S-Video cable (not supplied) to connect the system's **S-VIDEO** jack to the S-Video input jack (or labeled as Y/C or S-VHS) on the TV set.
- To listen to TV channels through this system, use the audio cables (white/red) to connect **AUX IN** jacks to the corresponding **AUDIO OUT** jacks on the TV set.
- Deactivate Progressive Scan through **SYSTEM MENU**. Refer to "Using the Setup Menu- Using Progressive Scan to improve image quality".

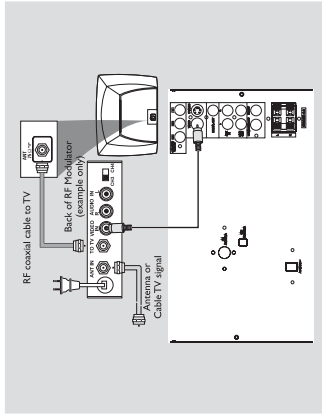

IMPORTANT!


- **If your TV set only has a single Antenna In jack (or labeled as 75 ohm or RF In), you will need a RF modulator in order to view the DVD playback via TV. See your electronics retailer or contact Philips for details on RF modulator availability and operations.**

Using an accessory RF modulator


- Use the composite cable (yellow) to connect the system's **VIDEO** jack to the video input jack on the RF modulator.
- Use the RF coaxial cable (not supplied) to connect the RF modulator to your TV's RF jack.
- Deactivate Progressive Scan through **SYSTEM MENU**. Refer to "Using the Setup Menu- Using Progressive Scan to improve image quality".

Connections

Step 4: Connecting FM/AM antennas

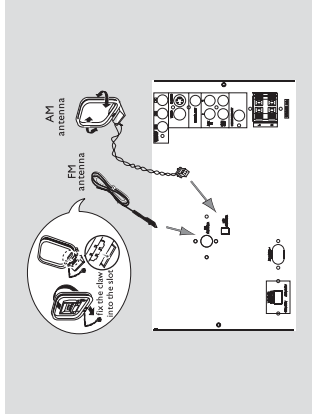


- Connect the supplied AM loop antenna to the **MW (AM)** jack. Place the AM loop antenna on a shelf or attach it to a stand or wall.
 - Connect the supplied FM antenna to the **FM** jack. Extend the FM antenna and fix its end to the wall.
- For better FM stereo reception, connect an outdoor FM antenna to the **FM ANTENNA** terminal.

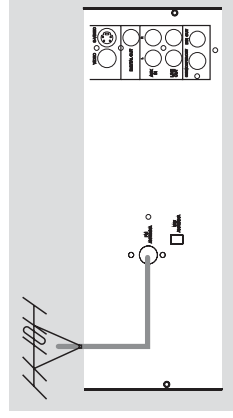

Notes:

- *Adjust the position of the antennas for optimal reception.*
- *Position the antennas as far as possible from your TV set, VCR or other radiation sources to prevent unwanted interference.*

Step 5: Connecting the power cord

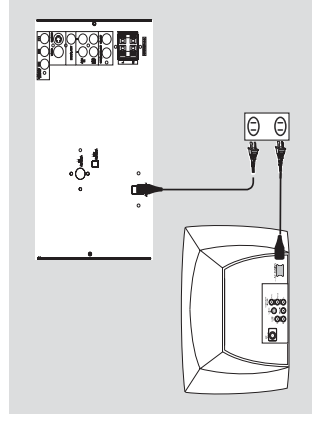


After everything is connected properly, plug in the AC power cord to the power outlet.

Never make or change any connection with the power switched on.

On the DVD Mini Hi-Fi System


"**AUTO INSTALL-PRESS PLAY**" may appear on the display panel. Press **▶II** on the front panel to search and store all available radio stations or press **■** to exit (See "Tuner Operations- Presetting radio stations").

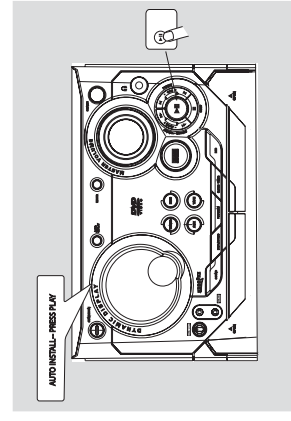

CONNECTIONS

Connections

Step 6: Connecting a VCR or cable/satellite box

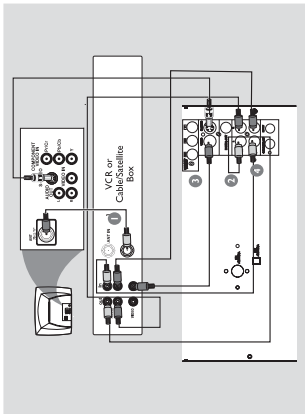

Viewing and listening to playback

- 1 Connect the VCR or Cable/Satellite Box to the TV system as shown.
- 2 Connect the system's **AUX IN** jacks to the **AUDIO OUT** jacks on the VCR or Cable/Satellite box.
Before starting operation, press **AUX** on the remote control to select "AUX" in order to activate the input source.


Using the VCR for recording DVDs

- Some DVDs are copy-protected. You cannot record or dub protected discs using a VCR.
- 3 Connect the system's **VIDEO** jack to the **VIDEO IN** jack on the VCR.
 - 4 Connect the system's **LINE OUT (R/L)** jacks to the **AUDIO IN** jacks on the VCR. This will allow you to make analog stereo (two channel, right and left) recording.

To view DVD playback while recording


You must connect the system to your TV system using the **S-VIDEO** (as shown above) or the Component (Pr Pb Y) video connection.

Step 7: Connecting digital audio equipment

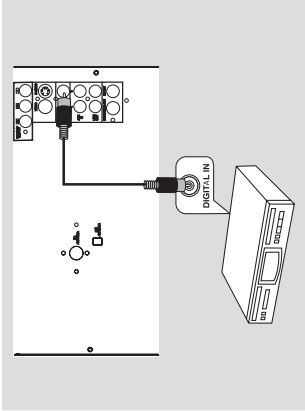

Recording (digital)

Connect the system's **DIGITAL OUT** jack to the **DIGITAL IN** jack on a digital recording device (DTS-Digital Theater System compatible, with a Dolby Digital decoder, for example).

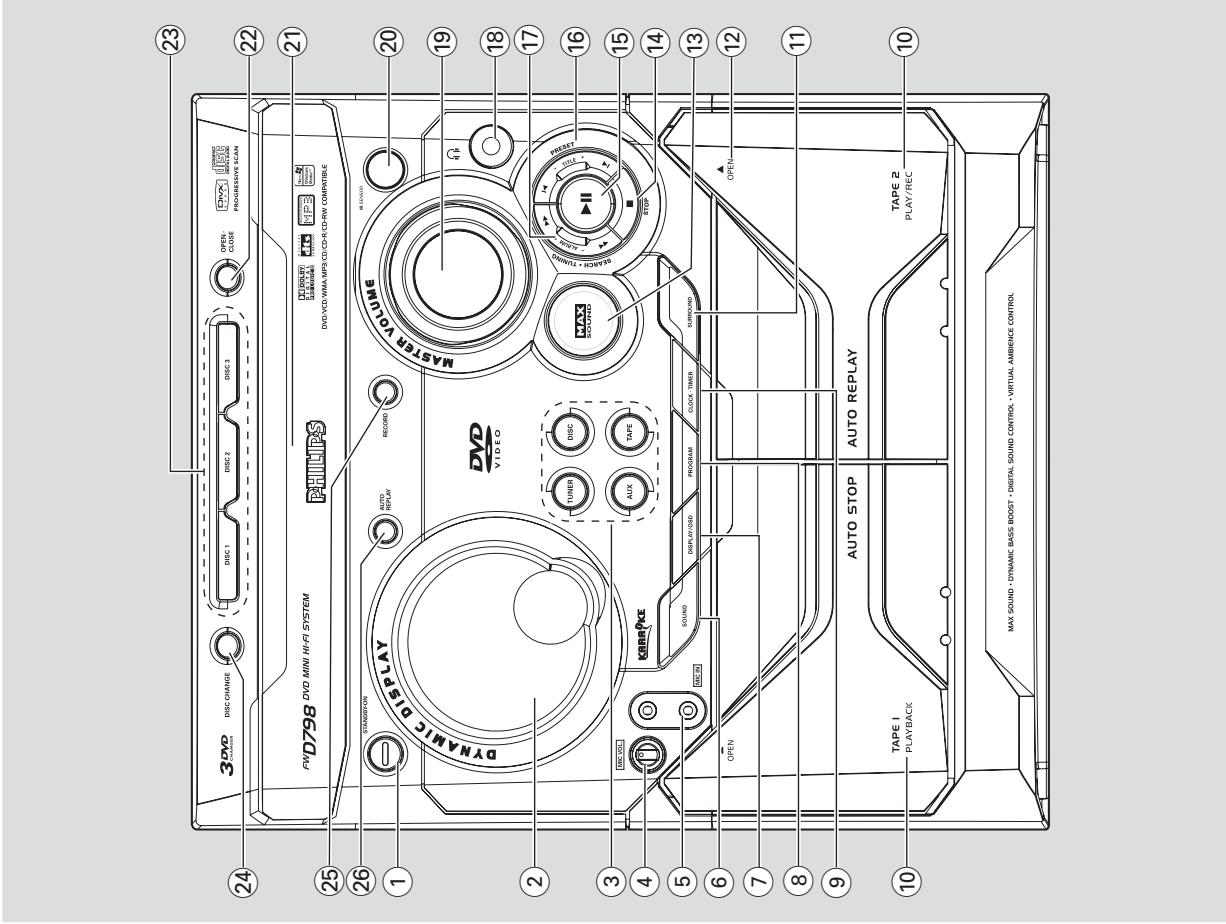


FUNCTIONAL OVERVIEW

Functional Overview

Controls on the system

- ① **STANDBY ON**
 - to switch the system on, to Standby mode.
- ② **DISPLAY SCREEN**
 - to view the current status of the system.
- ③ **SOURCE**
 - to select the following:
- ④ **DISC (DISC 1-2-3)**
 - to select disc tray 1, 2, or 3
- ⑤ **TUNER (BAND)**
 - to select waveband: FM or MW.
- ⑥ **TAPE (TAPE 1-2)**
 - to select tape deck 1 or 2.
- ⑦ **AUX**
 - to select a connected external source: TV/CDR, AUX (auxiliary).
- ⑧ **MIC VOL.**
 - to adjust the mixing level for karaoke or microphone recording.
- ⑨ **MIC IN**
 - to connect microphone jack.
- ⑩ **SOUND**
 - to select various sound effect.
- ⑪ **DISPLAY/OSD**
 - to display disc information during disc playback.
- ⑫ **PROGRAM**
 - in disc mode, to program favorite tracks.
 - in tuner mode, to program favorite stations.
- ⑬ **CLOCK/TIMER**
 - to view and set clock/ timer.
- ⑭ **TAPE DECK 1/2**
 - to select the desired DBB level (DBB 1, DBB 2, DBB3 or DBB OFF).
- ⑮ **▲ OPEN**
 - to open the tape deck door.
- ⑯ **MAX SOUND**
 - To activate or deactivate MAX sound.
- ⑰ **STOP ■**
 - for DISC to stop playback or to clear a programme.
 - for DEMO (in Standby mode) to activate/deactivate demonstration.
 - for PLUG&PLAY ... (on the system only) to exit plug&play mode.
- ⑱ **▶|| (PLAY/PAUSE)**
 - for DISC to start or interrupt playback.
 - for TAPE to start playback.
 - for PLUG&PLAY ... (on the system only) to initiate plug & play mode.
- ⑲ **PREV / PRESET / NEXT ◀▶**
 - to select previous/next title, chapter or track during playback.
 - for TUNER to select a preset radio station.
 - for CLOCK/TIMER .. to set the hour.
- ⑳ **SEARCH•TUNING ◀◀ / ▶▶ (ALBUM - / +)**
 - for DISC to search backward/forward, to select previous/next album in MP3/WMA stop mode (with MENU ON).
 - for TAPE to rewind or fast forward.
 - for TUNER to tune to a lower or higher radio frequency.
 - for CLOCK/TIMER .. to set the minute.
- ㉑ **IR SENSOR**
 - point the remote control towards this sensor.
- ㉒ **DISC TRAYS**
 - to connect headphones.
- ㉓ **MASTER VOLUME**
 - to increase or decrease the volume.
- ㉔ **OPEN•CLOSE**
 - to open or close the disc tray.
- ㉕ **DISC1/ DISC2/ DISC3**
 - to select a disc tray for playback.
- ㉖ **DISC CHANGE**
 - to change disc(s).
- ㉗ **RECORD**
 - to start recording on tape deck 2.
- ㉘ **AUTO REPLAY**
 - In tape mode, to select continuous playback in either REPLAY or PLAY mode only.

Remote control

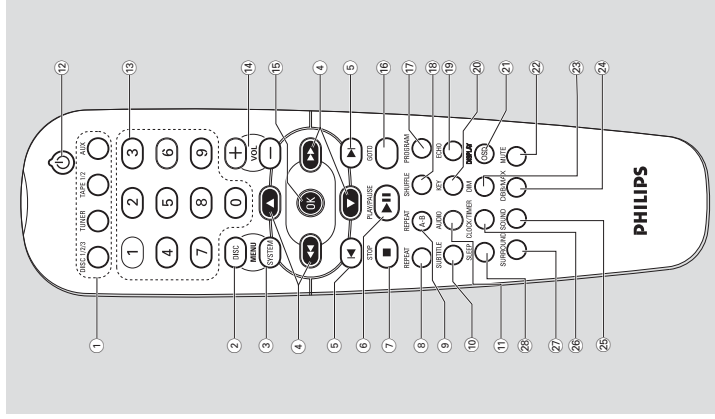

Notes:

- First, select the source you wish to control by pressing one of the source select keys on the remote control (DISC or TUNER, for example).
 - Then select the desired function (▶▶, ◀◀ or ▶| for example).
- ① **SOURCE**
 - to select the relevant active mode: DISC1/2/3, TUNER, TAPE1/2 or AUX.
 - ② **DISC MENU (disc mode only)**
 - to enter or exit the disc contents menu.
 - ③ **SYSTEM MENU (disc mode only)**
 - to enter or exit the system menu bar.


- ④ **◀◀ / ▶▶ / ▲ / ▼**
 - to select movement direction in disc contents menu/system menu bar.
 - in tuner mode, to tune to lower or higher radio frequency (◀◀ / ▶▶ ●●
 - in Disc mode, press to fast reverse/forward the disc.
- ⑤ **◀◀ / ▶▶**
 - in Disc mode, press to skip to the previous/next chapter/track
 - in Tuner mode, to select a preset radio station number
- ⑥ **PLAY/PAUSE ▶||**
 - to start or interrupt disc playback.
 - to resume playback from last stop point.
- ⑦ **STOP ■**
 - to stop playing the disc.
- ⑧ **REPEAT**
 - to select variations of continuous playback.
- ⑨ **REPEAT A-B**
 - to repeat a specific section on a disc.
- ⑩ **SUBTITLE**
 - to select desired subtitle.
- ⑪ **AUDIO**
 - to select the audio channel.
- ⑫ **↻**
 - to switch to standby mode.
- ⑬ **Numeric Keypad (0-9)**
 - to enter a track/title number of the disc.
 - to enter a number of preset radio stations.
- ⑭ **VOL +/-**
 - adjust the volume level.
 - adjust key control/ ECHO level in karaoke mode.
- ⑮ **OK**
 - to exit or confirm the selection.
- ⑯ **GOTO**
 - to go direct to desired title, chapter or time.
- ⑰ **PROGRAM**
 - in Disc mode, to program favorite tracks.
 - in Tuner mode, to program favorite stations.
- ⑱ **SHUFFLE**
 - to playback in random mode.

- ⑰ **ECHO**
– to adjust the echo level in karaoke mode.
- ⑱ **KEY**
– to change the tone level to suit your vocal range.
- ⑲ **DISPLAY (OSD)**
– to view the time, title or chapter information.
- ⑳ **MUTE**
– to interrupt or resume sound reproduction.
- ㉑ **DIM**
– to select different brightness for VFD.
- ㉒ **DBB/MAX**
– to select the desired DBB level (DBB 1, DBB 2, DBB3) and activate/deactivate MAX sound.
- ㉓ **SOUND**
– to select various sound effect.
- ㉔ **CLOCK/TIMER**
– to view and set clock/ timer.
- ㉕ **SURROUND**
– to select various surround sound effect.
- ㉖ **SLEEP**
– to set the sleep (auto-off) timer function.

Step 2: Setting the clock

The clock can be set in either 12-hour or 24-hour mode ("PM 00:00" or "00:00" for example).

- 1 The clock can be set in any source mode.
→ If you have not set the clock, ":-:-" will be shown on the display.

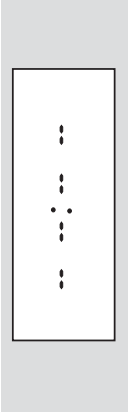

- 2 Press and hold **CLOCK/TIMER** until "SELECT CLOCK OR TIMERS" displayed.

→ Press **◀** or **▶** to change the display to "CLOCK".

→ Press **CLOCK/TIMER** again to confirm.

- 3 Press **◀** or **▶** on the system to set the hours.

- 4 Press **◀◀** or **▶▶** on the system to set the minutes.

- 5 Press **CLOCK/TIMER** to confirm your setting. The system will store the setting automatically and go back to it's previous status.
→ The time setting becomes effective.

Note:

– In **AUX mode, setting clock using remote control is not possible.**


To exit the setting without storing (in standby mode)

- Press **■** on the system to exit.
- "CANCEL" will appear on the display.
- Press **STANDBY ON** to exit setting mode and go into **POWER ON** mode.
- You can also press **DISC, DISC1~3, DISC CHANGE, OPEN/CLOSE** to exit setting mode and go into disc mode.
- The system will also exit setting mode and go to TUNER, TAPE or AUX mode when you press the corresponding source button.
- **Viewing the clock in any source mode**
When you have set the clock, press **●●●●●●●●** **TIMER** to view clock. Press **DISPLAY** on the system to toggle between 12-hour and 24-hour modes.
→ The time will be displayed for 5 seconds and then go back to it's previous status.

IMPORTANT!

– **Make sure to complete the preparation procedures before operating the system.**


Step 1: Inserting batteries into the remote control

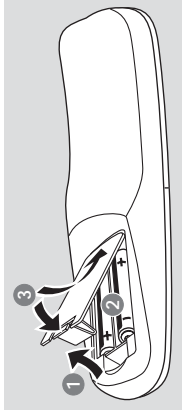

- 1 Open the battery compartment.
- 2 Place two batteries (Type R06 or AA) in the compartment with the correct polarity as indicated by "+" and "-" symbols.
- 3 Close the cover.

Using the remote control to operate the system

- 1 Point the remote control directly at the remote sensor (IR) on the front panel.
- 2 Select the source you wish to control by pressing one of the source select buttons on the remote control (for example TAPE1/2, TUNER).
- 3 Then select the desired function (for example **▶||◀** or **▶▶**).

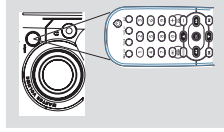

CAUTION!

- **Remove batteries if they are exhausted or will not be used for a long time.**
- **Do not use old and new or different types of batteries in combination.**
- **Batteries contain chemical substances, so they should be disposed of properly.**

Preparations

Notes:

- The clock will be cancelled when the power cord is disconnected or if a power failure occurs.
- During clock setting, if no button is pressed within 10 seconds, the system will exit the setting mode and go back to its previous status.

Step 3: Setting the TV set


IMPORTANT!

- Make sure you have completed all the necessary connections. (See Connections)
- Connecting TV set)

- 1 Press **DISC (DISC 1-2-3)** on the front panel (or press **DISC 1/2/3** on the remote control).
- 2 Turn on the TV set and set to the correct Video-In channel. You should see the blue Philips DVD background screen on the TV set.
 - You may go to channel 1 on your TV set, then press the channel down button repeatedly until you see the Video In channel.
 - Or, you can use the TV remote control to select different video modes.
 - Or, set TV to channel 3 or 4 if you are using an RF modulator.

Selecting the color system that matches your TV set

This DVD Mini Hi-Fi System is compatible with both NTSC and PAL. For the playback of a DVD disc on this DVD Mini Hi-Fi System, the color systems of the DVD, TV set and DVD Mini Hi-Fi System should match.

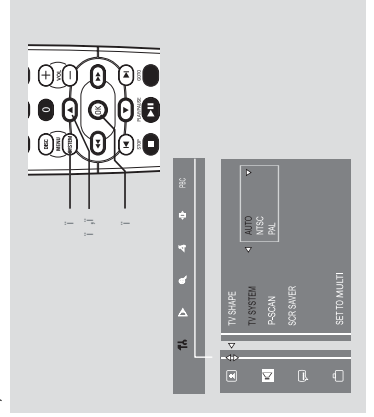

- 1 In disc mode, stop playback and press **SYSTEM MENU**.

- 2 Select **TV** icon and press **▼**.

- 3 Press **◀** / **▶** / **▲** / **▼** keys on the remote control to toggle through the functions and select your preferred option.

- Move to **TV** and press **▶**.
- Move to "TV System" and press **▶**.

AUTO

- Select this if the connected TV set is compatible with both NTSC and PAL (multi system). The output format will be consistent with the video signal of the disc.

NTSC

- Select this if the connected TV set is NTSC system. It will change the video signal of a PAL video disc and output to NTSC system.

PAL

- Select this if the connected TV set is PAL system. It will change the video signal of an NTSC disc and output to PAL format.

- 4 Select an item and press **OK**.


To remove the menu

Press **SYSTEM MENU**.

Preparations

Step 4: Setting language preference

You can select your preferred language settings so that this DVD Mini Hi-Fi System will automatically switch to the language for you whenever you load a disc. If the language selected is not available on the disc, the language set by default will be used instead. But the menu language of the DVD Mini Hi-Fi System cannot be changed once selected.

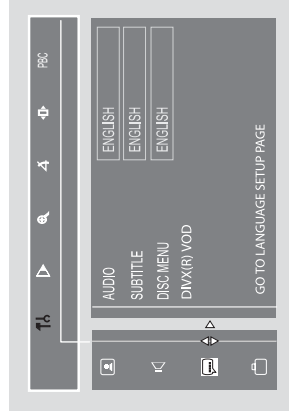

- 1 In disc mode, stop playback and press **SYSTEM MENU**.

- 2 Select **TV** icon and press **▼**.

- 3 Press **◀** / **▶** / **▲** / **▼** keys on the remote control to select your preferred option.

- Move to **TV** and press **▶**.

- Move to one of the following and press **▶**.

- Audio (disc's soundtrack)
- Subtitle (disc's subtitles)
- Disc Menu (on screen menu)

- 4 Press **▲** / **▼** to select a language and press **OK**.

- 5 Repeat **steps 3~4** for other settings.

To remove the menu

Press **SYSTEM MENU**.

System, Region code, Tuner, etc. setting procedure

1) System Reset

- Press "SYSTEM" button on R/C. TV show "SETUP"
- Select the menu using the "▼" and "▶" button on R/C
- Go feature setup page to do system reset

2) Region Code Change

After replacement / repair of the MPEG board, the customer setting and the region code may lost. Changing the Region code will put the player back in the state which it has left the factory.

Region Code

1	USA
2	EU
3	AP
4	Australia, NZ, Latam
5	RUSSIA, INDIA
6	CHINA

TV System

1	NTSC
2	PAL
3	AUTO

Menu/ Audio Subtitle (AS) Language

1	English
2	English
3	English
4	English

AFS

001	LX3000D/LX3500D /MRD200
002	MX3600D/MX3800
003	LX3700D/LX3750W
005	MRD210
006	MX3660D
008	FWD573/FWD792/FWD798

oem derivative

08

- region code = 1 digit
- tv system = 1 digit
- "as/menu lang" = 1 digit
- "AFS" = "architectre Feature Set" = 3 digits

This field is used to define the architecture / features sets for each product.

- "oem derivative" = 2 digit

This field is use to define the OEM set. This will affect the background display.

Hence in total, reprogramming will be done by way of the remote control. It should run as below :-

- Put the player in stop mode. No disc loaded.
- Press the following key on remote control:

For FWD798/98 (A/P) :

<PLAY> <159> <331> <008> <08> <PLAY>

* After the Region Code is changed it is necessary to reset the system so that the new Region Code will be fully effective. All customer setting will be lost.

* On top of the maximum number of times allowed for changing the region code is changed to 25.

* When the counter reach 25, you will not be able to further change the code until you reset the timer by the Region Code timer reset procedure

CAUTION !

This information is confidential and may not be distributed. Only a qualified service person should reprogram the Region Code.

3) Region code change timer reset

Press below key to reset the timer :

- In DISC source, stop mode and no disc in tray.
- Press R/C "Play -159-PLAY" to reset timer to 25

4) Tuner area change

- Press the "OPEN/CLOSE" button to open the set's door
- Press "1" "5" "9" button by using R/C.
- TV Show "TUNER AREA"
- Select the tuner area you want by using the "▼" and "▶" button on R/C, then press "OK" to confirm. TV show " TUNER AREA CHANGED"

If you didn't press it in five seconds, the system will remain original status.

AREA	BAND	FREQUENCY (Hz)		STEP(Hz)
A/P (/98)	FM	87.5M	108M	50K
	MW	531K	1602K	9K
		530K	1710K	10K

Note :-

Please refer to the above different tuner area.

5. Video Out Change

- Press "SYSTEM" on R/C button
- Select the menu using the "▼" and "▶" button on R/C
- Go picture setup page select Video out item.

6. Password Change

- Press "SYSTEM" on R/C button
 - Select the menu using the "▼" and "▶" button on R/C
 - Go feature setup page select "PASSWORD". TV show "ENTER CODE".Press 4 times of "STOP" button on R/C.
 - Select "PARENTAL" "8 ADULT" on TV.
 - Enter PASSWORD to "1234".
- * "1234" is a default password supplied.

7. Checking on the Software version

- Open the CD door.
- Press "123" and "OK" on the remote control.
- TV will show the version on screen.

8. Upgrading new software







- Open the door, then insert the CD-R program disc.
- Close the door.
- TV will show:-
 - "disc loading"
 - "bank30.rom"
 - "writing" about 6 seconds.
 - "Done"

* The latest upgraded is in version VER*****.







REPAIR INSTRUCTIONS (1 of 2)

MAIN UNIT REPAIR CHART

- (A)
All Function
No Working
- (B)
Power Supply
No Working
- (C)
All Function
No Sound
- (D)
Earphone
No Sound
- (E)
Audio Line
No Output
- (F)
Subwoofer Pre
No Output
- (G)
DVD Audio
No Sound
- (H)
Aux in
No Sound
- (I)
Tuner
No Sound
- (J)
TAPE DECK
No Sound
- (K)
MIC/ ECHO
No Sound
- (M)
Digital Line
No Output

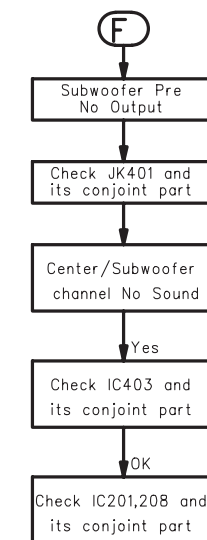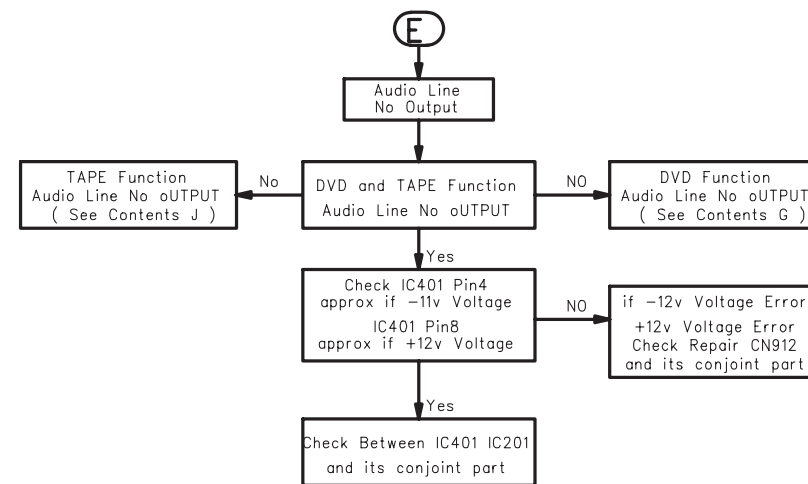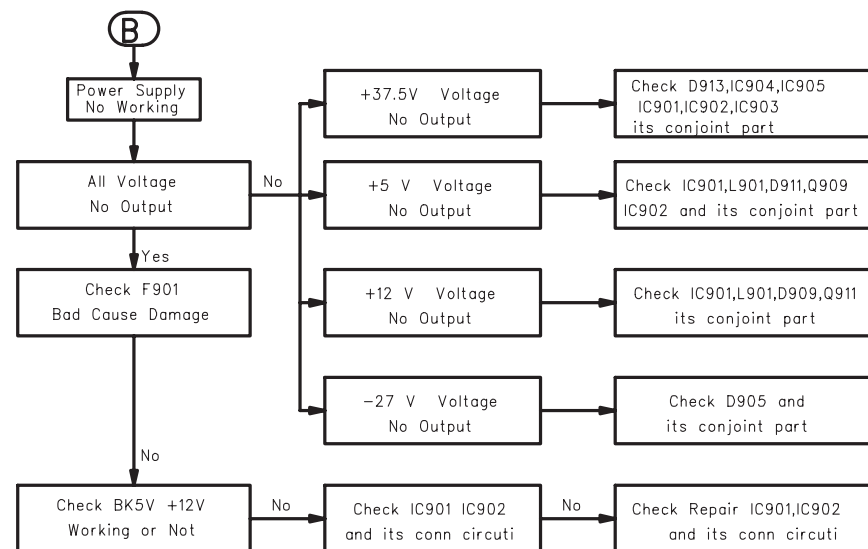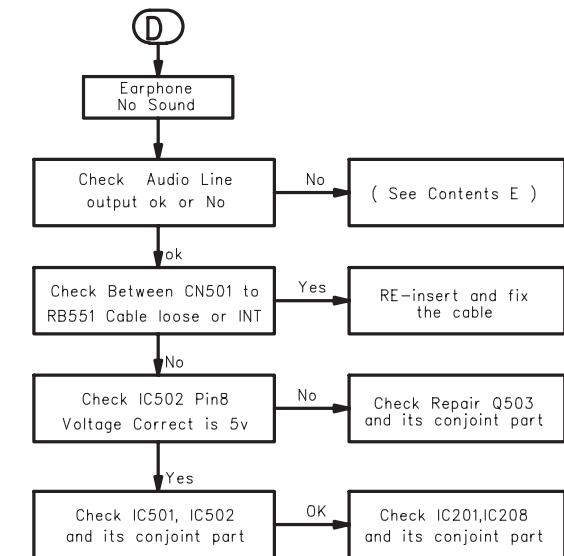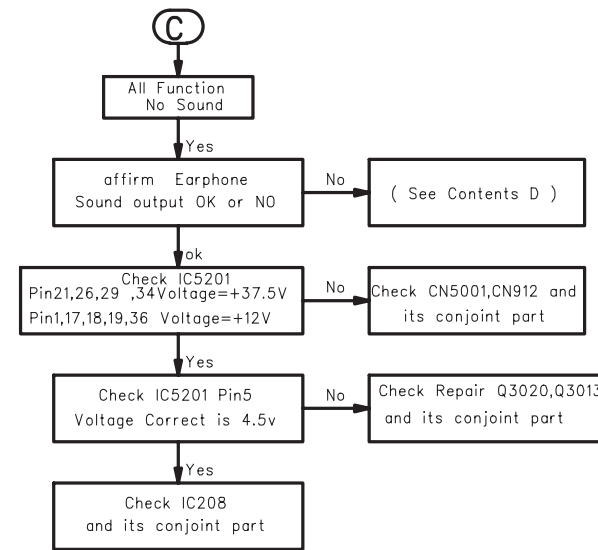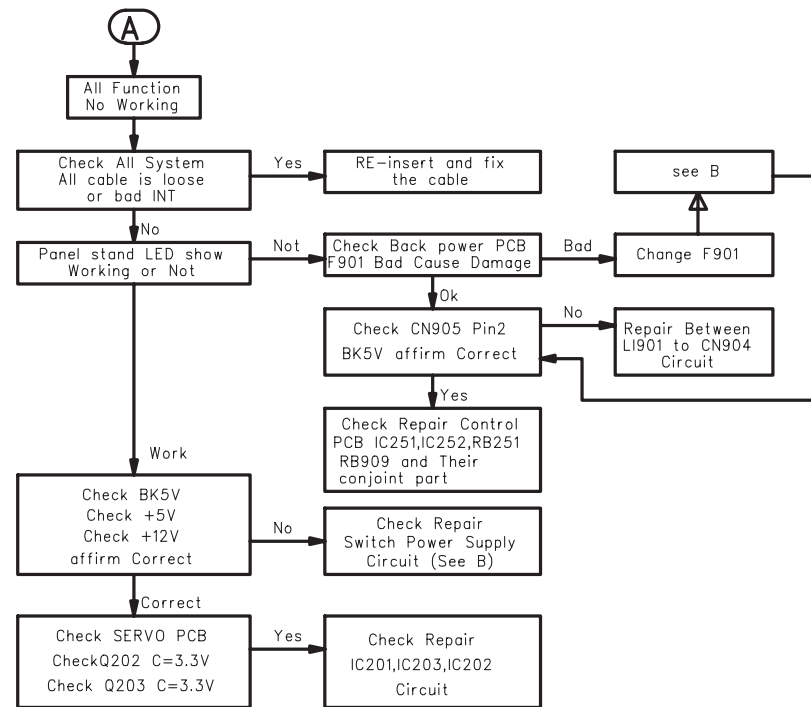

REPAIR INSTRUCTIONS (2 of 2)

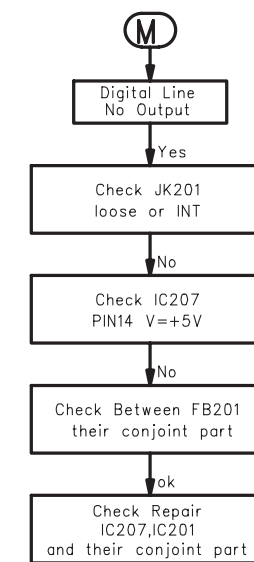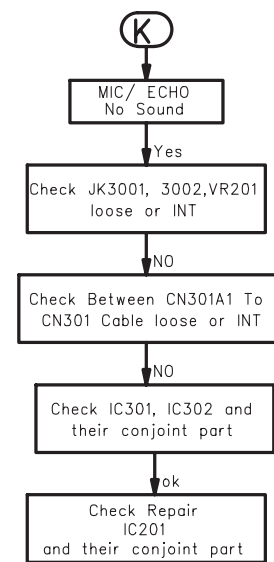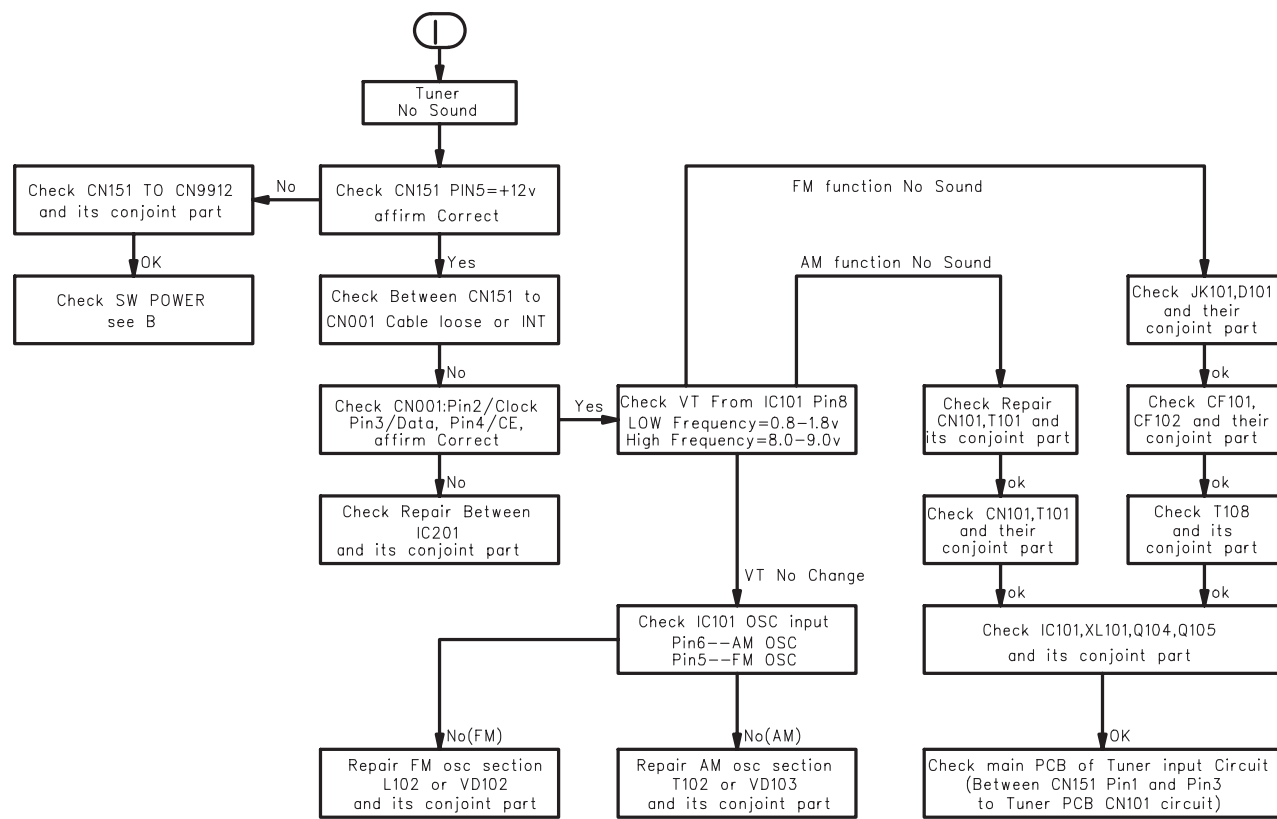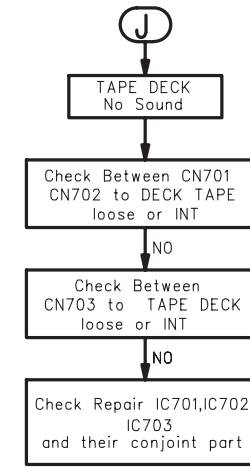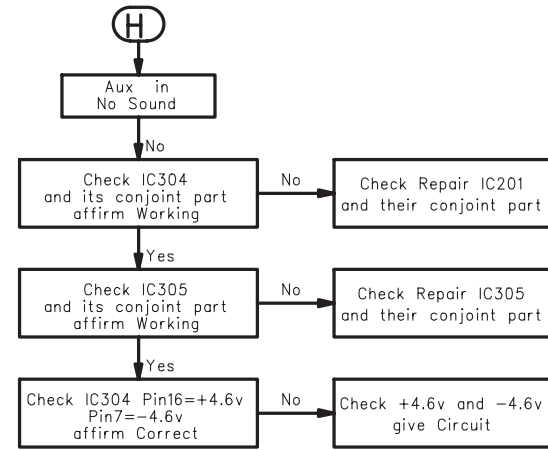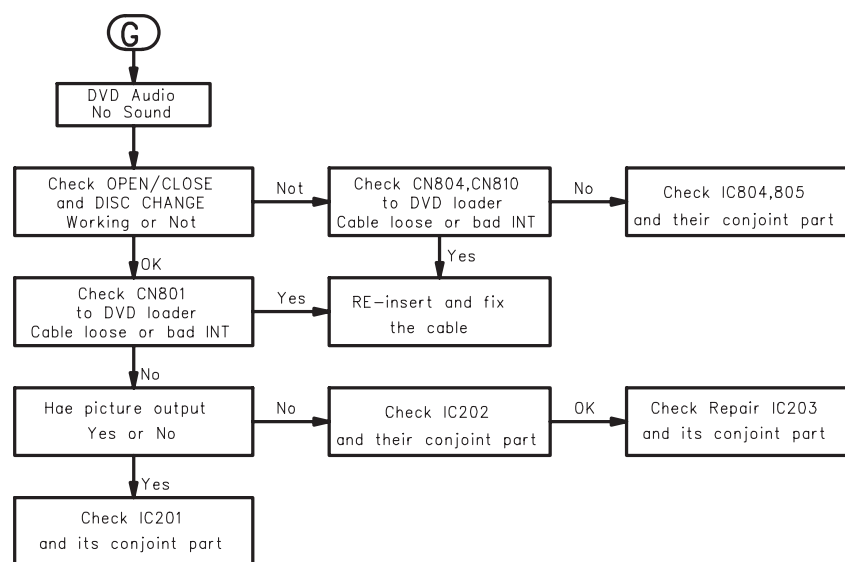

DISMANTLING INSTRUCTIONS

Dismantling the DVD Module

- 1) Loosen the 4 screws at top cover , 2 screws at slide Cover and 4 screws at back panel as Figure 1 & 2.

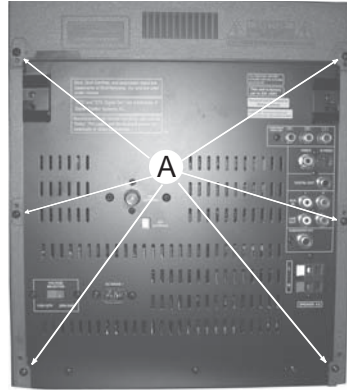


Figure 1

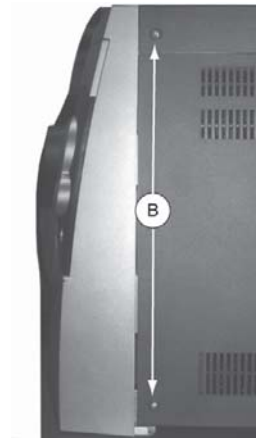


Figure 2

- 2) Push the gear slowly towards the front as shown in figure 3 until the CDC tray starts to move out of the Front Cabinet. The CDC tray is now disengaged and can be pulled out completely.

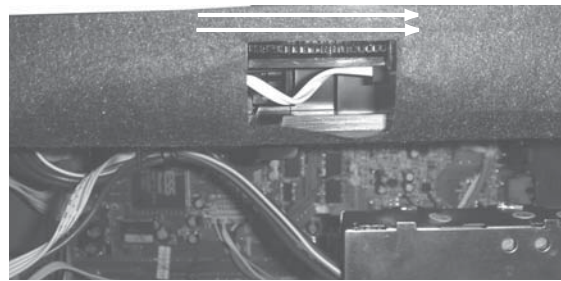


Figure 3

- 3) Remove the Cover Tray as shown in figure 4.

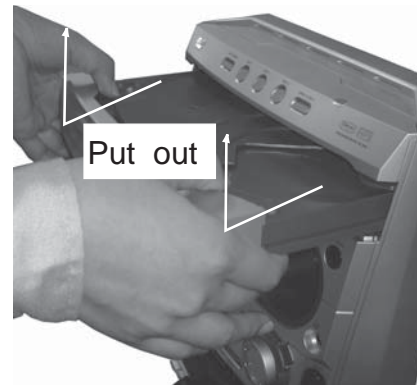


Figure 4

- 4) Loosen the 2 screws at front of DVD loader as Figure 5.



Figure 5

- 5) Loosen the 2 screws at back of DVD loader as Figure 6.

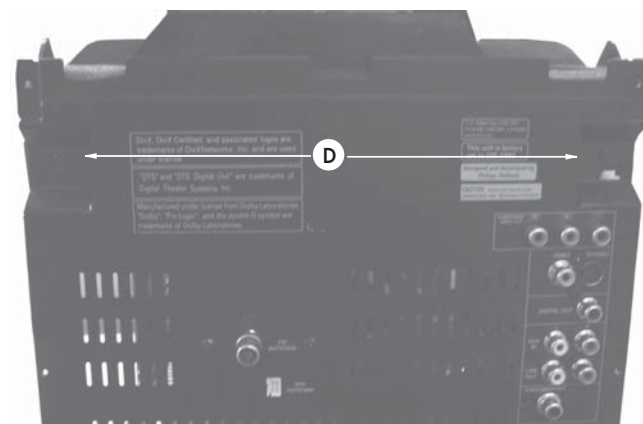


Figure 6

Dismantling of the Cover Front Display

- 1) Remove the Volume knobs as stated in Dismantling the Cover Front Display in Figure 7.
- 2) Loosen 2 screws at the bottom of front panel.

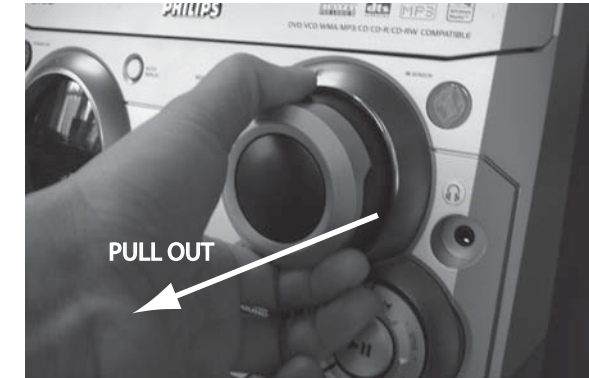


Figure 7

Dismantling the Main board

- 1) Release 7 screws 'E' to free the Main board from the back panel assembly as shown in Figure 8.
- 2) Loosen 1 screw 'F' at the side of the set as shown in Figure 9.
- 3) Release 2 screws 'G' on the heat sink as shown in Figure 10.

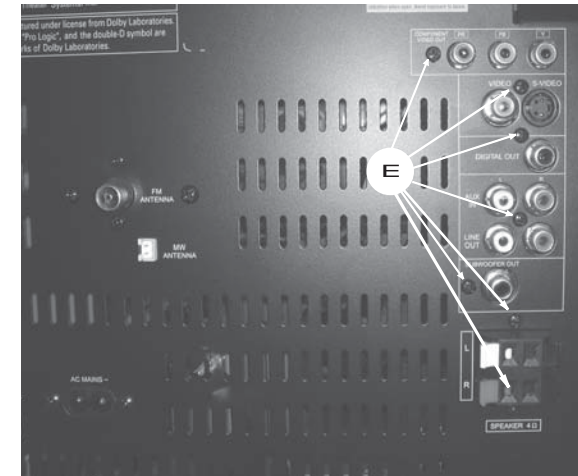


Figure 8

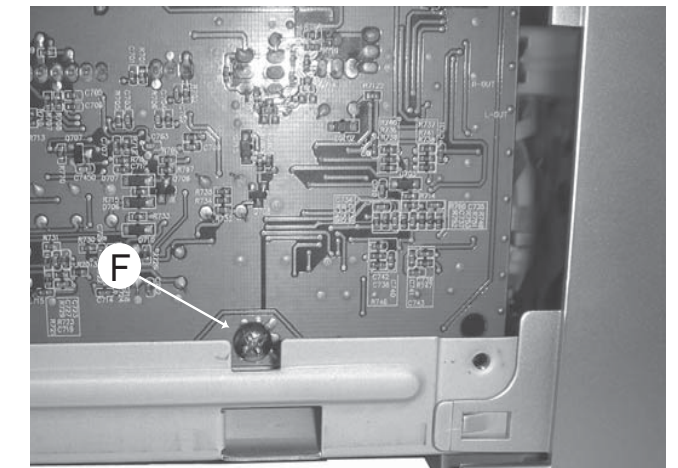


Figure 9


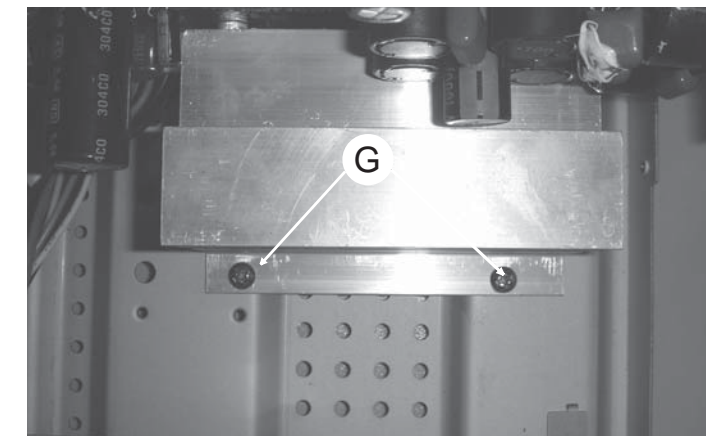


Figure 10

Dismantling of the Control Board & Cassette Module

1) Loosen 19 screws 'H' to remove the control board figure 11.

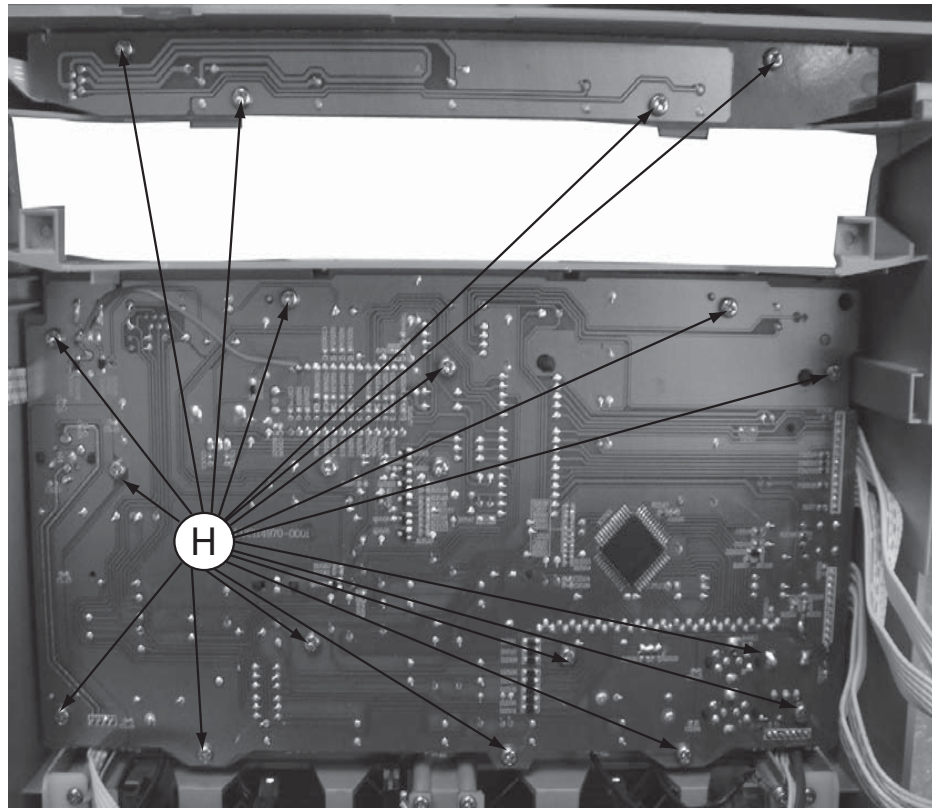

2) Loosen 4 screws 'I' to remove the Cassette Module figure 12.

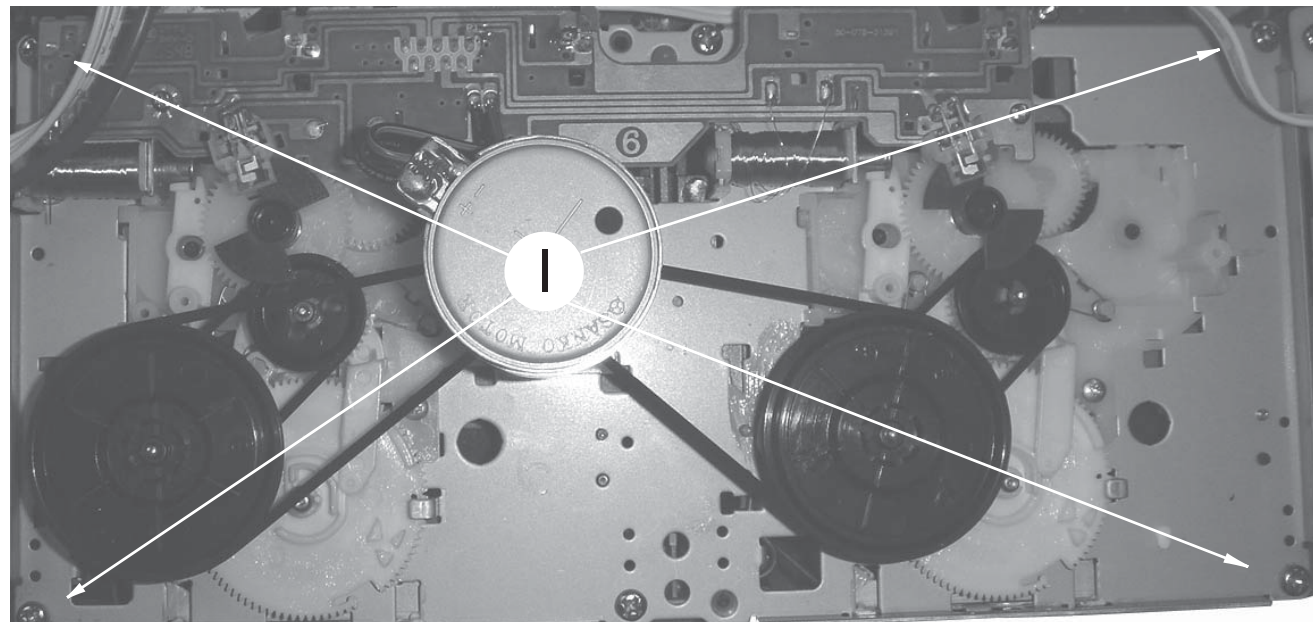


Figure 12

Dismantling of the Power Board

1) Loosen 4 screws 'J' to remove the Power Board figure 13.

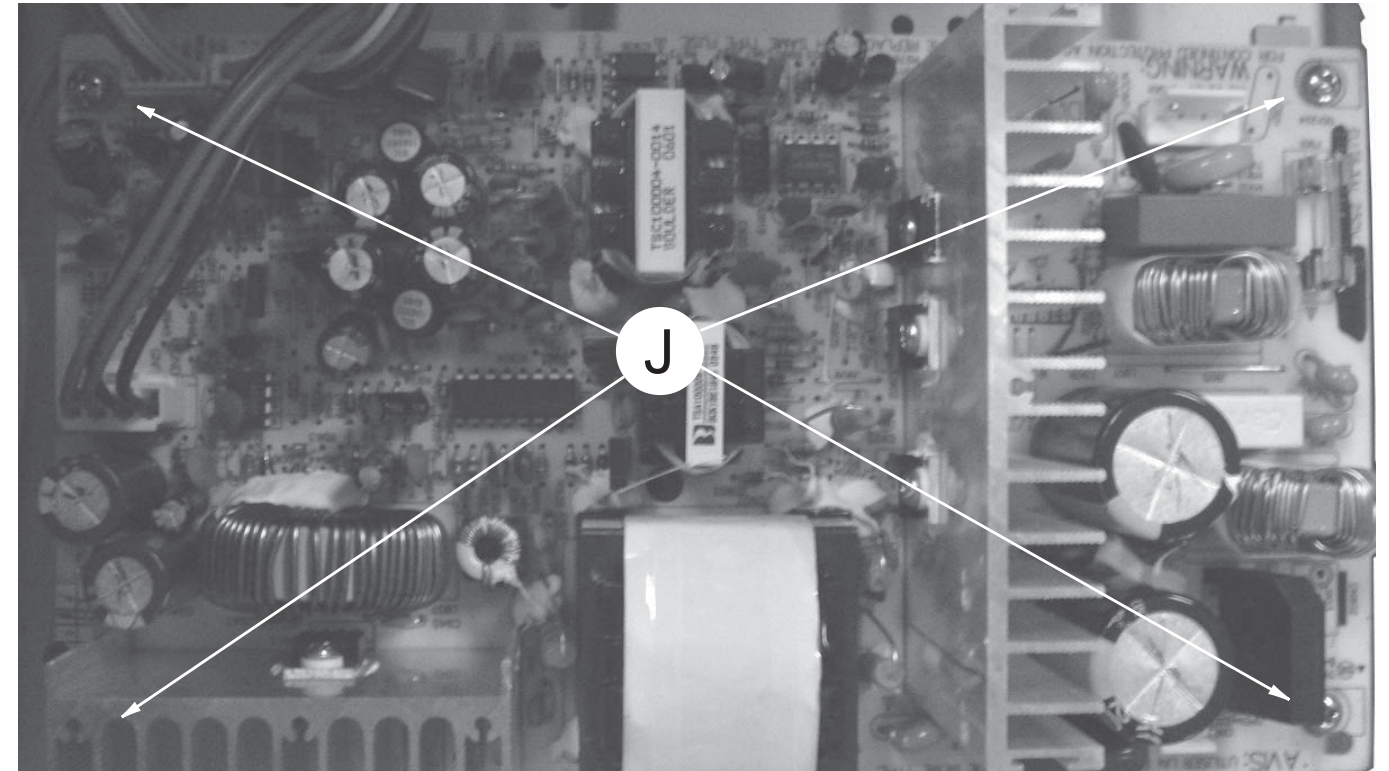


Figure 13

Service positions

Service position A



Service position B




Note: After re-assembly, it is very important to ensure the wires are properly inserted into their respective sockets and routed not to touch or obstruct any moving parts.


Service position C




BLOCK DIAGRAM

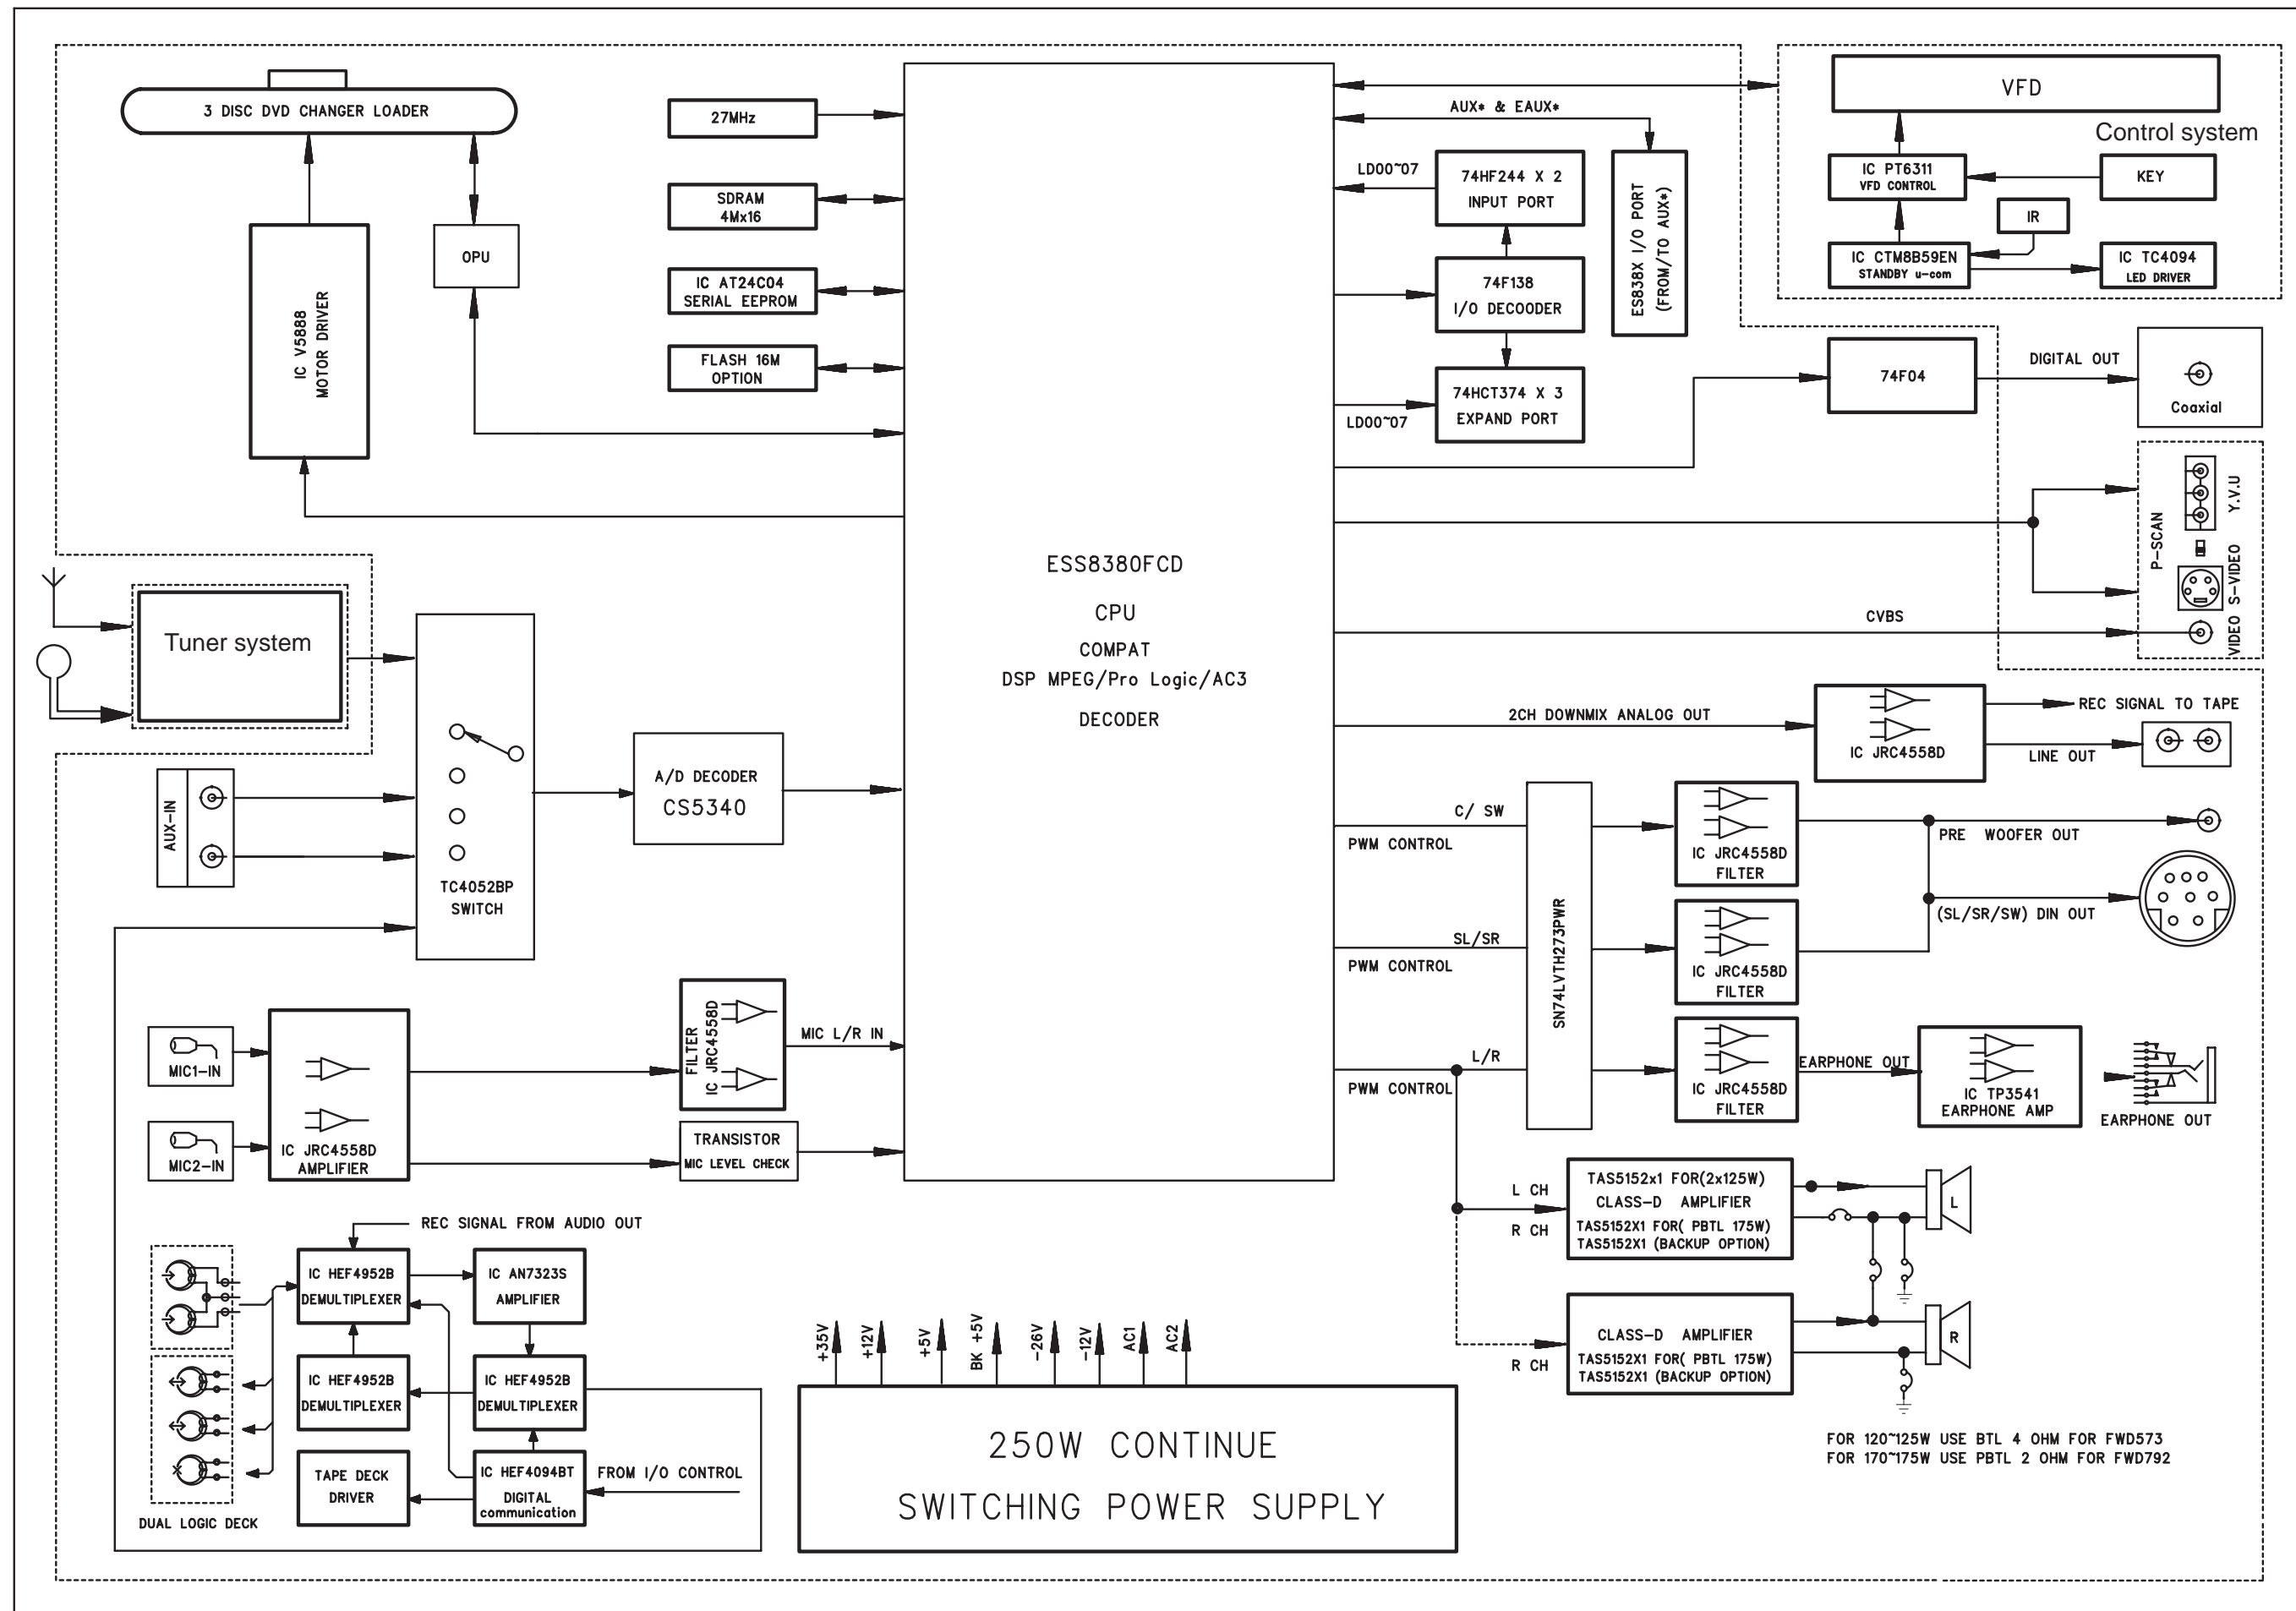

WIRING DIAGRAM

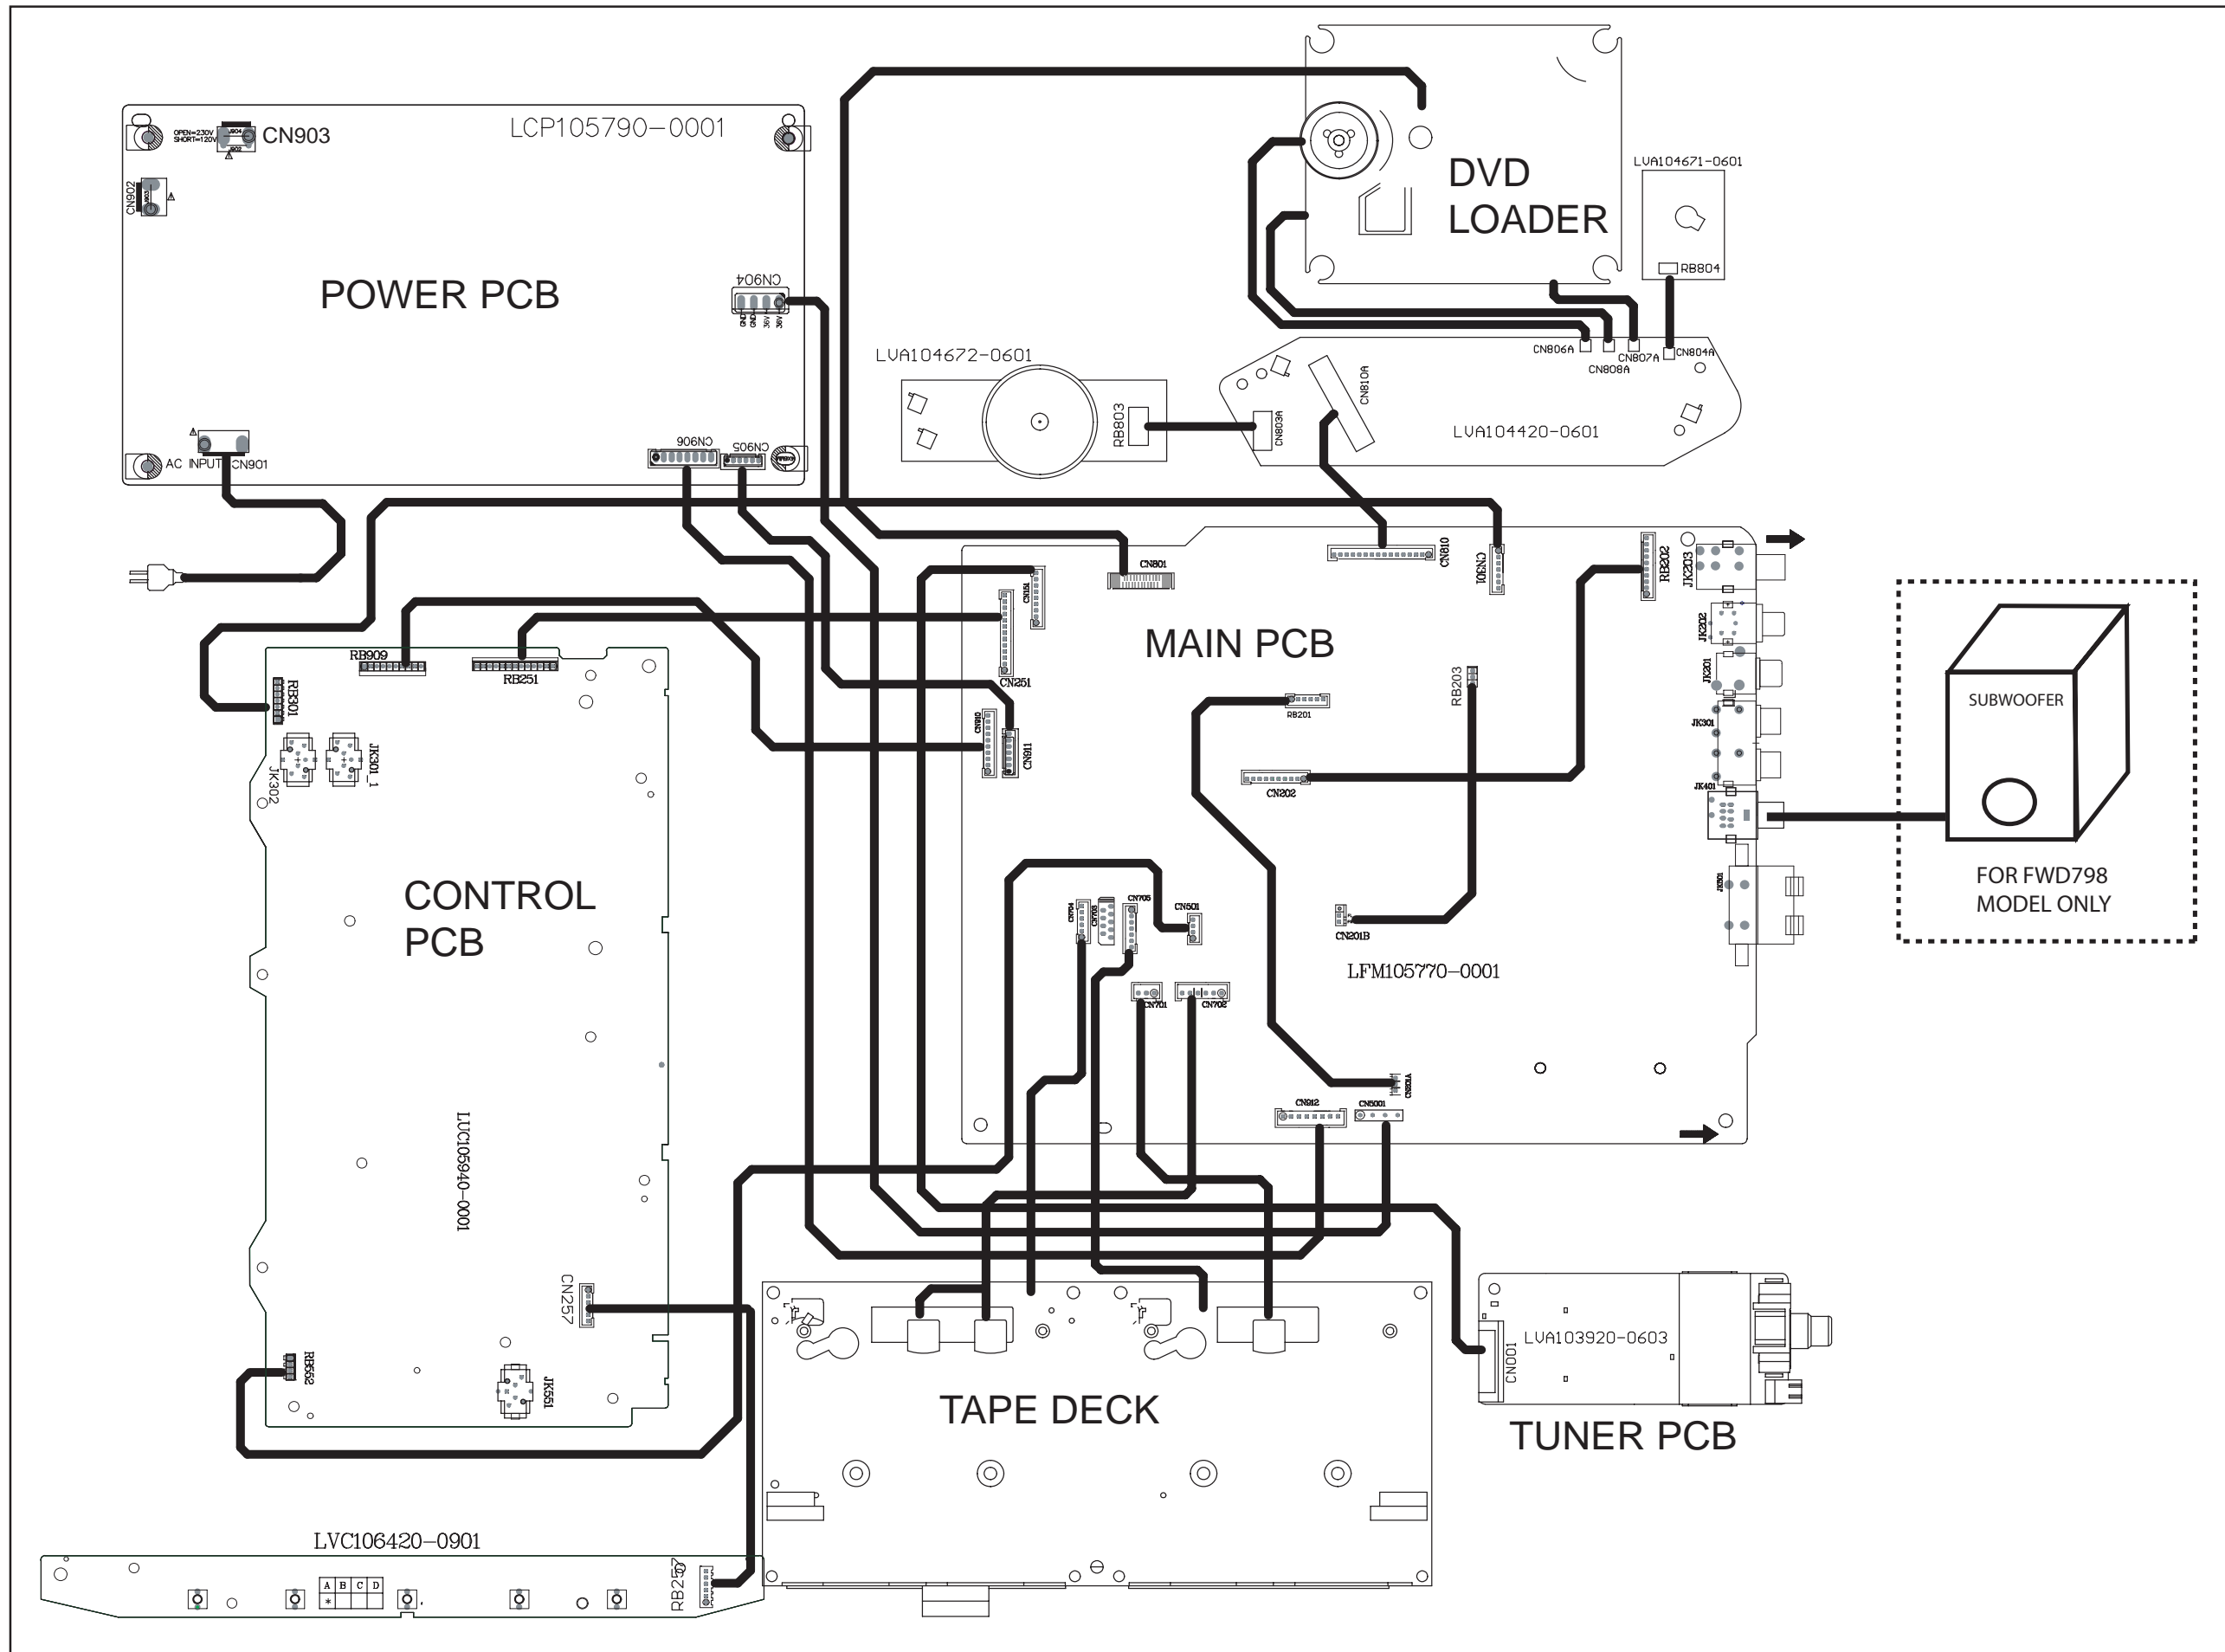

FTD DISPLAY PIN ASSIGNMENT

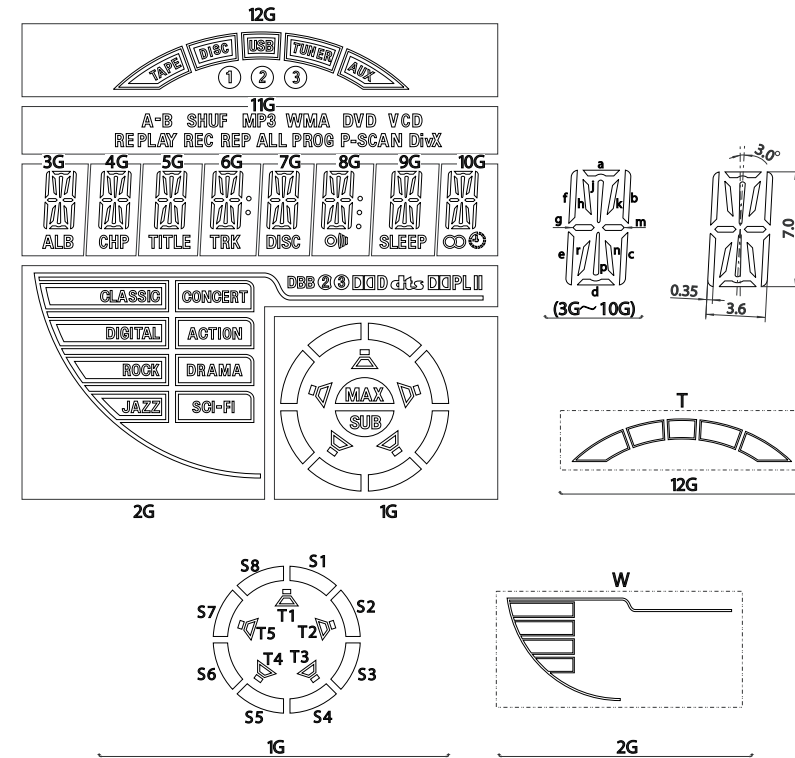

CONTROL BOARD

TABLE OF CONTENTS

FTD Display Pin Assignment 5-1
 Pin Connection 5-1
 Circuit Diagram 5-2
 PCB Layout (Key / sw / motor PCB) 5-3
 PCB Layout Top View 5-4
 PCB Layout Bottom View 5-5
 Electrical Parts List & Voltages 5-6

栅阳	1G	2G	3G	4G	5G	6G	7G	8G	9G	10G	11G	12G
P1	S1	CONCERT	a	a	a	a	a	a	a	a	Dtx	MP3
P2	S8	ACTION	h	h	h	h	h	h	h	h	P-SCAN	REP
P3	T5	DRAMA	j,p	j,p	j,p	j,p	j,p	j,p	j,p	j,p	MP3	③
P4	T1	DIGITAL	k	k	k	k	k	k	k	k	WMA	VCD
P5	S2	CLASSIC	b	b	b	b	b	b	b	b	PROG	T
P6	S7	SCI-FI	f	f	f	f	f	f	f	f	V	TOWER
P7	MAX	ROCK	m	m	m	m	m	m	m	m	CD	②
P8	SUB	JAZZ	g	g	g	g	g	g	g	g	DVD	①
P9	T2	W	c	c	c	c	c	c	c	c	REP	---
P10	S3	DISC	e	e	e	e	e	e	e	e	ALL	Dtx
P11	T4	②	r	r	r	r	r	r	r	r	REC	---
P12	T3	③	n	n	n	n	n	n	n	n	SHUF	---
P13	---	DICD	d	d	d	d	d	d	d	d	A	---
P14	S4	dtx	---	---	---	Col	---	Col	---	---	-B	---
P15	S5	DCPL	---	---	---	---	---	Dp	---	∞	RE	---
P16	S6	II	ALB	CHP	TITLE	TRK	DISC	OP	SLEEP	∞	PLAY	---

PIN CONNECTION

PIN NO.	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19
CONNECTION	F1	F1	F1	NP	1G	2G	3G	4G	5G	6G	7G	8G	9G	10G	11G	12G	NX	NX	P16
PIN NO.	20	21	22	23	24	25	26	27	28	29	30	31	32	33	34	35	36	37	38
CONNECTION	P15	P14	P13	P12	P11	P10	P9	P8	P7	P6	P5	P4	P3	P2	P1	NP	F2	F2	F2

Note

1. F : Filament

2. G :Grid


3. P :Anode

4. NP :No Pin

5. Nx :No extended


CIRCUIT DIAGRAM: CONTROL PCB

C2501	A4	C2512	C4	C2525	B7	C5017	D7	C852	C1	D2506	D7	IC2501	C6	Q2506	B4	R2510	B4	R2521	B4	R2536	B6	R2548	C5	R2560	B5	RB909	C2	TA2506	D5	TA2517	D5	ZD2501	C4
C2502	A4	C2513	C4	C2526	B6	C5018	D7	CN257	D2	D2507	D6	IC2502	B5	Q2507	B3	R2511	B4	R2522	B4	R2537	B6	R2549	C5	R2561	C4	SN2501	B4	TA2507	D5	TA2518	D5	ZD2502	C4
C2503	A4	C2514	C4	C2527	B7	C5019	D7	CN803A	C2	D2508	D7	LD2501	B4	Q2508	B4	R2512	B4	R2523	B4	R2538	B6	R2550	C5	R2562	C4	SW801	C1	TA2508	D5	TA2519	D5	ZD2503	B3
C2504	A4	C2515	C4	C2528	A7	C5301	C5	CN804A	C2	D2509	D6	LD2502	C4	Q2509	C4	R2513	B4	R2524	B4	R2539	B6	R2551	C5	R2563	A4	SW802	C1	TA2509	D6	TA2525	D1		
C2505	A4	C2518	C5	C2529	A8	C5302	C5	CN806A	C2	D2510	D7	M1	B1	R2501	A5	R2514	B4	R2525	B5	R2540	B6	R2552	C5	R2564	D2	SW803	A2	TA2510	D6	TA2526	D1		
C2506	B4	C2519	C5	C3020	D7	C5303	C5	CN807A	C2	D2511	D6	M2	A1	R2502	A5	R2515	B4	R2526	B4	R2541	B6	R2553	C6	RB251	A2	SW804	A2	TA2511	D5	TA2527	D1		
C2507	B4	C2520	C5	C3055	D2	C5400	D4	CN808A	C2	DP2501	A7	Q2501	A3	R2505	A4	R2516	B4	R2527	B3	R2542	B6	R2554	C6	RB257	D2	TA2501	C4	TA2512	D5	TA2528	D1		
C2508	B4	C2521	C5	C3056	D2	C5401	D4	CN810A	C1	FB2501	A3	Q2502	A3	R2506	A4	R2517	B4	R2529	C3	R2543	B5	R2555	C6	RB301	D3	TA2502	C5	TA2513	D5	TA2529	D1		
C2509	B4	C2522	C5	C3057	D2	C5402	D4	D2502	B4	FB2502	A3	Q2503	B3	R2507	A4	R2518	B3	R2530	C3	R2544	B5	R2557	B3	RB552	D6	TA2503	D4	TA2514	D4	TA2530	C5		
C2510	B4	C2523	C6	C5015	D7	C5403	D4	D2504	D7	FB2503	A3	Q2504	B3	R2508	A4	R2519	B4	R2531	C4	R2546	B5	R2558	B3	RB803	A1	TA2504	D5	TA2515	D4	VR301	D3		
C2511	B4	C2524	B6	C5016	D7	C851	C1	D2505	D6	FB2505	B3	Q2505	B3	R2509	A4	R2520	B4	R2532	C4	R2547	B6	R2559	B4	RB804	B1	TA2505	D5	TA2516	D5	XL2501	B4		

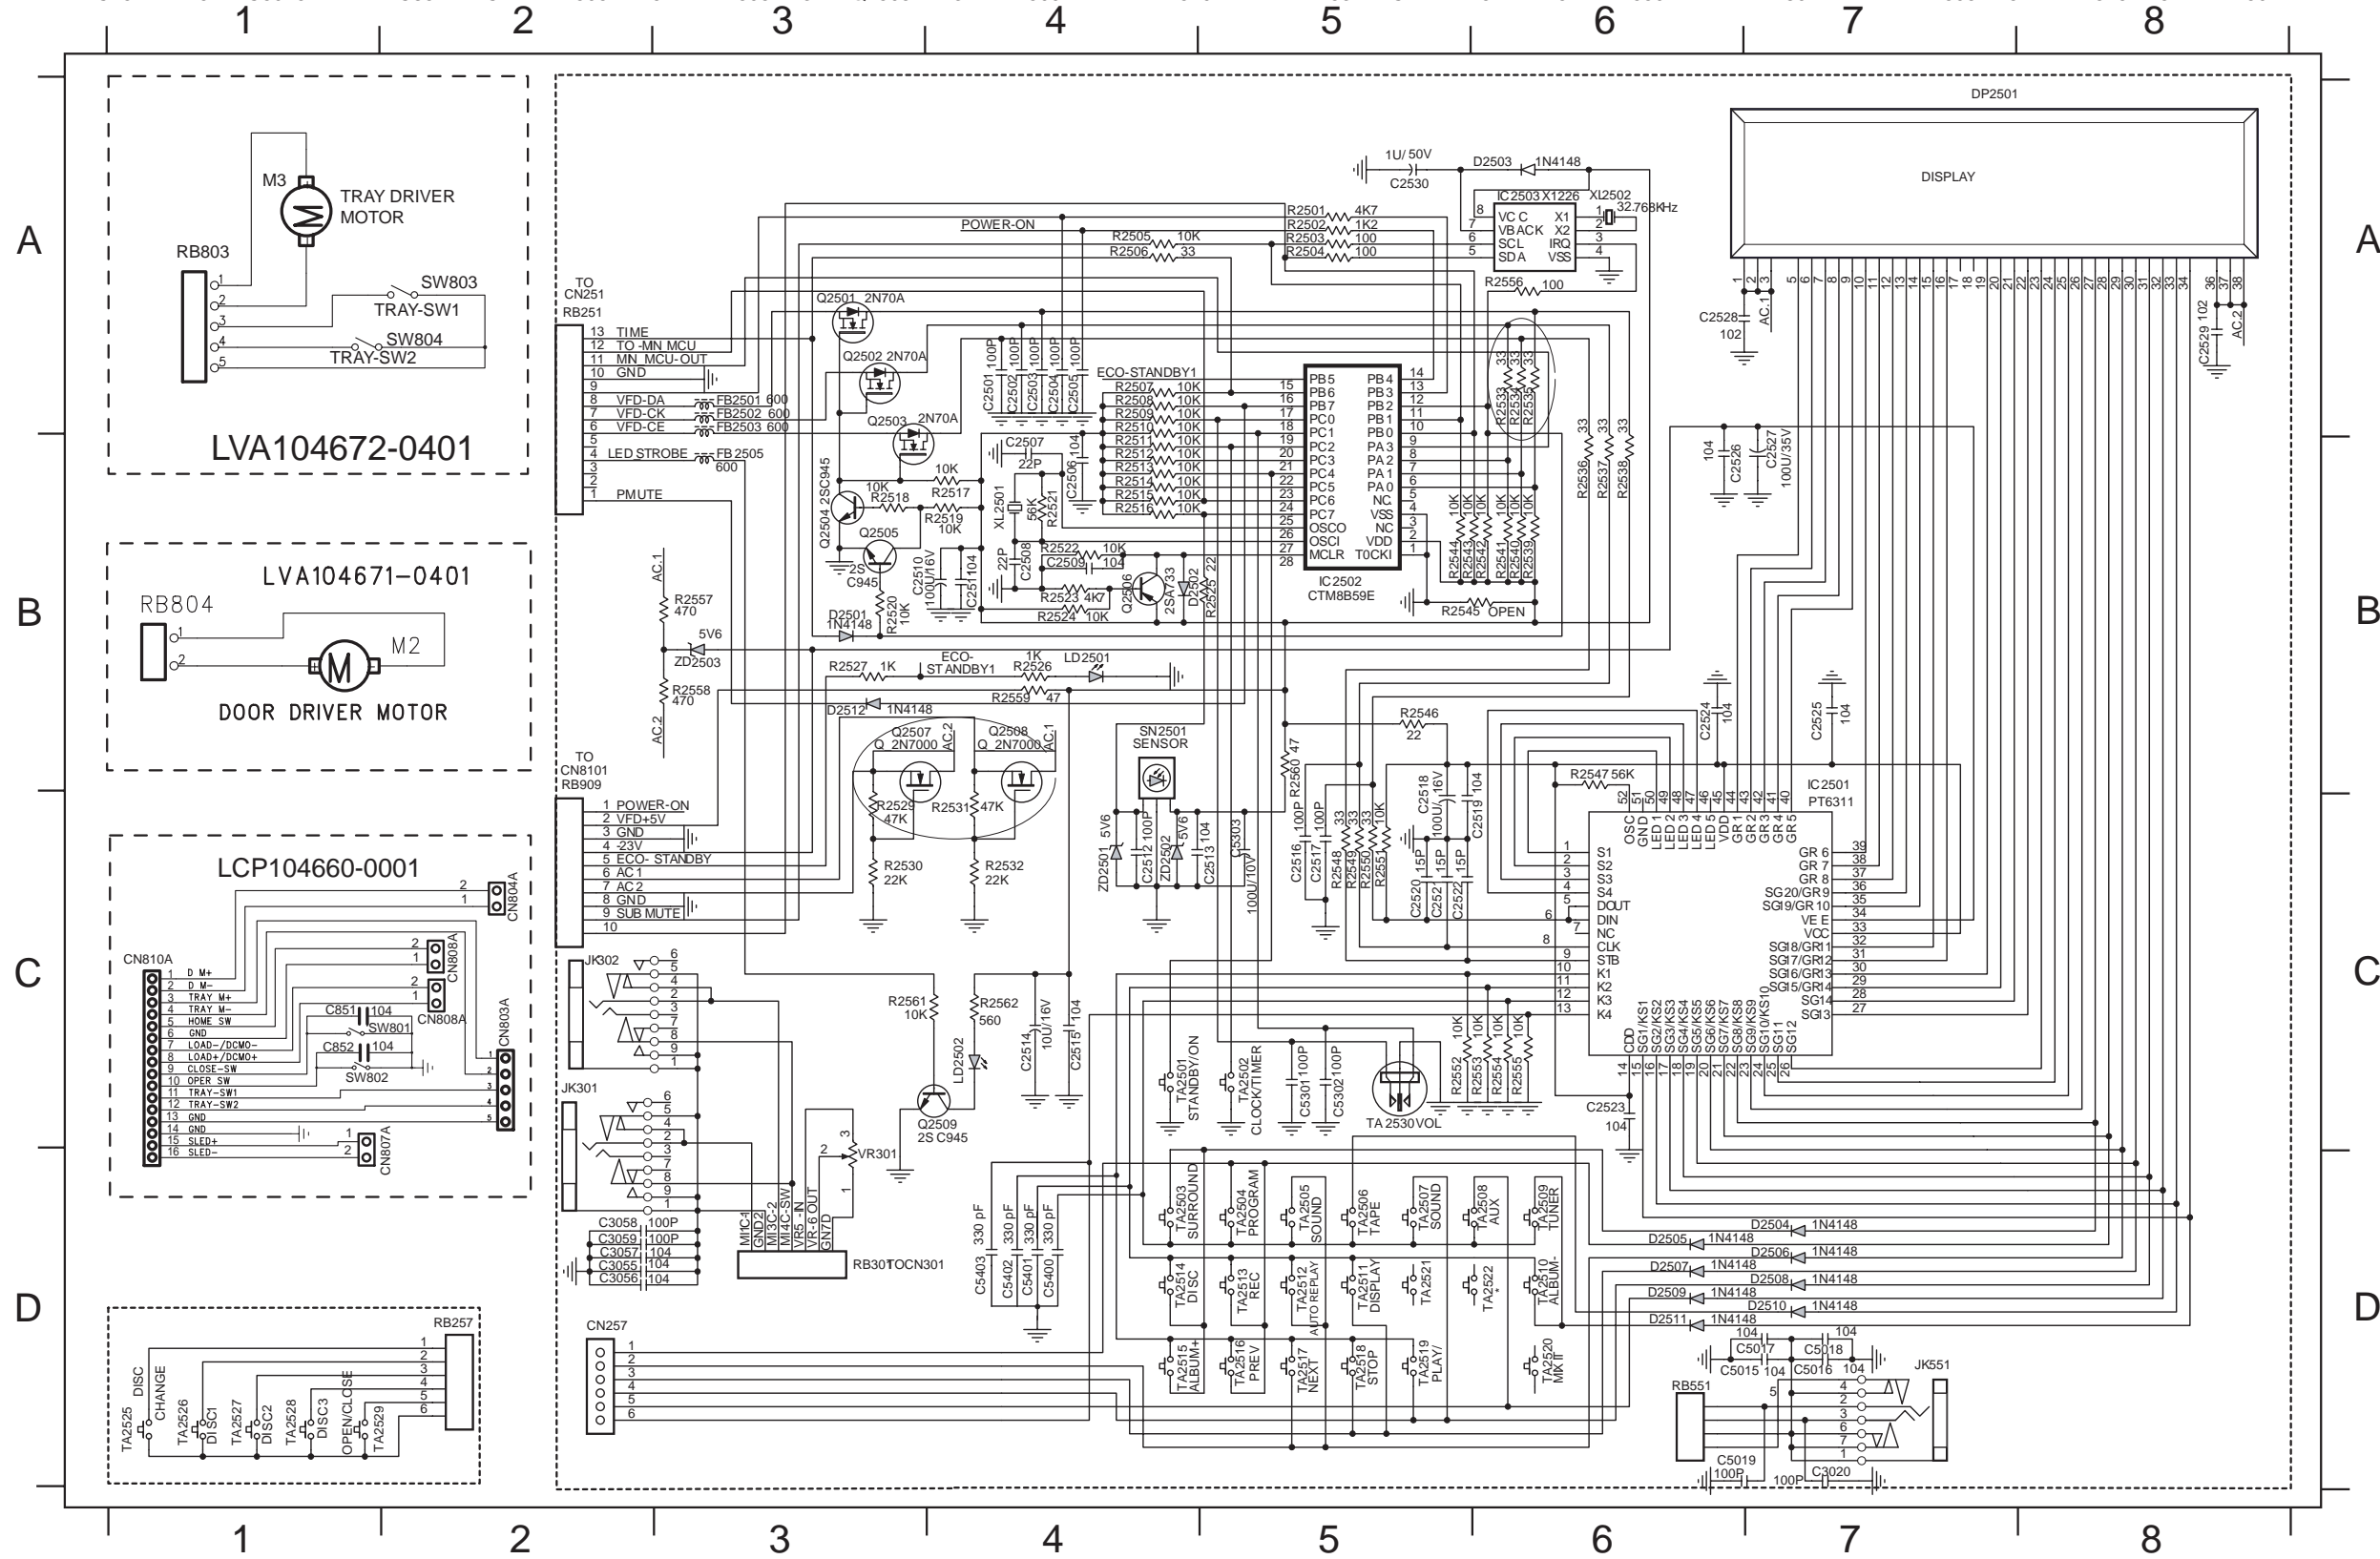


PCB LAYOUT:KEY / SW / MOTOR PCB

C851	A1	CN803A	A1	CN806A	A2	CN808A	A2	J801	A1	J803	A1	J805	A1	M1	B1	RB257	B2	RB804	B1	SW802	A2	SW804	B2
C852	A1	CN804A	A2	CN807A	A2	CN810A	A1	J802	A1	J804	A1	J806	A1	M2	B1	RB803	B1	SW801	A1	SW803	B2		

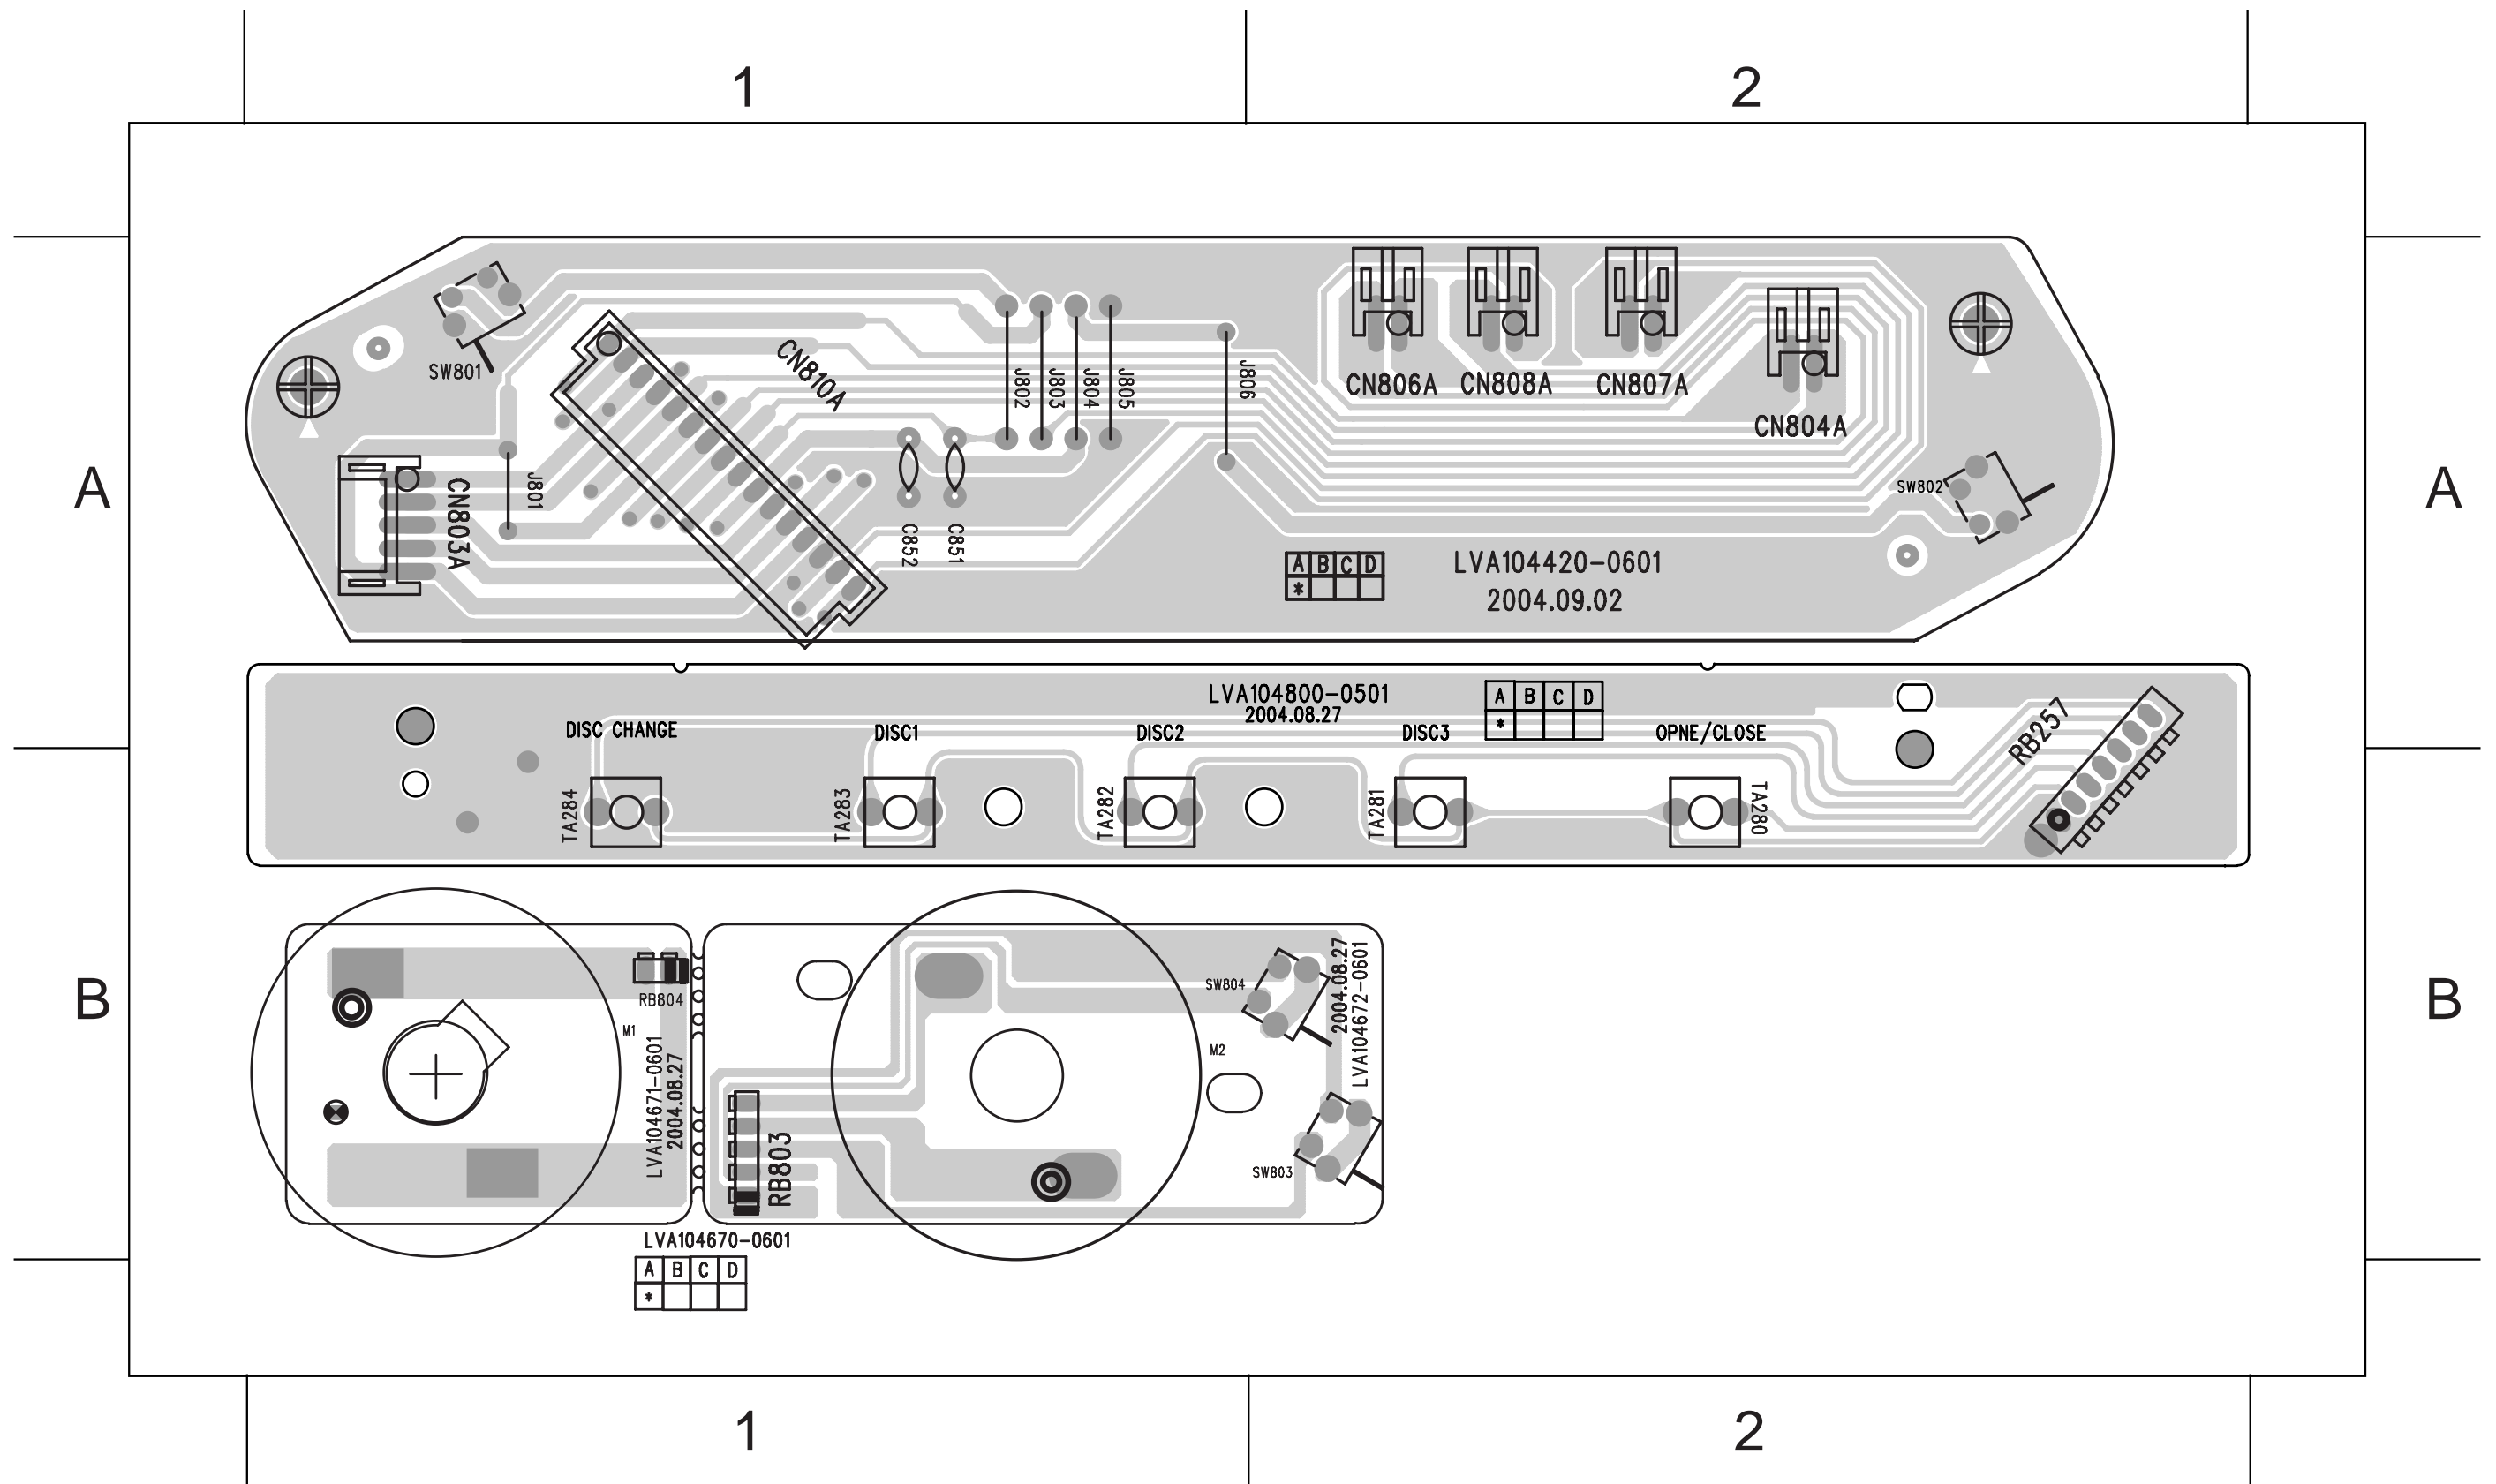

PCB LAYOUT - CONTROL PCB (TOP VIEW)

C2510	A2	JK302	B3	JP2508	A3	JP2517	B3	JP2527	A2	JP2536	A2	JP2545	B2	JP2554	A2	JP2563	A2	JP2572	A2	JP2588	A1	JP2597	B2	JP2606	B1	Q2508	B3	TA2504	B2	TA2513	A2	TP3	B3
C2514	A2	JK551	A1	JP2509	A3	JP2518	A3	JP2528	A2	JP2537	A2	JP2546	B2	JP2555	A2	JP2564	A2	JP2577	A2	JP2589	A1	JP2598	B2	JP2607	B1	RB251	A3	TA2505	B3	TA2514	B2	VR301	B3
C2518	A3	JP2501	B3	JP2510	B3	JP2519	A3	JP2529	A2	JP2538	B3	JP2547	B2	JP2556	A2	JP2565	A2	JP2578	A1	JP2590	A2	JP2599	B2	JP2608	B1	RB301	B3	TA2506	B2	TA2515	A1	XL2501	A1
C2527	B3	JP2502	B3	JP2511	B3	JP2520	A3	JP2530	A2	JP2539	B3	JP2548	B2	JP2557	A2	JP2566	A2	JP2579	A1	JP2591	A2	JP2600	B3	JP2609	B1	RB552	B1	TA2507	B1	TA2516	B1		
C5303	A1	JP2503	B3	JP2512	B3	JP2522	A2	JP2531	A2	JP2540	B3	JP2549	B2	JP2558	A2	JP2567	A2	JP2580	A1	JP2592	A2	JP2601	B1	JP2613	B1	RB909	B3	TA2508	B2	TA2517	A1		
CN257	A1	JP2504	B3	JP2513	A3	JP2523	A2	JP2532	A2	JP2541	B2	JP2550	B2	JP2559	A2	JP2568	A2	JP2581	A1	JP2593	A2	JP2602	B1	JP5001	A1	SN2501	A1	TA2509	B2	TA2518	B1		
DP2501	A3	JP2505	B3	JP2514	B3	JP2524	A2	JP2533	A2	JP2542	B2	JP2551	B2	JP2560	A1	JP2569	B2	JP2585	A1	JP2594	A2	JP2603	B1	LD2501	A3	TA2501	A3	TA2510	B1	TA2519	B1		
IC2502	A2	JP2506	A3	JP2515	B3	JP2525	A2	JP2534	A2	JP2543	B2	JP2552	A2	JP2561	A2	JP2570	A2	JP2586	A1	JP2595	B2	JP2604	B1	LD2502	B1	TA2502	B2	TA2511	B2	TA2530	A1		
JK301	B3	JP2507	A3	JP2516	B3	JP2526	A2	JP2535	A2	JP2544	B2	JP2553	A2	JP2562	A2	JP2571	A2	JP2587	A1	JP2596	B2	JP2605	B1	Q2507	B3	TA2503	B1	TA2512	A2	TP1	B3		

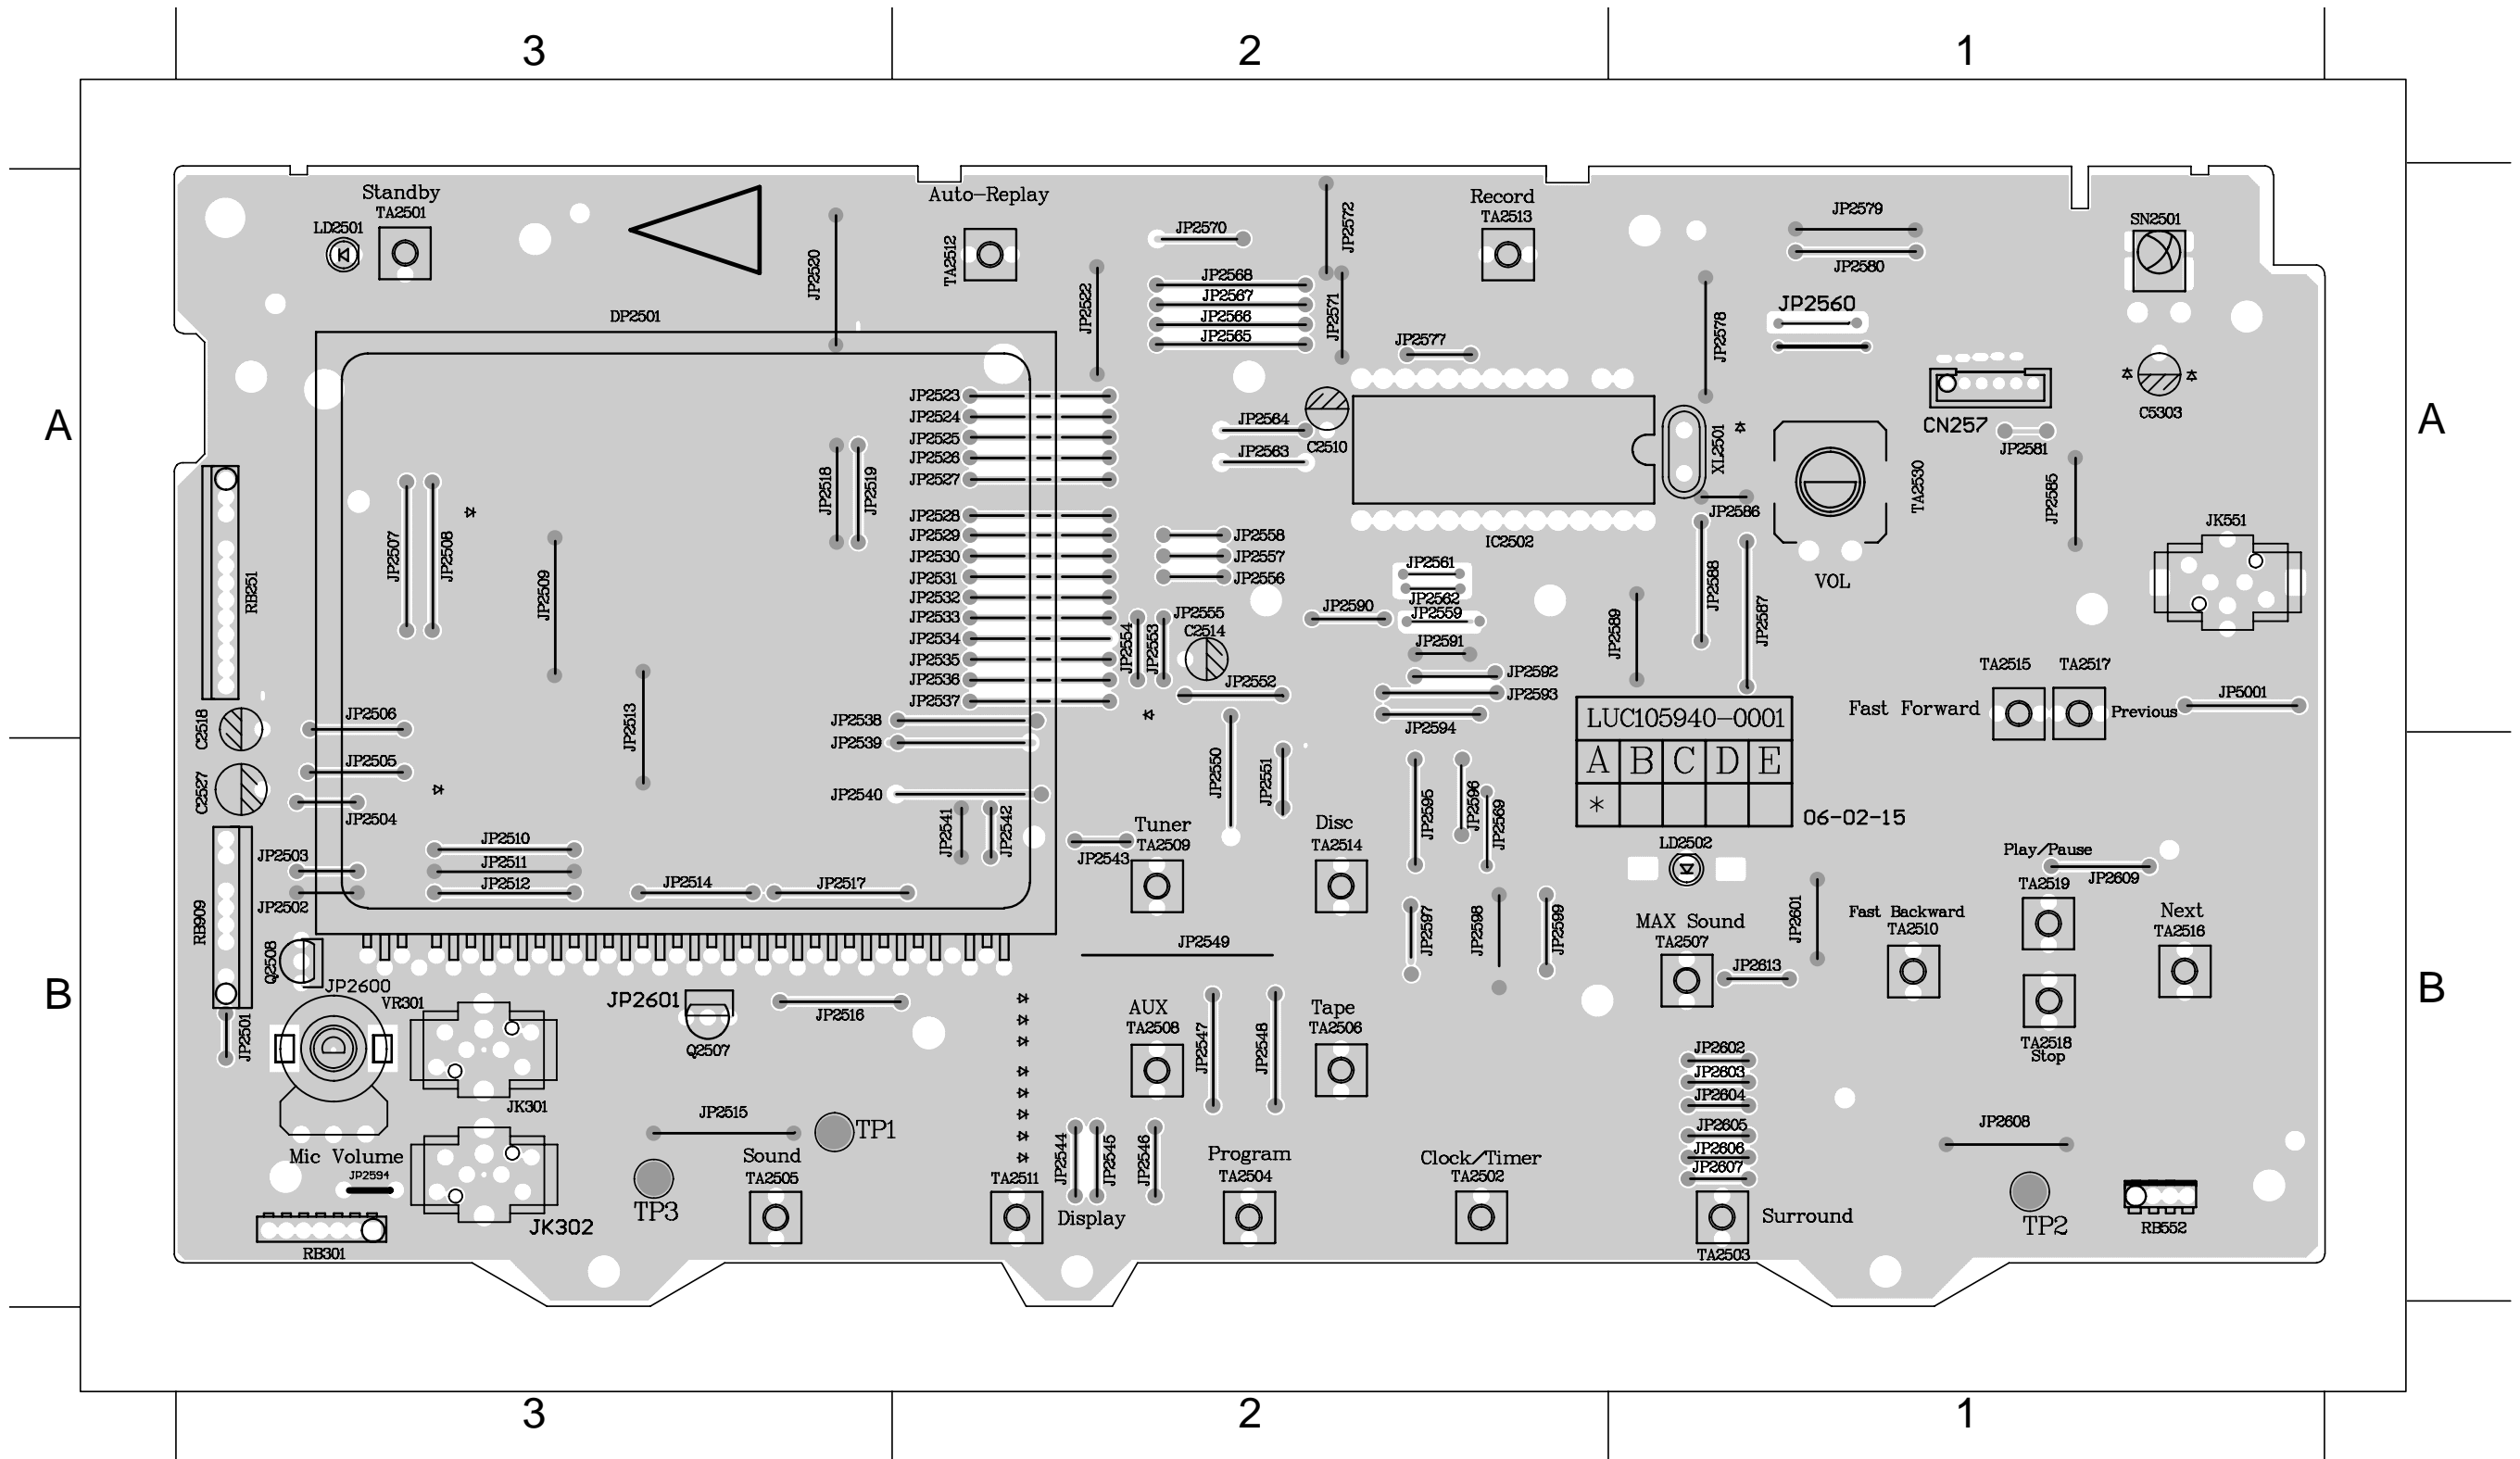


PCB LAYOUT - CONTROL PCB (BOTTOM VIEW)

C2501 A2	C2508 A1	C2521 B2	C2529 B2	C5019 A1	C5308 A1	D2505 B2	FB2501 A3	Q2503 A2	R2505 B3	R2512 A2	R2519 A2	R2526 A2	R2538 A2	R2546 B3	R2553 B2	R2561 B2	ZD2503 B3
C2502 A2	C2509 A1	C2522 B2	C3055 B3	C5301 A1	C5309 A1	D2506 B2	FB2502 A3	Q2504 A2	R2506 A3	R2513 A2	R2520 B2	R2527 A2	R2539 A2	R2547 A3	R2554 B2	R2562 B2	
C2503 A2	C2512 A1	C2523 B3	C3057 B3	C5302 A1	C5400 B2	D2507 B2	FB2503 A3	Q2505 A2	R2507 A2	R2514 A2	R2521 A1	R2529 B3	R2540 A2	R2548 A2	R2555 B2	R2563 A2	
C2504 A2	C2513 A1	C2524 B2	C5015 A1	C5304 A1	C5401 B2	D2508 B2	FB2505 A3	Q2506 A2	R2508 A2	R2515 A2	R2522 A1	R2530 B3	R2541 A2	R2549 B2	R2557 B3	R257 A3	
C2505 A2	C2515 B3	C2525 A3	C5016 A1	C5305 A1	C5402 B2	D2509 B2	IC2501 A3	Q2509 B2	R2509 A2	R2516 A2	R2523 A2	R2531 B3	R2542 A2	R2550 A2	R2558 B3	R2602 A3	
C2506 A2	C2519 B3	C2526 B3	C5017 B1	C5306 A1	D2502 A1	D2510 B2	Q2501 A2	R2501 A2	R2510 A2	R2517 A2	R2524 A2	R2536 A2	R2543 A2	R2551 A2	R2559 B3	ZD2501 A1	
C2507 A2	C2520 A2	C2528 B3	C5018 B1	C5307 A1	D2504 B2	D2511 B2	Q2502 A2	R2502 A2	R2511 A2	R2518 A2	R2525 A1	R2537 A2	R2544 A2	R2552 B2	R2560 A1	ZD2502 A1	

1

2

3

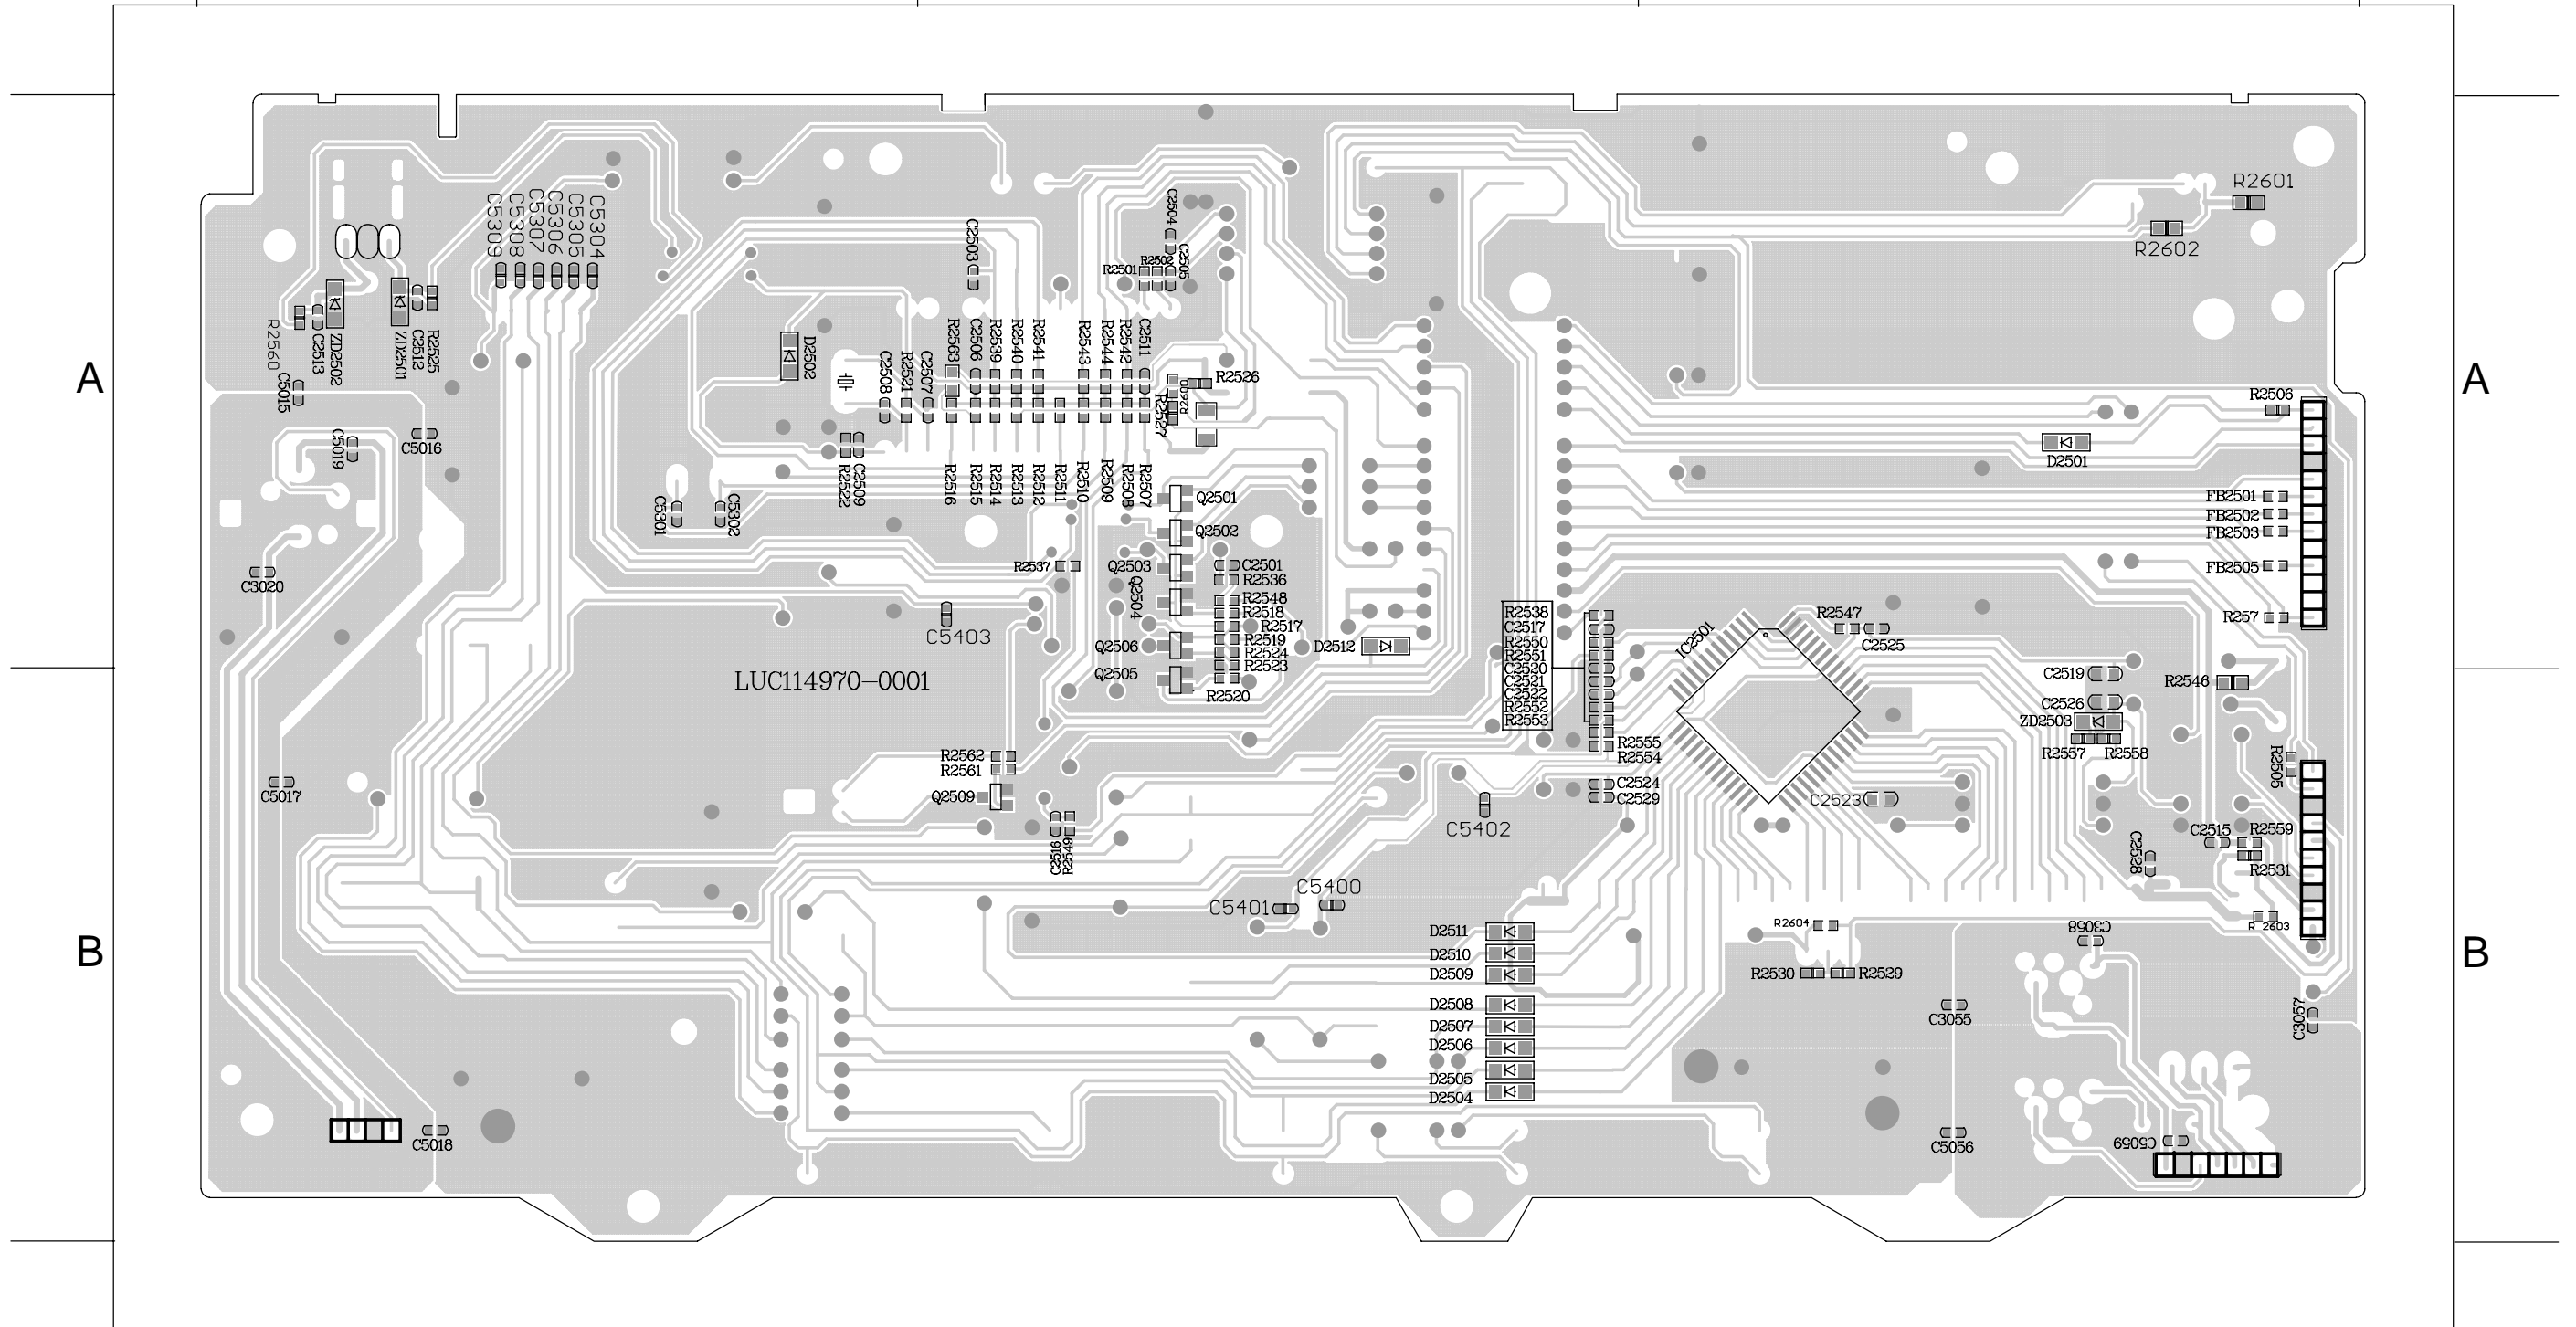

1

2

3

A

A

B

B

ELECTRICAL PARTS LIST - CONTROL BOARD

DP2501	9965 000 38410	VFD 38P
IC2501	9940 000 00907	IC 52 PIN TP6311QH
IC2502	9965 000 38412	IC 28P EM78P447SAPY-G
JK301	9940 000 01558	KARAOKE JACK 7P D3.5MM
JK302	9940 000 01558	KARAOKE JACK 7P D3.5MM
JK551	9940 000 01559	PHONE JACK D3.5MM 8P
LD2501	9940 000 00878	LED 3 DIA RED ROUND
LD2502	9940 000 01561	LED 3DIA SUPER RED LENS
Q2501	9940 000 00914	FET 2N7002LT1
Q2502	9940 000 00914	FET 2N7002LT1
Q2503	9940 000 00914	FET 2N7002LT1
Q2504	9940 000 00915	XISTR NPN 2SC1623
Q2505	9940 000 00915	XISTR NPN 2SC1623
Q2506	9940 000 00921	XISTR PNP 2SA812 HFE:200-400
Q2509	9940 000 00915	XISTR NPN 2SC1623
SN2501	9940 000 05259	IRT RECEIV. IRM-2638F4
SW801	9940 000 01556	DETECTOR SW. 1C-1P DS-1120B
SW802	9940 000 01556	DETECTOR SW. 1C-1P DS-1120B
TA2501	9940 000 00872	TACT SW 50MA 12V
TA2502	9940 000 00872	TACT SW 50MA 12V
TA2503	9940 000 00872	TACT SW 50MA 12V
TA2504	9940 000 00872	TACT SW 50MA 12V
TA2505	9940 000 00872	TACT SW 50MA 12V
TA2506	9940 000 00872	TACT SW 50MA 12V
TA2507	9940 000 00872	TACT SW 50MA 12V
TA2508	9940 000 00872	TACT SW 50MA 12V
TA2509	9940 000 00872	TACT SW 50MA 12V
TA2510	9940 000 00872	TACT SW 50MA 12V
TA2511	9940 000 00872	TACT SW 50MA 12V
TA2512	9940 000 00872	TACT SW 50MA 12V
TA2513	9940 000 00872	TACT SW 50MA 12V
TA2514	9940 000 00872	TACT SW 50MA 12V
TA2515	9940 000 00872	TACT SW 50MA 12V
TA2516	9940 000 00872	TACT SW 50MA 12V
TA2517	9940 000 00872	TACT SW 50MA 12V
TA2518	9940 000 00872	TACT SW 50MA 12V
TA2519	9940 000 00872	TACT SW 50MA 12V
TA2530	9940 000 00881	ENCODER
VR301	9940 000 01563	CNTL ROTARY 50KR
XL2501	9940 000 05352	X'TAL 4.194304MHZ -/ 10PPM
ZD2501	9965 000 38409	ZENER 6.8V 5% 0.5W
ZD2502	9965 000 38409	ZENER 6.8V 5% 0.5W
ZD2503	9940 000 05265	CHIP ZENER 3.9V 5% 0.5W

Note: Only these parts mentioned in the list are normal service parts.

ELECTRICAL PARTS LIST - KEY BOARD

TA280	9940 000 00872	TACT SW 50MA 12V
TA281	9940 000 00872	TACT SW 50MA 12V
TA282	9940 000 00872	TACT SW 50MA 12V
TA283	9940 000 00872	TACT SW 50MA 12V
TA284	9940 000 00872	TACT SW 50MA 12V

Note: Only these parts mentioned in the list are normal service parts.

ELECTRICAL PARTS LIST- SWITCH BOARD

SW801	9940 000 01556	DETECTOR SWITCH
SW802	9940 000 01556	DETECTOR SWITCH

Note: Only these parts mentioned in the list are normal service parts.

MAIN BOARD

ES8380 PHOENIX INTERNAL IC DIAGRAM


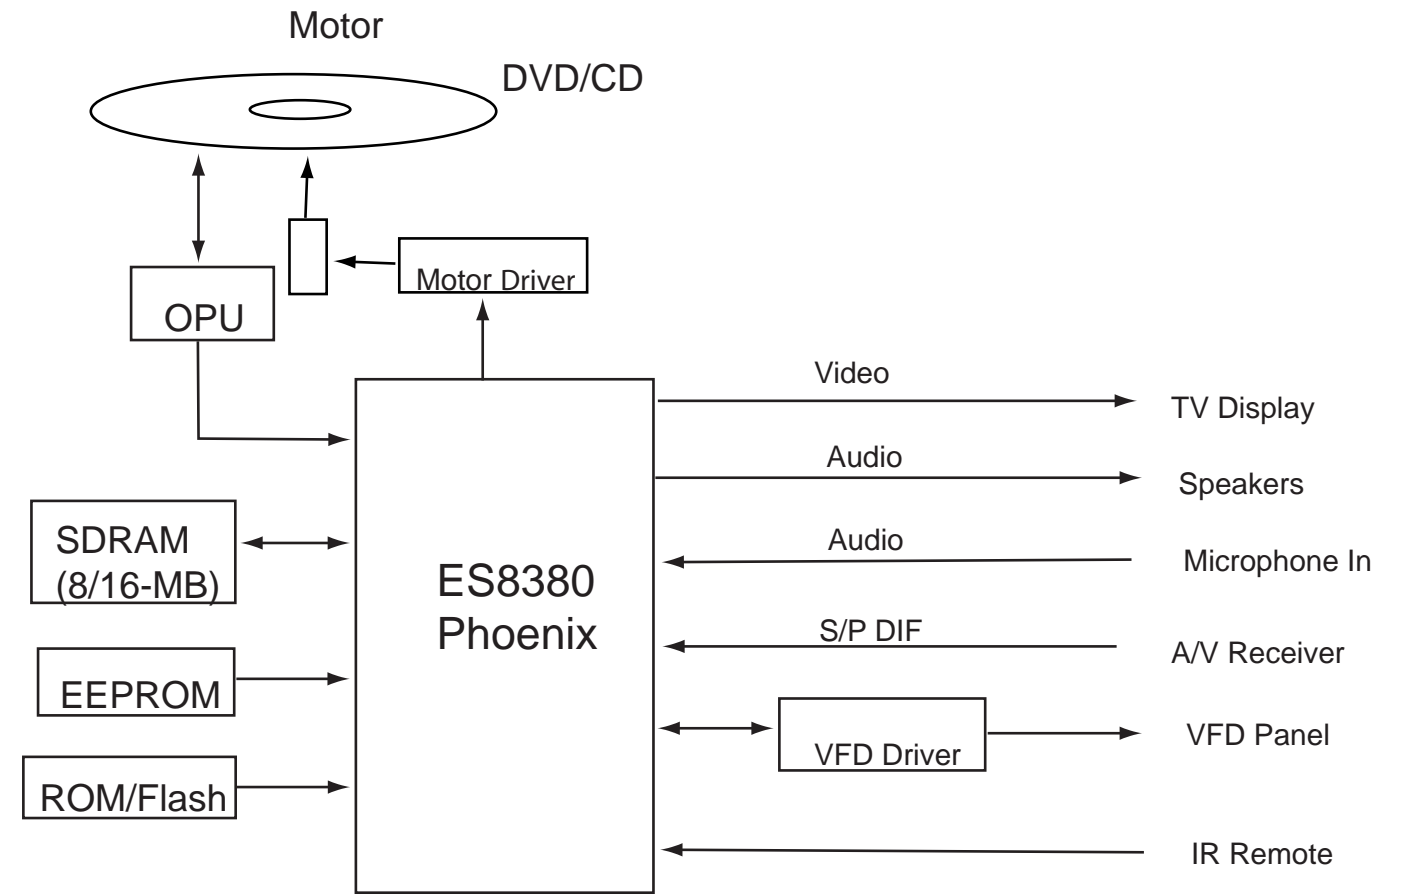


TABLE OF CONTENTS

INTERNAL IC DIAGRAM.....	6-1
Voltage List	6-2
Circuit Diagram Servo	6-3
Circuit Diagram Amplifier(Top Left)	6-4
Circuit Diagram Amplifier(Top Right)	6-5
Circuit Diagram Amplifier(Bottom Left)	6-6
Circuit Diagram Amplifier(Bottom Right)	6-7
PCB Layout Top View	6-8
PCB Layout Bottom View	6-9
Electrical Parts List	6-10

INTERNAL IC DIAGRAM-V5888S HSOP

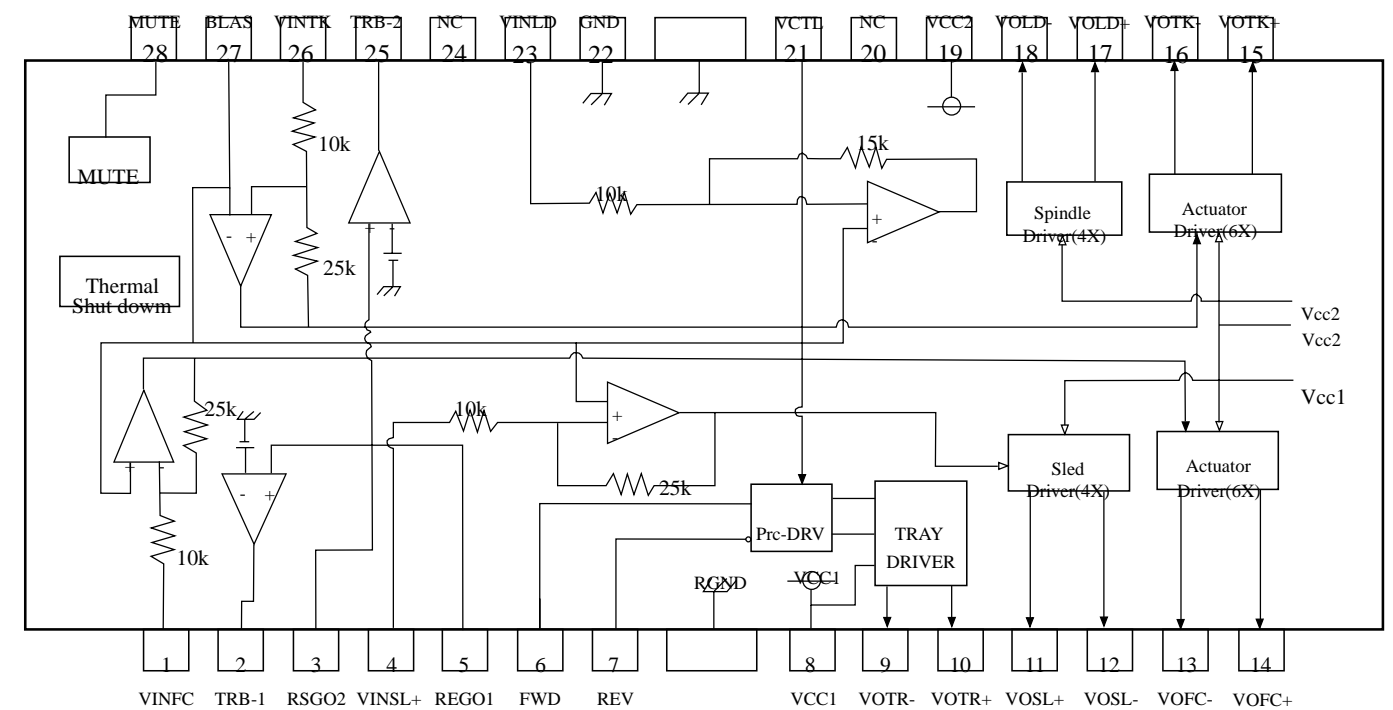


VOLTAGE

IC201																	
Pin NO	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17
Voltage	3.40	1.52	0.80	0.04	1.66	0.41	0.46	0.03	0.00	3.40	0.15	0.14	0.02	0.16	1.15	3.06	1.42
Pin NO	21	22	23	24	25	26	27	28	29	30	31	32	33	34	35	36	37
Voltage	3.40	3.26	0.00	3.40	2.00	0.14	1.20	0.40	0.80	1.20	1.00	1.10	0.78	0.82	0.00	3.40	1.00
Pin NO	41	42	43	44	45	46	47	48	49	50	51	52	53	54	55	56	57
Voltage	1.02	1.92	1.76	0.00	3.40	0.00	0.00	2.87	1.46	2.42	2.12	0.00	3.40	1.34	1.20	1.64	3.38
Pin NO	61	62	63	64	65	66	67	68	69	70	71	72	73	74	75	76	77
Voltage	3.40	1.37	0.00	0.50	0.00	1.42	1.95	3.30	1.60	1.83	1.72	0.00	3.48	0.00	0.71	0.34	3.39
Pin NO	81	82	83	84	85	86	87	88	89	90	91	92	93	94	95	96	97
Voltage	0.00	0.81	0.81	0.65	2.60	1.42	1.57	1.74	3.48	0.00	0.73	1.95	2.23	2.28	2.29	0.00	0.00
Pin NO	101	102	103	104	105	106	107	108	109	110	111	112	113	114	115	116	117
Voltage	0.66	1.08	1.07	3.40	0.00	0.00	0.00	0.87	0.70	3.40	0.04	0.00	0.00	0.87	1.86	1.80	1.70
Pin NO	121	122	123	124	125	126	127	128	129	130	131	132	133	134	135	136	137
Voltage	1.70	1.32	1.61	3.29	1.66	1.44	0.00	3.50	3.50	0.02	0.35	0.35	3.40	1.67	3.43	0.00	3.37
Pin NO	141	142	143	144	145	146	147	148	149	150	151	152	153	154	155	156	157
Voltage	1.23	1.28	1.61	1.66	1.62	1.59	0.05	0.12	0.20	0.12	0.00	0.05	3.30	3.30	0.87	0.90	3.38
Pin NO	161	162	163	164	165	166	167	168	169	170	171	172	173	174	175	176	177
Voltage	2.03	2.03	2.03	2.03	2.03	2.03	2.03	2.03	1.56	3.36	1.62	1.62	1.61	1.62	2.07	2.44	0.00
Pin NO	181	182	183	184	185	186	187	188	189	190	191	192	193	194	195	196	197
Voltage	0.00	1.10	3.34	1.90	1.86	1.45	0.00	3.42	1.20	3.43	1.42	1.30	1.15	1.18	0.00	1.42	4.09
Pin NO	201	202	203	204	205	206	207	208									
Voltage	4.09	3.43	5.00	3.23	1.59	1.44	1.60	0.00									
IC101																	
Pin NO	1	2	3	4	5	6	7	8									
Voltage	0.00	0.00	0.00	-11.95	0.00	0.00	0.00	13.32									
IC202																	
Pin NO	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17
Voltage	3.20	0.00	3.24	1.03	1.29	0.00	0.99	1.00	3.20	0.96	1.10	0.00	0.00	3.22	0.00	3.20	3.20
Pin NO	21	22	23	24	25	26	27	28	29	30	31	32	33	34	35	36	37
Voltage	0.00	0.14	0.00	0.00	0.00	1.50	3.20	0.00	1.51	1.48	1.61	0.00	0.00	0.04	0.13	0.00	0.00
Pin NO	41	42	43	44	45	46	47	48	49	50	51	52	53	54			
Voltage	0.00	1.10	3.23	1.07	1.10	0.00	0.90	0.74	3.20	1.10	1.12	0.00	1.60	0.00			
IC203																	
Pin NO	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17
Voltage	0.00	2.23	1.00	2.12	1.30	1.50	1.90	0.00	0.00	3.20	3.30	3.20	3.20	3.20	1.23	0.00	0.00
Pin NO	21	22	23	24	25	26	27	28	29	30	31	32	33	34	35	36	37
Voltage	1.93	1.66	1.60	1.58	1.64	0.00	0.00	1.00	1.27	1.38	1.17	1.20	1.22	1.00	1.13	3.20	1.30
Pin NO	41	42	43	44	45	46	47	48									
Voltage	1.40	1.29	1.80	0.00	1.60	0.00	0.00	0.00									
IC204																	
Pin NO	1	2	3	4	5	6	7	8									
Voltage	0	0	0	0	3.23	3.23	0	3.24									
IC205																	
Pin NO	1	2	3														
Voltage	0	3.24	3.23														
IC207																	
Pin NO	1	2	3	4	5	6	7	8	9	10	11	12	13	14			
Voltage	1.38	2.87	1.35	3.07	1.34	3.19	0.00	1.75	0.85	3.20	0.00	3.20	0.00	3.20			
IC211																	
Pin NO	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17
Voltage	0.00	0.12	1.07	1.38	4.96	0.12	1.24	0.91	3.75	0.00	4.75	0.12	1.32	1.80	3.90	4.07	1.32
IC212																	
Pin NO	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17
Voltage	0.00	0.13	1.07	1.40	0.00	3.70	1.25	0.89	4.30	0.00	4.41	3.70	1.35	1.79	3.37	3.37	1.39
IC213																	
Pin NO	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17
Voltage	0.05	0.13	1.04	1.38	0.13	3.68	1.20	0.92	0.13	0.00	4.40	3.51	1.35	1.72	3.51	3.51	1.34
IC220																	
Pin NO	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17
Voltage	4.43	0.06	1.48	0.06	1.32	0.03	1.80	0.05	1.38	0.00	4.89	0.80	0.08	1.20	4.93	1.37	4.98
IC221																	

IC501																	
Pin NO	1	2	3	4	5	6	7	8									
Voltage	0.00	0.00	0.00	-11.95	0.00	0.00	0.00	13.34									
IC502																	
Pin NO	1	2	3	4	5	6	7	8									
Voltage	2.29	4.97	3.22	0.00	5.00	2.30	2.30	2.30									
IC5201																	
Pin NO	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17
Voltage	12.41	3.57	3.57	1.62	4.96	0.08	1.05	0.01	0.01	3.37	0.01	3.37	3.37	0.08	4.96	0.08	12.43
Pin NO	21	22	23	24	25	26	27	28	29	30	31	32	33	34	35	36	
Voltage	29.50	14.80	0.00	0.00	14.70	29.00	26.00	25.80	28.70	14.00	0.00	0.00	13.50	0.00	24.90	12.38	
IC701																	
Pin NO	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	
Voltage	0.00	0.00	0.00	-9.39	0.00	0.00	4.45	0.00	0.00	0.60	0.00	0.00	7.94	0.00	0.00	0.00	
IC702																	
Pin NO	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	
Voltage	0.00	0.00	0.00	6.00	0.00	1.31	0.07	0.00	0.00	0.08	1.31	10.95	5.83	0.00	11.68	11.73	
IC703																	
Pin NO	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	
Voltage	0.00	0.00	0.00	-9.39	0.00	0.00	0.40	0.00	4.90	0.00	0.00	0.00	7.94	0.00	0.00	0.00	
IC704																	
Pin NO	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	
Voltage	0.00	0.00	0.00	-9.39	0.00	0.00	4.97	0.00	0.00	0.00	0.00	0.00	7.94	0.00	0.00	0.00	
IC705																	
Pin NO	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	
Voltage	0.00	3.68	0.13	4.90	4.45	0.00	4.94	0.00	0.00	0.00	0.00	0.00	4.98	0.00	4.98	4.98	
IC801																	
Pin NO	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17
Voltage	1.59	0.00	1.23	0.00	1.23	0.00	0.00	4.78	0.00	0.00	2.26	2.30	2.20	2.36	2.30	2.30	1.35
Pin NO	21	22	23	24	25	26	27	28									
Voltage	4.78	0.00	0.00	0.00	1.77	1.57	1.57	2.51									
IC804																	
Pin NO	1	2	3	4	5	6	7	8									
Voltage	0.01	9.30	4.78	3.50	3.50	4.80	0.00	0.00									
IC805																	
Pin NO	1	2	3	4	5	6	7	8									
Voltage	0.01	9.30	4.78	3.52	3.52	4.79	0.01	0.00									
Q101			Q3009			Q705			Q801								
Pin NO	1	2	3	Pin NO	1	2	3	Pin NO	1	2	3	Pin NO	1	2			
Voltage	12.41	12.42	13.21	Voltage	0.00	0.00	0.13	Voltage	0.00	0.08	0.08	Voltage	9.30	13.30			
Q202			Q301			Q706			Q805								
Pin NO	1	2	3	Pin NO	1	2	3	Pin NO	1	2	3	Pin NO	1	2			
Voltage	2.45	1.50	1.79	Voltage	0.00	0.00	0.00	Voltage	0.00	0.02	0.64	Voltage	3.23	0.06			
Q201			Q3013			Q707			Q806								
Pin NO	1	2	3	Pin NO	1	2	3	Pin NO	1	2	3	Pin NO	1	2			
Voltage	0.52	4.74	0.00	Voltage	0.68	0.01	0.00	Voltage	0.60	0.05	0.00	Voltage	2.02	1.88			
Q203			Q3020			Q708			Q408								
Pin NO	1	2	3	Pin NO	1	2	3	Pin NO	1	2	3	Pin NO	1	2			
Voltage	3.39	3.25	4.05	Voltage	0.00	4.93	0.22	Voltage	0.70	0.00	0.00	Voltage	0.60	0.05			
Q3001			Q304			Q709			Q409								
Pin NO	1	2	3	Pin NO	1	2	3	Pin NO	1	2	3	Pin NO	1	2			
Voltage	0.00	13.16	0.00	Voltage	1.66	13.23	1.19	Voltage	0.00	5.00	0.00	Voltage					


CIRCUIT DIAGRAM -MAIN SERVO

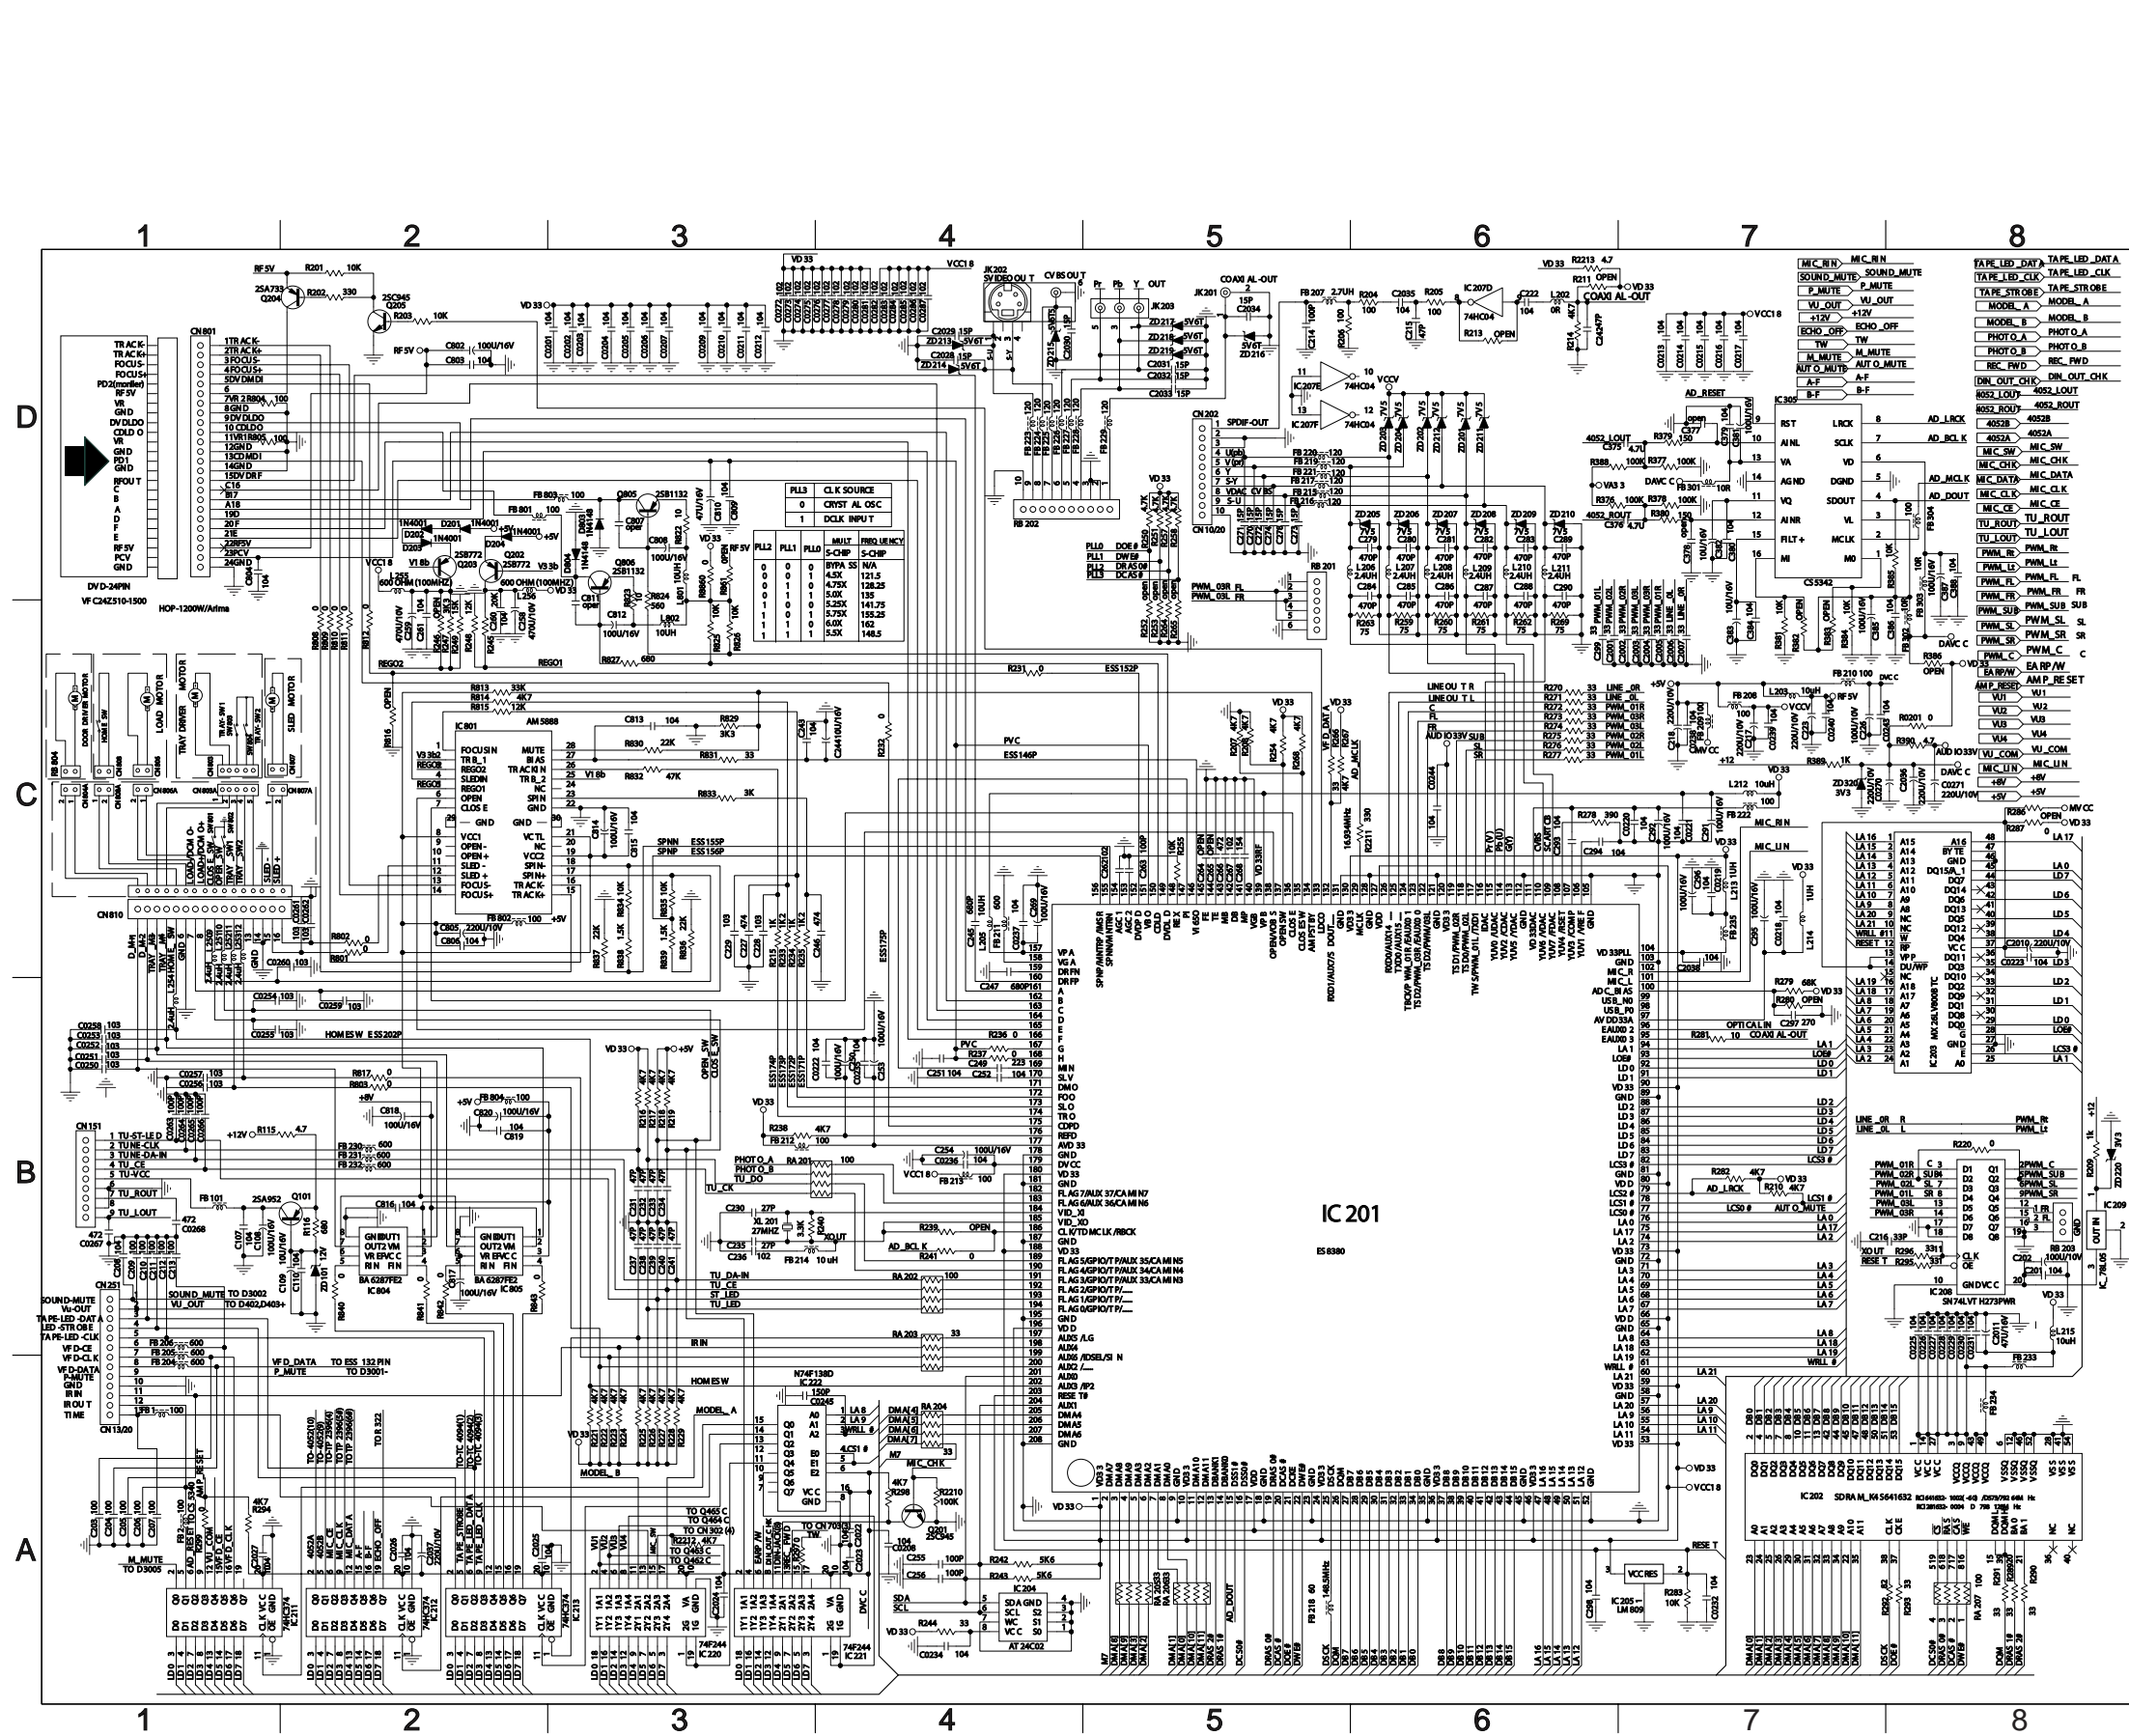

C0201	D3	C206	A1	C813	C3	L256	D2	R296	B8
C0202	D3	C207	A1	C814	C3	L801	C3	R297	A4
C0204	D3	C208	B1	C815	C3	L802	C3	R298	A4
C0205	D3	C209	B1	C816	B2	Q101	B2	R376	D6
C0206	D3	C210	B1	C817	B2	Q201	A4	R377	D7
C0207	D3	C211	B1	C818	B2	Q202	D2	R378	D7
C0209	D3	C212	B1	C819	B2	Q203	D2	R379	D7
C0210	D3	C213	B1	C820	B2	Q204	D2	R380	D7
C0211	D3	C214	D5	CN151	B1	Q205	D2	R381	C7
C0212	D3	C215	D6	CN251	B1	Q805	D3	R384	C7
C0213	D7	C217	C7	CN801	D1	Q806	D3	R385	D8
C0214	D7	C218	C7	D201	D2	R201	C8	R386	C8
C0215	D7	C222	D6	D202	D2	R115	B1	R388	D6
C0216	D7	C223	C7	D203	D2	R116	B2	R390	C8
C0217	D7	C226	C7	D204	D2	R201	D2	R801	C2
C0218	C7	C227	C3	D3002	B1	R202	D2	R802	C2
C0219	C7	C228	C3	D403	B1	R2023	D2	R803	B2
C0220	C7	C229	C3	D803	D3	R203	D2	R804	D1
C0221	C7	C230	B3	D804	D3	R204	D6	R805	D1
C0222	B4	C231	B3	FB1	A1	R205	D6	R808	C2
C0223	C8	C232	B3	FB101	B1	R206	D5	R809	C2
C0225	B8	C233	B3	FB2	A1	R207	C5	R810	C2
C0226	B8	C234	B3	FB204	A1	R208	C5	R811	C2
C0227	B8	C235	B3	FB205	B1	R209	B8	R812	C2
C0228	B8	C236	B3	FB206	B1	R210	B7	R813	C2
C0229	B8	C237	B3	FB207	D5	R2113	D6	R814	C2
C0230	B8	C238	B3	FB208	C7	R214	D6	R815	C2
C0231	B8	C239	B3	FB209	C7	R215	C3	R817	B2
C0232	A7	C240	B3	FB210	C7	R216	B3	R822	D3
C0234	A4	C241	B3	FB211	C4	R217	B3	R823	D3
C0235	B4	C242	D6	FB212	B3	R218	B3	R824	D3
C0236	B4	C243	C3	FB213	B4	R219	B3	R825	C3
C0237	C4	C244	C4	FB214	B3	R221	A3	R826	C3
C0238	C7	C245	C4	FB215	D5	R2210	A4	R827	C3
C0239	C7	C246	C4	FB216	D5	R2211	C6	R829	C3
C0240	C7	C247	B4	FB217	D5	R2212	A3	R830	C3
C0243	C8	C249	B4	FB218	A5	R2213	A3	R831	C3
C0244	C6	C250	B4	FB219	D5	R222	A3	R832	C3
C0250	B1	C251	B4	FB220	D5	R223	A3	R833	C3
C0251	B1	C252	B4	FB221	D5	R224	A3	R834	C3
C0252	B1	C253	B4	FB222	C7	R225	A3	R835	C3
C0253	B1	C254	B4	FB223	D4	R226	A3	R836	C3
C0254	B1	C255	A4	FB224	D4	R227	A3	R837	C3
C0255	B1	C256	A4	FB225	D4	R228	A3	R838	C3
C0256	B1	C258	C2	FB226	D4	R229	A3	R839	C3
C0257	B1	C259	C2	FB227	D4	R231	C4	R840	B2
C0258	B1	C260	C2	FB228	D4	R232	C4	R841	B2
C0259	B2	C261	C2	FB229	D5	R233	C3	R842	B2
C0261	C2	C262	C5	FB230	B2	R234	C3	R843	B2
C0262	C2	C263	C5	FB231	B2	R235	C3	R844	B7
C0270	C8	C266	C5	FB232	B2	R236	B4	R8860	D3
C0271	C8	C267	C5	FB233	A8	R237	B4	RA201	B3
C0272	D3	C268	C5	FB234	A8	R238	B3	RA202	B4
C0273	D3	C269	C4	FB235	C7	R240	B3	RA203	B4
C0274	D3	C270	D5	FB301	D7	R241	B4	RA204	A4
C0275	D3	C271	D5	FB302	C8	R242	A4	RA205	A5
C0276	D4	C272	D5	FB303	D8	R243	A4	RA206	A5
C0277	D4	C273	D5	FB304	D8	R244	A4	RA207	A8
C0278	D4	C274	D5	FB801	D2	R245	C2	RB201	D5
C0279	D4	C278	D5	FB802	C2	R247	C2	RB203	B8
C0280	D4	C279	D6	FB803	D3	R248	C2	XL201	B3
C0281	D4	C280	D6	FB804	B2	R249	C2	ZD101	B2
C0282	D4	C281	D6	IC201	B5	R250	D5	ZD101	D6
C0283	D4	C282	D6	IC202	A7	R251	D5	ZD202	D6
C0284	D4	C283	D6	IC203	B8	R252	D5	ZD203	D6
C0285	D4	C284	D6	IC204	A4	R253	D5	ZD204	D6
C0286	D4	C285	D6	IC205	A7	R254	C5	ZD205	D6
C107	B1	C286	D6	IC207	D5	R255	C5	ZD206	D6
C108	B1	C287	D6	IC208	B8	R257	D5	ZD207	D6
C109	B1	C288	D6	IC209	B8	R258	D5	ZD208	D6
C110	B2	C289	D6	IC211	A2	R259	C6	ZD209	D6
C2001	C7	C290	D6	IC212	A2	R260	C6	ZD10	D6
C2002	C7	C291	C7	IC213	A3	R261	C6	ZD11	D6
C2003	C7	C292	C7	IC220	A3	R262	C6	ZD12	D6
C2004	C7	C293	C6	IC221	A4	R263	C6	ZD13	D4
C2005	C7	C294	C6	IC222	A4	R264	D5	ZD14	D4
C2006	C7	C295	C7	IC305	D7	R265	D5	ZD15	D4
C2007	C7	C296	C7	IC801	C2	R266	C5	ZD16	D5
C201	B8	C297	B7	IC804	B2	R267	C5	ZD17	D5
C2010	B8	C298	A6	IC805	B2	R268	C5	ZD18	D5
C2011	B8	C299	C7	JK201	D5	R269	C6	ZD19	D5
C202	B8	C375	D6	JK202	D4	R270	C6	ZD20	B8
C2022	A4	C376	D6	JK203	D5	R271	C6	ZD320	C7
C2023	A4	C379	D7	L202	D6	R272	C6		
C2024	A3	C380	D7	L203	C7	R273	C6		
C2025	A2	C381	D7	L205	C4	R274	C6		
C2026	A2	C382	D7	L206	D6	R275	C6		
C2027	A1	C383	C7	L207	D6	R276	C6		
C2028	D4	C384	C7	L208	D6	R277	C6		
C2029	D4	C385	C7	L209	D6	R278	C6		
C203	A1	C386	C8	L210	D6	R279	B7		
C2030	D4	C387	D8	L211	D6	R281	B7		
C2031	D5	C388	D8	L212	C7	R282	B7		
C2032	D5	C802	D2	L213	C7	R283	A7		
C2033	D5	C803	D2	L214	C7	R287	C8		
C2034	D5	C804	D1	L215	B8	R289	A8		
C2035	D6	C805	C2	L250	C1	R290	A8		
C2036	C8	C806	C2	L251	C1	R291	A8		
C2037	A2	C808	D3	L252	C1	R292	A8		
C2038	C7	C809	D3	L253	C1	R293	A8		
C204	A1	C810	D3	L254	B1	R294	A1		
C205	A1	C812	C3	L255	D2	R295	B8		


CIRCUIT DIAGRAM-MAIN AMPLIFIER (TOP LEFT)

C101	D1	C307	D2	C325	D4	C405	C2	C426	D5	C442	C5	C460	B1	C5101	D6	C5202	D6	C5223	D7	C5244	C5	C5321	C7	C701	B2	C717	B2	C733	B4	C748	A2	C764	B2	D3001	C3	D3018	C4	D702	A1	FB403	D5	IC401	C2	L301	D1	L702	A5
C102	D1	C308	D2	C326	D4	C406	C2	C427	D5	C443	C5	C461	C1	C5102	D6	C5203	D6	C5224	D7	C5245	C6	C5322	C7	C702	B2	C718	B3	C734	A3	C749	A1	C765	B2	D3003	C3	D3019	B4	D703	A2	FB404	D5	IC402	D5	L302	D1	L703	B5
C103	D1	C309	D2	C327	D4	C407	B2	C428	D5	C444	C5	C462	C2	C5103	D6	C5204	C6	C5225	D7	C5246	C7	C5323	C7	C703	B2	C719	B2	C735	A3	C750	A5	C766	B1	D3004	B4	D302	D2	D704	A1	FB405	D5	IC403	C5	L501	B8	Q3001	C4
C104	C1	C310	D3	C327	D4	C408	C2	C429	D5	C445	C5	C5001	B8	C5104	D6	C5205	C6	C5227	D7	C5303	C6	C5327	C7	C704	B2	C720	B3	C736	A3	C751	A5	C767	B1	D3005	C3	D303	D3	D705	A1	FB406	D5	IC404	C1	L502	B8	Q3002	C4
C105	D2	C311	D2	C328	D4	C409	C2	C430	D5	C446	C5	C5002	B8	C5105	D6	C5206	C6	C523	B8	C5304	C6	C5330	C7	C705	B1	C721	B3	C737	A3	C752	A5	C821	B7	D3006	C3	D404	B3	D706	A2	FB407	D5	IC501	B7	L503	B8	Q3003	C4
C106	D2	C312	D2	C329	D4	C410	C2	C431	D5	C447	C5	C501	A6	C511	B7	C5207	C6	C5230	D7	C5305	C6	C5332	C7	C706	B1	C722	B3	C738	A3	C753	A5	CN201	C5	D3007	C3	D405	B3	D707	A2	FB408	D5	IC502	B7	L5105	C8	Q3004	C4
C3001	C3	C313	D3	C360	C1	C411	C3	C432	D5	C448	D5	C502	B6	C512	B7	C5208	C7	C5232	D7	C5306	C6	C5333	C7	C707	B2	C723	B3	C739	A3	C754	A5	CN301	D1	D3008	C3	D406	C3	D708	A2	FB409	C1	IC5201	D6	L5201	C7		
C3002	B5	C315	D3	C361	C1	C412	C3	C433	D5	C451	C1	C5021	B8	C513	B7	C5209	C7	C5233	D7	C5307	C6	C5334	C7	C708	B2	C724	B3	C740	A3	C755	A5	CN5003	B8	D3009	C3	D407	C3	D709	B4	FB410	C1	IC5301	C6	L5202	D7		
C3003	B5	C316	D3	C369	C2	C413	C3	C434	C4	C452	B1	C503	B6	C514	B8	C521	B8	C5234	D7	C5308	C7	C5335	C7	C709	A1	C725	B3	C741	A3	C756	A5	CN501	B8	D301	D2	D408	C3	D710	B4	FB411	B6	IC701	B2	L5203	D7		
C3006	C4	C317	D3	C370	C2	C414	C3	C435	C4	C453	B2	C504	B6	C515	B8	C5213	D7	C5235	D7	C5309	C7	C5336	C8	C710	A2	C726	B3	C742	A3	C757	A5	CN701	B1	D3010	C3	D409	C2	D711	B5	FB5010	B8	IC702	B3	L5204	D7		
C301	D1	C319	D3	C371	C2	C420	D4	C436	C4	C454	B3	C505	A6	C516	B8	C5214	D7	C5236	C8	C5313	C7	C5338	C8	C711	A2	C727	B3	C743	A3	C758	B5	CN702	B1	D3011	C3	D410	C2	D713	A4	FB5201	C7	IC703	A3	L5301	C7		
C302	D1	C320	D3	C372	C2	C421	D4	C437	C4	C455	B3	C506	B6	C517	B8	C5216	D7	C5238	C8	C5314	C7	C5340	B7	C712	B3	C728	B3	C744	A2	C759	B6	CN703	A6	D3012	B5	D411	C3	D714	B6	FB5301	C7	IC704	B4	L5302	C7		
C303	D1	C321	D3	C401	C2	C422	D4	C438	C4	C456	B3	C507	B7	C518	B8	C5217	D7	C5240	C7	C5316	C7	C5341	C7	C713	B2	C729	B3	C745	A2	C760	A7	CN704	A7	D3013	B5	D5009	B5	FB3001	B7	IC101	D1	IC705	B5	L5303	C7		
C304	D1	C322	D4	C402	C1	C423	D4	C439	C5	C457	C2	C508	B7	C519	B8	C5219	D7	C5241	D7	C5317	C7	C5342	C7	C714	B3	C730	B4	C7450	A3	C761	A4	CN705	A7	D3015	B4	D5010	C4	FB3002	B7	IC301	D2	JK301	C1	L5304	C7		
C305	D2	C323	D4	C403	C2	C424	D4	C440	C5	C458	C3	C509	B7	C520	B8	C522	A8	C5242	D7	C5319	C7	C5343	C7	C715	B3	C731	B4	C746	A1	C762	A4	CN706	A7	D3016	B4	D5011	C4	FB401	D5	IC302	D4	JK401	D6	L5305	C8		
C306	D2	C324	D4	C404	C2	C425	D4	C441	D5	C459	B1	C510	B7	C5201	D6	C5222	D7	C5243	D7	C5320	C7	C5344	C5	C716	B2	C732	B4	C747	A1	C763	B2	CN910	A8	D3017	C4	D701	A1	FB402	D5	IC304	C1	JK501	C8	L701	B2		

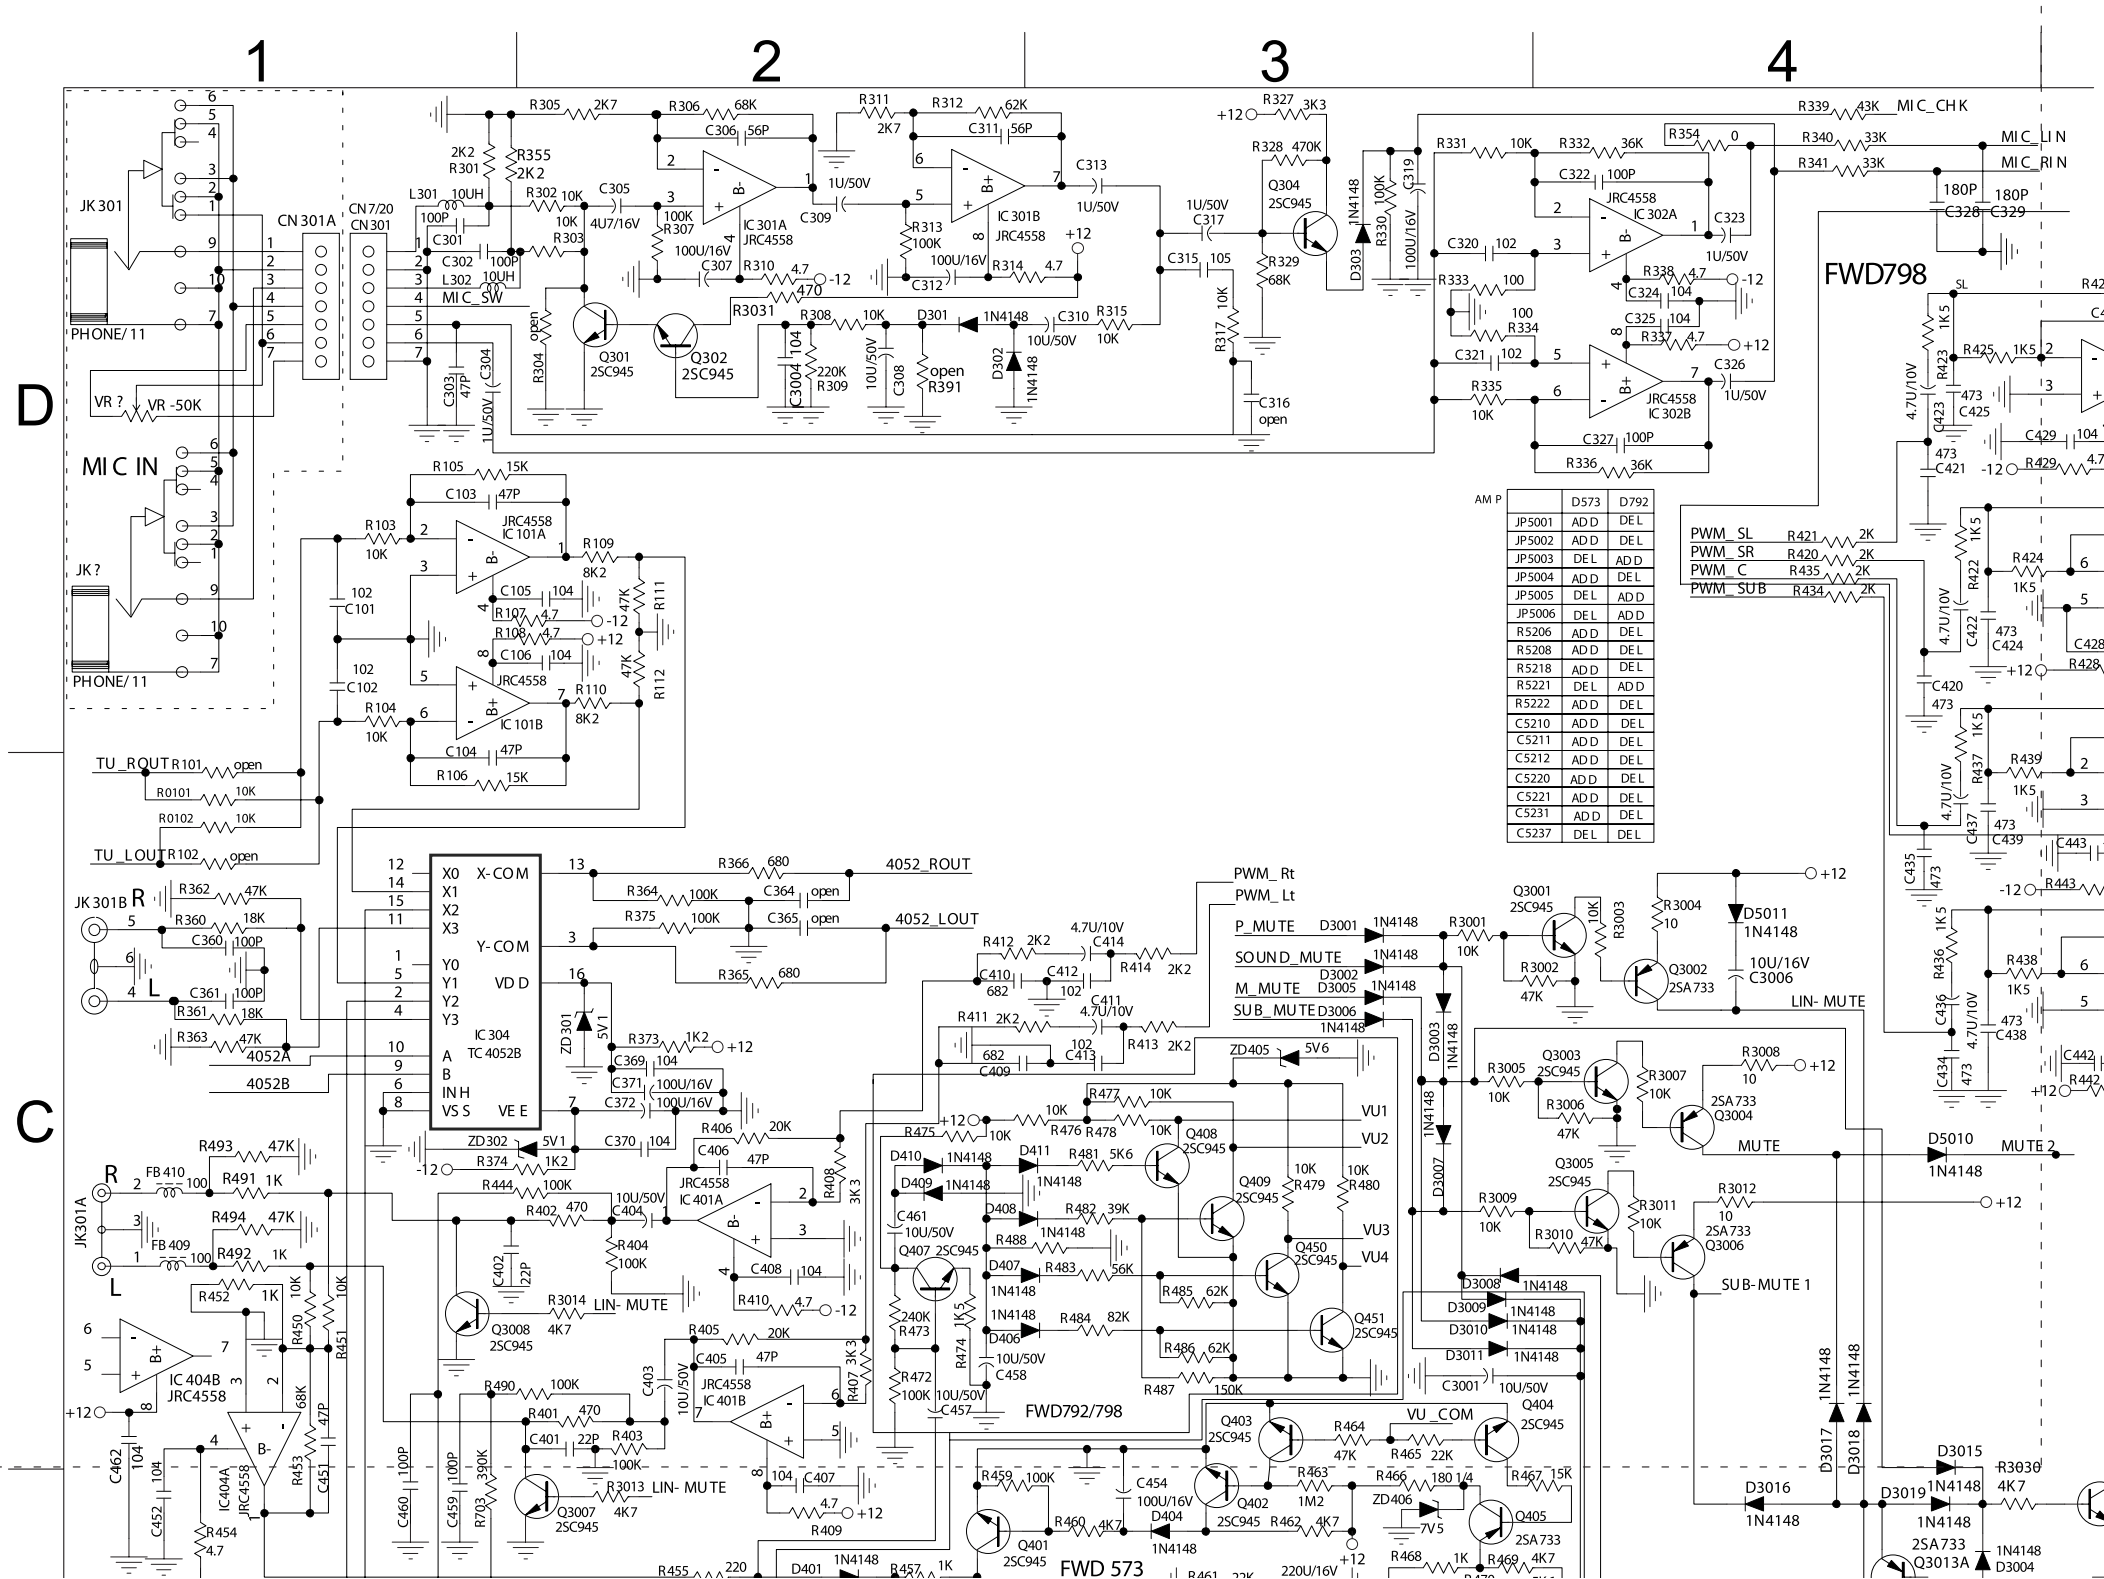

CIRCUIT DIAGRAM -MAIN AMPLIFIER (TOP RIGHT)

Q3005	C4	Q409	C3	Q709	A4	R108	D2	R3011	C4	R3031	D2	R328	D3	R360	C1	R407	C2	R428	D5	R444	C2	R475	C2	R494	C1	R510	B7	R521	A8	R5303	C6	R5324	C8	R7102	B6	R717	B3	R733	B3	R749	A3	R765	A2	R781	A4	ZD405	C3
Q3006	C4	Q450	C3	Q710	B5	R109	D2	R3012	C4	R305	D2	R329	D3	R361	C1	R408	C2	R429	D5	R445	C5	R476	C3	R5001	B8	R511	B7	R5210	D7	R5304	C6	R5325	C8	R7103	A6	R718	B3	R734	B3	R750	A3	R766	A2	R782	A4	ZD406	B3
Q3007	B2	Q451	C3	Q711	B5	R110	D2	R3013	B2	R306	D2	R330	D3	R362	C1	R409	B2	R430	D5	R446	C5	R477	C3	R5004	B8	R512	B7	R5211	D7	R5305	C7	R5326	C8	R7104	A6	R719	B2	R735	B4	R751	A3	R767	A2	R783	A4	ZD501	A8
Q3008	C1	Q5001	B8	Q713	B5	R111	D2	R3014	C2	R307	D2	R331	D3	R363	C1	R410	C2	R431	D5	R447	C5	R478	C3	R5005	B8	R513	B7	R5212	D7	R5306	C7	R5327	C8	R7105	A6	R720	B2	R736	B4	R752	A3	R768	A2	R784	B5	ZD701	A2
Q3009	C5	Q5002	B8	Q714	B5	R112	D2	R3015	C5	R308	D2	R332	D4	R364	C2	R411	C3	R432	D5	R448	D5	R479	C3	R5006	B8	R514	B7	R5215	D6	R5310	C7	R701	B1	R7106	A6	R721	B3	R737	B4	R753	A3	R769	A3	R785	B5	ZD703	A4
Q301	D2	Q501	B7	Q716	B6	R3001	C3	R3016	C5	R309	D2	R333	D3	R365	C2	R412	C2	R433	D5	R450	C1	R480	C3	R501	B6	R515	B7	R5216	D6	R5311	C7	R7013	B3	R7107	A6	R722	B3	R738	B4	R754	A1	R770	A3	R786	B5	ZD801	B7
Q3010	C5	Q502	B8	Q717	B6	R3002	C4	R3017	D5	R310	D2	R334	D3	R366	C2	R413	C3	R434	D4	R451	C1	R483	C3	R5016	B8	R516	B8	R5217	D6	R5312	C7	R702	B1	R7108	A6	R723	B2	R739	B4	R755	A1	R771	A4	R791	B5	ZD802	B7
Q3011	D5	Q503	B8	Q718	B5	R3003	C4	R3018	D5	R311	D2	R335	D3	R373	C2	R414	C3	R435	D4	R452	C1	R484	C3	R5017	B7	R517	B8	R5219	C5	R5313	C7	R703	B1	R7109	A6	R724	B3	R740	B4	R756	A2	R772	A4	R792	B5		
Q3012	D5	Q701	B1	Q801	B7	R3004	C4	R3019	B4	R312	D2	R336	D4	R374	C2	R420	D4	R436	C4	R453	C1	R485	C3	R502	B6	R518	B8	R5220	D6	R5314	C6	R704	B1	R711	B2	R725	B2	R741	B4	R757	A2	R773	A4	R793	B5		
Q3013	B4	Q702	A2	R0101	C1	R3005	C4	R302	D2	R313	D2	R337	D4	R375	C2	R421	D4	R437	D4	R454	B1	R486	C3	R503	B6	R520	B8	R5221	D6	R5315	C6	R705	B1	R712	B2	R726	B3	R742	B4	R758	A1	R774	A4	R795	B5		
Q302	D2	Q703	A1	R0102	C1	R3006	C4	R3020	B4	R314	D2	R338	D4	R401	C2	R422	D4	R438	C4	R455	B2	R487	C3	R504	B6	R5201	D6	R5225	C7	R5316	C6	R706	B1	R7120	A6	R727	B3	R743	B4	R759	A1	R775	A4	R798	B5		
Q3020	B5	Q704	A1	R103	D1	R3007	C4	R3021	B4	R315	D3	R339	D4	R402	C2	R423	D4	R439	C4	R456	B2	R489	C5	R505	B7	R5202	D6	R5226	D7	R5319	C5	R707	B1	R7122	A4	R728	B3	R744	B4	R760	A1	R776	A4	R799	B6		
Q304	D3	Q705	A2	R104	D1	R3008	C4	R3022	B7	R317	D3	R340	D4	R403	C2	R424	D4	R440	C5	R471	B3	R490	C2	R506	B7	R5203	D6	R5227	D7	R5320	C7	R708	B1	R713	A1	R729	B3	R745	B4	R761	A1	R777	A4	R844	B7		
Q401	B2	Q706	A2	R105	D1	R3009	C3	R3023	B4	R3203	D3	R341	D4	R404	C2	R425	D4	R441	D5	R472	C2	R491	C1	R507	B7	R5204	C6	R5228	D7	R5321	C7	R709	B1	R714	A2	R730	B3	R746	A3	R762	A2	R778	A4	T701	A1		
Q407	C2	Q707	A3	R106	C1	R301	D1	R303	D2	R322	D4	R354	D4	R405	C2	R426	D5	R442	C5	R473	C2	R492	C1	R508	B7	R5205	C7	R5301	C6	R5322	C7	R710	B2	R715	A2	R731	B3	R747	A3	R763	A2	R779	A4	ZD301	C2		
Q408	C3	Q708	A4	R107	D2	R3010	C4	R3030	B4	R327	D3	R355	D2	R406	C2	R427	D5	R443	C5	R474	C2	R493	C1	R509	A7	R5207	D7	R5302	C6	R5323	C7	R7101	B6	R716	B2	R732	B3	R748	A3	R764	A2	R780	A4	ZD302	C2		

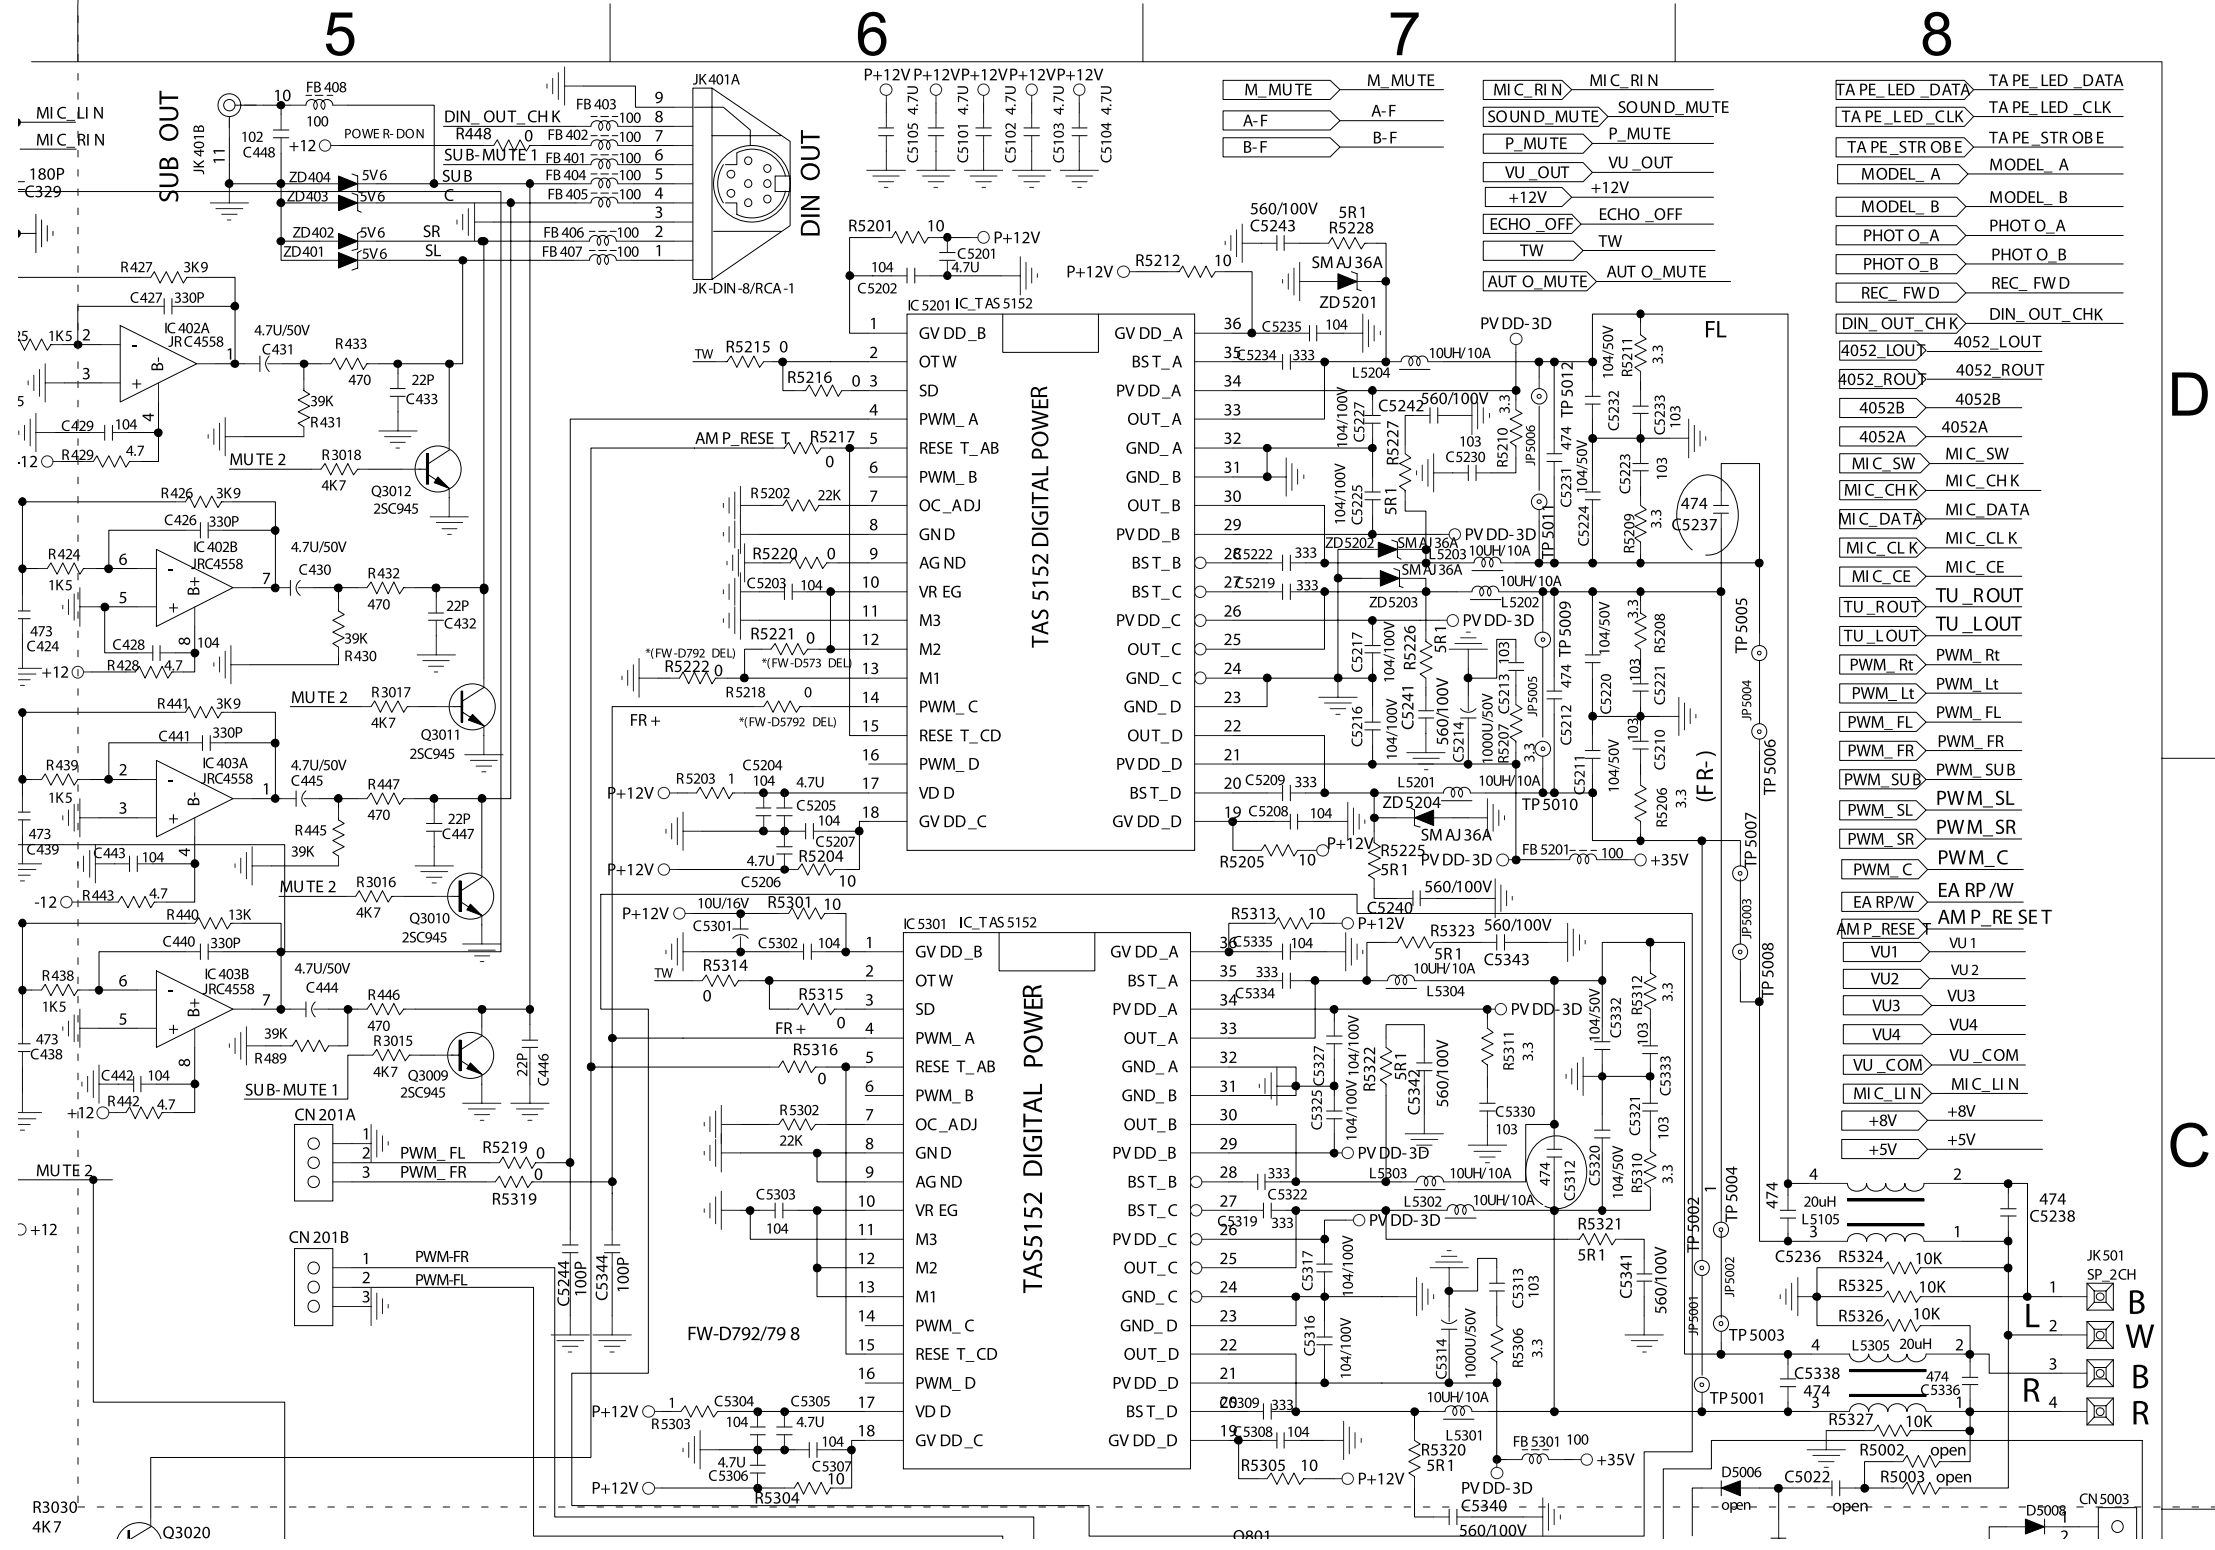


D


C

B
B
R

CIRCUIT DIAGRAM -MAIN AMPLIFIER (BOTTOM LEFT)

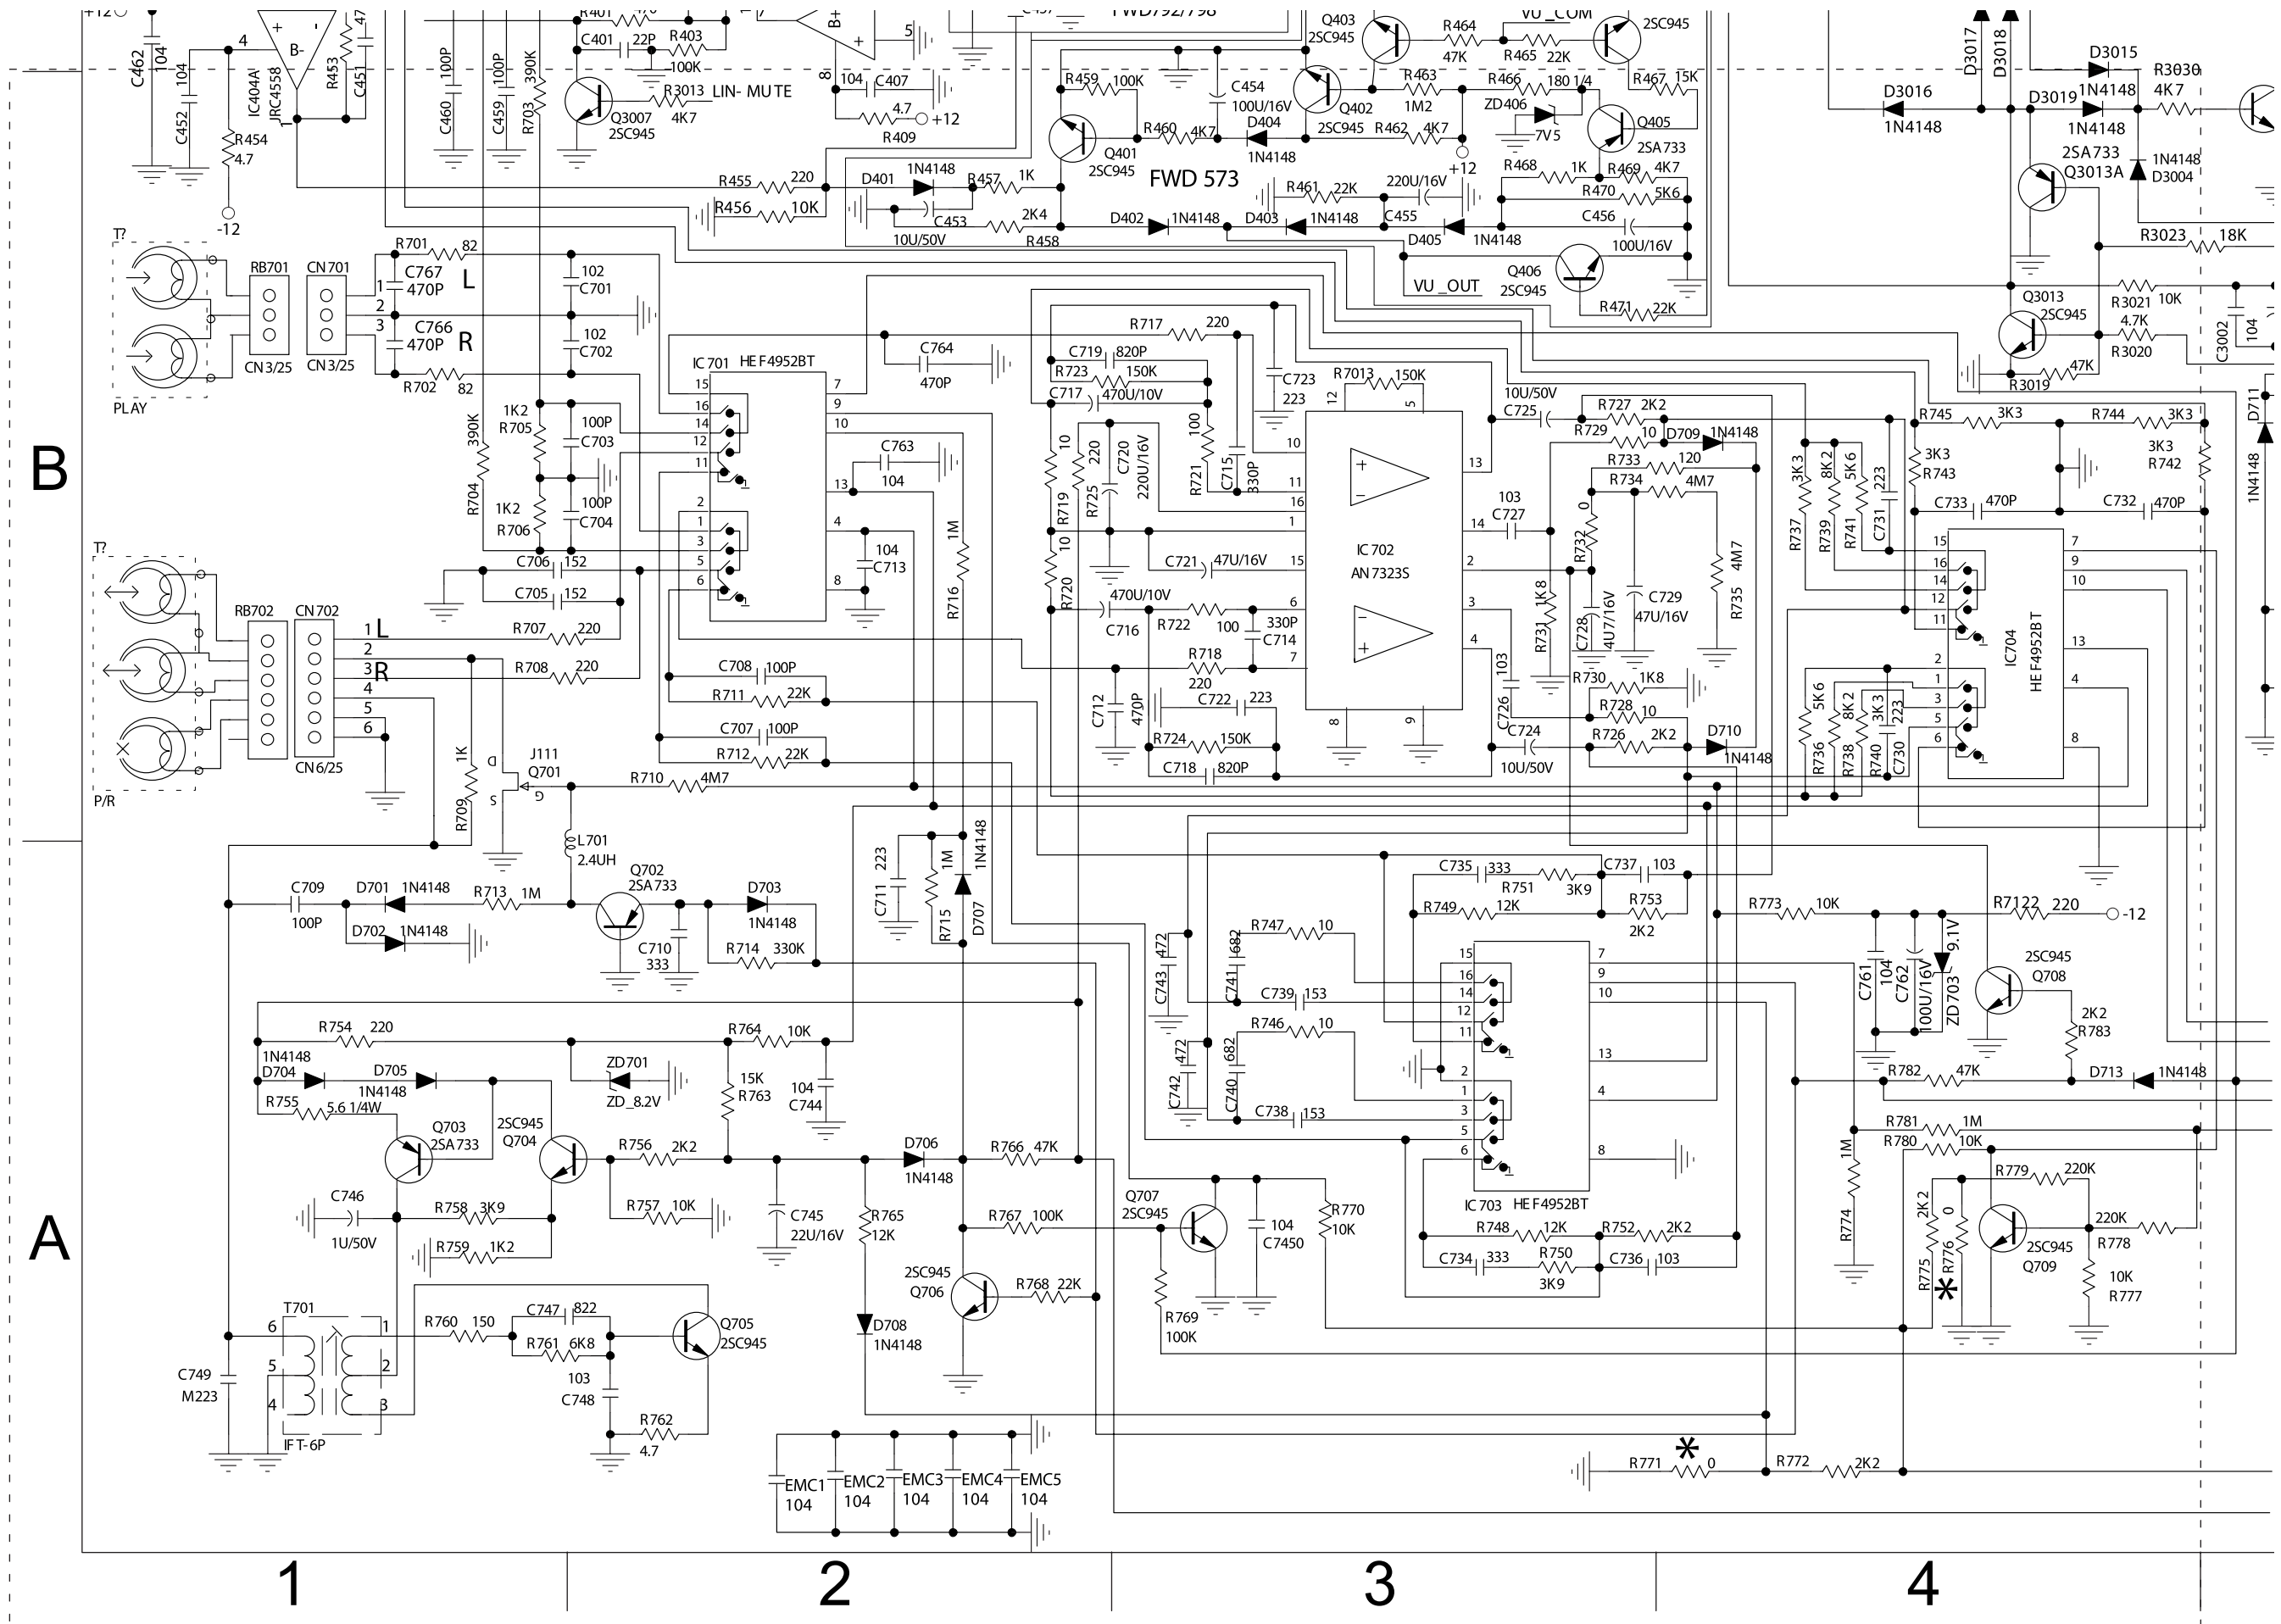

CIRCUIT DIAGRAM -MAIN AMPLIFIER (BOTTOM RIGHT)

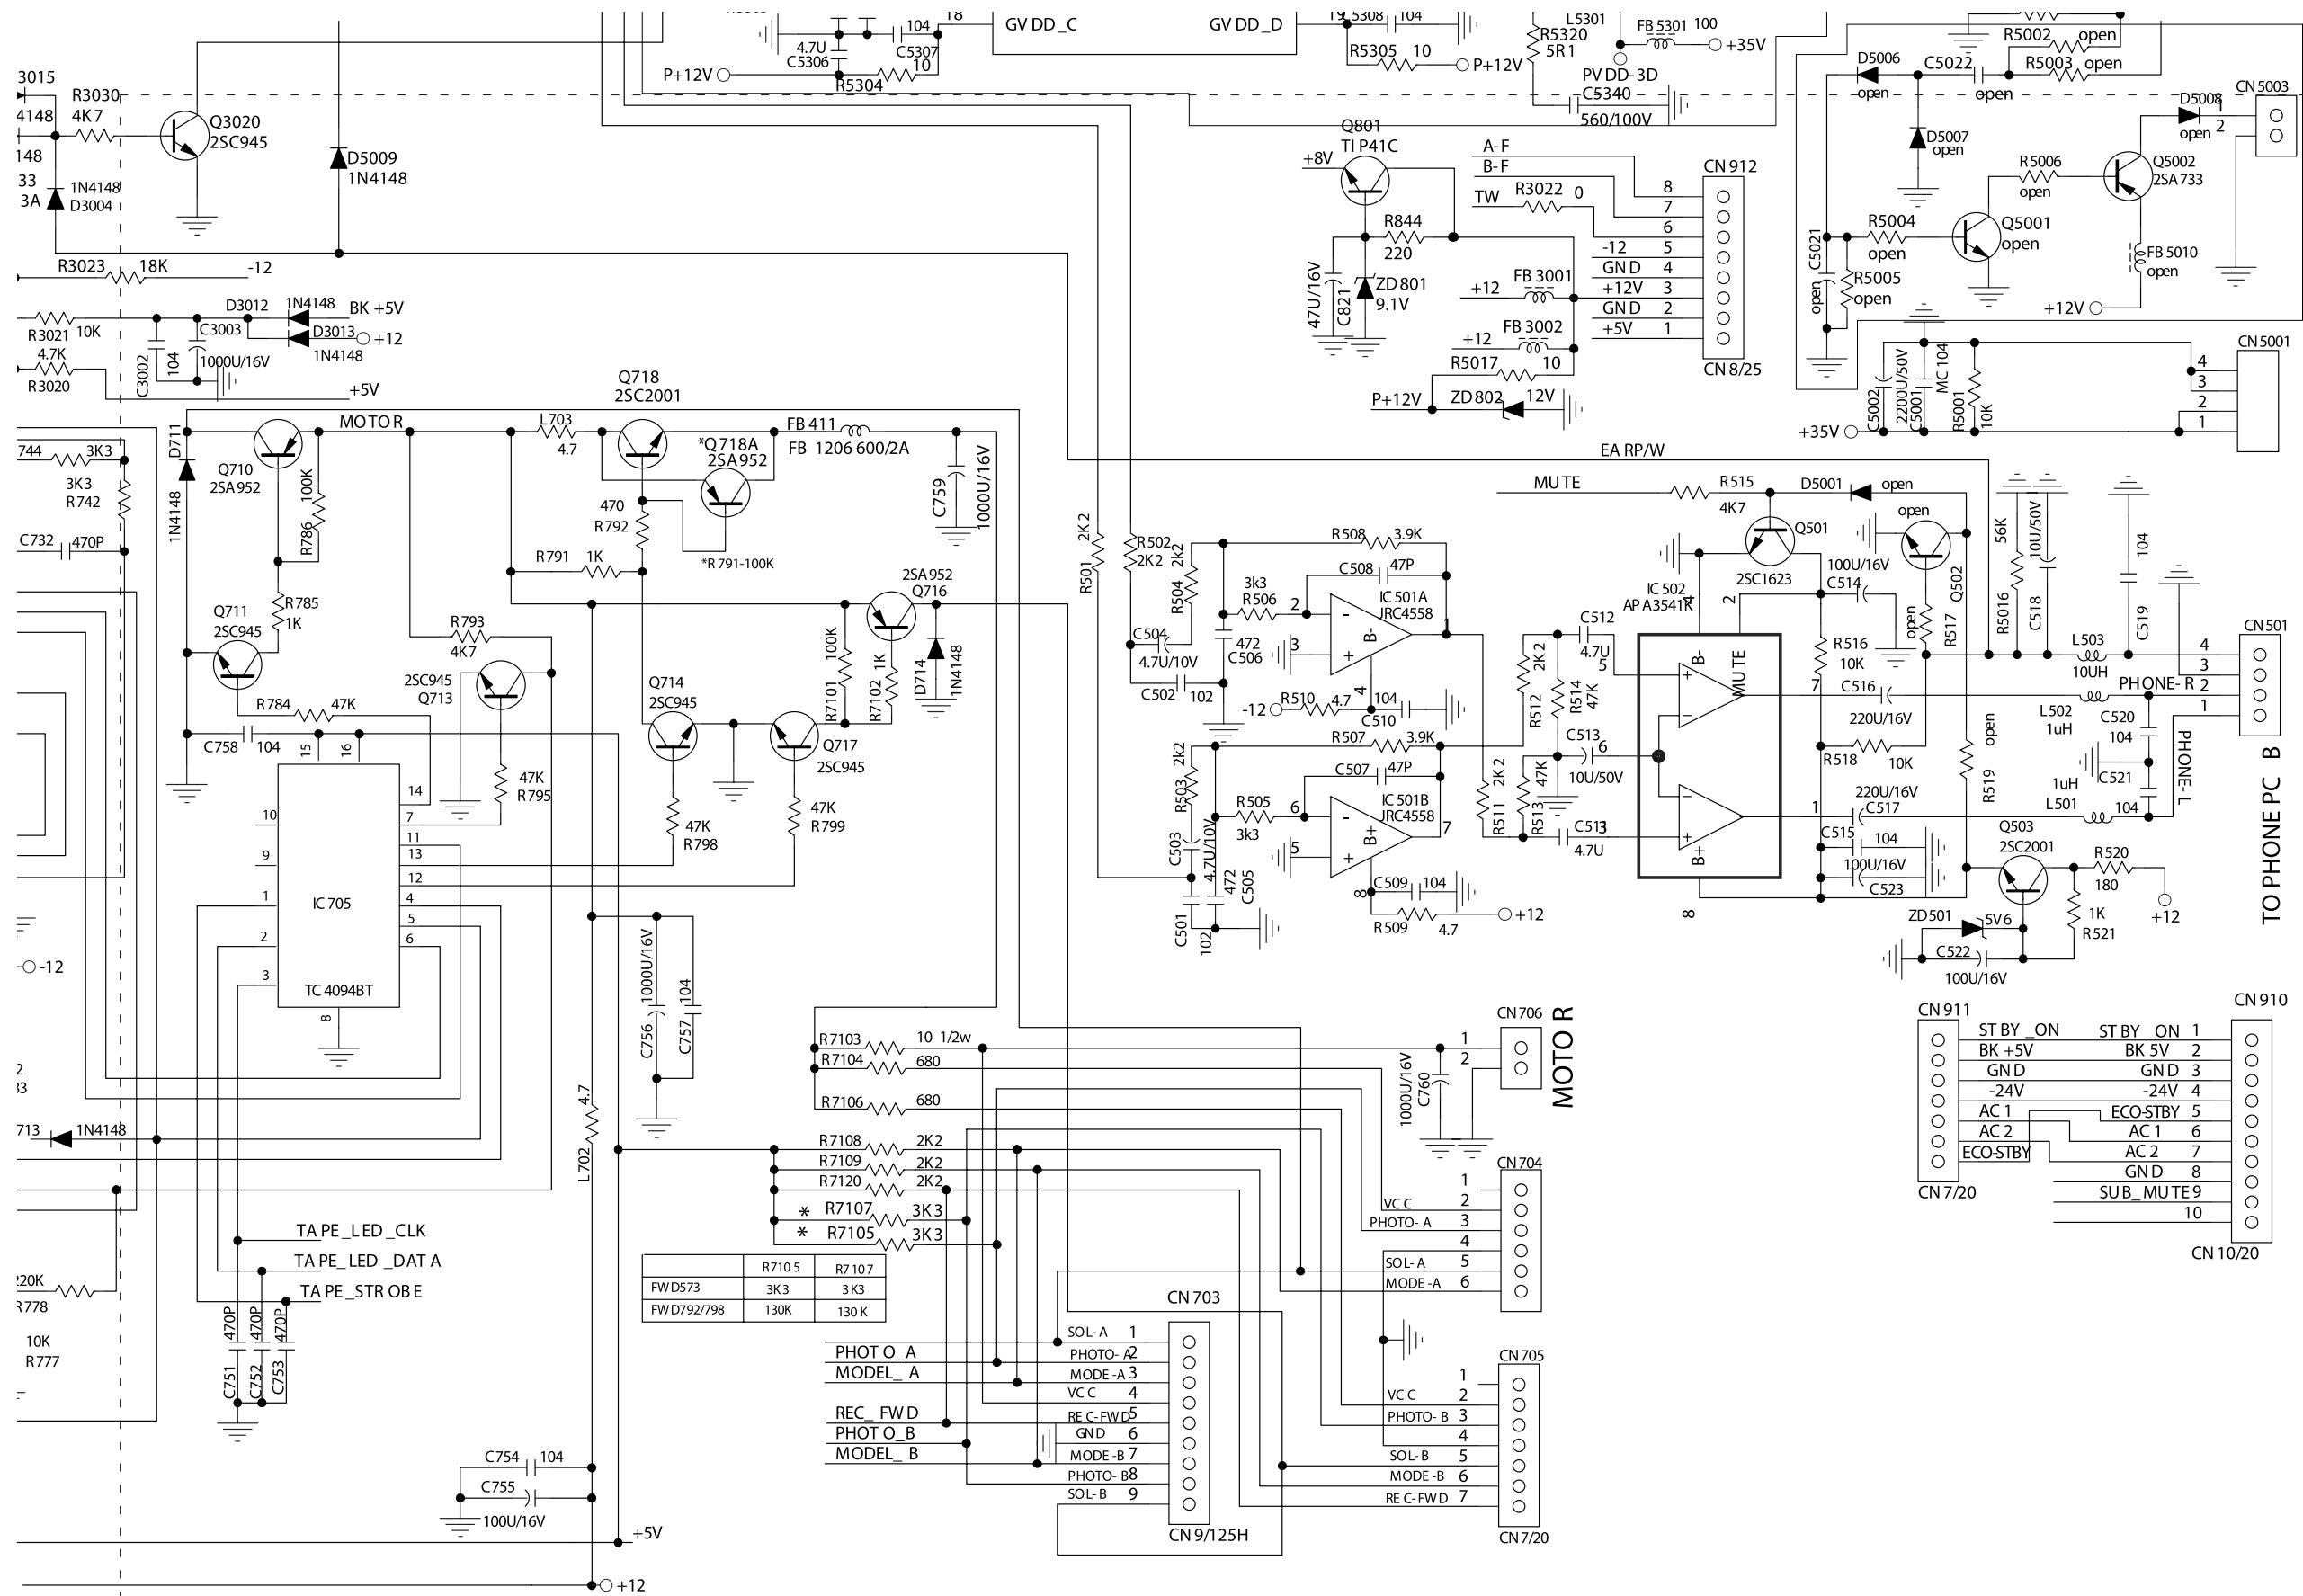

B

A

5

6

7


8

R7105	R7107
FWD573	3K3
FWD792/798	130K

PHOTO_A	SOL-A	1
MODEL_A	PHOTO-A2	2
	MODE-A	3
	VC C	4
REC_FWD	RE C-FWD	5
PHOTO_B	GND	6
MODEL_B	MODE-B	7
	PHOTO-B8	8
	SOL-B	9

CN 911	STBY_ON	STBY_ON 1	
	BK +5V	BK 5V	2
	GND	GND	3
	-24V	-24V	4
	AC 1	ECO-STBY	5
	AC 2	AC 1	6
	ECO-STBY	AC 2	7
		GND	8
		SUB_MUTE	9
			10

PCB LAYOUT: MAIN (TOP) VIEW

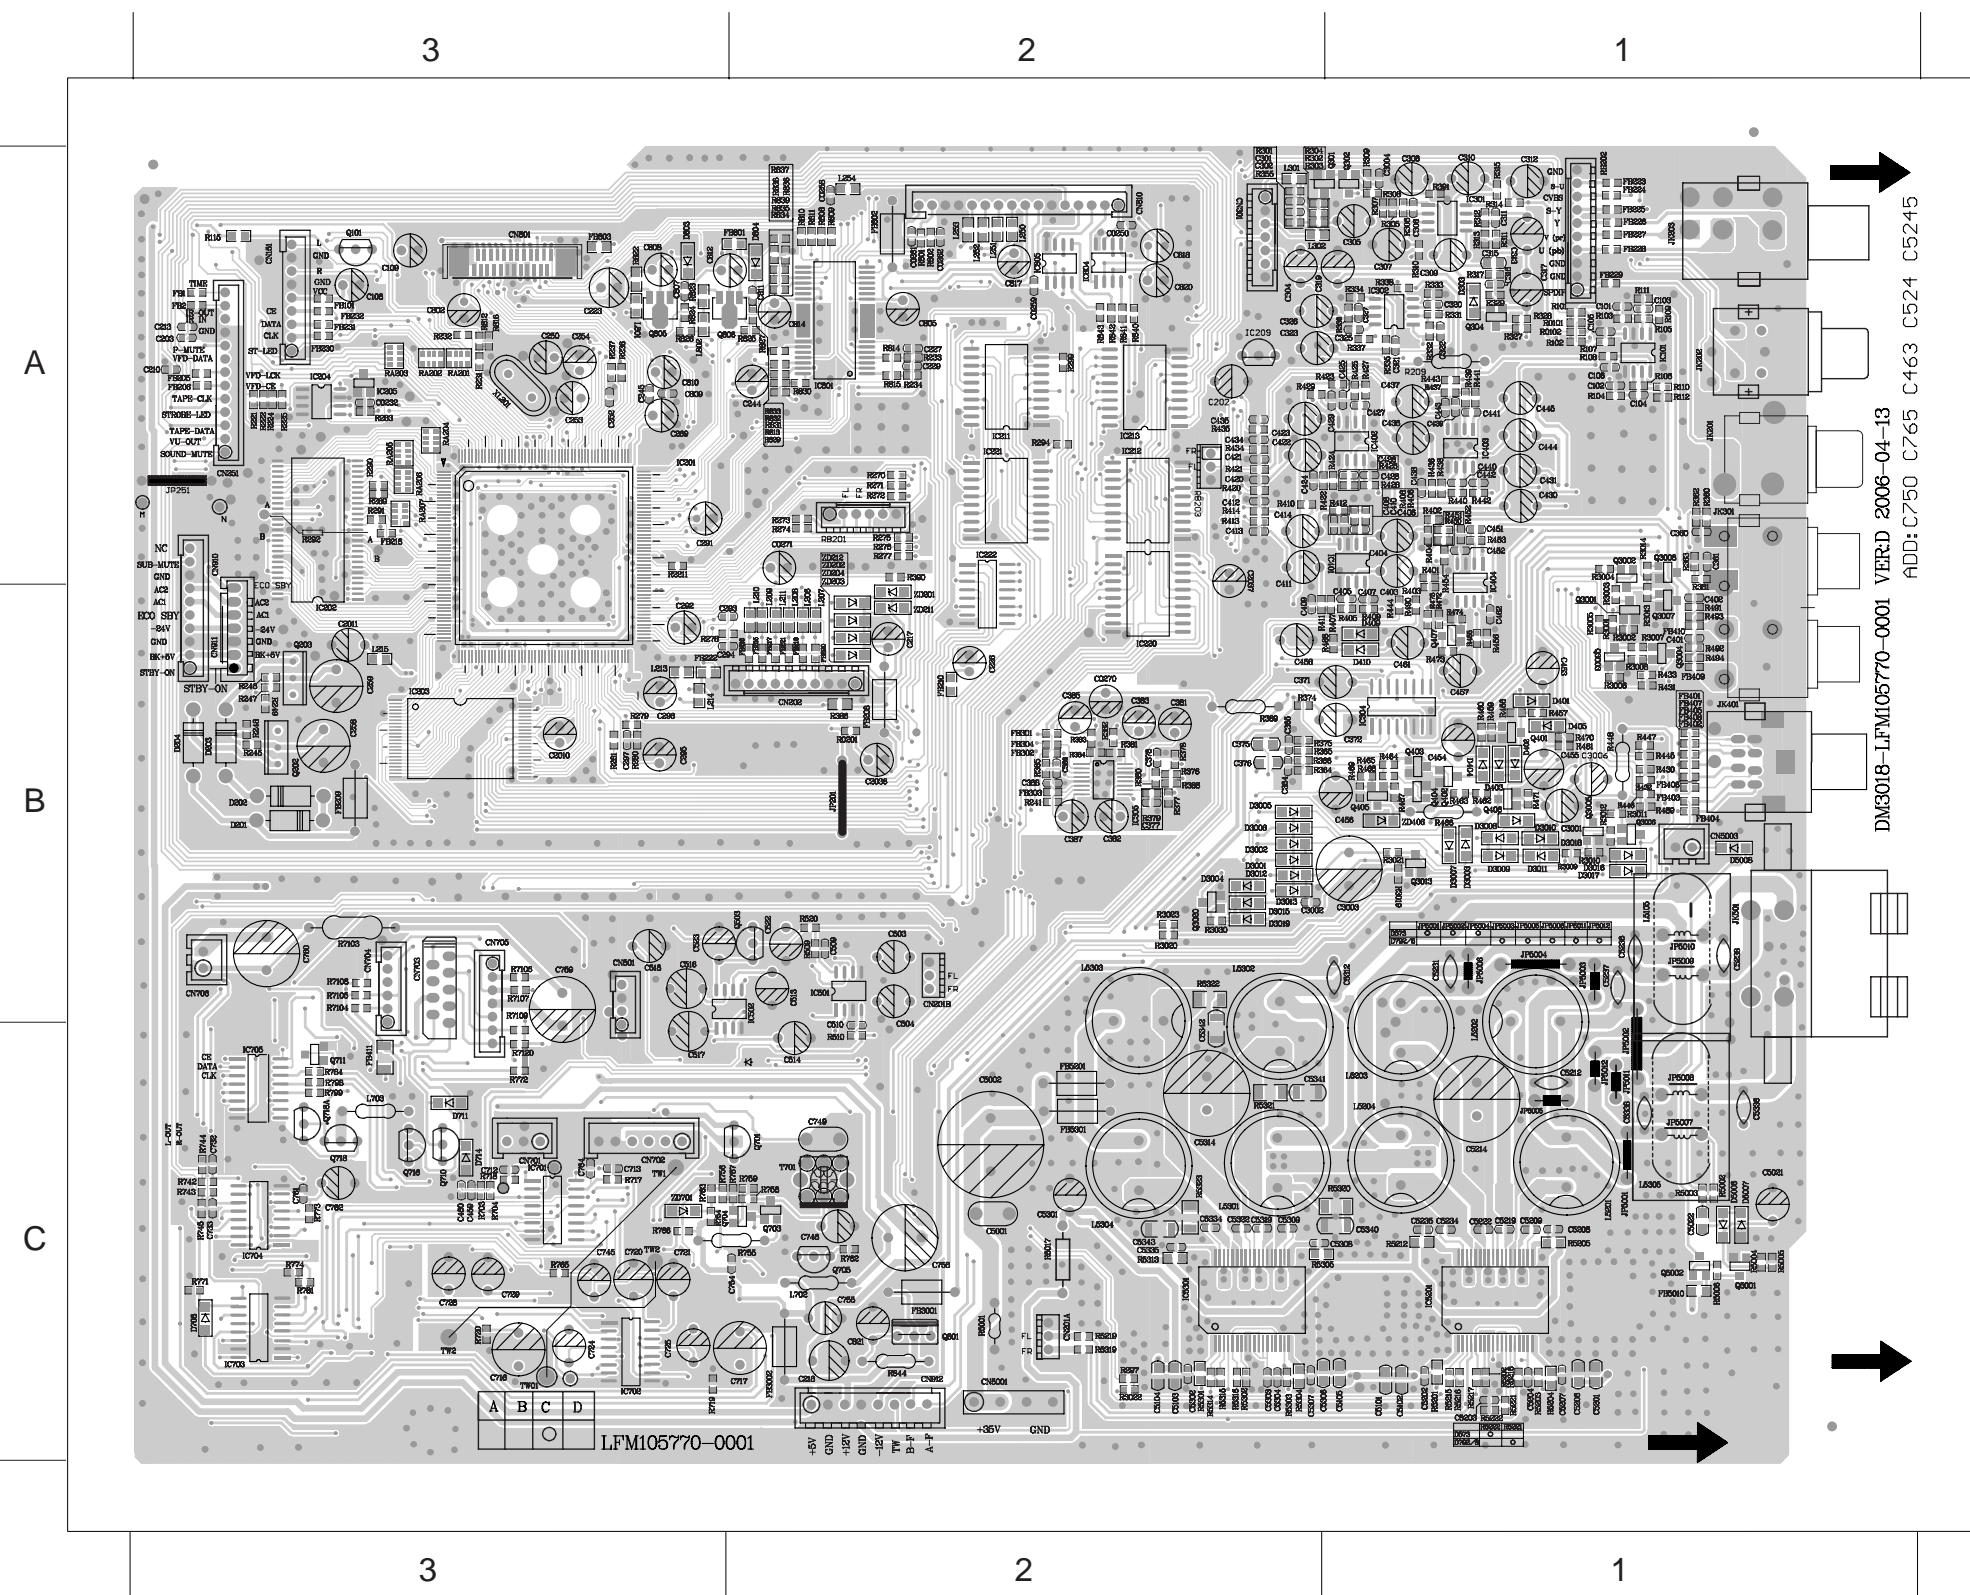


C0232	A3	C414	A2	C732	C3	FB401	B1	Q3003	B1	R305	A1	R484	B1	R838	A2
C0250	A2	C420	A2	C733	C3	FB402	B1	Q3004	B1	R306	A1	R489	B1	R839	A2
C0258	A2	C421	A2	C745	C3	FB403	B1	Q3005	B1	R307	A1	R490	B1	R840	A2
C0262	A2	C422	A2	C746	C2	FB404	B1	Q3006	B1	R308	A1	R491	B1	R841	A2
C0262	A2	C423	A2	C749	C2	FB405	B1	Q3007	B1	R309	A1	R492	B1	R842	A2
C0270	B2	C424	A2	C754	C2	FB406	B1	Q3008	A1	R310	A1	R493	B1	R843	A2
C0271	A2	C425	A2	C755	C2	FB407	B1	Q301	A2	R311	A1	R494	B1	R844	C2
C101	A1	C426	A1	C756	C2	FB408	B1	Q3013	B1	R312	A1	R5001	C2	RA201	A3
C102	A1	C427	A1	C759	B3	FB409	B1	Q302	A1	R313	A1	R5004	C1	RA202	A3
C102	A1	C428	A1	C760	B3	FB410	B1	Q3020	B2	R314	A1	R5006	C1	RA203	A3
C103	A1	C429	A1	C761	C3	FB411	C3	Q304	A1	R315	A1	R5017	C2	RA204	A3
C104	A1	C430	A1	C762	C3	FB5010	C1	Q401	B1	R317	A1	R510	C2	RA205	A3
C105	A1	C431	A1	C764	C3	FB5201	C2	Q407	B1	R327	A1	R520	B2	RA206	A3
C106	A1	C434	A2	C802	A3	FB5301	C2	Q5001	C1	R328	A1	R5201	C1	RA207	A3
C108	A3	C435	A2	C808	A3	FB801	A2	Q5002	C1	R329	A1	R5202	C1	RB201	A2
C109	A3	C436	A1	C809	A3	FB802	A2	Q503	B3	R331	A1	R5203	C1	RB203	A2
C2010	B3	C437	A1	C810	A3	FB803	A3	Q701	C2	R332	A1	R5204	C1	T701	C2
C2011	B3	C438	A1	C812	A3	IC101	A1	Q703	C2	R333	A1	R5205	C1	XL201	A3
C202	A2	C439	A1	C814	A2	IC201	A3	Q704	C3	R334	A1	R5212	C1	ZD201	B2
C203	A3	C440	A1	C817	A2	IC202	A3	Q705	C2	R335	A1	R5215	C1	ZD202	B2
C2036	B2	C441	A1	C818	A2	IC203	B3	Q710	C3	R336	A1	R5216	C1	ZD203	B2
C2037	A2	C442	A1	C820	A2	IC204	A3	Q711	C3	R337	A1	R5217	C1	ZD204	B2
C210	A3	C443	A1	C821	C2	IC205	A3	Q716	C3	R338	A1	R5219	C2	ZD212	B2
C213	A3	C444	A1	CN151	A3	IC209	A2	Q718	C3	R355	A2	R5221	C1	ZD701	C2
C217	B2	C445	A1	CN251	A3	IC211	A2	Q801	C2	R360	A1	R5301	C2		
C218	C2	C451	A1	CN301	A2	IC212	A2	Q805	A3	R361	A1	R5302	C2		
C223	A3	C452	A1	CN5003	B1	IC213	A2	Q806	A3	R362	A1	R5303	C2		
C226	B2	C453	B1	CN501	B3	IC220	B2	R0101	A1	R363	A1	R5304	C2		
C227	A2	C454	B1	CN701	C3	IC221	A2	R0102	A1	R364	B1	R5305	C1		
C229	A2	C455	B1	CN702	C3	IC222	A2	R0201	B2	R365	B1	R5313	C2		
C244	A3	C456	B1	CN704	B3	IC301	A1	R103	A1	R366	B1	R5314	C2		
C245	A3	C457	B1	CN705	B3	IC302	A1	R104	A1	R374	B2	R5315	C2		
C250	A3	C458	B2	CN706	B3	IC304	B1	R105	A1	R375	B1	R5316	C2		
C252	A3	C459	C3	CN801	A3	IC305	B2	R106	A1	R376	B2	R5319	C2		
C253	A3	C460	C3	CN810	A2	IC401	A1	R107	A1	R377	B2	R5320	C2		
C254	A2	C461	B1	CN910	A3	IC402	A1	R108	A1	R378	B2	R5321	C2		
C258	B3	C462	B1	D201	B3	IC403	A1	R109	A1	R379	B2	R5322	B2		
C259	B3	C5001	C2	D202	B3	IC404	A1	R110	A1	R380	B2	R5323	C2		
C269	A3	C5002	C2	D203	B3	IC404	A1	R111	A1	R381	B2	R703	C3		
C291	A3	C5021	C1	D204	B3	IC501	B2	R112	A1	R384	B2	R704	C3		
C292	B3	C503	B2	D3001	B2	IC502	B2	R115	A3	R385	B2	R7103	B3		
C293	B3	C504	B2	D3002	B2	IC5201	C1	R209	A1	R386	B2	R7104	B3		
C294	B3	C509	B2	D3003	B1	IC5301	C2	R221	A3	R388	B2	R7105	B3		
C295	B3	C510	C2	D3004	B2	IC701	C3	R221	A3	R389	B2	R7106	B3		
C296	B3	C5101	C1	D3005	B2	IC702	C3	R222	A3	R401	A1	R7107	B3		
C297	B3	C5102	C1	D3006	B2	IC703	C3	R224	A3	R402	A1	R7108	B3		
C3001	B1	C5103	C2	D3007	B1	IC704	C3	R225	A3	R403	B1	R7109	B3		
C3002	B2	C5104	C2	D3008	B1	IC705	C3	R231	A3	R404	A1	R7120	C3		
C3003	B1	C5105	C1	D3009	B1	IC801	A2	R232	A3	R405	B1	R717	C3		
C3006	B1	C513	B2	D3012	B2	IC804	A2	R233	A2	R406	B1	R718	C3		
C301	A2	C514	C2	D3013	B2	IC805	A2	R234	A2	R407	B2	R719	C3		
C302	A2	C516	B3	D3015	B2	JK201	A1	R236	A3	R408	A1	R720	C3		
C304	A2	C517	C3	D3016	B1	JK202	A1	R237	A3	R409	B1	R742	C3		
C305	A1	C518	B3	D3017	B1	JK203	A1	R241	B2	R410	A2	R743	C3		
C306	A1	C5201	C1	D3018	B1	JK301	A1	R245	B3	R411	B2	R744	C3		
C307	A1	C5202	C1	D3019	B2	JK401	B1	R247	B3	R412	A1	R745	C3		
C308	A1	C5203	C1	D303	A1	JK501	B1	R248	B3	R413	A2	R754	C3		
C309	A1	C5204	C1	D403	B1	JP201	B2	R249	B3	R414	A2	R755	C2		
C310	A1	C5206	C1	D404	B1	JP251	A3	R270	A2	R420	A2	R756	C3		
C311	A1	C5207	C1	D405	B1	JP5003	B1	R271	A2	R421	A2	R757	C2		
C312	A1	C5208	C1	D409	B1	JP5005	C1	R272	A2	R422	A2	R758	C2		
C313	A1	C5209	C1	D410	B1	JP5006	B1	R273	A2	R423	A1	R759	C2		
C315	A1	C5214	C1	D708	C3	JP5011	C1	R274	A2	R424	A1	R762	C2		
C317	A1	C5219	C1	D711	C3	JP5012	C1	R275	A2	R425	A2	R763	C3		
C319	A2	C522	B2	D714	C3	L206	B2	R276	A2	R426	A1	R765	C3		
C320	A1	C5222	C1	D803	A3	L207	B2	R277	A2	R427	A1	R766	C3		
C321	A1	C523	B3	D804	A2	L208	B2	R278	B3	R428	A1	R771	C3		
C322	A1	C5234	C1	FB1	A3	L209	B2	R279	B3	R429	A2	R772	C3		
C323	A2	C5235	C1	FB101	A3	L210	B2	R281	B3	R430	B1	R773	C3		
C325	A1	C5236	C1	FB2	A3	L211	B2	R283	A3	R431	B1	R774	C3		
C326	A2	C5238	B1	FB205	A3	L213	B3	R289	A3	R432	B1	R781	C3		
C327	A1	C5301	C2	FB206	A3	L214	B3	R290	A3	R433	B1	R784	C3		
C360	A1	C5302	C2	FB208	B2	L215	B3	R291	A3	R434	A2	R798	C3		
C361	A1	C5303	C2	FB209	B3	L250	A2	R292	A3	R435	A2	R799	C3		
C371	B2	C5304	C2	FB210	B2	L251	A2	R294	A2	R436	A1	R801	A2		
C372	B1	C5306	C1	FB215	B2	L252	A2	R297	C2	R437	A1	R802	A2		
C375	B2	C5307	C2	FB216	B2	L253	A2	R3001	B1	R438	A1	R808	A2		
C376	B2	C5308	C1	FB217	B2	L254	A2	R3002	B1	R439	A1	R809	A2		
C381	A1	C5309	C2	FB218	A3	L301	A2	R3003	B1	R440	A1	R810	A2		
C382	B2	C5314	C2	FB219	B2	L302	A2	R3004	A1	R441	A1	R811	A2		
C383	B2	C5319	C2	FB220	B2	L5105	B1	R3005	B1	R442	A1	R812	A3		
C384	B2	C5322	C2	FB221	B2	L5201	C1	R3006	B1	R443	A1	R813	A3		
C385	B2	C5334	C2	FB222	B3	L5202	C1	R3007	B1	R444	B1	R814	A2		
C386	B2	C5335	C2	FB223	A1	L5203	C1	R3008	B1	R445	B1	R815	A2		
C387	B2	C5336	C1	FB224	A1	L5204	C1	R3009	B1	R446	B1	R822	A3		
C388	B2	C5338	C1	FB225	A1	L5301	C2	R301	A2	R447	B1	R823	A3		
C401	B1	C5340	C1	FB226	A1	L5302	B2	R3010	B1	R448	B1	R824	A3		
C402	B1	C5341	C2	FB227	A1	L5303	B2	R3011	B1	R450	A1	R825	A2		
C403	B1	C5342	C2	FB228	A1	L5304	C2	R3012	B1	R451	A1	R826	A3		
C404	A1	C5343	C2	FB229	A1	L5305	C1	R3013	B1	R452	A1	R827	A2		
C405	B1	C712	C3	FB230	A3	L702	C2	R3014	A1	R453	A1	R829	A3		
C406	A1	C713	C3	FB231	A3	L703	C3	R3019	B1	R454	A1	R830	A3		
C407	B1	C716	C2	FB232	A3	L801	A3	R302	A2	R455	B1	R831	A4		
C408	A1	C717	C2	FB3001	C2	L802	A3	R3020	B2	R456	B1	R832	A5		
C409	B2	C720	C3	FB3002	C2	Q101	A3	R3021	B1	R471	B1	R833	A6		
C410	A1	C721	C3	FB301	B2	Q202	B3	R3022	C2	R472	B1	R834	A2		
C411	A2	C725	C3	FB302	B2	Q203	B3	R3023	B2	R473	B1	R835	A2		
C412	A2	C728	C3	FB303	B2	Q3001	B1	R303	A2	R474	B1	R836	A2		
C413	A2	C729	C3	FB304	B2	Q3002	A1	R3030	B2	R475	B1	R837	A2		

PCB LAYOUT MAIN (BOTTOM) VIEW

6-9

6-9

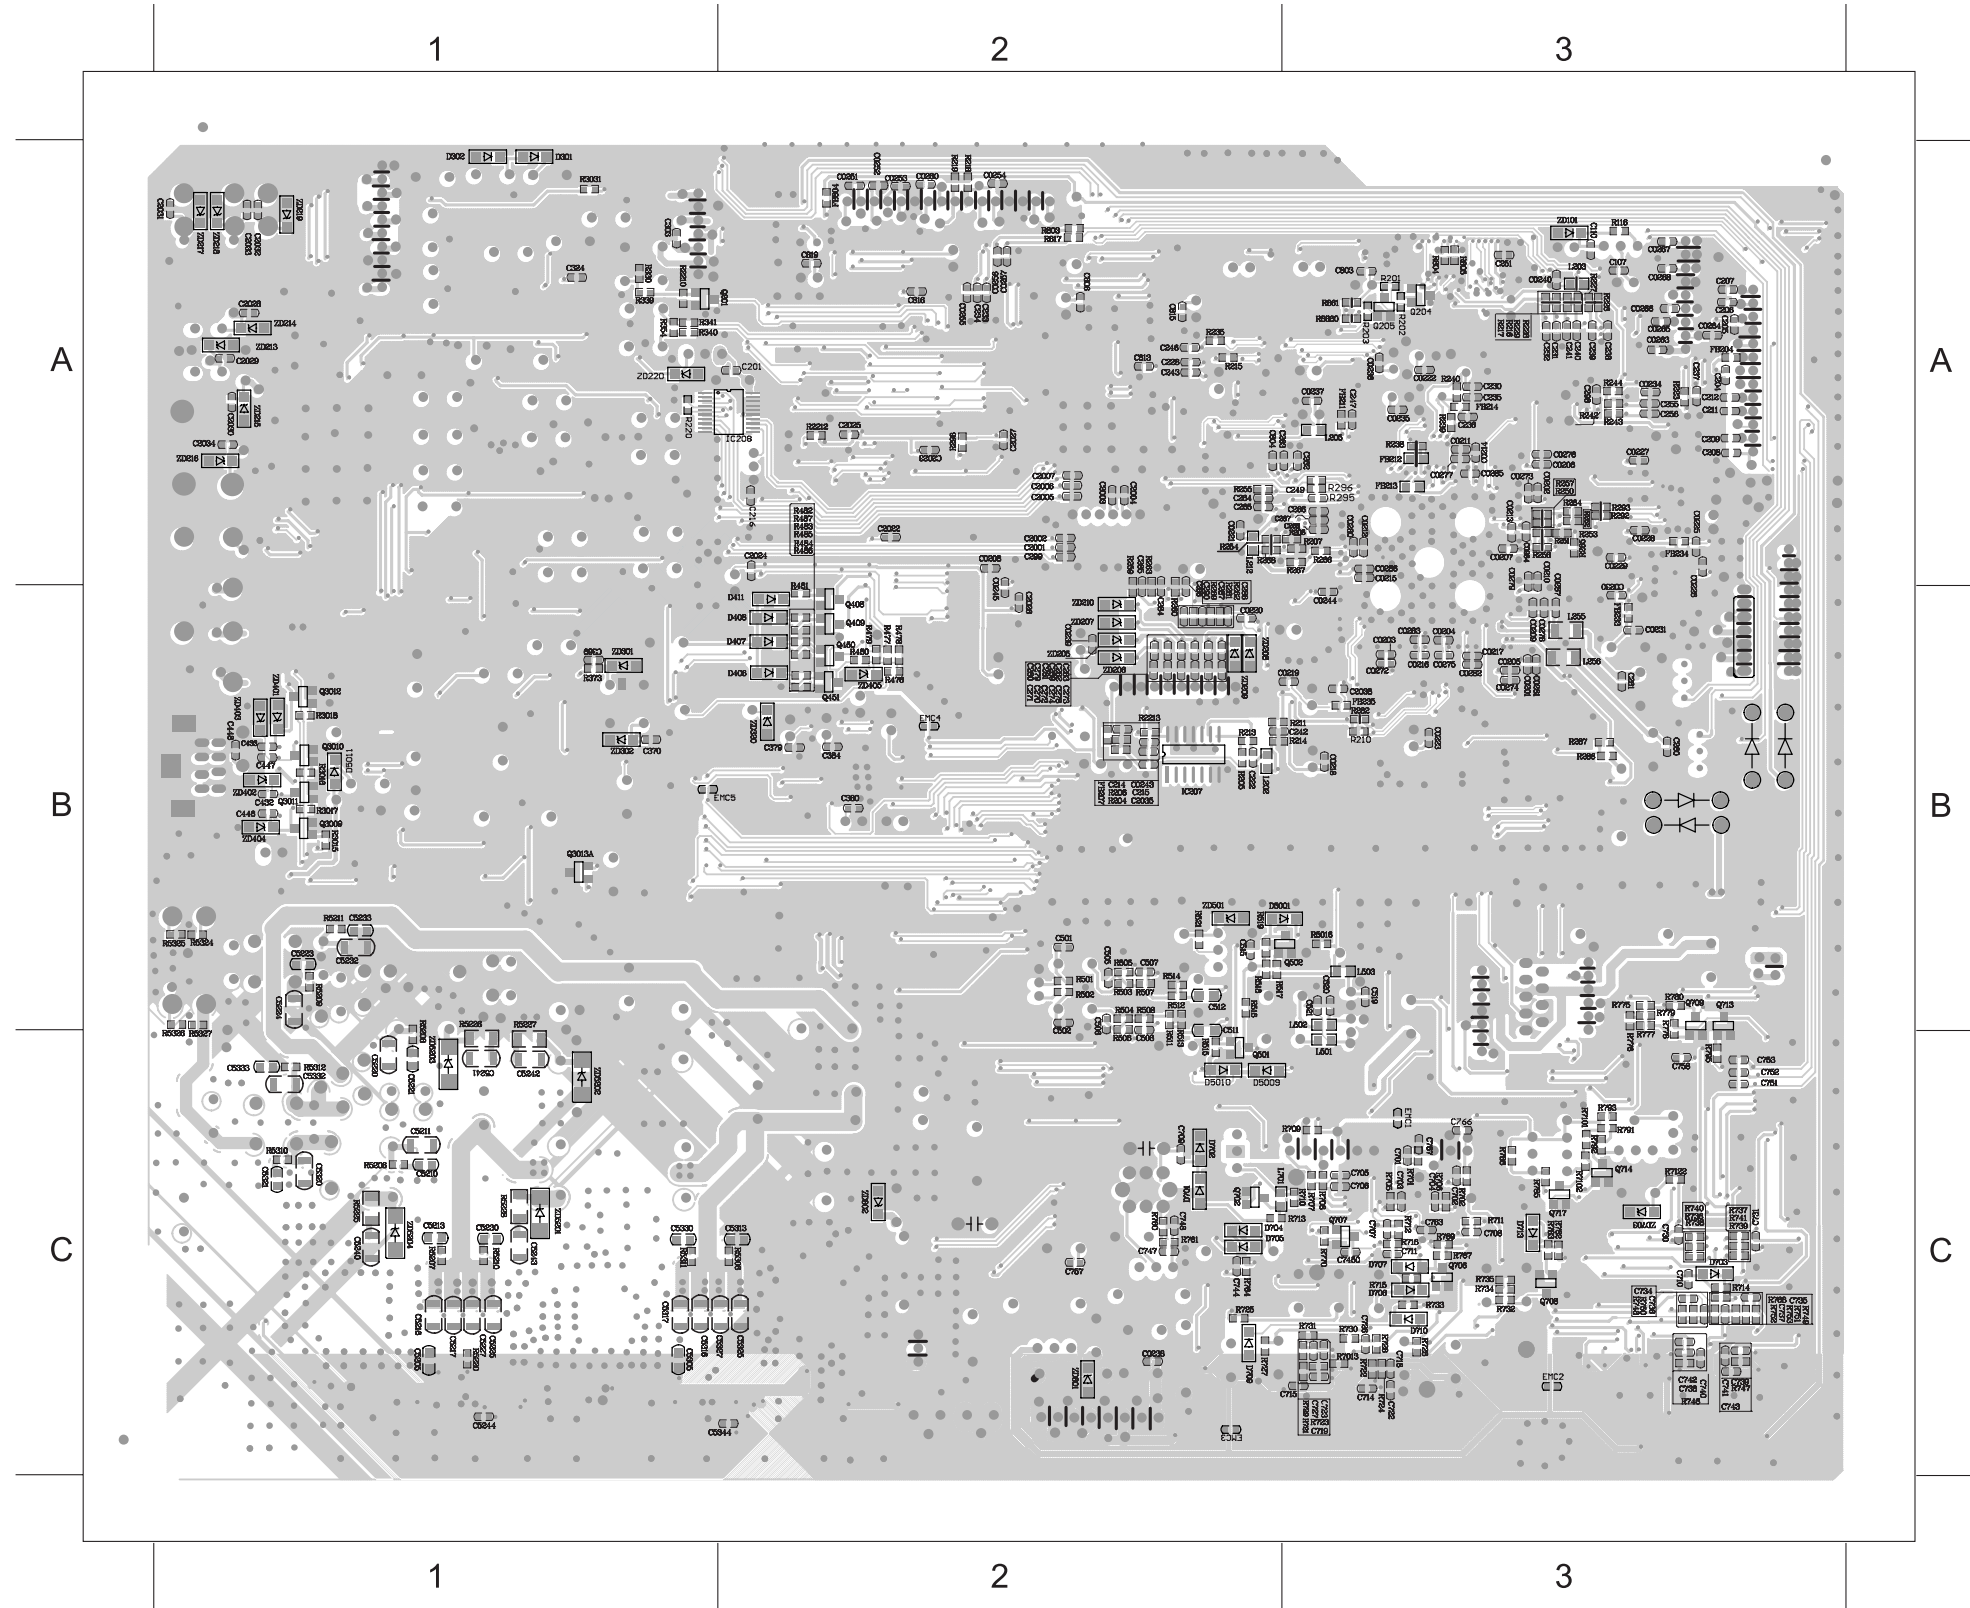

C0201	B3	C233	A2	C703	C3	Q450	B2	R511	B2	ZD205	B2
C0202	A3	C234	A2	C704	C3	Q451	B2	R512	B2	ZD206	B2
C0204	B3	C235	A3	C705	C3	Q501	C2	R513	B2	ZD207	B2
C0205	B3	C236	A3	C706	C3	Q502	B2	R514	B2	ZD208	B2
C0206	A3	C237	A3	C707	C3	Q702	C2	R515	B2	ZD209	B2
C0207	A3	C238	A3	C708	C3	Q706	C3	R516	B2	ZD210	B2
C0209	B3	C239	A3	C709	C2	Q707	C3	R517	B2	ZD211	B2
C0210	A3	C240	A3	C710	C3	Q708	C3	R518	B2	ZD213	A1
C0211	A3	C241	A3	C711	C3	Q709	B3	R5207	C1	ZD214	A1
C0212	A3	C242	B2	C714	C3	Q713	B3	R521	B2	ZD215	A1
C0213	A3	C243	A2	C715	C3	Q714	C3	R5210	C1	ZD216	A1
C0214	A3	C246	A2	C718	C3	Q717	C3	R5211	B1	ZD217	A1
C0215	A3	C247	A3	C719	C3	R116	A3	R5220	C1	ZD218	A1
C0216	B3	C249	A3	C722	C3	R201	A3	R5225	C1	ZD219	A1
C0217	B3	C251	A3	C723	C3	R202	A3	R5226	C1	ZD220	A1
C0218	B3	C255	A3	C724	C3	R203	A3	R5227	C1	ZD301	B1
C0219	B2	C256	A3	C726	C3	R204	B2	R5228	C1	ZD302	B1
C0220	B2	C260	B3	C727	C3	R205	B2	R5306	C2	ZD320	B2
C0221	A2	C261	B3	C730	C3	R206	B2	R5310	C1	ZD405	B2
C0222	A3	C262	A3	C731	C3	R207	A3	R5311	C1	ZD406	B2
C0223	B3	C263	A2	C734	C3	R208	A3	R5312	C1	ZD501	B2
C0225	A3	C266	A3	C735	C3	R210	B3	R5324	B1	ZD703	C3
C0226	A3	C267	A3	C736	C3	R214	B2	R5325	B1	ZD801	C2
C0227	A3	C268	A3	C737	C3	R215	A2	R5326	B1	ZD802	C2
C0228	A3	C270	B2	C738	C3	R216	A3	R5327	B1		
C0229	A3	C271	B2	C739	C3	R217	A3	R701	C3		
C0230	B3	C272	B2	C740	C3	R218	A2	R7013	C3		
C0231	B3	C273	B2	C741	C3	R219	A2	R702	C3		
C0234	A3	C274	B2	C742	C3	R2210	A1	R705	C3		
C0235	A3	C278	B2	C743	C3	R2212	A2	R706	C3		
C0236	A3	C279	B2	C744	C2	R2213	B2	R707	C3		
C0237	A3	C280	B2	C7450	C3	R223	A3	R708	C3		
C0238	C2	C281	B2	C747	C2	R226	A3	R709	C3		
C0239	B2	C282	B2	C748	C2	R227	A3	R710	C3		
C0240	A3	C283	B2	C751	C3	R228	A3	R7101	C3		
C0243	B2	C284	B2	C752	C3	R229	A3	R7102	C3		
C0244	B3	C285	B2	C753	C3	R235	A2	R711	C3		
C0251	A2	C286	B2	C757	C2	R238	A3	R712	C3		
C0252	A2	C287	B2	C758	C3	R240	A3	R7122	C3		
C0253	A2	C288	B2	C763	C3	R242	A3	R713	C2		
C0254	A2	C289	B2	C765	C3	R243	A3	R714	C3		
C0255	A2	C290	B2	C803	A3	R244	A3	R715	C3		
C0256	A2	C298	A3	C804	A2	R250	A3	R716	C3		
C0257	A2	C299	A2	C805	A2	R251	A3	R721	C3		
C0272	B3	C303	A1	C806	A2	R252	A3	R722	C3		
C0273	A3	C324	A1	C813	A2	R253	A3	R723	C3		
C0274	B3	C328	A1	C815	A2	R254	A2	R724	C3		
C0275	B3	C329	A1	C816	A2	R255	A2	R725	C2		
C0276	A3	C369	B1	C819	A2	R257	A3	R726	C2		
C0277	A3	C370	B1	D301	A1	R258	A3	R727	C2		
C0278	B3	C379	B2	D302	A1	R259	B2	R728	C3		
C0279	A3	C380	B2	D406	B2	R260	B2	R729	C3		
C0280	A3	C432	B1	D407	B2	R261	B2	R730	C3		
C0281	B3	C433	B1	D408	B2	R262	B2	R731	C3		
C0282	B3	C446	B1	D411	B2	R263	B2	R732	C3		
C0283	B3	C447	B1	D5009	C2	R264	A3	R733	C3		
C0284	A3	C448	B1	D5010	C2	R265	A3	R734	C3		
C0285	A3	C501	B2	D5011	B1	R266	A3	R735	C3		
C0286	A3	C502	B2	D701	C2	R267	A3	R736	C3		
C107	A3	C505	B2	D702	C2	R268	A3	R737	C3		
C110	A3	C506	B2	D703	C3	R269	B2	R738	C3		
C2001	A2	C507	B2	D704	C2	R282	B3	R739	C3		
C2002	A2	C508	B2	D705	C2	R287	B3	R740	C3		
C2003	A2	C511	B2	D706	C3	R293	A3	R741	C3		
C2004	A2	C512	B2	D707	C3	R295	A3	R746	C3		
C2005	A2	C515	B2	D709	C2	R296	A3	R747	C3		
C2006	A2	C519	B3	D710	C3	R298	A2	R748	C3		
C2007	A2	C520	B3	D713	C3	R3015	B1	R749	C3		
C201	A2	C5205	B3	FB204	A3	R3016	B1	R750	C3		
C2022	A2	C521	B3	FB207	B2	R3017	B1	R751	C3		
C2023	A2	C5213	C1	FB211	A3	R3018	B1	R752	C3		
C2024	A2	C5216	C1	FB212	A3	R3031	A1	R753	C3		
C2025	A2	C5217	C1	FB213	A3	R330	A1	R760	C2		
C2026	B2	C5223	B1	FB214	A3	R339	A1	R761	C2		
C2027	A2	C5224	B1	FB233	B3	R340	A1	R764	C2		
C2028	A1	C5225	C1	FB234	B3	R341	A1	R767	C3		
C2029	A1	C5227	C1	FB235	B3	R354	A1	R768	C3		
C2030	A1	C5230	C1	FB804	A2	R373	B1	R769	C3		
C2031	A1	C5232	B1	IC207	B2	R476	B2	R770	C3		
C2032	A1	C5233	B1	IC208	A2	R477	B2	R775	B3		
C2033	A1	C5240	C1	L202	B2	R478	B2	R776	B3		
C2034	A1	C5241	C1	L203	A3	R479	B2	R777	B3		
C2035	B2	C5242	C1	L205	A3	R480	B2	R778	B3		
C2038	B3	C5243	C1	L212	A2	R481	B2	R779	B3		
C204	A3	C5244	C1	L255	B3	R482	A2	R780	B3		
C205	A3	C5305	C1	L256	B3	R483	A2	R782	C3		
C206	A3	C5313	C2	L501	C3	R485	A2	R783	C3		
C207	A3	C5316	C1	L502	C3	R486	A2	R785	C3		
C208	A3	C5317	C1	L503	B3	R487	A2	R786	C3		
C209	A3	C5320	C1	L701	C2	R501	B2	R791	C3		
C211	A3	C5321	C1	Q201	A2	R5016	B3	R792	C3		
C212	A3	C5325	C2	Q204	A3	R502	B2	R793	C3		
C214	B2	C5327	C2	Q205	A3	R503	B2	R795	C3		
C215	B2	C5330	C1	Q3009	B1	R504	B2	R803	A2		
C222	B2	C5332	C1	Q3010	B1	R505	B2	R804	A3		
C228	A2	C5333	C1	Q3011	B1	R506	B2	R805	A3		
C230	A3	C5344	C2	Q3012	B1	R507	B2	R817	A2		
C231	A3	C701	C3	Q408	B2	R508	B2	R860	A3		
C232	A3	C702	C3	Q409	B2	R509	B2	ZD101	A3		

ELECTRICAL PARTS LIST - MAIN BOARD

IC101	9965 000 29611	IC 8P CO4558A CERAMATE	Q3002	9940 000 00921	XISTR PNP 2SA812 HFE:200-400
IC201	9940 000 05336	IC 208P ES8380FCD PQFP	Q3003	9940 000 00915	XISTR NPN 2SC1623
IC202	9965 000 38430	IC 54P NT5SV8M16DS-6K	Q3004	9940 000 00921	XISTR PNP 2SA812 HFE:200-400
IC203	9965 000 38431	IC 48P MX29LV160BBTC-70G	Q3005	9940 000 00915	XISTR NPN 2SC1623
IC204	9940 000 00833	IC 8P M24C04-WMN6T EEPROM	Q3006	9940 000 00921	XISTR PNP 2SA812 HFE:200-400
IC205	9940 000 05209	IC 3P AZ809NSTR-E1	Q3007	9940 000 00915	XISTR NPN 2SC1623
IC207	9965 000 23948	IC 14PIN 74HCU04D PHILIPS	Q3008	9940 000 00915	XISTR NPN 2SC1623
IC211	9940 000 00835	IC 20PIN 74F374D	Q3009	9940 000 00915	XISTR NPN 2SC1623
IC212	9940 000 00835	IC 20PIN 74F374D	Q301	9940 000 00915	XISTR NPN 2SC1623
IC213	9940 000 00835	IC 20PIN 74F374D	Q3010	9940 000 00915	XISTR NPN 2SC1623
IC220	9940 000 00838	IC 20PIN 74F244	Q3011	9940 000 00915	XISTR NPN 2SC1623
IC221	9940 000 00838	IC 20PIN 74F244	Q3012	9940 000 00915	XISTR NPN 2SC1623
IC222	9940 000 00839	IC 16P 74F138D	Q3013	9940 000 00915	XISTR NPN 2SC1623
IC301	9965 000 29611	IC 8P CO4558A	Q3020	9940 000 00915	XISTR NPN 2SC1623
IC302	9965 000 29611	IC 8P CO4558A	Q304	9940 000 00915	XISTR NPN 2SC1623
IC304	9940 000 00841	IC 16P TC4052BFN	Q401	9940 000 00915	XISTR NPN 2SC1623
IC305	9940 000 05338	IC 16P CS5342-CZZ	Q407	9940 000 00915	XISTR NPN 2SC1623
IC401	9965 000 29611	IC 8P CO4558A	Q408	9940 000 00915	XISTR NPN 2SC1623
IC402	9965 000 29611	IC 8P CO4558A	Q409	9940 000 00915	XISTR NPN 2SC1623
IC403	9965 000 29611	IC 8P CO4558A	Q450	9940 000 00915	XISTR NPN 2SC1623
IC404	9965 000 29611	IC 8P CO4558A	Q451	9940 000 00915	XISTR NPN 2SC1623
IC501	9965 000 29611	IC 8P CO4558A	Q5001	9940 000 00915	XISTR NPN 2SC1623
IC502	9965 000 26923	IC 8P APA3541-TRL HEADPHONE	Q5002	9940 000 00921	XISTR PNP 2SA812 HFE:200-400
IC5201	9940 000 05339	IC 36P TAS5152DKDR	Q501	9940 000 00915	XISTR NPN 2SC1623
IC5301	9940 000 05339	IC 36P TAS5152DKDR	Q502	9940 000 00915	XISTR NPN 2SC1623
IC701	4822 209 32919	HEF4952BT	Q503	4822 130 41651	2SC2001L
IC702	9322 140 00668	IC AN7323S (MATJ)	Q701	9940 000 00864	FET J111TO92 40V 20MA
IC703	4822 209 32919	HEF4952BT	Q702	9940 000 00921	XISTR PNP 2SA812 HFE:200-400
IC704	4822 209 32919	HEF4952BT	Q703	9940 000 00921	XISTR PNP 2SA812 HFE:200-400
IC705	9940 000 01587	IC 16P HEF4094BT	Q704	9940 000 00915	XISTR NPN 2SC1623
IC801	9940 000 05214	IC 28P V5888S	Q705	4822 130 41198	2SC945P
IC804	9940 000 00855	IC 8PIN BA6287FE2	Q706	9940 000 00915	XISTR NPN 2SC1623
IC805	9940 000 00855	IC 8PIN BA6287FE2	Q707	9940 000 00915	XISTR NPN 2SC1623
JK201	9965 000 17363	RCA JACK 1P W/GND P	Q708	9940 000 00915	XISTR NPN 2SC1623
JK202	9965 000 23599	RCA+DIN JK 1RCA+4P DIN YEL	Q709	9940 000 00915	XISTR NPN 2SC1623
JK203	9940 000 00857	RCA JACK 3P R-B-G	Q710	9965 000 26939	XISTR PNP 2SA952
JK301	9940 000 00859	RCA JACK 4P W-W/R-R AUDIO IN	Q711	9940 000 00915	XISTR NPN 2SC1623
JK401	9940 000 00861	RCA+DIN JACK 1RCA+8P DIN BLK	Q713	9940 000 00915	XISTR NPN 2SC1623
JK501	9940 000 00862	SPK JACK 4P RED-WHT-BLK-BLK	Q714	9940 000 00915	XISTR NPN 2SC1623
L5105	9940 000 05331	TOROID COIL 10UH I=5A 300R 4P	Q716	9965 000 26939	XISTR PNP 2SA952
L5305	9940 000 05331	TOROID COIL 10UH I=5A 300R 4P	Q717	9940 000 00915	XISTR NPN 2SC1623
Q101	4822 130 41651	2SC2001L	Q718	4822 130 41651	2SC2001L
Q201	9940 000 00915	XISTR NPN 2SC1623	Q801	9940 000 05335	XISTR NPN TIP41C
Q202	9965 000 26946	XISTR PNP 2SB772P/Q	Q805	9965 000 26927	XISTR PNP 2SB1132RT100
Q203	9965 000 26946	XISTR PNP 2SB772P/Q	Q806	9965 000 26927	XISTR PNP 2SB1132RT100
Q3001	9940 000 00915	XISTR NPN 2SC1623	RA201	9940 000 05229	RES.ARRAY 100R 1/16W 5%

ELECTRICAL PARTS LIST - MAIN BOARD

RA202	9940 000 05229	RES.ARRAY 100R 1/16W 5%
RA203	9940 000 05229	RES.ARRAY 100R 1/16W 5%
RA204	9940 000 05229	RES.ARRAY 100R 1/16W 5%
RA205	9940 000 05229	RES.ARRAY 100R 1/16W 5%
RA206	9940 000 05229	RES.ARRAY 100R 1/16W 5%
RA207	9940 000 05229	RES.ARRAY 100R 1/16W 5%
T701	9940 000 00866	OSC COIL REC 3MH
XL201	9940 000 05201	X'TAL 27MHZ +/-20PPM H=3.5MM
ZD101	9940 000 05334	ZENER ZMM5242B 500MW 12V 5%
ZD201	9965 000 26931	CHIP ZENER 7.5V 0.05 0.5W (F1)
ZD202	9965 000 26931	CHIP ZENER 7.5V 0.05 0.5W (F1)
ZD203	9965 000 26931	CHIP ZENER 7.5V 0.05 0.5W (F1)
ZD204	9965 000 26931	CHIP ZENER 7.5V 0.05 0.5W (F1)
ZD205	9965 000 26931	CHIP ZENER 7.5V 0.05 0.5W (F1)
ZD206	9965 000 26931	CHIP ZENER 7.5V 0.05 0.5W (F1)
ZD207	9965 000 26931	CHIP ZENER 7.5V 0.05 0.5W (F1)
ZD208	9965 000 26931	CHIP ZENER 7.5V 0.05 0.5W (F1)
ZD209	9965 000 26931	CHIP ZENER 7.5V 0.05 0.5W (F1)
ZD210	9965 000 26931	CHIP ZENER 7.5V 0.05 0.5W (F1)
ZD211	9965 000 26931	CHIP ZENER 7.5V 0.05 0.5W (F1)
ZD212	9965 000 26931	CHIP ZENER 7.5V 0.05 0.5W (F1)
ZD213	9965 000 26930	CHIP ZENER 5.6V 0.05 0.5W (E2)
ZD214	9965 000 26930	CHIP ZENER 5.6V 0.05 0.5W (E2)
ZD215	9965 000 26930	CHIP ZENER 5.6V 0.05 0.5W (E2)
ZD216	9965 000 26930	CHIP ZENER 5.6V 0.05 0.5W (E2)
ZD217	9965 000 26930	CHIP ZENER 5.6V 0.05 0.5W (E2)
ZD218	9965 000 26930	CHIP ZENER 5.6V 0.05 0.5W (E2)
ZD219	9965 000 26930	CHIP ZENER 5.6V 0.05 0.5W (E2)
ZD301	9965 000 26930	CHIP ZENER 5.6V 0.05 0.5W (E2)
ZD302	9965 000 26930	CHIP ZENER 5.6V 0.05 0.5W (E2)
ZD320	9940 000 05264	CHIP ZENER 3.0V 5% 0.5W
ZD401	9965 000 26930	CHIP ZENER 5.6V 0.05 0.5W (E2)
ZD402	9965 000 26930	CHIP ZENER 5.6V 0.05 0.5W (E2)
ZD403	9965 000 26930	CHIP ZENER 5.6V 0.05 0.5W (E2)
ZD404	9965 000 26930	CHIP ZENER 5.6V 0.05 0.5W (E2)
ZD405	9965 000 26930	CHIP ZENER 5.6V 0.05 0.5W (E2)
ZD406	9965 000 26931	CHIP ZENER 7.5V 0.05 0.5W (F1)
ZD501	9965 000 26930	CHIP ZENER 5.6V 0.05 0.5W (E2)
ZD701	9965 000 38424	CHIP ZENER 7.79V-8.61V 0.5W
ZD703	9965 000 38425	CHIP ZENER 9.1V 5% 0.5W
ZD801	9965 000 38425	CHIP ZENER 9.1V 5% 0.5W
ZD802	9940 000 05334	ZENER ZMM5242B 500MW 12V 5%

Note: Only these parts mentioned in the list are normal service parts.

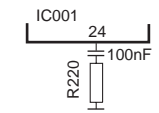
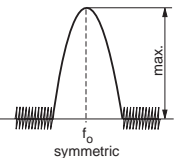
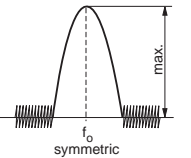
TUNER BOARD

TABLE OF CONTENTS

Tuner Adjustment Table 7-1
 Circuit Diagram 7-2
 PCB Layout 7-3

Remark: The module is not intend to be repaired on component level. Circuit Diagrams and Printed Board drawings are published for orientation only. The whole Tuner Board Ass'y can be orderd with 12nc: 9940 000 05366 for /37/55/98.


TUNER ADJUSTMENT TABLE

Waverange	Input frequency	Input	Tuned to	Adjust	Output	Scope/Voltmeter
<i>VARICAP ALIGNMENT</i>						
FM 87.5 - 108MHz (50kHz grid)			108MHz	check		7.5V ±1V
			87.5MHz	check		1.4V ±0.2V
MW 531-1602kHz (9kHz grid) 530-1700kHz (10kHz grid) (98/ 55/ 51)			1602KHz	check		7.2V ±1V
			531KHz	T005		1.1V ±0.2V
			1700KHz	check		7.2V ±1V
			531KHz	T005		1.1V ±0.2V
<i>FM - RF</i>						
FM	108MHz		106MHz	VC001	MAX	MAX
	87.5MHz	mod=1kHz Δf=±22.5kHz	90.1MHz	L001		
<i>AM IF</i>						
AM	450kHz	Δf = ±15kHz V _{RF} = 3mV		T001 T002	MAX	
<i>AM AFC</i> MW	Connect pin 6 of IC001 (AM Osc.) with short wire to ground (pin 4)			ΔV=mV		
<i>AM RF 3)</i>						
MW	1404kHz		1404kHz	VC001	MAX	
	612kHz		612kHz	T006		
	1000kHz		1000kHz	VC001		
	600kHz		600kHz	T006		


Use Service Testprogram. By selecting the TUNER TEST test frequencies will be stored as preset frequencies automatically.
 1) If sensitivity of frequency counter is too low adjust to max. channel separation (input signal: stereo left 90% + 9%, adjust output on right channel to minimum)
 2) RC network serves for damping the IF-filter while adjusting the other one.
 3) For AM RF adjustments the original frame antenna has to be used!

CIRCUIT DIAGRAM : TUNER BOARD

ANT001	A1	C009	B1	C015	A2	C023	C2	C031	B2	C038	E1	C047	B1	D002	A1	IF003	C2	R002	B1	R015	B1	R023	D1	R030	E1	T003	D1	VD003	A1
C002	A1	C01	D2	C016	B2	C024	C2	C032	D1	C039	E2	C048	B1	D003	E1	L02	A1	R004	B1	R016	D2	R024	B1	R031	E2	T005	A2	VD004	B2
C004	E2	C010	B2	C019	B1	C025	C2	C033	D1	C040	D2	C050	B1	D004	C2	L001	B1	R005	B1	R017	C2	R025	C2	R032	D2	T006	A1	VR001	B1
C005	B1	C011	A2	C02	D2	C026	B2	C034	C2	C041	D1	C052	C2	D005	A2	Q001	D2	R006	B1	R018	D2	R026	C2	R033	B1	VC001	B1	XL1	D2
C006	B1	C012	B2	C020	D1	C029	C2	C035	B1	C042	D1	CN001	E2	IC001	C1	Q002	E1	R007	C1	R019	D2	R027	D1	R034	E1	VC002	A2		
C007	B1	C013	B2	C021	C2	C03	B1	C036	E2	C043	D1	CN002	A1	IF001	D1	Q003	B1	R010	A2	R020	E2	R028	E1	T001	C1	VD001	B1		
C008	B1	C014	B2	C022	C2	C030	D2	C037	C2	C044	D2	D001	A1	IF002	C1	R001	B1	R011	B2	R021	E2	R029	E1	T002	D1	VD002	B1		

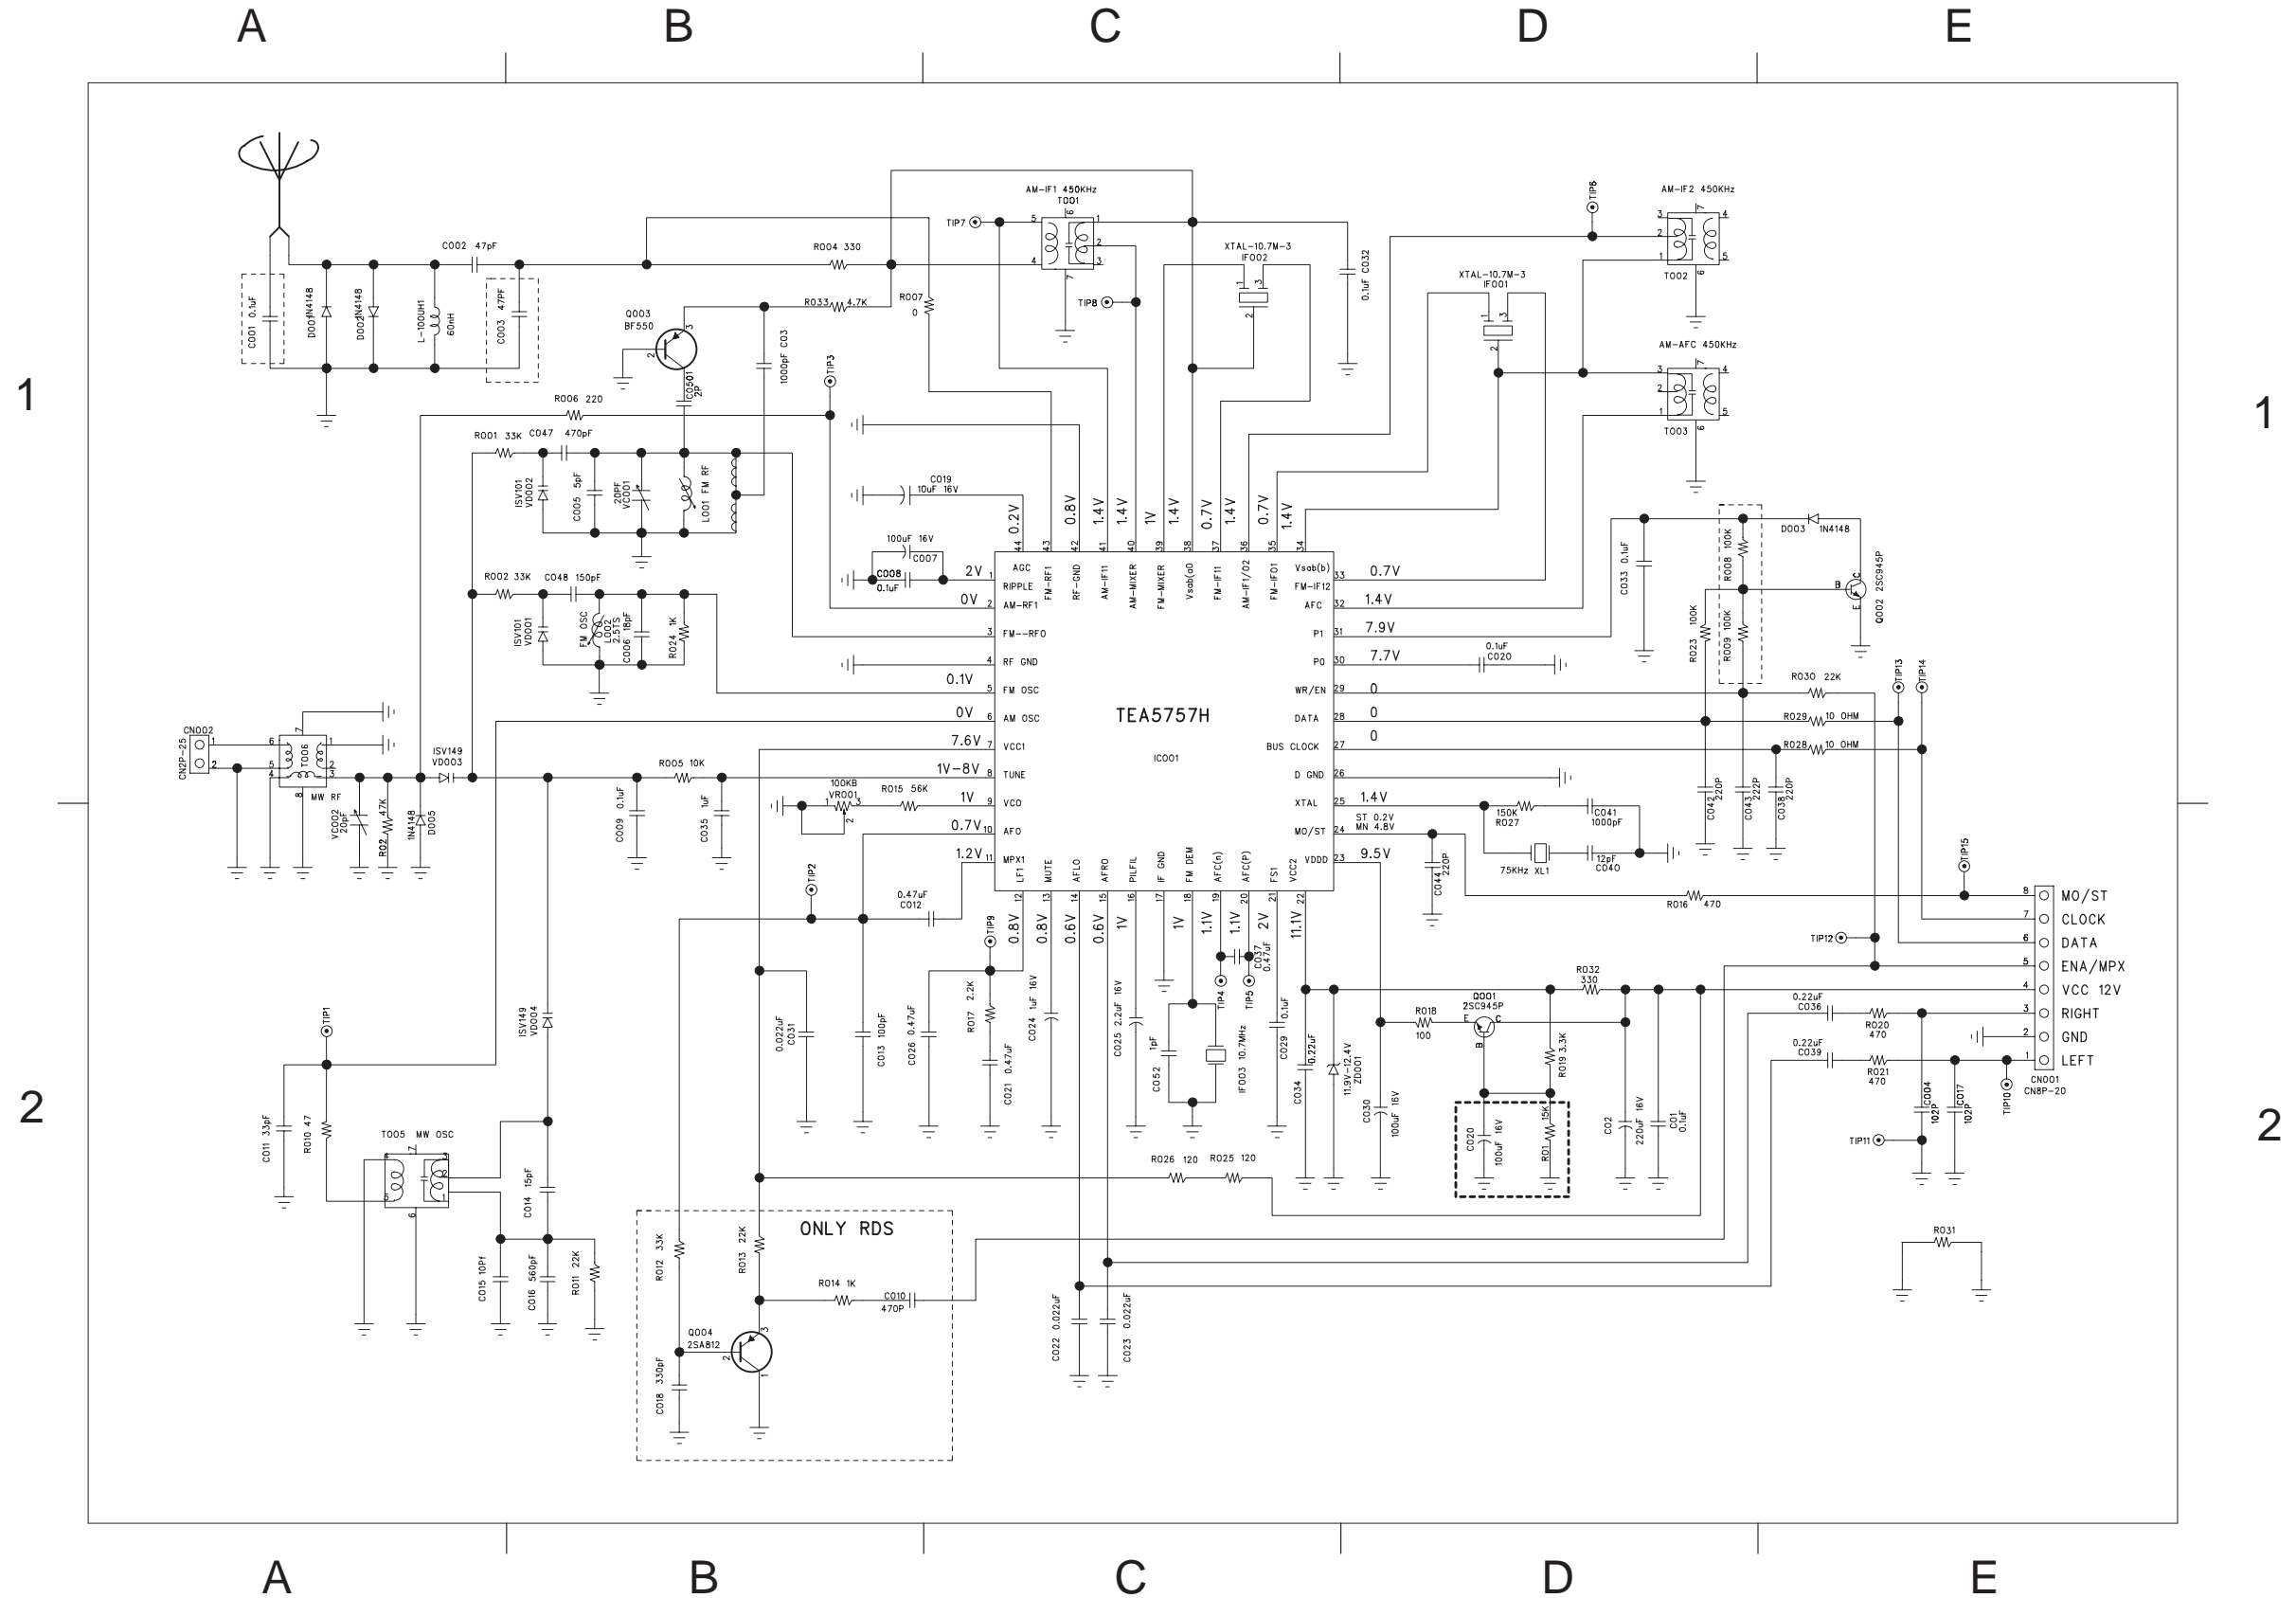


PCB LAYOUT - TUNER BOARD (TOP VIEW)

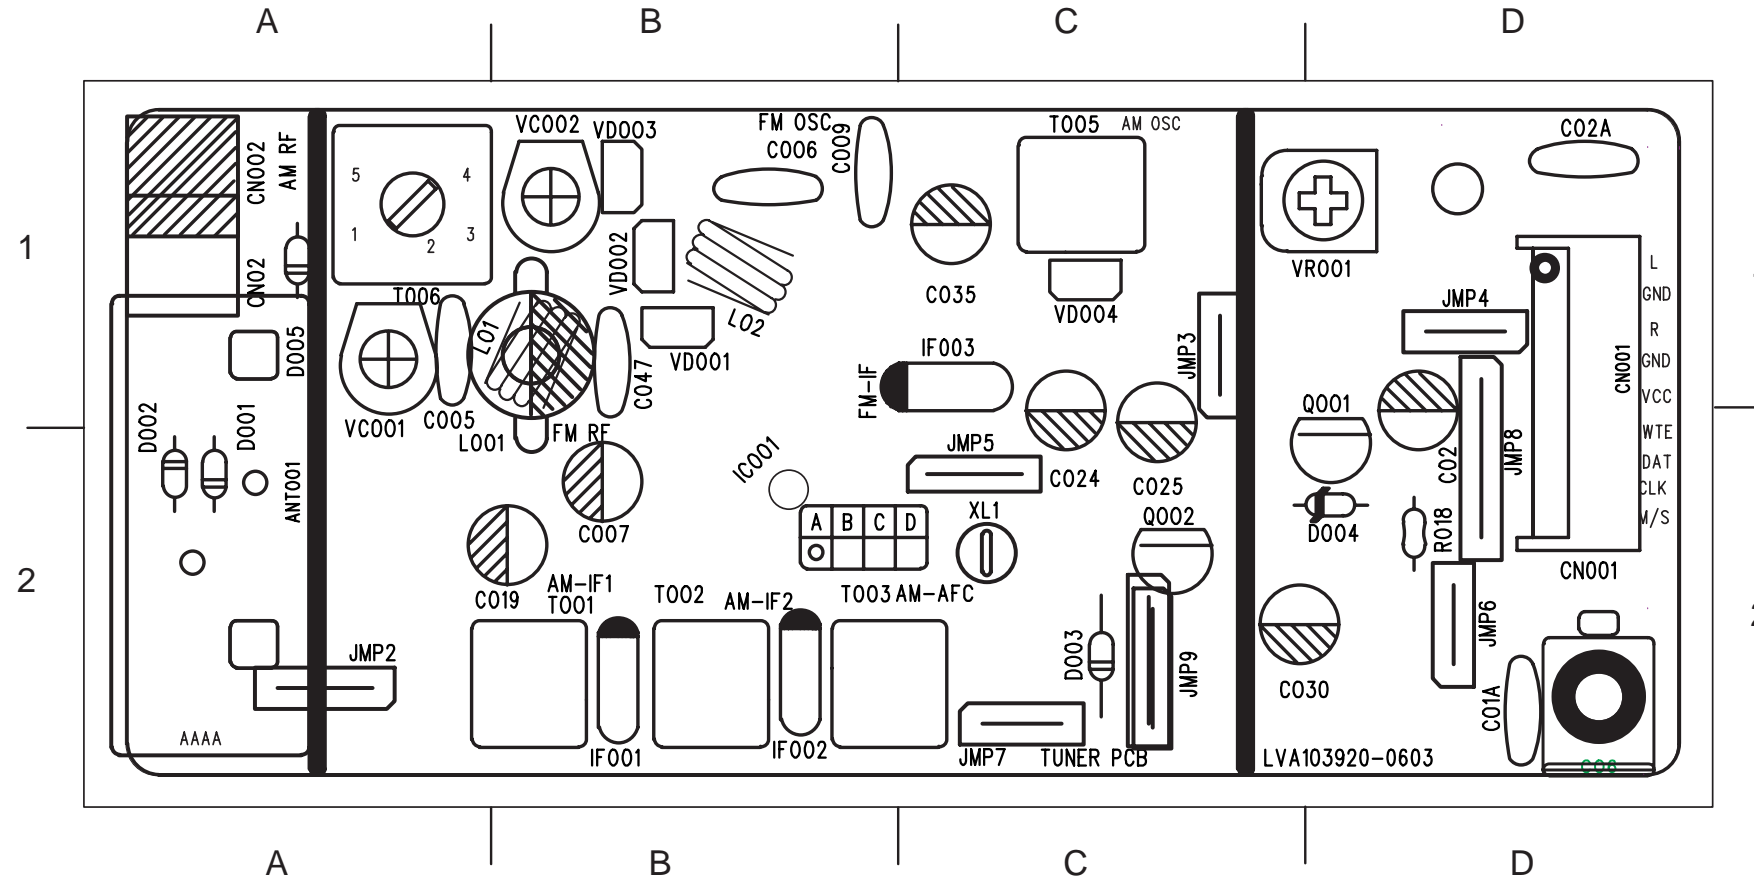

ANT001	A2	JMP4	D1
C02	D1	JMP5	C2
C005	A1	JMP6	D2
C006	B1	JMP7	C2
C007	B2	JMP8	D2
C009	B1	JMP9	C2
C01	D2	L001	B1
C019	B2	L02	B1
C024	C2	Q001	D2
C025	C2	Q002	C2
C030	D2	R018	D2
C035	C1	T001	B2
C047	B1	T002	B2
CN001	D1	T003	B2
CN002	A1	T005	C1
D001	A2	T006	A1
D002	A2	VC001	A1
D003	C2	VC002	B1
D004	D2	VD001	B1
D005	A1	VD002	B1
IF001	B2	VD003	B1
IF002	B2	VD004	C1
IF003	C1	VR001	D1
JMP2	A2	XL1	C2
JMP3	C1		

PCB LAYOUT - TUNER BOARD (BOTTOM VIEW)

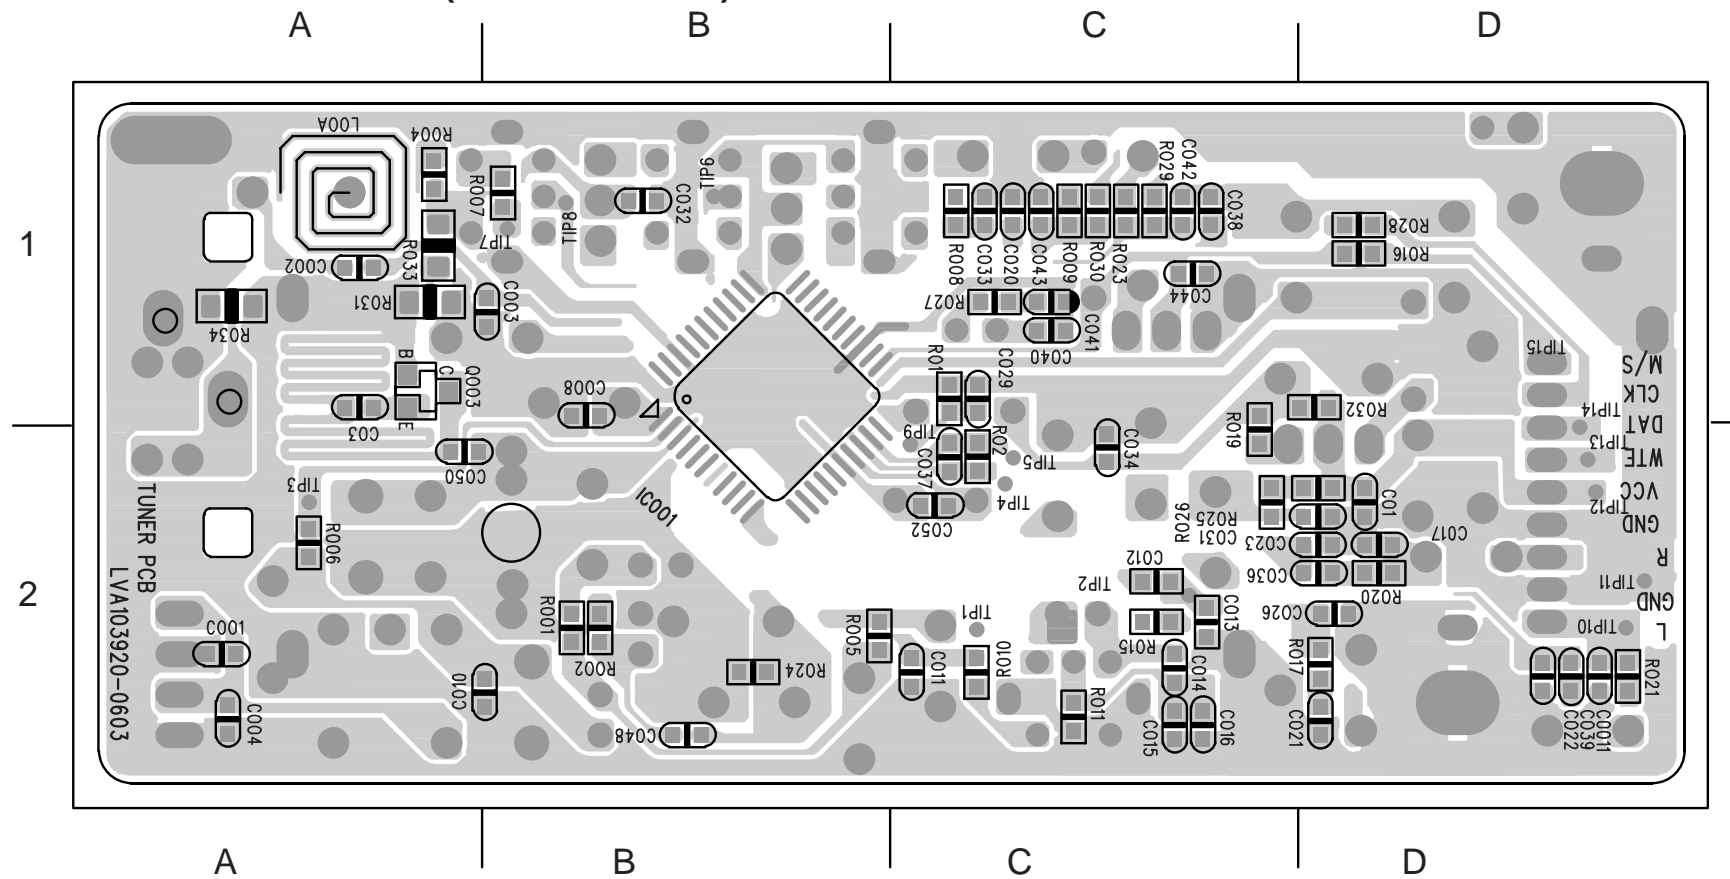

C002	A1	C050	A2
C004	A2	C052	C2
C008	B1	IC001	B1
C010	A2	Q003	A1
C011	D2	R001	B2
C012	C2	R002	B2
C013	C2	R004	A1
C014	C2	R005	B2
C015	C2	R006	A2
C016	C2	R007	B1
C020	C1	R010	C2
C021	D2	R011	C2
C022	D2	R015	C2
C023	D2	R016	D1
C026	D2	R017	D2
C029	C1	R019	C2
C03	A1	R020	D2
C031	C2	R021	D2
C032	B1	R023	C1
C033	C1	R024	B2
C034	C2	R025	C2
C036	D2	R026	C2
C037	C2	R027	C1
C038	C1	R028	D1
C039	D2	R029	C1
C040	C1	R030	C1
C041	C1	R031	A1
C042	C1	R032	D1
C043	C1	R033	A1
C044	C1	R034	A1
C048	B2		

POWER BOARD

TABLE OF CONTENTS

Voltage 8-1
 Circuit Diagram 8-2
 PCB Layout (/98 ver & /55 ver) 8-3
 PCB Layout (/37 ver) 8-4
 Electrical Parts List 8-5

VOLTAGE

IC901															
Pin NO	1	2	3	4	5	6	7	8							
Voltage	3.66	0.01	0.40	1.90	0.00	2.66	15.87	5.00							

IC902			
Pin NO	1	2	3
Voltage	5.00	-3	2.70

IC903		
Pin NO	1	2
Voltage	3.90	0.00

IC904															
Pin NO	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15
Voltage	4.90	4.90	0.00	0.40	1.30	3.20	0.00	1.20	1.20	13.30	13.30	4.90	4.90	4.90	0.00

IC905							
Pin NO	1	2	3	4	5	6	7
Voltage	0.00	4.90	0.70	0.00	1.20	4.90	12.00

IC906			
Pin NO	1	2	3
Voltage	1.10	-3.38	-3

Q901		
Pin NO	1	2
Voltage	0	278

Q902		
Pin NO	1	2
Voltage	248	296

Q903		
Pin NO	1	2
Voltage	0.8	0

Q904		
Pin NO	1	2
Voltage	0.8	0

Q905		
Pin NO	1	2
Voltage	0	5.1

Q906		
Pin NO	1	2
Voltage	-11.9	-24.8

Q908		
Pin NO	1	2
Voltage	-27.6	-28.3

Q909		
Pin NO	1	2
Voltage	5	5.18

Q910		
Pin NO	1	2
Voltage	0	-27.5

Q911		
Pin NO	1	2
Voltage	13.02	0.65

Q912		
Pin NO	1	2
Voltage	0.6	0

Q913		
Pin NO	1	2
Voltage	0	0.02

Q914		
Pin NO	1	2
Voltage	1	0.9

Q915		
Pin NO	1	2
Voltage	0.13	2.2

Q916		
Pin NO	1	2
Voltage	0	0

Q917		
Pin NO	1	2
Voltage	0	251


Q918		
Pin NO	1	2
Voltage	0	0

Q919		
Pin NO	1	2
Voltage	3.6	0

Q920		
Pin NO	1	2
Voltage	0.68	0

CIRCUIT DIAGRAM-POWER BOARD

BD901	D1	C916	B1	C931	B2	C946	B3	C961	B4	CN906	B4	D917	D4	J902	D1	Q906	C3	Q922	B2	R917	C2	R933	B3	R948	B3	R963	D4	R980	B4	R995	B2
C902	C1	C917	A1	C932	A3	C947	D3	C962	A3	D901	B1	D918	C4	L901	C1	Q908	B3	R902	B1	R918	A2	R934	C3	R949	D3	R964	B4	R981	B3	R996	B2
C903	C1	C918	A1	C933	C2	C948	A1	C963	D4	D902	C4	D919	B2	L902	C1	Q909	B3	R903	B1	R919	D2	R935	C3	R950	C3	R965	B4	R982	B3	T901	D2
C904	B1	C919	D2	C934	D2	C949	D3	C964	B4	D903	B2	D920	B2	L903	C2	Q910	B3	R905	C1	R920	A2	R936	B3	R951	B3	R966	C4	R983	B3	T902	C2
C905	C1	C920	B2	C935	D2	C950	C3	C965	B4	D904	C2	D921	B2	L904	B3	Q911	B3	R906	B2	R921	B2	R937	B2	R952	B3	R967	C4	R984	B3	T903	B2
C906	B1	C921	B1	C936	B2	C951	C3	C966	A1	D905	D2	D922	C1	L905	D3	Q912	B3	R907	C1	R922	B2	R938	B3	R953	B3	R968	B4	R985	A2	TVR901	B1
C907	B2	C922	C2	C937	B2	C952	D3	C968	A1	D906	B2	F901	B1	L906	B3	Q913	A4	R908	D1	R924	A2	R939	B3	R954	D4	R969	B4	R986	A4	TVR902	D1
C908	D1	C923	D2	C938	B2	C953	D3	C969	B2	D909	B2	F902	B1	L907	D3	Q914	B4	R909	D1	R925	B2	R940	B3	R955	B4	R970	A2	R987	A2	TVR903	D1
C909	D1	C924	D2	C939	B2	C954	B2	C970	B2	D910	B2	IC902	A2	L908	A3	Q915	A1	R910	B1	R926	B2	R941	A3	R956	B4	R971	B1	R988	A2	ZD902	C4
C910	D1	C925	B2	C940	D2	C955	C3	C971	A3	D911	B2	IC903	A2	NTC901	B1	Q916	B3	R911	C2	R927	D3	R942	C3	R957	D4	R974	B4	R989	A2	ZD903	C2
C911	D1	C926	B2	C941	B2	C956	D3	C972	A2	D912	C3	IC904	C4	Q901	C2	Q917	B2	R912	D2	R928	C2	R943	C3	R958	C4	R975	B4	R990	B2	ZD904	D2
C912	B1	C927	A2	C942	B2	C957	B2	CN901	A1	D913	D3	IC905A	C4	Q902	D2	Q918	A2	R913	B2	R929	A3	R944	D3	R959	B4	R976	B4	R991	B2	ZD905	B3
C913	B1	C928	B2	C943	B3	C958	B3	CN903	D1	D914	C3	IC905B	C4	Q903	C3	Q919	B3	R914	C2	R930	A3	R945	B3	R960	D4	R977	B3	R992	A4	ZD906	D4
C914	A1	C929	C2	C944	B3	C959	C3	CN904	D4	D915	C3	IC906	A2	Q904	C3	Q920	A3	R915	D2	R931	C3	R946	B1	R961	D4	R978	A1	R993	A4	ZD907	C4
C915	A1	C930	B2	C945	D3	C960	A3	CN905	A4	D916	D3	J901	D1	Q905	B3	Q921	B2	R916	D2	R932	C3	R947	B3	R962	C4	R979	B3	R994	A4	ZD909	B2

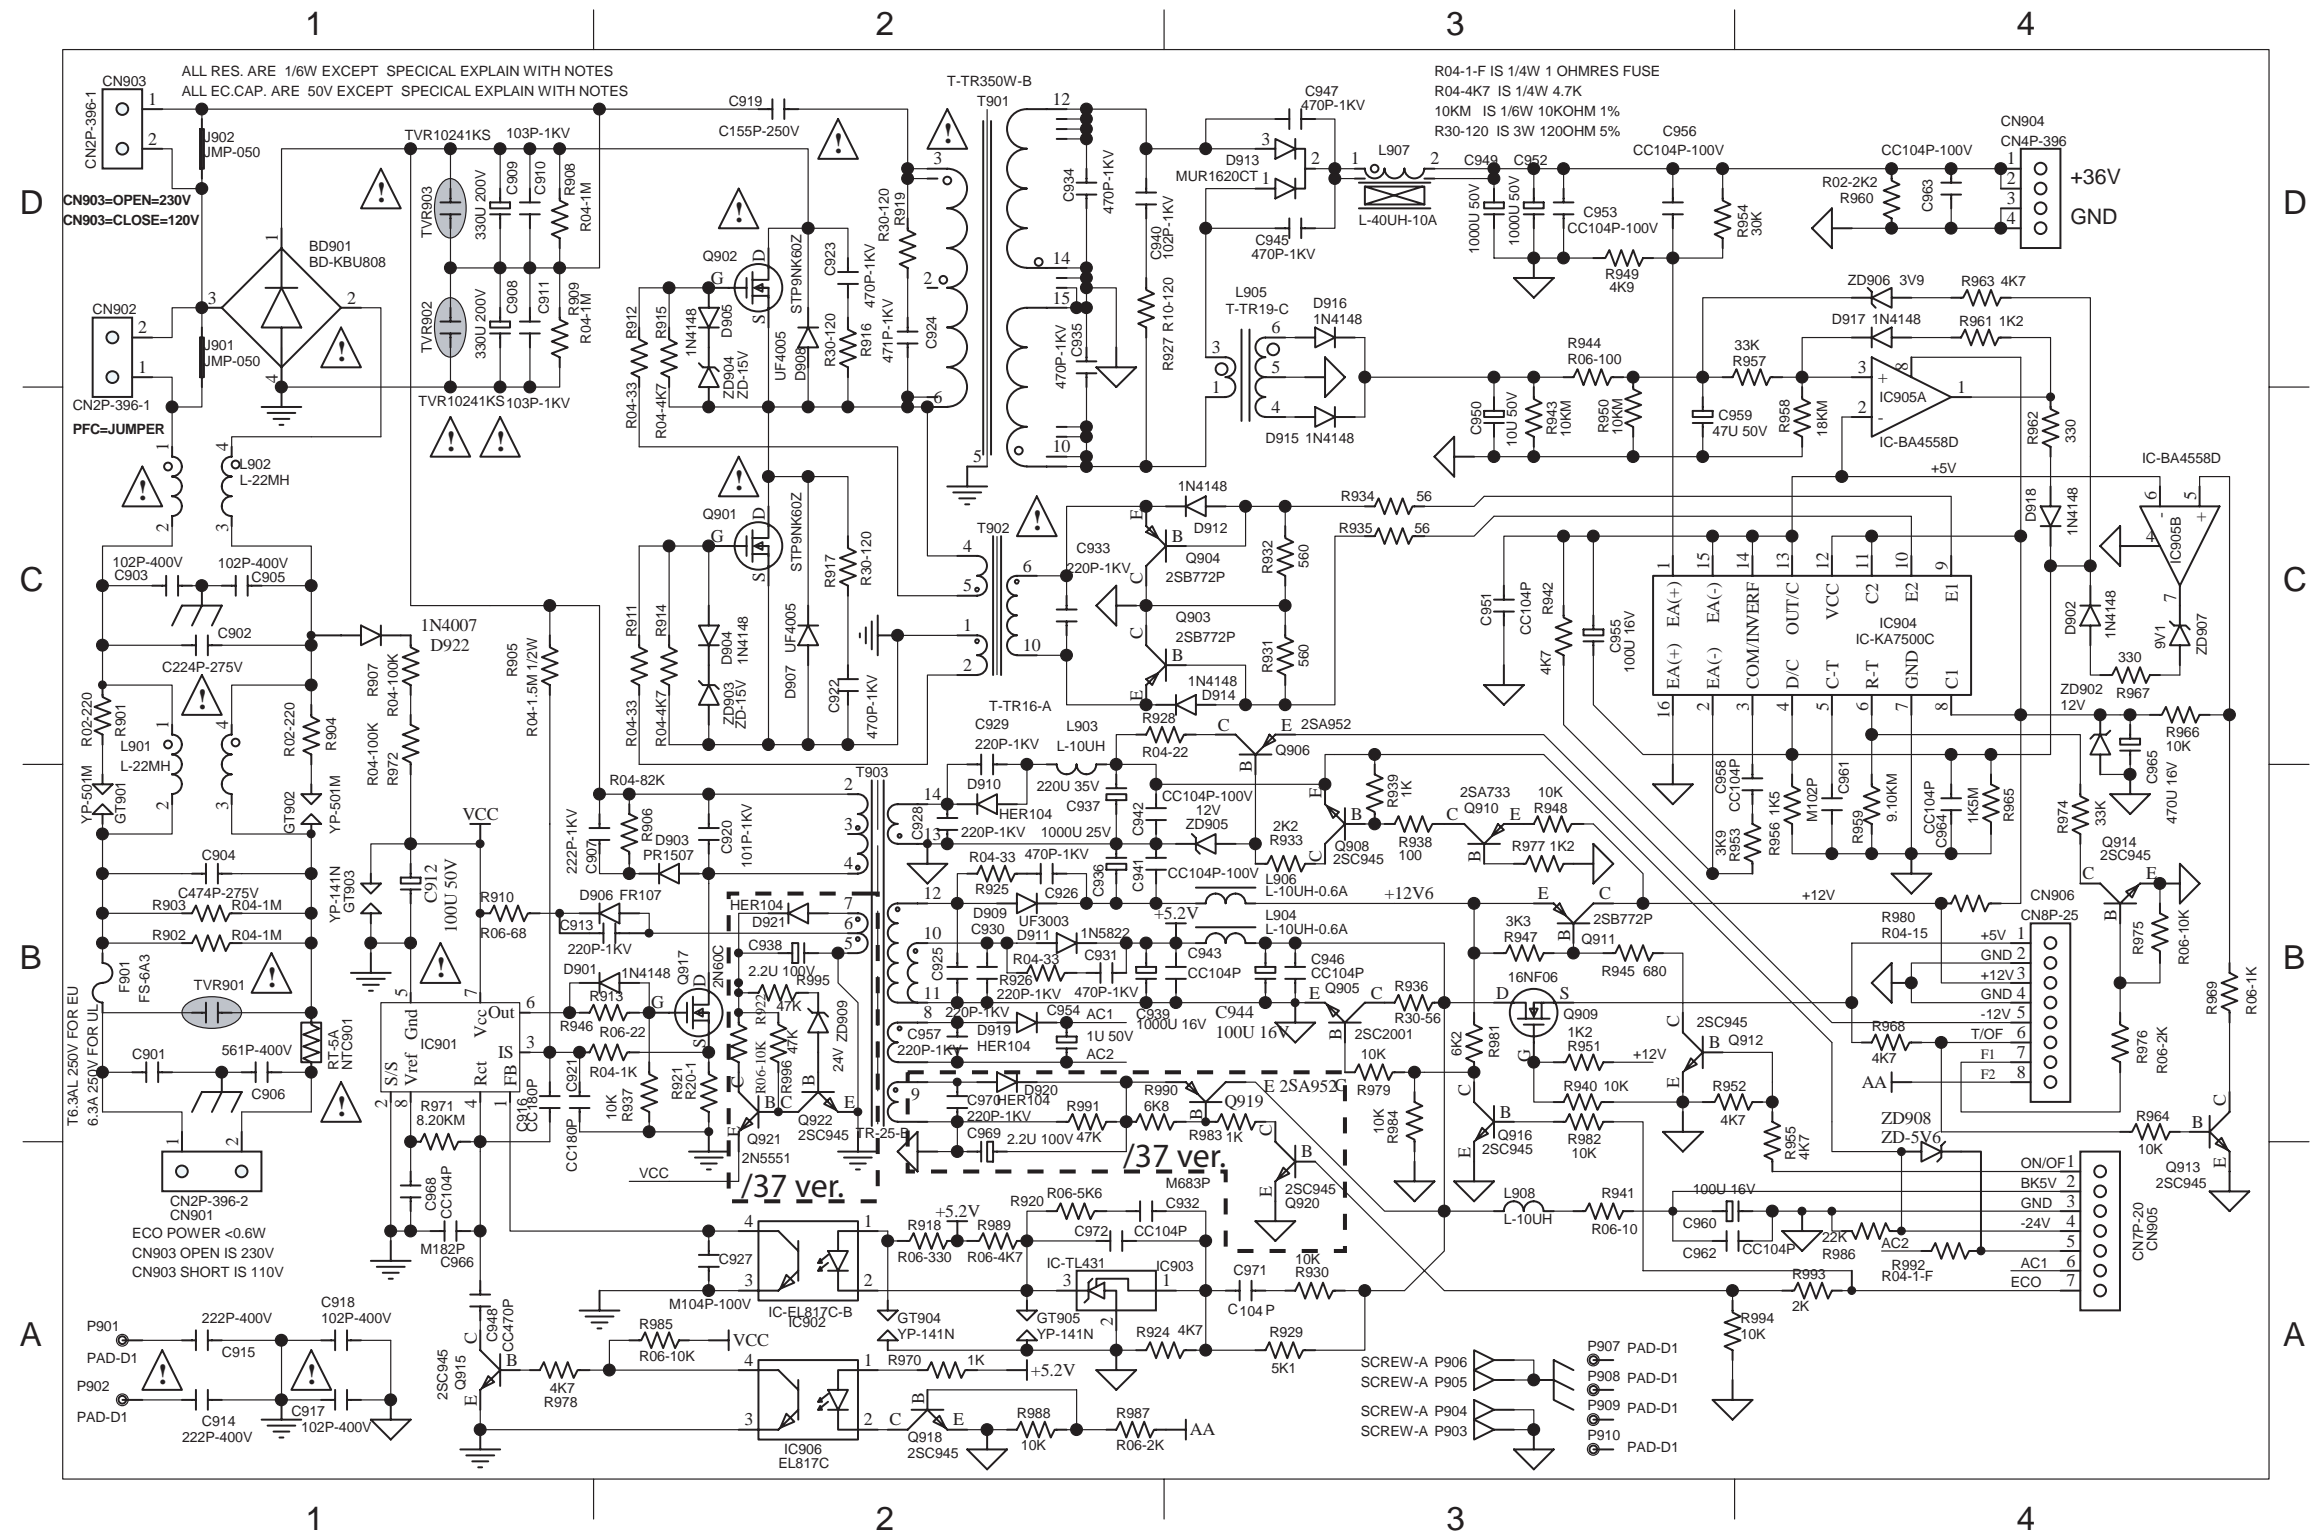


PCB LAYOUT-POWER BOARD (/98 ver. & /55 ver.)

BD901 A1	C914 B1	C928 B2	C942 B3	C956 A3	C971 B3	D908 B2	GT902 B1	J905 B1	J920 B3	L907 A3	Q912 B3	R906 B2	R920 B3	R935 A2	R949 A3	R963 A3	R977 B3	T901 A2
C901 B1	C915 A2	C929 B2	C943 B3	C957 B3	CN901 B1	D909 B2	GT903 B2	J906 B1	J921 B3	NTC901B1	Q913 B3	R907 B1	R921 B2	R936 B3	R950 A3	R964 B3	R978 B2	T902 A2
C902 A1	C916 B2	C930 B2	C944 B3	C958 A3	CN902 A1	D910 B2	GT904 B2	J907 B1	J922 B3	P901 A1	Q914 B3	R908 A1	R923 B3	R937 B1	R951 B3	R965 A2	R979 B3	T903 B2
C903 A1	C917 B2	C931 B2	C945 A3	C959 A3	CN903 A1	D911 B2	GT905 B2	J908 B2	J923 B2	P902 B1	Q915 B2	R909 A1	R924 B2	R938 B3	R952 B3	R966 B3	R980 B3	TVR901B1
C904 B1	C918 A2	C932 B3	C946 B3	C960 B3	CN904 B3	D912 B2	IC901 B2	J909 B2	J924 B2	Q901 A2	Q916 B3	R910 B2	R925 B2	R939 B3	R953 A3	R967 A3	R981 B3	TVR902A1
C905 B1	C919 A1	C933 B2	C947 A3	C961 A2	CN905 B3	D913 A3	IC902 B2	J910 B2	J925 B2	Q902 B2	Q917 B2	R911 A2	R926 B2	R940 B3	R954 A3	R968 B3	R982 B3	TVR903A1
C906 B1	C920 B2	C934 A2	C948 B2	C962 B3	CN906 B3	D914 A2	IC903 B2	J911 B2	J926 B2	Q903 A2	Q918 B2	R912 B2	R927 A2	R941 B3	R955 B3	R969 B3	R983 B2	ZD902 B3
C907 B2	C921 B2	C935 A2	C949 A3	C963 A3	D901 B2	D915 A3	IC904 B2	J912 B3	J930 B2	Q904 B2	Q919 B2	R913 B2	R928 B3	R942 A3	R956 A3	R970 B2	R984 B3	ZD903 A2
C908 A1	C922 A2	C936 B3	C950 A3	C964 A3	D902 A3	D916 A3	IC905 B3	J913 B3	L901 B1	Q905 B3	Q920 B2	R914 A2	R929 B3	R943 A3	R957 A3	R971 B2	R985 B1	ZD904 B2
C909 B1	C923 A2	C937 B3	C951 A3	C965 B3	D903 B2	D917 B3	IC906 B2	J915 B3	L902 A1	Q906 B3	R901 B1	R915 B2	R930 B3	R944 A3	R958 A3	R972 B1	R986 B3	ZD905 B3
C910 A1	C924 A2	C938 B3	C952 A3	C966 B2	D904 A2	D918 B3	J901 A1	J916 B3	L903 B3	Q908 B3	R902 B1	R916 A2	R931 A2	R945 B3	R959 A2	R973 B2	R987 B3	ZD906 A3
C911 A1	C925 B2	C939 B3	C953 A3	C967 B2	D905 B2	D919 B2	J902 A1	J917 B3	L904 B3	Q909 B3	R903 B1	R917 A2	R932 B2	R946 B2	R960 A3	R974 B3	R988 B3	ZD907 A3
C912 B2	C926 B2	C940 A2	C954 B3	C968 B2	D906 B2	D920 B2	J903 A1	J918 B3	L905 A3	Q910 B3	R904 B1	R918 B2	R933 B3	R947 B3	R961 B3	R975 B3	R989 B2	
C913 B2	C927 B3	C941 B2	C955 A3	C970 B2	D907 A2	F901 B1	J904 A1	J919 B2	L906 B3	Q911 B3	R905 B2	R919 A2	R934 B2	R948 B3	R962 B3	R976 B3	R990 B2	

A

B

C

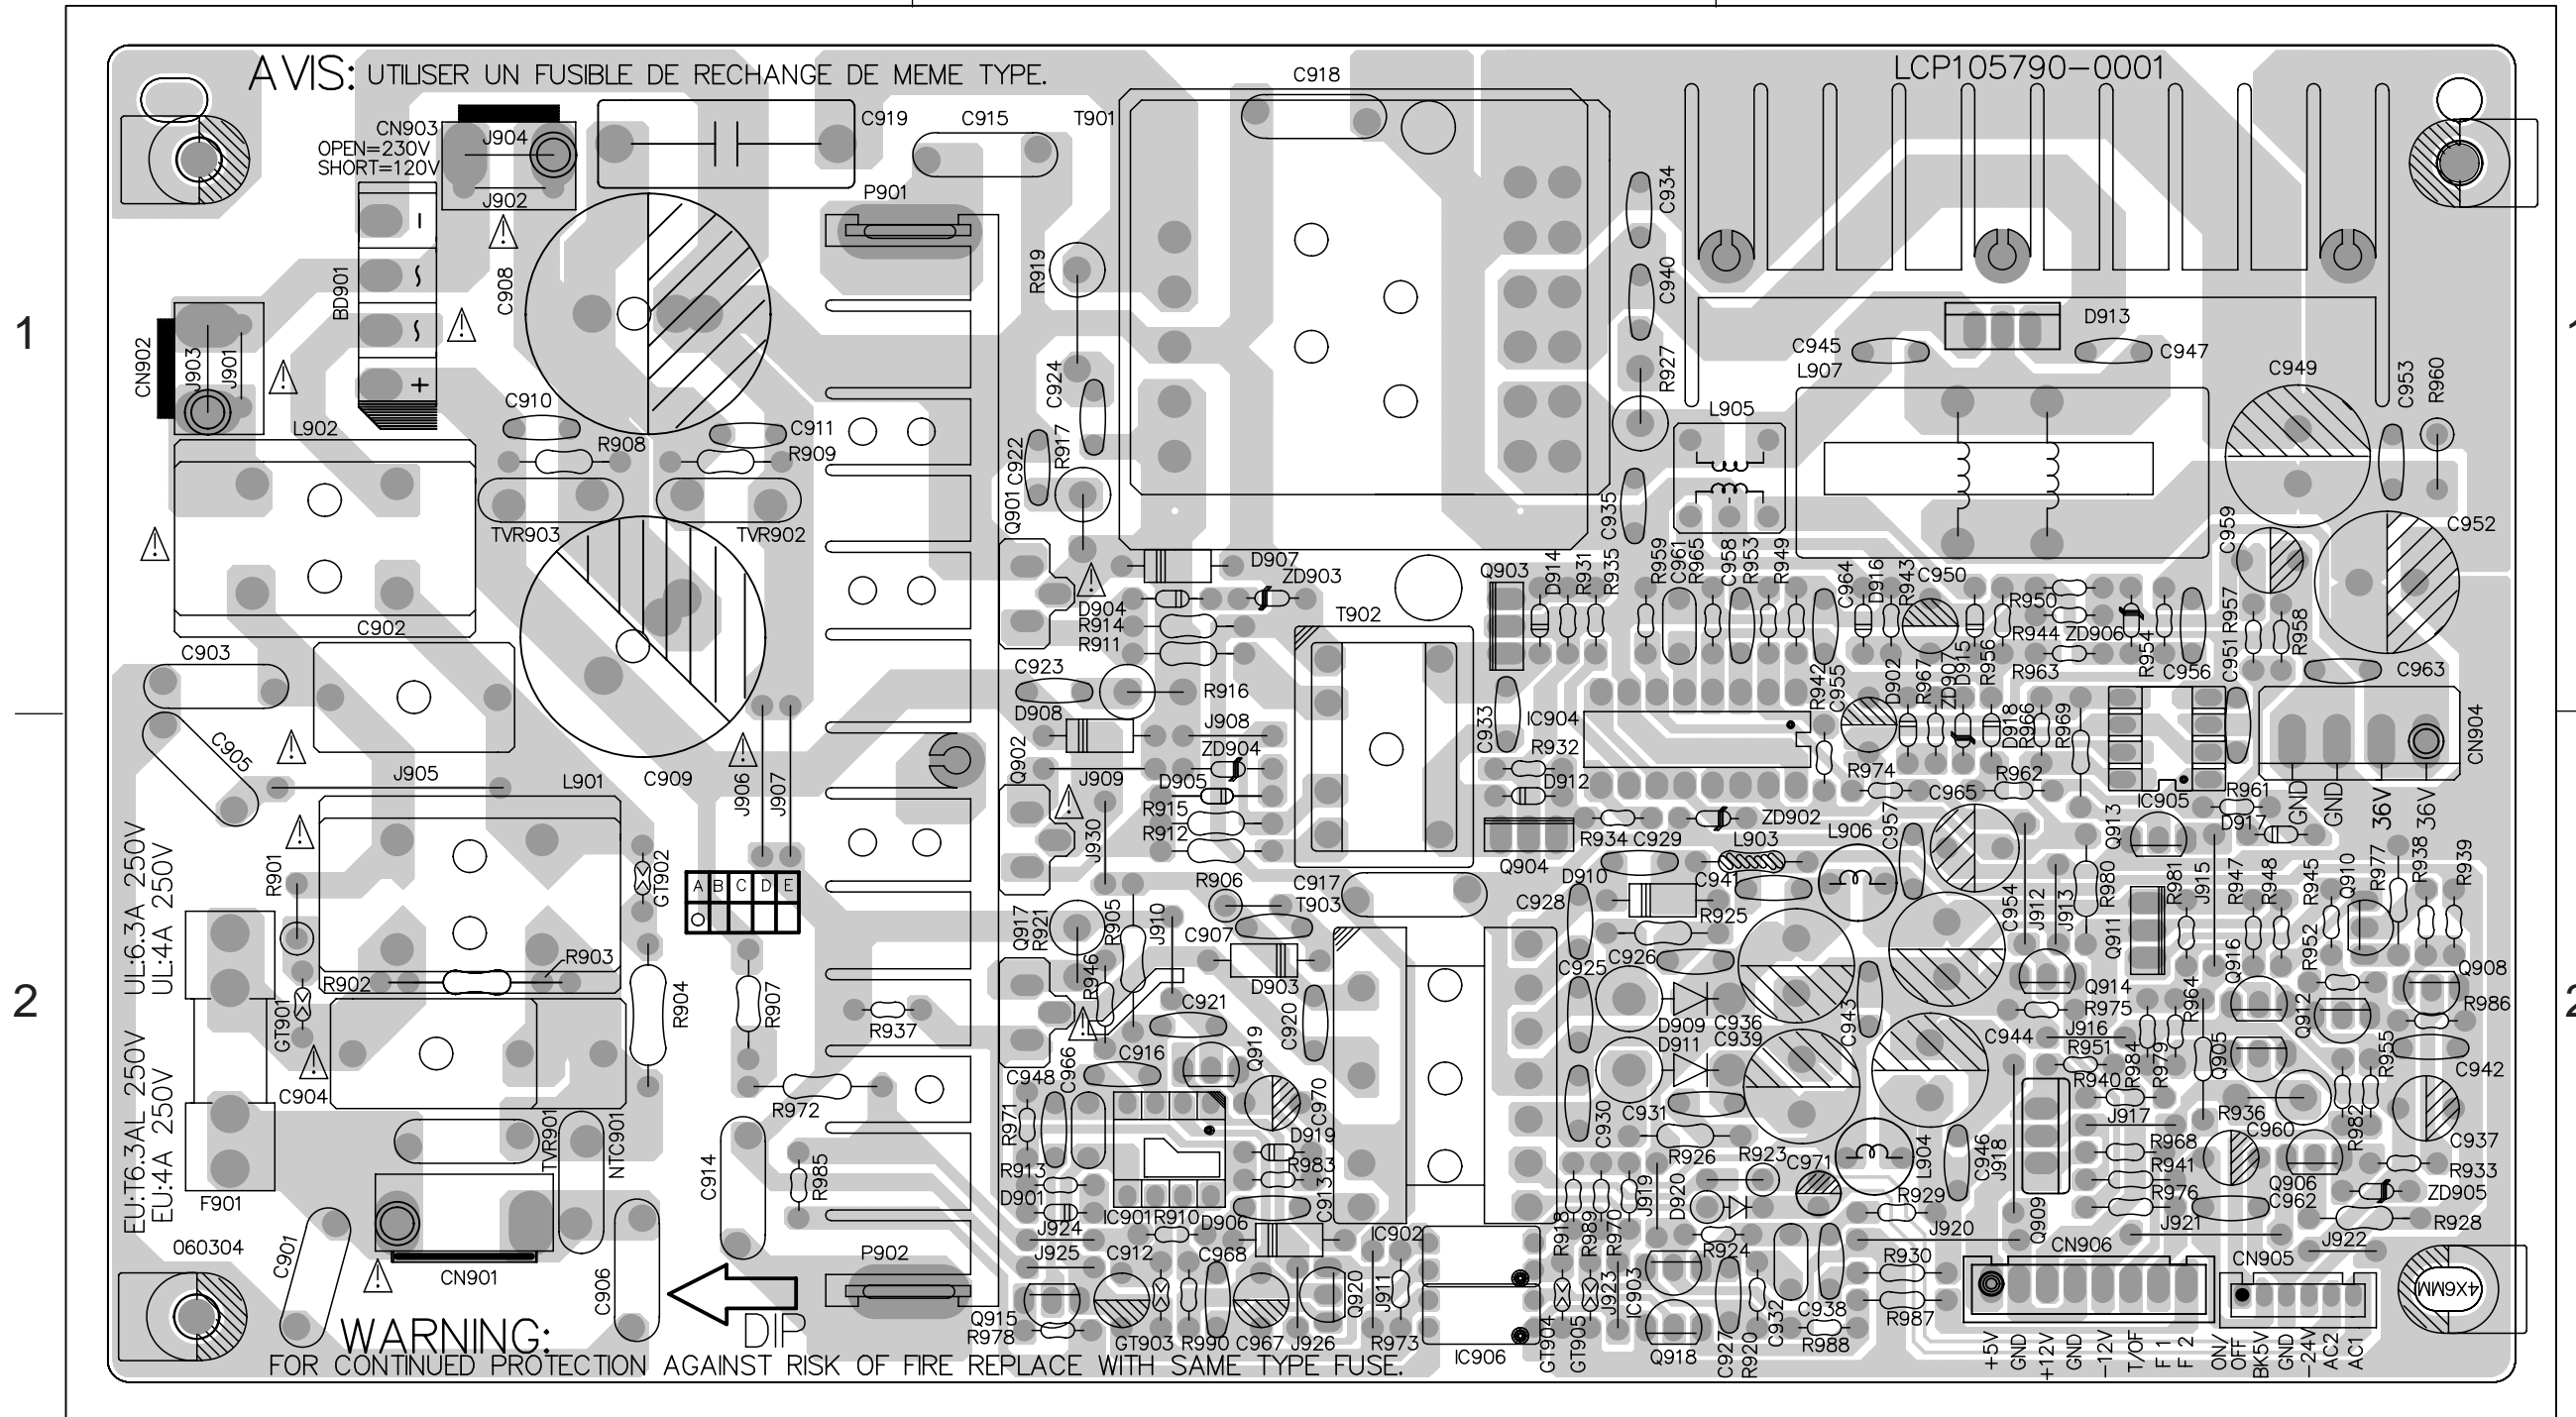


A

B

C

PCB LAYOUT-POWER BOARD (/37 ver.)

BD901	A1	C921	B2	C941	C2	C961	B1	D905	B2	IC904	B2	J919	C2	Q902	B2	R902	A2	R924	B2	R944	C1	R964	C2	R985	A2	ZD904	B2
C902	A1	C922	B1	C942	C2	C962	C2	D906	B2	IC905	C1	J920	C2	Q903	B1	R903	A2	R925	B2	R945	C2	R965	B1	R986	C2	ZD905	C2
C903	A1	C923	B1	C943	C2	C963	C1	D909	B2	IC906	B2	J921	C2	Q904	B2	R905	B2	R926	C2	R946	B2	R966	C2	R987	C2	ZD906	C1
C904	A2	C924	B1	C944	C2	C964	C1	D910	B2	J901	A1	J922	C2	Q905	C2	R906	B2	R927	B1	R947	C2	R967	C2	R988	B2	ZD907	C2
C905	A2	C925	B2	C945	C1	C965	C2	D911	B2	J902	A1	J923	C2	Q906	C2	R907	A2	R928	C2	R948	C2	R968	C2	R989	B2	ZD909	B2
C906	A2	C926	C2	C946	C2	C966	B2	D912	B2	J904	A1	J924	B2	Q908	C2	R908	A1	R929	C2	R949	C1	R969	C2	R990	C2		
C907	B2	C927	B2	C947	C1	C968	B2	D913	C1	J905	A2	J925	C2	Q909	C2	R909	A1	R930	C2	R950	C1	R970	B2	R991	B2		
C908	A1	C928	B2	C948	B2	C969	C2	D914	B1	J906	A2	J926	C2	Q910	C2	R910	B2	R931	B1	R951	C2	R971	B2	R992	C2		
C909	A2	C929	B2	C949	C1	C970	B2	D915	C1	J907	A2	J927	C2	Q911	C2	R911	B1	R932	B2	R952	C2	R972	A2	R993	C2		
C910	A1	C930	B2	C950	C1	C971	C2	D916	C1	J908	B2	J928	C2	Q912	C2	R912	B2	R933	C2	R953	C1	R974	C2	R994	C2		
C911	A1	C931	C2	C951	C2	C972	C2	D917	C1	J909	B2	L901	A2	Q913	C2	R913	A2	R934	B2	R954	C1	R975	C2	R995	B2		
C912	B2	C932	C2	C952	C1	CN901	A2	D918	C2	J910	B2	L902	A1	Q914	C2	R914	B1	R935	B1	R955	C2	R976	C2	R996	B2		
C913	B2	C933	B2	C953	C1	CN903	A1	D919	C2	J911	B2	L903	B2	Q915	B2	R915	B2	R936	C2	R956	C1	R977	C2	T901	B1		
C914	A2	C934	B1	C954	C2	CN904	C2	D920	B2	J912	B2	L904	C2	Q916	C2	R916	B1	R937	A2	R957	C1	R978	A2	T902	B1		
C915	B1	C935	B1	C955	C1	CN905	C2	D921	B2	J913	B2	L905	C1	Q917	B2	R917	B1	R938	C2	R958	C1	R979	C2	T903	B2		
C916	B2	C936	C2	C956	C1	CN906	C2	D922	A2	J914	B2	L906	C2	Q918	B2	R918	B2	R939	C2	R959	B1	R980	C2	TVR901	A2		
C917	B2	C937	C2	C957	B2	D901	A2	F901	A2	J915	B2	L907	C1	Q919	C2	R919	B1	R940	C2	R960	C1	R981	C2	TVR902	A1		
C918	B1	C938	B2	C958	C1	D902	C2	IC901	B2	J916	C1	L908	C2	Q920	C2	R920	C2	R941	C2	R961	C2	R982	C2	TVR903	A1		
C919	A1	C939	B2	C959	C1	D903	B2	IC902	B2	J917	C2	NTC901	A2	Q921	B2	R921	B2	R942	C2	R962	C2	R983	C2	ZD902	C2		
C920	B2	C940	B1	C960	C2	D904	B1	IC903	B2	J918	C2	Q901	B1	Q922	B2	R922	B2	R943	C1	R963	C1	R984	C2	ZD903	B1		

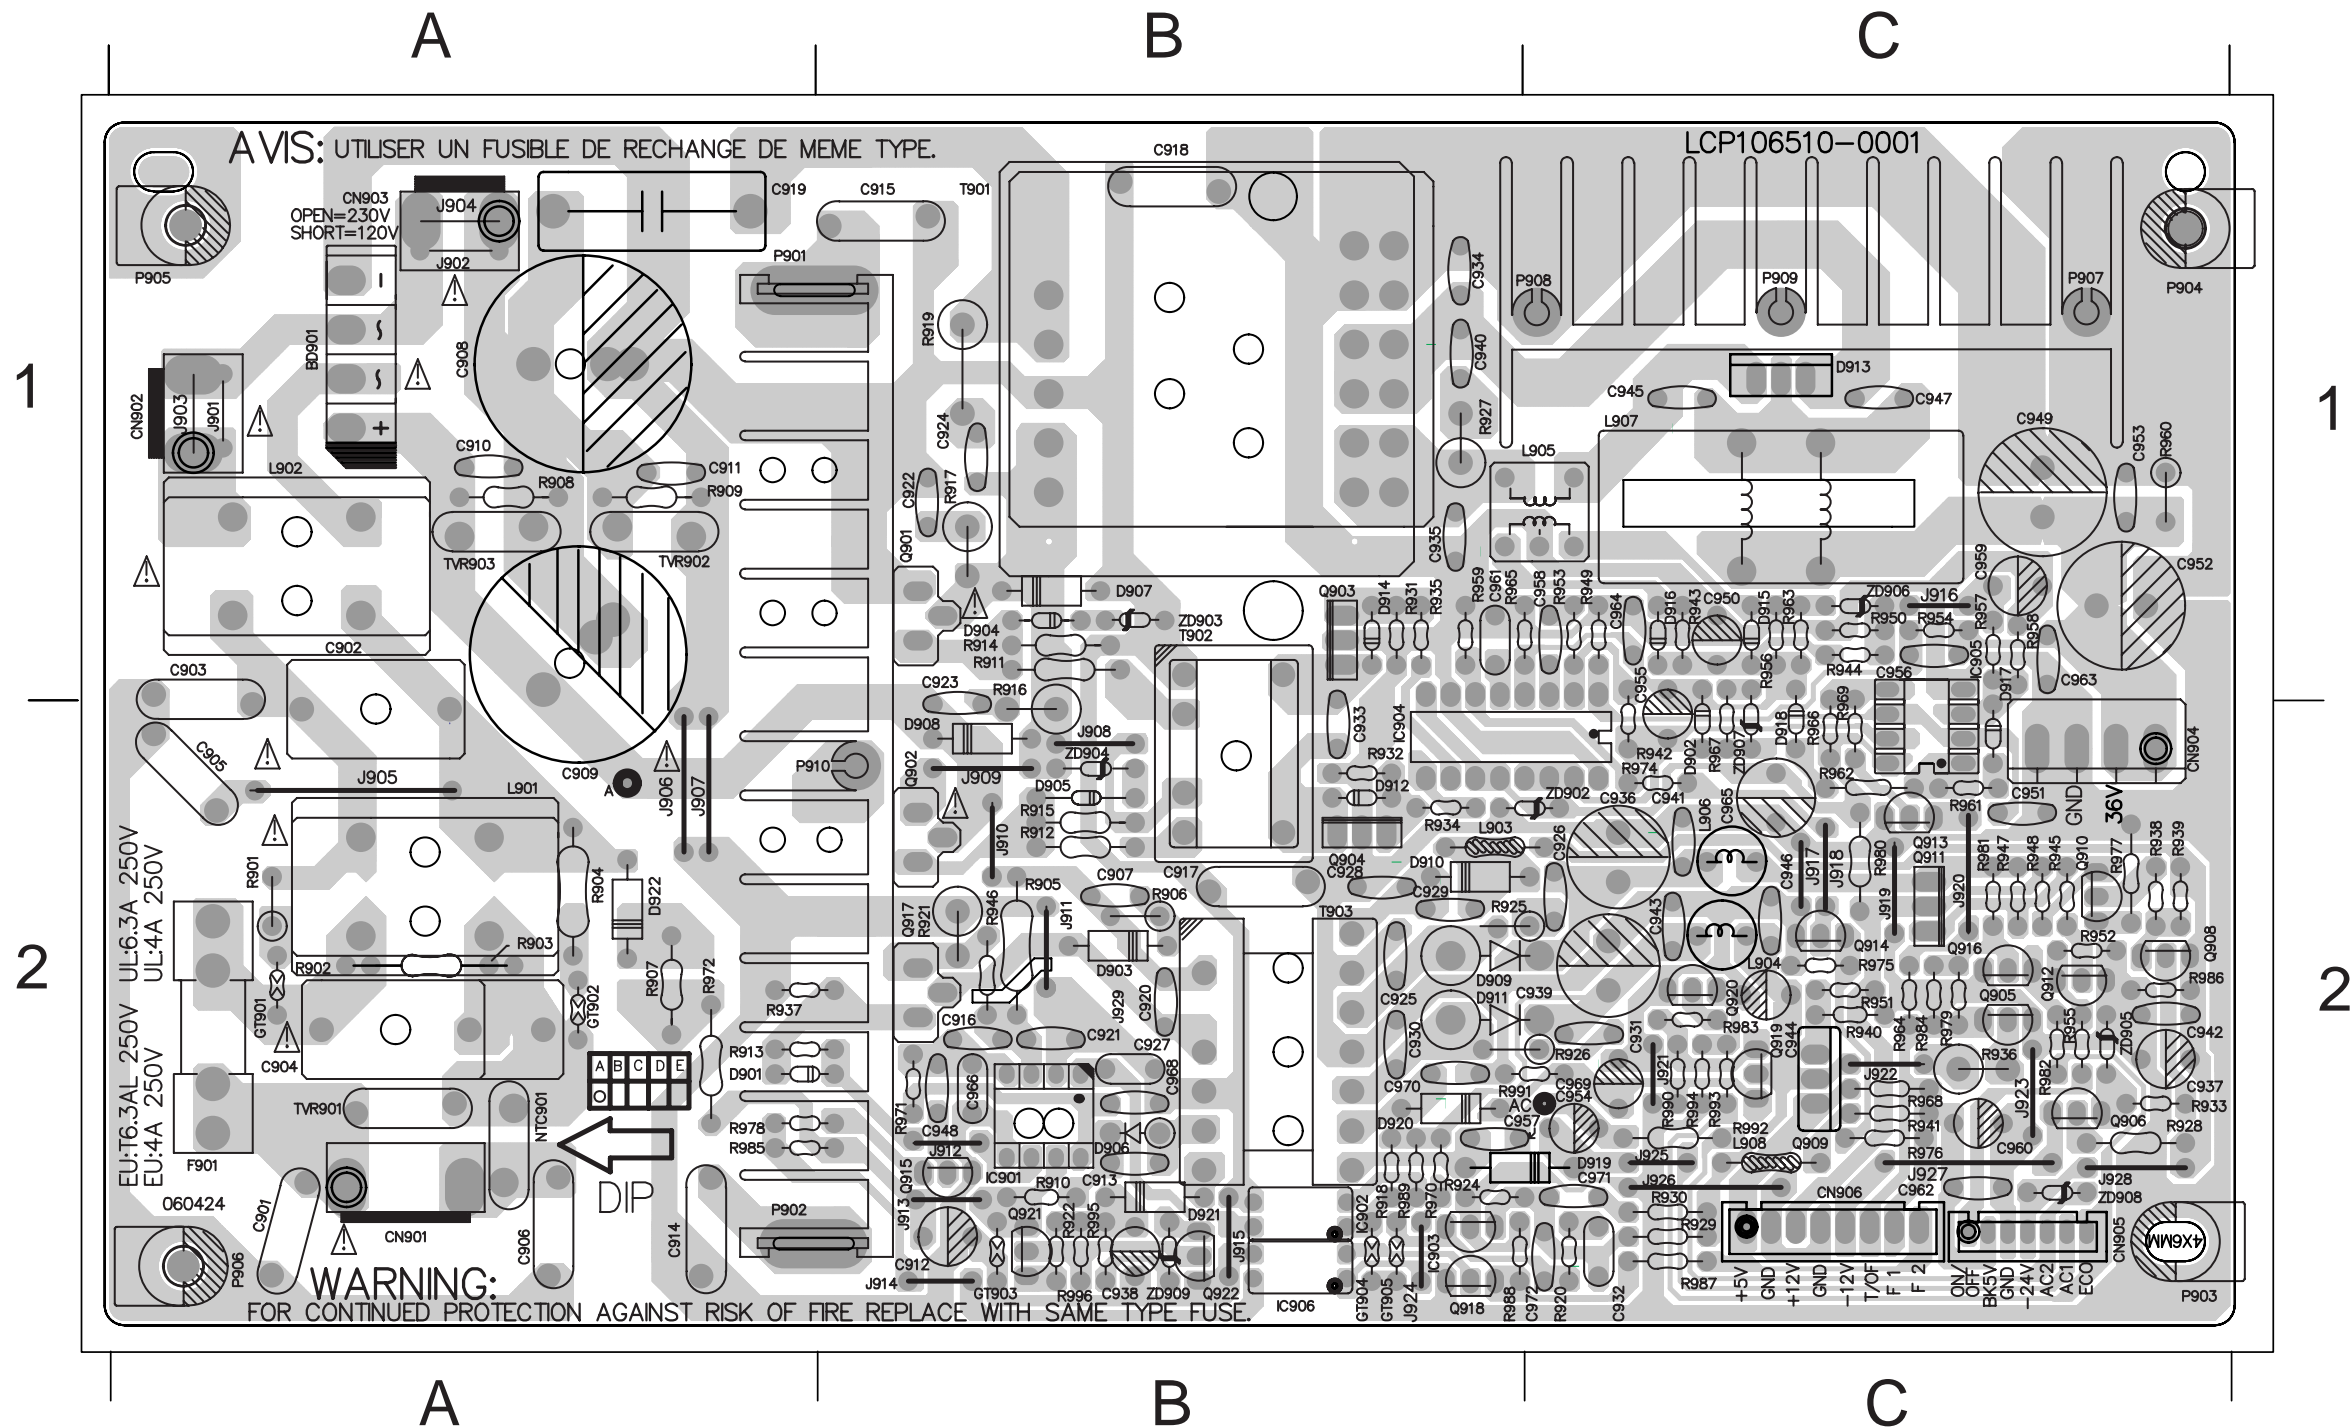


ELECTRICAL PARTS LIST - POWER BOARD

BD901	9965 000 28768	BRIDGE KBU8B 8A 100V	L907	9940 000 05341	COMMON COIL 65UH /-10%
C903	△ 9965 000 27115	CAP.SAFTY Y1 102PF 250V 20%	Q903	9965 000 26946	XISTR PNP 2SB772P/Q
C904	△ 9940 000 00932	COND SAFTY 0.47UF 275V 10%	Q904	9965 000 26946	XISTR PNP 2SB772P/Q
C905	△ 9965 000 27115	CAP.SAFTY Y1 102PF 250V 20%	Q905	4822 130 41651	2SC2001L
C907	9965 000 18042	COND DISC 0.01UF 1KV 20%	Q906	9940 000 05347	XISTR PNP 2SA952-K
C911	9965 000 18042	COND DISC 0.01UF 1KV 20%	Q908	4822 130 41198	2SC945P
C913	9940 000 05236	COND DISC 220PF 1KV 10%	Q909	4822 130 11336	STP16NF06FP
C917	△ 9965 000 27115	CAP.SAFTY Y1 102PF 250V 20%	Q910	9965 000 28743	XISTR PNP 2SA733Q,P
C918	△ 9965 000 27115	CAP.SAFTY Y1 102PF 250V 20%	Q911	9965 000 26946	XISTR PNP 2SB772P/Q
C920	9940 000 05235	COND DISC 100PF 1KV 10%	Q912	4822 130 41198	2SC945P
C922	9965 000 20264	COND DISC 470PF 1KV 10%	Q913	4822 130 41198	2SC945P
C923	9965 000 20264	COND DISC 470PF 1KV 10%	Q914	4822 130 41198	2SC945P
C924	9965 000 20261	COND DISC 0.001UF 1KV 20%	Q915	4822 130 41198	2SC945P
C925	9940 000 05236	COND DISC 220PF 1KV 10%	Q916	4822 130 41198	2SC945P
C926	9965 000 20264	COND DISC 470PF 1KV 10%	Q917	9940 000 05348	MOSFET STF3NK80Z N-CH 2.5A
C928	9940 000 05236	COND DISC 220PF 1KV 10%	Q918	4822 130 41198	2SC945P
C929	9940 000 05236	COND DISC 220PF 1KV 10%	Q919	9965 000 28743	XISTR PNP 2SA733Q,P
C930	9940 000 05236	COND DISC 220PF 1KV 10%	Q920	4822 130 41198	2SC945P
C931	9965 000 20264	COND DISC 470PF 1KV 10%	R922	△ 9940 000 05246	FUSE. RES 2.7R 1/4W 5%
C933	9940 000 05236	COND DISC 220PF 1KV 10%	R923	△ 9940 000 05246	FUSE. RES 2.7R 1/4W 5%
C934	9965 000 20264	COND DISC 470PF 1KV 10%	T901	△ 9965 000 38408	TRANS. EC-3942 8 8PIN
C935	9965 000 20264	COND DISC 470PF 1KV 10%	T902	△ 9940 000 01057	SW. MODEL TRANSFORMER
C940	9965 000 20261	COND DISC 0.001UF 1KV 20%	T903	9940 000 05342	TRANS FERRITE CORE ER-25
C945	9965 000 20264	COND DISC 470PF 1KV 10%	TVR901	9965 000 32754	THERMIST 50A 561V
C947	9965 000 20264	COND DISC 470PF 1KV 10%	TVR902	9965 000 27114	VARIS. TVR10
D903	9940 000 00938	DIODE PR1507 1.5A 1000V	TVR903	9965 000 27114	VARIS. TVR10
D906	9965 000 09537	DIODE FR107 1A/1000V	ZD902	9965 000 26940	DIODE ZENR 11.9-12.4V 0.5W
D909	9940 000 00943	DIODE UF3003 3A 200V	ZD903	9940 000 02067	DIODE ZENR 14.5-15.1V 0.5W
D910	9940 000 00941	DIODE HER104 1A 300V 50NS	ZD904	9940 000 02067	DIODE ZENR 14.5-15.1V 0.5W
D911	9940 000 05249	DIODE SB360 3A 60V	ZD905	9965 000 26940	DIODE ZENR 11.9-12.4V 0.5W
D913	9940 000 05346	RECTIFIER UF1602CT	ZD906	9965 000 27138	DIODE ZENR 3.8-4.0V 0.5W
F901	△ 9965 000 28769	FUSE 6.3A 250V /55/98	ZD907	9965 000 28741	DIODE ZENR 9.1-9.5V 0.5W
F901	△ 9965 000 38663	FUSE CERAMIC 6.3A 250V /37			
GT901	9965 000 29309	ABSORBER YP-501M 500V 500A			
GT903	9965 000 29310	ABSORBER YP-141N 140V 500A			
GT904	9965 000 29310	ABSORBER YP-141N 140V 500A			
GT905	9965 000 29310	ABSORBER YP-141N 140V 500A			
IC901	9940 000 05255	IC 8P UC3843AL			
IC902	9940 000 00946	OPTICAL SENSOR 4P			
IC903	9940 000 00952	IC 3PIN TL431			
IC904	9940 000 00951	IC 16PIN KA7500C			
IC905	9940 000 00949	IC 8PIN JRC4558D			
IC906	9940 000 00946	OPTICAL SENSOR 4P			
L902	9940 000 05233	COMMON COIL 22MH			
L904	9965 000 16694	6UH 13.5TS 2UEW			
L905	9965 000 27102	TOROID COIL S1=1TS D0.65MMX2			
L906	9965 000 16694	6UH 13.5TS 2UEW			

Note: Only these parts mentioned in the list are normal service parts.

SET MECHANICAL EXPLODED VIEW

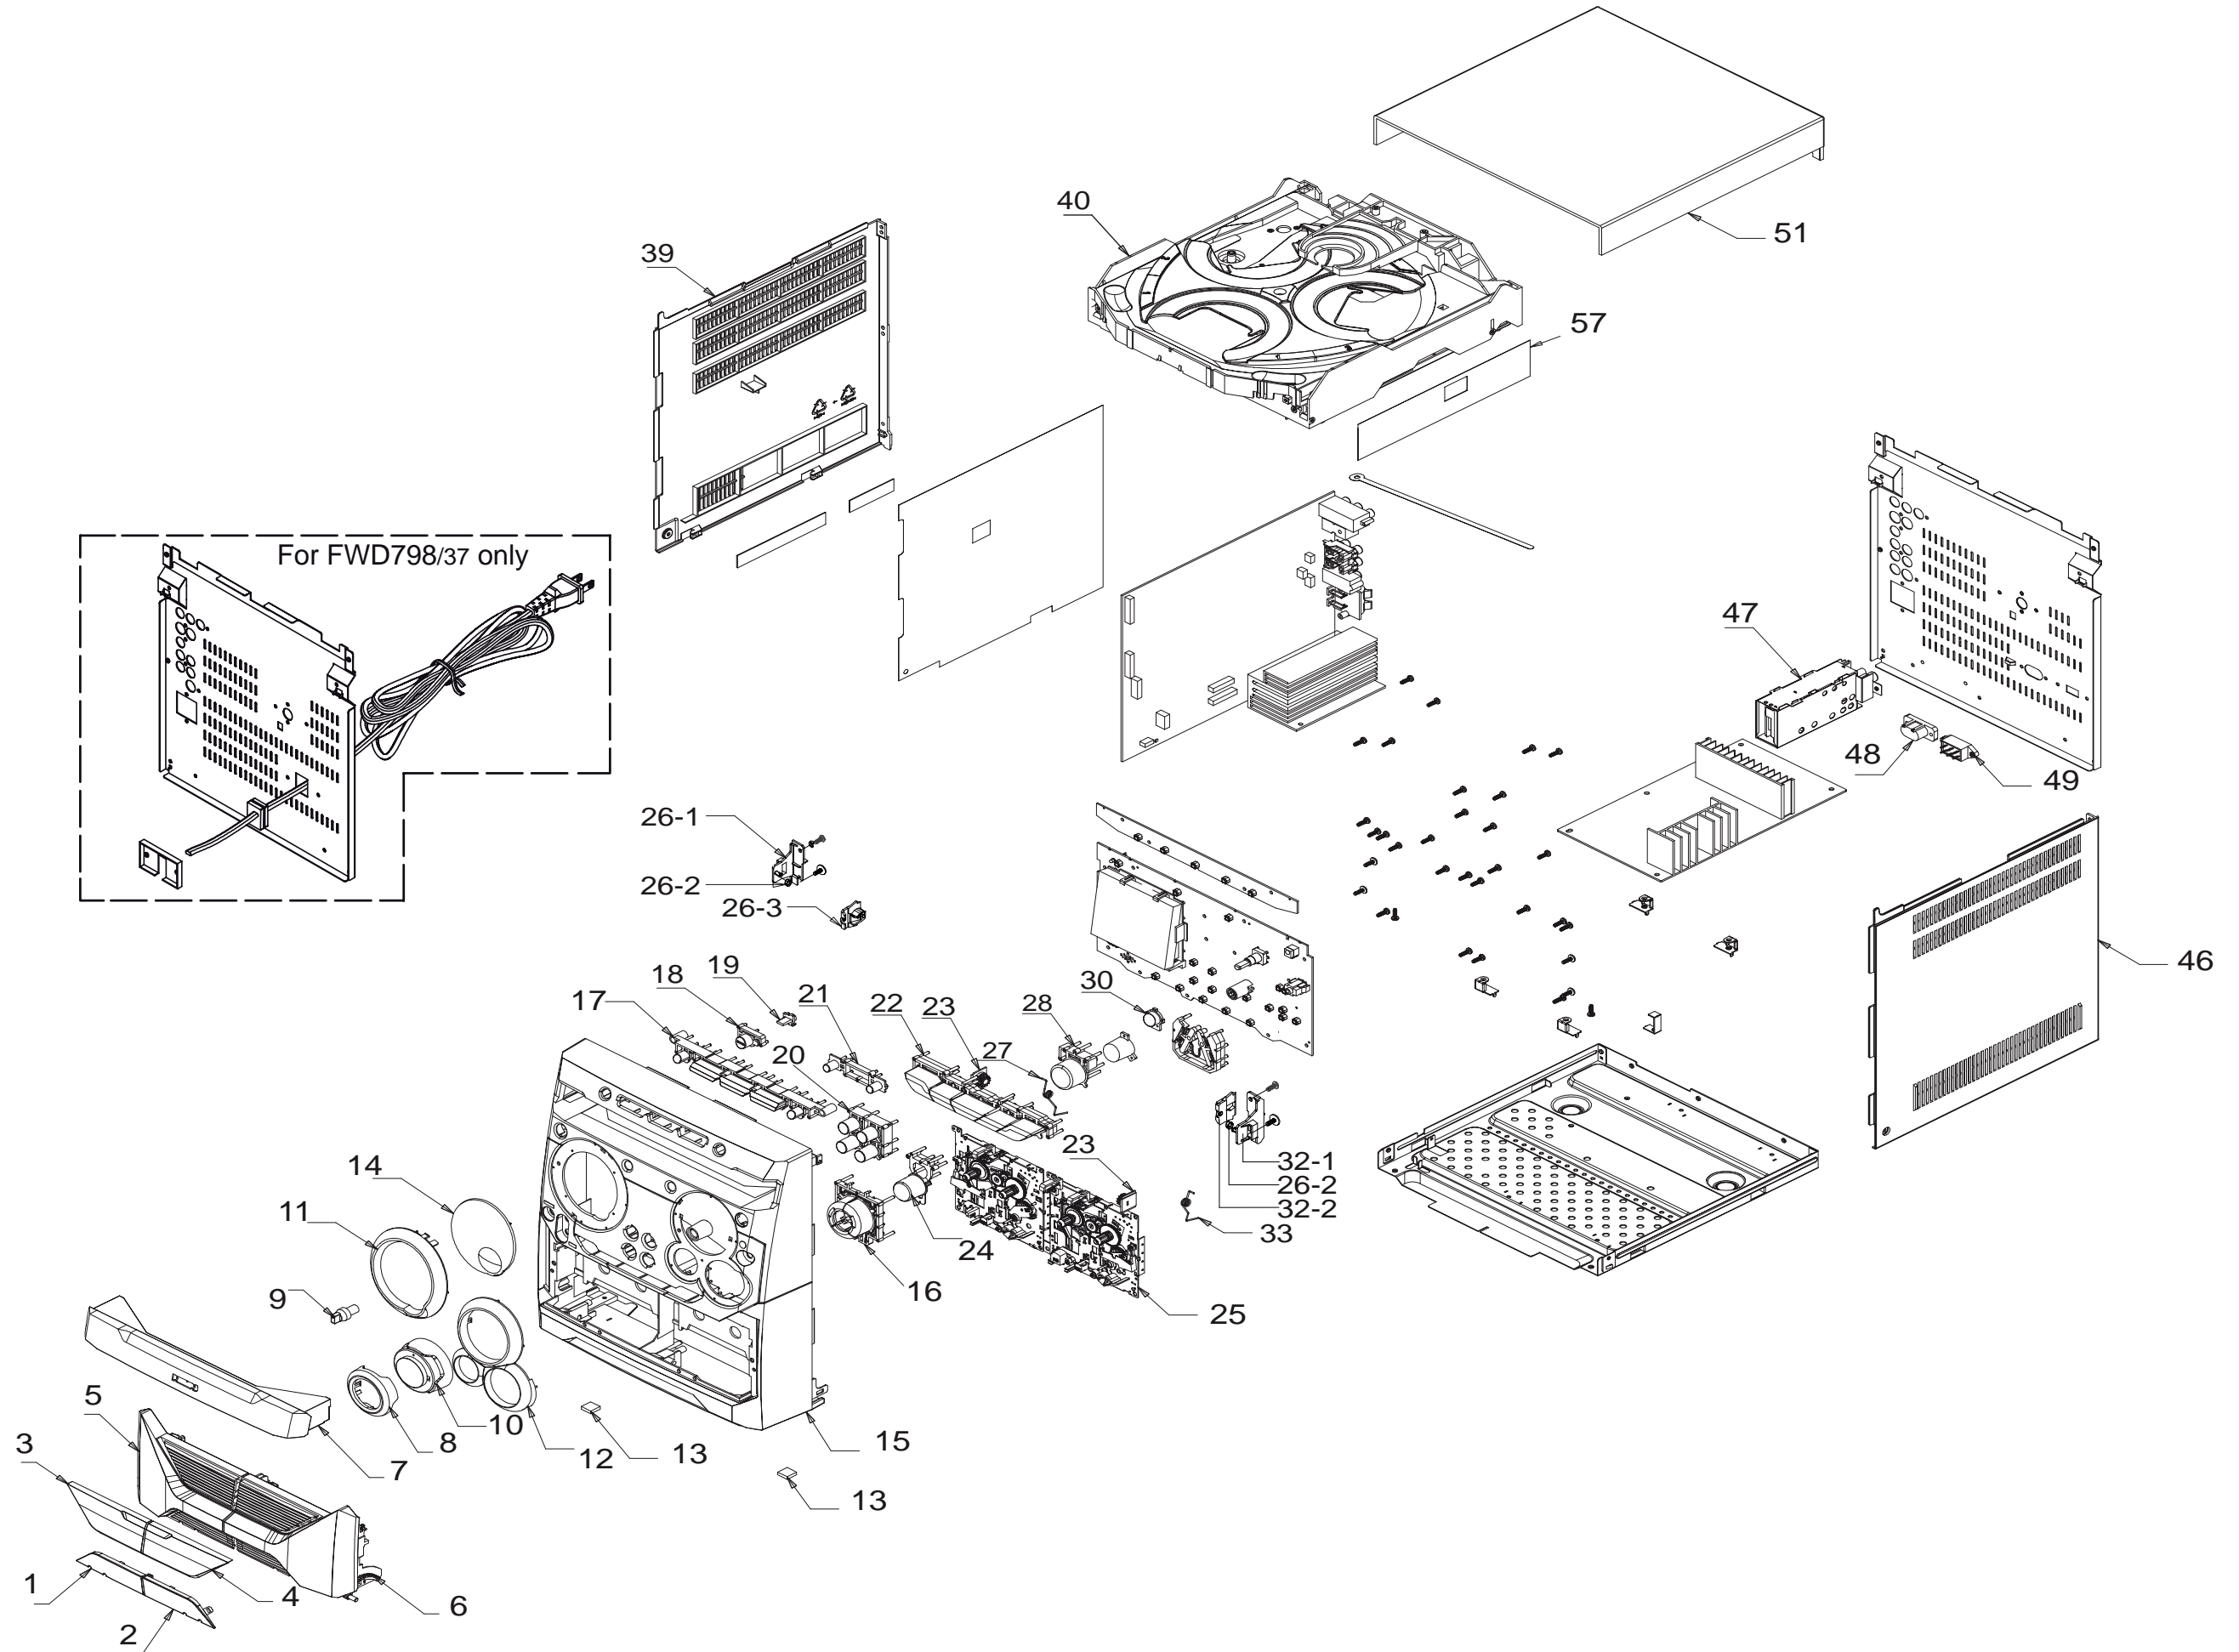

MECHANICAL & ACCESSORIES PARTS LIST

01	9940 000 01531	CASS LENS BOTTOM RIGHT	9940 000 00924	RCA CABLE 1500MM
02	9940 000 01537	CASS LENS BOTTOM LEFT	9940 000 00929	PICK UP ASS'Y HITACHI
03	9940 000 01529	CASS LENS TOP RIGHT	9940 000 01553	REMOTE CONTROL 45 KEY
04	9940 000 01536	CASS LENS TOP LEFT	9940 000 02731	FM ANTENNA 1500MM
05	9965 000 38415	CASS BOX RIGHT	9965 000 23267	RCA CABLE 1200MM OD2.6X5.2
06	9965 000 38414	CASS BOX LEFT	9965 000 23580	RCA CABLE 1500MM OD2.6MM
07	9965 000 38427	CDC TRAY DOOR	9965 000 38411	FFC CABLE 24P 380MM
08	9940 000 01522	VOL KNOB GRIP	△ 9965 000 38422	LINE CORD 2P 1800MM /55/98
			△ 9965 000 38660	AC CORD 1800+260mm UL /37
09	9965 000 38420	KNOB-MIC-VOLUME	9965 000 38628	CENTER SPK BOX 4R 120W
10	9940 000 01543	VOL KNOB RING		
			9965 000 38479	LEFT MAIN SPK BOX
11	9940 000 01545	DISPLAY RING	9965 000 38480	RIGHT MAIN SPK BOX
12	9940 000 01544	COMESTIC RING	9965 000 38629	LEFT SURR. SPK BOX 80W 6R
14	9940 000 01533	DISPLAY LENS	9965 000 38630	RIGHT SURR. SPK BOX 80W 6R
15	9965 000 38416	FRONT CABINET	9965 000 38631	SUBWOOFER 120W 4R /55
16	9940 000 01518	CD CONTROL KEY		
			9965 000 38632	SUBWOOFER 120W 4R /37/98
17	9940 000 01521	CD DISC KEY	9965 000 38661	LEFT MAIN SPK BOX /37
18	9965 000 38419	STANDBY KEY	9965 000 38662	RIGHT MAIN SPK BOX /37
19	9940 000 01532	STANDBY LENS	9940 000 00993	SW. PCB ASS'Y
20	9965 000 38421	SOURCE KEY	9965 000 38664	MAIN PCB ASS'Y /37
21	9940 000 01523	AUTO KEYS		
			9965 000 38665	POWER PCB ASS'Y /37
22	9965 000 38428	MODE KEY	9965 000 38666	CONTROL PCB ASS'Y /37
23	9965 000 22120	DAMPER-ASSY-MODULE-0.8	9965 000 38667	KEY PCB ASS'Y
24	9965 000 38418	CD PLAY KEY		
25	9940 000 01552	TAPE DECK VALLEYWOOD		
26-1	9940 000 01516	BRACKET LEFT		
26-2	9940 000 01268	SPRING COMPRESSION		
26-3	9940 000 01538	PUSH-CATCH RIGHT		
27	9940 000 01267	SPRING RIGHT		
28	9940 000 01525	DBB KEY		
30	9940 000 01534	IR LENS		
32-1	9940 000 01515	BRACKET RIGHT		
32-2	9940 000 01539	PUSH CATCH-LEFT		
33	9940 000 01266	SPRING LEFT		
39	9940 000 01541	PANEL RIGHT /55/98		
39	9965 000 38658	PANEL RIGHT /37		
40	9940 000 05355	3DVD CHANGER MECH & PCB		
46	9940 000 01542	PANEL LEFT /55/98		
46	9965 000 38659	PANEL LEFT /37		
47	9940 000 05366	RADIO PCB ASS'Y		
49	9940 000 01059	SW SLIDE 6PIN		
51	9940 000 01509	COVER TOP		

Note: Only these parts mentioned in the list are normal service parts.


SUBWOOFER



TABLE OF CONTENTS

Location of PC Boards & Specifications	10-2
Measurement Setup	10-3
Service Aids, Safety Instruction, etc	10-4
Disassembly Instructions & Service positions	10-5 to 6
Set Block & Wiring Diagram	10-7 to 8
Main Board	10-9 to 12
Power & LED Board	10-13 to 16
Mechanical Exploded View & Parts List	10-17 to 18



LOCATION OF PC BOARDS

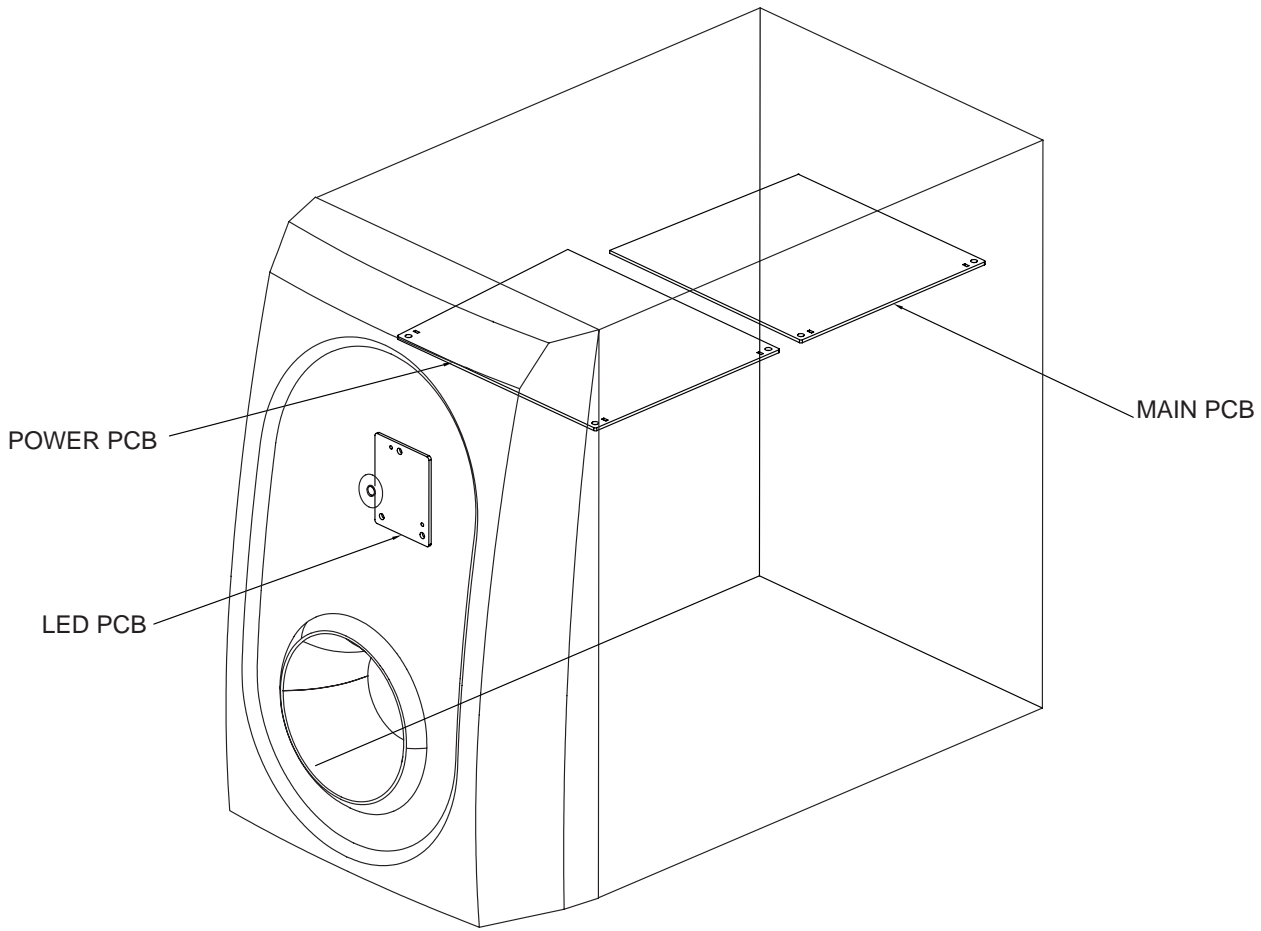

SPECIFICATIONS

SUBWOOFER

Impedance	4 W
Speaker driver.....	120W
Frequency response.	30-200 HZ
Dimensions(w x h x d).....	200 x 320 x 380 (mm)
Weight	6.2kg

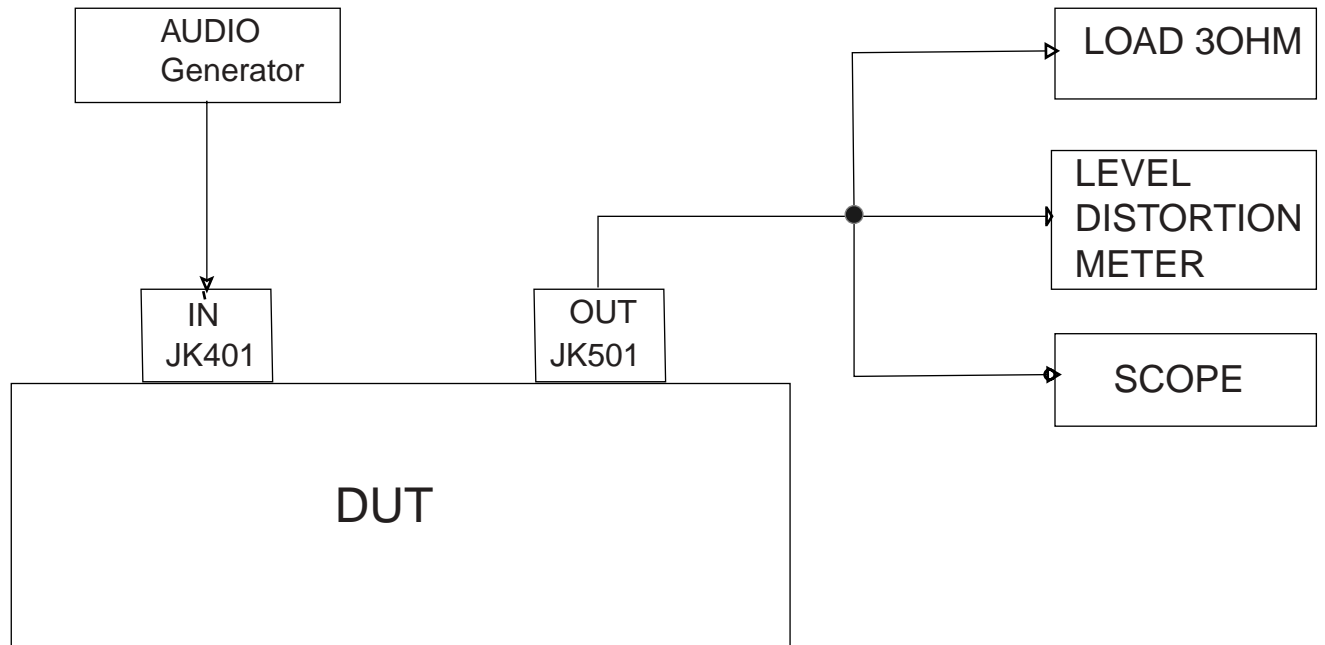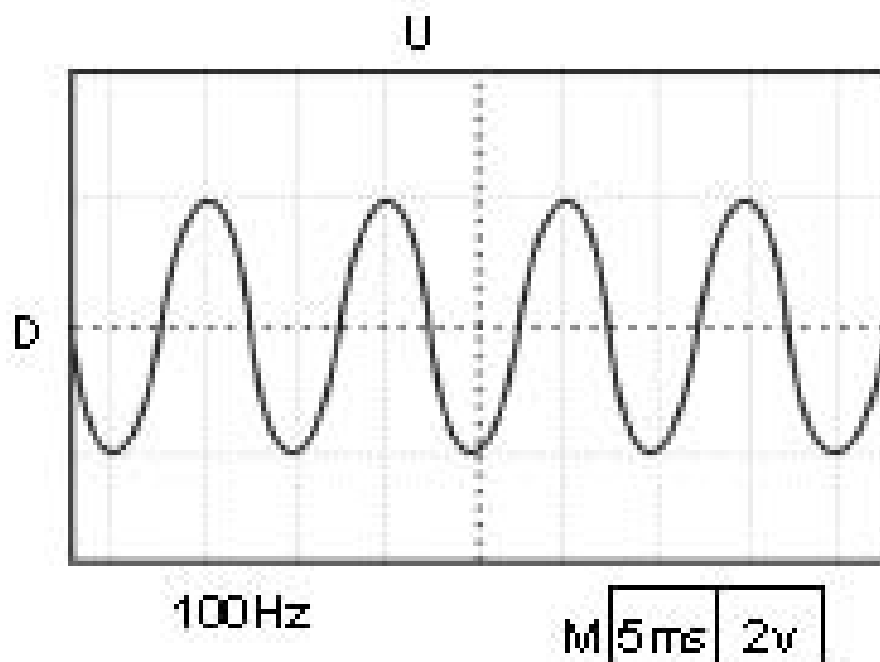MEASUREMENT SETUP**Audio Test Signal**

ESD & SAFETY INSTRUCTION

GB WARNING

All ICs and many other semi-conductors are susceptible to electrostatic discharges (ESD). Careless handling during repair can reduce life drastically.

When repairing, make sure that you are connected with the same potential as the mass of the set via a wrist wrap with resistance. Keep components and tools also at this potential.

F ATTENTION

Tous les IC et beaucoup d'autres semi-conducteurs sont sensibles aux décharges statiques (ESD).

Leur longévité pourrait être considérablement écourtée par le fait qu'aucune précaution n'est prise à leur manipulation.

Lors de réparations, s'assurer de bien être relié au même potentiel que la masse de l'appareil et enfiler le bracelet serti d'une résistance de sécurité.

Veiller à ce que les composants ainsi que les outils que l'on utilise soient également à ce potentiel.

GB

Safety regulations require that the set be restored to its original condition and that parts which are identical with those specified, be used.

NL

Veiligheidsbepalingen vereisen, dat het apparaat bij reparatie in zijn oorspronkelijke toestand wordt teruggebracht en dat onderdelen, identiek aan de gespecificeerde, worden toegepast.

F

Les normes de sécurité exigent que l'appareil soit remis à l'état d'origine et que soient utilisés les pièces de rechange identiques à celles spécifiées.

D

Bei jeder Reparatur sind die geltenden Sicherheitsvorschriften zu beachten. Der Originalzustand des Geräts darf nicht verändert werden; für Reparaturen sind Original-Ersatzteile zu verwenden.

I

Le norme di sicurezza esigono che l'apparecchio venga rimesso nelle condizioni originali e che siano utilizzati i pezzi di ricambio identici a quelli specificati.

"After servicing and before returning set to customer perform a leakage current measurement test from all exposed metal parts to earth ground to assure no shock hazard exist. The leakage current must not exceed 0.5mA."

ESD



NL WAARSCHUWING

Alle IC's en vele andere halfgeleiders zijn gevoelig voor electrostatische ontladingen (ESD).

Onzorgvuldig behandelen tijdens reparatie kan de levensduur drastisch doen verminderen. Zorg ervoor dat u tijdens reparatie via een polsband met weerstand verbonden bent met hetzelfde potentiaal als de massa van het apparaat.

Houd componenten en hulpmiddelen ook op hetzelfde potentiaal.

I AVVERTIMENTO

Tutti IC e parecchi semi-conduttori sono sensibili alle scariche statiche (ESD).

La loro longevità potrebbe essere fortemente ridotta in caso di non osservazione della più grande cauzione alla loro manipolazione.

Durante le riparazioni occorre quindi essere collegato allo stesso potenziale che quello della massa dell'apparecchio tramite un braccialetto a resistenza.

Assicurarsi che i componenti e anche gli utensili con quali si lavora siano anche a questo potenziale.

"Pour votre sécurité, ces documents doivent être utilisés par des spécialistes agréés, seuls habilités à réparer votre appareil en panne".

DISASSEMBLY INSTRUCTIONS

Dismantling the Grill Base & Speaker Driver

1. Place the Subwoofer Box as shown in the Picture 1 and use a screw driver to force open the Grill Base.

Caution: Take care the surface when take out the Grill Base of Subwoofer



Picture 1

2. Place the Subwoofer Box as shown in the Picture 2 and loosen 4 screws A to remove the Speaker Driver.



Picture 2

Dismantling the Front Assembly

1. Place the Subwoofer Box as shown in the Picture 3 (Bottom view) and use a screw driver to force open the front assembly.

Caution: Do not break the bundle of wires to the front. Take care the surface when take out the front panel of subwoofer



Picture 3

Dismantling the Rear assembly

1. Loosen 8 screws B as shown in the Picture 4 (Rear View) to pull out the Printed Circuit Board assembly.


Caution: Do not break the bundle of wires to the front.




Picture 4

WARNING: THERE IS ONLY A LED BETWEEN FRONT PANEL AND WOOD BOX. IF NOT NECESSARY, PLEASE DO NOT TRY TO OPEN THE FRONT PANEL!!!


SERVICE POSITION

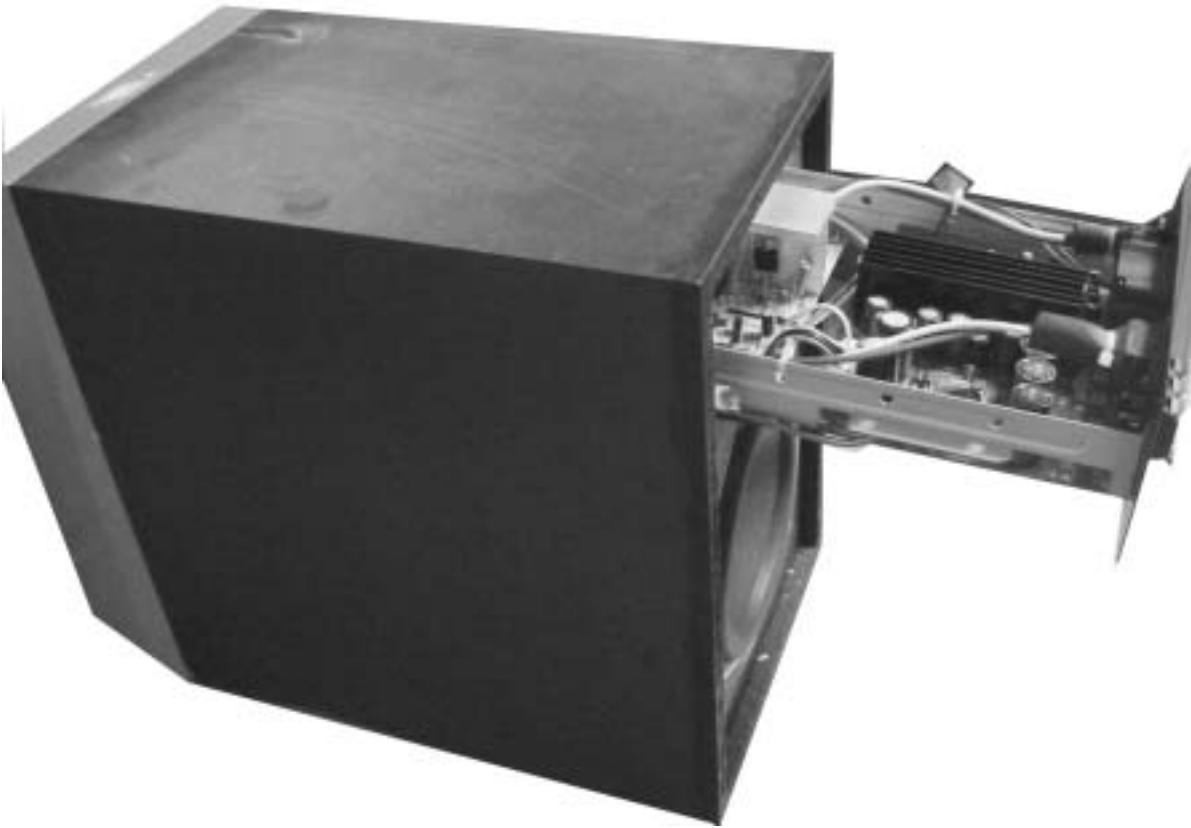

BLOCK DIAGRAM

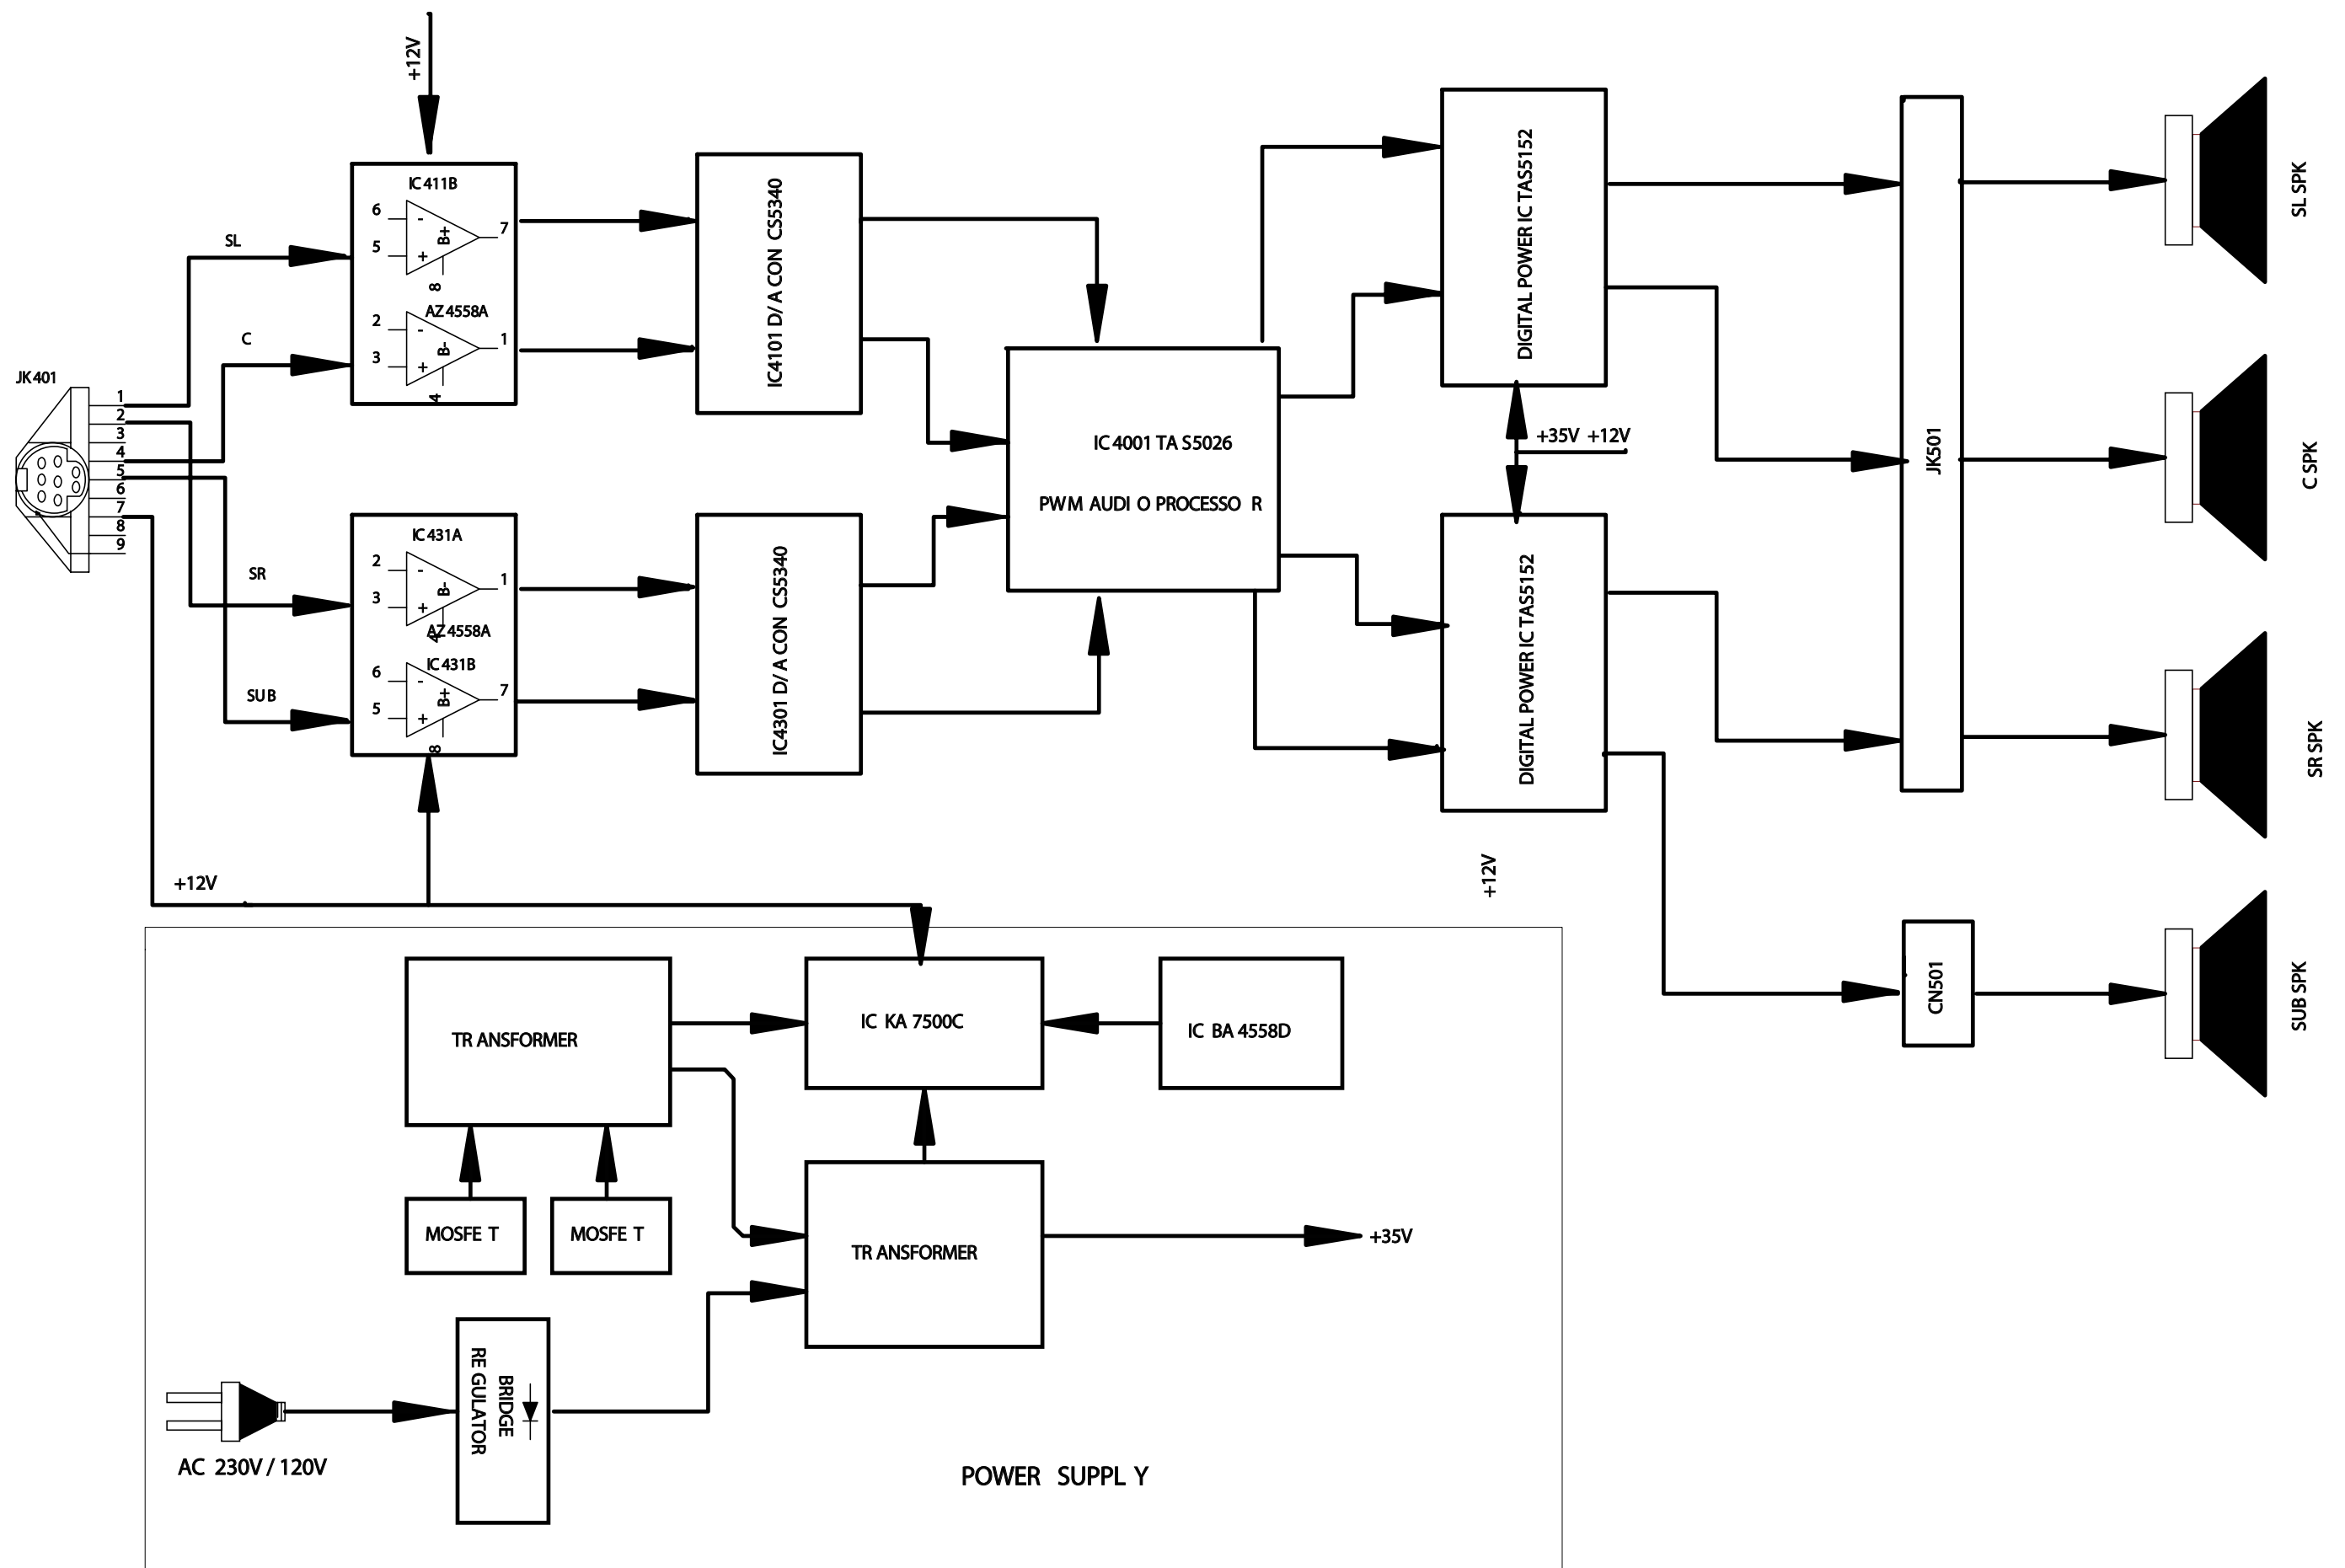

WIRING DIRGRAM

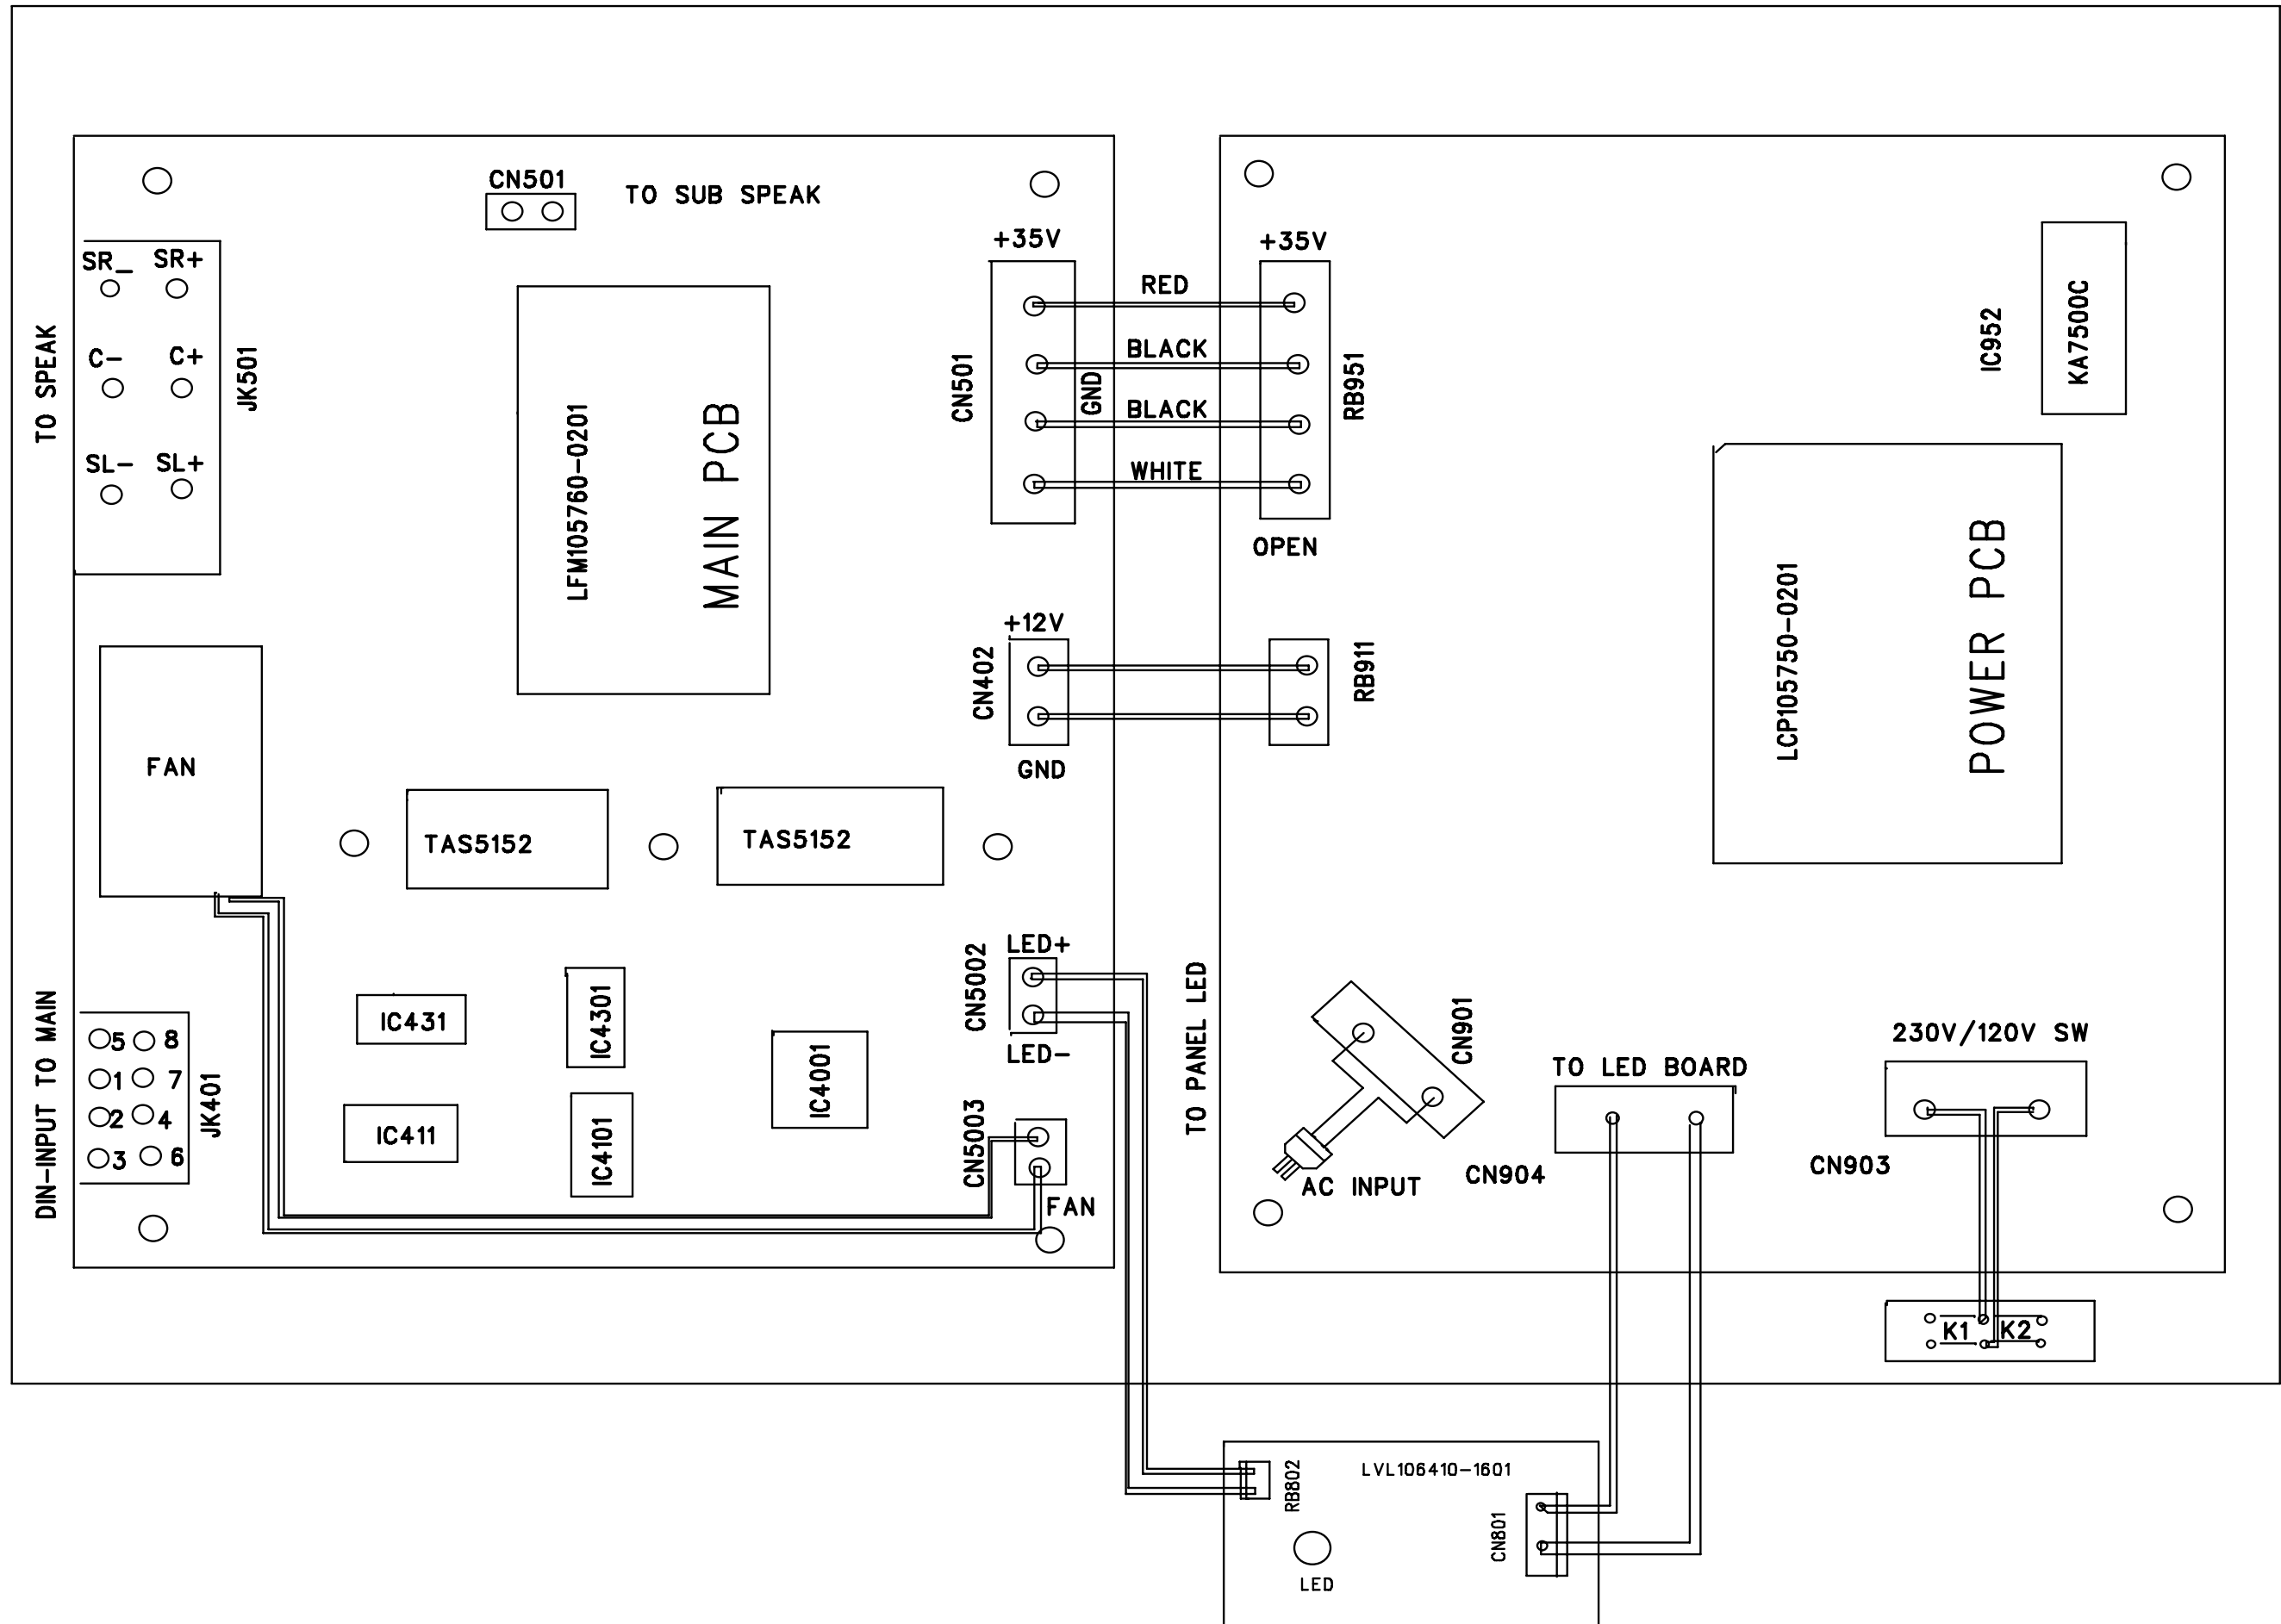


TAS5026APAG INTERNAL IC DIAGRAM

MAIN BOARD


TABLE OF CONTENTS

INTERNAL IC DIAGRAM10-9
 Circuit Diagram10-10
 PCB Layout Top View10-11
 PCB Layout Bottom View10-12
 Electrical Parts List10-13

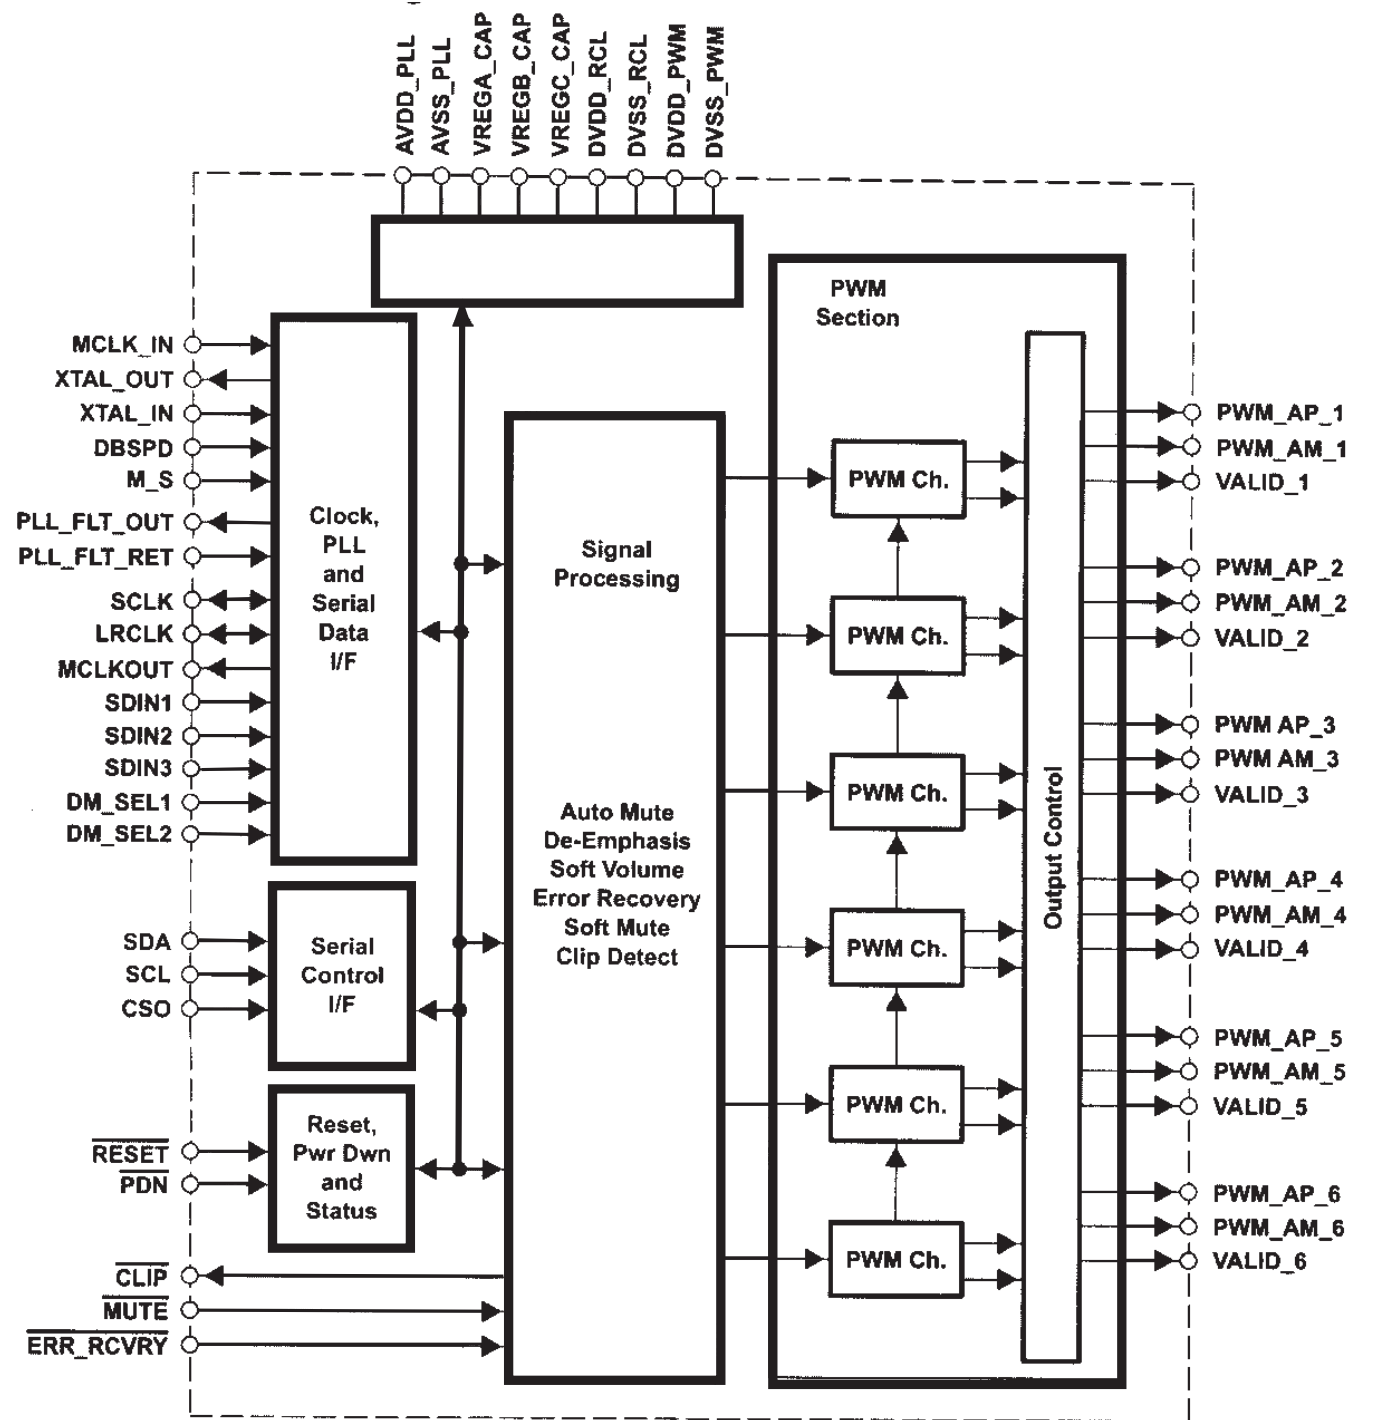


CIRCUIT DIAGRAM - MAIN BOARD

C4001	C3	C4110	D3	C4305	C2	C446	B2	C5022	A4	C5059	A1	C5115	C5	C5134	D5	C5214	B5	C5233	B6	D5008	A4	IC4301	C2	L5206	B6	R4021	B4	R415	D1	R4306	C2	R443	B1	R5018	A4	R5107	C5	R5206	B6
C4002	C3	C4111	C3	C4306	C2	C447	B2	C5023	A3	C5060	A1	C5116	C5	C5135	D5	C5215	B5	C5234	B5	D5009	A4	IC431	C1	Q5001	A2	R4028	B4	R416	D1	R4307	B2	R444	B1	R5019	A4	R5108	C6	R5207	B5
C4003	B4	C4112	C3	C4307	B2	C448	C2	C5024	A3	C5062	A1	C5117	C5	C5136	D5	C5216	B5	C5235	B5	D5010	A4	IC5002	B2	Q5002	B3	R410	B1	R417	D2	R4308	C2	R445	B1	R5020	A4	R5109	C6	R5208	B6
C4004	C4	C412	D1	C4308	B2	C449	B2	C5025	A3	C5063	A1	C5118	C5	C5137	D5	C5217	B5	C5236	C5	D5011	A4	IC5002	B2	Q5003	B3	R4101	D2	R418	D2	R431	C1	R446	B2	R5021	A4	R5110	D5	R5209	B6
C4006	D3	C413	D1	C4309	C3	C450	B1	C5001	B1	C5031	B6	C5065	A1	C5119	C5	C5218	B5	C5237	B5	FB411	D1	IC5101	D5	Q5006	A3	R4102	D2	R420	B1	R4310	C3	R447	B2	R5022	A3	R5111	D6	R5210	B5
C4007	D3	C414	D1	C431	C1	C5002	B1	C5032	B6	C5101	D4	C5120	C6	C5138	C5	C5219	B5	C5238	B6	FB421	C1	IC5201	C5	Q5009	A4	R4103	D2	R421	C1	R4311	C3	R449	B1	R5023	A4	R5112	D5	R5211	B6
C4008	C3	C415	D2	C4310	C3	C5005	B1	C5033	C6	C5102	D5	C5121	C6	C5201	C4	C5220	B6	C5239	A5	FB431	C1	JK401	C1	R4001	D3	R4104	D2	R422	C1	R4313	C3	R450	B1	R5024	B1	R5114	D5	R5212	C5
C4009	C3	C416	D2	C4311	B3	C5007	B1	C5034	C6	C5103	A2	C5122	C5	C5202	C5	C5221	B6	CN402	B1	FB441	B1	JK501	C6	R4002	C3	R4105	D2	R423	C1	R4314	C3	R5001	B1	R5025	A3	R5115	D5	R5213	C5
C4031	B4	C421	C1	C4312	B3	C5008	B1	C5035	B6	C5104	A2	C5123	D6	C5203	B5	C5222	B5	CN5001B1	FB5007B1	L5101	C5	R4003	C3	R4106	D2	R424	C1	R4315	C3	R5002	B1	R5026	A3	R5116	C5	R5214	B5		
C4101	D2	C422	C1	C432	C1	C5010	B2	C5036	B6	C5105	C4	C5124	D6	C5204	B4	C5223	B6	CN5002B1	FB5009B2	L5102	C5	R4004	C3	R4107	C2	R425	C1	R432	C1	R5003	B2	R5033	A2	R5117	C5	R5215	B6		
C4102	D2	C423	C1	C433	C1	C5011	A2	C5037	C6	C5106	C5	C5125	D5	C5205	B5	C5224	B6	CN5003A3	FB5010A3	L5103	C5	R4005	C3	R411	D1	R426	C2	R433	C1	R5006	A2	R5038	A4	R5118	C6	R5216	A5		
C4103	D2	C424	C1	C434	C1	C5012	A2	C5038	C6	C5107	C5	C5126	D5	C5206	A4	C5225	B5	CN501	B6	FB5101C6	L5104	D5	R4006	B3	R4110	D3	R427	C2	R434	C1	R5007	B2	R5039	A4	R5119	C6	R5217	B6	
C4104	D2	C425	C1	C435	C2	C5013	A2	C5051	A1	C5108	C5	C5127	D5	C5207	A5	C5226	B5	D4001	D3	FB5102D6	L5105	C6	R4008	B4	R4111	D3	R429	D1	R435	C1	R5008	B3	R5040	B2	R5120	C6	R5218	B6	
C4105	D2	C426	C2	C436	C2	C5014	A2	C5052	A1	C5109	C5	C5128	D5	C5208	A5	C5227	B5	D5001	D2	FB5201A6	L5106	D6	R4010	C4	R4113	D3	R430	C1	R436	C2	R5009	B3	R5101	D5	R5121	C6	R5219	B6	
C4106	C2	C427	C2	C441	B1	C5015	B2	C5053	A1	C5110	C6	C5129	D5	C5209	B5	C5228	B5	D5002	B3	FB5202C6	L5201	B5	R4012	D4	R4114	D3	R431	C2	R437	C2	R5010	A2	R5102	D5	R5201	C5	R5220	B6	
C4107	C2	C4301	C2	C442	B1	C5016	B3	C5054	A1	C5111	C6	C5130	D5	C5210	B6	C5229	B5	D5003	B3	IC4001	C4	L5202	B5	R4013	D4	R4117	C2	R4302	C2	R439	C1	R5011	A2	R5103	C4	R5202	B5	XL4002D3	
C4108	C2	C4302	C2	C443	B1	C5017	B3	C5055	A1	C5112	C6	C5131	D6	C5211	B6	C5230	B5	D5005	B2	IC4004	B4	L5203	B5	R4014	D3	R412	D1	R4303	C2	R440	B1	R5012	B3	R5104	C5	R5203	B4	ZD5002B1	
C4109	D3	C4303	C2	C444	B1	C5019	B3	C5056	A1	C5113	C5	C5132	D6	C5212	B6	C5231	B6	D5006	A4	IC4101	D2	L5204	B5	R4018	C3	R413	B1	R4304	C2	R441	B1	R5013	B3	R5105	C5	R5204	A5		
C411	D1	C4304	C2	C445	B1	C5021	A4	C5058	A1	C5114	C5	C5133	D6	C5213	B5	C5232	B6	D5007	A4	IC411	D1	L5205	B6	R4020	C3	R414	D1	R4305	C2	R442	B1	R5014	B3	R5106	C6	R5205	A5		

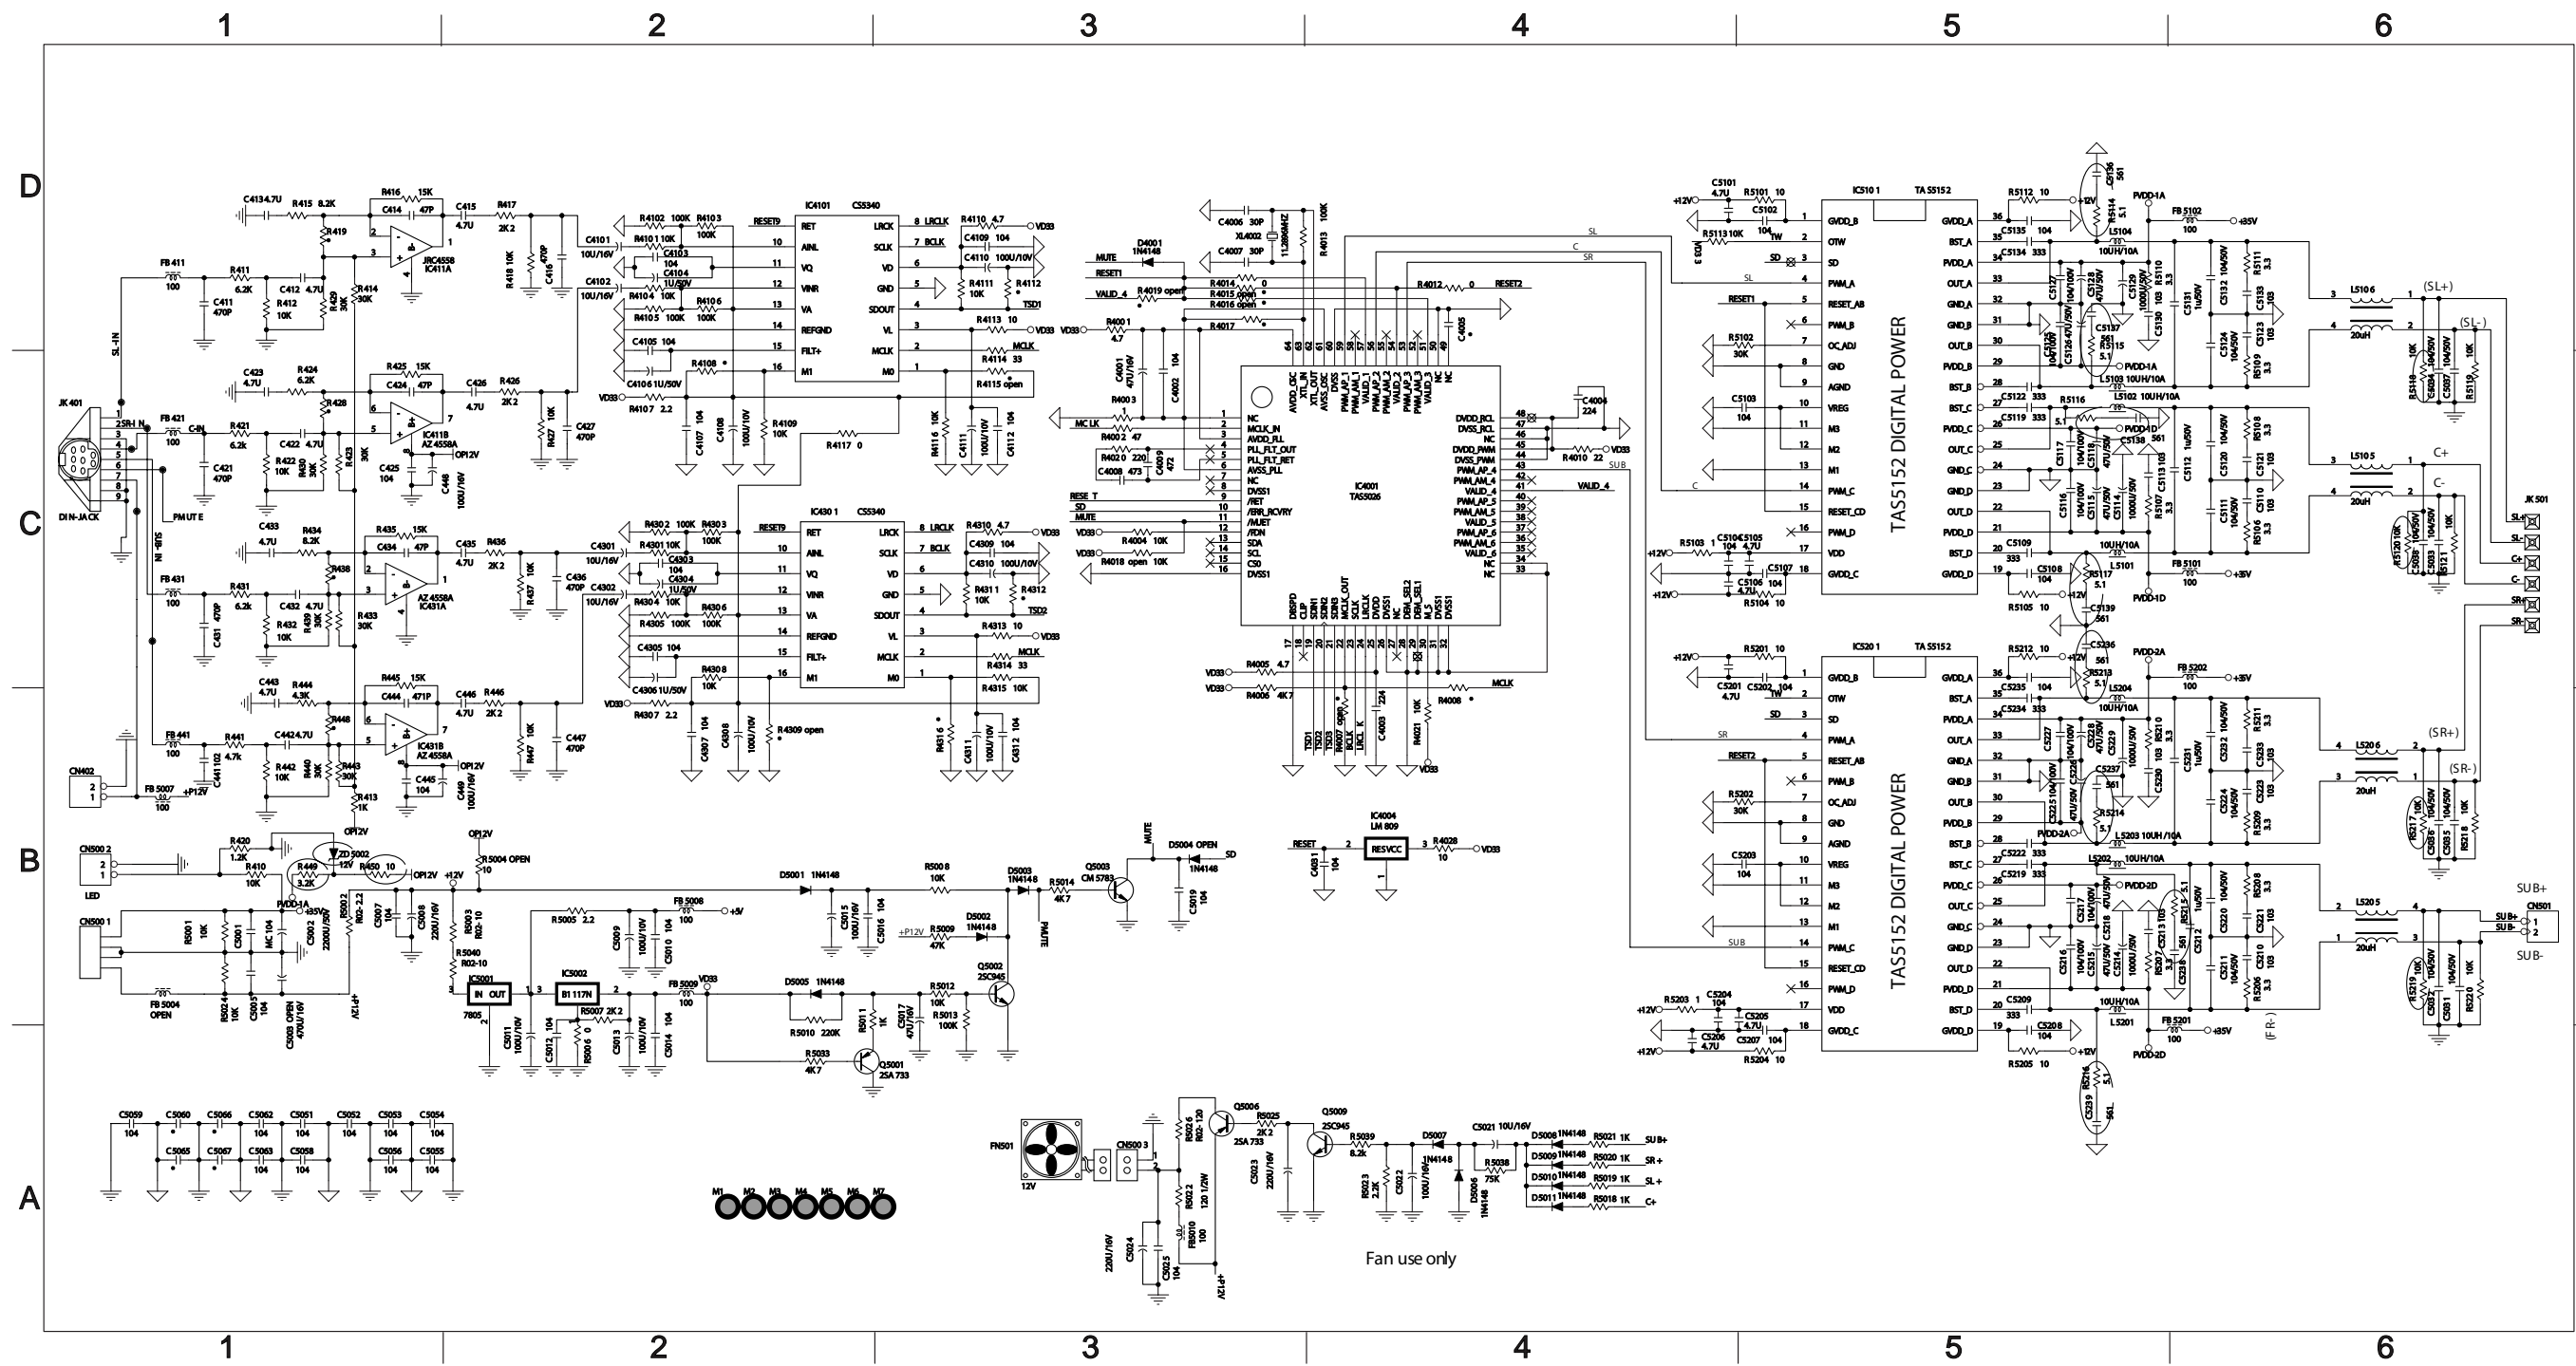


MAIN PCB LAYOUT TOP VIEW

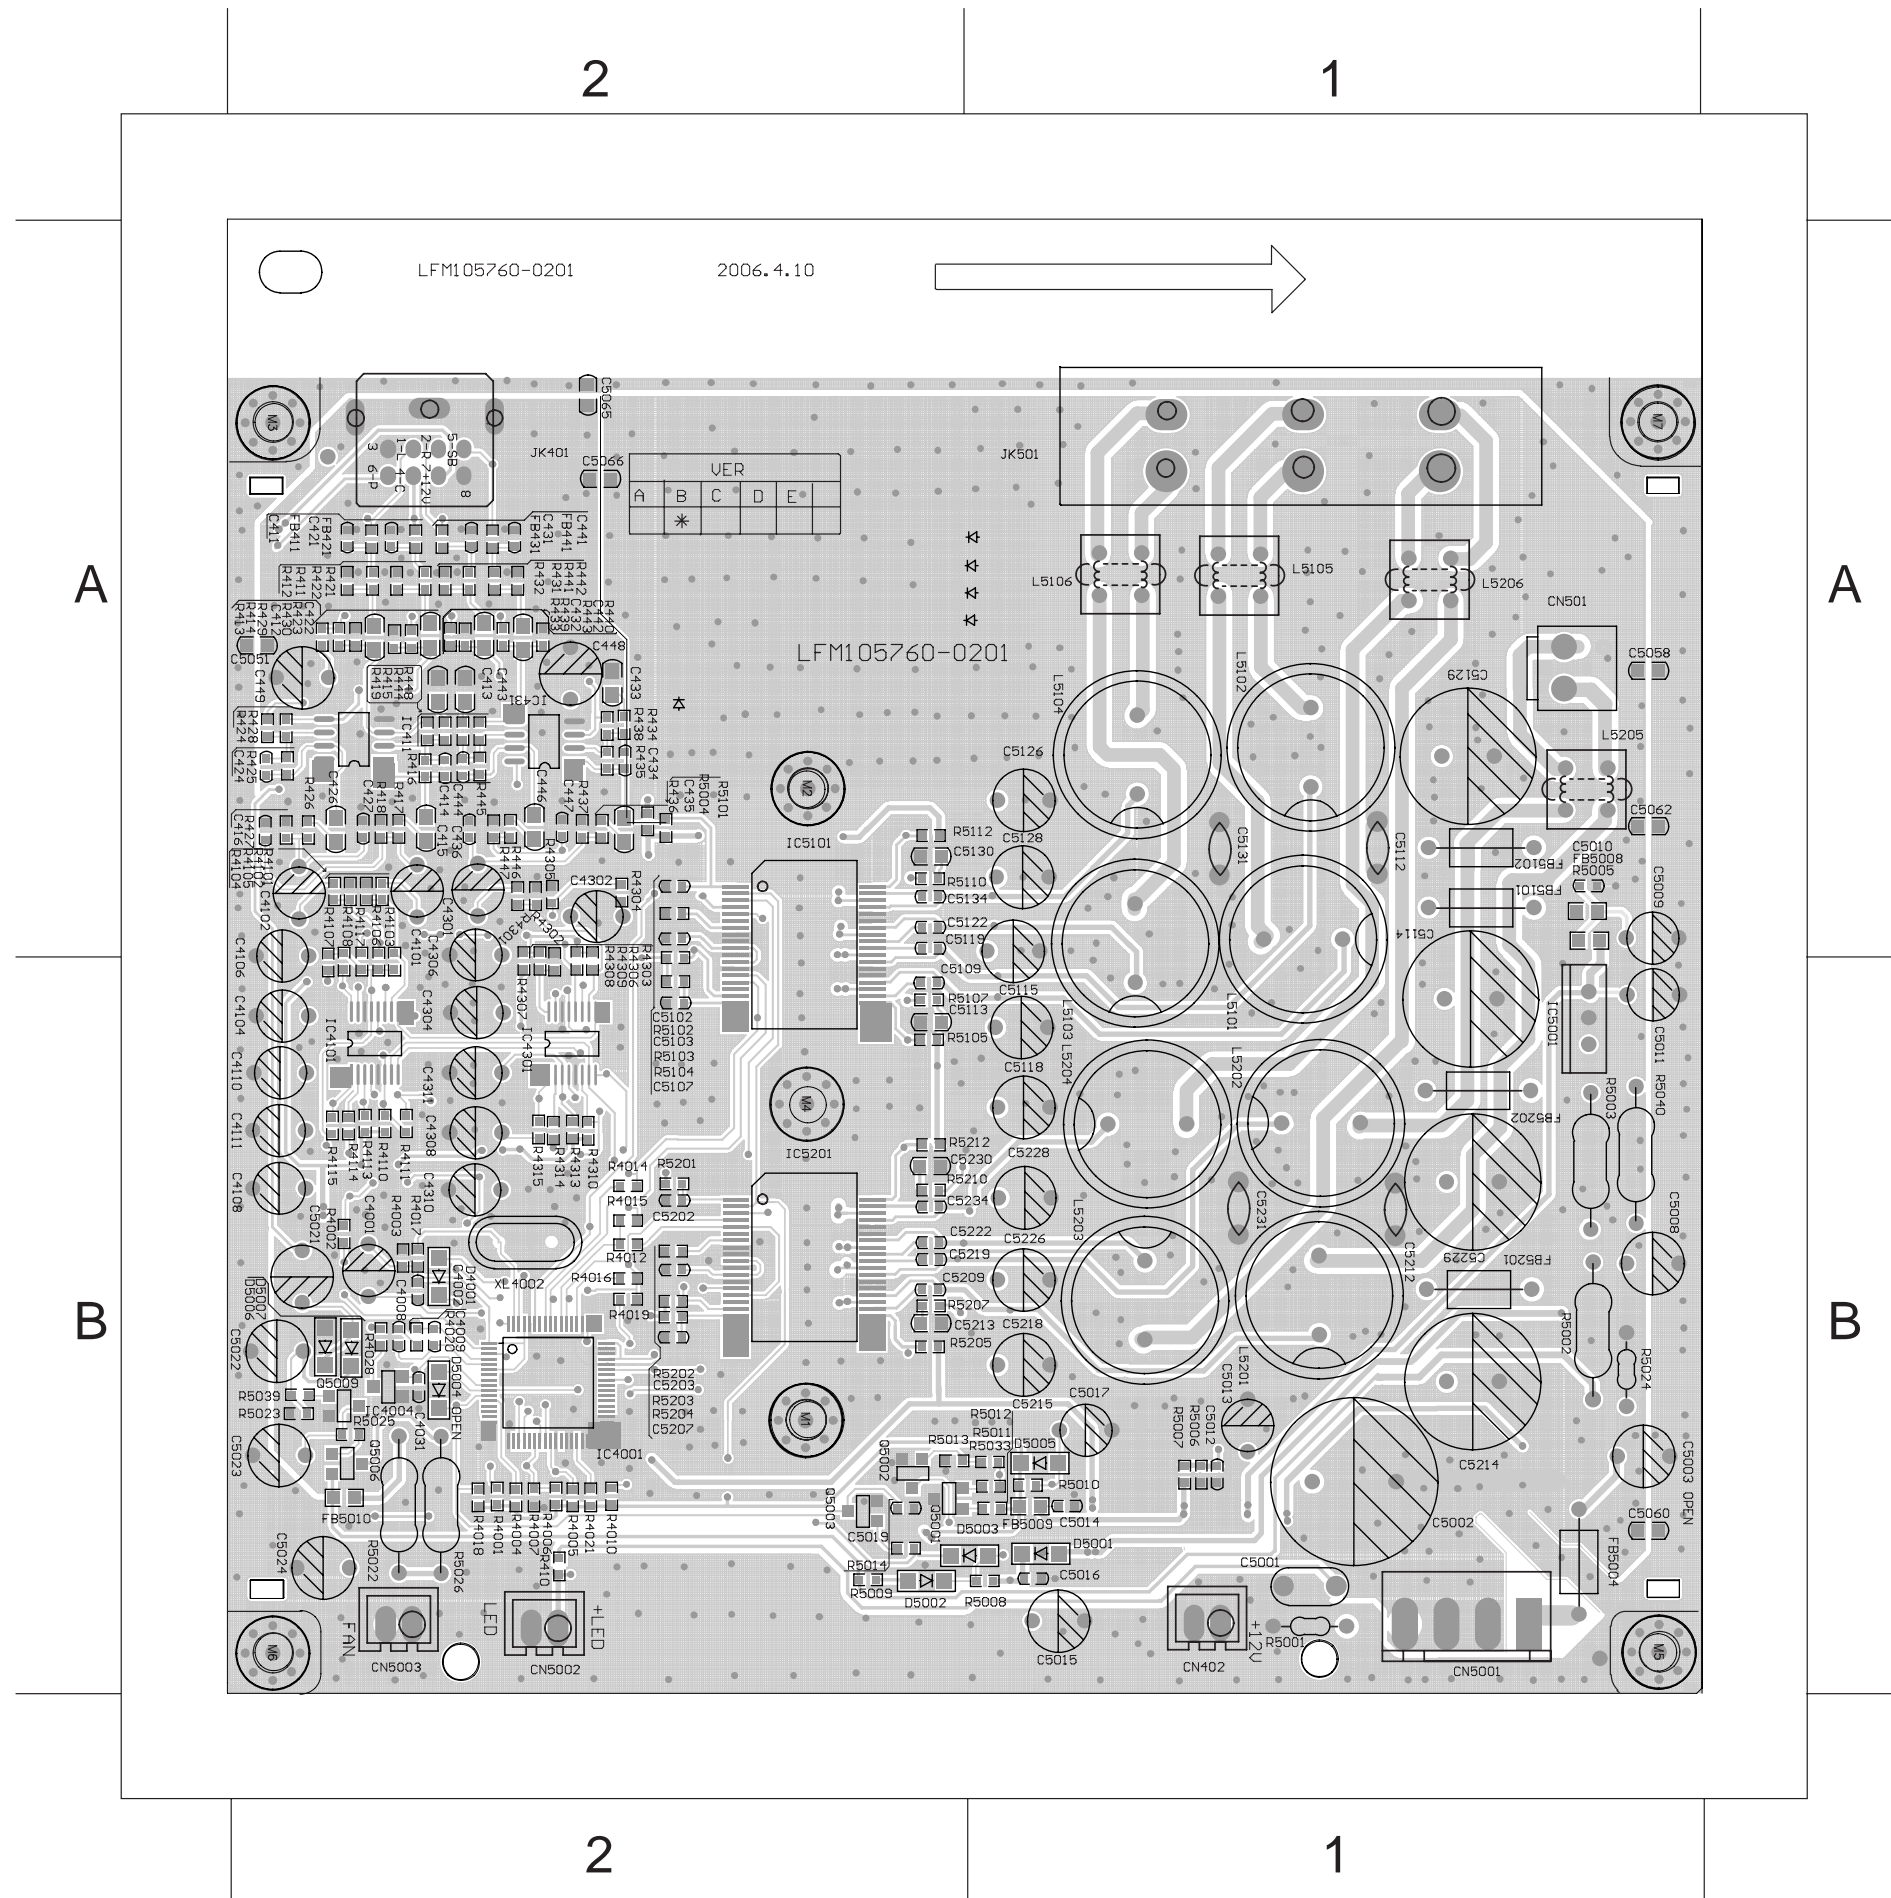

C4001	B2	C5126	A1	R4006	B2	R5022	B2
C4002	B2	C5128	A1	R4010	B2	R5023	B2
C4008	B2	C5129	A1	R4012	B2	R5024	B1
C4009	B2	C5130	A2	R4014	B2	R5025	B2
C4031	B2	C5131	A1	R4018	B2	R5026	B2
C4101	A2	C5134	A2	R4020	B2	R5033	B1
C4102	A2	C5202	B2	R4021	B2	R5039	B2
C4103	A2	C5203	B2	R4028	B2	R5040	B1
C4104	B2	C5207	B2	R410	B2	R5101	A2
C4106	A2	C5209	B2	R4101	A2	R5102	A2
C4107	A2	C5212	B1	R4102	A2	R5103	A2
C4108	B2	C5213	B2	R4103	A2	R5104	B2
C411	A2	C5214	B1	R4104	A2	R5105	B2
C4110	B2	C5215	B1	R4105	A2	R5107	B2
C4111	B2	C5218	B1	R4106	A2	R5110	A2
C412	A2	C5219	B2	R4107	A2	R5112	A2
C413	A2	C5222	B2	R411	A2	R5201	B2
C414	A2	C5226	B1	R4110	B2	R5202	B2
C415	A2	C5228	B1	R4111	B2	R5203	B2
C416	A2	C5229	B1	R4113	B2	R5204	B2
C421	A2	C5230	B2	R4114	B2	R5205	B2
C422	A2	C5231	B1	R4117	B2	R5207	B2
C424	A2	C5234	B2	R412	A2	R5210	B2
C426	A2	CN402	B1	R413	A2	R5212	B2
C427	A2	CN5001	B1	R414	A2	XL4002	B2
C4301	A2	CN5002	B2	R415	A2		
C4302	A2	CN5003	B2	R416	A2		
C4304	B2	CN501	A1	R417	A2		
C4306	A2	D4001	B2	R418	A2		
C4308	B2	D5001	B1	R421	A2		
C431	A2	D5002	B2	R422	A2		
C4310	B2	D5003	B1	R423	A2		
C4311	B2	D5005	B1	R424	A2		
C432	A2	D5006	B2	R425	A2		
C433	A2	D5007	B2	R426	A2		
C434	A2	FB411	A2	R427	A2		
C435	A2	FB421	A2	R429	A2		
C436	A2	FB431	A2	R430	A2		
C441	A2	FB441	A2	R4301	A2		
C442	A2	FB5009	B1	R4302	A2		
C443	A2	FB5010	B2	R4303	A2		
C444	A2	FB5101	A1	R4304	A2		
C446	A2	FB5102	A1	R4305	A2		
C447	A2	FB5201	B1	R4306	A2		
C448	A2	FB5202	B1	R4307	A2		
C449	A2	IC4001	B2	R4308	A2		
C5001	B1	IC4004	B2	R431	A2		
C5002	B1	IC4101	B2	R4310	B2		
C5008	B1	IC411	A2	R4313	B2		
C5010	A1	IC4301	B2	R4314	B2		
C5011	B1	IC431	A2	R4315	B2		
C5012	B1	IC5001	B1	R432	A2		
C5013	B1	IC5101	A2	R433	A2		
C5014	B1	IC5201	B2	R434	A2		
C5015	B1	JK401	A2	R435	A2		
C5016	B1	JK501	A1	R436	A2		
C5017	B1	L5101	B1	R437	A2		
C5019	B2	L5102	A1	R439	A2		
C5021	B2	L5103	B1	R440	A2		
C5022	B2	L5104	A1	R441	A2		
C5023	B2	L5105	A1	R442	A2		
C5024	B2	L5106	A1	R443	A2		
C5051	A2	L5201	B1	R444	A2		
C5058	A1	L5202	B1	R445	A2		
C5060	B1	L5203	B1	R446	A2		
C5062	A1	L5204	B1	R447	A2		
C5065	A2	L5205	A1	R5001	B1		
C5102	A2	L5206	A1	R5002	B1		
C5103	A2	Q5001	B2	R5003	B1		
C5107	B2	Q5002	B2	R5006	B1		
C5109	B2	Q5003	B2	R5007	B1		
C5112	A1	Q5006	B2	R5008	B1		
C5113	B2	Q5009	B2	R5009	B2		
C5114	A1	R4001	B2	R5010	B1		
C5115	B1	R4002	B2	R5011	B1		
C5118	B1	R4003	B2	R5012	B1		
C5119	A2	R4004	B2	R5013	B2		
C5122	A2	R4005	B2	R5014	B2		

MAIN PCB LAYOUT BOTTOM VIEW

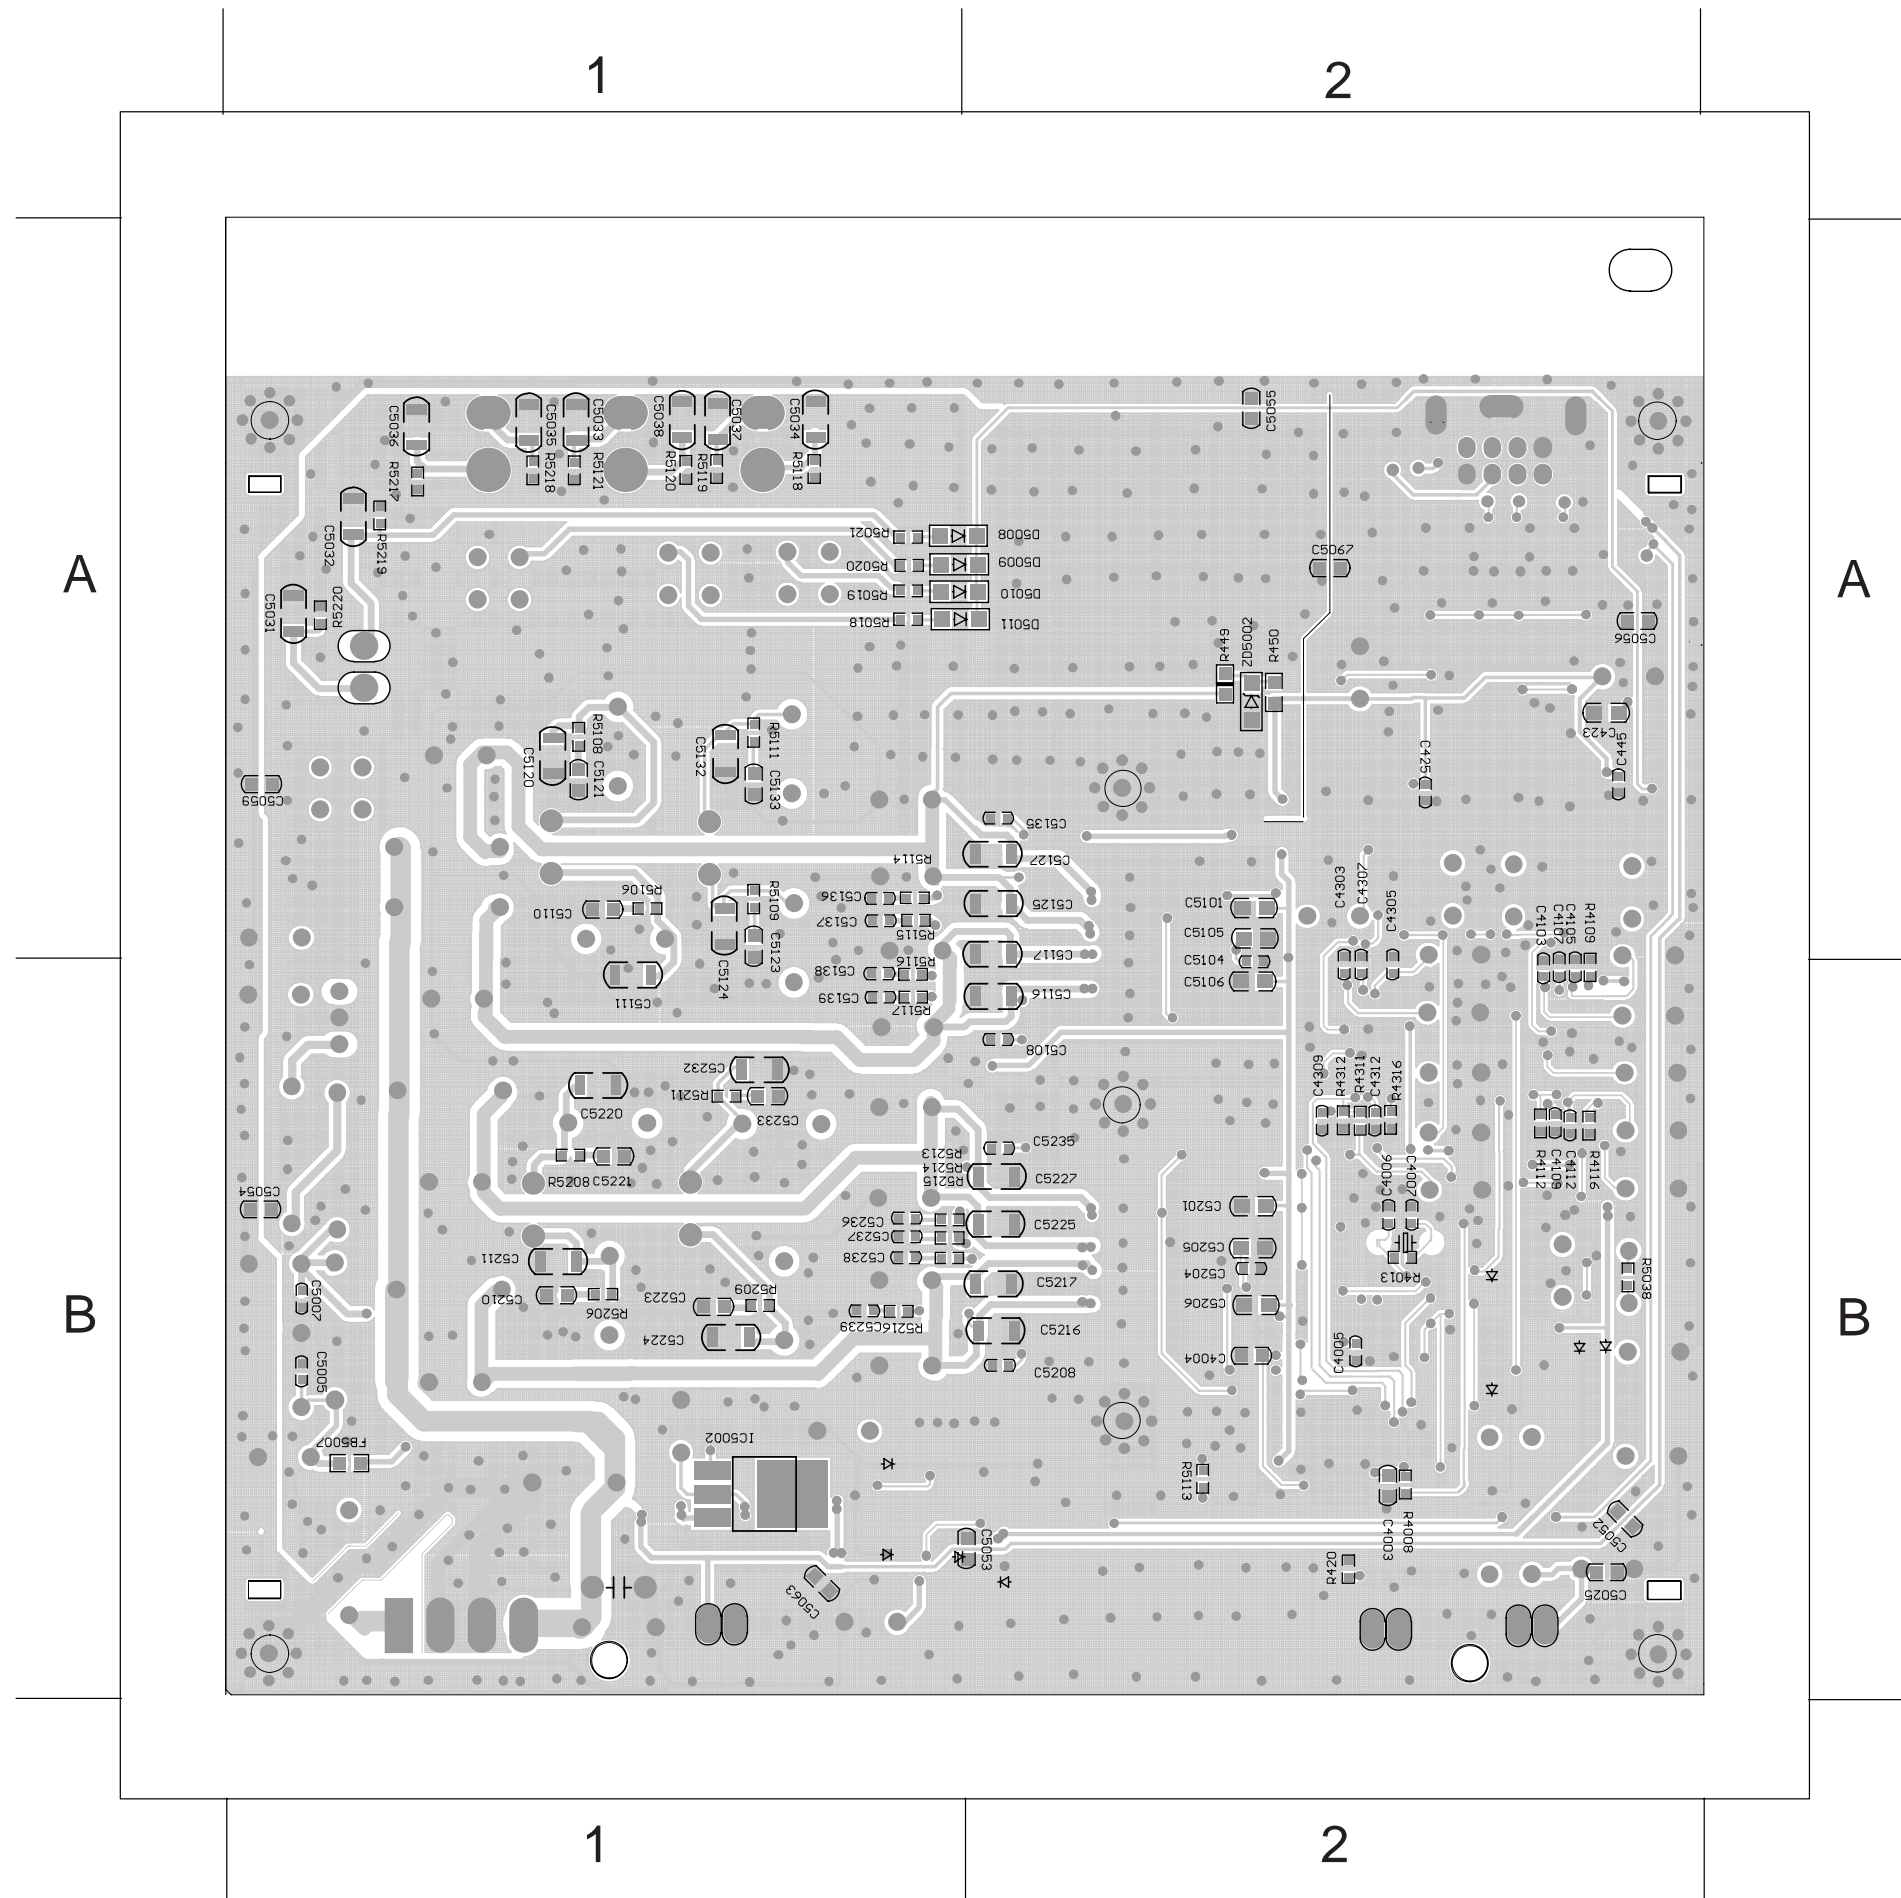

C4003	B2	C5236	B1
C4004	B2	C5237	B1
C4006	B2	C5238	B1
C4007	B2	C5239	B1
C4105	B2	D5008	A2
C4109	B2	D5009	A2
C4112	B2	D5010	A2
C423	A2	D5011	A2
C425	A2	FB5007	B1
C4303	A2	IC5002	B1
C4305	A2	R4008	B2
C4307	A2	R4013	B2
C4309	B2	R420	B2
C4312	B2	R4311	B2
C445	A2	R449	A2
C5005	B1	R450	A2
C5007	B1	R5018	A1
C5025	B2	R5019	A1
C5031	A1	R5020	A1
C5032	A1	R5021	A1
C5033	A1	R5038	B2
C5034	A1	R5106	A1
C5035	A1	R5108	A1
C5036	A1	R5109	A1
C5037	A1	R5111	A1
C5038	A1	R5114	A1
C5052	B2	R5115	A1
C5053	B2	R5116	B1
C5054	B1	R5117	B1
C5055	A2	R5118	A1
C5056	A2	R5119	A1
C5059	A1	R5120	A1
C5063	B1	R5121	A1
C5101	A2	R5206	B1
C5104	B2	R5208	B1
C5105	A2	R5209	B1
C5106	B2	R5211	B1
C5108	B2	R5213	B1
C5110	A1	R5214	B1
C5111	B1	R5215	B1
C5116	B2	R5216	B1
C5117	A2	R5217	A1
C5120	A1	R5218	A1
C5121	A1	R5219	A1
C5123	B1	R5220	A1
C5124	B1	ZD5002	A2
C5125	A2		
C5127	A2		
C5132	A1		
C5133	A1		
C5135	A2		
C5136	A1		
C5137	A1		
C5138	B1		
C5139	B1		
C5201	B2		
C5204	B2		
C5205	B2		
C5206	B2		
C5208	B2		
C5210	B1		
C5211	B1		
C5216	B2		
C5217	B2		
C5220	B1		
C5221	B1		
C5223	B1		
C5224	B1		
C5225	B2		
C5227	B2		
C5232	B1		
C5233	B1		
C5235	B2		

MECHANICAL & ACCESSORIES PARTS LIST - SUBWOOFER

9940 000 02072	RUBBER PAD OD20XT4	9965 000 15949	GRILLE
9940 000 02073	DC FAN 12V 70MA 0.8W	△9965 000 20576	AC SOCKET SO-222-PC-S
9940 000 02077	CENTER SPK 3R 100W 2WAY	9965 000 38432	SPK DRIVER 100W 6.5" 4R
9940 000 02733	RIGHT SURR. SPK 6R 50W	9965 000 38433	FRONT CAB.
9940 000 02734	LEFT SURR. SPK 6R 50W		

ELECTRICAL PARTS LIST - SUBWOOFER MAIN BOARD

IC4001	9965 000 38434	IC 64P TAS5026APAG	L5104	9940 000 05332	IND. 10UH/10A 20%
IC4004	9940 000 00834	IC 3PIN LM809	L5201	9940 000 05332	IND. 10UH/10A 20%
IC4101	9940 000 05467	IC 16PIN CS5340-CZ TSSOP	L5202	9940 000 05332	IND. 10UH/10A 20%
IC411	9965 000 29611	IC 8P CO4558A CERAMATE	L5203	9940 000 05332	IND. 10UH/10A 20%
IC411	9965 000 38435	IC 8P AZ4558AM-E1	L5204	9940 000 05332	IND. 10UH/10A 20%
IC4301	9940 000 05467	IC 16P CS5340-CZ TSSOP	Q5001	9940 000 00921	XISTR PNP 2SA812 HFE:200-400
IC431	9965 000 29611	IC 8P CO4558A CERAMATE	Q5002	9940 000 00915	XISTR NPN 2SC1623
IC5001	9965 000 38436	IC 3P L7805C-V	Q5003	9965 000 13683	TRANSISTOR KTC3875Y-RTK
IC5002	9965 000 27091	IC 3PIN AP1117E33LA	Q5006	9940 000 00921	XISTR PNP 2SA812 HFE:200-400
IC5101	9940 000 05339	IC 36P TAS5152DKDR	Q5009	9940 000 00915	XISTR NPN 2SC1623
JK401	9965 000 22220	DIN JACK 8 PIN	XL4002	9965 000 38437	X'TAL 11.2896MHZ 20ppm
JK501	9940 000 02062	SPK JACK 6P G-G-B/BX3	ZD5001	9965 000 26940	DIODE ZENR 11.9-12.4V 0.5W
L5101	9940 000 05332	IND. 10UH/10A 20%	ZD901	9940 000 02063	DIODE ZENER 8.5-8.9V 0.5W
L5102	9940 000 05332	IND. 10UH/10A 20%			
L5103	9940 000 05332	IND. 10UH/10A 20%			

ELECTRICAL PARTS LIST - SUBWOOFER POWER BOARD

BD901	9940 000 02065	RECTIFIER GBU4J 4A 600V	D973	9965 000 38438	DIODE HER503 5A 200V
C901	△9965 000 27115	CAP.SAFTY Y1 102PF 250V 20%	D975	9965 000 38438	DIODE HER503 5A 200V
C902	△9965 000 27115	CAP.SAFTY Y1 102PF 250V 20%	F901	△9940 000 01567	FUSE 4A 250V
C903	△9940 000 00932	COND SAFTY 0.47UF 275V 10%	IC951	9940 000 00949	IC 8PIN JRC4558D
C909	9965 000 18042	COND DISC 0.01UF 1KV 20%	IC952	9940 000 00951	IC 16PIN KA7500C
C910	9965 000 18042	COND DISC 0.01UF 1KV 20%	L901	9940 000 02066	LINE FILTER 4P 42.0MH /-30%
C913	9965 000 20261	COND DISC 0.001UF 1KV 20%	L951	9965 000 27102	TOROID COIL S1=1TS
C914	9965 000 20261	COND DISC 0.001UF 1KV 20%	NTC901	9940 000 00957	NTC 5R 5A
C922	△9965 000 27115	CAP.SAFTY Y1 102PF 250V 20%	Q901	9940 000 05349	MOSFET FQP12N60C N-CH
C923	9965 000 27129	400V 0.0022UF Y1 P=10MM 125' C	Q902	9940 000 05349	MOSFET FQP12N60C N-CH
C924	△9965 000 27115	CAP.SAFTY Y1 102PF 250V 20%	Q911	9965 000 26939	XISTR PNP 2SA952
C928	9965 000 20261	COND DISC 0.001UF 1KV 20%	Q951	9965 000 26939	XISTR PNP 2SA952
C951	9965 000 20264	COND DISC 470PF 1KV 10%	Q952	9965 000 26939	XISTR PNP 2SA952
C952	9965 000 20261	COND DISC 0.001UF 1KV 20%	Q958	4822 130 41198	2SC945P
C953	9965 000 20261	COND DISC 0.001UF 1KV 20%	T901	9965 000 27112	TRASFO FERRITE CORE
C954	9965 000 20264	COND DISC 470PF 1KV 10%	T902	9940 000 00959	MODEL TRANSFORMER
C956	9965 000 20264	COND DISC 470PF 1KV 10%	TR1	9965 000 27114	VARISTOR TVR10
C957	9965 000 20261	COND DISC 0.001UF 1KV 20%	TR2	9965 000 27114	VARISTOR TVR10
C959	9965 000 20264	COND DISC 470PF 1KV 10%	TVR901	9940 000 00962	PTC THERMISTOR 50A 561V
C960	9965 000 20264	COND DISC 470PF 1KV 10%	ZD901	9940 000 02067	DIODE ZENR 14.5-15.1V 0.5W
D905	9965 000 38399	DIODE UF4005 1A 600V	ZD902	9940 000 02067	DIODE ZENR 14.5-15.1V 0.5W
D906	9965 000 38399	DIODE UF4005 1A 600V	ZD911	9940 000 05204	DIODE ZENR 12.6-13.1V 0.5W
D971	9965 000 38438	DIODE HER503 5A 200V	ZD952	9965 000 27138	DIODE ZENR 3.8-4.0V 0.5W
D972	9965 000 38438	DIODE HER503 5A 200V			

ELECTRICAL PARTS LIST - SUBWOOFER LED BOARD

C801	△9965 000 38439	COND SAFTY 0.0047uF 400V 20%
C802	△9965 000 38439	COND SAFTY 0.0047uF 400V 20%
LD801	9965 000 38400	LED D3 RED/BLUE LENS
Q801	4822 130 41198	2SC945P
	9965 000 38472	REMOTE CONTROL
	△9965 000 38422	LINE CORD 2P 1800MM
	9940 000 00615	DIN CABLE 8 PIN 1500MM
	9965 000 23580	RCA CABLE 1500MM OD2.6MM
	9965 000 23267	RCA CABLE 1200MM OD2.6X5.2
	9940 000 00924	RCA CABLE 1500MM
	9965 000 38289	AM LOOP ANT 1300MM
	9940 000 02731	FM ANTENNA 1500MM

Note: Only these parts mentioned in the list are normal service parts.