


# Service Service Service



# Service Manual

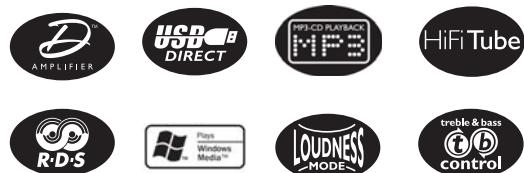

## TABLE OF CONTENTS

|  |           |  |               |
|--|-----------|--|---------------|
| Location of PC Boards .....            | 1-1       | Headphone,Button&AUX Board Diagram ..... | 8             |
| Specification .....                    | 1-2       | LAMP Board .....                         | 9             |
| Measurement Setup .....                | 1-3       | TUNER Board .....                        | 10            |
| Service Aids .....                     | 1-4       | Circuit diagram .....                    | 10-1          |
| Instruction On CD Playability .....    | 1-5 ..1-6 | Layout diagram .....                     | 10-2          |
| Software Version Check & Upgrade ..... | 2-1       | Decoder Board .....                      | 11            |
| Malfunction Check Chart .....          | 2-2       | Circuit diagram .....                    | 11-1 to 11-4  |
| Disassembly Diagram .....              | 3-1       | Layout diagram .....                     | 11-5 to 11-6  |
| Block Diagram .....                    | 4-1       | Explode View .....                       | 12-1          |
| Wiring Diagram.....                    | 4-2       | Service Partlist .....                   | 13-1 to 13-2  |
| VFD Display Board .....                | 5         | Factory Partlist .....                   | 13-3 to 13-11 |
| Circuit diagram .....                  | 5-1       |  |               |
| Layout diagram .....                   | 5-2       |  |               |
| Prepositive Board .....                | 6         |  |               |
| Circuit diagram .....                  | 6-1       |  |               |
| Layout diagram .....                   | 6-2       |  |               |
| AMP Board .....                        | 7         |  |               |
| Circuit diagram .....                  | 7-1       |  |               |
| Layout diagram .....                   | 7-2       |  |               |

© Copyright 2008 Philips Consumer Electronics B.V. Eindhoven, The Netherlands  
All rights reserved. No part of this publication may be reproduced, stored in a retrieval system or transmitted, in any form or by any means, electronic, mechanical, photocopying, or otherwise without the prior permission of Philips.

Published by DB 0831 Service Audio Printed in The Netherlands Subject to modification

**CLASS 1  
LASER PRODUCT**


© 3141 785 33070

**Version 1.0**



**PHILIPS**

## Location of PC Boards

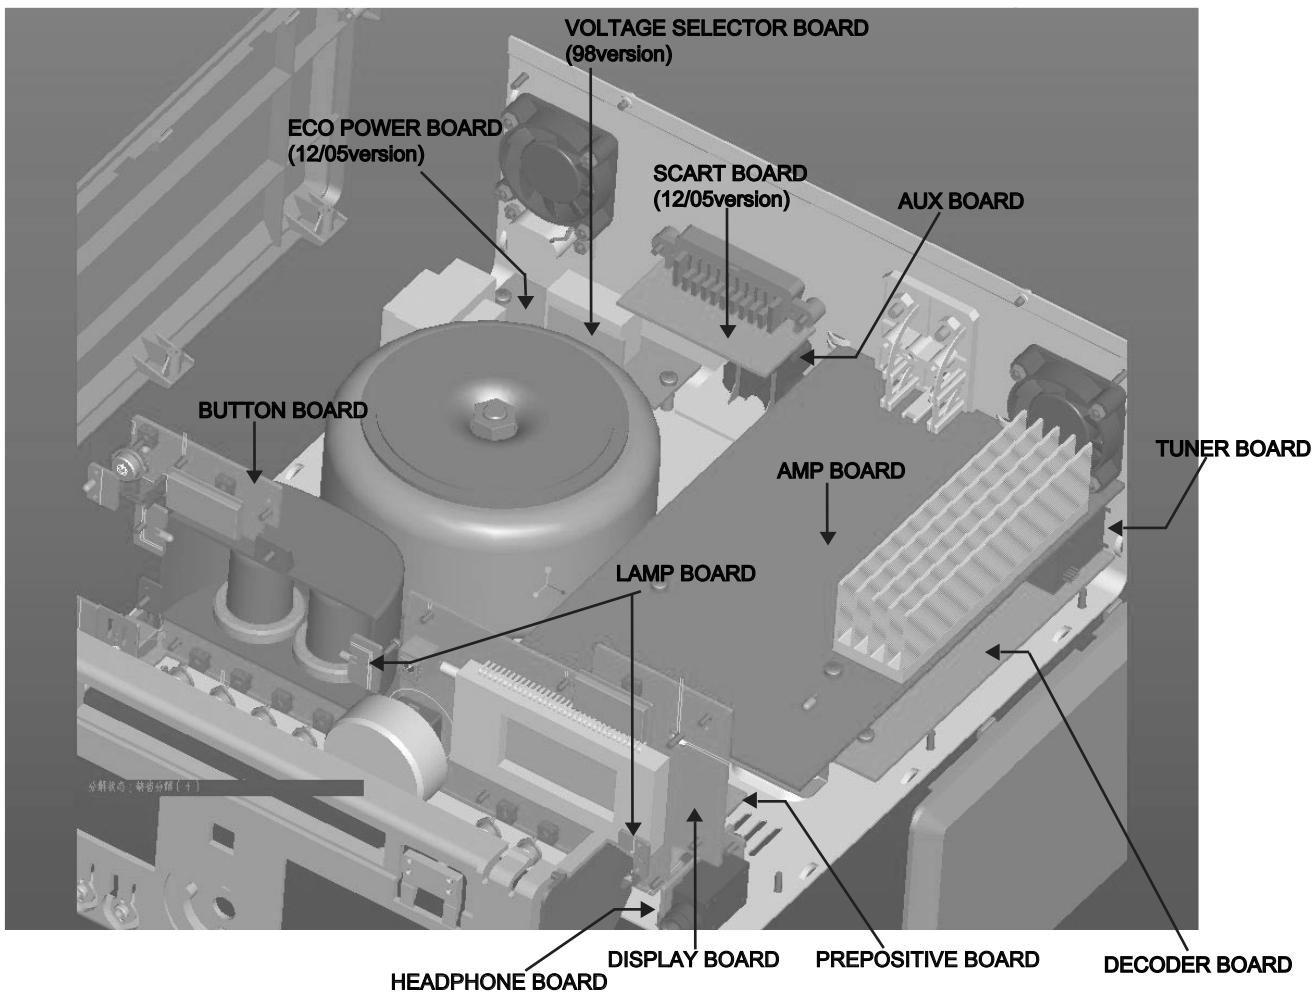

## VERSION VARIATIONS :

| Type /Versions:   |                | MCM906 |     |     |     |     |     |     |     |     |     |     |
|-------------------|----------------|--------|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|
| Board in used:    | Service policy | /05    | /12 | /37 | /55 | /58 | /61 | /79 | /93 | /94 | /96 | /98 |
| BUTTON BOARD      | M              |        |     |     |     |     |     |     |     |     |     |     |
| DISPLAY BOARD     | C              |        |     |     |     |     |     |     |     |     |     |     |
| AXU BOARD         | M              |        |     |     |     |     |     |     |     |     |     |     |
| M-boy BOARD       | M              |        |     |     |     |     |     |     |     |     |     |     |
| DECODER BOARD     | M              |        |     |     |     |     |     |     |     |     |     |     |
| AMP BOARD         | C              |        |     |     |     |     |     |     |     |     |     |     |
| HEADPHONE BOARD   | M              |        |     |     |     |     |     |     |     |     |     |     |
| LAMP BOARD        | M              |        |     |     |     |     |     |     |     |     |     |     |
| PREPOSITIVE BOARD | C              |        |     |     |     |     |     |     |     |     |     |     |
| ECO-POWER BOARD   | M              |        |     |     |     |     |     |     |     |     |     |     |

| Type /Versions:    |                   | MCM906 |     |     |     |     |     |     |     |     |     |     |
|--------------------|-------------------|--------|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|
| Features           | Feature diffrence | /05    | /12 | /37 | /55 | /58 | /61 | /79 | /93 | /94 | /96 | /98 |
| RDS                | ✓                 |        |     |     |     |     |     |     |     |     |     |     |
| VOLTAGE SELECTOR   |                   |        |     |     |     |     |     |     |     |     |     |     |
| ECO STANDBY - DARK | ✓                 |        |     |     |     |     |     |     |     |     |     |     |
| TDS                |                   |        |     |     |     |     |     |     |     |     |     |     |

\* TIPS : C -- Component Lever Repair.  
M -- Module Lever Repair  
✓ -- Used

## Specification

### AMPLIFIER

|                             |                      |
|-----------------------------|----------------------|
| Rated Output Power .....    | 75W x 2 RMS          |
| Signal-to-noise ratio ..... | ≥ 65 dBA             |
| Frequency response .....    | 40Hz + 3dB+/-3 20KHz |
| Aux Input.....              | 0.5V RMS 47kohm      |

### DISC

|                                 |                          |
|---------------------------------|--------------------------|
| Laser Type .....                | Semiconductor            |
| Disc Diameter.....              | 12cm/8cm                 |
| Support Disc .....              | MP3,<br>CD-DA,CD-R,CD-RW |
| Audio DAC .....                 | 24Bits / 44.1kHz         |
| Total Harmonic Distortion ..... | <0.5%(1kHz)              |
| Frequency Response .....        | 20Hz + 0.5dB+/-2 20KHz   |
| S/N Ration .....                | ≥65dBA                   |

### TUNER

|                                 |                |
|---------------------------------|----------------|
| FM Tuning Range .....           | 87.5 – 108 MHz |
| Tuning grid .....               | 100K/50KHz     |
| <b>Sensitivity</b>              |                |
| – Mono, 50dB S/N Ratio .....    | 5u V           |
| – Stereo, 50dB S/N Ratio.....   | 100uV          |
| Selectivity .....               | >33dB          |
| Image Rejection .....           | >25dB          |
| Total Harmonic Distortion ..... | <1%            |
| Signal to Noise Ration .....    | ≥65dBA         |

### SPEAKERS

|                               |                      |
|-------------------------------|----------------------|
| Speaker Impedance .....       | 4ohm                 |
| Speaker Driver, base .....    | 5 1/4"               |
| Speaker Driver, tweeter ..... | Φ 2.5                |
| Frequency Response .....      | 40Hz + 3dB+/-3 20KHz |

### GENERAL INFORMATION

|                                     |                 |
|-------------------------------------|-----------------|
| Total Output power .....            | 150 W RMS       |
| AC Power .....                      | 220-230V / 50Hz |
| Operation Power Consumption .....   | 85W             |
| Standby Power Consumption .....     | <4W             |
| Eco Standby Power Consumption ..... | <1W             |
| Headphone Output .....              | 2X15mW 32ohm    |
| USB Direct .....                    | Version 1.1     |

### Dimensions

|                                 |                 |
|---------------------------------|-----------------|
| – Main unit (w x h x d) .....   | 275x126x250mm   |
| – Speaker box (w x h x d) ..... | 186x300x222.5mm |


### Weight

|                      |         |
|----------------------|---------|
| – With Packing ..... | 16.5 KG |
| – Main Unit .....    | 5.0KG   |
| – Speaker box .....  | 4.5x2KG |

Specifications and external appearance are subject to change without notice.


## MEASUREMENT SETUP

### Tuner FM

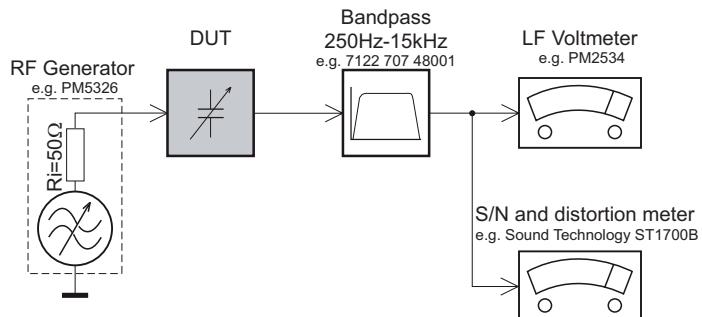

Use a bandpass filter to eliminate hum (50Hz, 100Hz) and disturbance from the pilottone (19kHz, 38kHz).


### Tuner AM (MW,LW)

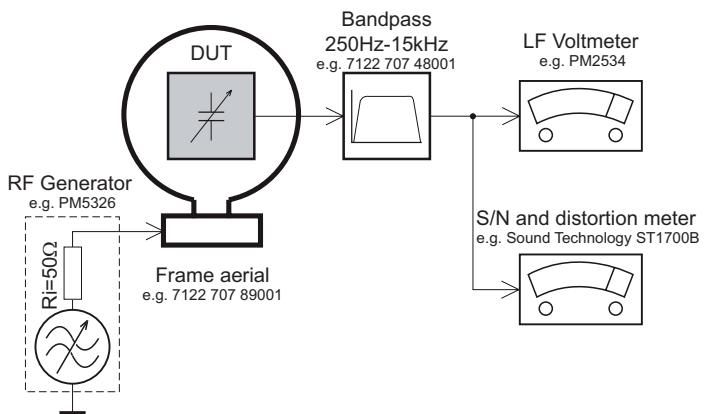

To avoid atmospheric interference all AM-measurements have to be carried out in a Faraday's cage.  
Use a bandpass filter (or at least a high pass filter with 250Hz) to eliminate hum (50Hz, 100Hz).


### CD

Use Audio Signal Disc SBC429 4822 397 30184  
(replaces test disc 3)

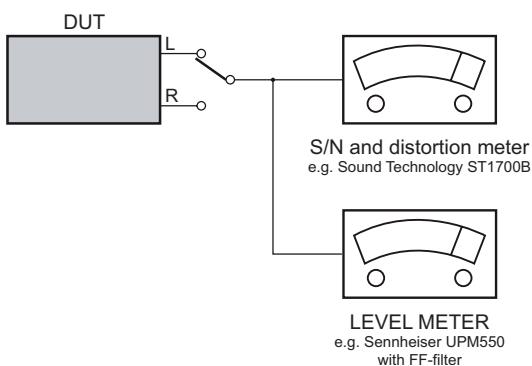

### Recorder

Use Universal Test Cassette **CrO<sub>2</sub>** SBC419 4822 397 30069  
or Universal Test Cassette **Fe** SBC420 4822 397 30071

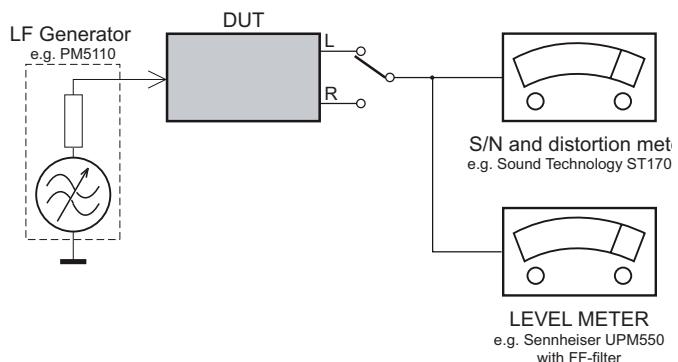

## SERVICE AIDS



### WARNING

All ICs and many other semi-conductors are susceptible to electrostatic discharges (ESD). Careless handling during repair can reduce life drastically.

When repairing, make sure that you are connected with the same potential as the mass of the set via a wrist wrap with resistance. Keep components and tools also at this potential.

### ESD



Safety regulations require that the set be restored to its original condition and that parts which are identical with those specified, be used

Safety components are marked by the symbol  $\triangle$ .

**CLASS 1  
LASER PRODUCT**



## INFORMATION ABOUT LEAD-FREE SOLDERING

Philips CE is producing lead-free sets from 1.1.2005 onwards.

### IDENTIFICATION:

Regardless of special logo (not always indicated) one must treat all sets from **1 Jan 2005** onwards, according next rules:

- On our website [www.atyourservice.ce.Philips.com](http://www.atyourservice.ce.Philips.com) you find more information to:
  - \* BGA-de-/soldering (+ baking instructions)
  - \* Heating-profiles of BGAs and other ICs used in Philips-sets
  - \* Lead free

You will find this and more technical information within the "magazine", chapter "workshop news".


For additional questions please contact your local repair-helpdesk.

## SERVICE INSTRUCTION

Safety regulations require that after a repair, the set must be returned in its original condition. Pay in particular attention to the following points:

- Route the wire trees correctly and fix them with the mounted cable clamps.
- Check the insulation of the AC Power lead for external damage.
- Check the strain relief of the AC Power cord for proper function.
- Check the electrical DC resistance between the AC Power Plug and the secondary side (only for sets which have a AC Power isolated power supply):
- 1. Unplug the AC Power cord and connect a wire between the two pins of the AC Power plug.
- 2. Set the AC Power switch to the "on" position (keep the AC Power cord unplugged!).
- 3. Measure the resistance value between the pins of the AC Power plug and the metal shielding of the tuner or the aerial connection on the set. The reading should be larger than 4.5 Mohm (For U.S. it should be between 4.2 Mohm and 12 Mohm).
- 4. Switch "off" the set, and remove the wire between the two pins of the AC Power plug.
- Check the cabinet for defects, to avoid touching of any inner parts by the customer.

## INSTRUCTIONS ON CD PLAYABILITY

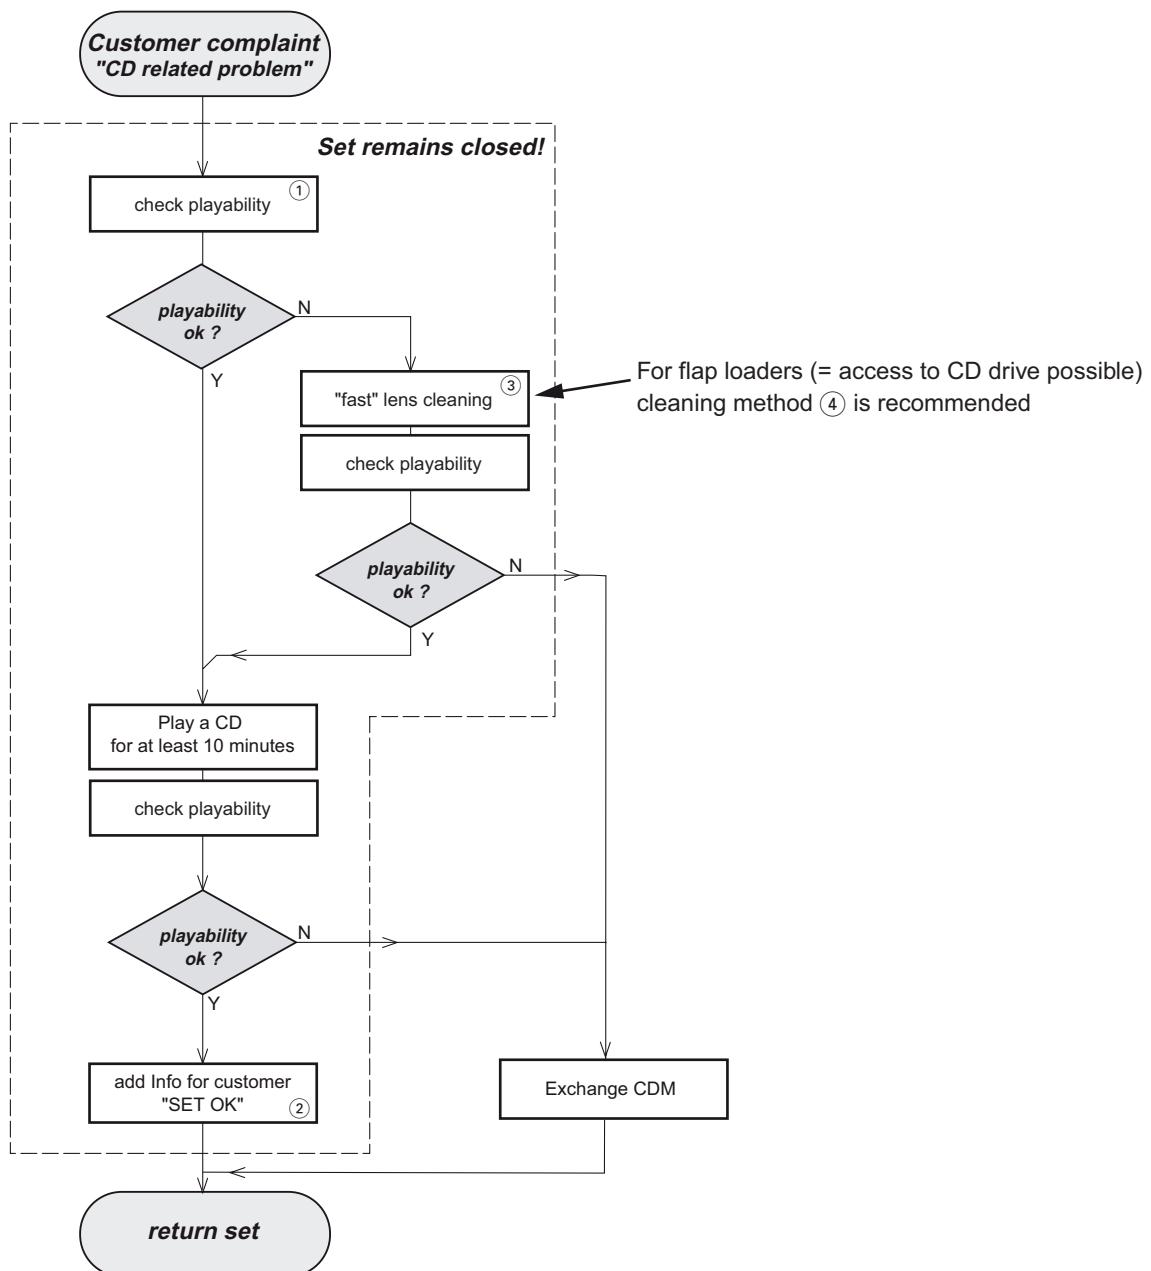

① - ④ For description - see following pages

## INSTRUCTIONS ON CD PLAYABILITY

(1)

### PLAYABILITY CHECK

For sets which are compatible with **CD-RW** discs  
use CD-RW Printed Audio Disc ..... 7104 099 96611  
TR 3 (Fingerprint)  
TR 8 (600 $\mu$  Black dot) **maximum at 01:00**

- playback of these two tracks without audible disturbance  
playing time for: Fingerprint  $\geq$  10seconds  
Black dot from 00:50 to 01:10
- jump forward/backward (search) within a reasonable time

For all other sets  
use CD-DA SBC 444A..... 4822 397 30245  
TR 14 (600 $\mu$  Black dot) **maximum at 01:15**  
TR 19 (Fingerprint)  
TR 10 (1000 $\mu$  wedge)

- playback of all these tracks without audible disturbance  
playing time for: 1000 $\mu$  wedge  $\geq$  10seconds  
Fingerprint  $\geq$  10seconds  
Black dot from 01:05 to 01:25
- jump forward/backward (search) within a reasonable time

(2)

### CUSTOMER INFORMATION

It is proposed to add an addendum sheet to the set which informs the customer that the set has been checked carefully - but no fault was found.  
The problem was obviously caused by a scratched, dirty or copy-protected CD. In case problems remain, the customer is requested to contact the workshop directly.  
The lens cleaning (method ③) should be mentioned in the addendum sheet.

The final wording in national language as well as the printing is under responsibility of the Regional Service Organizations.

(4)


### LIQUID LENS CLEANING

Before touching the lens it is advised to clean the surface of the lens by blowing clean air over it.  
This to avoid that little particles make scratches on the lens.

Because the material of the lens is synthetic and coated with a special anti-reflectivity layer, cleaning must be done with a non-aggressive cleaning fluid. It is advised to use "Cleaning Solvent"

The actuator is a very precise mechanical component and may not be damaged in order to guarantee its full function. Clean the lens gently (don't press too hard) with a soft and clean cotton bud moistened with the special lens cleaner.

The direction of cleaning must be in the way as indicated in the picture below.

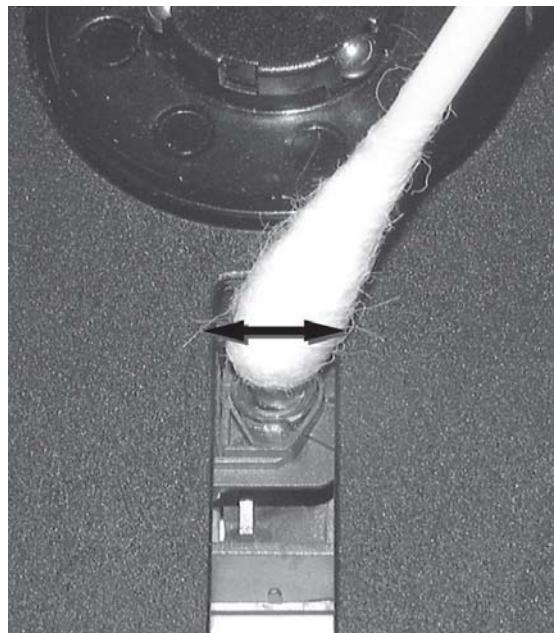

## Software Version Check & Upgrade

### Upgrade software

---

1. Downloading the software from Philips support website  
<http://www.philips.com/support>

2. Put in the Software CD Disc or USB, when it is loading  
Waiting a minute, till hear a long ding voice. Software  
upgrade finish.


### Software check

---

Press the “display” button quartic continuously on remote control,  
display showing as below:


Vxx dyyyy

## Malfunction follow check chart

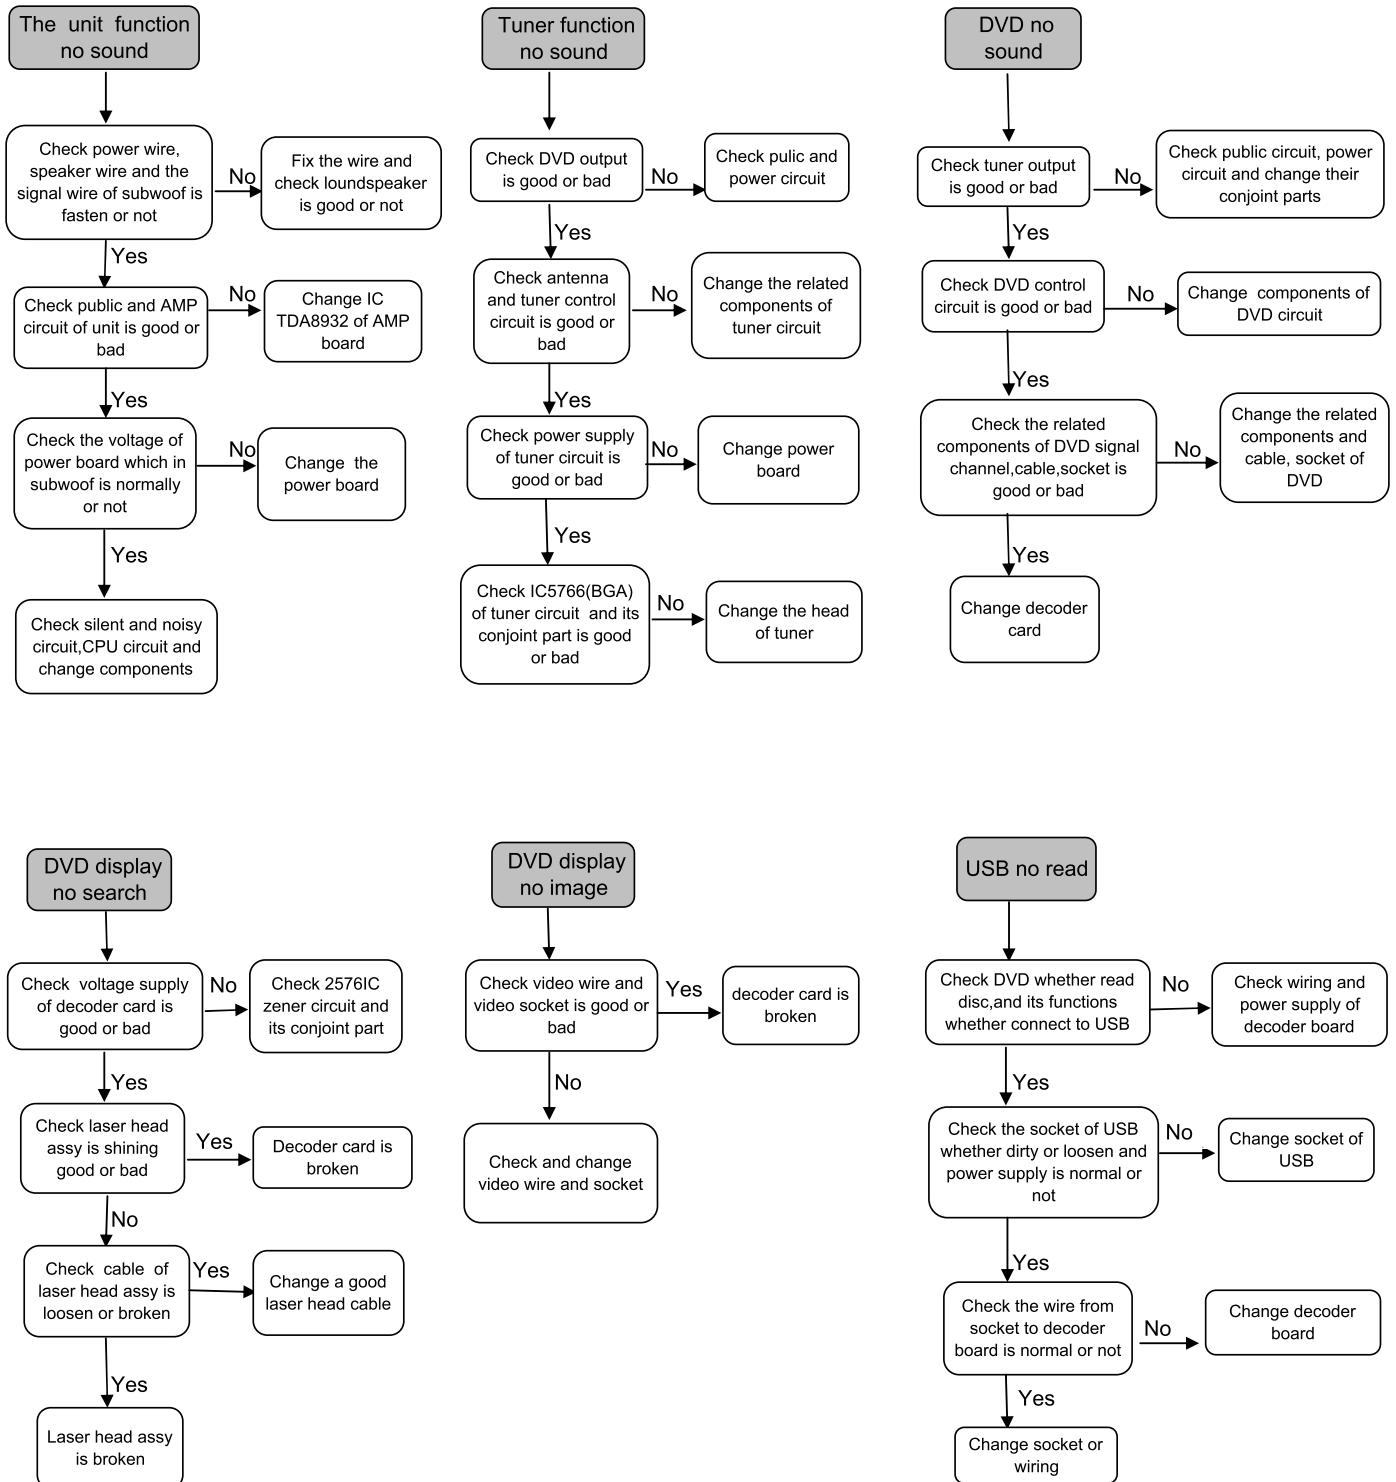


## Disassembly Diagram


A,Loosen screws as below sketch map to open the top cabinet:  
1,screws:3x6BMTT(3PCS)  
2,screws:3x6FMTT(2PCS)

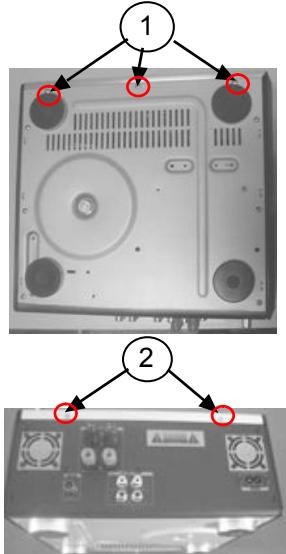


B,Loosen screws as below sketch map to remove the both sides panels:  
1,screws:3x6PA(6PCS)  
2,screws:3x10PA(2PCS)

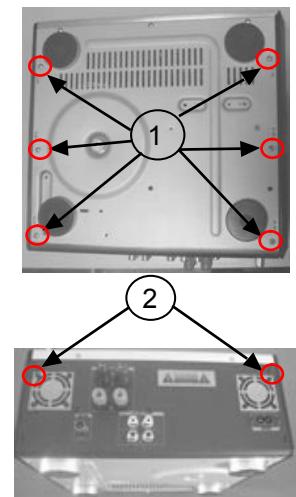


C,Loosen screws as below sketch map to remove the DVD mechanism bracket:  
1,screws:3x12BA(2PCS)  
2,after loosed the screws, push the DVD mechanism bracket breadthwise to remove it

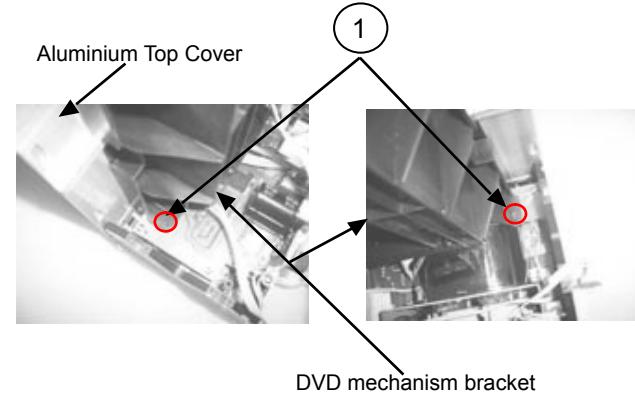


D,Loosen screws as below sketch map to remove AMP board:  
1,screws:3x10PA(1PC)  
2,screws:3x10PA(4PCS)

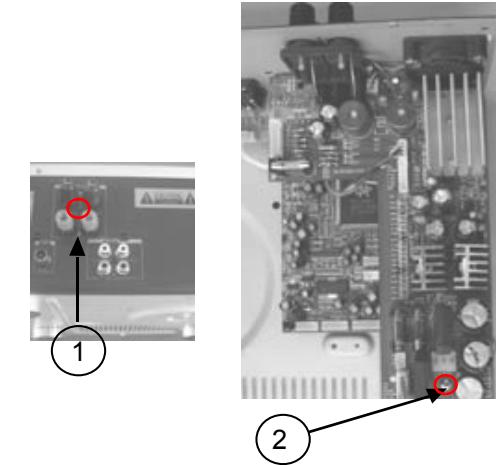


E,Loosen screws as below sketch map to remove the Decoder Board:  
1,screws:3x10PA(1PCS)  
2,screws:3x6BM(2PCS)  
3,screws:3X6PMTT(1pc)

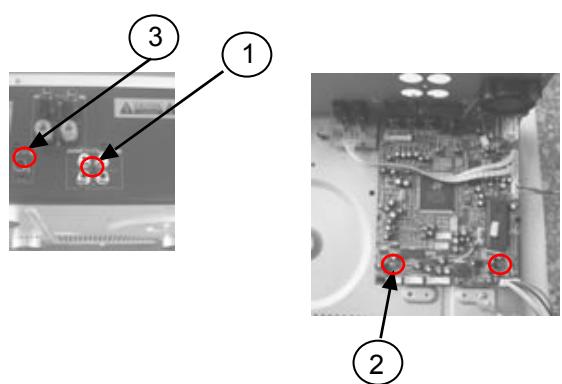


F,Loosen screws as below sketch map to remove the Prepositive Board:  
1,screws:3x6PA(2PCS)

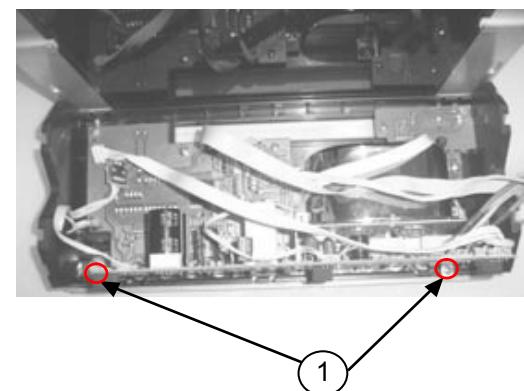


G,Loosen screws as below sketch map to remove the Display Board:  
1,screws:2.6x6BB(10PCS)

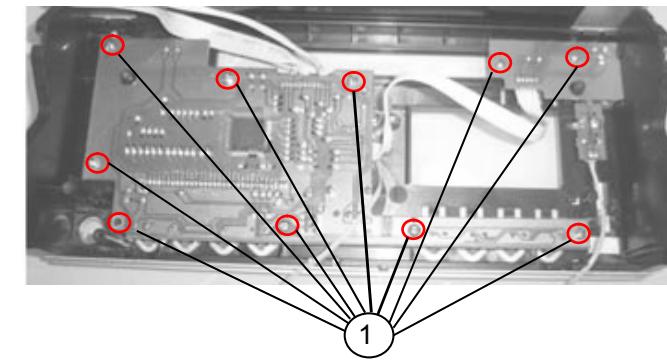


H,Loosen screws as below sketch map to remove the USB Board:  
1,screws:3x6PA(1PC)

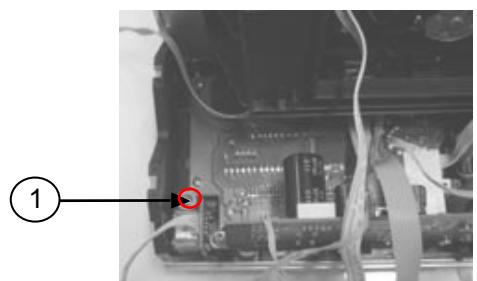


I,Loosen screws as below sketch map to remove the LAMP Board:  
1,screws:2.6x4BB(2PCS)

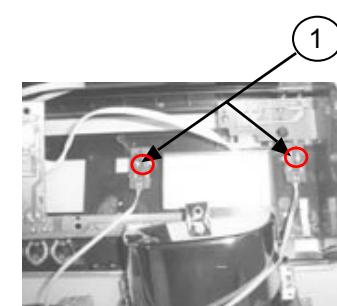


## Block Diagram

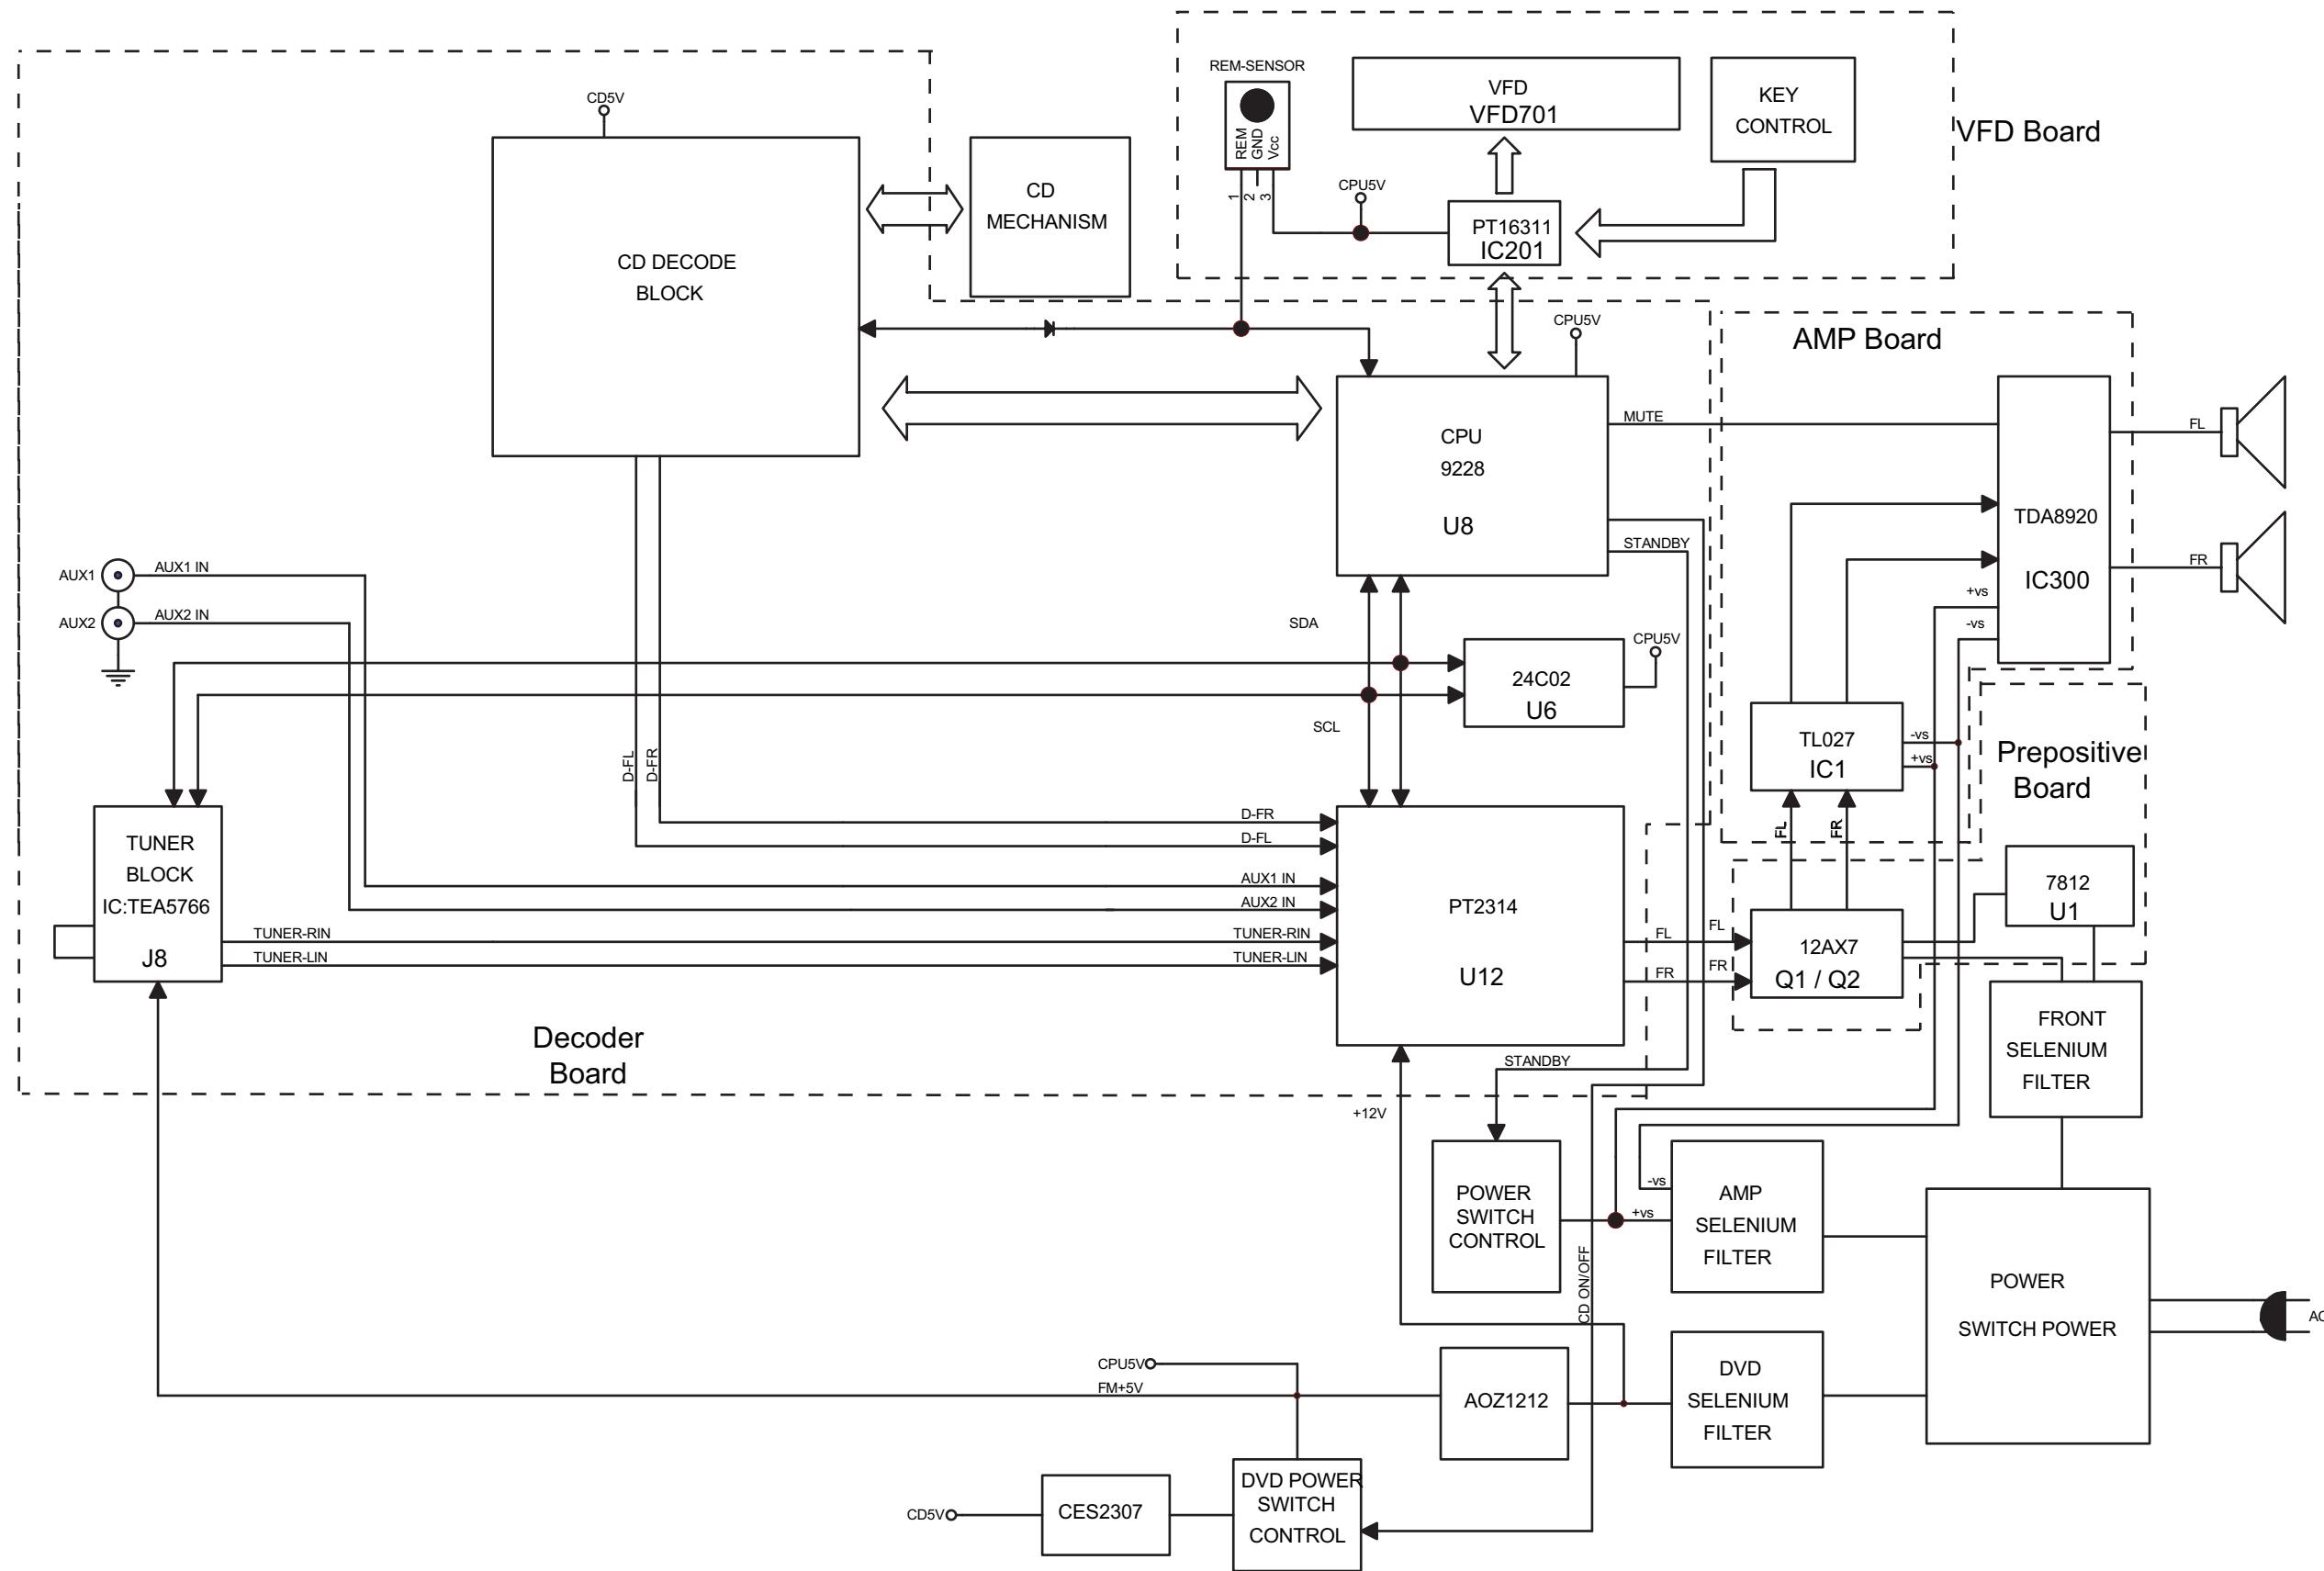


## Wiring Diagram

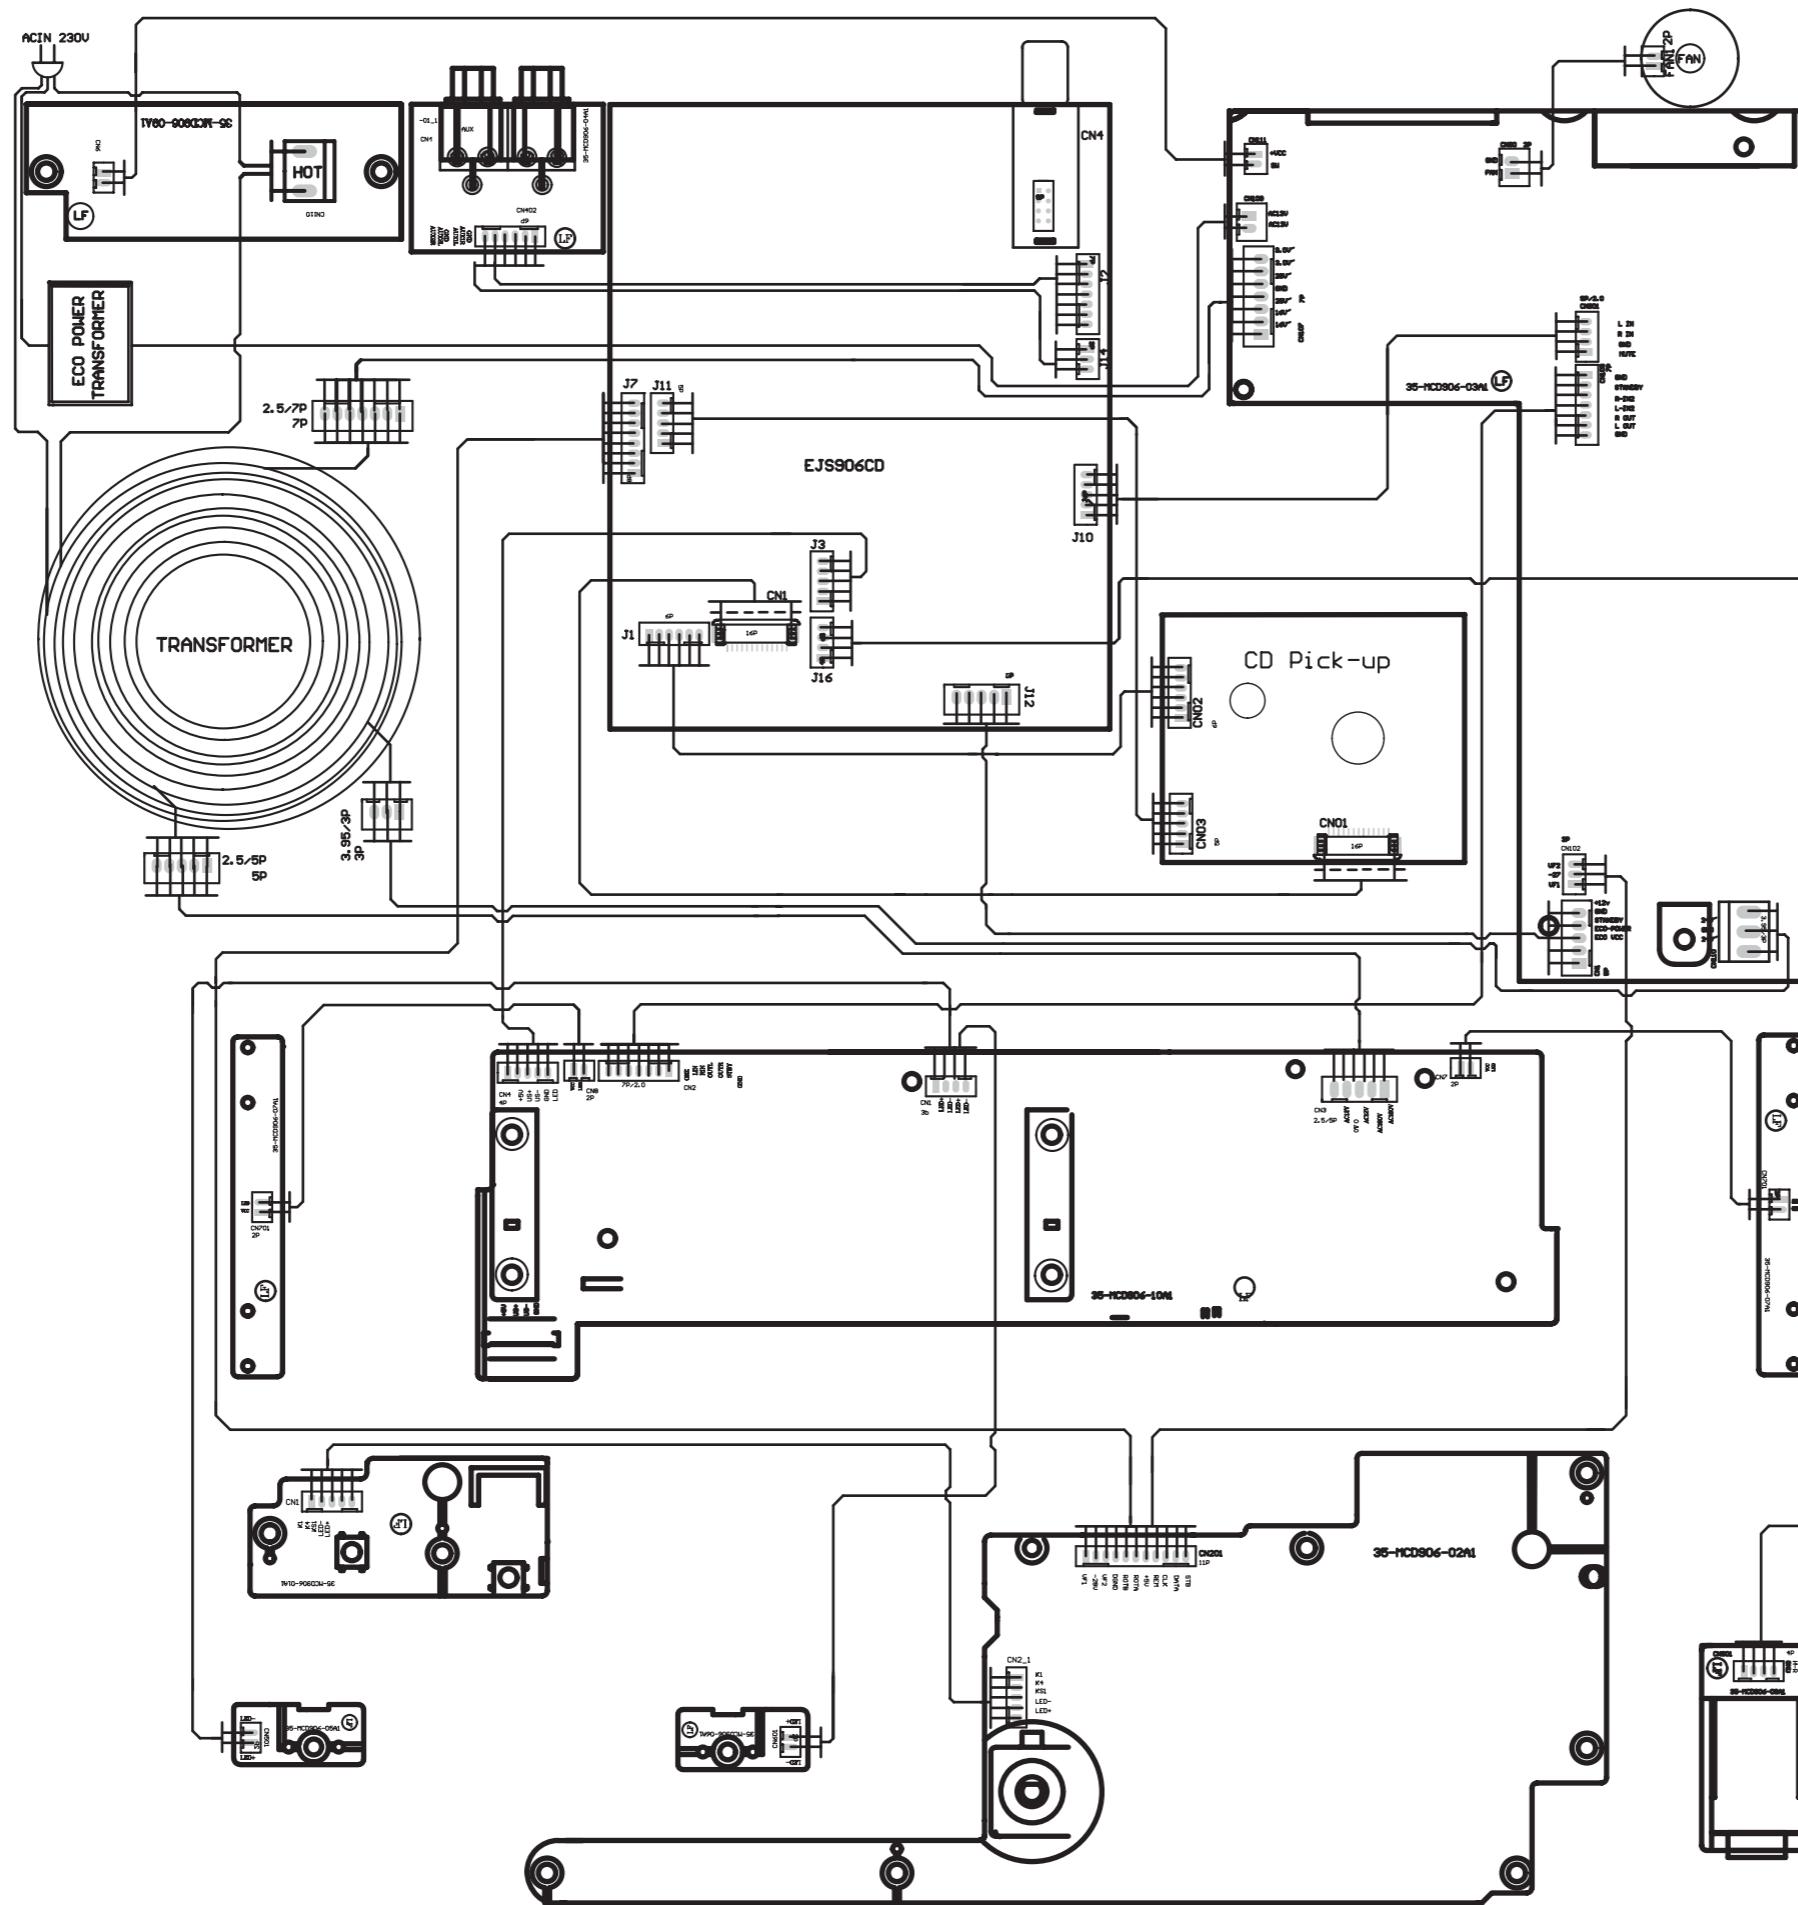


## VFD Display Board --Circuit Diagram

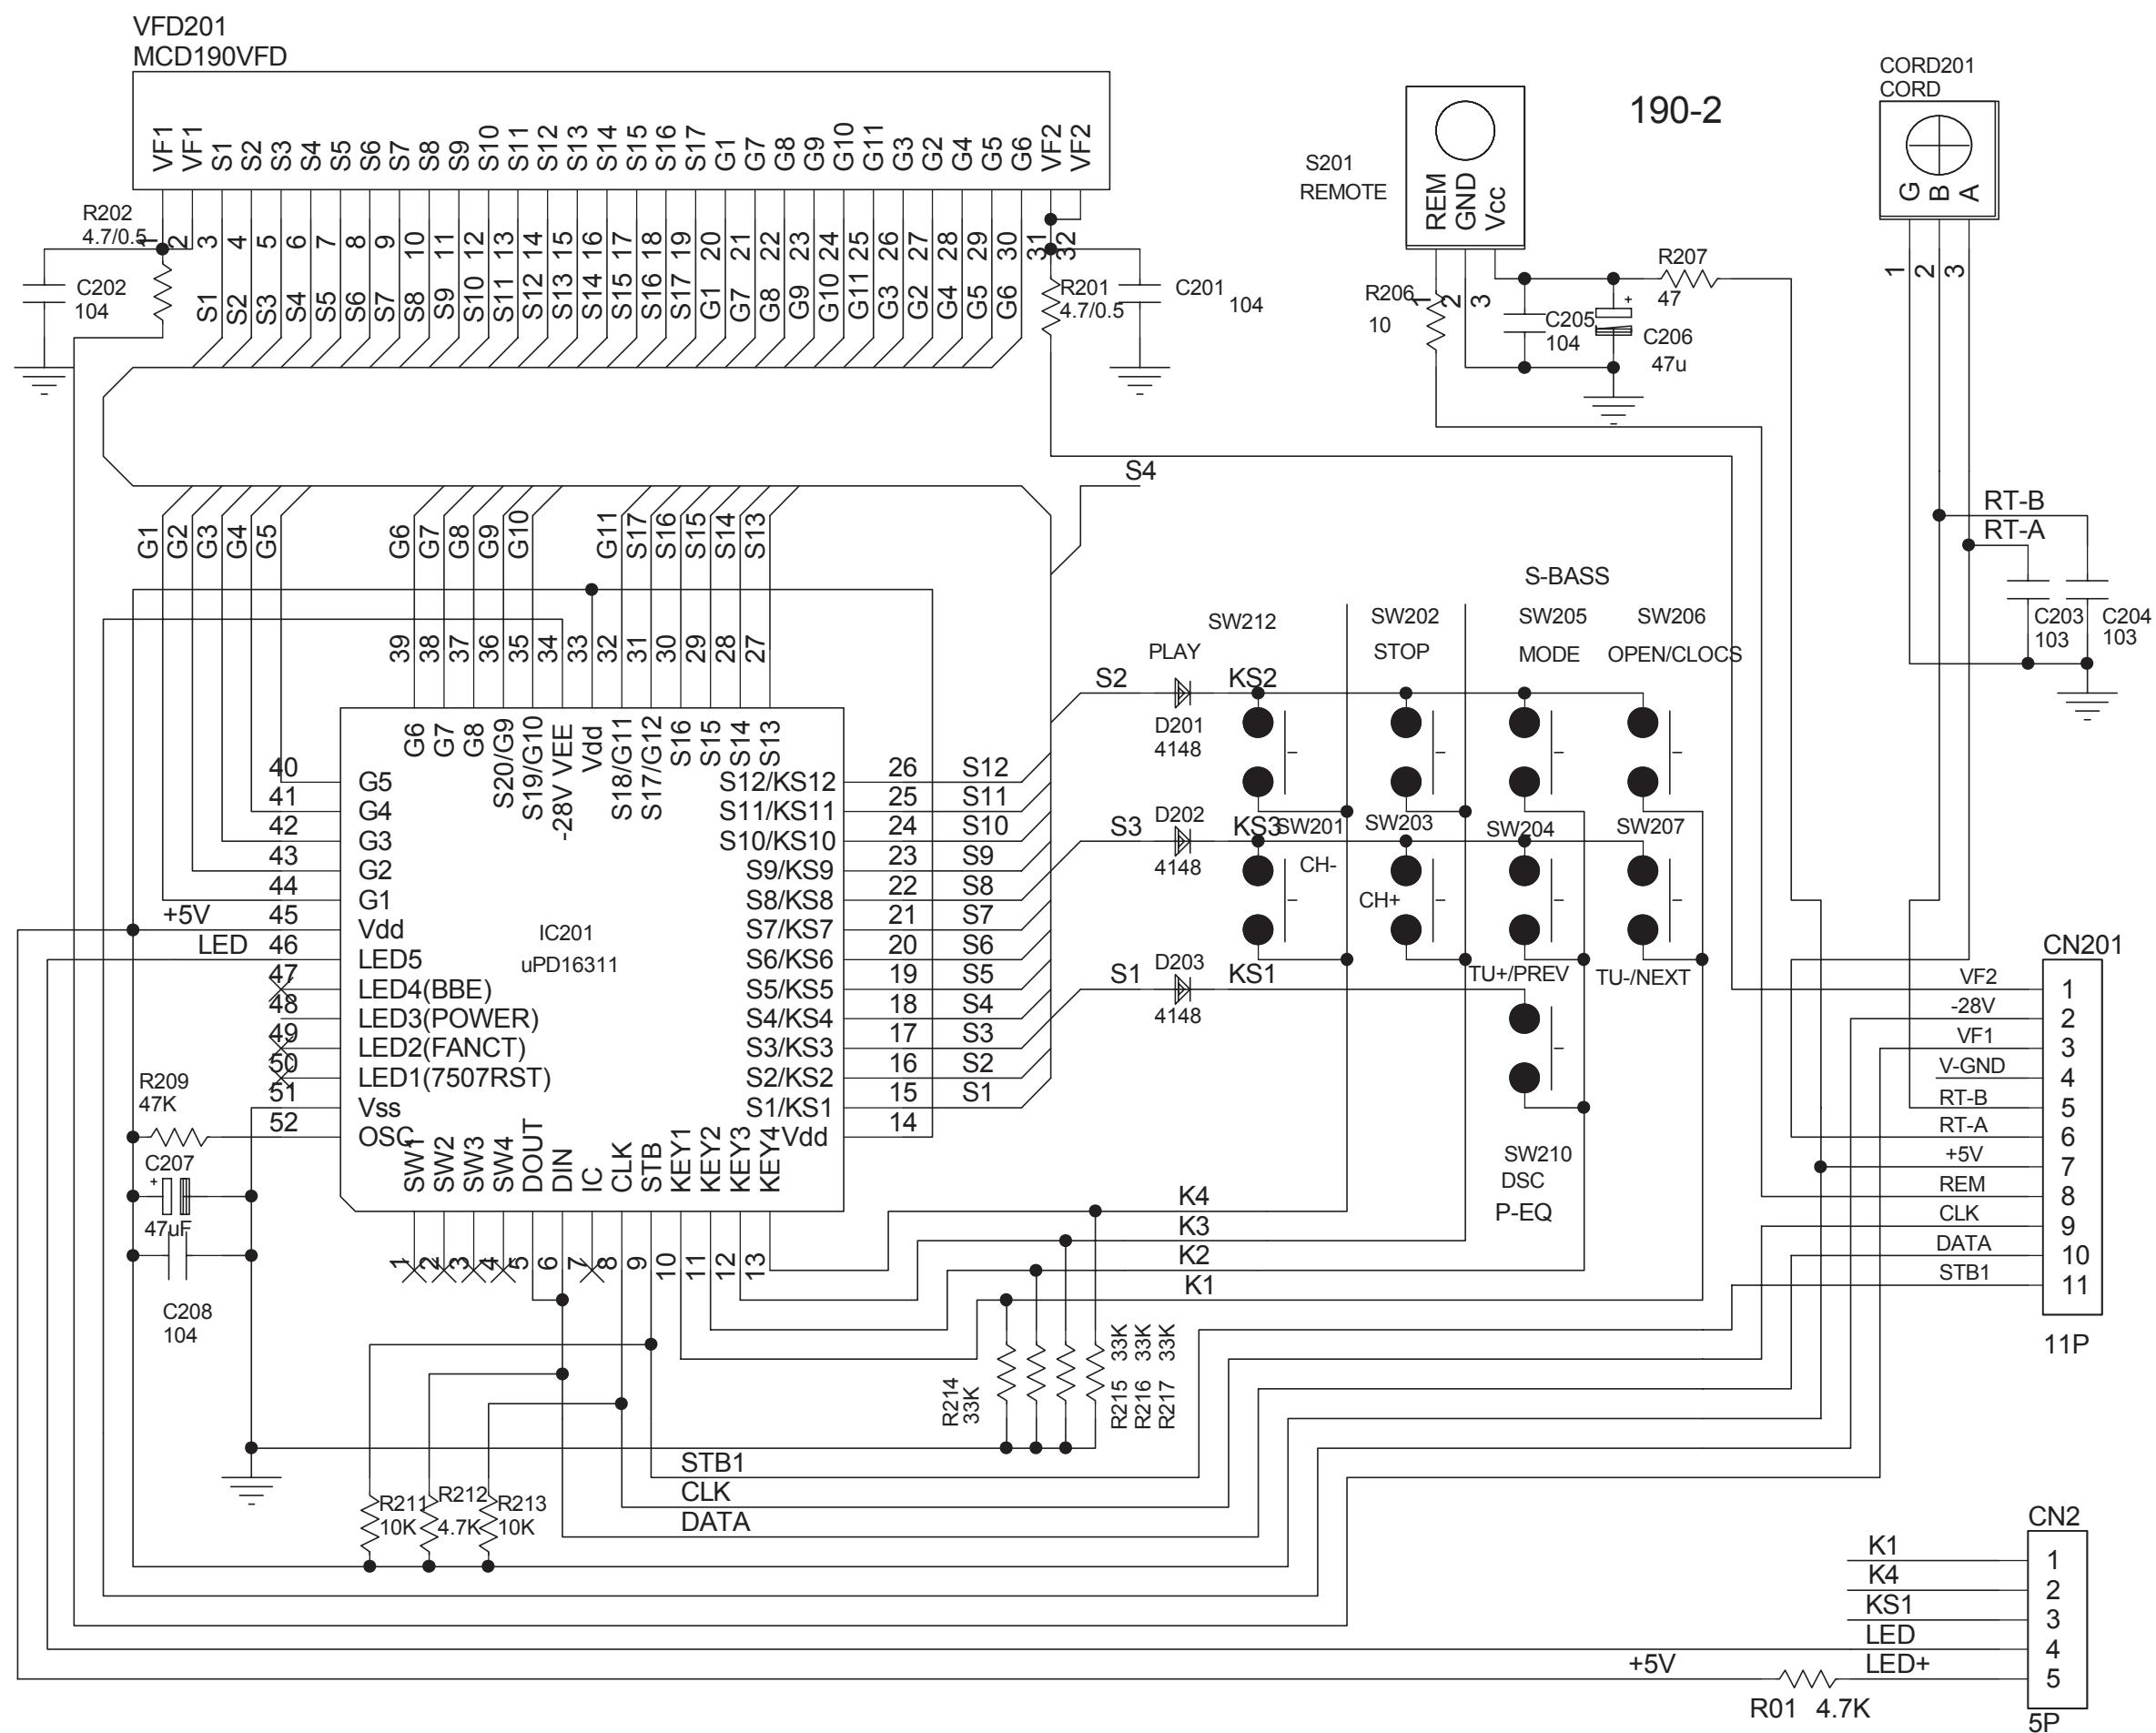



## VFD Display Board--Layout Diagram

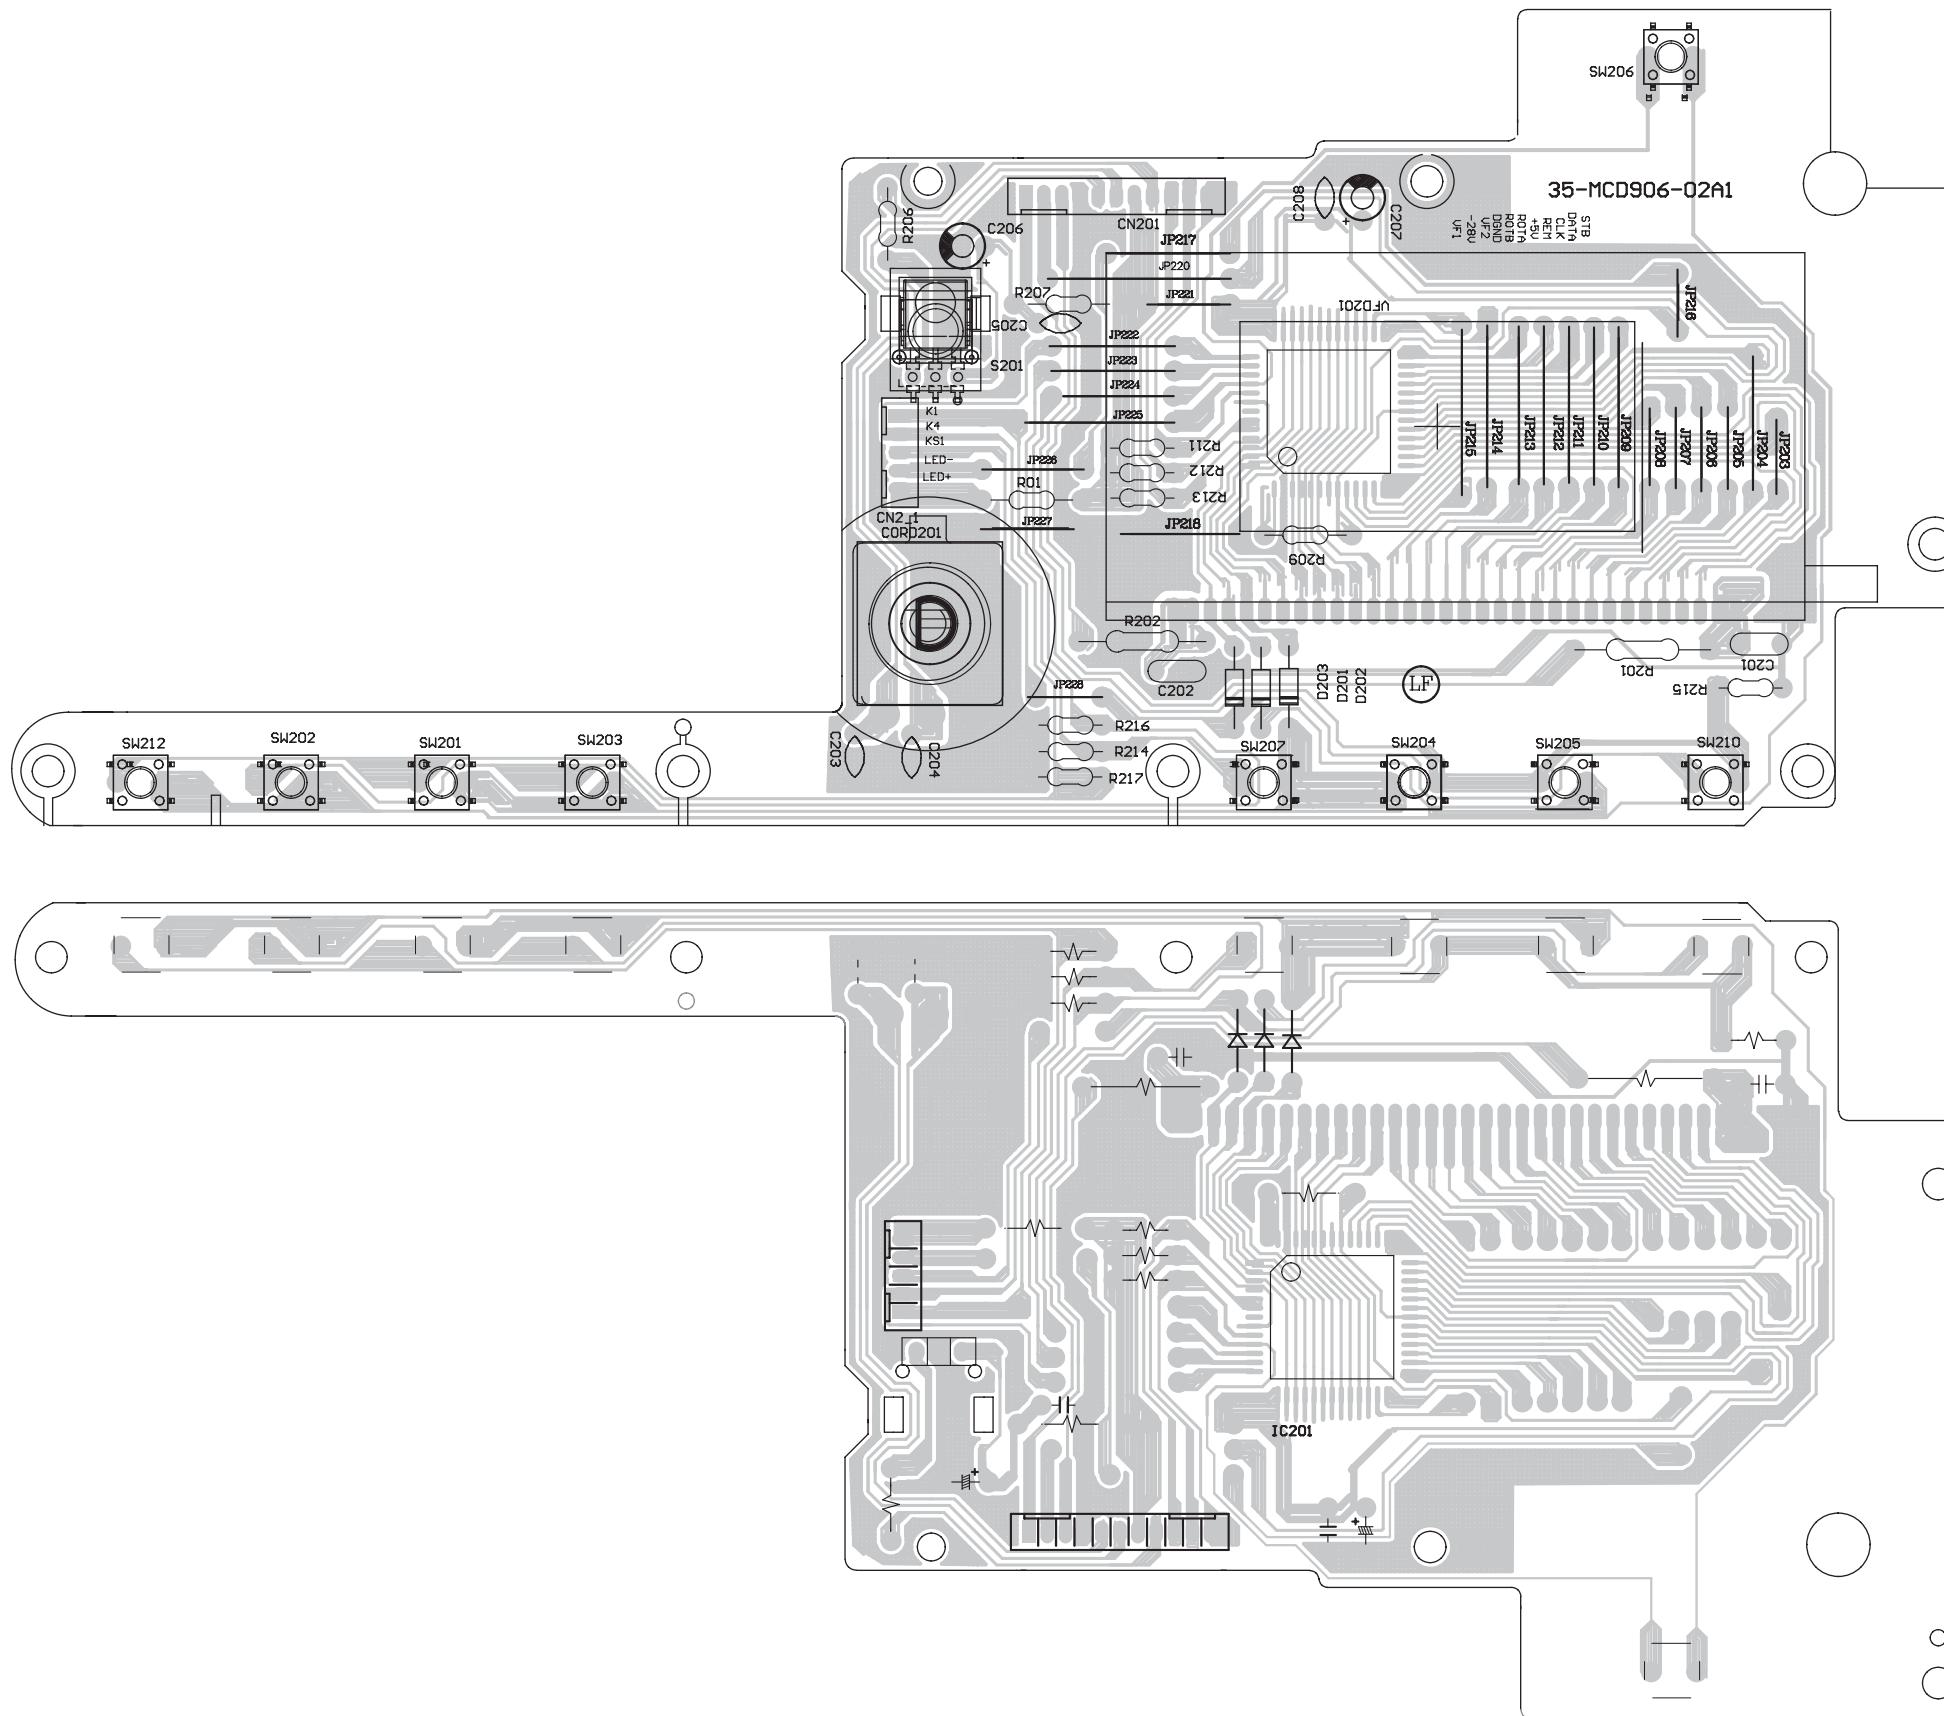


## Prepositive Board -- Circuit Diagram

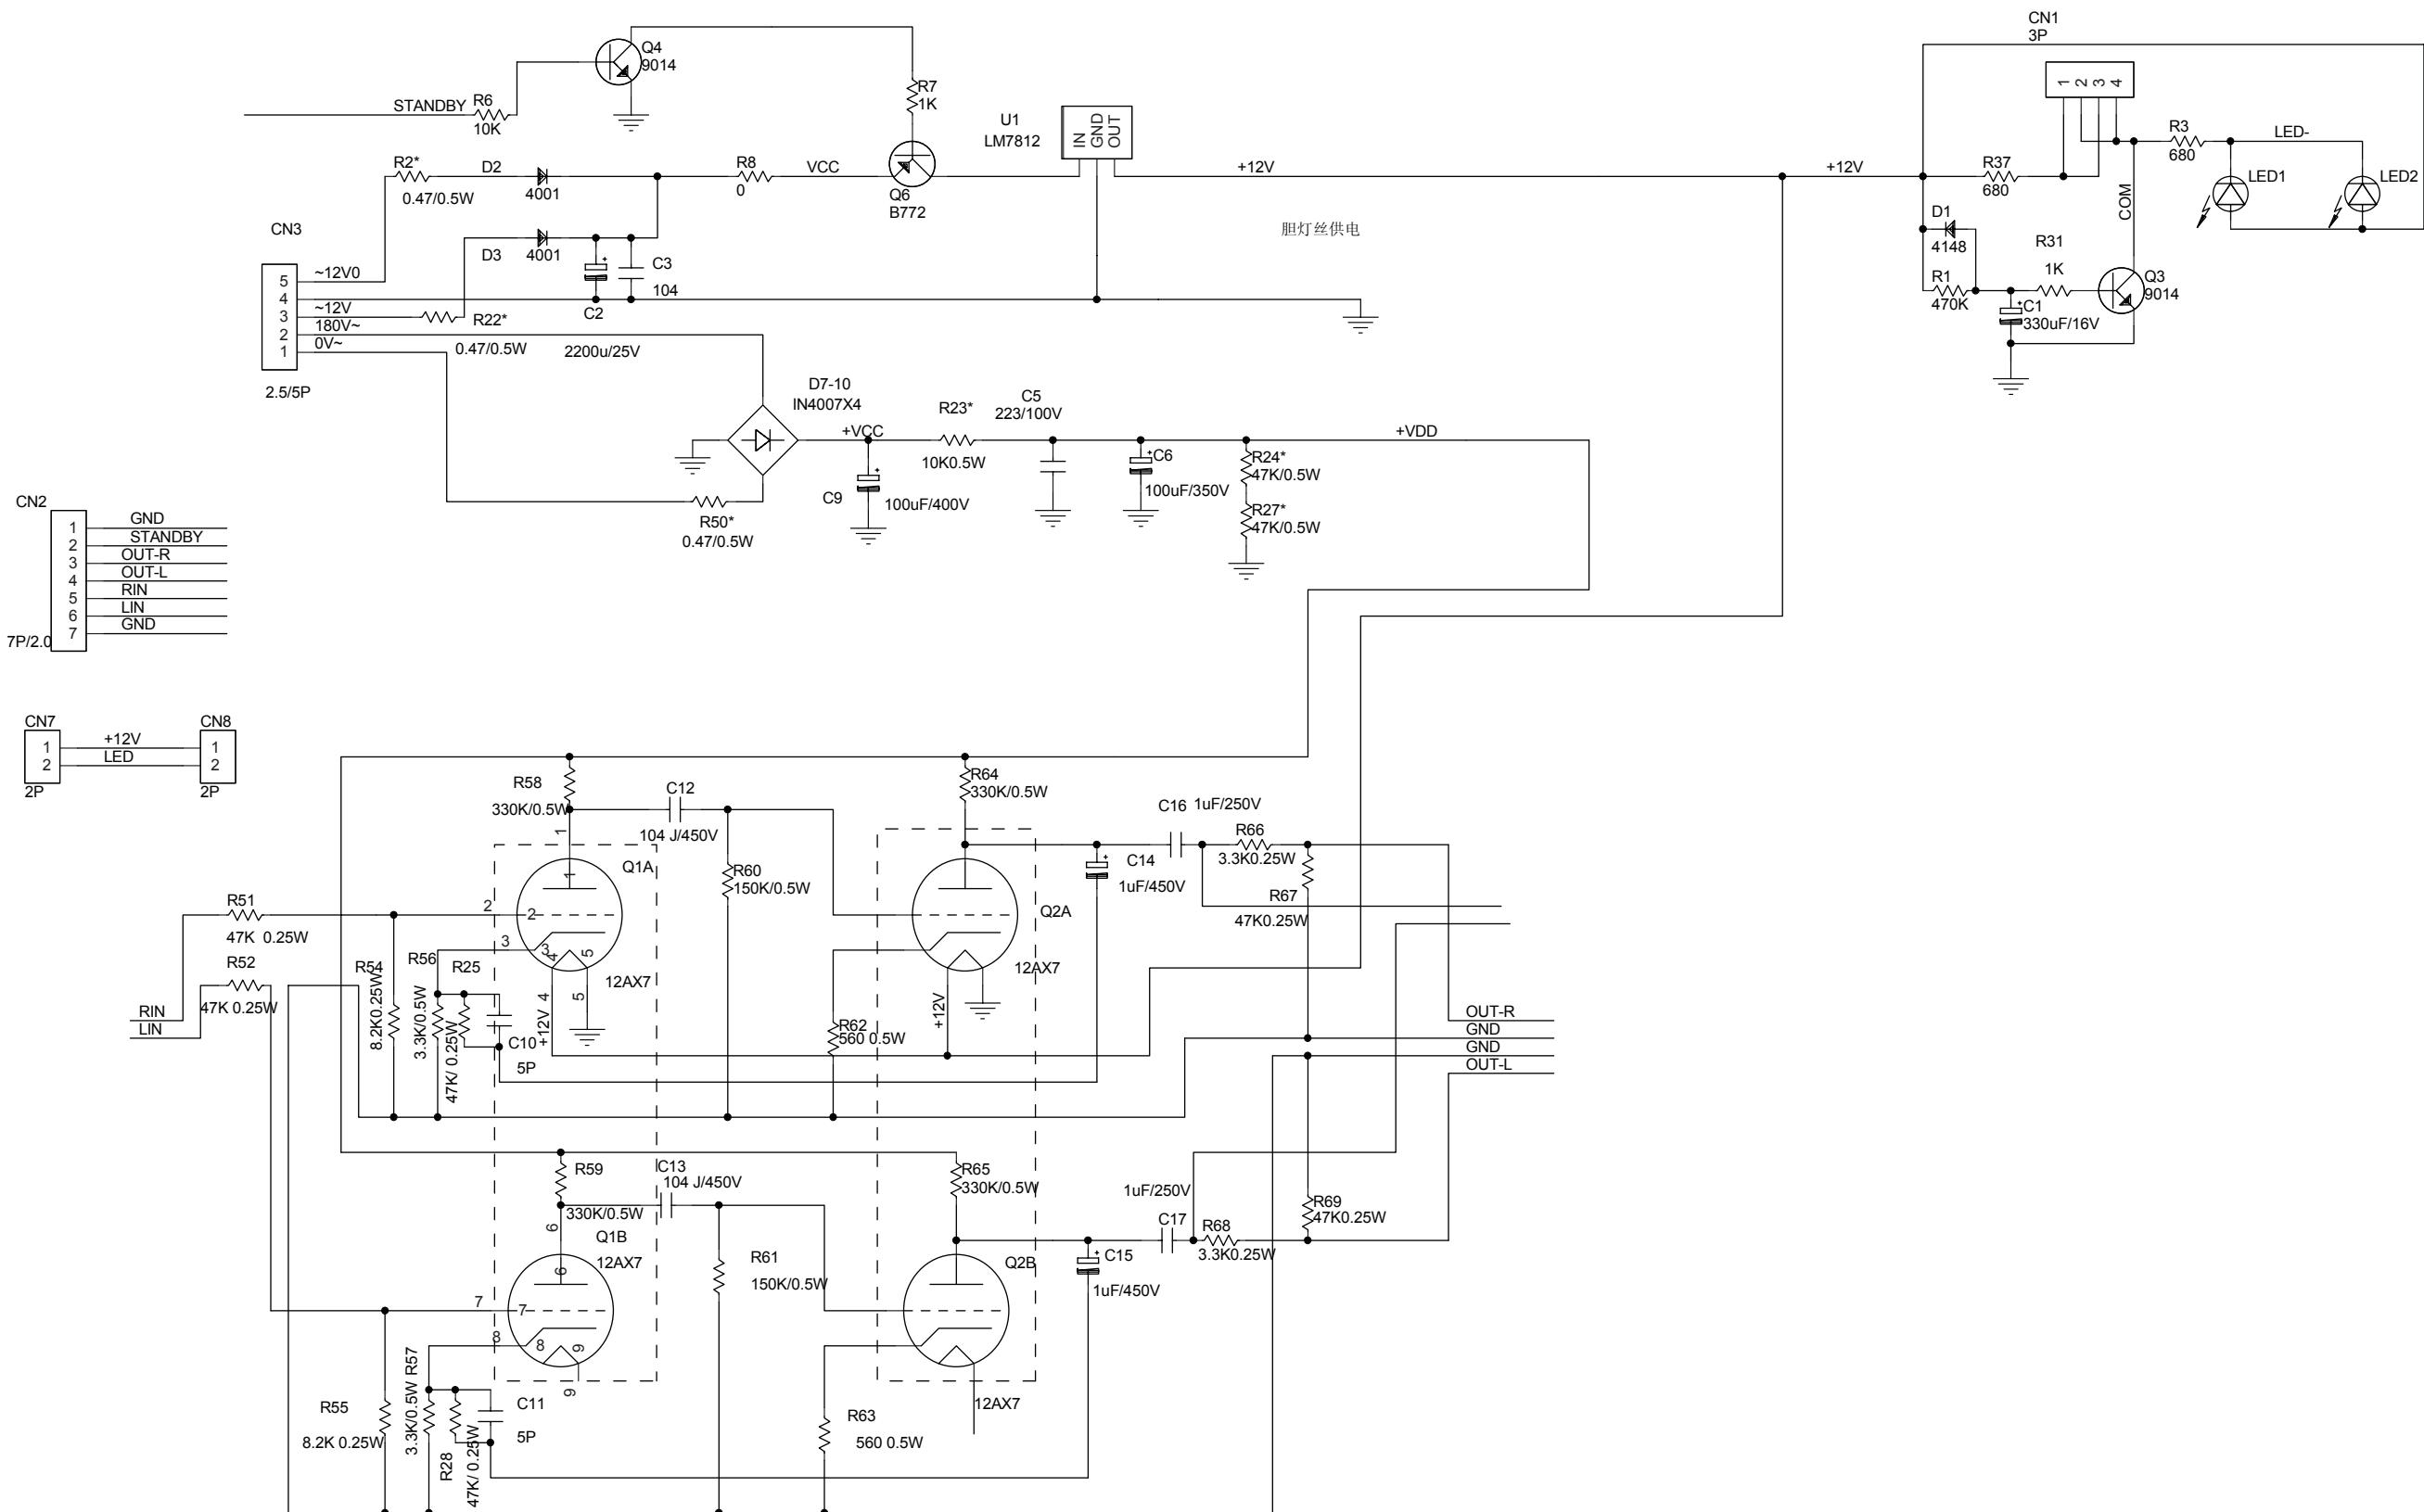


## Prepositive Board--Layout Diagram

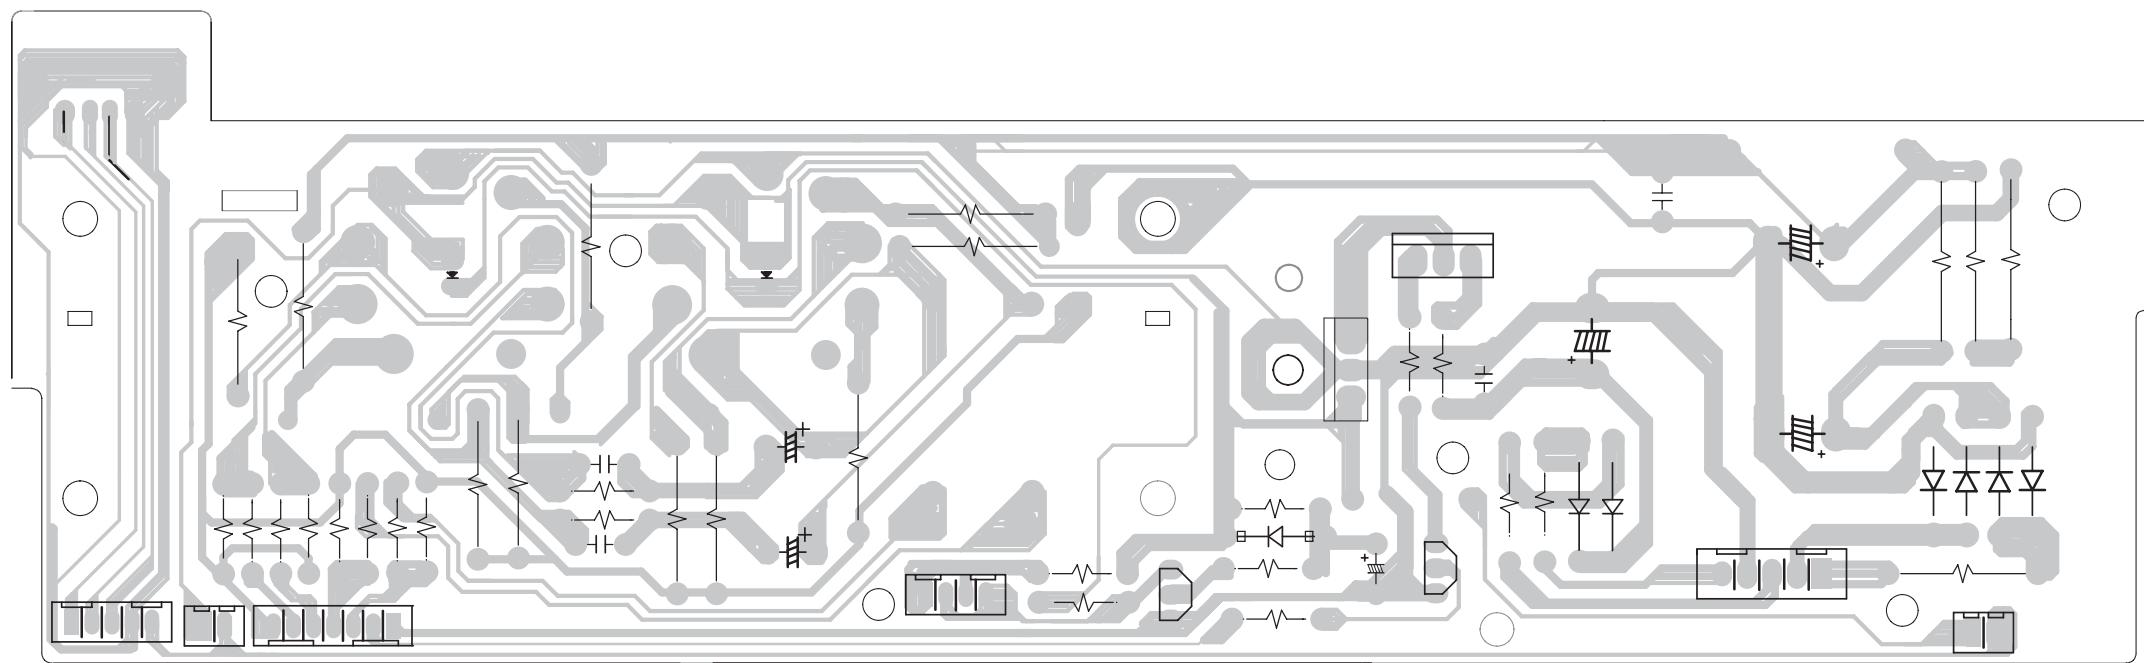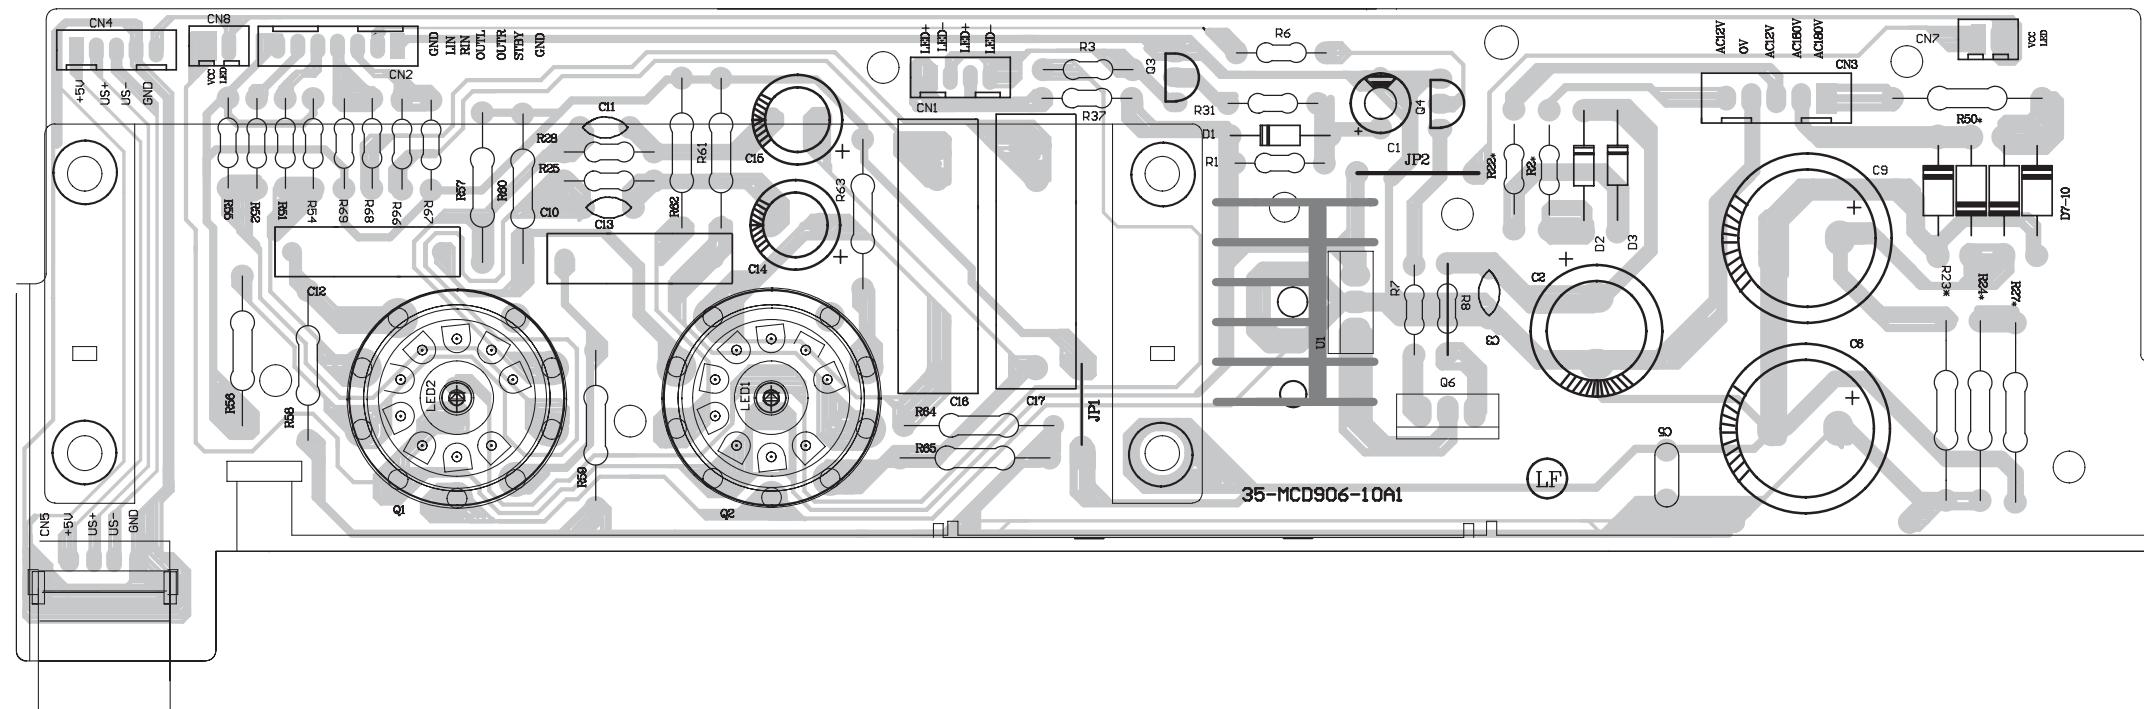

## AMP Board --Circuit Diagram



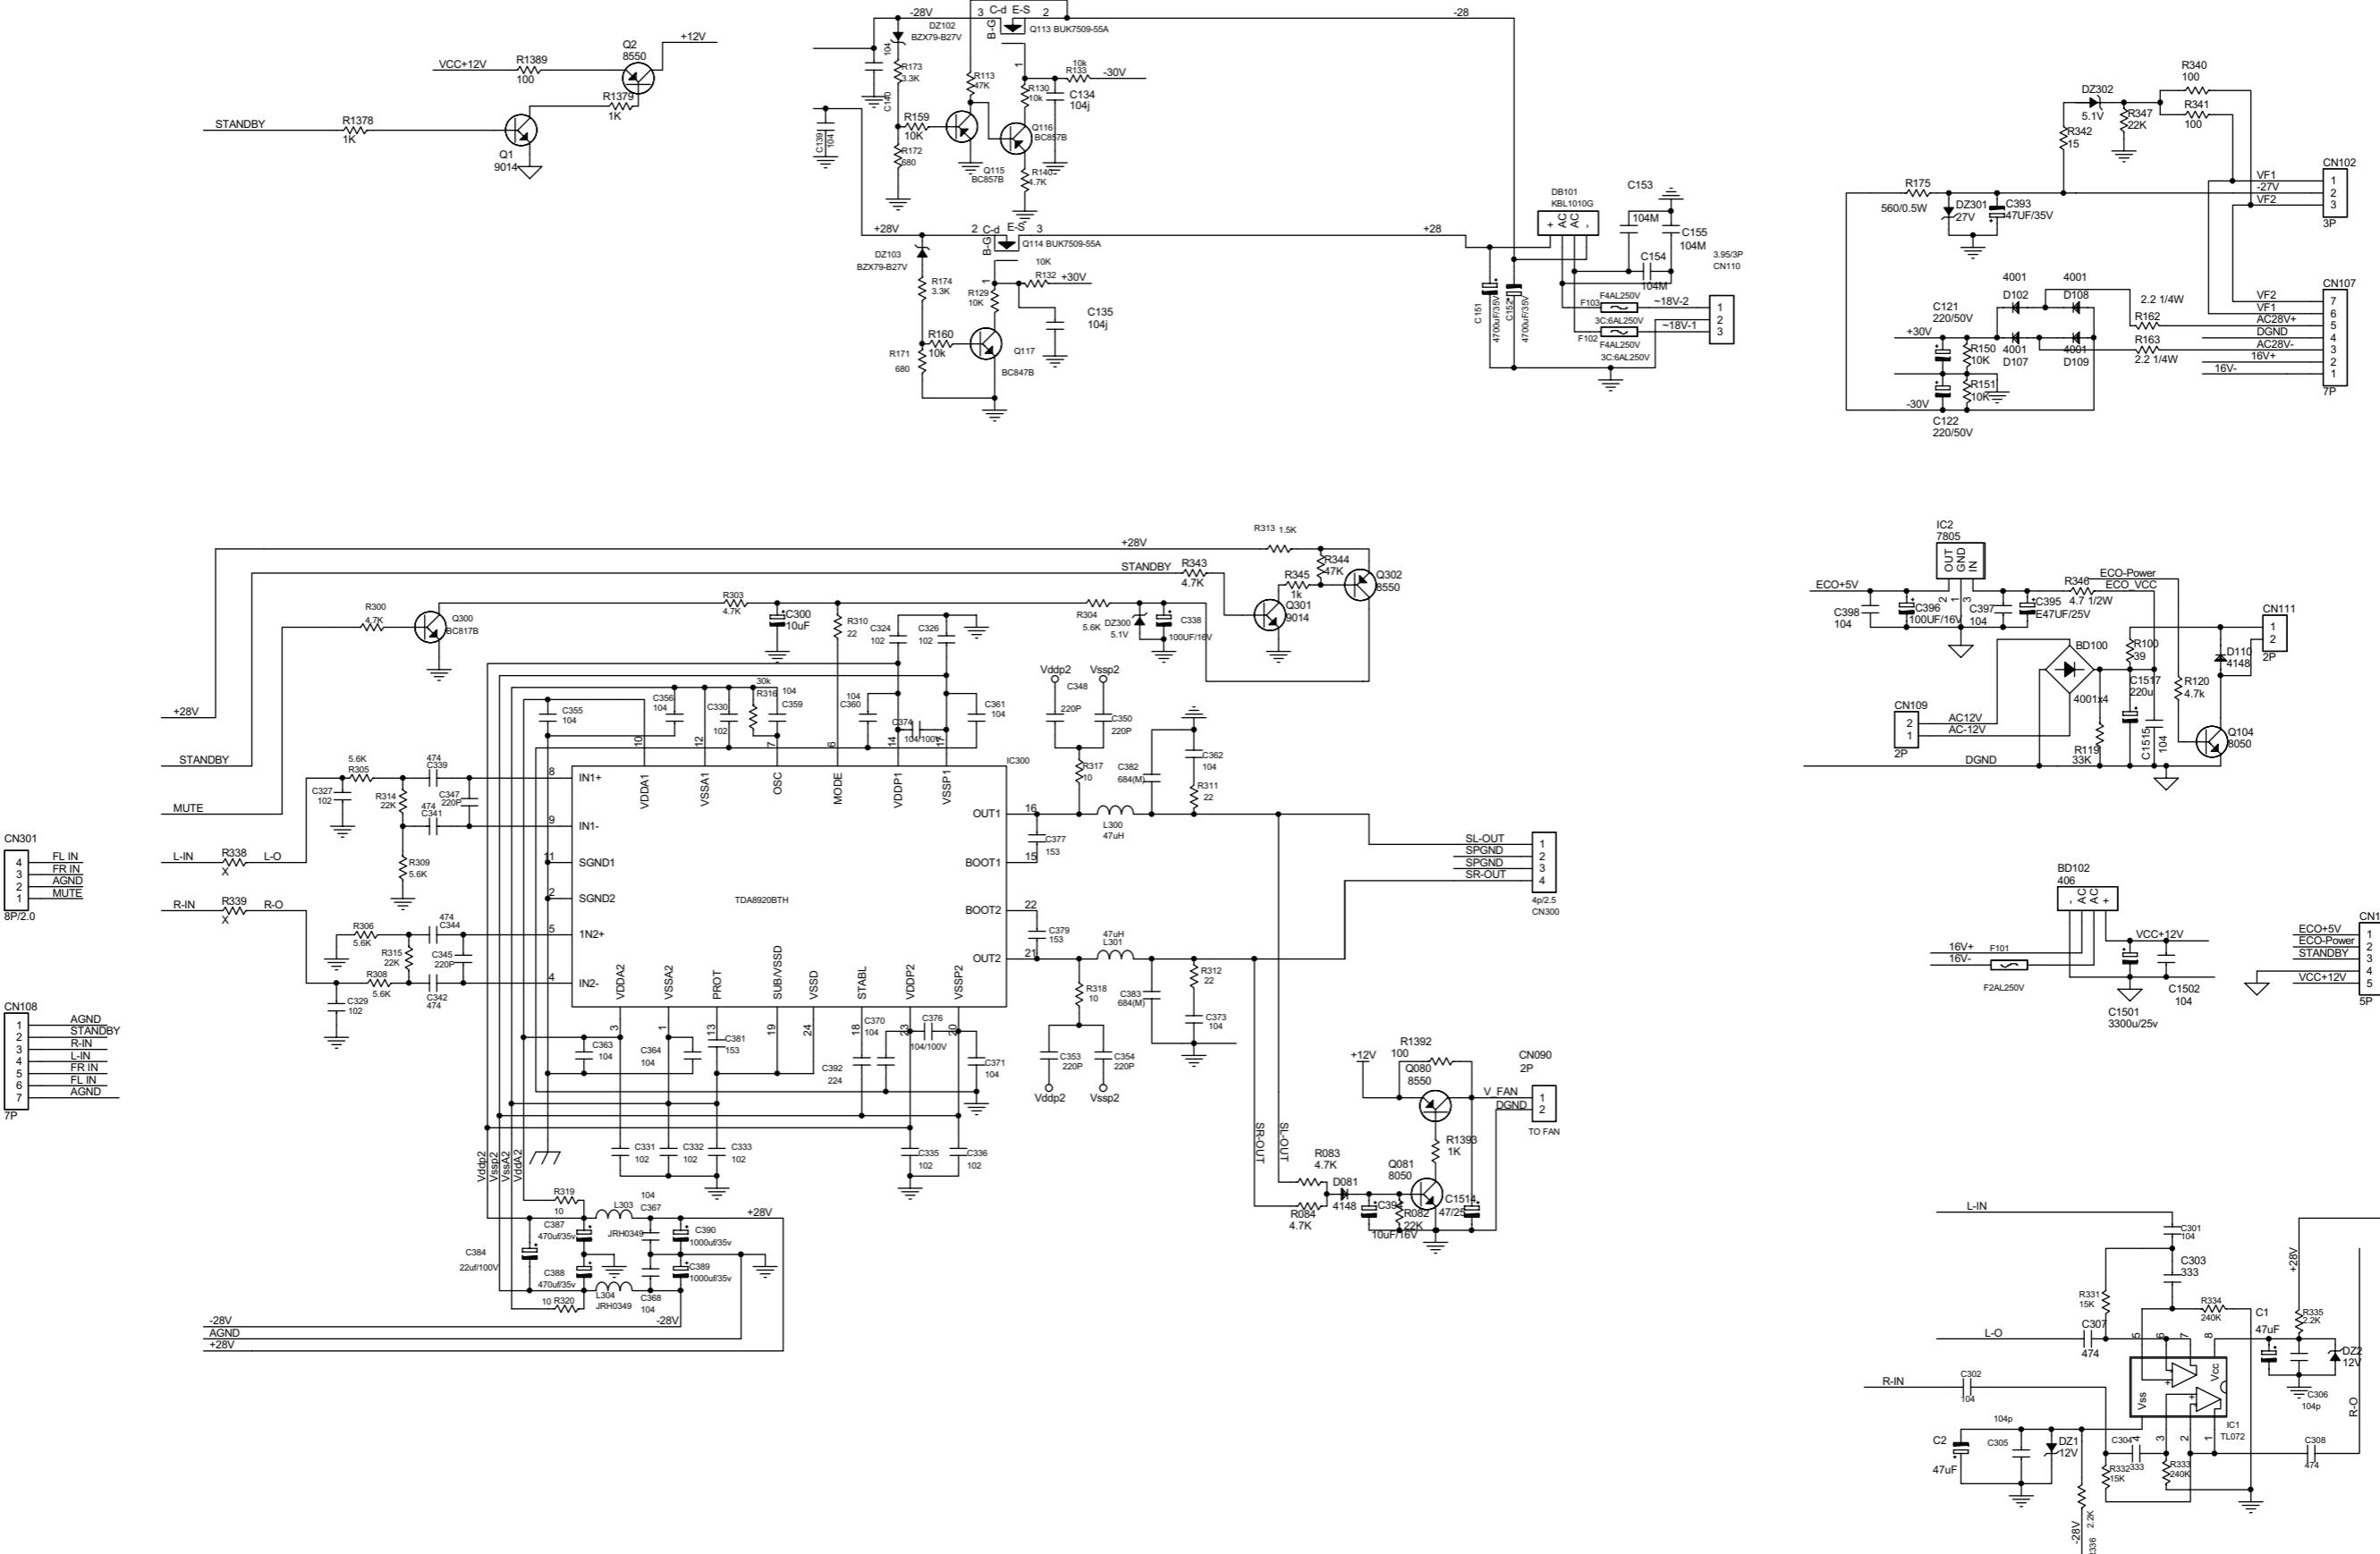


## AMP Board --Layout Diagram



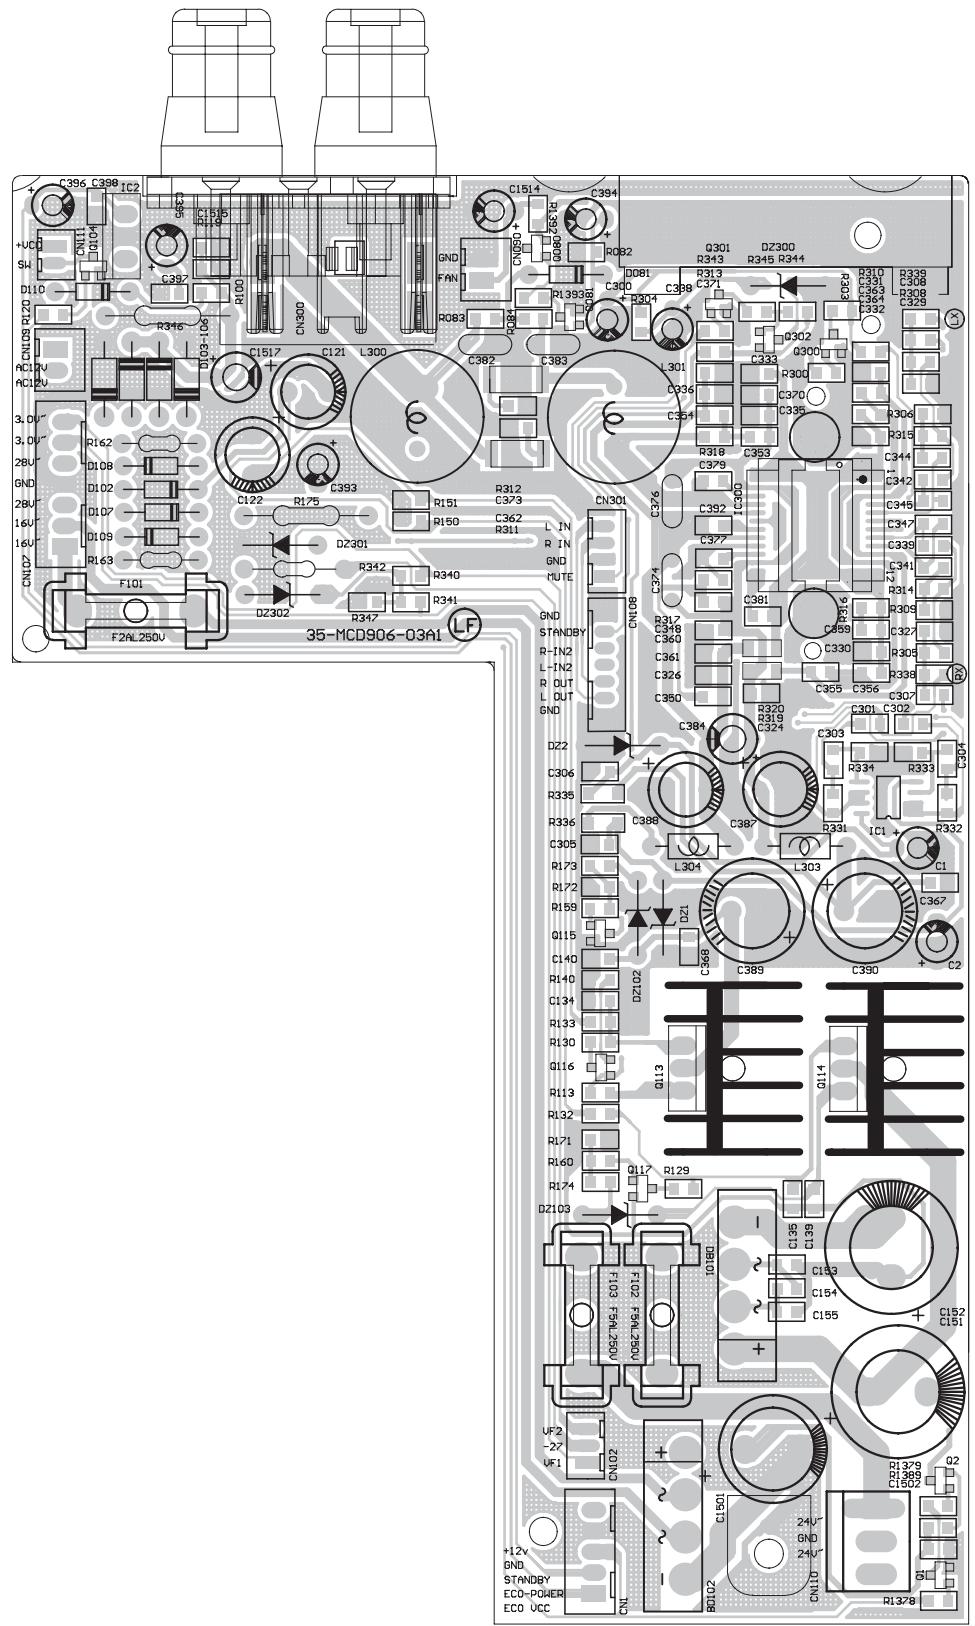


## Headphone, Button & AUX Board Diagram




**Headphone Board**

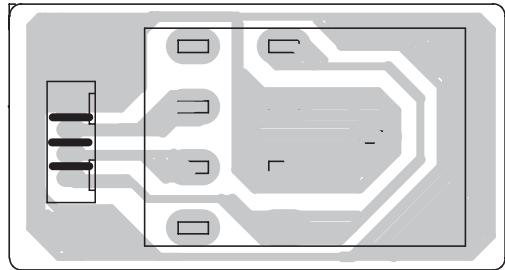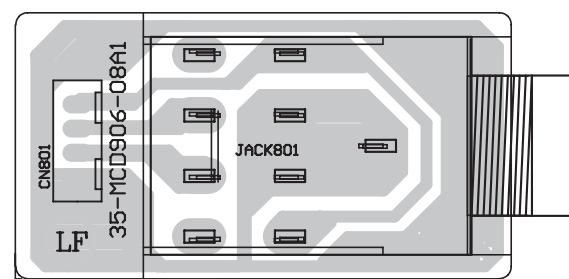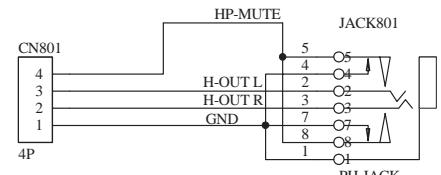

**Button Board**

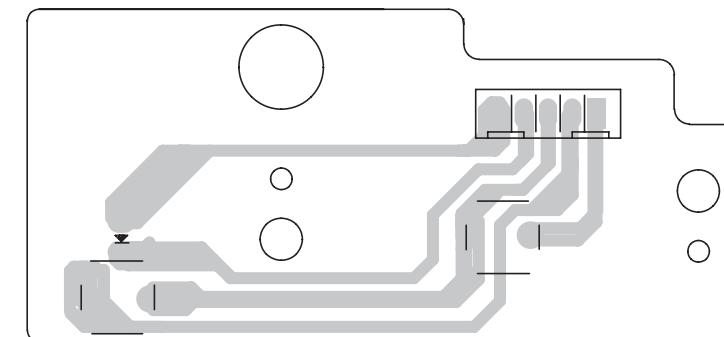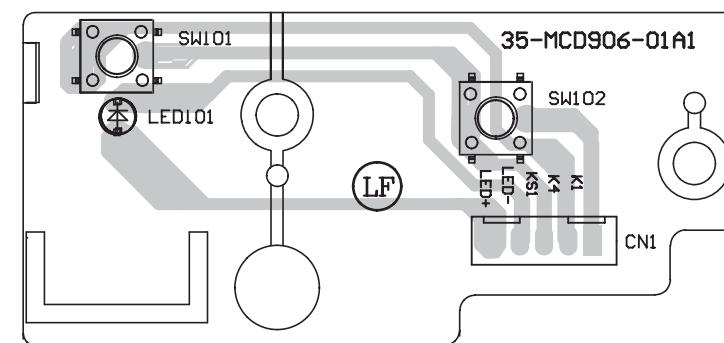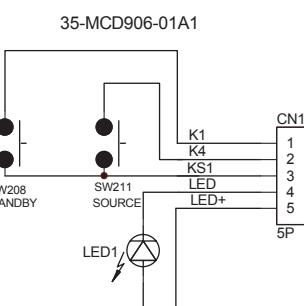


**AUX Board**

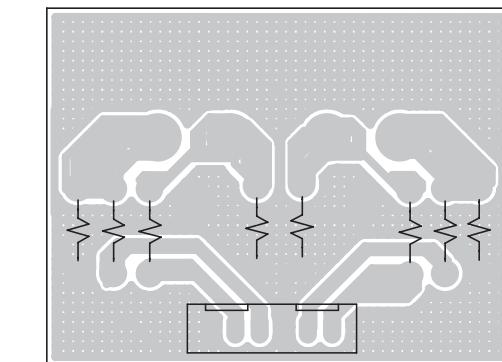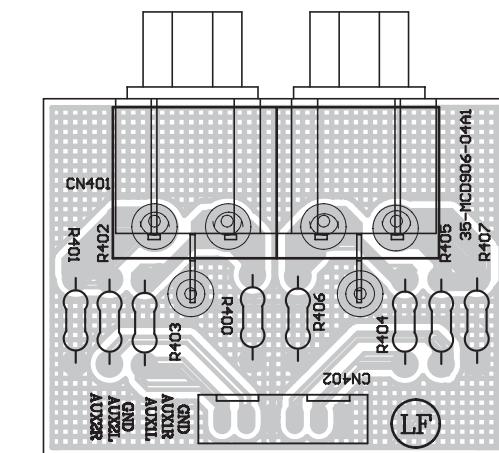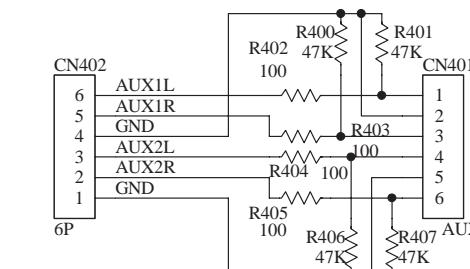


## Lamp Board Diagram








LAMP BOARD

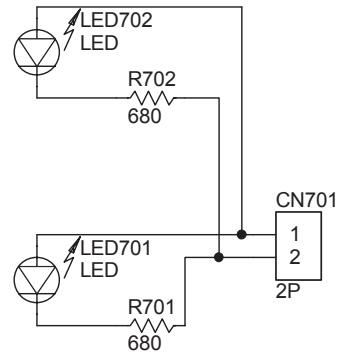


VALVE LAMP BOARD-L

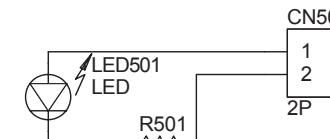



VALVE LAMP BOARD-R

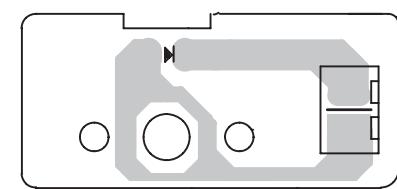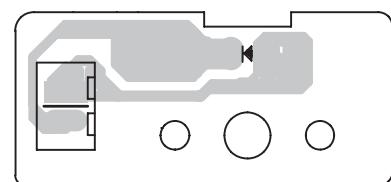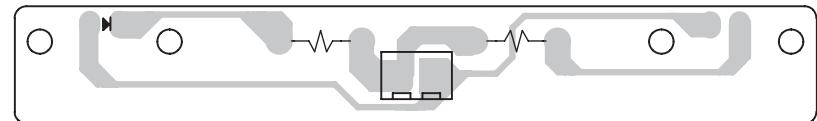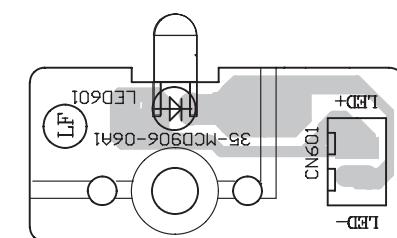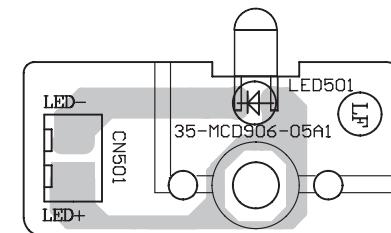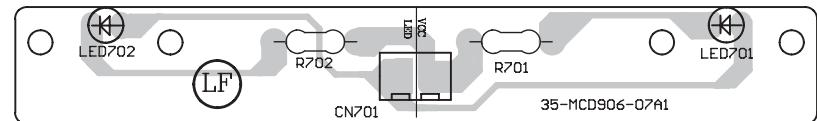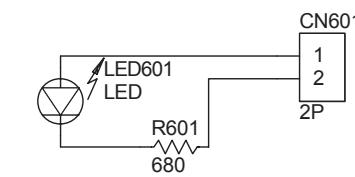


## Tuner Board-Circuit Diagram

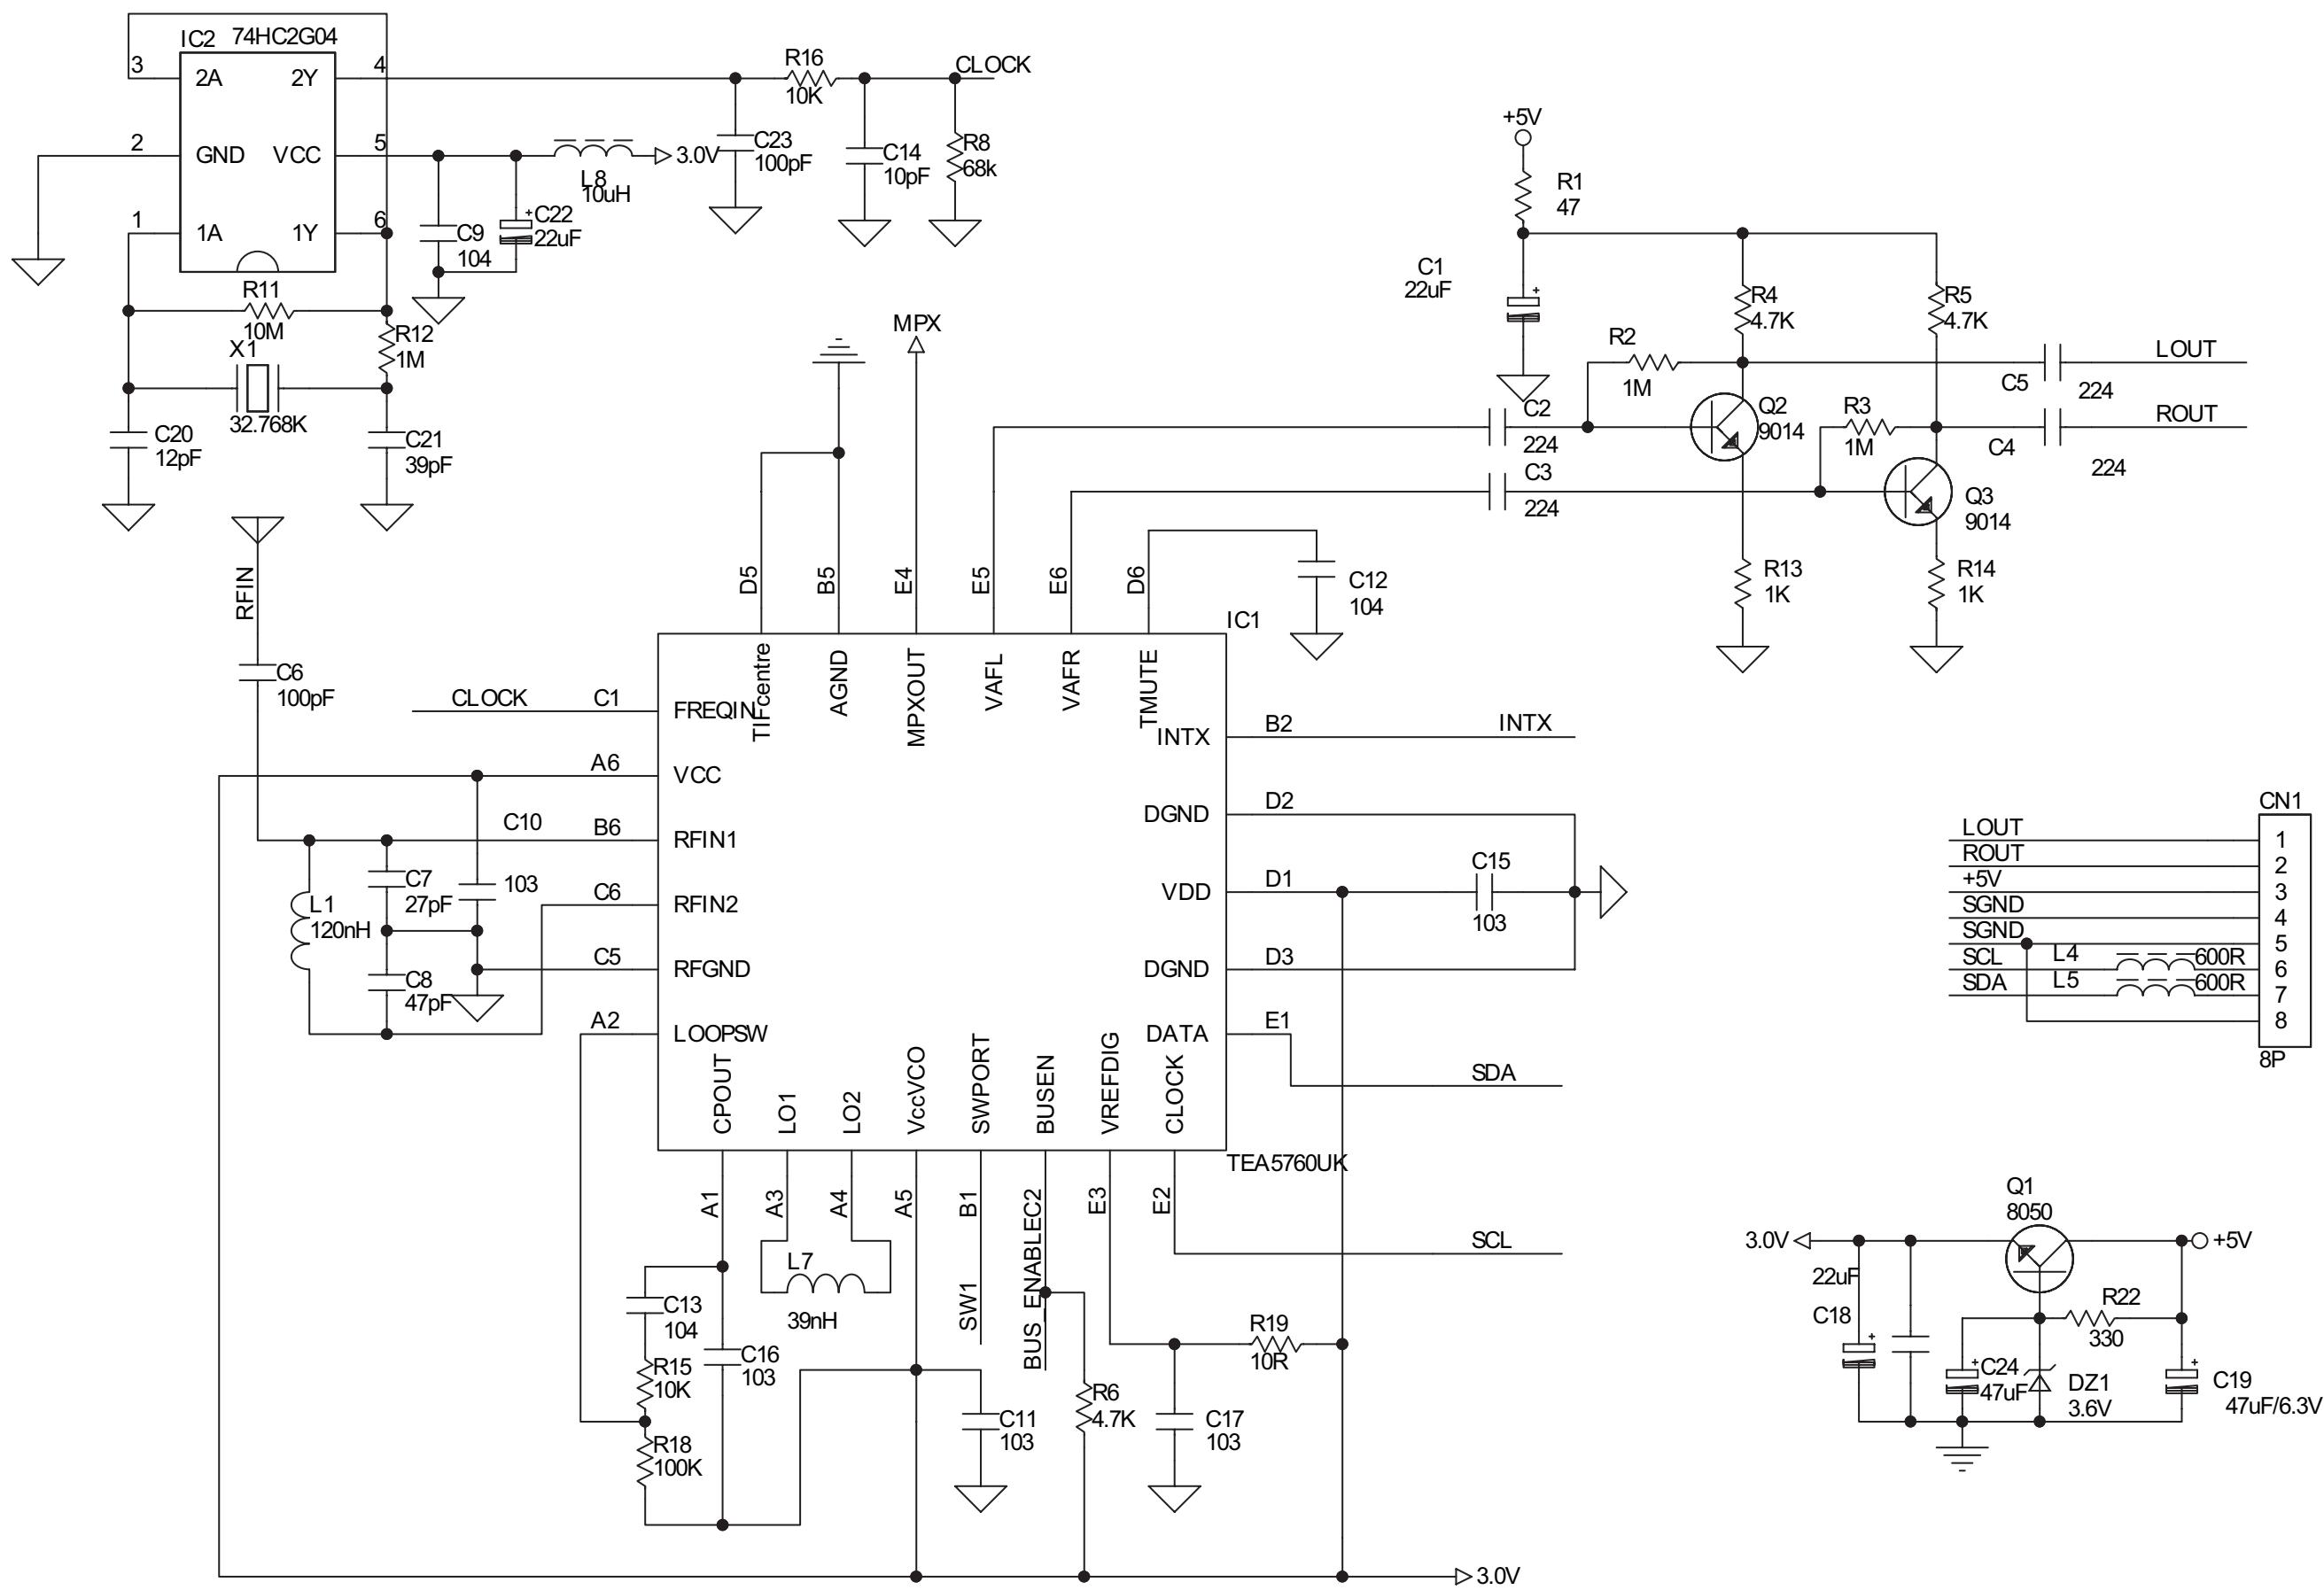


## Tuner Board-Layout Diagram

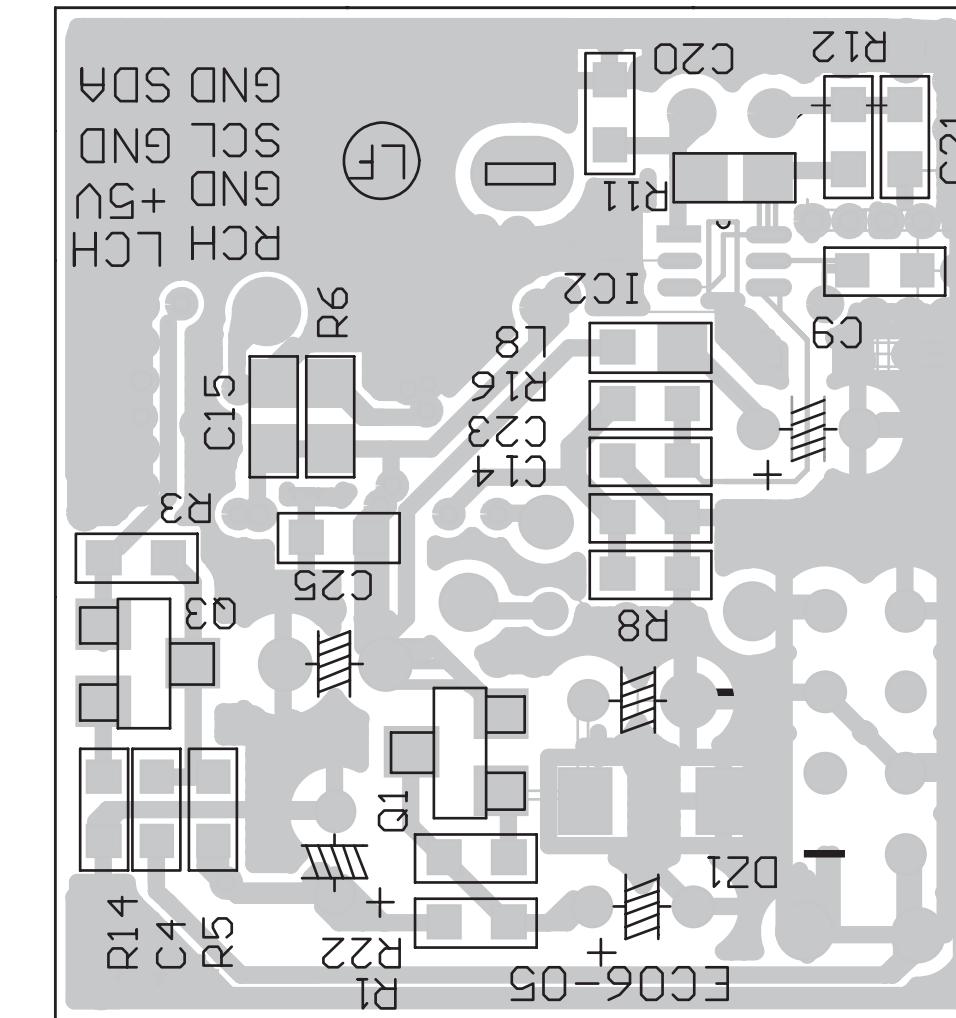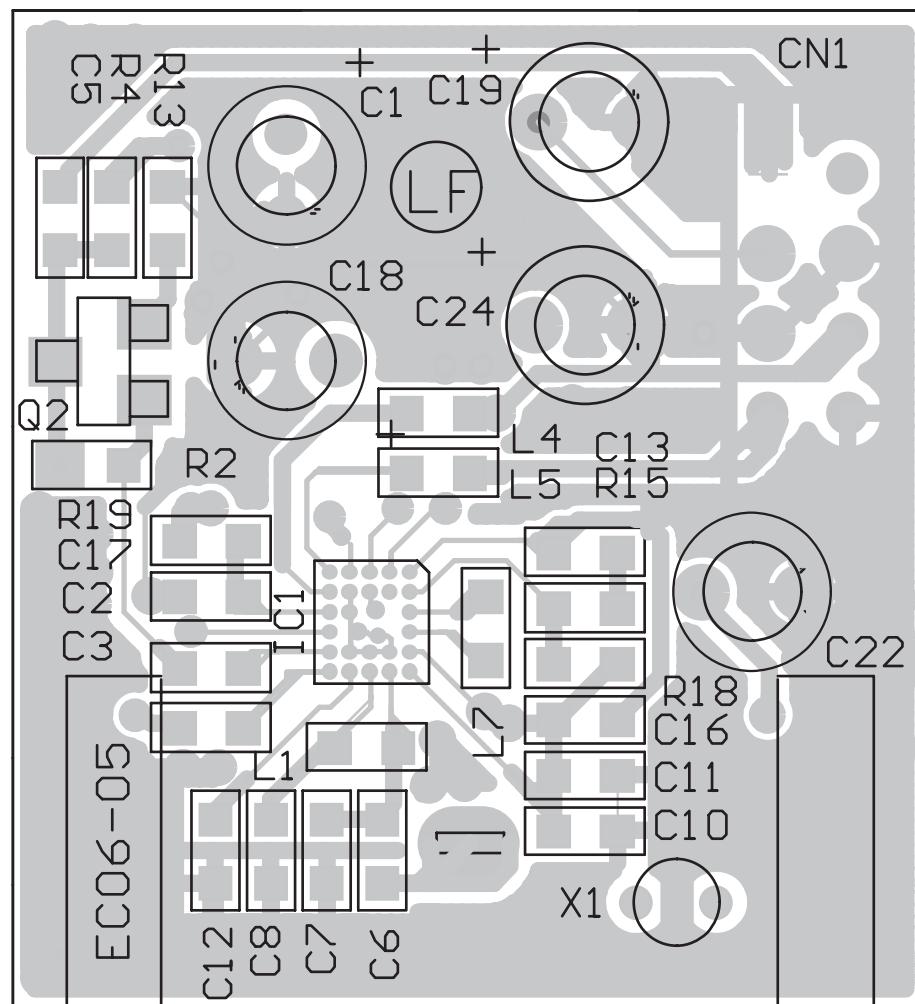


## Decoder Board--Circuit Diagram

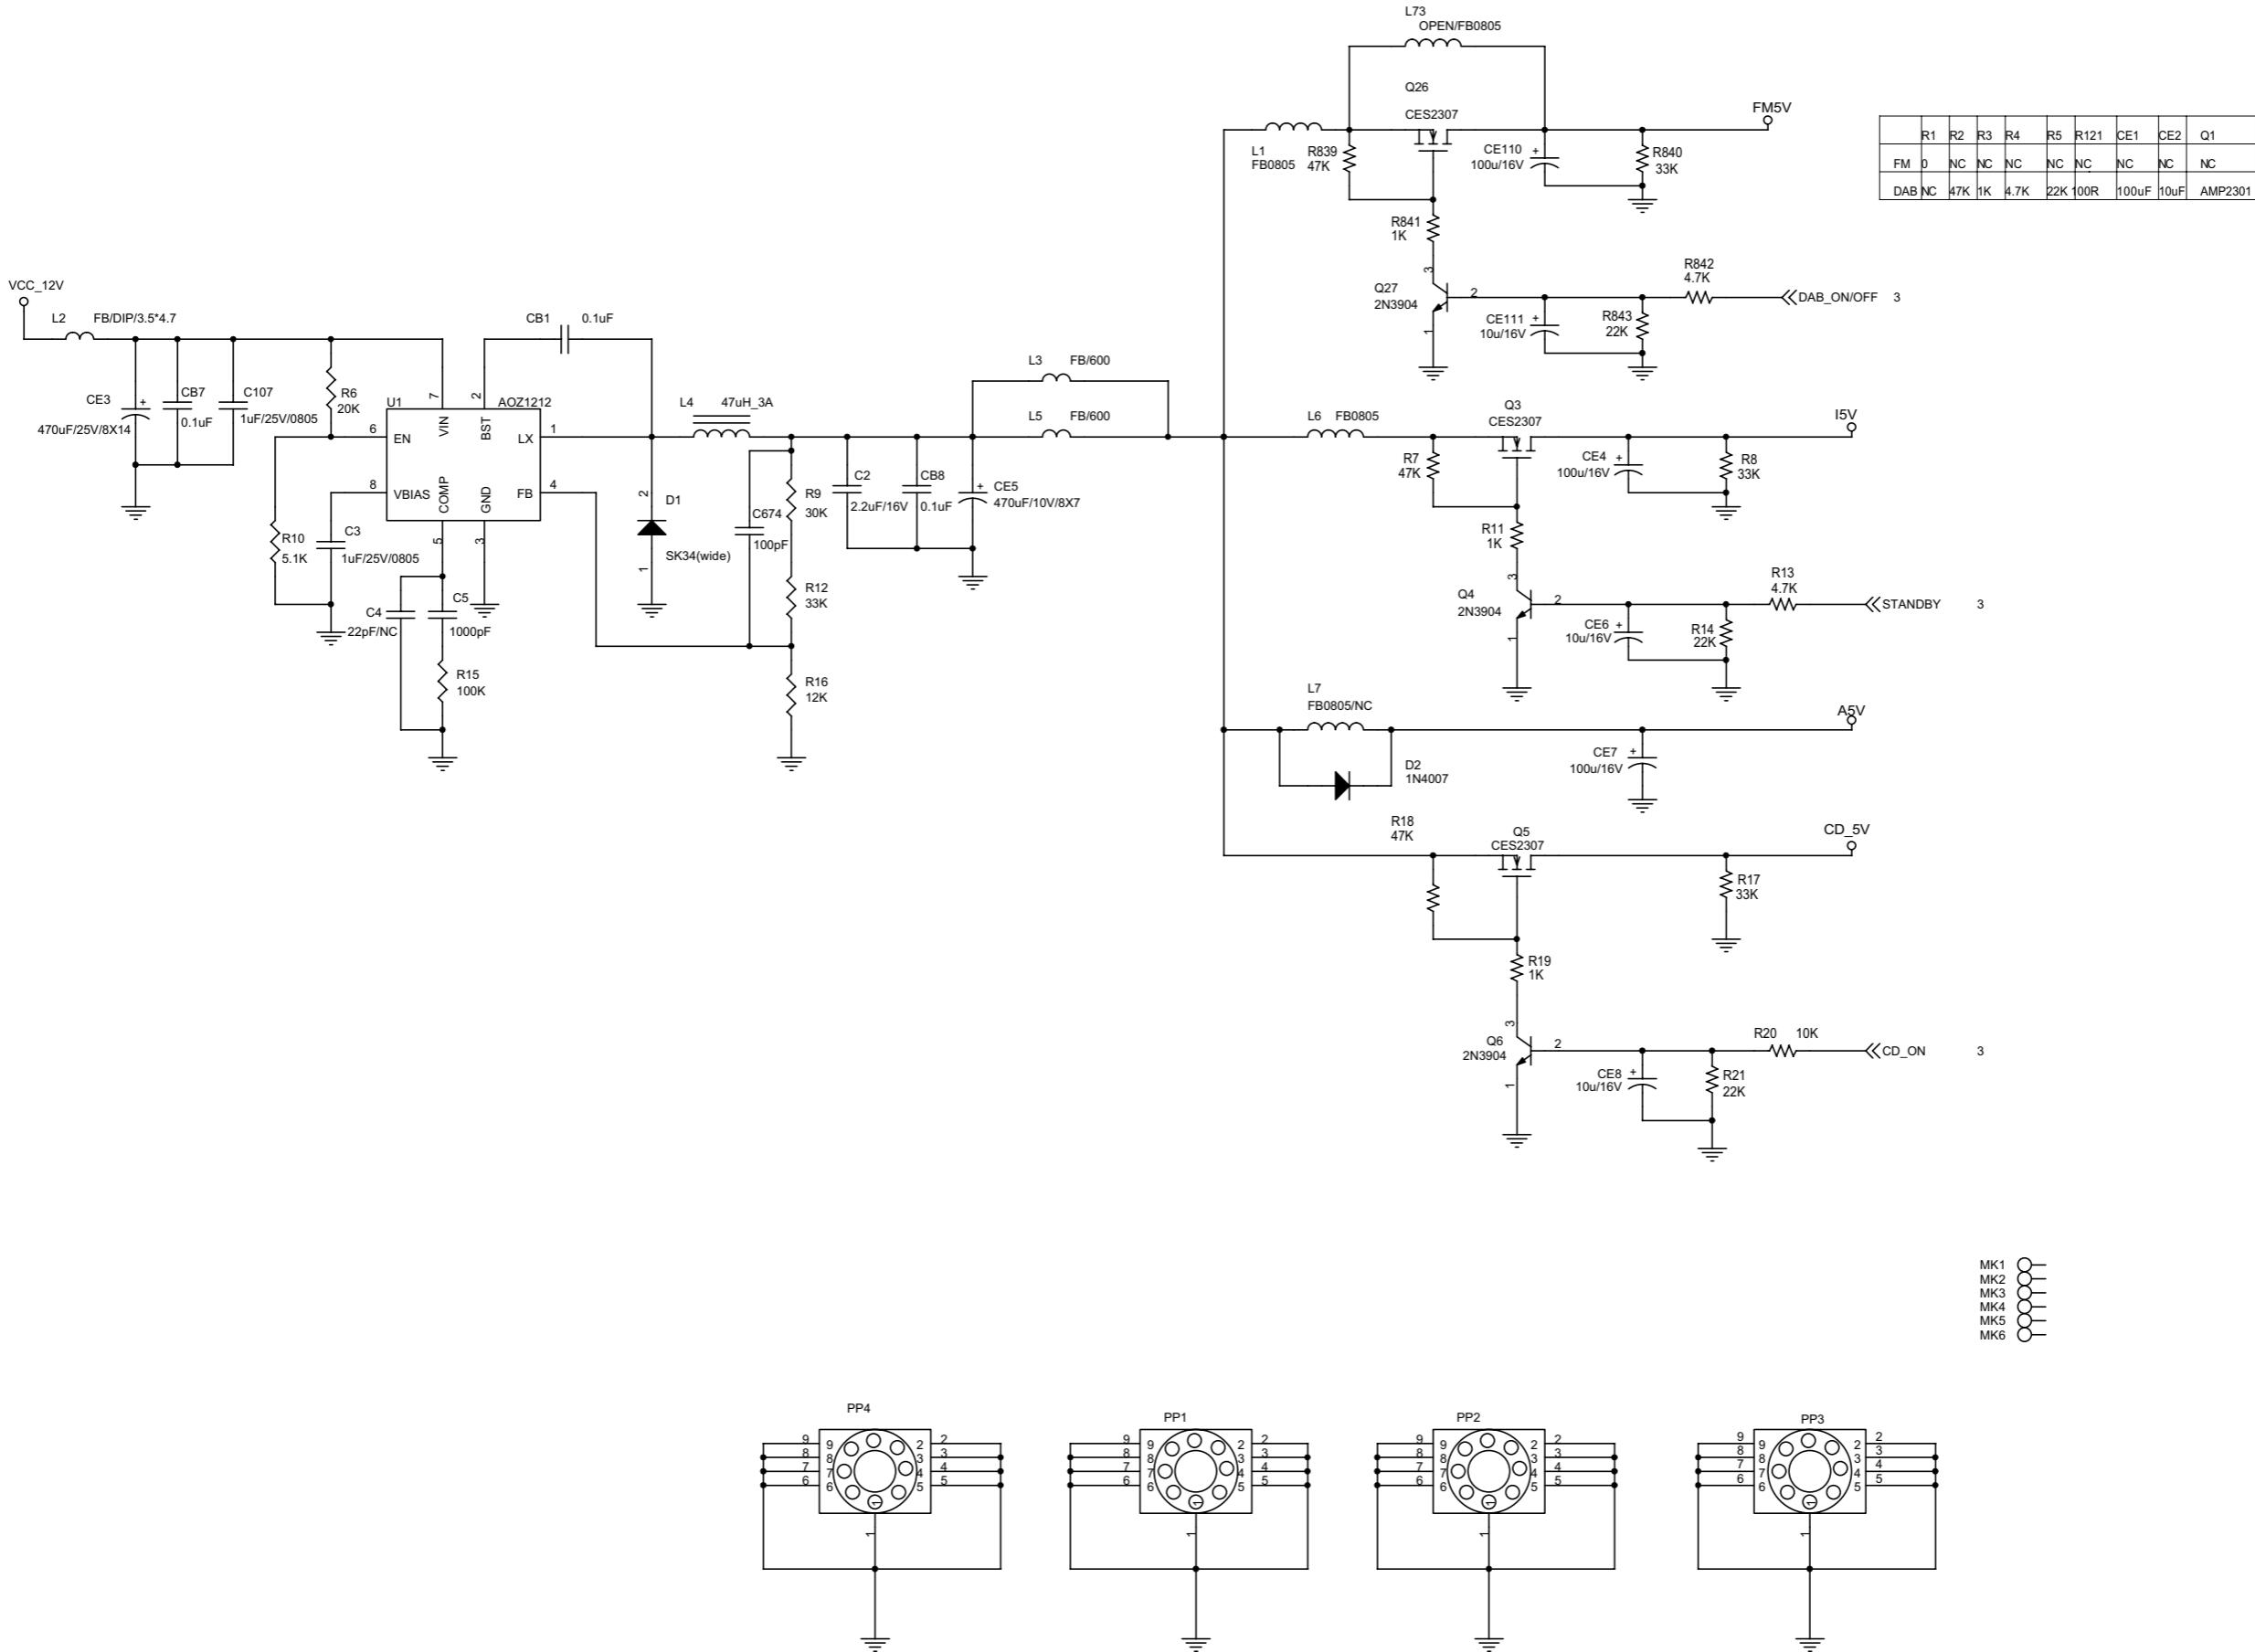


## Decoder Board--Circuit Diagram

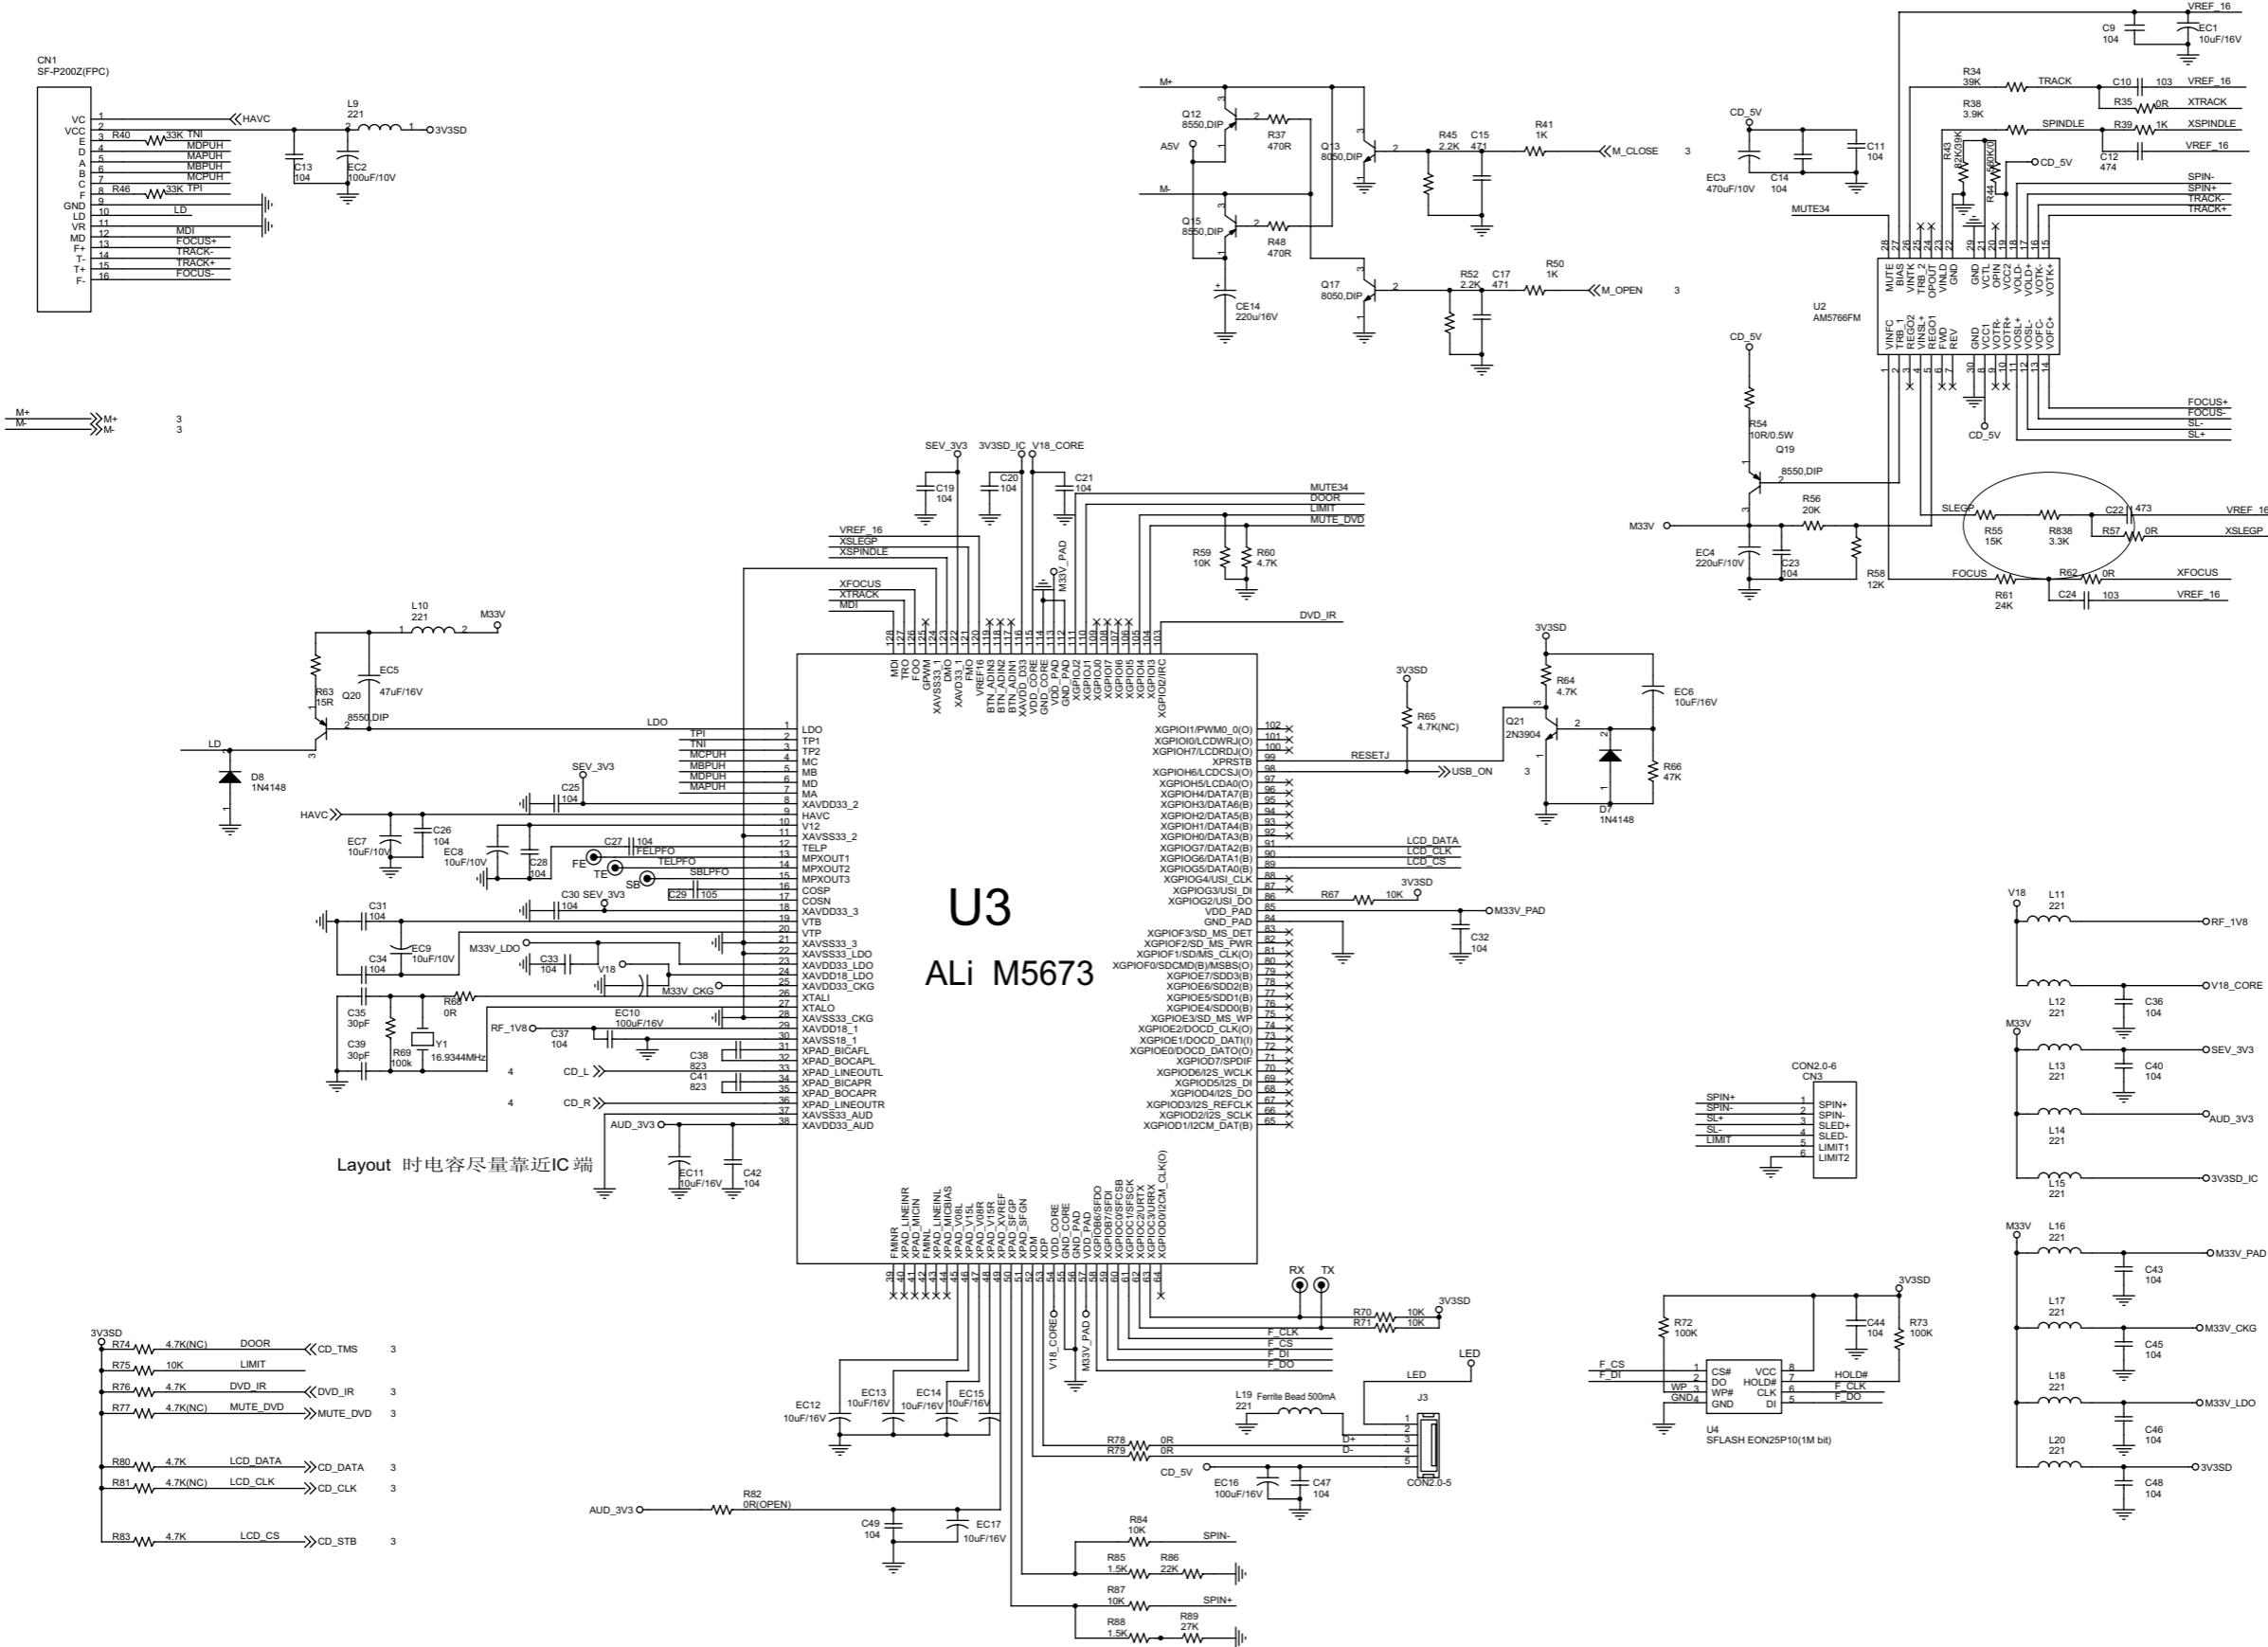


## Decoder Board--Circuit Diagram

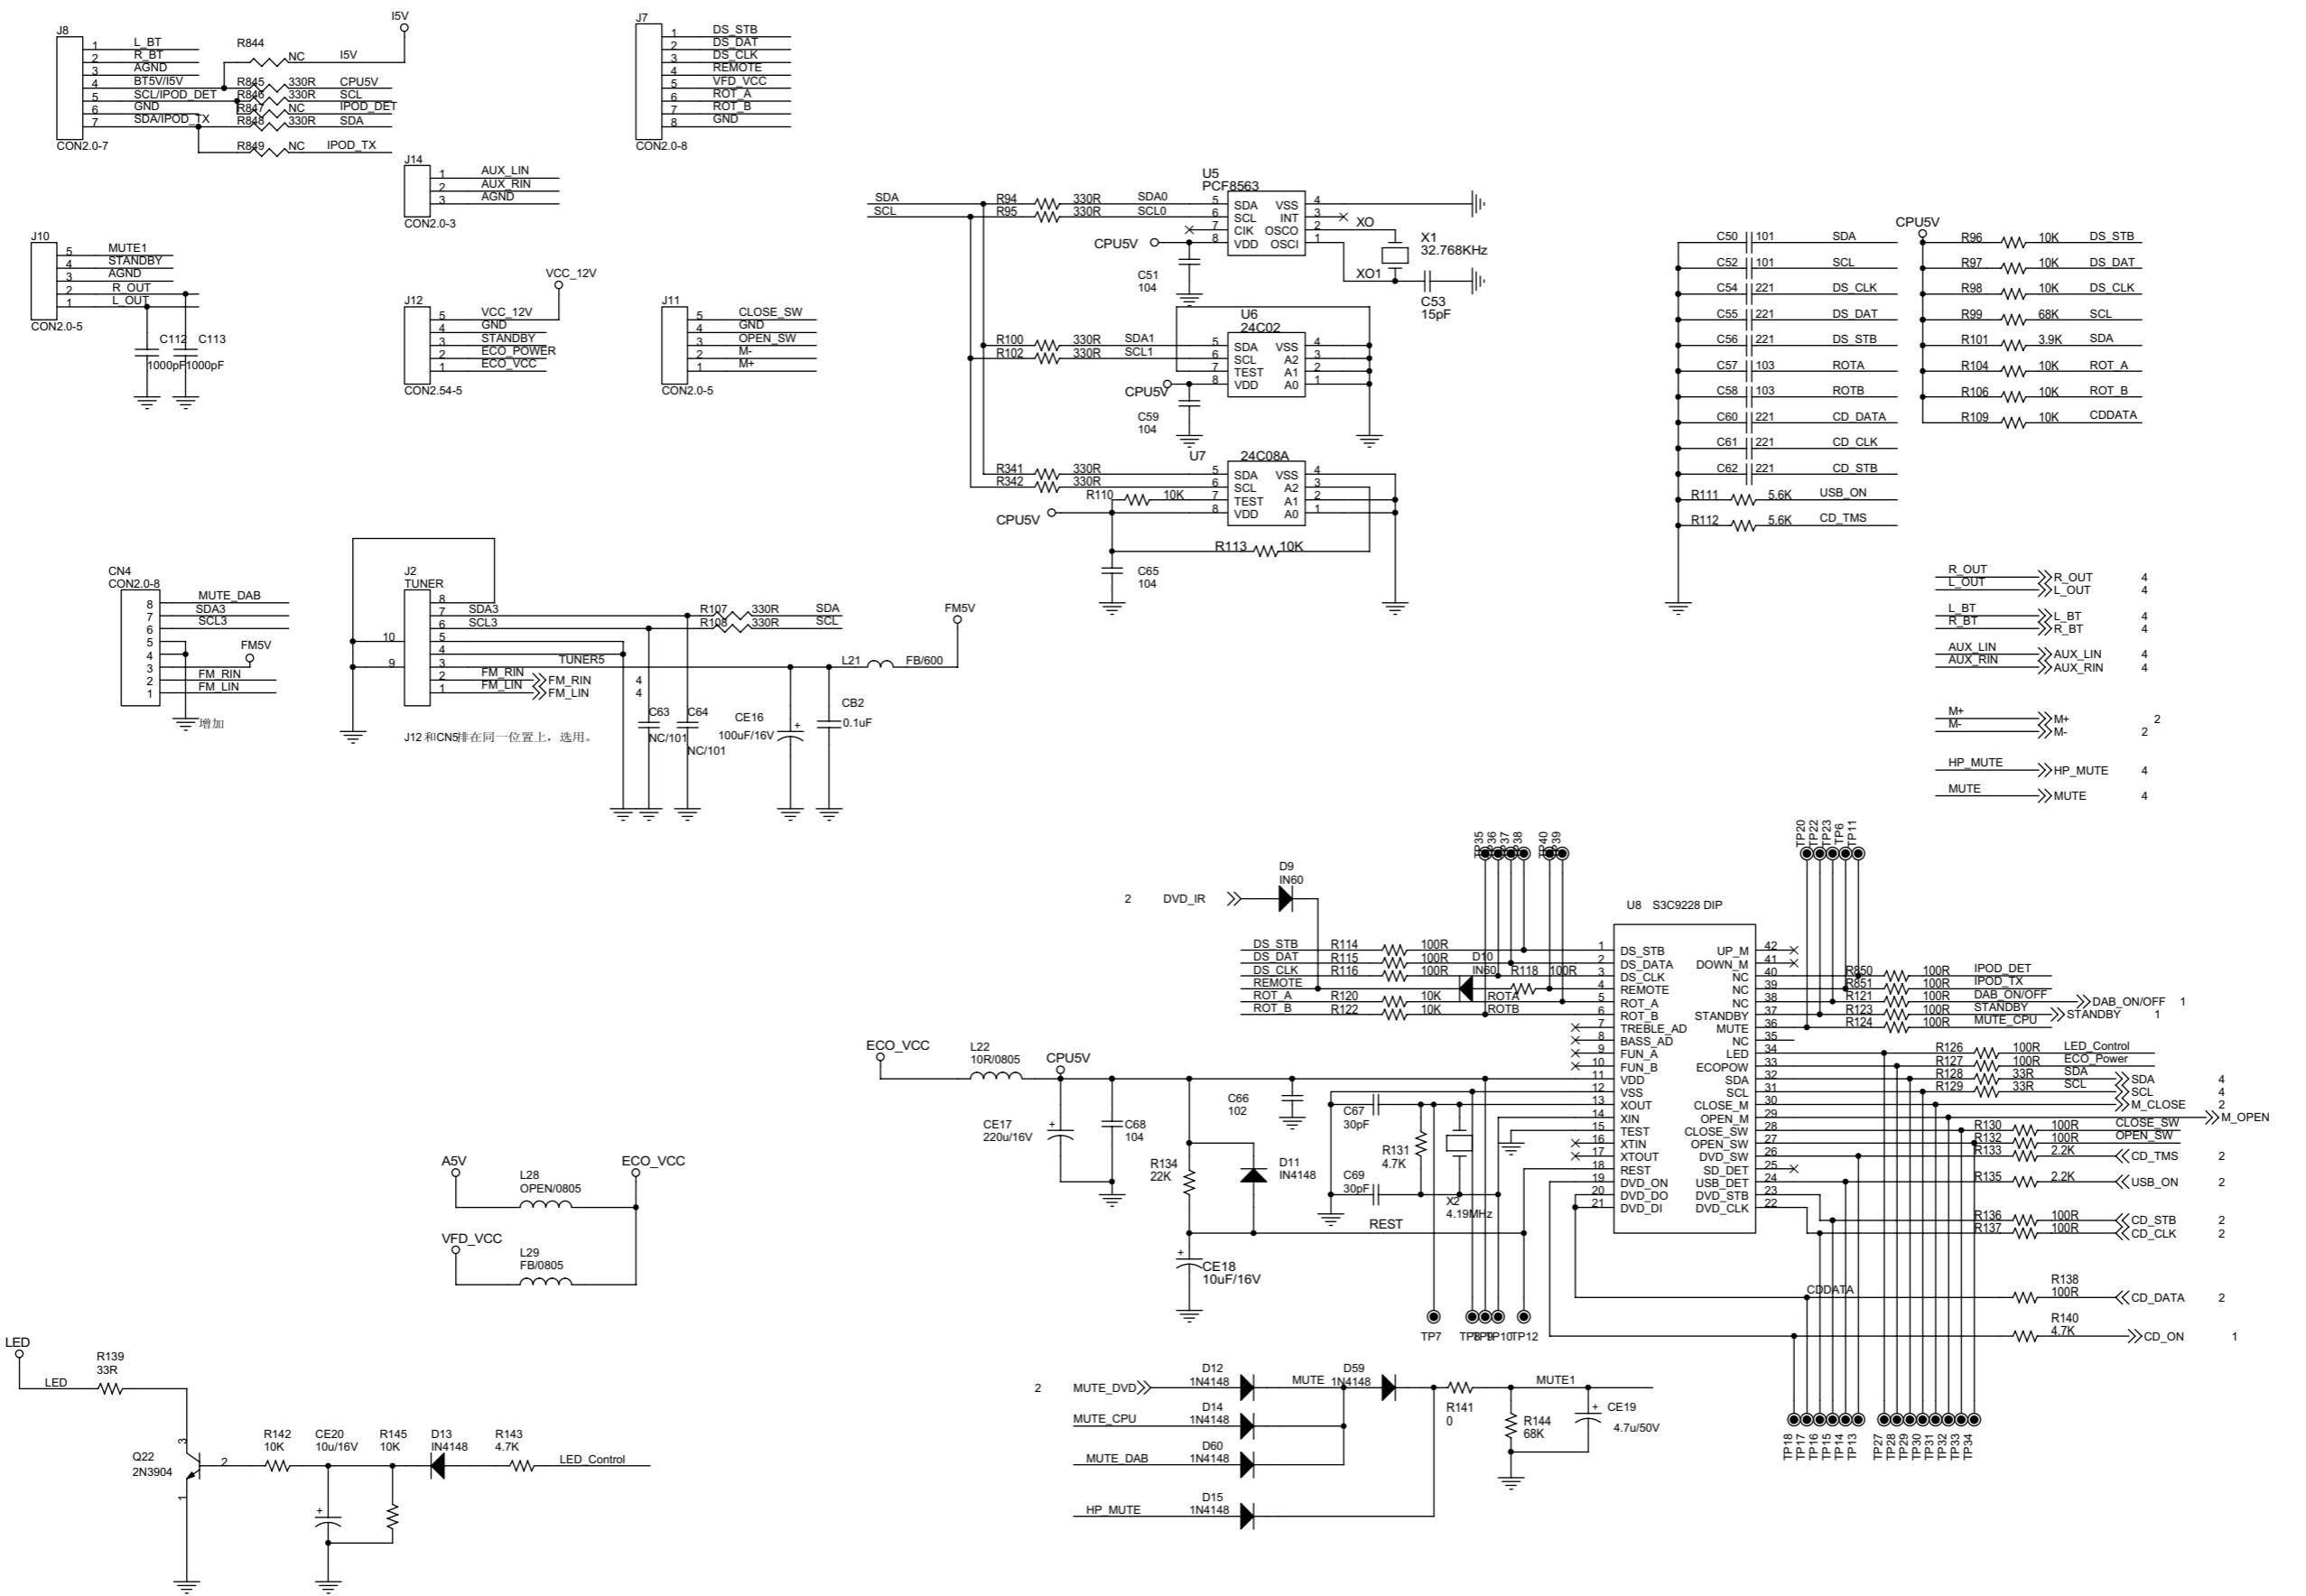


## Decoder Board--Circuit Diagram

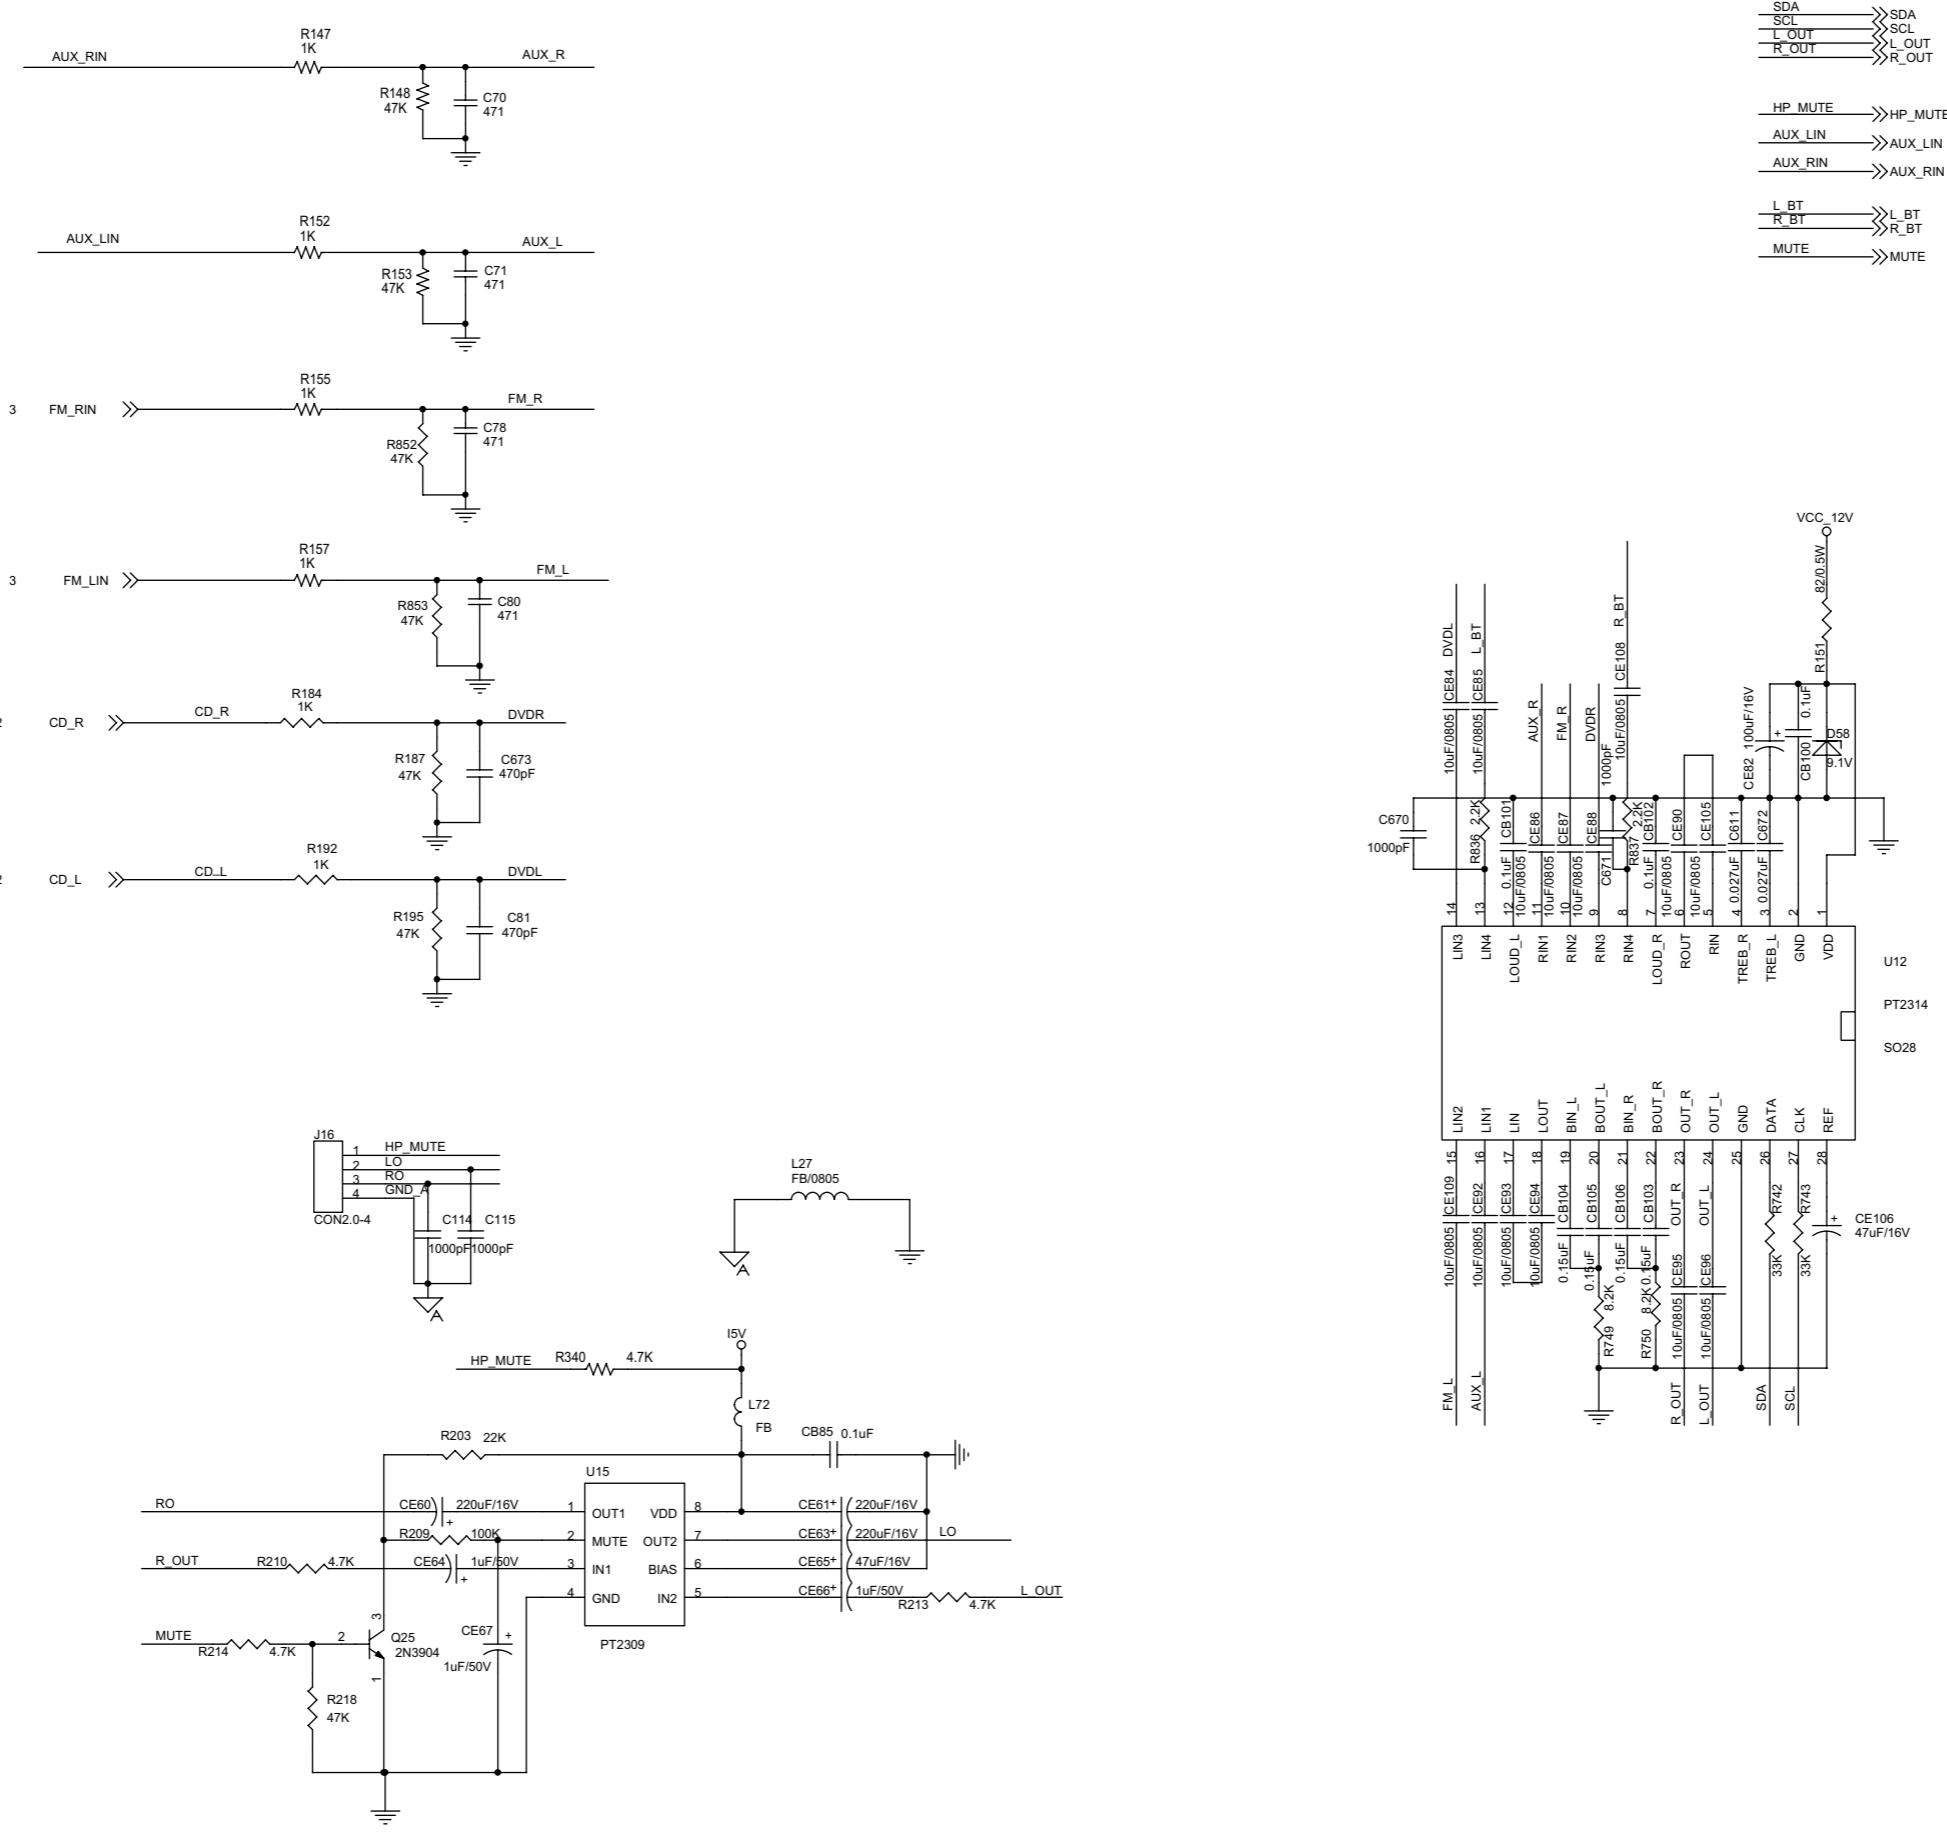

## Decoder Board--Layout Diagram--TOP

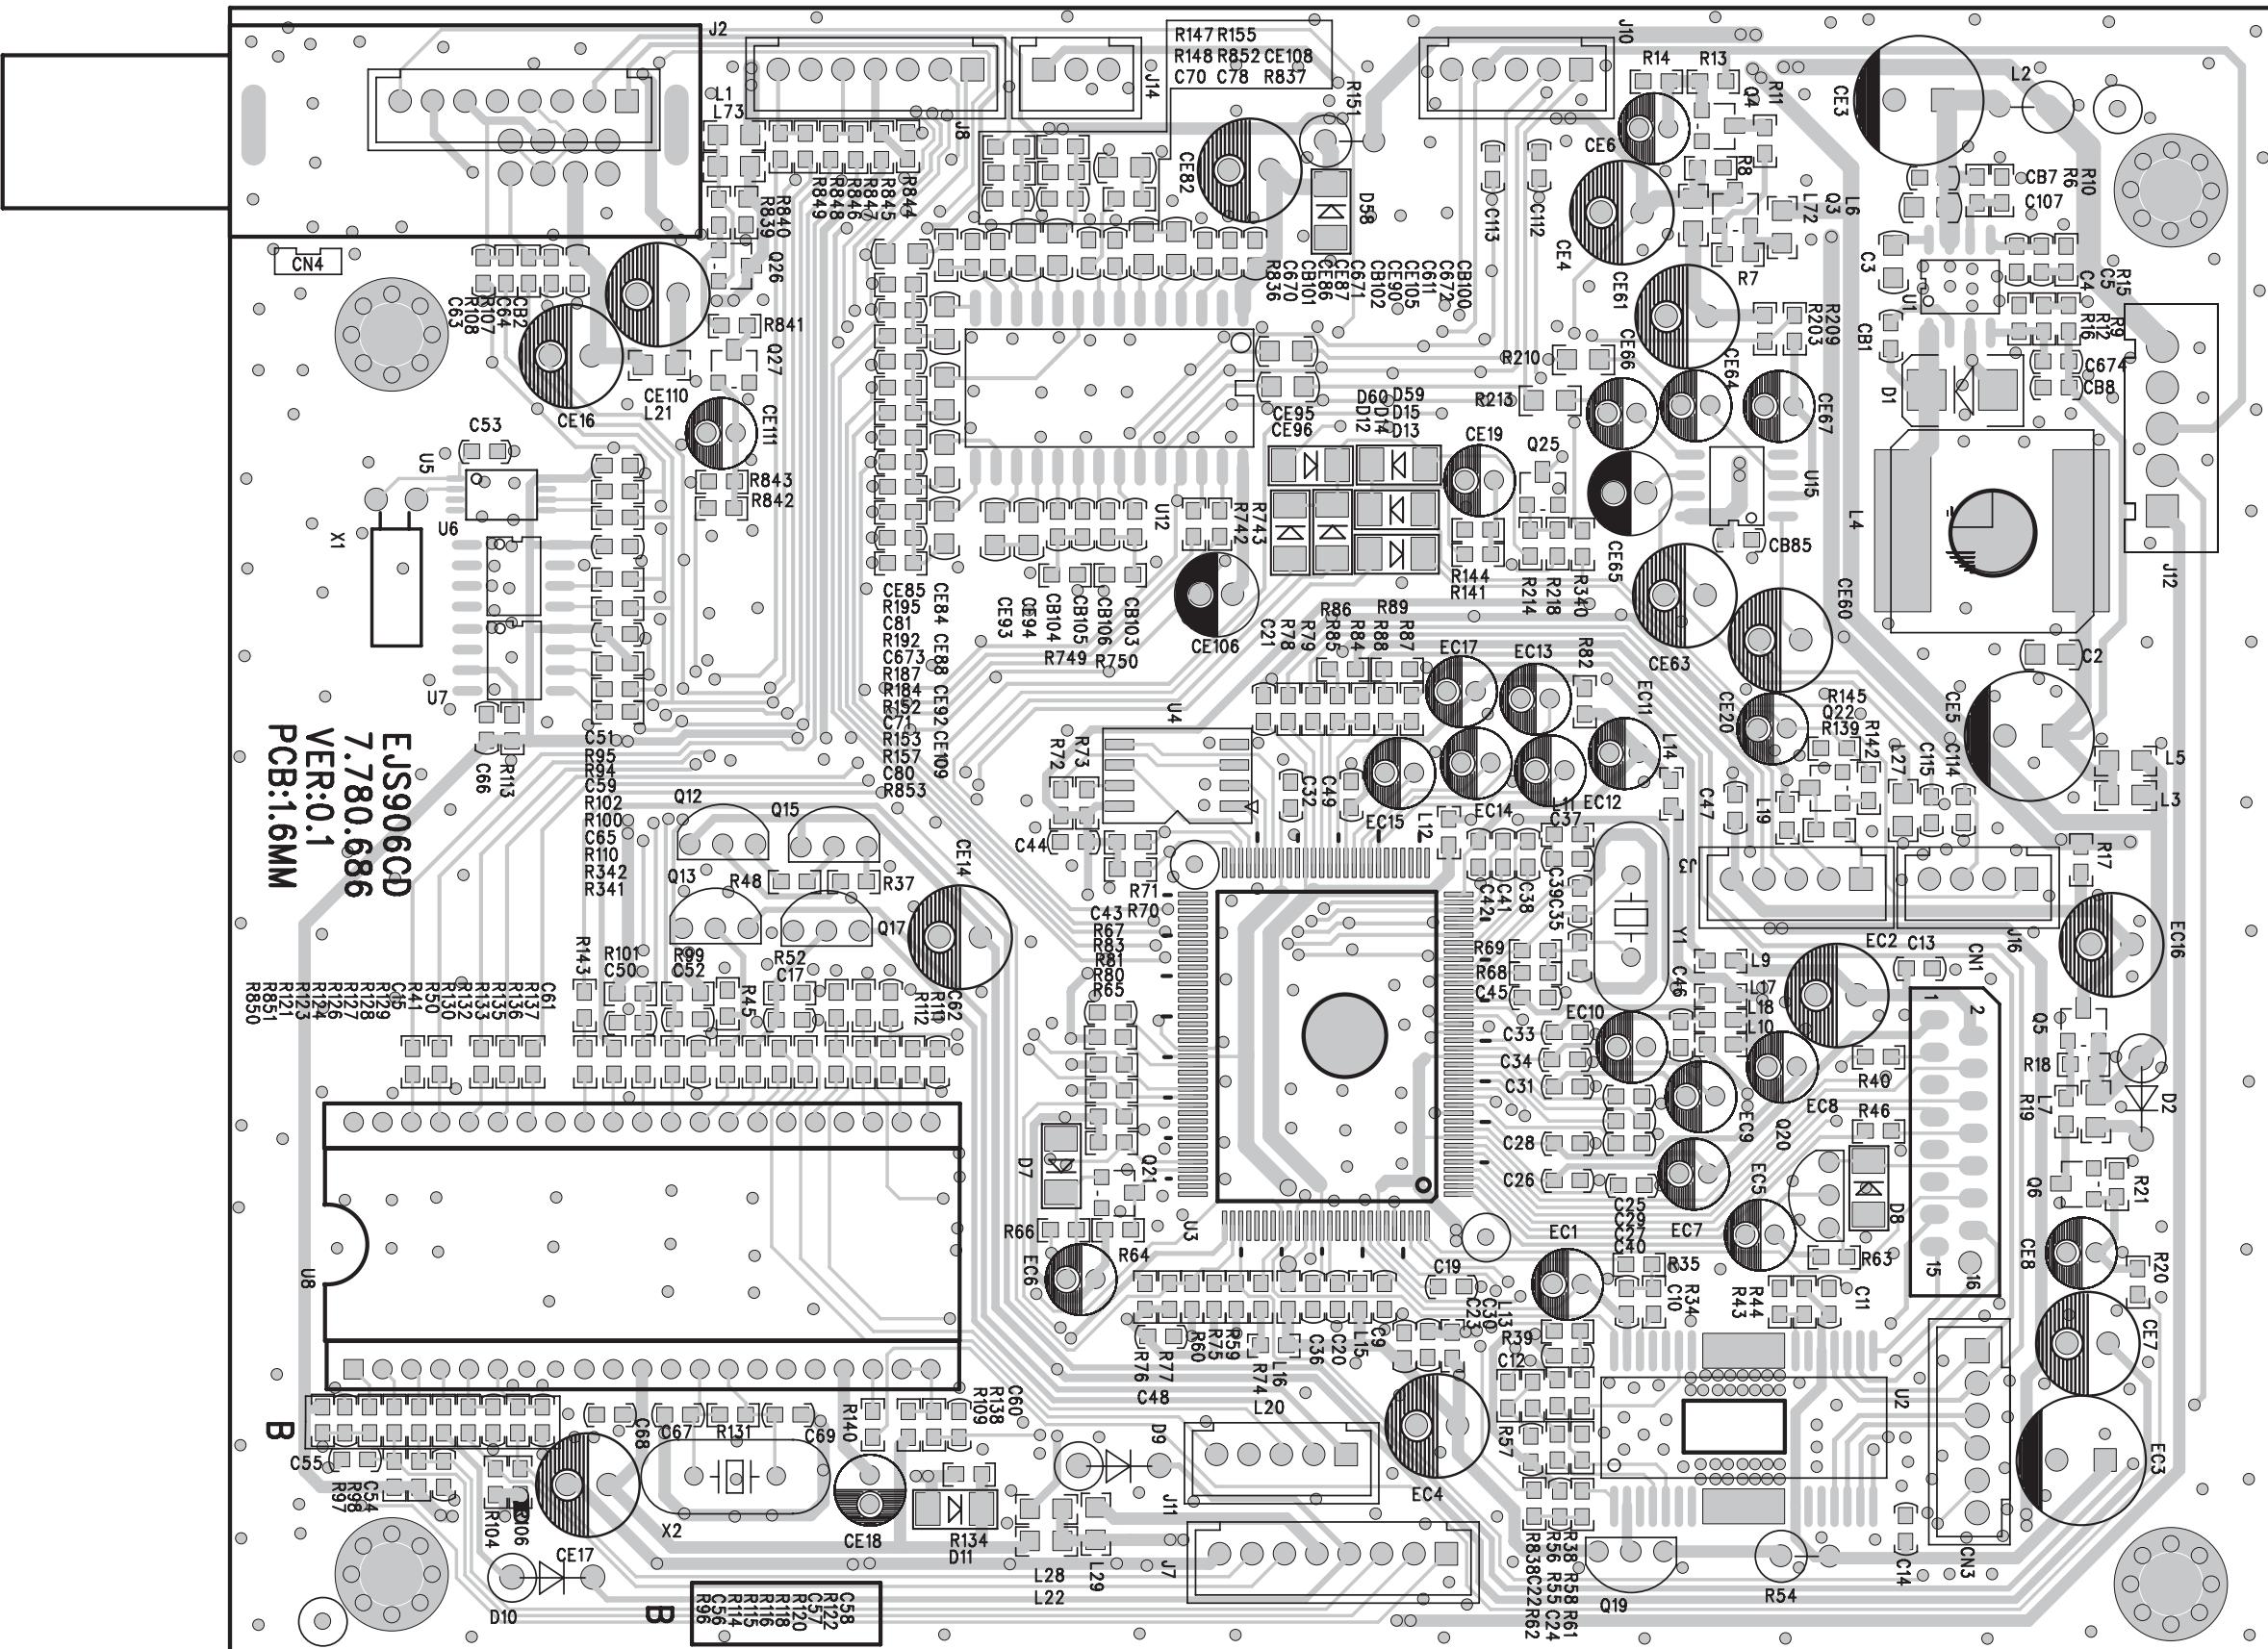


Decoder Board--Layout Diagram--Bottom

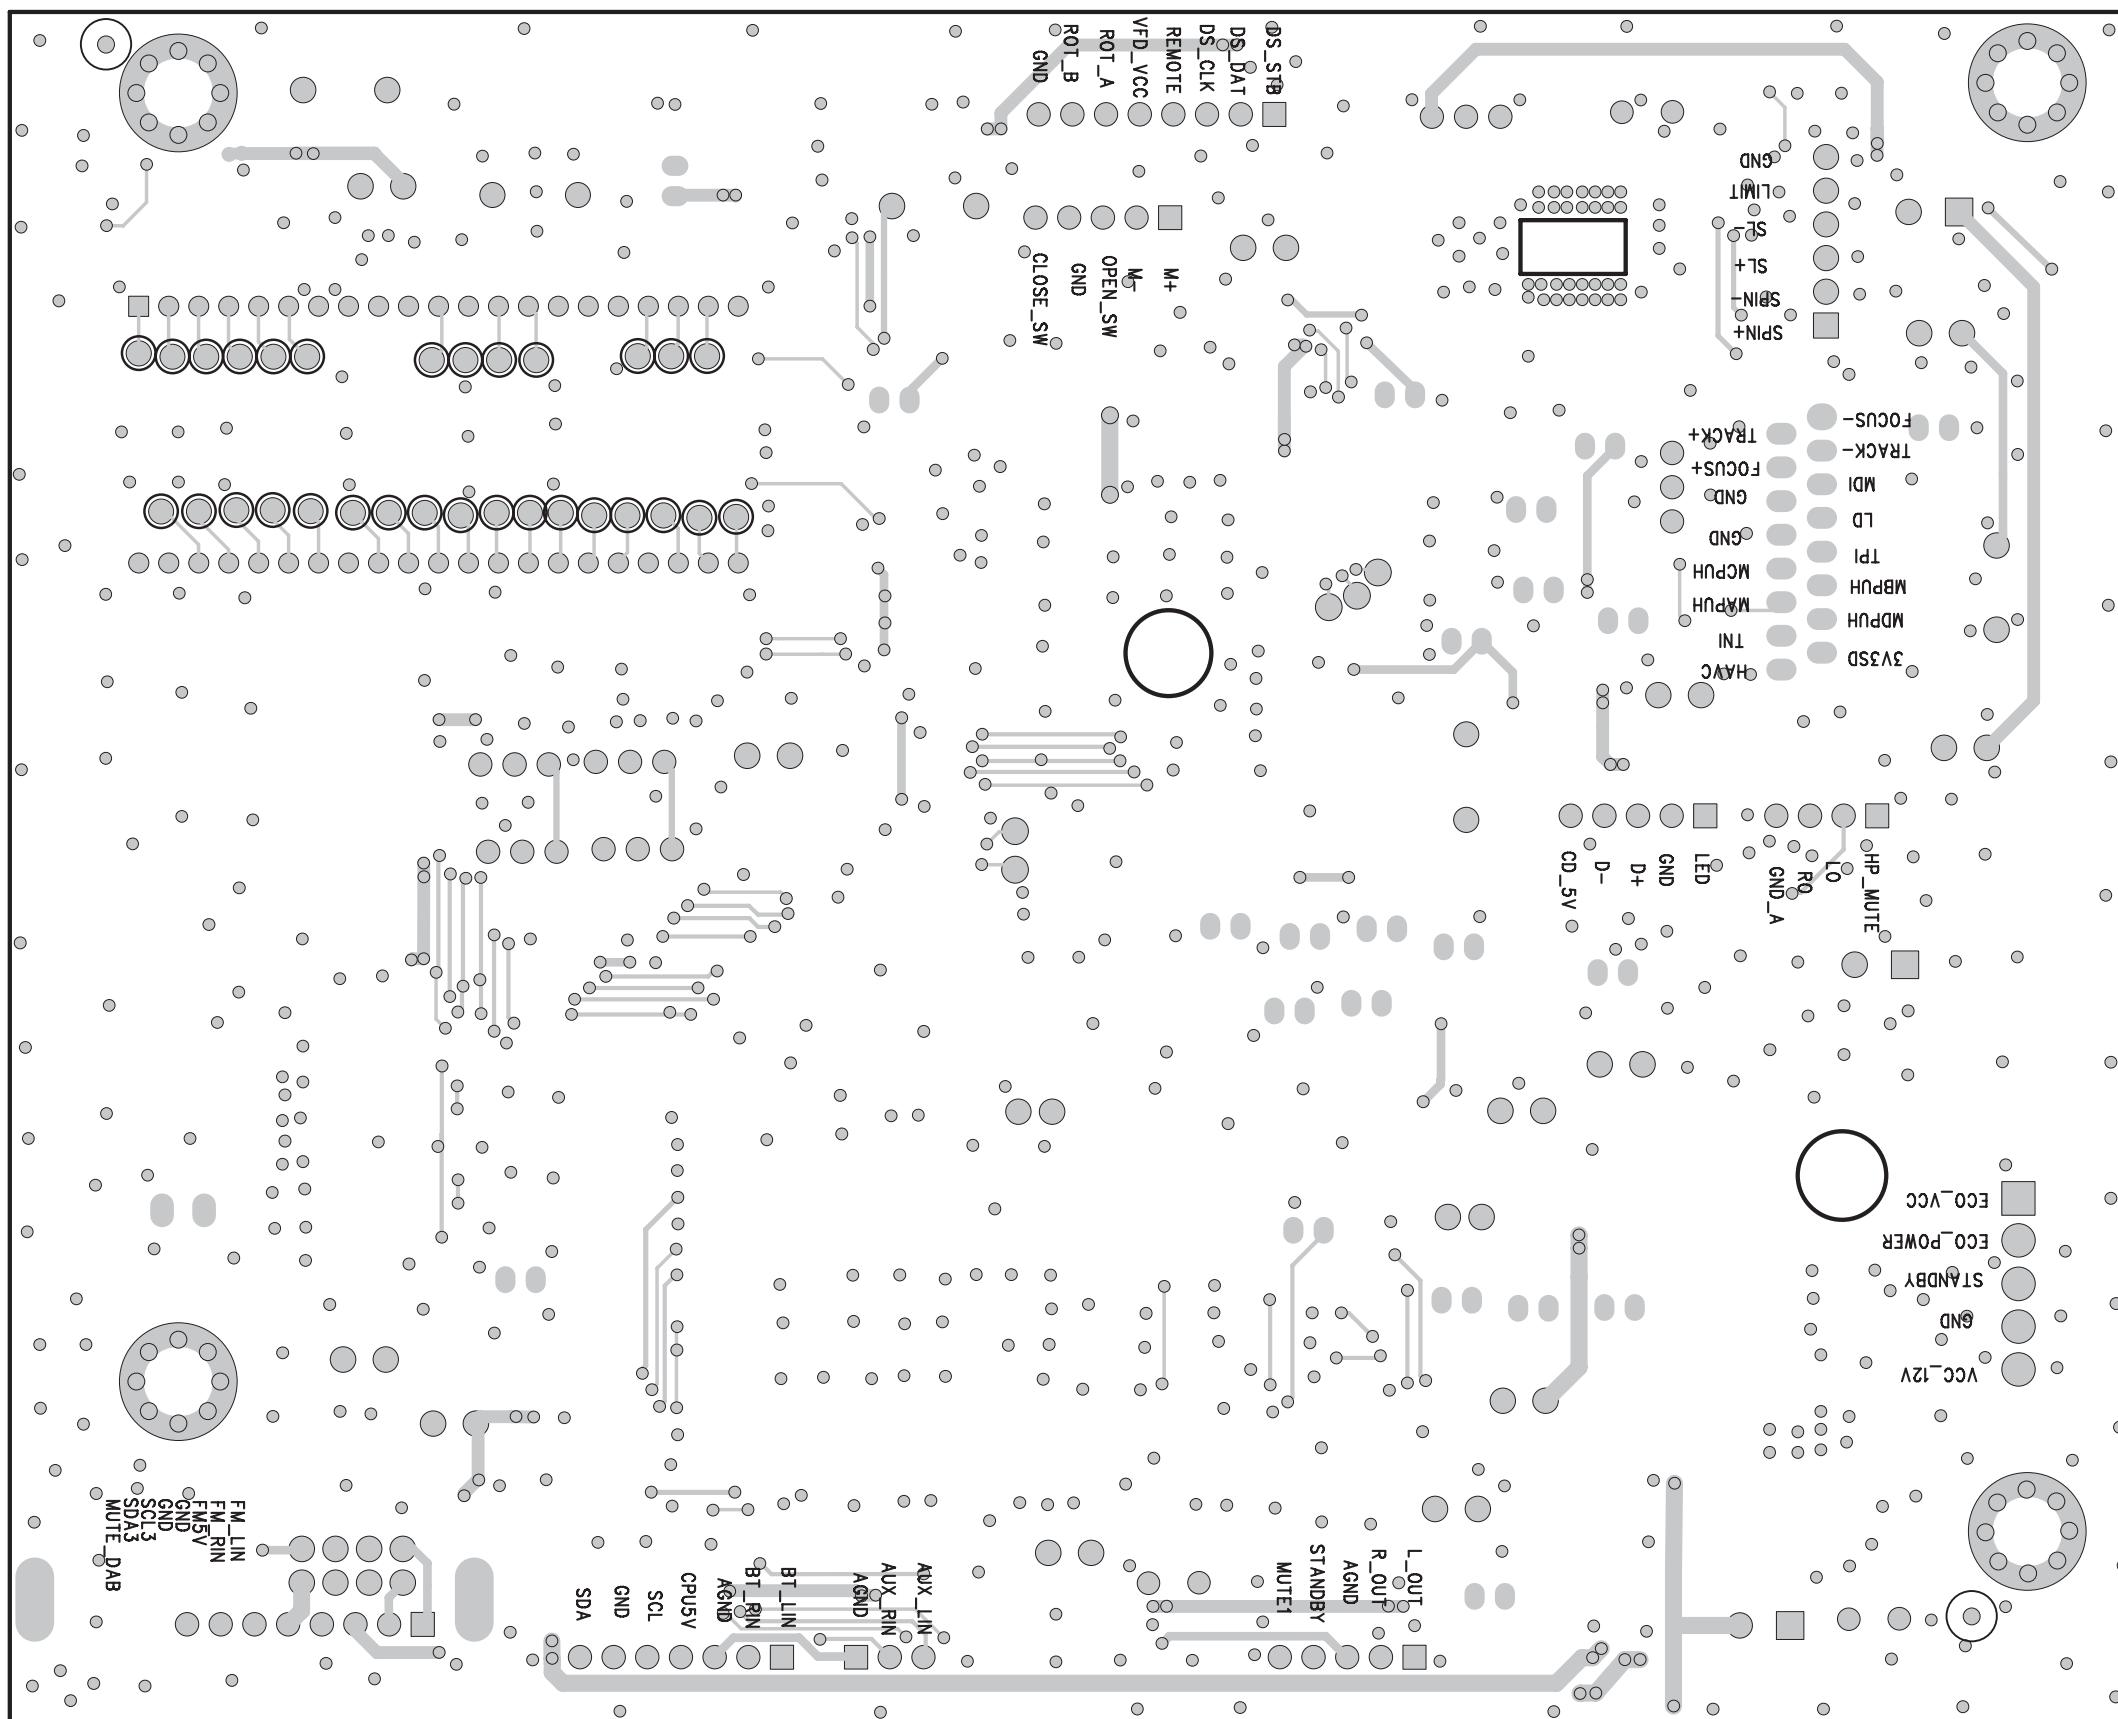

12-1

12-1

## Explode View

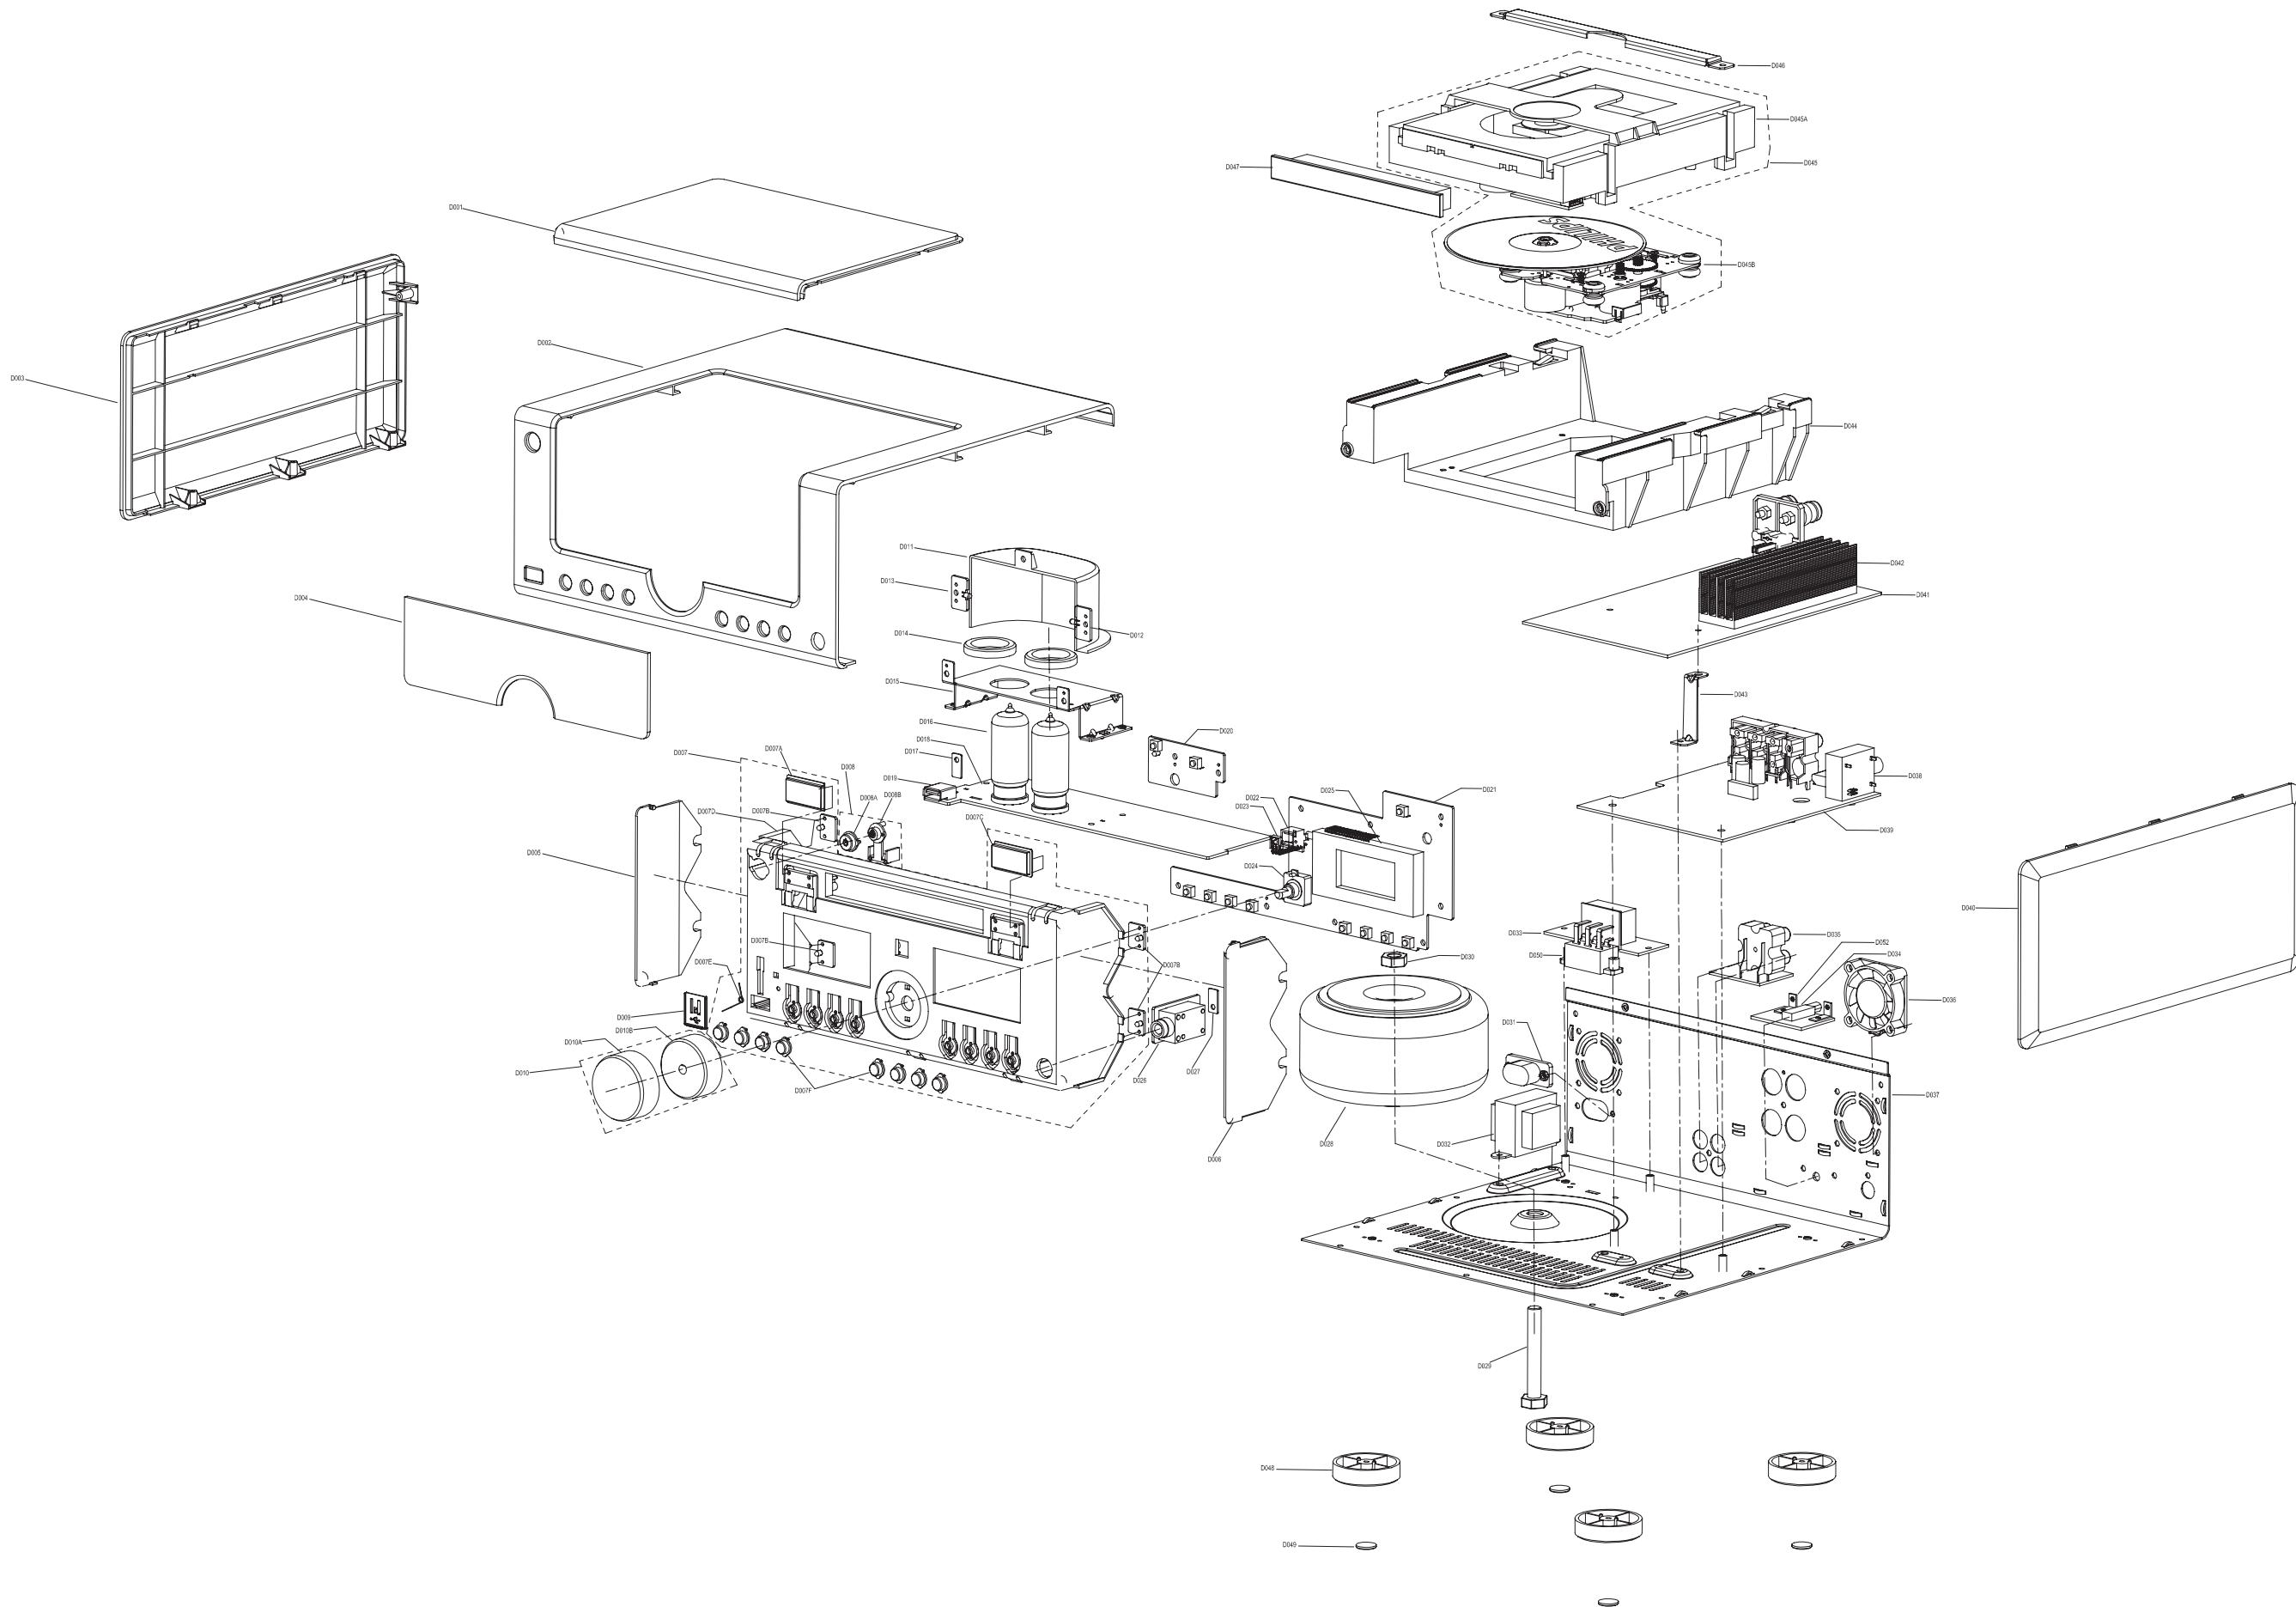

**ACCESSORIES PARTS LIST**

|    |              |                                |
|----|--------------|--------------------------------|
| 2A | 996510018715 | MCM906/12 SPEAKER BOX ASSY(L)  |
| 2B | 996510018716 | MCM906/12 SPEAKER BOX ASSY(R)  |
| 2C | 996500041018 | FM ANTENNA WIRE 1.5m           |
| 2D | 994000004988 | AC LINE CORD 1.8M              |
| 2F | 996510018717 | MCM906REMOTE CONTROL RC2144101 |

**MECHNICAL&MISCELLANEOUS PARTS**

|       |              |                                |
|-------|--------------|--------------------------------|
| D001  | 996510018712 | MCD906 TOP LENS ABS718         |
| D003  | 996510017923 | MCD906 PLASTIC SIDE PLATE(L)   |
| D004  | 996510017927 | MCD906 DISPLAY LENS(PMMA)      |
| D005  | 996510017925 | MCD906 LIGHT GUIDE-L           |
| D006  | 996510017926 | MCD906 LIGHT GUIDE-R           |
| D007  | 996510017915 | MCD906 FRONT CABINET PARTS     |
| D008  | 996510017916 | MCD906 POWER BUTTON PARTS      |
| D009  | 996510017920 | MCD906 USB DOOR(HIPS)          |
| D010  | 996510017918 | MCD906 VOLUME KNOB PARTS       |
| D028  | 996510018714 | i TRANSFORMER 906D-12 230V/VDE |
| D031  | 994000005165 | AC SOCKET 1A/250V              |
| D032  | 996510018713 | i TRANSFORMER228A-12 230V/50CE |
| D036  | 996510007807 | MINI FAN RDM4010S DC12V/0.7A   |
| D040  | 996510017924 | MCD906 PLASTIC SIDE PLATE-R    |
| D044  | 996510017921 | MCD906 DVD MECHANISM BRACKET   |
| D047  | 996510017917 | MCD906 DOOR PARTS              |
| D049  | 996520033990 | RUBBER PAD                     |
| D007B | 996510017910 | MCD906 LAMP BOARD ASSY         |
| D012  | 996510017909 | MCD906VALVE LAMP BOARD ASSY-L  |
| D013  | 996510017908 | MCD906VALVE LAMP BOARD ASSY-R  |
| D020  | 996510018705 | MCM906 BUTTON BOARD ASSY       |
| D026  | 996510017911 | MCD906 HEADPHONE BOARD ASSY    |
| D033  | 996510018708 | MCM906 ECO POWER CONTROL BOARD |
| D034  | 996510018641 | MCM770/772/906 M-BOY BOARD     |
| D035  | 996510017907 | MCD906 AUX BOARD ASSY          |
| D039  | 996510018711 | MCM906/12 DECODER+MCU PARTS    |
| D045  | 996510021096 | DA11VF/WXD-8210D CD MECHANISM  |

**ELECTRICAL PARTS - PREPOSITIVE BOARD**

|      |              |                                |
|------|--------------|--------------------------------|
| C12  | 996510001150 | MYLAR CAPACITOR 104P 280V K    |
| C13  | 996510001150 | MYLAR CAPACITOR 104P 280V K    |
| C14  | 996510001152 | ELE.CAPACITOR 1U 450V L-5      |
| C15  | 996510001152 | ELE.CAPACITOR 1U 450V L-5      |
| C16  | 996510001151 | METALLIZED CAP. 1u 250V        |
| C17  | 996510001151 | METALLIZED CAP. 1u 250V        |
| C5   | 996510001153 | CERAMIC CAPACITOR 223P 1000V L |
| C6   | 996510001149 | ELECTROLYTIC CAP. 100U 350V    |
| C9   | 996510001149 | ELECTROLYTIC CAP. 100U 350V    |
| CN5  | 994000004968 | USB JACK A-TYPE 4P FEMALE      |
| D022 | 996520034965 | MCD906 VAC. TUBE BACK PANEL    |
| Q1   | 996500042557 | SOCKET GZC9-B(PCB)             |
| Q1   | 996510001121 | MOSFET 12AX7                   |
| Q2   | 996500042557 | SOCKET GZC9-B(PCB)             |
| Q2   | 996510001121 | MOSFET 12AX7                   |

**ELECTRICAL PARTS - PREPOSITIVE BOARD**

|    |              |                    |
|----|--------------|--------------------|
| Q3 | 996500042559 | TRANSISTOR 9014D-5 |
| Q4 | 996500042559 | TRANSISTOR 9014D-5 |
| Q6 | 994000004938 | TRANSISTOR 2SB772A |
| U1 | 996500042020 | IC 7812            |

**ELECTRICAL PARTS - DISPLAY BOARD**

|         |              |                               |
|---------|--------------|-------------------------------|
| CORD201 | 996510018706 | CODER R166ECC-D1-15F-24P-I066 |
| IC201   | 996510000500 | IC PT6311/SC16311/CD16311     |
| S201    | 994000004961 | IR SENSOR BLACK               |
| S201    | 996520034964 | MCD906 IR BRACKET HIPS        |
| SW201   | 996520033923 | TACT SWITCH TS-1307-01 6X6X5  |
| SW202   | 996520033923 | TACT SWITCH TS-1307-01 6X6X5  |
| SW203   | 996520033923 | TACT SWITCH TS-1307-01 6X6X5  |
| SW204   | 996520033923 | TACT SWITCH TS-1307-01 6X6X5  |
| SW205   | 996520033923 | TACT SWITCH TS-1307-01 6X6X5  |
| SW206   | 996520033923 | TACT SWITCH TS-1307-01 6X6X5  |
| SW207   | 996520033923 | TACT SWITCH TS-1307-01 6X6X5  |
| SW210   | 996520033923 | TACT SWITCH TS-1307-01 6X6X5  |
| SW212   | 996520033923 | TACT SWITCH TS-1307-01 6X6X5  |
| VFD701  | 996510020157 | NE-906D-1.GB VFD DISPLAY      |

**ELECTRICAL PARTS - AMP BOARD**

|       |              |                               |
|-------|--------------|-------------------------------|
| CN300 | 996510018707 | SPEAKER SOCKET 4PINS PST-410A |
| DZ1   | 994000005488 | ZENER DIODE 12V 0.5W-52       |
| DZ102 | 996510010895 | ZENER DIODE                   |
| DZ103 | 996510010895 | ZENER DIODE                   |
| DZ2   | 994000005488 | ZENER DIODE 12V 0.5W-52       |
| DZ300 | 996510005833 | ZENER DIODE 5.1V 1/2W-52      |
| DZ301 | 996510010895 | ZENER DIODE                   |
| DZ302 | 996510005833 | ZENER DIODE 5.1V 1/2W-52      |
| F101  | 994000004867 | FUSE F2AL250V                 |
| F101H | 996510000682 | FUSE HOLDER(PLASTIC)          |
| F102  | 996510000823 | FUSE F6.3AL250V(50F)          |
| F102H | 996510000682 | FUSE HOLDER(PLASTIC)          |
| F103  | 996510000823 | FUSE F6.3AL250V(50F)          |
| F103H | 996510000682 | FUSE HOLDER(PLASTIC)          |
| IC1   | 996510002941 | IC TL072 SOP                  |
| IC2   | 996510000010 | IC LM7805/LM340T5 7805        |
| IC300 | 996510000464 | CHIP IC TDA8920(PACKING)      |

Note: Only these parts mentioned in the list are normal service parts.

## FACTOTY PART LIST

| LOCATION NO. | 12NC | DESCRIPTION                         |
|--------------|------|-------------------------------------|
| D020         |      | MCD906/93 DVD UNIT PARTS ASS'Y      |
| SW208        |      | MCD906 BUTTON BOARD ASS'Y           |
| SW211        |      | TACT SWITCH TS-1307-01 6X6X5        |
|              |      | TACT SWITCH TS-1307-01 6X6X5        |
|              |      | 26WIRE 150 2.0/5PX2                 |
|              |      | PUSH KEY PCB 35-MCD906-01A1         |
| D021         |      | MCD906 DISPLAY BOARD ASS'Y          |
| R206         |      | CARBON FILM RESISTOR 10 1/8W J-52   |
| R211         |      | CARBON FILM RESISTOR 10K 1/8W J-52  |
| R213         |      | CARBON FILM RESISTOR 10K 1/8W J-52  |
| R214         |      | CARBON FILM RESISTOR 33K 1/8W J-52  |
| R215         |      | CARBON FILM RESISTOR 33K 1/8W J-52  |
| R216         |      | CARBON FILM RESISTOR 33K 1/8W J-52  |
| R217         |      | CARBON FILM RESISTOR 33K 1/8W J-52  |
| R01          |      | CARBON FILM RESISTOR 4.7K 1/8W J-52 |
| R212         |      | CARBON FILM RESISTOR 4.7K 1/8W J-52 |
| R209         |      | CARBON FILM RESISTOR 47K 1/8W J-52  |
| R207         |      | CARBON FILM RESISTOR 47 1/8W J-52   |
| R201         |      | CARBON FILM RESISTOR 4.7 1/2W J-52  |
| R202         |      | CARBON FILM RESISTOR 4.7 1/2W J-52  |
| C201         |      | NONINDUCTIVE CAP.104J 100V K        |
| C202         |      | NONINDUCTIVE CAP.104J 100V K        |
| C205         |      | CERAMIC CAP. 104P 50V K-5           |
| C208         |      | CERAMIC CAP. 104P 50V K-5           |
| C203         |      | CERAMIC CAP.103P 50V K-5            |
| C204         |      | CERAMIC CAP.103P 50V K-5            |
| C206         |      | ELECTROLYTIC CAP.47u 16V L-5 5X5    |
| C207         |      | ELECTROLYTIC CAP.47u 16V L-5 5X5    |
| D201         |      | DIODE 4148-52                       |
| D202         |      | DIODE 4148-52                       |
| D203         |      | DIODE 4148-52                       |
| IC201        |      | IC PT6311/SC16311/CD16311           |
| VFD701       |      | NE-906D-1.GR VFD DISPLAY            |
| CORD201      |      | CODER R166ECC-D1-15F-24P-I066       |
| SW201        |      | TACT SWITCH TS-1307-01 6X6X5        |
| SW202        |      | TACT SWITCH TS-1307-01 6X6X5        |
| SW203        |      | TACT SWITCH TS-1307-01 6X6X5        |
| SW204        |      | TACT SWITCH TS-1307-01 6X6X5        |
| SW205        |      | TACT SWITCH TS-1307-01 6X6X5        |
| SW206        |      | TACT SWITCH TS-1307-01 6X6X5        |
| SW207        |      | TACT SWITCH TS-1307-01 6X6X5        |
| SW210        |      | TACT SWITCH TS-1307-01 6X6X5        |
| SW212        |      | TACT SWITCH TS-1307-01 6X6X5        |
| S201         |      | IR SENSOR SMALL BLACK               |
|              |      | 28WIRE 250+250 2.0/11PX1 2.0/8P/3P  |
|              |      | VFD DISPLAY PCB 35-MCD906-02A1      |
| JP201-225    |      | JUMPER WIRE Ø0.6X40mm (375m=1kG)    |
| D022         |      | MCD906 IR BRACKET HIPS              |
| UNDERLAY VFD |      | BLACK SPONGE 15X10X2.5 40°          |
| D041         |      | MCD906 AMP BOARD ASS'Y              |
| R319         |      | CHIP RESISTOR 10 1/4W J (1206)      |
| R320         |      | CHIP RESISTOR 10 1/4W J (1206)      |
| R342         |      | CARBON FILM RESISTOR 15 1/8W J-52   |
| R171         |      | CHIP RESISTOR 680 1/16W J (0805)    |
| R172         |      | CHIP RESISTOR 680 1/16W J (0805)    |
| R173         |      | CHIP RESISTOR 680 1/16W J (0805)    |
| R174         |      | CHIP RESISTOR 680 1/16W J (0805)    |
| R317         |      | CHIP RESISTOR 10 1/16W J (0805)     |

## FACTORY PART LIST

|       |                                      |
|-------|--------------------------------------|
| R318  | CHIP RESISTOR 10 1/16W J (0805)      |
| R1392 | CHIP RESISTOR 100 1/16W J (0805)     |
| R340  | CHIP RESISTOR 100 1/16W J (0805)     |
| R1389 | CHIP RESISTOR 100 1/16W J (0805)     |
| R341  | CHIP RESISTOR 100 1/16W J (0805)     |
| R1379 | CHIP RESISTOR 1K 1/16W J (0805)      |
| R1378 | CHIP RESISTOR 1K 1/16W J (0805)      |
| R1393 | CHIP RESISTOR 1K 1/16W J (0805)      |
| R345  | CHIP RESISTOR 1K 1/16W J (0805)      |
| R129  | CHIP RESISTOR 10K 1/16W J (0805)     |
| R130  | CHIP RESISTOR 10K 1/16W J (0805)     |
| R132  | CHIP RESISTOR 10K 1/16W J (0805)     |
| R133  | CHIP RESISTOR 10K 1/16W J (0805)     |
| R150  | CHIP RESISTOR 10K 1/16W J (0805)     |
| R151  | CHIP RESISTOR 10K 1/16W J (0805)     |
| R159  | CHIP RESISTOR 10K 1/16W J (0805)     |
| R160  | CHIP RESISTOR 10K 1/16W J (0805)     |
| R140  | CHIP RESISTOR 4.7K 1/16W J (0805)    |
| R083  | CHIP RESISTOR 4.7K 1/16W J (0805)    |
| R084  | CHIP RESISTOR 4.7K 1/16W J (0805)    |
| R300  | CHIP RESISTOR 4.7K 1/16W J (0805)    |
| R343  | CHIP RESISTOR 4.7K 1/16W J (0805)    |
| R113  | CHIP RESISTOR 47K 1/16W J (0805)     |
| R344  | CHIP RESISTOR 47K 1/16W J (0805)     |
| R304  | CHIP RESISTOR 5.6K 1/16W J (0805)    |
| R305  | CHIP RESISTOR 5.6K 1/16W J (0805)    |
| R306  | CHIP RESISTOR 5.6K 1/16W J (0805)    |
| R308  | CHIP RESISTOR 5.6K 1/16W J (0805)    |
| R309  | CHIP RESISTOR 5.6K 1/16W J (0805)    |
| R335  | CHIP RESISTOR100K 2.2K 1/4W J (1206) |
| R336  | CHIP RESISTOR100K 2.2K 1/4W J (1206) |
| R303  | CHIP RESISTOR 2.2K 1/16W J (0805)    |
| R082  | CHIP RESISTOR 22K 1/16W J (0805)     |
| R314  | CHIP RESISTOR 22K 1/16W J (0805)     |
| R315  | CHIP RESISTOR 22K 1/16W J (0805)     |
| R310  | CHIP RESISTOR 22 1/16W J (0805)      |
| R311  | CHIP RESISTOR 22 1W J (2512)         |
| R312  | CHIP RESISTOR 22 1W J (2512)         |
| R316  | CHIP RESISTOR 30K 1/16W J (0805)     |
| R331  | CHIP RESISTOR 15K 1/16W J (0805)     |
| R332  | CHIP RESISTOR 15K 1/16W J (0805)     |
| R333  | CHIP RESISTOR 240K 1/16W J (0805)    |
| R334  | CHIP RESISTOR 240K 1/16W J (0805)    |
| R175  | CARBON FILM RESISTOR 560 1/4W J-52   |
| R162  | CARBON FILM RESISTOR 2.2 1/4W J-52   |
| R163  | CARBON FILM RESISTOR 2.2 1/4W J-52   |
| R313  | CHIP RESISTOR 1.5K 1/16W J (0805)    |
| C307  | CHIP CAP.474P 50V M (0805) Y5V       |
| C308  | CHIP CAP.474P 50V M (0805) Y5V       |
| C339  | CHIP CAP.474P 50V M (0805) Y5V       |
| C341  | CHIP CAP.474P 50V M (0805) Y5V       |
| C342  | CHIP CAP.474P 50V M (0805) Y5V       |
| C344  | CHIP CAP.474P 50V M (0805) Y5V       |
| C392  | CHIP CAP.224P 50V M (0805) Y5V       |
| C345  | CHIP CAP.220P 50V K (0805) X7R       |
| C347  | CHIP CAP.220P 50V K (0805) X7R       |
| C353  | CHIP CAP.220P 50V K (0805) X7R       |
| C354  | CHIP CAP.220P 50V K (0805) X7R       |
| C350  | CHIP CAP.220P 50V K (0805) X7R       |

## FACTORY PART LIST

|       |   |
|-------|---|
| R100  | CHIP RESISTOR 39 1/16W J (0805)         |
| R335  | CHIP RESISTOR100K 2.2K 1/4W J (1206)    |
| R336  | CHIP RESISTOR100K 2.2K 1/4W J (1206)    |
| C396  | ELECTROLYTIC CAP.100u 10V L-5 5X11      |
| C338  | ELECTROLYTIC CAP.100u 16V L-5 5X11      |
| C1517 | ELECTROLYTIC CAP. 1000u 16V L L10 10X16 |
| C1501 | ELECTROLYTIC CAP.3300u 25V L 16X25      |
| C395  | ELECTROLYTIC CAP.47u 16V L-5 5X11       |
| C1    | ELECTROLYTIC CAP.47u 25V L-5 5X11       |
| C2    | ELECTROLYTIC CAP.47u 25V L-5 5X11       |
| C1514 | ELECTROLYTIC CAP.47u 25V L-5 5X11       |
| C324  | CHIP CAP.102P 50V K (0805) X7R          |
| C326  | CHIP CAP.102P 50V K (0805) X7R          |
| C327  | CHIP CAP.102P 50V K (0805) X7R          |
| C332  | CHIP CAP.102P 50V K (0805) X7R          |
| C329  | CHIP CAP.102P 50V K (0805) X7R          |
| C330  | CHIP CAP.102P 50V K (0805) X7R          |
| C331  | CHIP CAP.102P 50V K (0805) X7R          |
| C333  | CHIP CAP.102P 50V K (0805) X7R          |
| C335  | CHIP CAP.102P 50V K (0805) X7R          |
| C336  | CHIP CAP.102P 50V K (0805) X7R          |
| C1515 | CHIP CAP.104P 50V M (0805) Y5V          |
| C397  | CHIP CAP.104P 50V M (0805) Y5V          |
| C398  | CHIP CAP.104P 50V M (0805) Y5V          |
| C377  | CHIP CAP.153P 50V M (0805) Y5V          |
| C379  | CHIP CAP.153P 50V M (0805) Y5V          |
| C381  | CHIP CAP.153P 50V M (0805) Y5V          |
| C345  | CHIP CAP.220P 50V K (0805) X7R          |
| C347  | CHIP CAP.220P 50V K (0805) X7R          |
| C348  | CHIP CAP.220P 50V K (0805) X7R          |
| C353  | CHIP CAP.220P 50V K (0805) X7R          |
| C350  | CHIP CAP.220P 50V K (0805) X7R          |
| C354  | CHIP CAP.220P 50V K (0805) X7R          |
| C392  | CHIP CAP.224P 50V M (0805) Y5V          |
| C303  | CHIP CAP.333P 50V M (0805) Y5V          |
| C304  | CHIP CAP.333P 50V M (0805) Y5V          |
| C307  | CHIP CAP.474P 50V M (0805) Y5V          |
| C308  | CHIP CAP.474P 50V M (0805) Y5V          |
| C339  | CHIP CAP.474P 50V M (0805) Y5V          |
| C341  | CHIP CAP.474P 50V M (0805) Y5V          |
| C342  | CHIP CAP.474P 50V M (0805) Y5V          |
| C344  | CHIP CAP.474P 50V M (0805) Y5V          |
| C374  | NONINDUCTIVE CAP.104J 100V K-5          |
| C376  | NONINDUCTIVE CAP.104J 100V K-5          |
| C153  | CHIP CAP.104P 100V M (0805) Y5V         |
| C154  | CHIP CAP.104P 100V M (0805) Y5V         |
| C155  | CHIP CAP.104P 100V M (0805) Y5V         |
| C140  | CHIP CAP.104P 100V M (0805) Y5V         |
| C139  | CHIP CAP.104P 100V M (0805) Y5V         |
| C301  | CHIP CAP.104P 100V M (0805) Y5V         |
| C302  | CHIP CAP.104P 100V M (0805) Y5V         |
| C1502 | CHIP CAP.104P 100V M (0805) Y5V         |
| C355  | CHIP CAP.104P 100V M (0805) Y5V         |
| C356  | CHIP CAP.104P 100V M (0805) Y5V         |
| C359  | CHIP CAP.104P 100V M (0805) Y5V         |
| C360  | CHIP CAP.104P 100V M (0805) Y5V         |

## FACTORY PART LIST

|       |   |
|-------|---|
| C361  | CHIP CAP.104P 100V M (0805) Y5V         |
| C362  | CHIP CAP.104P 100V M (0805) Y5V         |
| C363  | CHIP CAP.104P 100V M (0805) Y5V         |
| C364  | CHIP CAP.104P 100V M (0805) Y5V         |
| C367  | CHIP CAP.104P 100V M (0805) Y5V         |
| C368  | CHIP CAP.104P 100V M (0805) Y5V         |
| C370  | CHIP CAP.104P 100V M (0805) Y5V         |
| C371  | CHIP CAP.104P 100V M (0805) Y5V         |
| C373  | CHIP CAP.104P 100V M (0805) Y5V         |
| C134  | CHIP CAP.104P 100V M (0805) Y5V         |
| C135  | CHIP CAP.104P 100V M (0805) Y5V         |
| C305  | CHIP CAP.104P 100V M (0805) Y5V         |
| C306  | CHIP CAP.104P 100V M (0805) Y5V         |
| C382  | NONINDUCTIVE CAP.684J 100VJ-5           |
| C383  | NONINDUCTIVE CAP.684J 100VJ-5           |
| C390  | ELECTROLYTIC CAP.1000u 35V L 105°C      |
| C389  | ELECTROLYTIC CAP.1000u 35V L 105°C      |
| C387  | ELECTROLYTIC CAP.470u 35V L 105°C 10X16 |
| C388  | ELECTROLYTIC CAP.470u 35V L 105°C 10X16 |
| C121  | ELECTROLYTIC CAP.220U 50V L-5 10X12.5   |
| C122  | ELECTROLYTIC CAP.220U 50V L-5 10X12.5   |
| C384  | ELECTROLYTIC CAP.22u 100V L 105°C SHQ   |
| C300  | ELECTROLYTIC CAP.10u 25V L-5 4X5        |
| C394  | ELECTROLYTIC CAP.10u 25V L-5 4X5        |
| C151  | ELECTROLYTIC CAP. 4700u 35V L 16X40     |
| C152  | ELECTROLYTIC CAP. 4700u 35V L 16X40     |
| C393  | ELECTROLYTIC CAP.47u 35V L-5 6.3X7      |
| L300  | INDUCTOR 22u(7A)                        |
| L301  | INDUCTOR 22u(7A)                        |
| D081  | DIODE 4148-52                           |
| D110  | DIODE 4148-52                           |
| DZ300 | ZENER DIODE 5.1V 1/2W-52                |
| DZ302 | ZENER DIODE 5.1V 1/2W-52                |
| D102  | RECTIFIER DIODE 4001-52                 |
| D107  | RECTIFIER DIODE 4001-52                 |
| D108  | RECTIFIER DIODE 4001-52                 |
| D109  | RECTIFIER DIODE 4001-52                 |
| BD100 | RECTIFIER DIODE 4001-52                 |
| DZ1   | ZENER DIODE 12V 0.5W-52                 |
| DZ2   | ZENER DIODE 12V 0.5W-52                 |
| DZ301 | ZENER DIODE 27V 1W -52                  |
| DZ103 | ZENER DIODE 27V 1W -52                  |
| DZ103 | ZENER DIODE 27V 1W -52                  |
| Q115  | CHIP TRANSISTOR BC857B(SOT23)           |
| Q116  | CHIP TRANSISTOR BC857B(SOT23)           |
| Q081  | CHIP TRANSISTOR 8050(SOT-23)            |
| Q104  | CHIP TRANSISTOR 8050(SOT-23)            |
| Q300  | CHIP TRANSISTOR BC817-25(SOT23)         |
| Q1    | CHIP TRANSISTOR 9014 (SOT-23)           |
| Q301  | CHIP TRANSISTOR 9014 (SOT-23)           |
| Q117  | CHIP TRANSISTOR BC847B(SOT23)           |
| Q2    | CHIP TRANSISTOR 8550C(SOT-23)           |
| Q080  | CHIP TRANSISTOR 8550C(SOT-23)           |
| Q302  | CHIP TRANSISTOR 8550C(SOT-23)           |
| DB102 | THYRISTOR RS808                         |
| DB101 | THYRISTOR RS1010G(10A)                  |

## FACTORY PART LIST

|        |                                    |
|--------|------------------------------------|
| Q113   | MOSFET BUK7509-55A                 |
| Q114   | MOSFET BUK7509-55A                 |
| IC2    | IC LM7805/LM340T5 7805             |
| IC300  | IC TDA8920BTH                      |
| IC1    | IC TL072 SOP                       |
| CN300  | SPEAKER SOCKET 4PINS PST-410A/E    |
| CN90   | PINS CONNECTOR 2.5/2P              |
| CN109  | PINS CONNECTOR 2.5/2P              |
| CN111  | PINS CONNECTOR 2.0/2P              |
| CN102  | PINS CONNECTOR 2.0/3P              |
| CN110  | PINS CONNECTOR 3.96/3P             |
| CN301  | PINS CONNECTOR 2.0/4P              |
| CN1    | PINS CONNECTOR 2.5/5P              |
| CN108  | PINS CONNECTOR 2.0/7P              |
| CN107  | PINS CONNECTOR 2.5/7P              |
| F101   | ? FUSE F2AL250V                    |
| F101   | ? FUSE HOLDER(PLASTIC)             |
| F102   | ? FUSE HOLDER(PLASTIC)             |
| F103   | ? FUSE HOLDER(PLASTIC)             |
| F102   | ? FUSE F5AL250V                    |
| F103   | ? FUSE F5AL250V                    |
| L303   | FERRITE BEAD JRHW0349 BLUE         |
| L304   | FERRITE BEAD JRHW0349 BLUE         |
|        | PCB 35-MCD906-03A1 AMP FRONT PANEL |
|        | MICA INSULATION SHEET 15.5X11      |
| Q113   | HEAT SINK 21X16X24                 |
| Q114   | HEAT SINK 21X16X24                 |
| D042   | HEAT SINK DR-H300 28X30X45         |
| IC7812 | SCREW 3X6 PA (PLATING)             |
|        | SCREW 3 X 12 BBH (PLATING)         |
|        | PLASTIC POLE H=3.5                 |
| D035   | MCD906 AUX BOARD ASS'Y             |
| R400   | CARBON FILM RESISTOR 47K 1/8W J-52 |
| R401   | CARBON FILM RESISTOR 47K 1/8W J-52 |
| R406   | CARBON FILM RESISTOR 47K 1/8W J-52 |
| R407   | CARBON FILM RESISTOR 47K 1/8W J-52 |
| R402   | CARBON FILM RESISTOR 100 1/8W J-52 |
| R403   | CARBON FILM RESISTOR 100 1/8W J-52 |
| R404   | CARBON FILM RESISTOR 100 1/8W J-52 |
| R405   | CARBON FILM RESISTOR 100 1/8W J-52 |
| CN401  | RCA SOCKET 4P AV4-8.4-7            |
| CN402  | PINS CONNECTOR 2.0/6P              |
|        | AUX PCB 35-MCD906-04A1             |
| D013   | MCD906 VALVE LAMP BOARD ASS'Y(R)   |
| R501   | CARBON FILM RESISTOR 680 1/8W J-52 |
| LED501 | LED Φ3 ORANGE                      |
|        | LAMP PCB 35-MCD906-05A1            |
|        | 26 WIRE 150 2.0/4PX1 2.0/2PX2      |
| D012   | MCD906 VALVE LAMP BOARD ASS'Y(L)   |
| R601   | CARBON FILM RESISTOR 680 1/8W J-52 |
| LED601 | LED Φ3 ORANGE                      |
|        | LAMP PCB 35-MCD906-06A1            |
| D007B  | MCD906 LAMP BOARD ASS'Y            |
| R701   | CARBON FILM RESISTOR 680 1/8W J-52 |
| R702   | CARBON FILM RESISTOR 680 1/8W J-52 |
| LED701 | LED Φ3 3B4SCB01 (HIGH-BLUE)        |

## FACTORY PARTS LIST

|         |  |
|---------|--|
| LED702  | LED Φ3 3B4SCB01 (HIGH-BLUE)              |
|         | LAMP PCB 35-MCD906-07A1                  |
|         | 26WIRE 120 2.0/2PX1 2.0/2PX1             |
| D026    | MCD906 HEADPHONE BOARD ASS'Y             |
| JACK801 | 6.35 JACK Φ6.35 CK-6.35-6                |
|         | 26 WIRE 180 2.0/4PX1 2.0/4PX1            |
|         | HEADPHONE PCB 35-MCD906-08A1             |
| D033    | MCM906/12 ECO POWER CONTROL BOARD ASS'Y  |
| CN6     | PINS CONNECTOR 2.0/2P                    |
| CN110   | PINS CONNECTOR 3.96/3P                   |
| REL110  | RELAY 10A 240VAC-30VDC HLS-14F1L-DC12V-C |
|         | ECO POWER PCB 35-MCD906-09A1             |
| D018    | MCM906 PREPOSITIVE BOARD ASS'Y           |
| R50     | CARBON FILM RESISTOR 0.47 1/2W J         |
| R2      | CARBON FILM RESISTOR 0.47 1/2W J         |
| R22     | CARBON FILM RESISTOR 0.47 1/2W J         |
| R37     | CARBON FILM RESISTOR 100 1/8W J-52       |
| R7      | CARBON FILM RESISTOR 1K 1/8W J-52        |
| R31     | CARBON FILM RESISTOR 1K 1/8W J-52        |
| R6      | CARBON FILM RESISTOR 10K 1/8W J-52       |
| R66     | CARBON FILM RESISTOR 3.3K 1/8W J-52      |
| R68     | CARBON FILM RESISTOR 3.3K 1/8W J-52      |
| R51     | CARBON FILM RESISTOR 47K 1/8W J-52       |
| R52     | CARBON FILM RESISTOR 47K 1/8W J-52       |
| R67     | CARBON FILM RESISTOR 47K 1/8W J-52       |
| R69     | CARBON FILM RESISTOR 47K 1/8W J-52       |
| R1      | CARBON FILM RESISTOR 470K 1/8W J-52      |
| R62     | CARBON FILM RESISTOR 560 1/2W J -52      |
| R63     | CARBON FILM RESISTOR 560 1/2W J -52      |
| R61     | CARBON FILM RESISTOR 150K 1/2W J-52      |
| R60     | CARBON FILM RESISTOR 150K 1/2W J-52      |
| R24     | CARBON FILM RESISTOR 47K 1/2W J-52       |
| R27     | CARBON FILM RESISTOR 47K 1/2W J-52       |
| R57     | CARBON FILM RESISTOR 3.3K 1/2W J-52      |
| R56     | CARBON FILM RESISTOR 3.3K 1/2W J-52      |
| R58     | CARBON FILM RESISTOR 330K 1/2W J-52      |
| R59     | CARBON FILM RESISTOR 330K 1/2W J-52      |
| R64     | CARBON FILM RESISTOR 330K 1/2W J-52      |
| R65     | CARBON FILM RESISTOR 330K 1/2W J-52      |
| R54     | CARBON FILM RESISTOR 8.2K 1/8W J-52      |
| R55     | CARBON FILM RESISTOR 8.2K 1/8W J-52      |
| R23     | CARBON FILM RESISTOR 10K 1/2W J-52       |
| R25     | CARBON FILM RESISTOR 47K 1/4W J-52       |
| R28     | CARBON FILM RESISTOR 47K 1/4W J-52       |
| C11     | CHIP CERAMIC CAP.5P 50V ±0.5p -5         |
| C10     | CHIP CERAMIC CAP.5P 50V ±0.5p -5         |
| C3      | CHIP CERAMIC CAP.104P 50V K-5            |
| C2      | ELECTROLYTIC CAP.2200u 25V L             |
| C1      | ELECTROLYTIC CAP. 330u 16V L-5 8X11.5    |
| C6      | ELECTROLYTIC CAP.100U 350V M 18X30/31.5  |
| C9      | ELECTROLYTIC CAP.100U 350V M 18X30/31.5  |
| C15     | ELECTROLYTIC CAP.1U 450V L-5 8-10X12.5   |
| C14     | ELECTROLYTIC CAP.1U 450V L-5 8-10X12.5   |
| C5      | HIGH VOLTAGE CHIP CERAMIC CAP.223P 1000  |
| C12     | MYLAR CAP.104P 280V J                    |
| C13     | MYLAR CAP.104P 280V J                    |

## FACTORY PARTS LIST

|       |  |
|-------|--|
| C16   | MET. POLYESTER FILM CAP. 1u 250V J CBB22 |
| C17   | MET. POLYESTER FILM CAP. 1u 250V J CBB22 |
| D1    | DIODE 4148-52                            |
| D2    | RECTIFIER DIODE 4001-52                  |
| D3    | RECTIFIER DIODE 4001-52                  |
| D7    | RECTIFIER DIODE 4007-52                  |
| D8    | RECTIFIER DIODE 4007-52                  |
| D9    | RECTIFIER DIODE 4007-52                  |
| D10   | RECTIFIER DIODE 4007-52                  |
| Q6    | TRANSISTOR 2SB772A                       |
| Q3    | TRANSISTOR 9014D-5(β>500)                |
| Q4    | TRANSISTOR 9014D-5(β>500)                |
| Q1    | VACUUM TUBE 12AX7                        |
| Q2    | VACUUM TUBE 12AX7                        |
| U1    | IC 7812 (ST)                             |
| CN5   | USB JACK A-TYPE 4P FEMALE 90 DIP TYPE    |
| Q1    | VACUUM TUBE SOCKET GZC9-B(PCB)           |
| Q2    | VACUUM TUBE SOCKET GZC9-B(PCB)           |
| CN3   | PINS CONNECTOR 2.5/5P                    |
| CN7   | PINS CONNECTOR 2.0/2P                    |
| CN8   | PINS CONNECTOR 2.0/2P                    |
| CN1   | PINS CONNECTOR 2.0/4P                    |
|       | 26WIRE+28SHIELDING 330 2.0/5P 2.0/5P     |
|       | 26WIRE+28SHIELDING 330 2.0/7P 2.0/7P     |
|       | PREPOSITIVE PCB 35-MCD906-10A1           |
| R8    | JUMPER WIRE Φ0.6X40mm (375m=1kG)         |
| JP1   | JUMPER WIRE Φ0.6X40mm (375m=1kG)         |
| JP2   | JUMPER WIRE Φ0.6X40mm (375m=1kG)         |
|       | HEAT SINK 21X16X33                       |
| D022  | MCD906 VACUUM TUBE BRACKET               |
|       | MCD906 VACUUM TUBE BACK PANEL(ABS)       |
|       | SCREW 3 X 6 BTH(PLATING)                 |
|       | SCREW 3 X 5 BMTT (PLATING)               |
|       | SCREW 3 X 5 FMTT (PLATING)               |
| D034  | MCM770/772/906 M-BOY BOARD ASS'Y         |
| CN1   | 26 WIRE 120 2.0/4PX1                     |
| J1    | SOCKET ST—3541 4P BLACK                  |
|       | PCB 35-MCD770-08A1 M-BOY 30X28           |
|       | NE1503PCB METAL BRACKET 13X13X8X1        |
|       | SCREW 3 X 5 PMTT (PLATING)               |
| D045  | ASA WXD-8210D CD MECHANISM               |
| D045B | CD MECHANISM (SANYO DA11VZ)              |
| D045A | CD MECHANISM BRACKET ASA WXD-8210D       |
| D039  | MCM906/12 DECODER+MCU PARTS ASS'Y        |
|       | CPU U252(S3C9228 XYZ-CAN CHANGE)         |
|       | CD DECODER EJS906CD                      |
|       | IC P74LVC2GU04GW SOT-363(TW)             |
|       | IC TEA5766UK                             |
|       | MCM906/12 DECODER+MCU SOFTWARE           |
|       | MCM906/12 CPU SOFTWARE                   |
|       | MCM906/12 CD MP3 SOFTWARE                |
| D007  | MCD906 FRONT CABINET PARTS               |
| D007E | MCD906 USB DOOR SPRING (Φ0.4STEEL WIRE)  |
| D007D | MCD906 DVD PLASTIC FRONT CABINET         |
| D007C | MCD906 OPEN/CLOSE BUTTON ABS718          |
| D007A | MCD906 SOURCE BUTTON ABS718              |

## FACTORY PARTS LIST

|        |   |
|--------|---|
| D007F  | MCD906 FUNCTION BUTTON(ABS PLATE)       |
| D008   | MCD906 POWER BUTTON PARTS               |
| D008A  | MCD906 POWER BUTTON(ABS PLATE)          |
| D008B  | MCD906 POWER BUTTON BRACKET(ABS)        |
| D047   | MCD906 DVD DOOR PARTS                   |
| D047A  | MCD906 DVD DOOR ABS718                  |
| D047B  | SCUTCHEON(PHILIPS 31X5.68)              |
| D010   | MCD906 VOLUME KNOB PARTS(SILVER)        |
| D010A  | MCD906 VOLUME KNOB COVER                |
| D010B  | MCD906 VOL KNOB CORE(HIPS)              |
| CASING | MCM906/12 CD+MP3 CASING PARTS ASS'Y     |
| D027   | MCD988 USB PCB PRESS-PIECE              |
| D037   | METAL PLATE 11X7X1 Φ3                   |
| D002   | MCD906 DVD BACK METAL PLATE             |
| D046   | MCD906 DVD TOP COVER(ALUMINIUM)         |
| D043   | MCD906 TOP LENS BRACKET                 |
| D001   | MCD906 AMP BOARD BRACKET(METAL)         |
| D009   | MCD906 TOP LENS ABS718                  |
| D044   | MCD906 USB DOOR(HIPS)                   |
| D048   | MCD906 DVD MECHANISM BRACKET(HIPS)      |
| D003   | MCD906 DVD MACHINE FOOT(HIPS)           |
| D040   | MCD906 PLASTIC SIDE PLATE(L) ABS716     |
| D005   | MCD906 PLASTIC SIDE PLATE(R) ABS716     |
| D006   | MCD906 LIGHT GUIDE(L)(PMMA)             |
| D004   | MCD906 LIGHT GUIDE(R)(PMMA)             |
|        | MCD906 DISPLAY LENS PMMA                |
|        | SCREW 3 X 6 BM (PLATING)                |
|        | SCREW 3 X 4 BMTT (PLATING)              |
|        | SCREW 3 X 12 BA (PLATING)               |
|        | SCREW 3 X 6 BA (PLATING)                |
|        | SCREW 3 X 5 BMTT (PLATING)              |
|        | SCREW 3 X 14 PM(BLACK)                  |
|        | M3 NUT (PLATING)                        |
|        | SCREW 3 X 8 PM(BLACK)                   |
|        | SCREW 3 X 10 PA(BLACK)                  |
|        | SCREW 3 X 8 BA (PLATING)                |
|        | SCREW 2.6 X 4 BB (PLATING)              |
|        | SCREW 3 X 6 FMTT Φ6 (PLATING)           |
|        | SCREW 2.6X6 BB (PLATING)                |
|        | SCREW 3 X 6 BMTT (PLATING)              |
|        | SCREW 3 X 5 PMTT(BLACK)                 |
|        | BLACK SPONGE 10X10X8 75°                |
|        | WHITE SPONGE 47X10X2 40°                |
| D049   | MCD770 RUBBER FOOT(Φ12X1.5 BLACK)       |
|        | CABLE TIE 70                            |
| D032   | TRANSFORMER ECO-228A-12 230V/50 CE      |
| D028   | TRANSFORMER 906D-12 230V/50 VDE         |
| D031   | AC SOCKET 2.5A/250V(2120-FSI)           |
| 1A     | FLAT FLEXIBLE CABLE 16PX250X1.00XA      |
|        | 26WIRE 250 2.0/6PX2                     |
|        | 28WIRE 250 2.0/5PX2                     |
|        | 28SHIELDINGING 150 2.0/7PX1 2.0/6P      |
|        | 22 SINGLE WIRE 100 2.5/5PX2             |
|        | 26WIRE+28SHIELDINGING 120 2.0/5P 2.0/4P |
|        | 26 WIRE 150 2.0/2PX2                    |
|        | FERRITE RING JTH29X19X15                |

## FACTORY PARTS LIST

|      |  |
|------|--|
| D036 | MINI FAN(RDM4010S DC12V/0.07A)   |
| 2A   | MCM906/12 SPEAKER BOX ASS'Y(L)<br>MCD906 FREQUENCY DIVIDER ASS'Y   |
| L2   | HOLLOW INDUCTOR 0.3mH  |
| L1   | SILICON INDUCTOR 0.78mH F41780   |
| R2   | CEMENT RESISTOR 3.3 10W J  |
| R1   | CEMENT RESISTOR 4.7 5W J   |
| C2   | NON-POLARITG ELEC.CAP.5.6u 100V M SNP  |
| C1   | NON-POLARITG ELEC.CAP.8.2U 100V M SNP<br>FREQUENCY DIVIDER PCB 35-MCD906-16A1<br>CABLE TIE 150<br>22 SINGLE WIRE 150 BLACK<br>22 SINGLE WIRE 150 RED<br>22 SINGLE WIRE 250 YELLOW<br>22 SINGLE WIRE 250 BLUE<br>22 SINGLE WIRE 350 BLACK<br>22 SINGLE WIRE 350 RED   |
|      | MCM906/12 SPEAKER BOX ASS'Y(L)<br>SPEAKER SOCKET(DJ-028D 92X80 R/B GILD)<br>ANTIMAGNETIC WOOFER SPEAKER 5 1/4"4Ω75W<br>TWEETER Φ25<br>MCD906 WOODEN SPEAKER BOX 186X300X210<br>MCD908 GRILL FIXER Φ4X14<br>MCD906 TWEETER LOOP(ALUMINIUM)<br>MCD906 WOOFER LOOP(ALUMINIUM)<br>PORT TUBE(DJ-213 Φ71X52X48 PLASTIC)<br>SCREW 4 X 16 BA(BLACK)<br>SCREW 3 X 12 BA(BLACK)<br>SOCKET HEAD SCREW 3X12 HA (PLATING)<br>SCREW 3 X 10 FAH NICKEL<br>PLASTIC BAG(PE) 58X45cm<br>PAPER TUBE(Φ57.5XΦ52.5X110)<br>RUBBER FOOT(Φ12X8X7 BLACK)<br>MCM906/12 SPEAKER BLACK LABEL 34X20<br>STENCIL PAPER 95X65CM<br>BLACK GAUZE 100X100 |
|      | MCD906/93 SPEAKER BOX GIRLLE PARTS<br>PLASTIC FIXER Φ11X8 BLACK<br>SCUTCHEON(PHILIPS 32X6.4)<br>MCD906 SPEAKER BOX GRILLE ABS+GF10   |
| 2B   | MCM906/12 SPEAKER BOX ASS'Y(R)<br>MCD906 FREQUENCY DIVIDER ASS'Y   |
| L2   | HOLLOW INDUCTOR 0.3mH  |
| L1   | SILICON INDUCTOR 0.78mH F41780   |
| R2   | CEMENT RESISTOR 3.3 10W J  |
| R1   | CEMENT RESISTOR 4.7 5W J   |
| C2   | NON-POLARITG ELEC.CAP.5.6u 100V M SNP  |
| C1   | NON-POLARITG ELEC.CAP.8.2U 100V M SNP<br>FREQUENCY DIVIDER PCB 35-MCD906-16A1<br>CABLE TIE 150<br>22 SINGLE WIRE 150 BLACK<br>22 SINGLE WIRE 150 RED<br>22 SINGLE WIRE 250 YELLOW<br>22 SINGLE WIRE 250 BLUE<br>22 SINGLE WIRE 350 BLACK<br>22 SINGLE WIRE 350 RED   |

## FACTROY PARTS LIST

**MCM906/12 SPEAKER BOX ASS'Y(R)**

SPEAKER SOCKET(DJ-028D 92X80 R/B GILD)  
 ANTIMAGNETIC WOOFER SPEAKER 5 1/4"4Ω75W  
 TWEETER Φ25  
 MCD906 WOODEN SPEAKER BOX 186X300X210  
 MCD908 GRILL FIXER Φ4X14  
 MCD906 TWEETER LOOP(ALUMINIUM)  
 MCD906 WOOFER LOOP(ALUMINIUM)  
 PORT TUBE(DJ-213 Φ71X52X48 PLASTIC)  
 SCREW 4 X 16 BA(BLACK)  
 SCREW 3 X 12 BA(BLACK)  
 SOCKET HEAD SCREW 3X12 HA (PLATING)  
 SCREW 3 X 10 FAH NICKEL  
 PLASTIC BAG(PE) 58X45cm  
 PAPER TUBE(Φ57.5XΦ52.5X110)  
 RUBBER FOOT(Φ12X8X7 BLACK)  
 MCM906/12 SPEAKER BLACK LABEL 34X20  
 STENCIL PAPER 95X65CM  
 BLACK GAUZE 100X100

**MCD906/93 SPEAKER BOX GIRLLE PARTS**

PLASTIC FIXER Φ11X8 BLACK  
 SCUTCHEON(PHILIPS 32X6.4)  
 MCD906 SPEAKER BOX GRILLE ABS+GF10

**MCM906/12 ACCESSORY PARTS ASS'Y**

MCM906/12 QUICK START GUIDE ENG./FRE  
 MCM906/12 QUICK START GUIDE  
 MCM906/12 QUICK START GUIDE  
 MCM906/12 INSTRUCTION MANUAL -A  
 MCM906/12 INSTRUCTION MANUAL -B

2

2C  
2D

2F

3

3A

RCA JACK FM SINGLE WIRE 1.5m  
 POWER CORD 1.8m VDE  
 SPEAKER WIRE 3m 65P/0.01  
 AAA BATTERY 1.5V PHILIPS  
 RC2144101/01 REMOTE CONTROL MCM906

**MCM906/12 PACKING PARTS ASS'Y**

MCM906/12 GIFT BOX  
 ACCESSORY PRESENT BOX 250X250X50  
 PEARL COTTON BAG 50X45cm  
 POLYFOAM MCD906  
 PASSED LABEL Φ13  
 MCM906/12 SPECIAL LABEL 52X34  
 LASER WARNING LABEL PH Φ15 BLACK  
 MCM906/12 DVD UNIT MAIN LABEL 59.5X39.5  
 MCM906/12 GIFT BOX LABEL 91X111  
 MCM906/12 POS BILLBOARD  
 PLASTIC BAG(PE) 26X17cm PHILIPS  
 PLASTIC BAG(PE) 26X17cm PHILIPS