

Service
Service
Service



Service Manual



TABLE OF CONTENTS

Handling chip components1-1

Technical specification.....2-1

Service tools2-1

Service measurement setup.....2-2

Connections and controls3-1...3-2

Instructions for uses3-3...3-5

Disassembly diagram4-1

Set block diagram5-1

Set wiring diagram5-2

DISPLAY BOARD

 circuit diagram6-1

 layout diagram6-2

KEY BOARD & POWER BOARD & MICPHONE BOARD

 circuit diagram7-1

 layout diagram7-1

MPEG BOARD

 circuit diagram8-1

 layout diagram8-2...8-3

TAPE BOARD

 circuit diagram9-1

 layout diagram9-2

COMBI BOARD

 circuit diagram10-1...10-2

 layout diagram10-3...10-4

Exploded view diagram11-1...11-2

Mechanical partslist11-2

Electrical partslist.....12-1

© Copyright 2004 Philips Consumer Electronics B.V. Eindhoven, The Netherlands
All rights reserved. No part of this publication may be reproduced, stored in a retrieval system or transmitted, in any form or by any means, electronic, mechanical, photocopying, or otherwise without the prior permission of Philips.

Published by LX 0438 Service Audio Printed in The Netherlands Subject to modification






GB 3141 785 30080

version 1.0



PHILIPS

HANDLING CHIP COMPONENTS

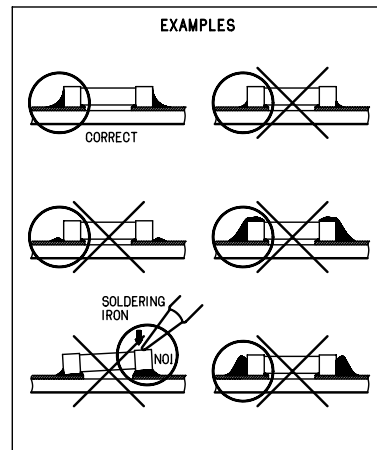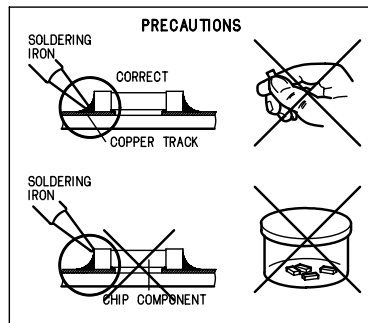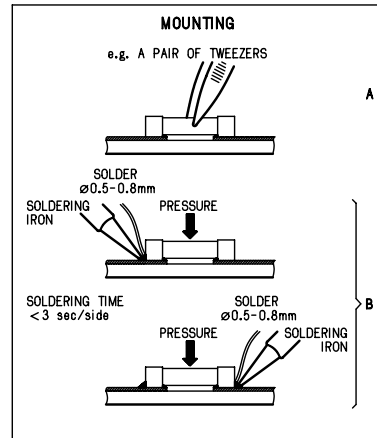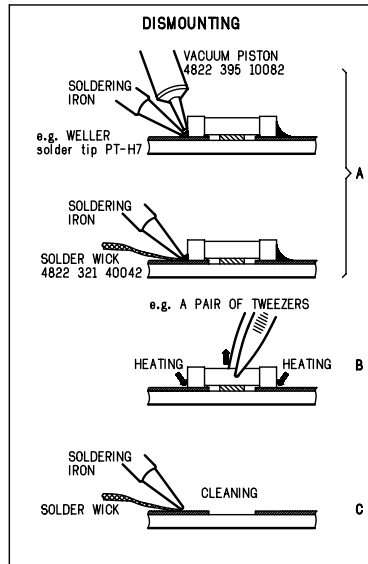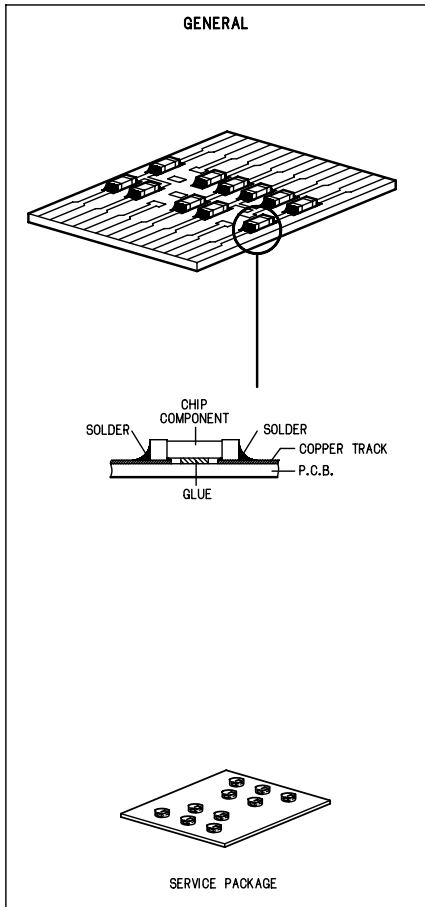

(GB) WARNING

All ICs and many other semiconductors are susceptible to electrostatic discharges (ESD). Careless handling during repair can reduce life drastically. When repairing, make sure that you are connected with the same potential as the mass of the set via a wristband with resistance. Keep components and tools at this potential.

ESD



(NL) WAARSCHUWING

Alle IC's en vele andere halfgeleiders zijn gevoelig voor electrostatische ontladingen (ESD). Onzorgvuldig behandelen tijdens reparatie kan de levensduur drastisch doen verminderen. Zorg ervoor dat u tijdens reparatie via een polsband met weerstand verbonden bent met hetzelfde potentiaal als de massa van het apparaat. Houd componenten en hulpmiddelen ook op ditzelfde potentiaal.

(F) ATTENTION

Tous les IC et beaucoup d'autres semi-conducteurs sont sensibles aux charges statiques (ESD). Leur long vie pourrait être considérablement court si par le fait qu'aucune précaution n'est prise lors de leur manipulation. Lors de réparations, s'assurer de bien être relié au même potentiel que la masse de l'appareil et enfilez le bracelet anti-statique. Veillez à ce que les composants ainsi que les outils que vous utilisez soient également à ce potentiel.

(D) WARNUNG

Alle ICs und viele andere Halbleiter sind empfindlich gegen elektrostatische Entladungen (ESD). Unvorsichtige Behandlung im Reparaturfall kann die Lebensdauer drastisch reduzieren. Sorgen Sie dafür, daß Sie im Reparaturfall über ein Pulsarmband mit Widerstand mit dem Massepotential des Gerätes verbunden sind. Halten Sie Bauteile und Hilfsmittel ebenfalls auf diesem Potential.

(I) AVVERTIMENTO

Tutti IC e parecchi semi-conduttori sono sensibili alle scariche statiche (ESD). La loro longevità potrebbe essere fortemente ridotta in caso di non osservazione della più grande cautela alla loro manipolazione. Durante le riparazioni occorre quindi essere collegato allo stesso potenziale che quello della massa del apparecchio tramite un bracciale a resistenza. Assicurarsi che i componenti e anche gli utensili con quali si lavora siano anche a questo potenziale.

(GB) SAFETY

Safety regulations require that the set be restored to its original condition and that parts which are identical with those specified be used. Safety components are marked by the symbol

SAFETY



(F) ATTENTION

Les normes de sécurité exigent que l'appareil soit remis à l'état d'origine et que soient utilisés les pièces de rechange identiques à celles spécifiées. Les composants de sécurité sont marqués

(D) WARNUNG

Bei jeder Reparatur sind die geltenden Sicherheitsvorschriften zu beachten. Der Originalzustand des Gerätes darf nicht verändert werden. Für Reparaturen sind Originalersatzteile zu verwenden. Sicherheitsbauteile sind durch das Symbol markiert.

(NL) VEILIGHEID

Veiligheidsbepalingen vereisen, dat het apparaat in zijn oorspronkelijke toestand wordt teruggebracht en dat onderdelen, identiek aan de gespecificeerde, worden toegepast. De Veiligheidsonderdelen zijn aangeduid met het symbool

(I) ATTENZIONE

Le norme di sicurezza esigono che l'apparecchio venga rimesso nelle condizioni originali e che siano utilizzati i pezzi di ricambio identici a quelli specificati. Componenti di sicurezza sono marcati con

(GB) DANGER: Invisible laser radiation when open. AVOID DIRECT EXPOSURE TO BEAM.



(S) Varning!

Osynlig laserstrålning när apparaten öppnas och strålar ut. Undgå direkt exponering för strålen.

(DK) Advarsel!

Usynlig laserstrålning ved åbning af apparatet. Undgå direkte eksponering for strålingen.

(FIN) Varoitus!

Avatussa laitteessa ja suojalukituksen ohitettaessa olet alttiina näkyvälle laserisäteilylle. Katso etteeseen!

(GB) WARNING

After servicing and before returning the set to customer perform a leakage current measurement test from all exposed metal parts to earth ground, to assure no shock hazard exists. The leakage current must not exceed 0.5mA.

(F) ATTENTION

"Pour votre sécurité, ces documents doivent être utilisés par des spécialistes agréés, seuls habilités à réparer votre appareil en panne".

TECHNICAL SPECIFICATIONS

GENERAL

Mains voltage	-/21/21M : 120 / 230 V -/22 : 230 V
Mains frequency	-/22 : 50 Hz -/21/21M : 50 / 60 Hz
Battery	remote : 3 V (R6 x 2)
Power consumption	normal : 40 W Standby : < 2 W
Dimension (W x H x D)	: 140 x 220 x 265 mm
Weight	: 4.1 Kg

AMPLIFIER

Output power	mains : 2 x 10 W
Speaker impedance	: 2 x 8 ohm
Frequency response	: 63 Hz - 16 kHz (± 3 dB)

TUNER - FM SECTION

Tuning range	: 87.5 - 108 MHz
IF frequency	: 10.7 MHz \pm 0.02 MHz
Sensitivity	: < 22 dBf at 26dB
Selectivity	300kHz : > 33 dB
IF Rejection	: > 60 dB
Image Rejection	: > 20 dB
Channel separation	1kHz : 30 dB

TUNER - AM SECTION

Tuning range	: 531 - 1602 kHz 530 - 1700 kHz for /21
IF frequency	: 450 kHz \pm 1 kHz
Sensitivity	: \leq 3.25 mV/m at 26dB
Selectivity S9/300kHz	: > 20 dB
IF rejection	: > 24 dB
Spurious rejection	: < 28 dB
Image rejection	: < 20 dB

AUDIO CASSETTE RECORDER

Frequency response	: 80 - 12.5 kHz
Wow & flutter	: < 0.4 % (DIN)
Tape speed	: 4.76 cm/s
Channel difference	1kHz : 0 dB
P/B S/N (A wght.)	: 55 dB
R/P S/N (A wght.)	: 45 dB

COMPACT DISC

Frequency response	: 63 Hz – 14 kHz
S/N ratio (A-wght.)	: 67 dBA
THD+N	1 kHz : 0.6 %
Channel Separation	1kHz : 35 dB (Lim.30dB)
Channel unbalance	: \leq 2 dB

VIDEO PERFORMANCE

Amplitude output	: 1.0 Vpp (+10/-10%)
S/N luminance	: \geq 48 dB
Video bandwidth	: 6 MHz
Chroma/Luminance delay	: \leq 80ns

SERVICE TOOLS


Audio signal disc SBC 429.....	4822 397 30184
Playability test disc SBC 444.....	4822 397 30245
Test disc 5 (disc without errors) +	
Test disc 5A (disc with dropout errors, black spots and fingerprints)	
SBC 426/426A.....	4822 397 30096
Burn in test disc (65 min. 1kHz signal at -30 dB level without "pause").....	4822 397 30155

AVAILABLE ESD PROTECTION EQUIPMENT

anti-static table mat large 1200x650x1.25mm	4822 466 10953
small 600x650x1.25m	4822 466 10958
anti-static wristband	4822 395 10223
connection box (3 press stud connections, 1M Ω)	4822 320 11307
extendible cable (2m, 2M Ω , to connect wristband to connection box)	4822 320 11305
connecting cable (3m, 2M Ω , to connect table mat to connection box)	4822 320 11306
earth cable (1M Ω , to connect any product to mat or to connection box)	4822 320 11308
KIT ESD3 (combining all 6 prior products - small table mat)	4822 310 10671
wristband tester	4822 344 13999


SERVICE MEASUREMENT

Tuner SW

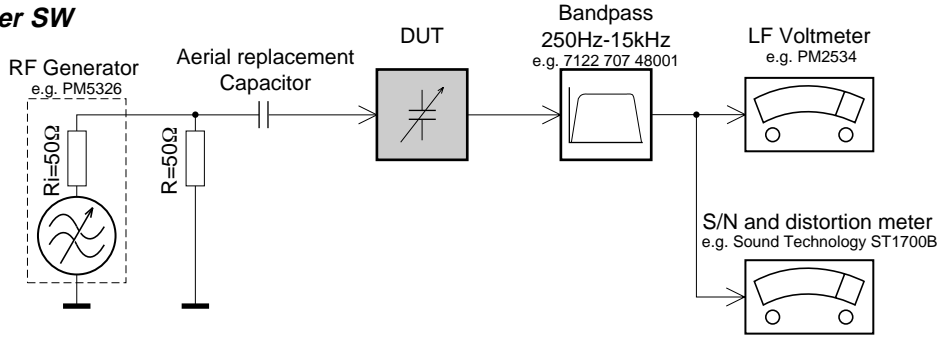

To avoid atmospheric interference all AM-measurements have to be carried out in a Faraday«s cage. Use a bandpass filter (or at least a high pass filter with 250Hz) to eliminate hum (50Hz, 100Hz).


Tuner AM (MW,LW)

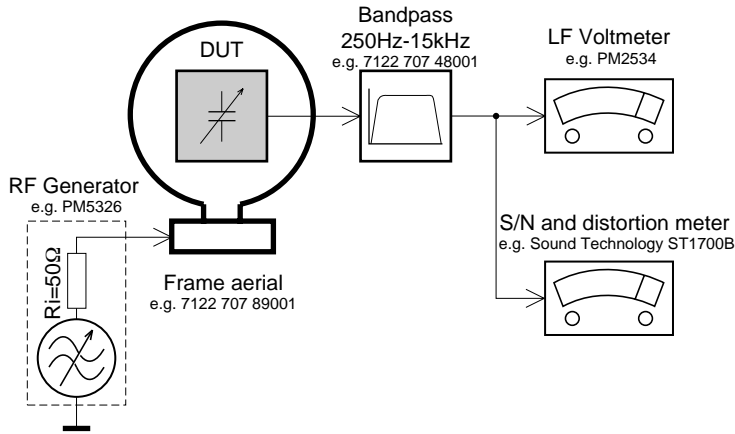



To avoid atmospheric interference all AM-measurements have to be carried out in a Faraday«s cage.

CD


Use Audio Signal Disc SBC429 4822 397 30184 (replaces test disc 3)
L.P.F. = 13th order filter 4822 395 30204

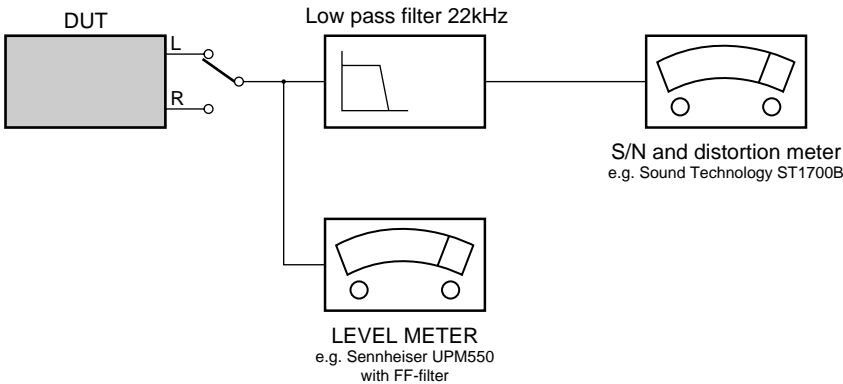

CONNECTION AND CONTROLS

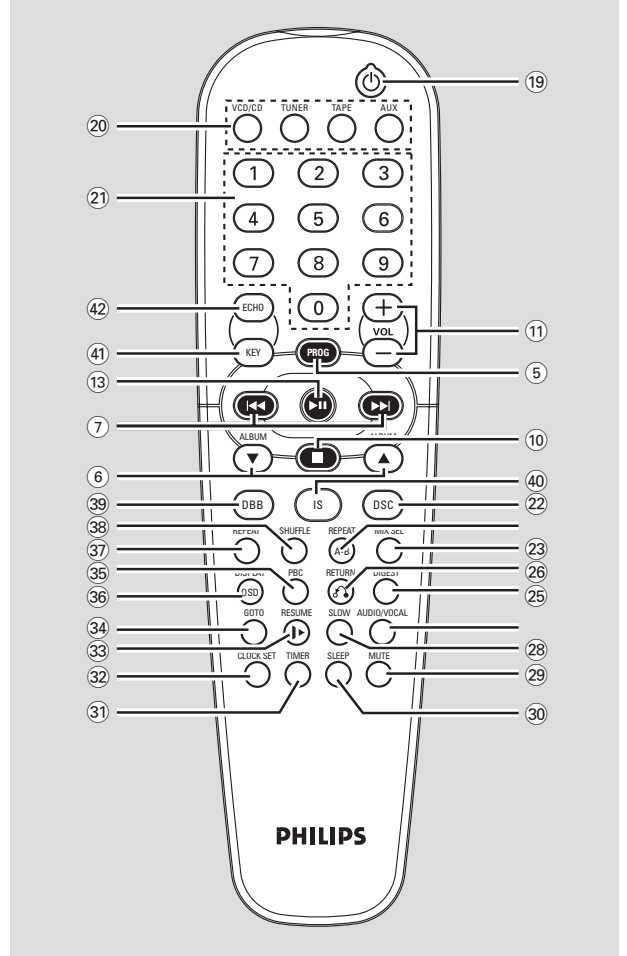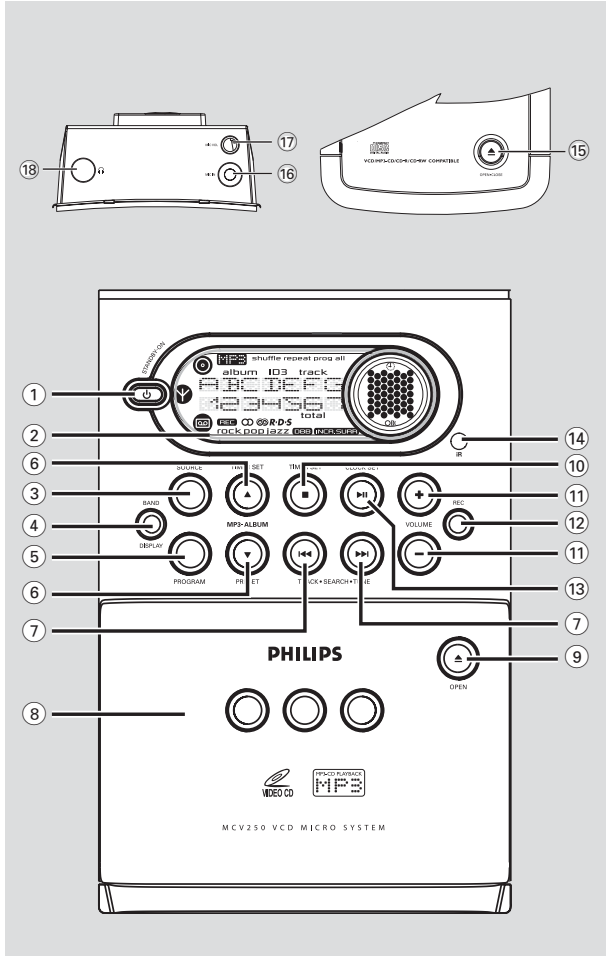

Preparations

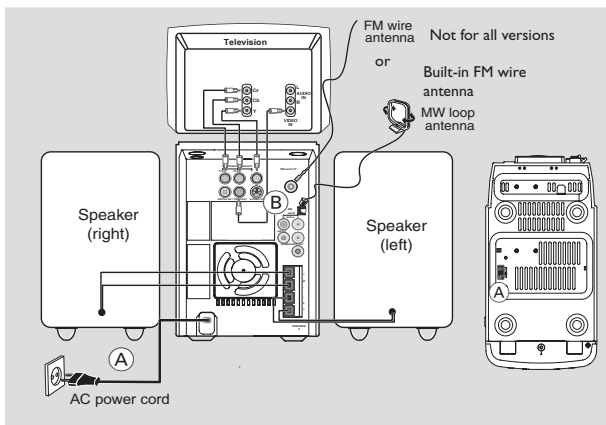

Rear connections

The type plate is located at the rear of the system.

A Power

Before connecting the AC power cord to the wall outlet, ensure that the following are done:

- If your system is equipped with a Voltage Selector, set the VOLTAGE SELECTOR to the local power line voltage.
- All other connections have been made.

WARNING!


- For optimal performance, use only the original power cable.
- Never make or change any connections with the power switched on.

To avoid overheating of the system, a safety circuit has been built in. Therefore, your system may switch to Standby mode automatically under extreme conditions. If this happens, let the system cool down before reusing it (not available for all versions).

B Antennas Connection

Connect the supplied MW loop antenna and FM antenna to the respective terminals. Adjust the position of the antenna for optimal reception.


MW Antenna

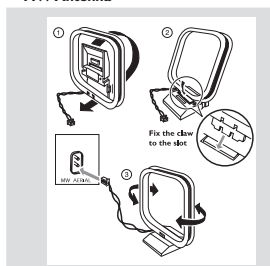

Preparations

Position the antenna as far as possible from a TV, VCR or other radiation source.

 FM Antenna

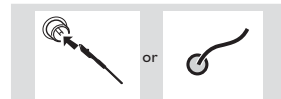


Not for all versions

For better FM stereo reception, connect an outdoor FM antenna to the FM AERIAL (FM ANTENNA) terminal. For some versions, a built-in FM antenna is provided.

C Speakers Connection

 Connect the speaker wires to the SPEAKERS terminals, right speaker to "RIGHT" and left speaker to "LEFT", colored (marked) wire to "+" and black (unmarked) wire to "-".

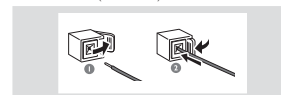

Fully insert the stripped portion of the speaker wire into the terminal as shown.

Notes:

- For optimal sound performance, use the supplied speakers.
- Do not connect more than one speaker to any one pair of +/ - speaker terminals.
- Do not connect speakers with an impedance lower than the speakers supplied. Please refer to the SPECIFICATIONS section of this manual.

D Video Out Connection

Connect the VIDEO OUT terminal at the rear of the system to the TV or VCR VIDEO IN for viewing or recording.

Optional connection

The optional equipment and connecting cords are not supplied. Refer to the operating instructions of the connected equipment for details.



system


Connect the audio left and right OUT terminals of a TV/VCR, Laser Disc player, DVD player or CD Recorder to the AUX terminals.

Note:

- If you are connecting equipment with a mono output (a single audio out terminal), connect it to the AUX left terminal. Alternatively, you can use a "single to double" cinch cable (the output sound still remain mono).

Inserting batteries into the Remote Control

Insert two batteries (type R06 or AA) into the remote control with the correct polarity as indicated by the + and - symbols inside the battery compartment.

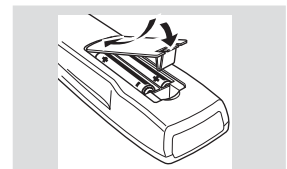

CAUTION!

- Remove batteries if they are exhausted or not to be used for a long time.
- Do not use old and new or different types of batteries in combination.
- Batteries contain chemical substances, so they should be disposed off properly.

CONNECTION AND CONTROLS

Controls (main set's illustration on page 3&4)

Controls on the system and remote control

- ① **STANDBY ON**
 - Switches the system on or to standby mode.
- ② **Display screen**
 - Views the current status of the system.
- ③ **SOURCE**
 - Selects the respective sound source :VCD/CD TUNER, TAPE or AUX.
- ④ **BAND / DISPLAY**
 - for Tunerselects waveband :FM or MW.
 - for VCD/CD/MP3-CD...selects disc information display mode.
- ⑤ **PROGRAM**
 - for VCD/CD/MP3-CD...programs disc tracks.
 - for Tunerprograms preset radio stations.
- ⑥ **▲▼ PRESET / MP3-ALBUM / TIMER SET**
 - for MP3-CDselects previous/next album.
 - for Tunerselects a preset radio station.
 - for Timer (▲) ...sets the timer function.
- ⑦ **◀▶ TRACK-SEARCH-TUNE**
 - for VCD/CD.....fast reverses/forwards the disc. (It is impossible to fast reverse / forward for MP3-CD)
 - for VCD/CD/MP3 CD... selects a desired track for Tuner tunes to a lower or higher radio frequency.
 - for Taperewinds or fast forwards.
- ⑧ **Tape deck**
- ⑨ **OPEN**
 - Opens tape compartment.
- ⑩ **■**
 - for VCD/CD/MP3-CD...stops playback or to clears a program.
 - for Tapestops playback or recording.
- ⑪ **VOLUME +/-**
 - Increases or decreases the volume.
 - adjusts the hours and minutes for the clock/timer functions.
- ⑫ **REC**
 - Starts recording.
- ⑬ **⏸ / CLOCK SET**
 - for VCD/CD/MP3-CD...starts or interrupts playback.
 - for Tapestarts playback.
 - for Clock(on the system only) sets the clock function.
- ⑭ **iR sensor**
 - infrared sensor for remote control.
- ⑮ **OPEN-CLOSE**
 - Opens or closes the disc tray.
- ⑯ **MIC IN**
 - connects microphone
- ⑰ **MIC VOL**
 - adjusts the mixing level for Karaoke
- ⑱ **🎧**
 - connects headphones.
- ⑲ **⏻**
 - Switches the set to standby / on if the set is operating on AC power.
- ⑳ **SOURCE**
 - Selects VCD/CD,TUNER,TAPE or AUX.
 - *VCD/CD
 - Selects PAL or NTSC.
- ㉑ **DIGIT 0 - 9**
 - for CD/VCD/MP3-CD - to select a track number: (numbers consisting more than 2 figures must be keyed in within 2 seconds)
- ㉒ **DSC (Digital Sound Control)**
 - (Digital Sound Control) selects sound characteristics: POP/ JAZZ/ ROCK/ OPTIMAL.
- ㉓ **MIX SEL**
 - Selects disc format (CD/MP3-CD) from a mixed mode disc.
- ㉔ **REPEAT A - B**
 - Plays a certain scene or passage of a CD/VCD repeatedly (REPEAT A - B is not possible for MP3-CD)
- ㉕ **DIGEST**
 - Scans through a VCD or a specific track.
- ㉖ **RETURN**
 - Returns to the previous MENU level during playback (for VCD with PBC on)
- ㉗ **AUDIO/VOCAL**
 - Fades out the original vocal from a Karaoke VCD


- or switches between mono or stereo mode during audio disc playback.
- Selects channel left / channel right / stereo sound, or selects a language in a bilingual VCD.
- SLOW**
 - Watches the VCD at a slower speed.
- ㉘ **MUTE**
 - Mutes or restores sound.
- ㉙ **SLEEP**
 - Activates / deactivates or sets sleep timer
- TIMER**
 - Activates or deactivates to timer function
- ㉚ **CLOCK SET**
 - Enters clock setting mode
 - Switches to clock display mode
- RESUME**
 - Continues playback again from where you have stopped (for VCD with PBC switched off).
- GOTO**
 - starts playback at any chosen time on the disc (for CD/VCD operation only and PBC mode is off).
- PBC (Playback Control)**
 - Switches on or off the PBC mode (for VCD 2.0 only)
- DISPLAY (OSD)**
 - Shows the status of the system
- ㉛ **REPEAT**
 - Repeats a track / CD program / entire disc.
- ㉜ **SHUFFLE**
 - Plays tracks in a random order
- DBB (Dynamic Bass Boost)**
 - Enhances the bass
- IS (Incredible Surround)**
 - Creates super-enhanced stereo sound effect
- ㉝ **KEY**
 - Changes the VCD key tone level to suit your vocal range
- ㉞ **ECHO**
 - Adjusts the VCD echo level for Karaoke after inserting the microphone.
 - Selects MIC ON or OFF.

Notes for remote control:
 - First, select the source you wish to control by pressing one of the source select keys on the remote control (VCD/ CD or TUNER, for example).
 - Then select the desired function (▶◀, ◀▶▶▶ for example).

* = Press and hold the button for more than two seconds.

* = Press and hold the button for more than two seconds.

Basic Functions

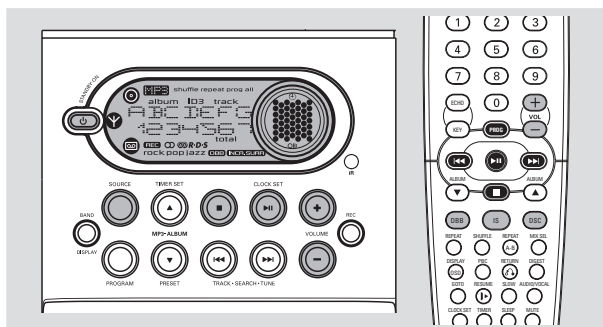

IMPORTANT!
 Before you operate the system, complete the preparation procedures.

Switching the system on

Press **STANDBY ON**.
 The system will switch to the last selected source.
 Press **SOURCE** on the system or **VCD/CD TUNER TAPE** or **AUX** on the remote control.
 The system will switch to the selected source.

To switch the system to standby mode

Press **STANDBY ON**.
 If in recording mode, press **STOP** first.
 The volume level (up to a maximum volume level of 20), interactive sound settings, last selected source and tuner presets will be retained in the player's memory.

Power-saving automatic standby

As a power-saving feature, the system automatically switches to standby 15 minutes after a tape or CD has reached the end and no control is operated.

Adjusting volume and sound

- 1 Press **VOLUME +/-** to decrease to increase volume on the system.
 Display shows the volume level: $\bar{\Delta}$ and a number from MIN1, 2...30, 31 MAX.
- 2 Press **DSC** repeatedly to select the desired sound effect: **ROCK/POP/JAZZ/OPTIMAL**.
- 3 Press **DBB** to switch bass enhancement on or off.
 Display shows: **DBB ON** or **DBB OFF**.


Note:
 The speakers will be muted when headphones are connected to the set.

Incredible Surround

The Incredible Surround magnifies the virtual distance between the front speakers for an incredibly wide, enveloping, stereo effect.

Press **IS** to switch Incredible Surround on or off.
 If activated, **IS ON** is shown and "Incredible Surround" is displayed.
 If deactivated, "IS OFF" is displayed.

CD/VCD/MP3-CD Operation

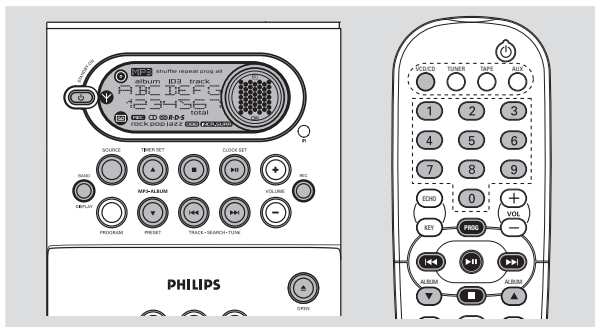

IMPORTANT!
 - This system is designed for regular discs. Therefore, do not use any accessories such as disc stabiliser rings or disc treatment sheets, etc., as offered on the market, because they may jam the disc mechanism.
 - Do not load more than one disc into the tray.

Before viewing the Video CD, ensure that the set is switched to corresponding PAL or NTSC system of your TV set (except Multi-system TV).

Discs for Playback

This system can play all digital audio CD, video CD, MP3-CD format discs, finalised digital audio CD-Recordable (CDR) discs and finalised digital audio CD-Rewritable (CDRW) discs.



Support following MP3-CD formats (ISO9660 format):

The max. number of tracks: 400
 The max. nested directory: 8 levels
 The max. number of albums: 99

Supported variable bit rate.
 The max. number of programmed MP3 tracks: 20
 Supported sampling frequencies for MP3 disc : 32 khz, 44.1 khz, 48 khz
 Supported Bit-rates of MP3 disc: 56, 64, 96, 128, 192, 256 (kbps)

Formats not supported

Files such as *.WMA, *.AAC, *.DLF, *.M3U, *.PLS
 Non-English album/title names
 CD-ROM, CD-I, CDV, DVD or computer CDs, however, are not possible.

IMPORTANT!
 The lens of the CD player should never be touched.



INSTRUCTIONS FOR USE

CD/VCD/MP3-CD Operation

Playing a disc

- 1 Select **VCD/ CD** source.
- 2 Press **OPEN/CLOSE** on the top of the system to open the CD compartment.
OPEN is displayed when you open the CD compartment.
- 3 Load a disc with the printed side facing up. Push the top panel to close.
READING is displayed as the CD player scans the contents of a disc, and then the total number of tracks and playing time are shown. (CD/VCD only)
- 4 Playback starts automatically.
 Current track number and elapsed playing time of the track are displayed during disc playback.
- 5 To interrupt playback, press **STOP**. Press it again to resume playback.
- 6 To stop playback, press **STOP**.

Note: Playback will also stop when:
 – the disc door is opened.
 – the disc has reached the end.
 – you select another source: TAPE, TUNER or AUX.

For MP3-CD only

Load a MP-3 music disc on the disc tray.
 The total album number and total title/ track number " **120**" will be displayed. **MP3**, **ALBUM** and **TRACK** will be shown.

Notes:
 – To ensure good system performance, wait until the disc is completely read before proceeding.
 – For MP3-CD, the disc reading time may exceed 10 seconds due to the large number of songs and different formats compiled in one disc.

Selecting a different track

Press **1** / **2** once or repeatedly until the desired track number appears in the display.
 Press digit **0-9** on the remote control to select the desired track (numbers consisting more than 2 figures must be keyed in within 2 seconds).

For MP3-CD only

To select a desired Album

Press **1** or **2** repeatedly until the desired Album appears on the display.
ALBUM and " **120**" will be displayed.

To select a desired Title/ Track
 Press **1** / **2** repeatedly until the desired Title appears on the display.
 Use the digital keys on the remote control to select the track.
TRACK and " **120**" will be displayed.

Finding a passage within a track

To search for a particular passage during playback

- 1 Press and hold **1** / **2** (CD only)
- 2 When you recognise the passage you want, release **1** / **2**.
 Normal playback continues.

Note:

– During a disc programme, searching is only possible within the same track.

For VCD only

Press and hold **1** / **2** to select a different search speed and release the button until the desired rewind or forward speed is shown on the display or the TV.
"REWINDX1", **"REWINDX2"**, **"REWINDX3"** or **"REWINDX4"** will be displayed on the TV screen when you select a fast rewind search.
"FORWARDX1", **"FORWARDX2"**, **"FORWARDX3"** or **"FORWARDX4"** will be displayed on the TV screen when you select a fast forward search.
 Normal playback will begin at the end of the fast rewinding or forwarding of the selected track.
 Playback returns to normal when **PLAY** is pressed or when a new track is selected.

Different play modes: SHUFFLE and REPEAT

You can select and change the various play modes before or during playback.
SHUFFLEtracks of the entire disc are played in random order
SHUFFLE REP ALLrepeats the entire disc continuously in random order
REP ALLrepeats the entire disc/ program
REPplays the current track repeatedly

CD/VCD/MP3-CD Operation

- 1 To select your play mode, press the **REPEAT** or **SHUFFLE** on the remote control before or during playback until the display shows the desired function. (SHUFFLE, REP, REP ALL)
- 2 Press **1** to start playback if in the STOP position.
- 3 To return to normal playback, press **REPEAT** or **SHUFFLE** until the various SHUFFLE / REPEAT modes are no longer displayed.

You can also press **STOP** to cancel your play mode.

Text display and ID3 Text

In CD mode

Press **DISPLAY** repeatedly to see the following information.

Track number and elapsed play time of current track.

Remaining play time of current track.

Total number of tracks played and total played-back time.

Total remaining number of tracks and total remaining play time.

In MP3-CD mode

This feature is used to display the title and album name for MP3-CD.

Press **DISPLAY** repeatedly to display the title or album name and ID3 Text.

Notes:

– Album No., Title No. & Playing time
 – Title name album name, ID3 Text & playing time

Programming the disc tracks

Programming tracks is possible when playback is stopped. Up to 20 tracks can be stored in the memory in any order.

- 1 Load the desired disc on the disc tray.
- 2 Press the **VCD/ CD** button to select the Source.
- 3 Press **PROGRAM** to start programming.
 A track number is shown and **PROG** appears.
- 4 Press **1** / **2** (or **Digits 0-9** on the remote control) repeatedly to select the desired track. For MP3-CD, **1** / **2** to select the desired Album and Title for programming.
- 5 Press **PROGRAM** to store the track.
 Repeat **steps 3-5** to store other tracks.
- 6 Press **1** to start programme playback.

To end programming without starting playback, press **ON**.

Notes:

– Programme cannot be used for VCDs when PBC is switched on. Switch off PBC before storing tracks.
 – If you attempt to programme more than 20 tracks, "LULL" will be displayed.

Erasing the program

You can erase the program by pressing **STOP** twice during playback, opening the CD compartment, change to other source

Playing a mixed mode disc

This set can play a mixed mode disc.
 – mixture of audio CD and MP3-CD
 – mixture of other combination may not be operated normally.

- 1 As default, audio CD tracks will be read first.
- 2 Press **MIX/SEL** (on the remote control) repeatedly to select other disc modes.


MP3-CD

MP3 is displayed.
 TV screen, MP3 menu is displayed.

Note:

For protected CDs, "MIX CD-DA" is displayed on your TV screen even if the disc does not have other format. The MIX/SEL normal functions are not available for protected CDs.

VIDEO CD

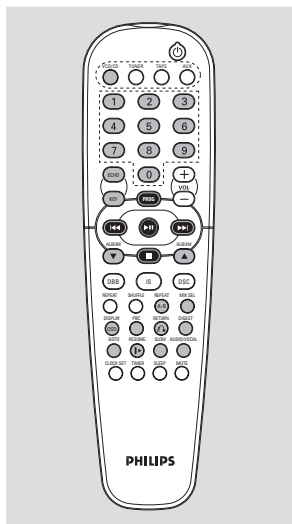

Adjusting the TV System

Before viewing the Video CD, ensure that the set is switched to corresponding PAL or NTSC system of your TV set (except Multi-system TV).

Press and hold **VCD/ CD** on the remote control for more than 3 seconds to switch between PAL or NTSC TV system.



OSD – On Screen Display

If you insert a VCD/ CD/ MP3 disc, your TV screen will serve as an additional display for messages (e.g. PLAY, STOP), and information stored on the VCD.
 Press **DISPLAY (OSD)** on the remote control repeatedly to switch on or off the On Screen Display.
 When OSD is switched ON, you can see the

following display on the TV screen.
 Below is an example of the OSD message.
 – Track playing time
 – Track remaining playing time
 – Total remaining playing time
 – OFF

SINGLE REMAIN
 XX MM:SS
 – "XX" is the current track.
 – "MM" is in minutes.
 – "SS" is in seconds.

Note:

– You can also view the information from a MP3-CD or normal CD.

Playing a Video CD with PBC

VCD with PBC (Playback Control) will be indicated on the display of the set, as soon as the disc is inserted. PBC is a predefined play sequence stored in the VCD.

- 1 Switch on the TV, insert a VCD with PBC and press **1** to start playback.
- 2 **MENU** appears on the TV screen.

If the menu consists of a list of titles, you can select a sequence directly
 Press **Digits 0-9** on the remote control to select your choice.

The VCD starts to play in the selected sequence automatically.

Note:

– If a menu consists of more than one page, press **1** / **2** to go through the pages.

Switching off PBC

Press **PBC** on the remote control.
"PBC OFF" appears on the TV screen.

Notes:

– The programme mode is not available whenever the PBC mode is switched on.
 – The menu structure depends on the information stored on the VCD. Please refer to the information supplied with the disc.
 – PBC will be set to OFF if **1** is pressed. To play the same VCD with PBC on, please press PBC on the remote control again.

Return

Press **RETURN** to return to the previous VCD disc MENU level. PBC mode must be switched on.

VIDEO CD

Digest

This feature allows you to scan through a VCD for a quick review. PBC mode must be switched off.

In the stop mode

- 1 Press **DIGEST** on the remote control.
 The first 6 seconds of each track are played.
- 2 Press **digit 0-9** on the remote control to play the desired tracks.
 Press **1** / **2** to view the previous or next page for additional information.

During playback

- 1 Press **DIGEST** on the remote control.
 The current track of the selected disc will be divided into 9 parts and displayed on the TV screen.
- 2 Press **digit 0-9** on the remote control to play from the desired position.
- 3 Press **1** / **2** to digest the previous or next track.

To exit the DIGEST mode

Press **DIGEST** again.
 Press **1** / **2** on the remote control.
 Press **1** on the remote control.

A-B Repeat

This feature is also applicable to audio CD (except MP3-CD). To play a certain scene or passage of the disc repeatedly:

- 1 Press **REPEAT A-B** on the remote control during playback to mark the start of the chosen scene or passage.
"REPEAT A" appears on the TV screen.
REPEAT A-B flashes on the display.
- 2 Press **REPEAT A-B** again to mark the end of the chosen scene or passage.
"REPEAT B" appears on the display.
 The selected scene or passage is played repeatedly.

- 3 Press **REPEAT A-B** once more to return to normal playback.

"REPEAT AB CANCEL" appears on the display.

Notes:

– You can also cancel the A-B Repeat by pressing **1** / **2**.
 – You can set the A-B mark within the same track.
 – If the track is completed before you set the end point, "REPEAT A" will disappear at the end of the track and "REPEAT AB CANCEL" will appear on the TV screen.

GOTO

- 1 Press **GOTO** on the remote control.
"GOTO-:--:--" appears on the TV screen.
- 2 Press **digit 0-9** on the remote control to key in the disc time from which you want the disc to begin.

Notes:

– Switch off PBC before selecting GOTO.

Resume

In the stop mode, press **RESUME** on the remote control to start playback again from where you have stopped.

Note:

– The resume information is lost if the disc tray is opened, the source is changed or the system is disconnected from the power supply.
 – Resume is not available when PBC mode is switched on.
 – For VCD, it may take more than 20 seconds to resume playback due to the large number or size of tracks.

INSTRUCTIONS FOR USE

VIDEO CD

Slow

- Press **SLOW** on the remote control to watch a VCD at a slower speed. There are 4 types of slow modes to select.

The sound is muted.

On TV screen, "SLOW 1/2", "SLOW 1/4",

"SLOW 1/8", "SLOW 1/16" or *PLAY* is displayed.

- To resume playback at normal speed, press **▶**.

Microphone Mixing

Connect microphones (not supplied) to the system to sing along with the music source.

- Connect microphones to **MIC** jack. Before connecting the microphone, set the microphone level with VOL to the lower level to prevent howling sound by turning the MICVOL knob.
- Select **VCD/CD** to start playback. Press **ECHO** to select MIC ON.
- Adjust the volume level of the source with **VOLUME +/-** control.
- Start singing or talking through the microphone.
- Press **KEY** to select key tone if necessary.

Notes:

- Keep the microphones away from the speakers to prevent howling.
- Microphone mixing only available in VCD mode.

Vocal

This feature allows you to fade out the original vocal from a karaoke VCD. This feature is used together with Echo mode. You can also use it to select the different audio modes.

Pressing **VOCAL** on the remote control repeatedly allows you to select the following modes.

STEREO VOCAL - VOCAL R MONO L MONO R STEREO ...

VOCAL LEFT/RIGHT - fade out the original vocal for specially recorded karaoke discs only (press **ECHO** to select MIC ON)

STEREO - same effect as the original recorded disc.

MONO L/R - select the language on a bilingual VCD.

Ensure that the **MIC** mode is switched on when pressing **VOCAL** to fade out the original vocal during STEREO VOCAL L/R mode.

Key Control

This feature allows you to change the key tone of your vocal range.

Press **KEY** on the remote control.

"-KEY SHIFT+" appears on the TV screen.

Press **VOLUME +/-** to decrease or increase the vocal key level between -6 and +6.


Echo

This feature allows you to add echo while singing or talking through a microphone.

Press **ECHO** on the remote control

"-ECHO DELAY+" appears on the TV screen.

Press **VOLUME +/-** to decrease or increase the echo level.

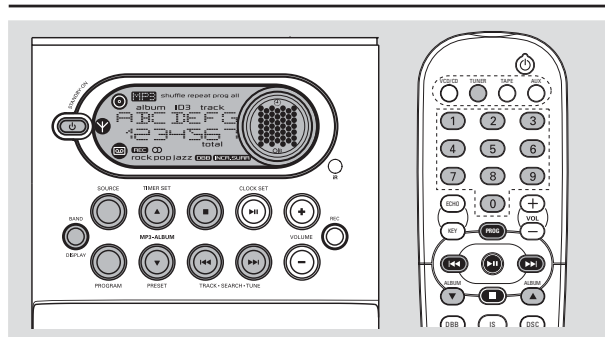

Radio Reception

Tuning to radio stations

- Select **TUNER** source. "TUNER" is displayed briefly.
- Press **BAND** to select the desired waveband: FM or MW.
- Press and hold **◀▶** and then release it. The display will show "SEARCH" until a radio station with sufficient signal strength is found. If a FM station is received in stereo, **◻** is shown.
- Repeat step 3 if necessary until you find the desired station.

To tune to a weak station, press **◀▶** briefly and repeatedly until you have found optimal reception.

Programming radio stations

You can store up to 40 radio stations in the memory.

Automatic programming

Press **PROGRAM** for more than two seconds to activate programming.

All available stations are programmed. AUTO is displayed and available stations are programmed in order of waveband reception strength: FM followed by MW. The last preset automatically stored will then be played.

Manual programming

- Tune to your desired station (refer to "Tuning to radio stations").
- Press **PROGRAM** to activate programming. **prog** flashes on the display.
- Press **▼** or **▲** to allocate a number from 1 to 40 for this station.
- Press **PROGRAM** again to confirm the setting. **prog** disappears, the preset number and the frequency of the preset station are shown.
- Repeat the above four steps to store other stations.

You can override a preset station by storing another frequency in its place.

Deleting preset radio stations

Press and hold **◻** until "CLR ALL" is displayed. All preset radio stations will be deleted.

Radio Reception

Tuning to preset radio stations

Press **▼** or **▲** until the desired preset station is displayed.

Changing tuning grid (not available for all versions)

In North and South America, the frequency step between adjacent channels in the MW band is 10 kHz (9 kHz in some areas). The preset frequency step in the factory is 9 kHz.


Changing the tuning grid will erase all previously stored preset radio stations.

- Disconnect the system from the AC power supply (pull out the AC power cord).
- While holding **◻** on the system, reconnect the system to the AC power supply. The display will show "GRID 9" or "GRID 10".

Notes:

- GRID 9 and GRID 10 indicate that the tuning grid is in step of 9 kHz and 10 kHz respectively.
- The FM tuning grid also will be changed from 50 kHz to 100 kHz or vice versa.

Tape Operation/Recording

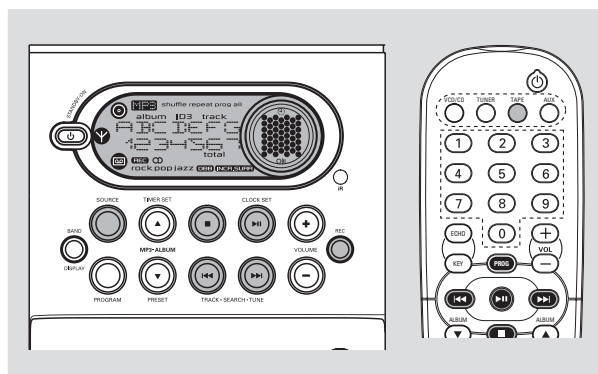

Tape playback

- Select **TAPE** source. The display shows "TAPE" briefly.
- Press **OPEN** to open the tape door.
- Insert a recorded tape and close the tape door. Load the tape with the open side downward and the full spool to the left.
- Press **▶** to start playback.

To stop playback

Press **◻**.

To reset the tape counter display

In stop mode, press **◻** once.

Reversing / Fast forwarding

- Stop playback, press **◀▶**. The tape will stop automatically at the end of rewinding or fast forwarding. During fast winding, you can monitor the tape message with the tape counter.
- Press **◻** to stop rewinding or fast forwarding.

Notes:

- During rewinding or fast forwarding of a tape, it is also possible to select another source (CD or TUNER, for example).

General information on recording

For recording, use only NORMAL (IEC type I) tapes on which the tabs have not yet been broken. This deck is not suitable for recording on METAL (IEC IV) type tapes.

The best recording level is set automatically. Altering the VOLUME, INCREDIBLE SURROUND or DBB will not affect the recording in progress.

At the very beginning and end of the tape, no recording will take place during the 7 seconds when the leader tape passes the recorder heads.

To protect a tape from accidental erasure, have the tape in front of you and break out the left tab. Recording on this side is no longer possible. If, however, you wish to record over this side again, cover the tabs with a piece of adhesive tape.

IMPORTANT!

Recording is permissible if copyright or other rights of third parties are not infringed upon. METAL (IEC IV) type tapes.

INSTRUCTIONS FOR USE

Tape Operation/Recording

Preparation for recording

- 1 Select **TAPE** source.
- 2 Load a recordable tape into the tape deck with the full spool to the left.
- 3 Prepare the source to be recorded.
CD/VCD – load the disc.
TUNER – tune to the desired radio station.
AUX – connect external equipment.

When recording is in progress

REC is shown.

To stop recording, press **■**.

It is not possible to listen to another source.

Synchro start CD recording


- 1 Select **CD** source.
Press **◀** or **▶** to select the desired track to start recording.
You can programme the tracks in the order you want them to be recorded (refer to "CD/MP3-CD Operations - Programming the disc tracks").
- 2 Press **REC** to start recording.
Playing of the CD programme starts automatically from the beginning of the CD after 7 seconds. It is not necessary to start the CD player separately.

One touch recording

- 1 Select **VCD/CD, TUNER** or **AUX** source.
- 2 If necessary, start playback of the selected source.
- 3 Press **REC** to start recording.

Recording timer


To record from the radio, you will need to use a preset radio station and to set a start (ON) and finish (OFF) time.

- 1 Select the preset radio station to record from (refer to "Radio Reception - Tuning to preset radio stations").
- 2 In standby mode, press **TIMER SET** for more than two seconds.
The current selected source is displayed.
- 3 Press **SOURCE** repeatedly until "REC TUN" source is displayed.
- 4 Press **TIMER SET** to confirm the source.
"SET ON TIME" is displayed and the clock digits for the hours flash.
- 5 Press **VOLUME +/-** to set the hours.
- 6 Press **TIMER SET** again.
The clock digits for the minutes flash.
- 7 Press **VOLUME +/-** to set the minutes.
- 8 Press **TIMER SET** to confirm the recording start time.
"SET OFF TIME" is displayed and the clock digits for the hours flash.
- 9 Repeat steps **5-7** to set the finish time.
- 0 Press **TIMER SET** to confirm the timer settings.
 is shown and the recording timer is now set.

Note:

– The recording timer will not be activated if the system is in tape play mode.


Clock/Timer

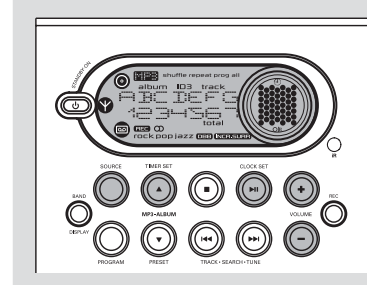

Clock setting

- 1 In standby mode, press and hold **CLOCK SET**.
The clock digits for the hours flash.
- 2 Press **VOLUME +/-** to set the hours.
- 3 Press **CLOCK SET** again.
The clock digits for the minutes flash.
- 4 Press **VOLUME +/-** to set the minutes.
- 5 Press **CLOCK SET** to confirm the time.
- 5 Press **VOLUME +/-** to set the minutes.
- 6 Press **TIMER SET** to confirm the time.
The timer is now set and activated.

Activating and deactivating timer

In standby or during playback, press **TIMER SET** once on the remote control.
Display shows  if activated, and disappears if deactivated.

Sleep timer setting

The sleep timer enables the system to switch off by itself after a set period of time.

- 1 Press **SLEEP** on the remote control repeatedly to select a preset time.
The selections are as follows (time in minutes):
90 80 70 60 50 40 30
20 10 OFF
"SLEEP xx" or "OFF" is displayed. "xx" is the time in minutes.
 - 2 When you reach the desired length of time, stop pressing the **SLEEP** button.
- To deactivate the sleep timer**
Press **SLEEP** repeatedly until "OFF" is displayed, or press the **STANDBY ON** button.
- 1 In standby mode, press **TIMER SET** for more than two seconds.
 - 2 Press **SOURCE** repeatedly to select the sound source. Press **TIMER SET** again.
Press **VOLUME +/-** to increase or decrease the volume.
 - 3 Press **VOLUME +/-** to set the hours.
 - 4 Press **TIMER SET** again.
The clock digits for the minutes flash.

Maintenance

Cleaning the Cabinet

Use a soft cloth slightly moistened with a mild detergent solution. Do not use a solution containing alcohol, spirits, ammonia or abrasives.

Cleaning Discs

When a disc becomes dirty, clean it with a cleaning cloth. Wipe the disc from the centre out.

Do not use solvents such as benzene, thinner, commercially available cleaners, or antistatic spray intended for analogue records.



Cleaning the disc lens


After prolonged use, dirt or dust may accumulate at the disc lens. To ensure good playback quality, clean the disc lens with Philips CD Lens Cleaner or any commercially available cleaner. Follow the instructions supplied with cleaner.

Cleaning the Heads and the Tape Paths

To ensure good recording and playback quality, clean the heads (A), the capstan(s) (B), and pressure roller(s) (C) after every 50 hours of tape operation.

Caution: Do not rotate the heads during cleaning.

Use a cotton swab slightly moistened with cleaning fluid or alcohol. You can also clean the heads by playing a cleaning tape once.

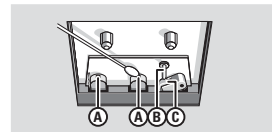

Demagnetising the heads

Use a demagnetising tape available at your dealer.

Troubleshooting


WARNING

Under no circumstances should you try to repair the system yourself, as this will invalidate the warranty. Do not open the system as there is a risk of electric shock.

If a fault occurs, first check the points listed below before taking the system for repair. If you are unable to remedy a problem by following these hints, consult your dealer or Philips for help.



Problem	Solution
"NO DISC" is displayed.	Insert a disc. Check if the disc is inserted upside down. Wait until the moisture condensation at the lens has cleared. Replace or clean the disc, see "Maintenance". Use a finalised CD-RW or CD-R.
No picture on TV screen.	Connect the cable between the system and TV.
No colour on TV.	Change the system to the respective PAL or NTSC setting.

Troubleshooting


Problem	Solution
Radio reception is poor.	If the signal is too weak, adjust the antenna or connect an external antenna for better reception. Increase the distance between the Micro HiFi System and your TV or VCR.
Recording or playback cannot be made.	Clean deck parts, see "Maintenance". Use only normal (IEC I) tape for recording.
"CHECK TAPE" is displayed.	Apply a piece of adhesive tape over the missing tab space.
The tape deck door cannot open.	Remove and reconnect the AC power plug and switch on the system again.
The system does not react when buttons are pressed.	Remove and reconnect the AC power plug and switch on the system again.
Sound cannot be heard or is of poor quality.	Adjust the volume. Disconnect the headphones. Check that the speakers are connected correctly. Check if the stripped speaker wire is clamped. Check the speaker connections and location.
The left and right sound outputs are reversed.	Select the source (CD or TUNER, for example) before pressing the function button ().
The remote control does not function properly.	Reduce the distance between the remote control and the system. Insert the battery with its polarities (+/- signs) aligned as indicated. Replace the battery. Point the remote control directly toward IR sensor on the front of the system.
The timer is not working.	Set the clock correctly. Press TIMER ON / OFF to switch on the timer. If a recording is in progress, stop the recording.
The Clock/Timer setting is erased.	Power has been interrupted or the power cord has been disconnected. Reset the clock/timer.

DISASSEMBLY DIAGRAM

- A. To remove Cabinet Rear
- B. To remove CD Tray
- C. To remove Main Board
- D. To remove Bottom Plate
- E. To remove Tape Deck
- F. To remove Display Board
- G. To remove Key Board

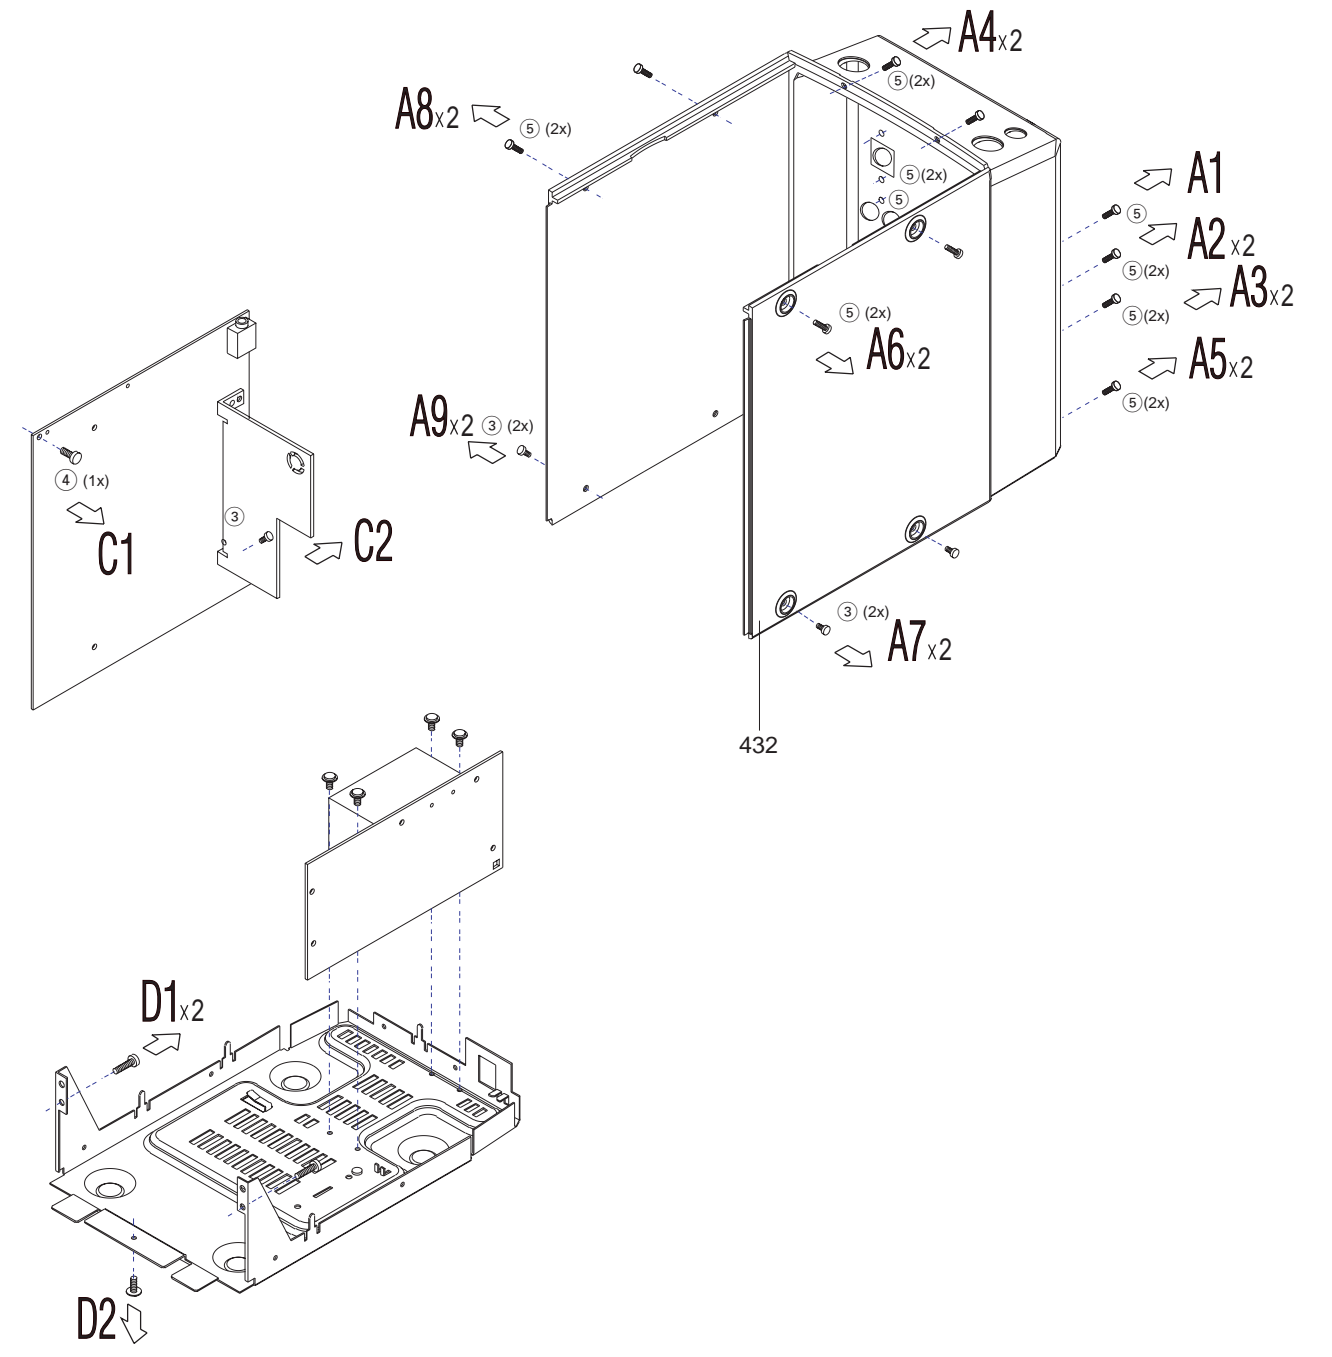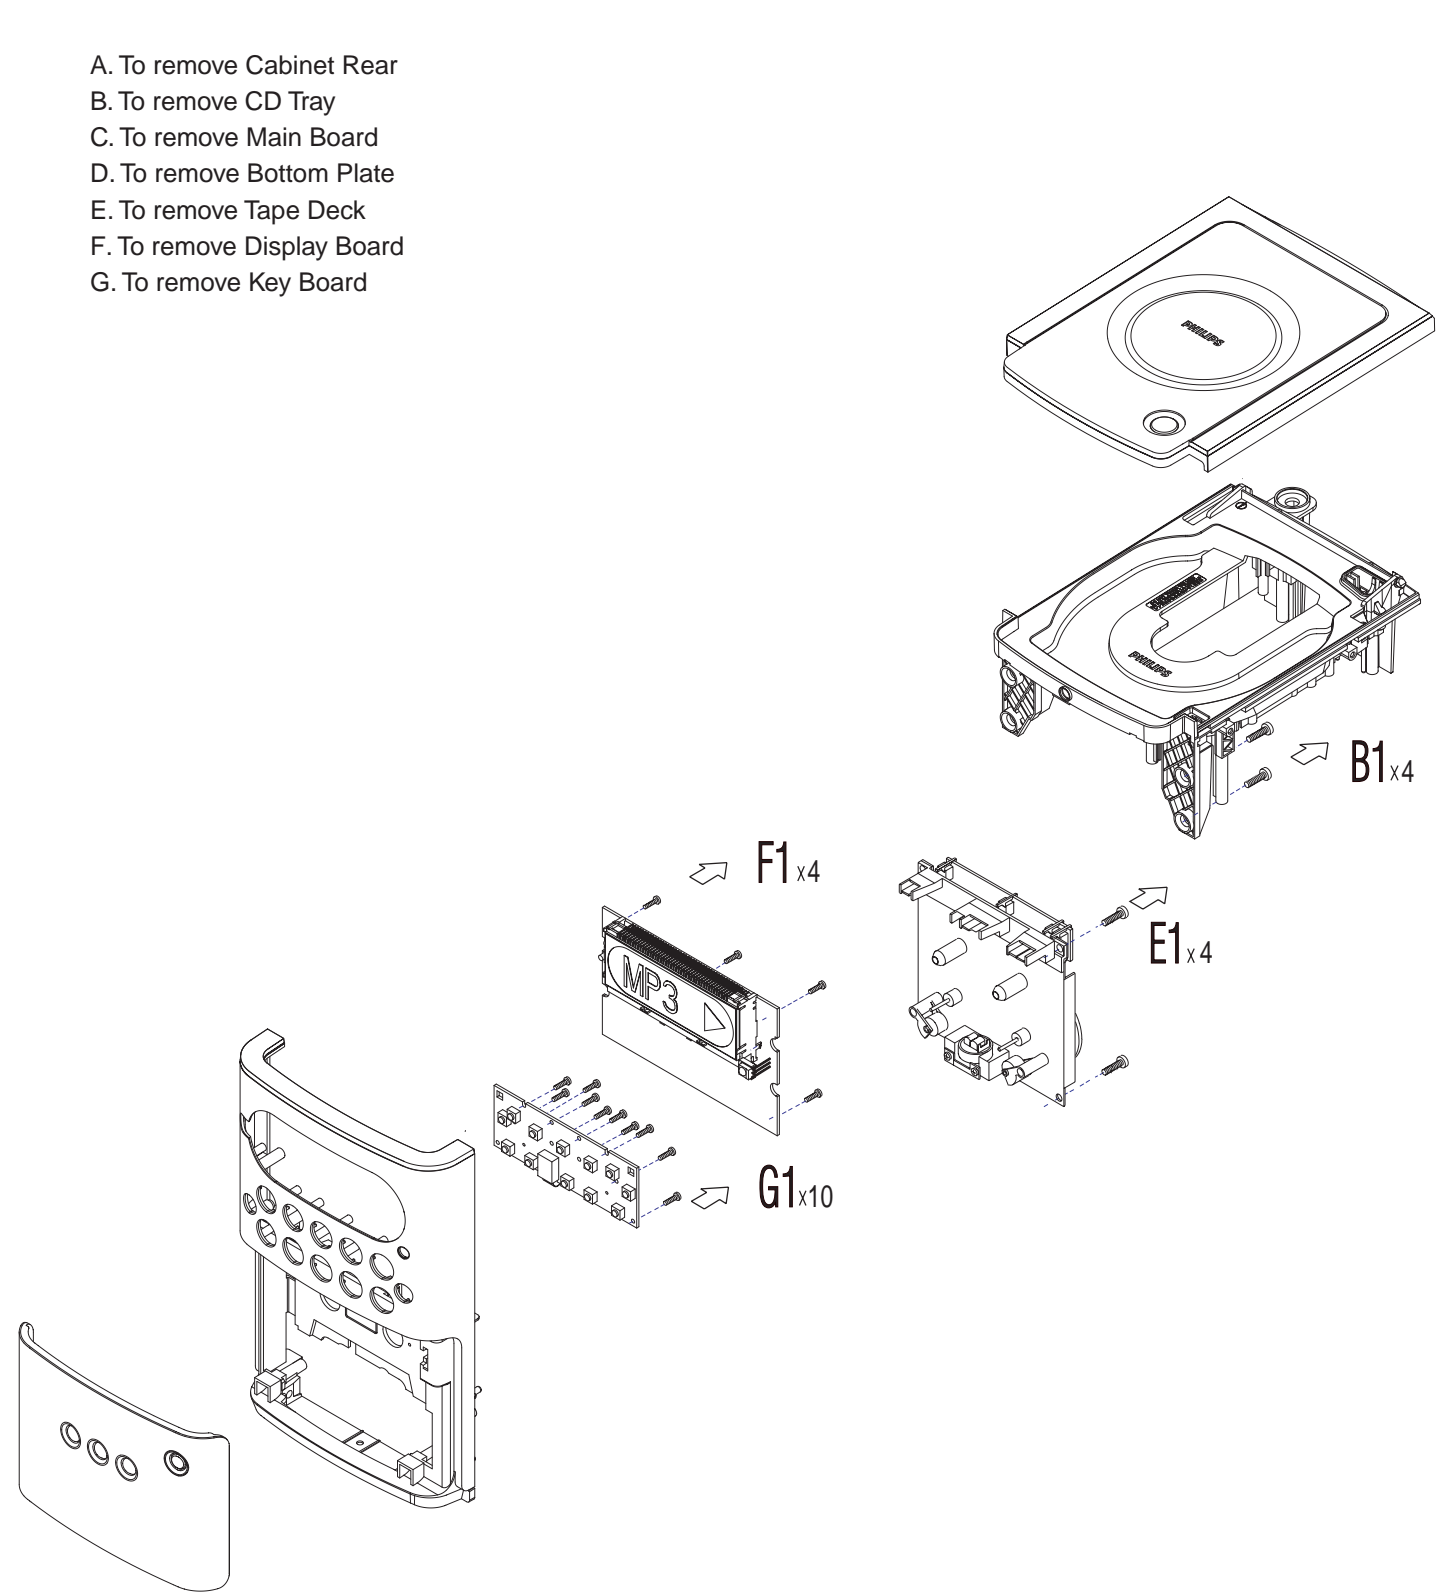

SET BLOCK DIAGRAM

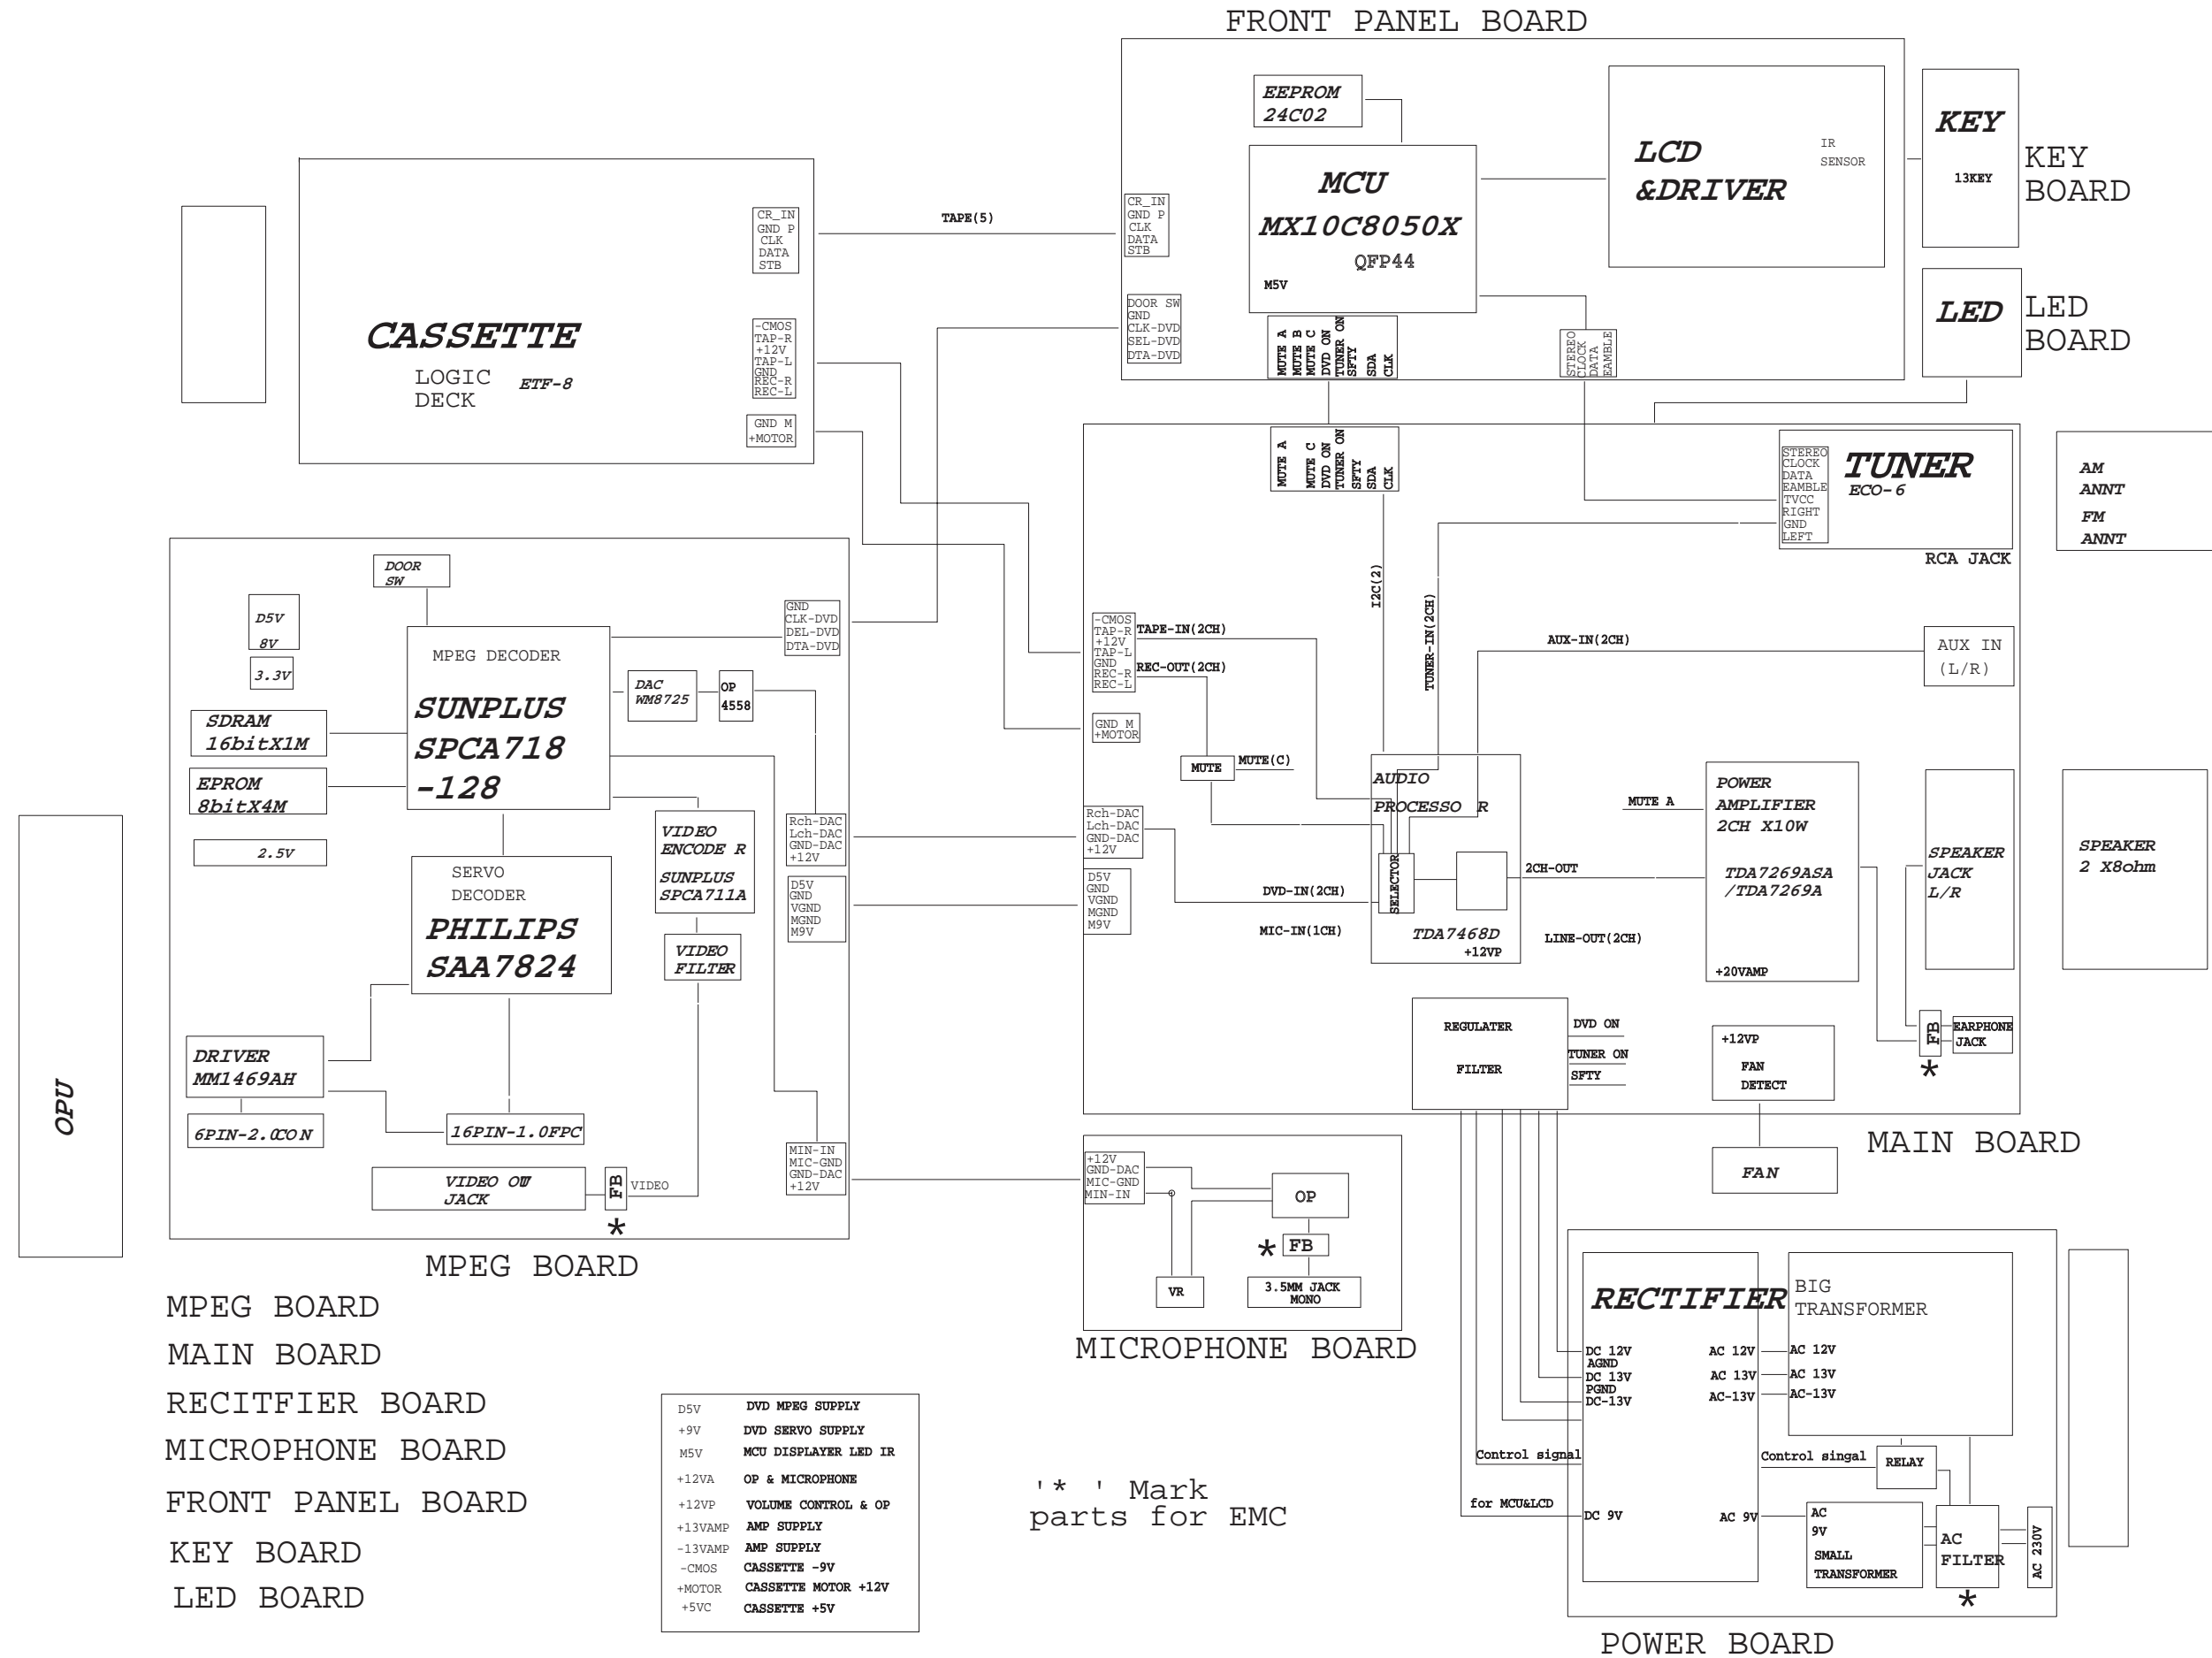

MPEG BOARD

MAIN BOARD

RECITFIER BOARD

MICROPHONE BOARD


FRONT PANEL BOARD

KEY BOARD


LED BOARD

POWER BOARD



SET WIRING DIAGRAM

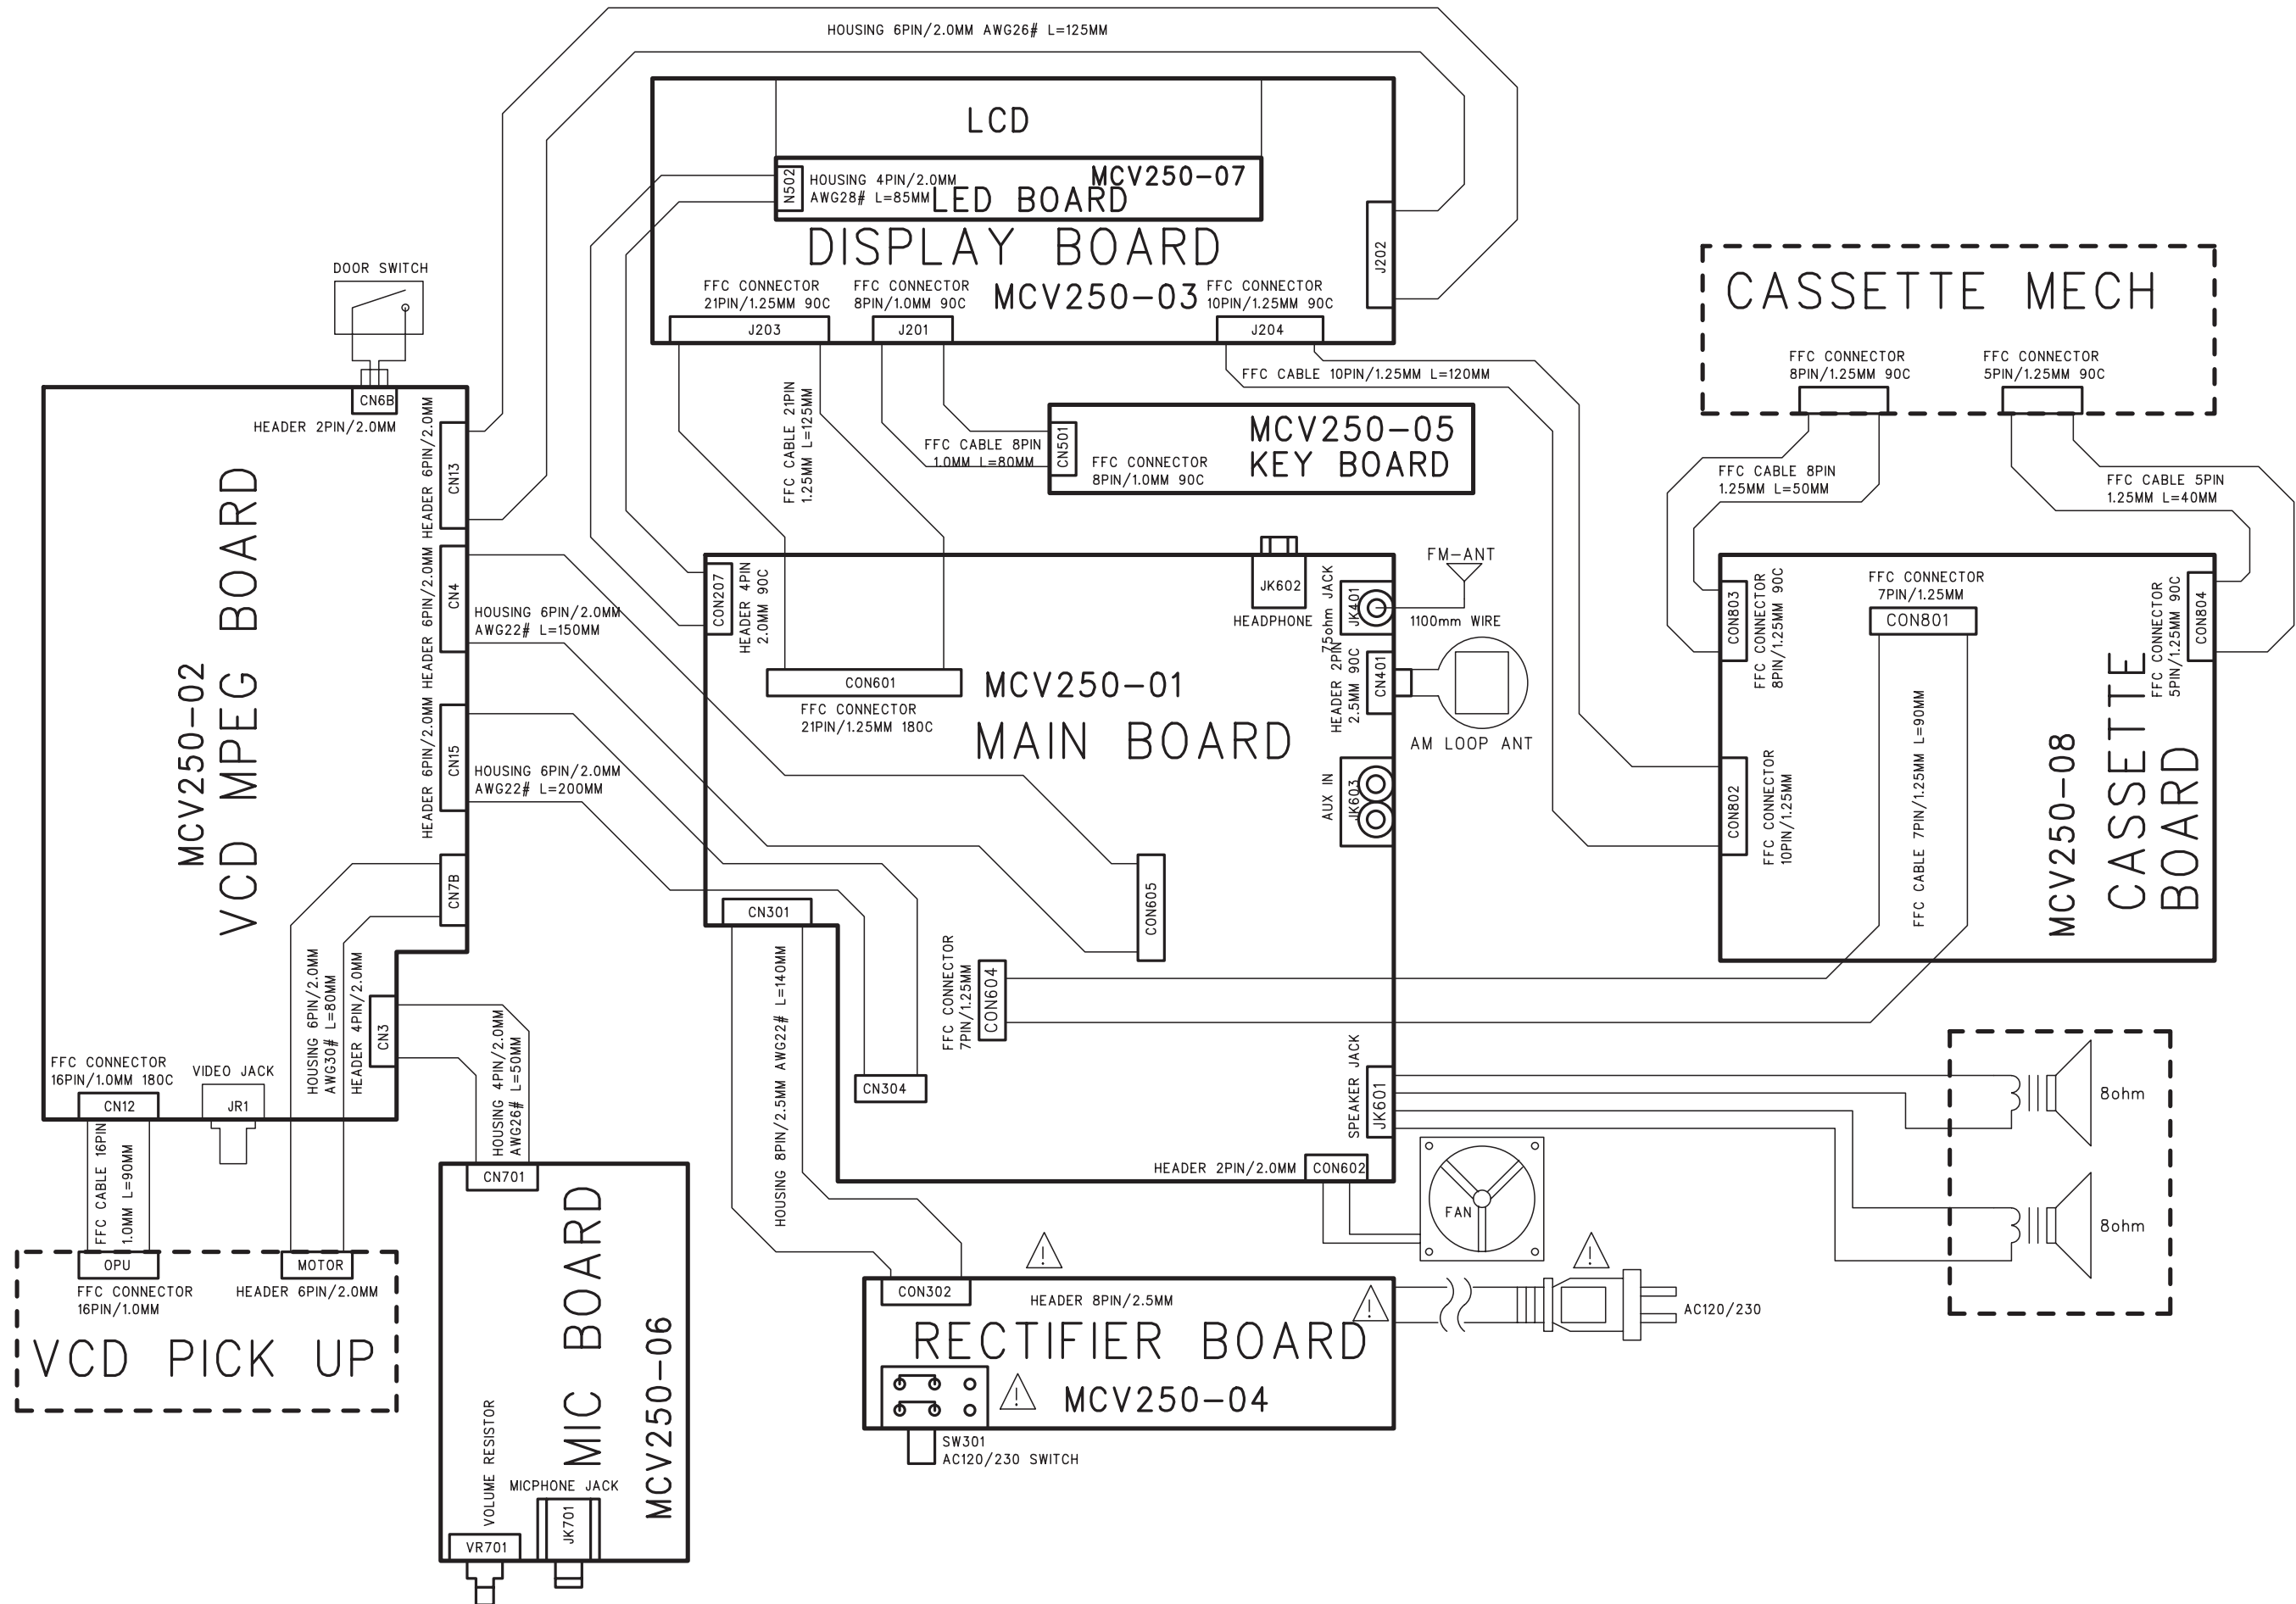


CIRCUIT DIAGRAM - DISPLAY BOARD

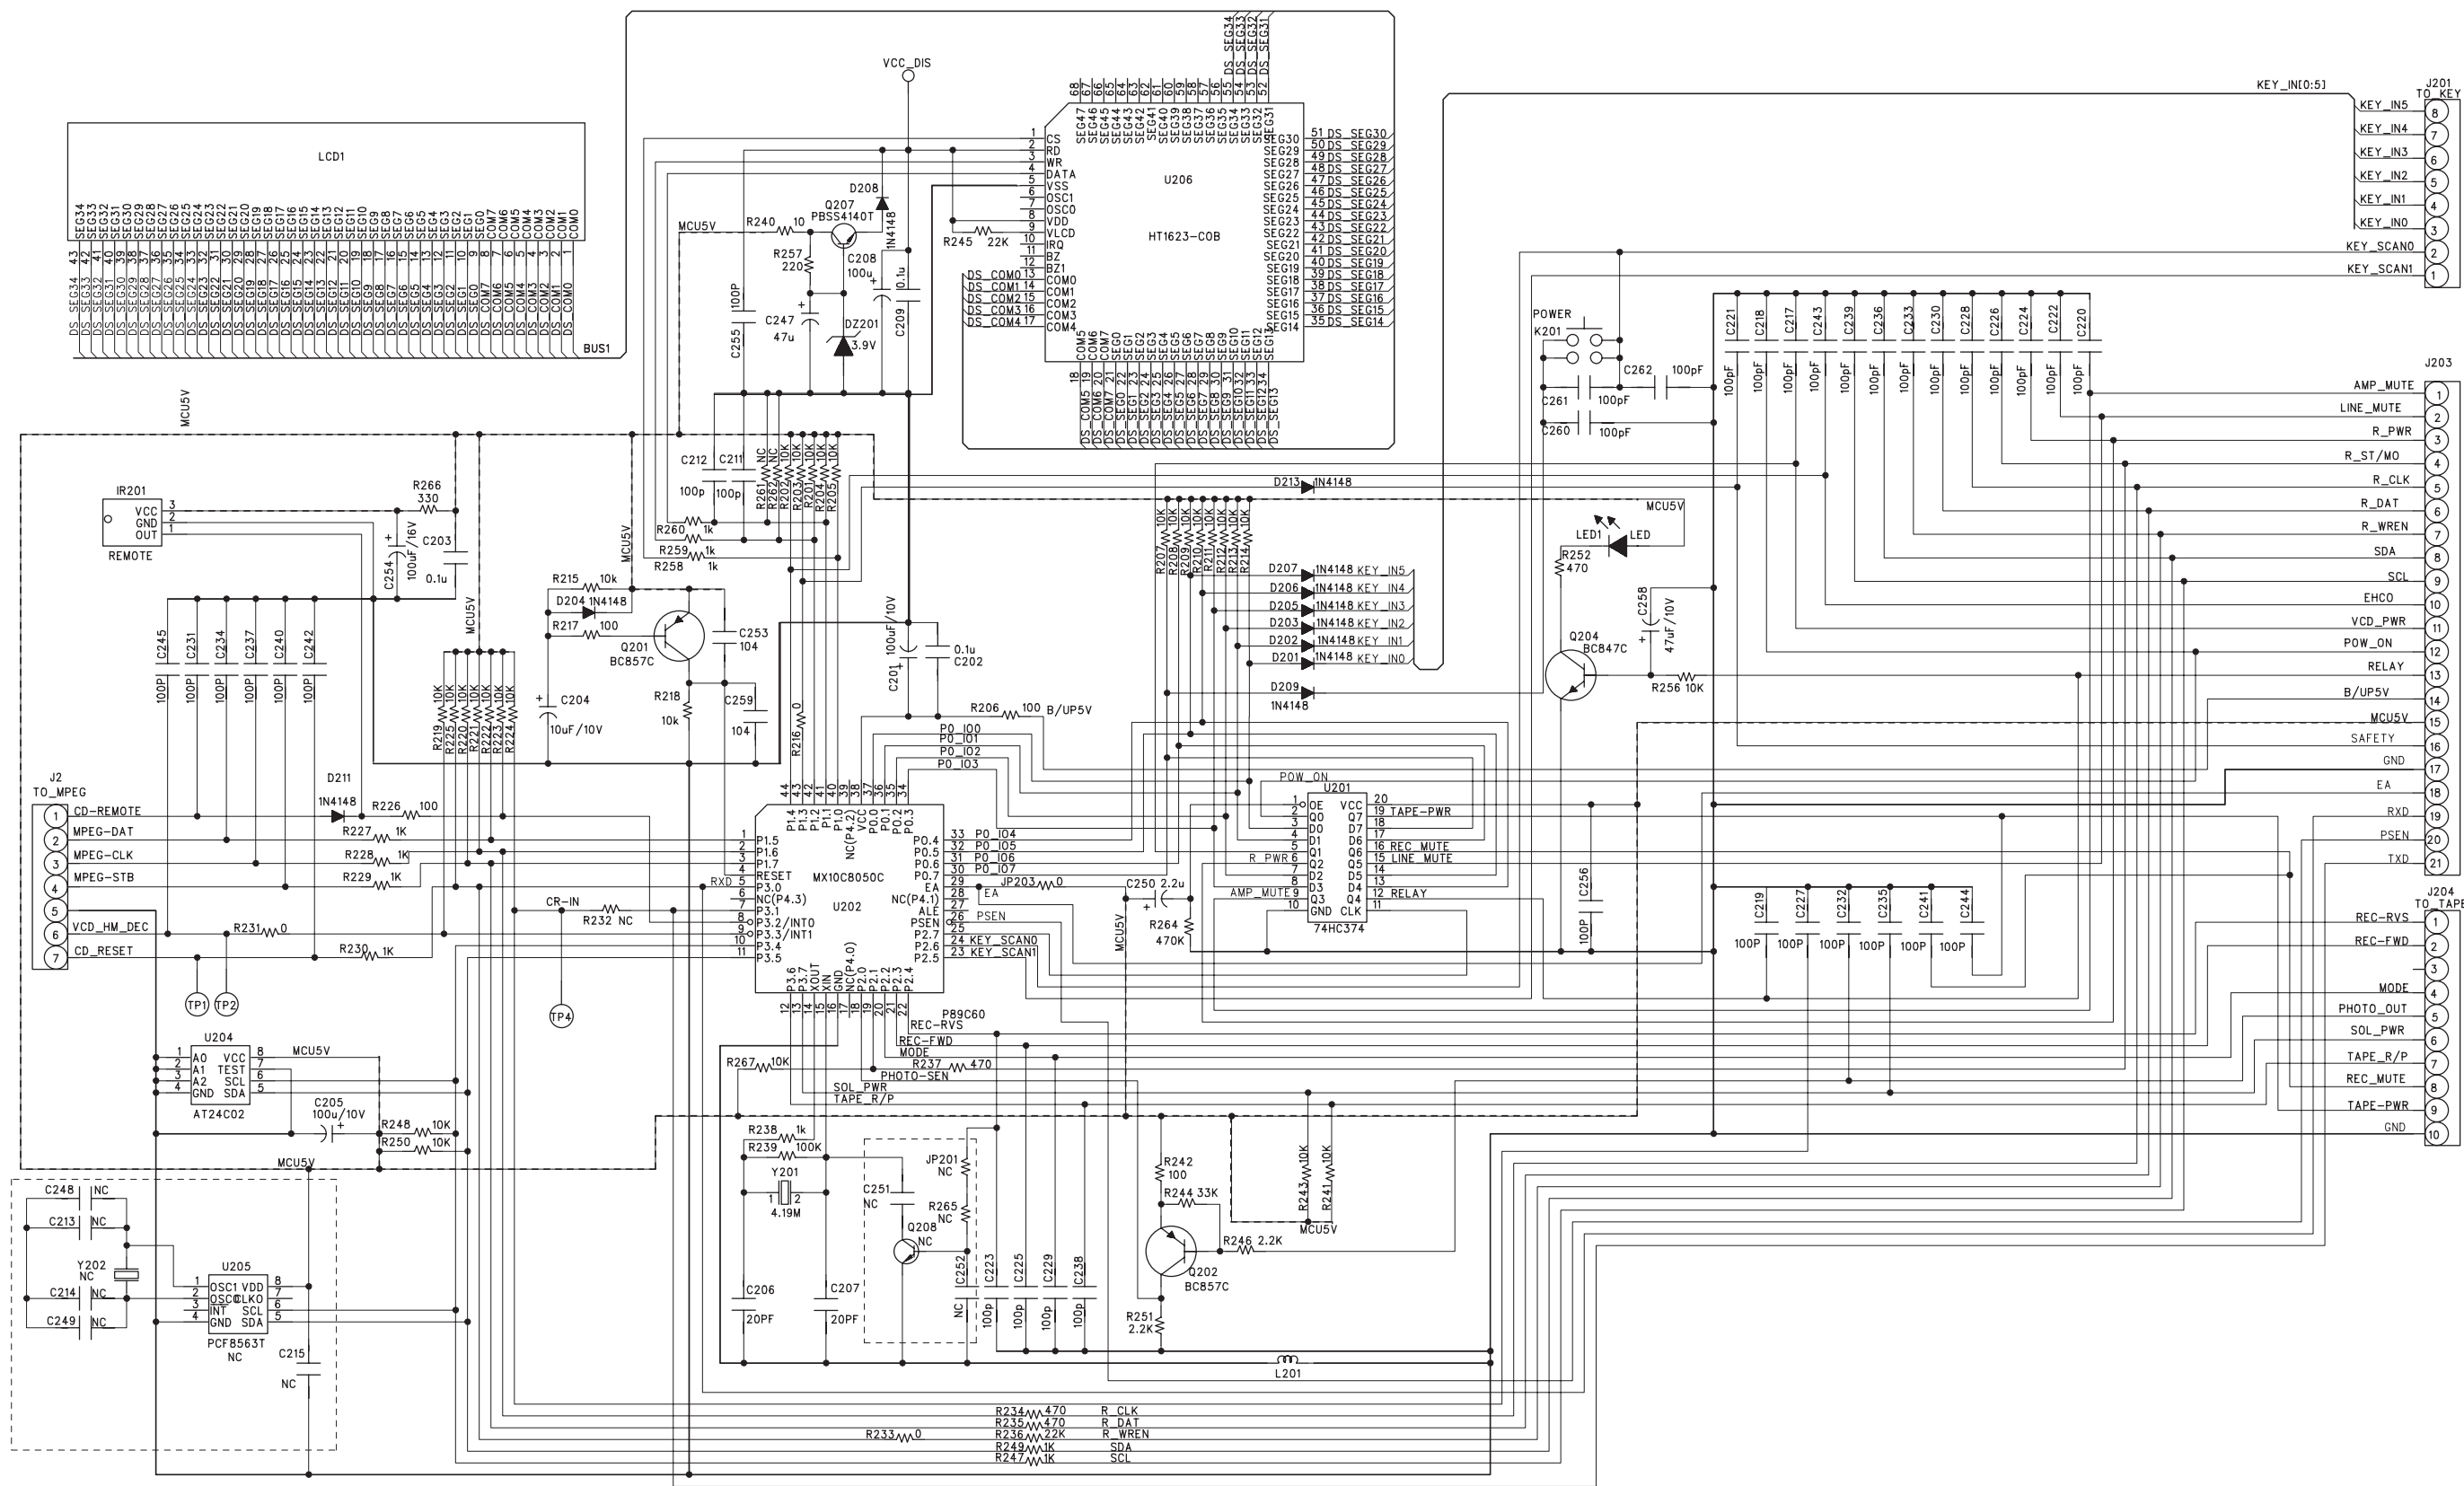


LAYOUT DIAGRAM - DISPLAY BOARD

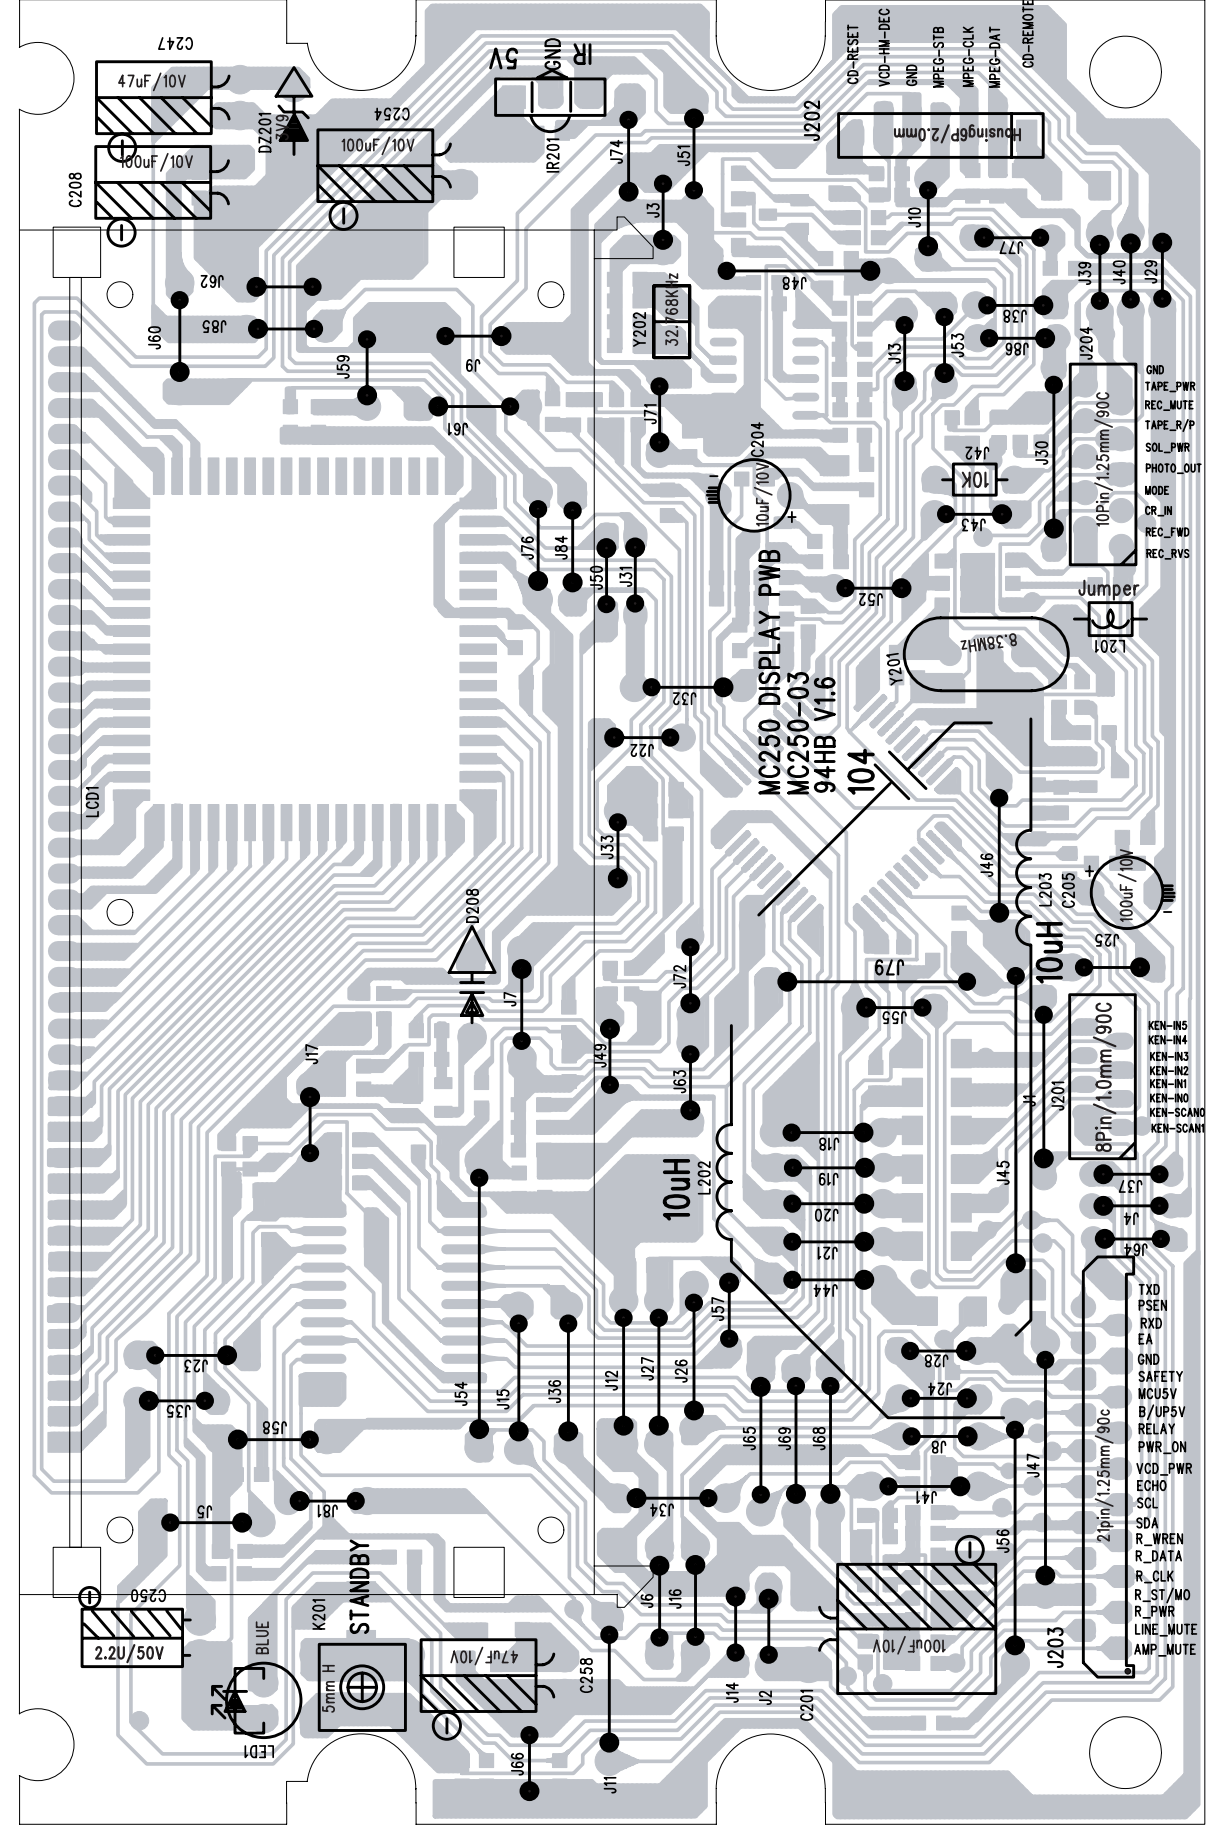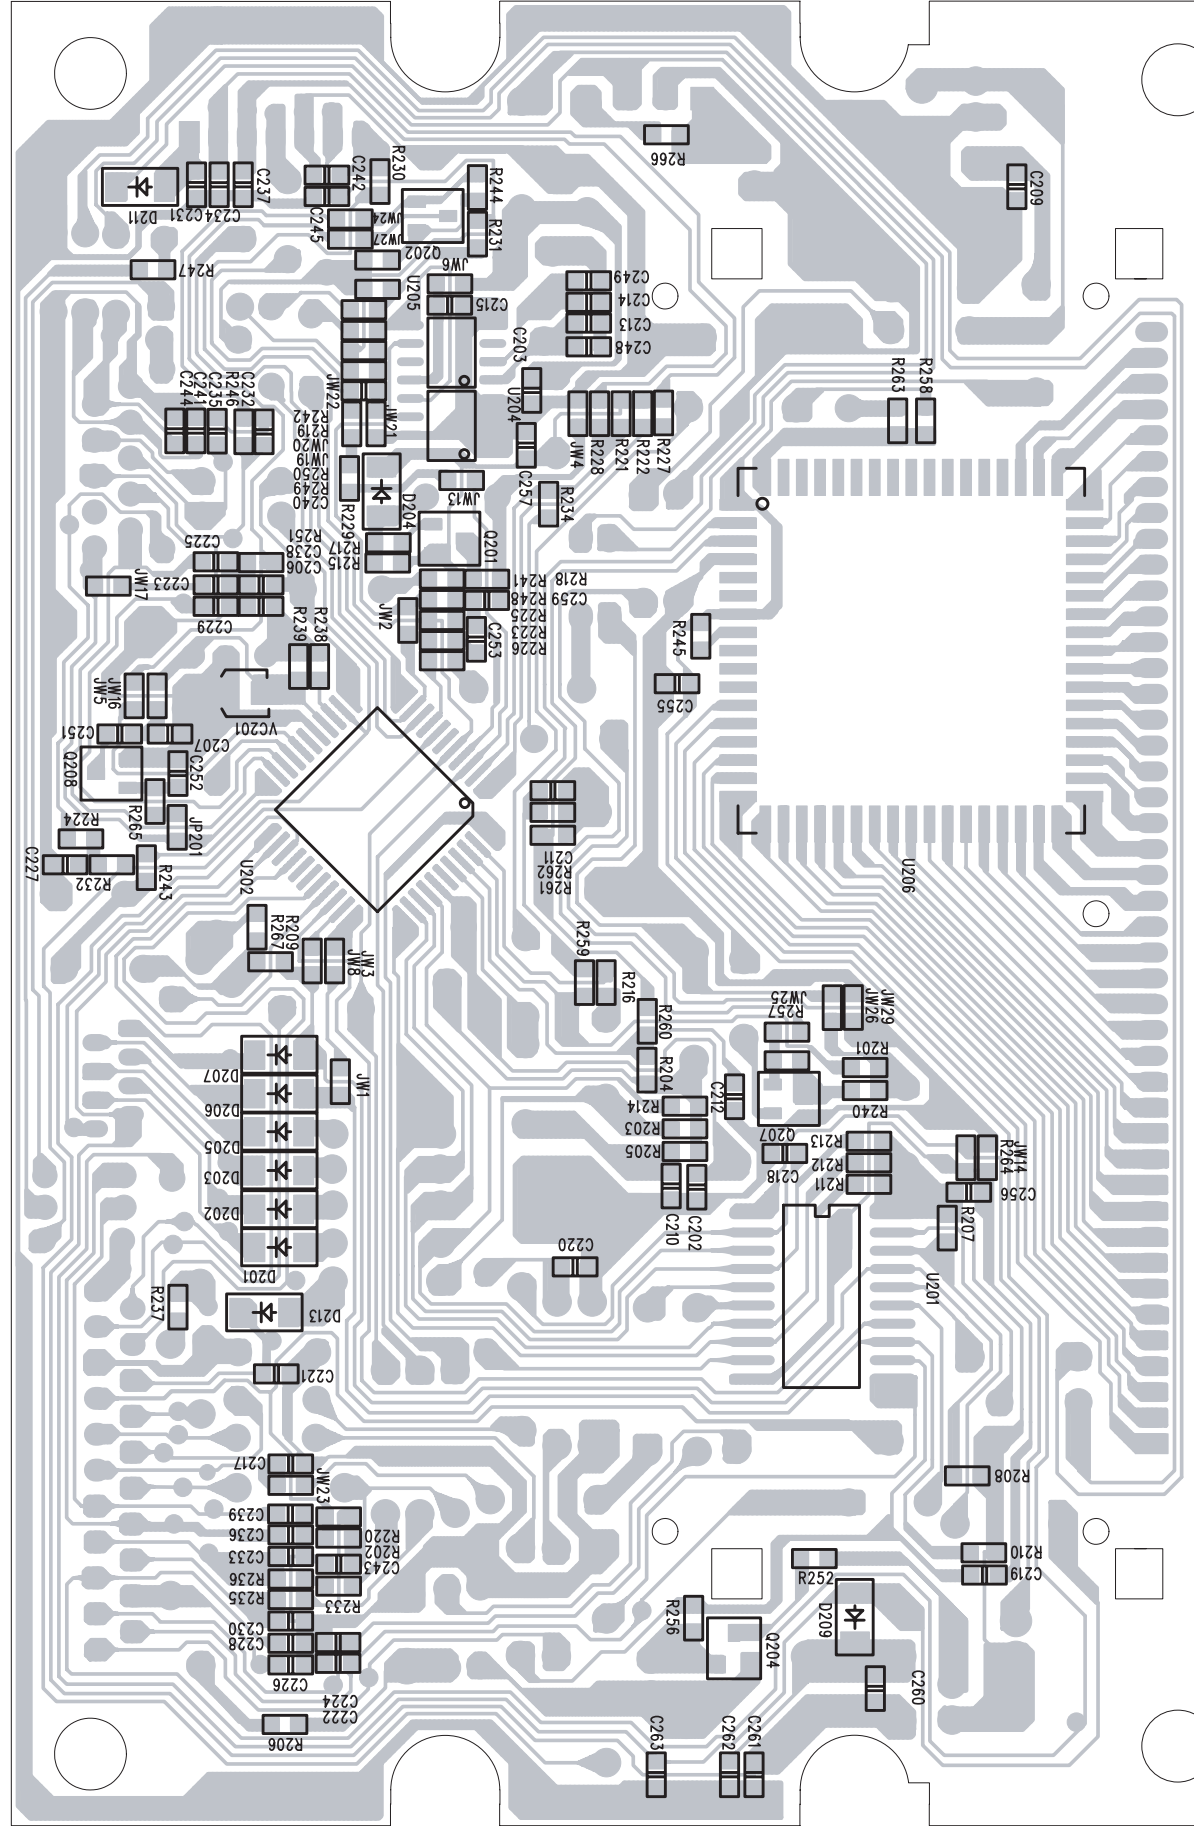


CIRCUIT DIAGRAM - KEY BOARD

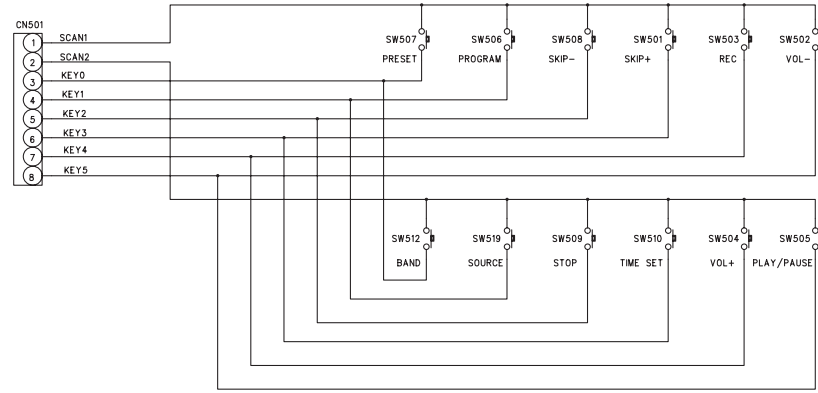


LAYOUT DIAGRAM - KEY BOARD

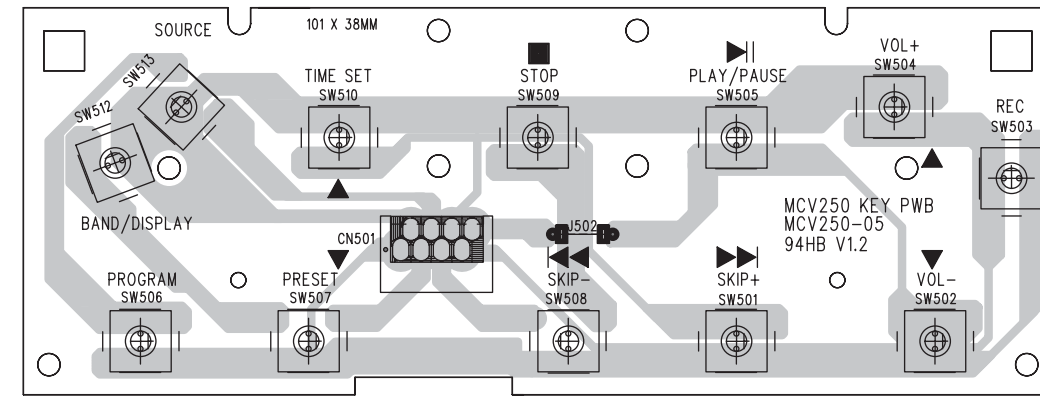


CIRCUIT DIAGRAM - POWER BOARD

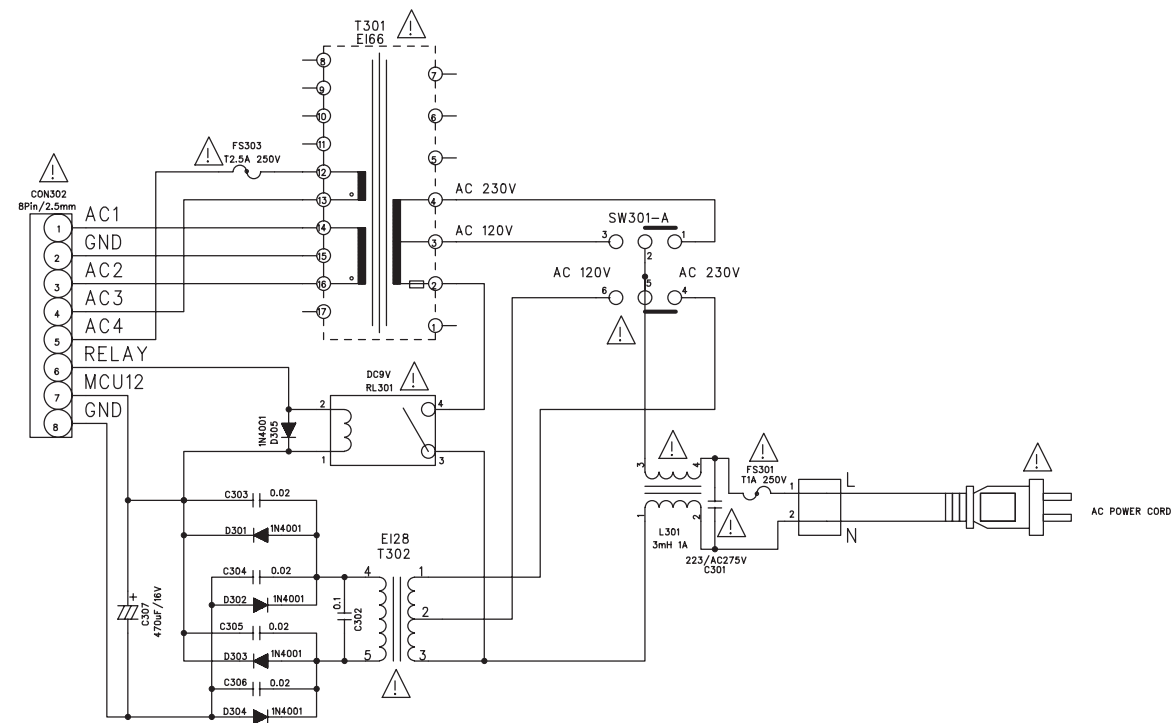


LAYOUT DIAGRAM - POWER BOARD

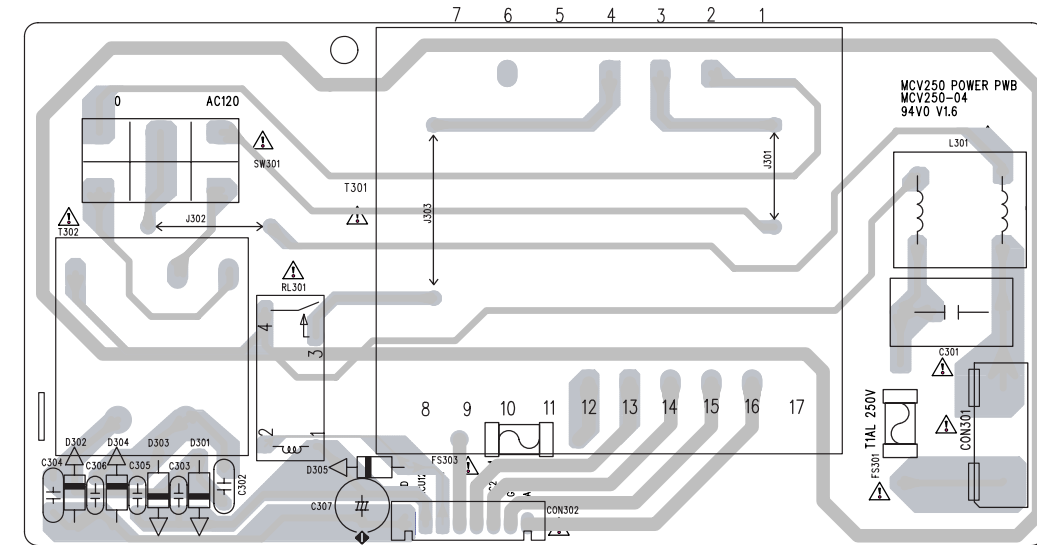


CIRCUIT DIAGRAM - MICROPHONE BOARD

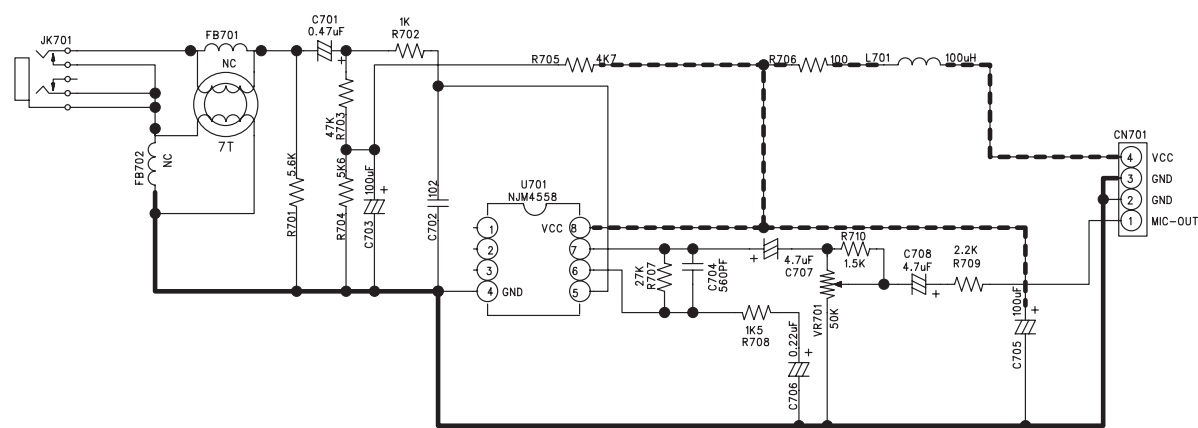


LAYOUT DIAGRAM - MICROPHONEBOARD

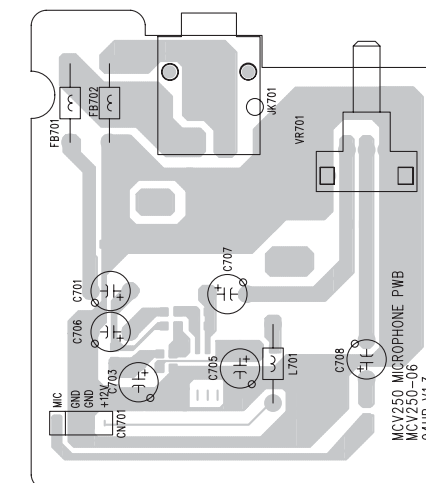



CIRCUIT DIAGRAM - MPEG BOARD

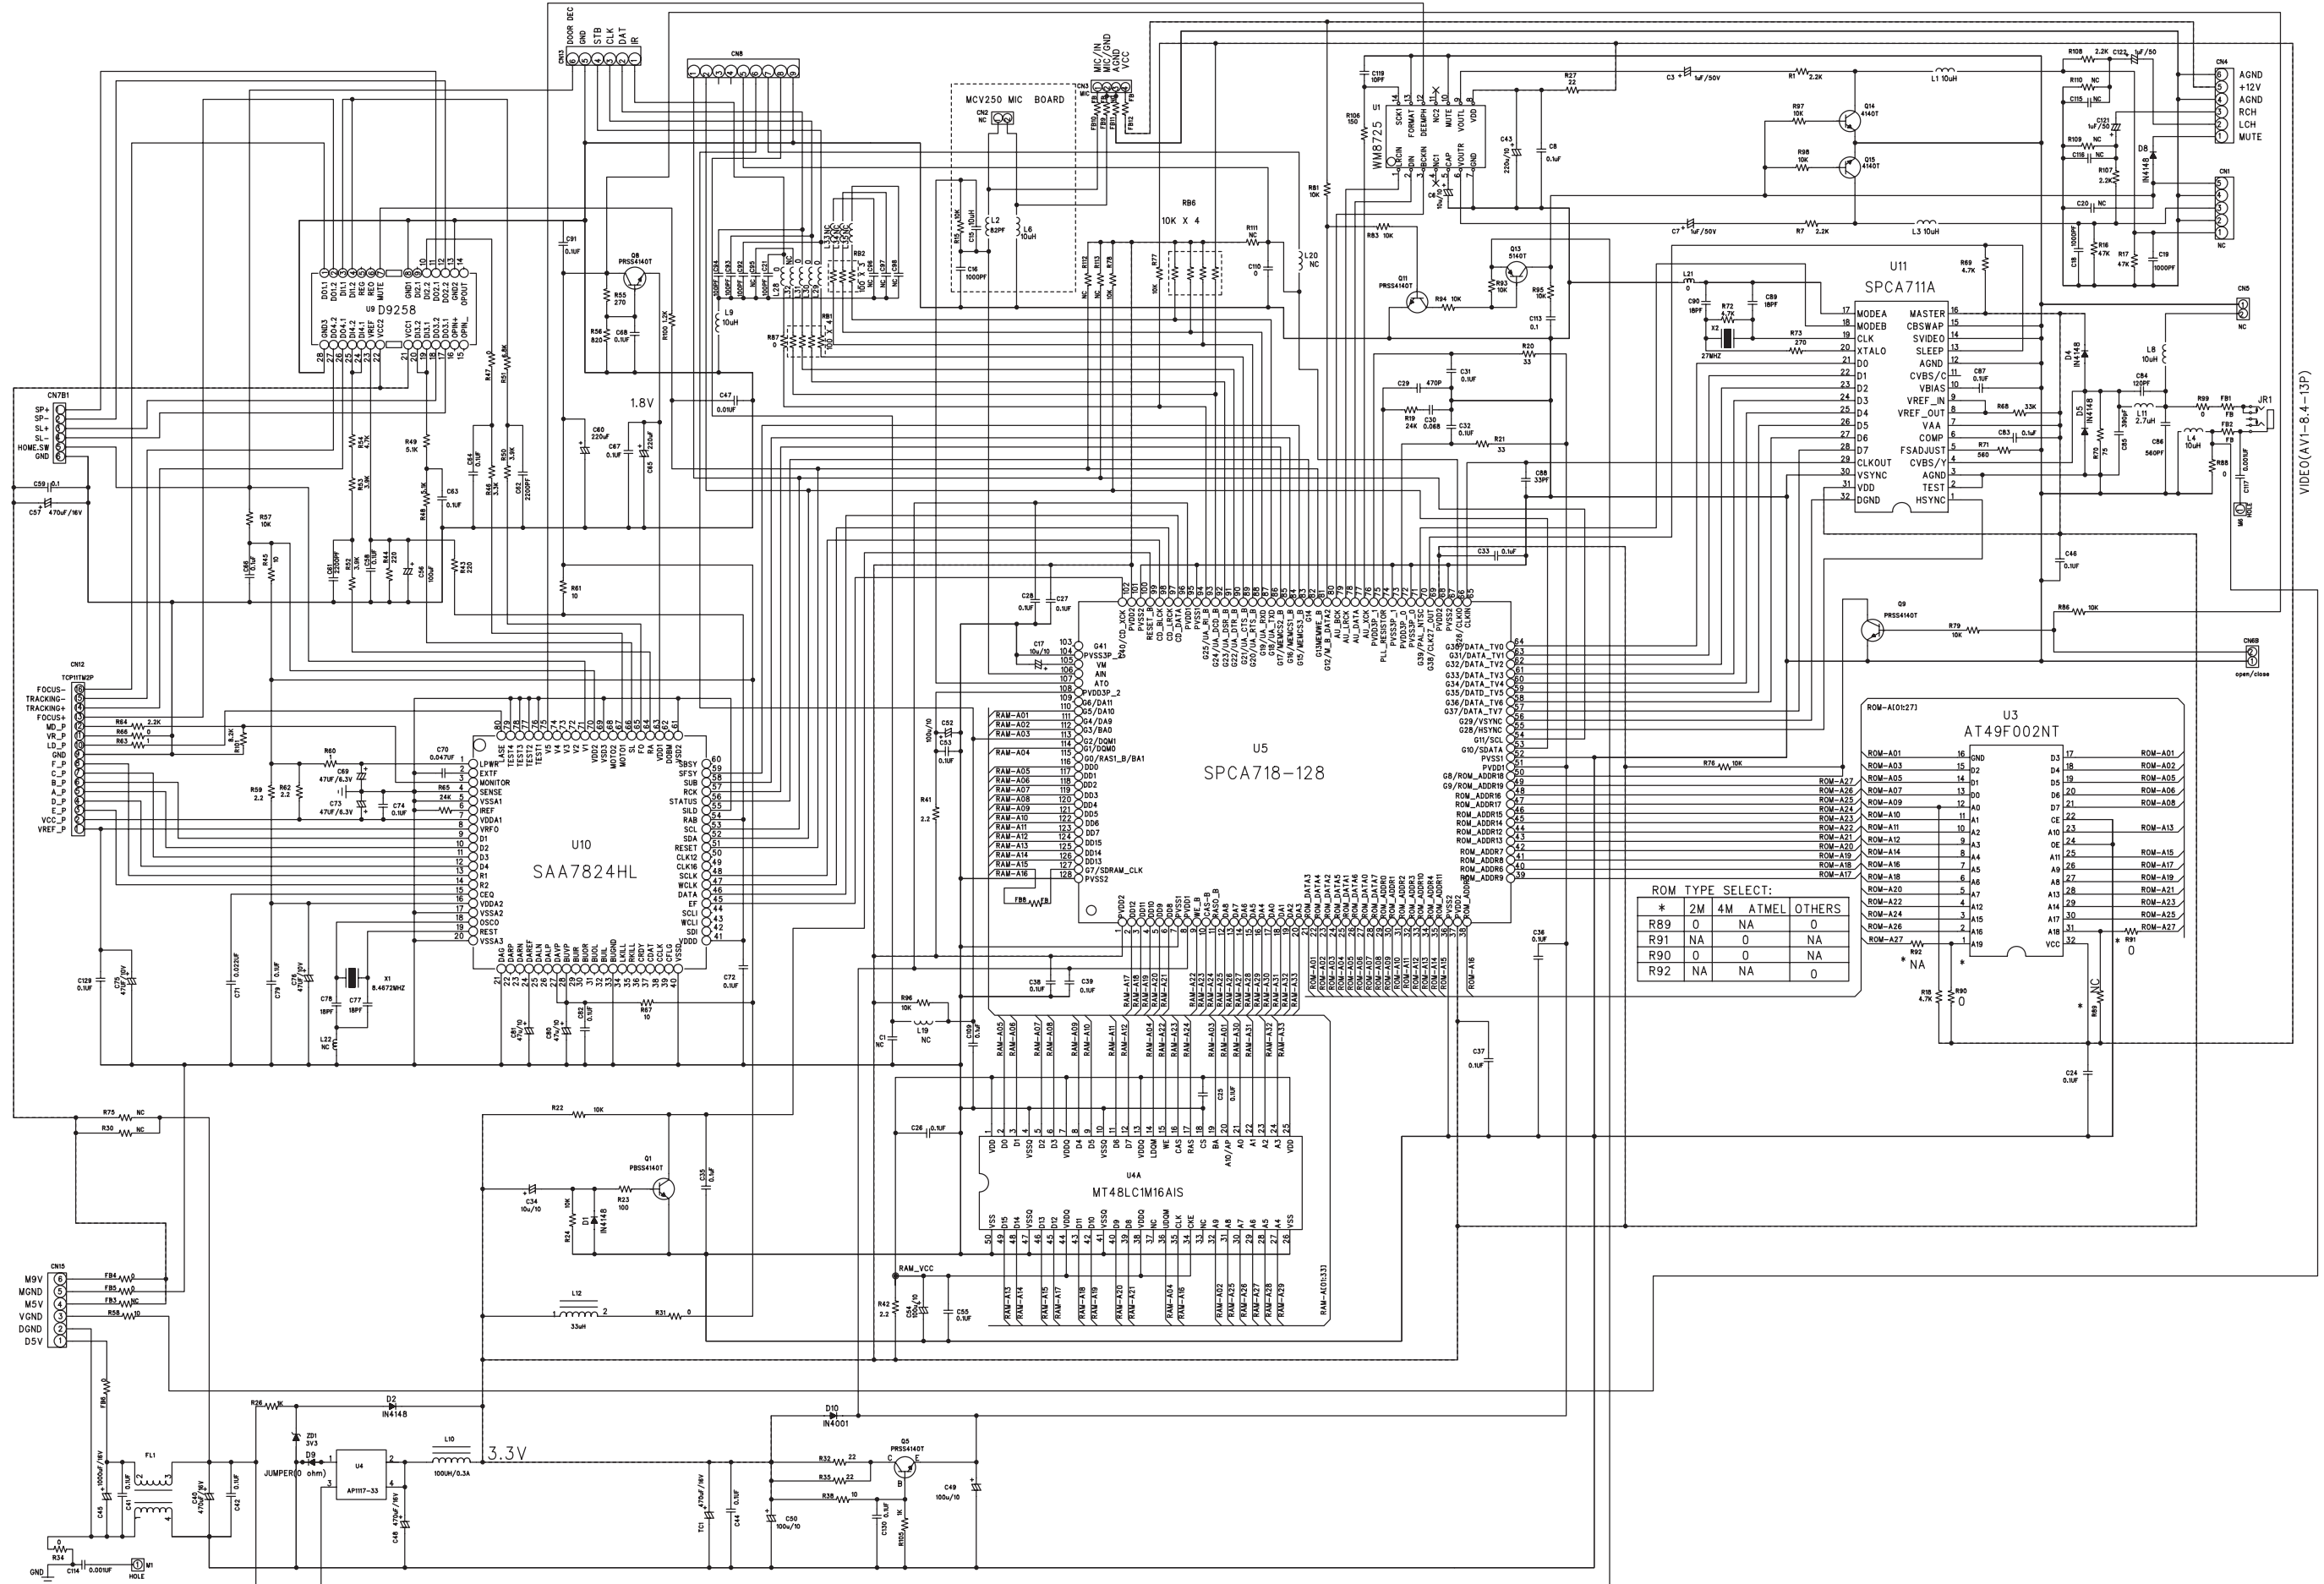


CIRCUIT DIAGRAM - TAPE BOARD

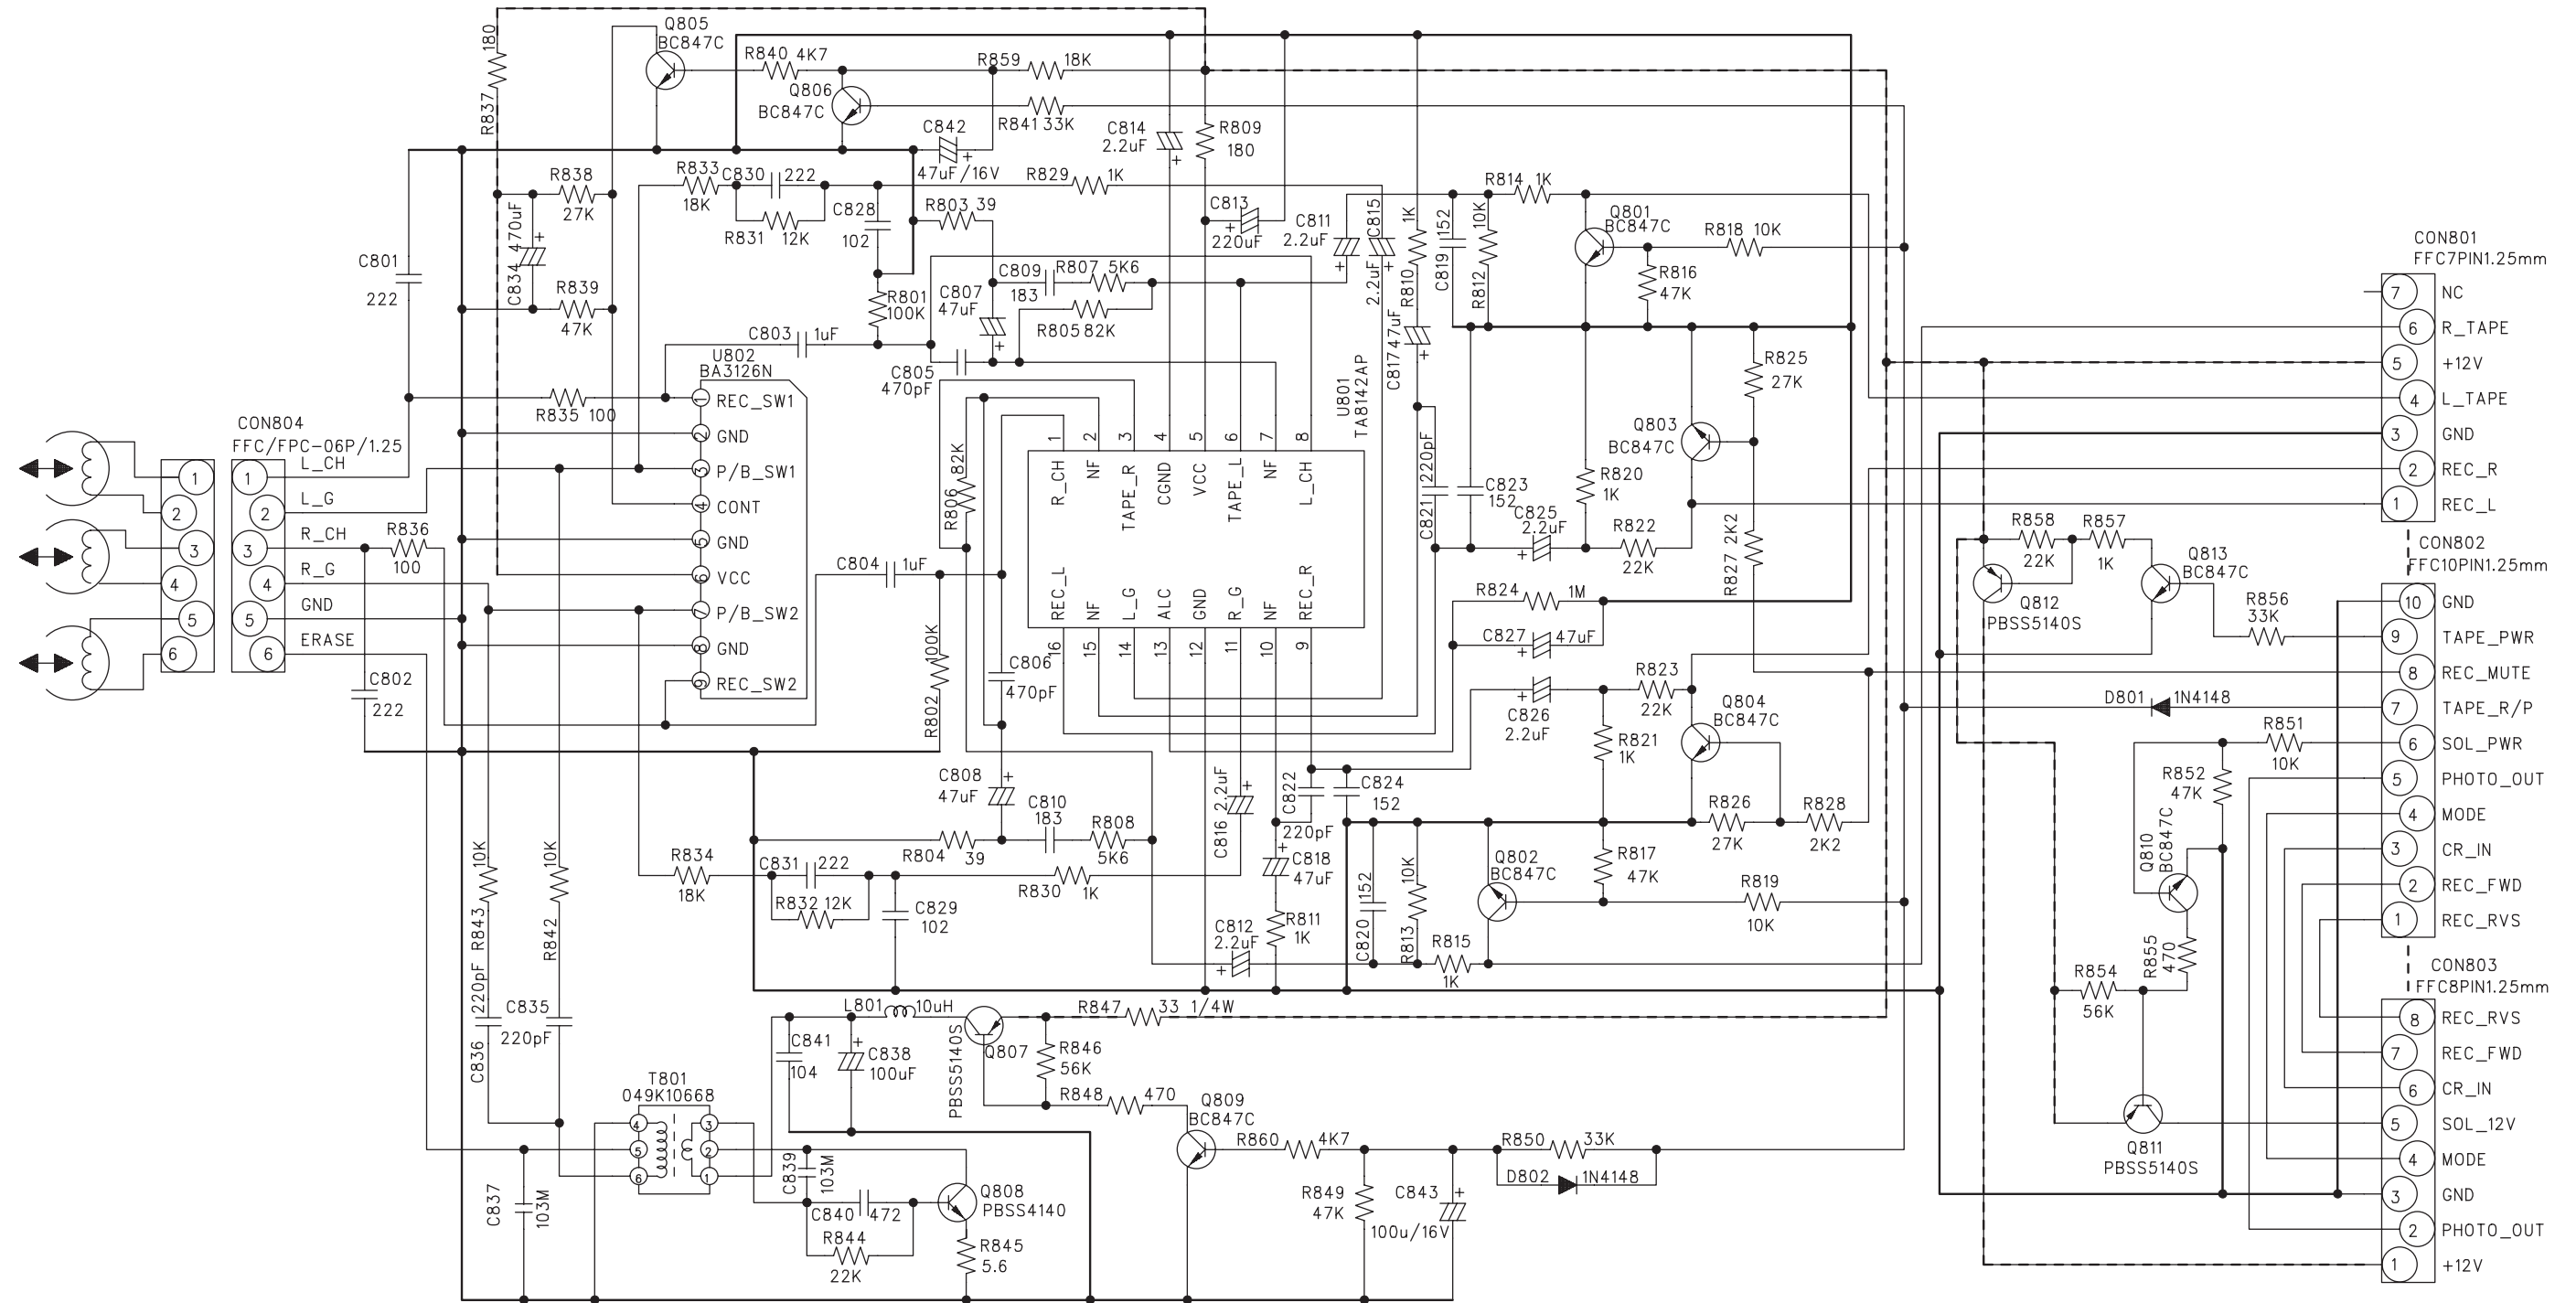


LAYOUT DIAGRAM - TAPE BOARD

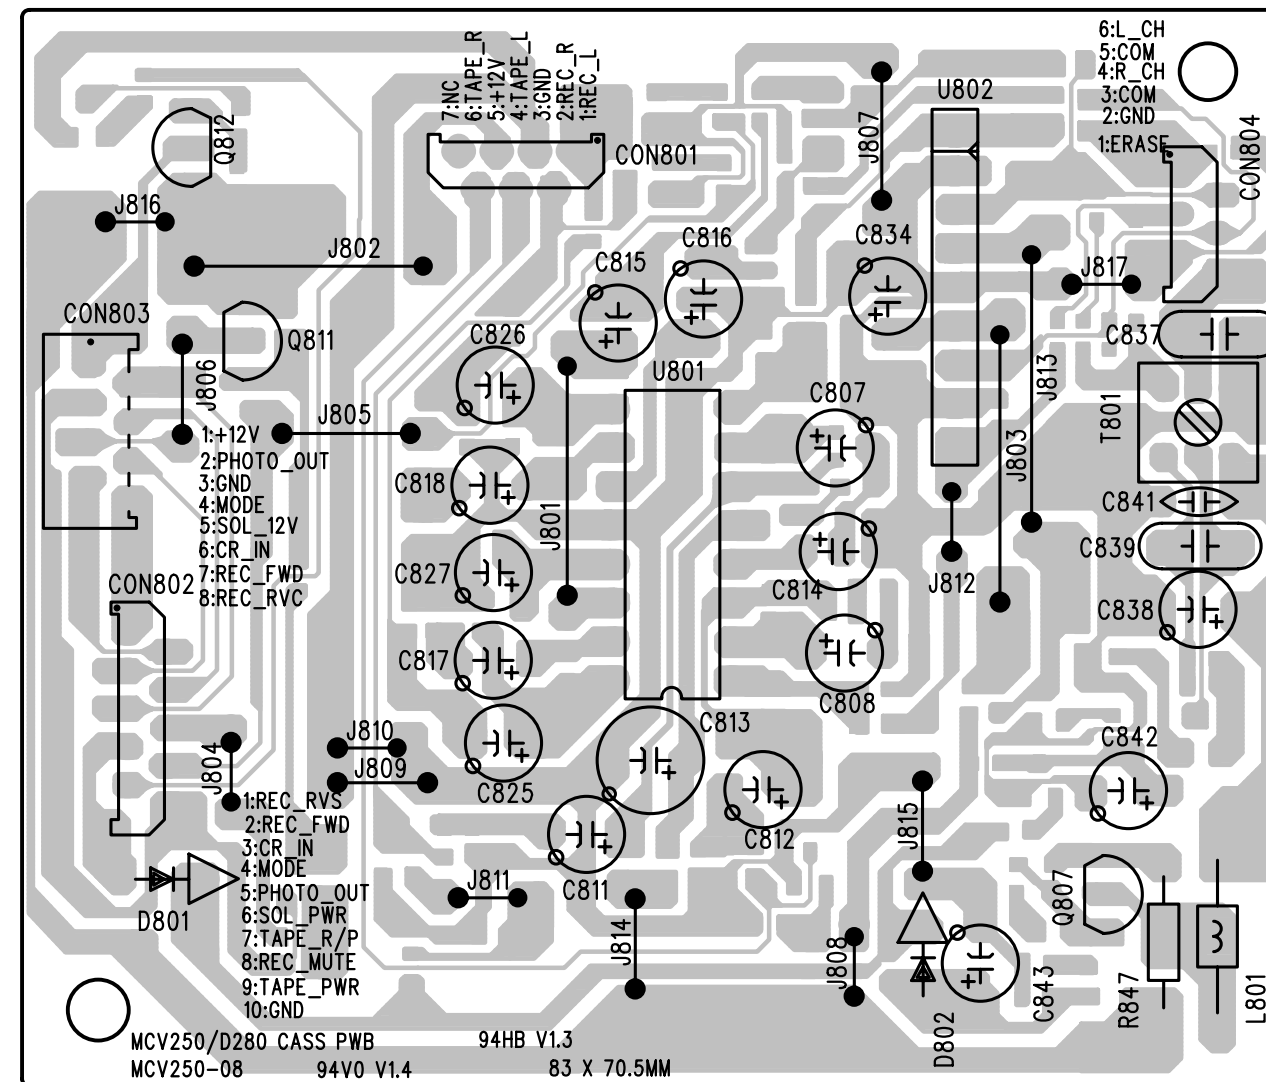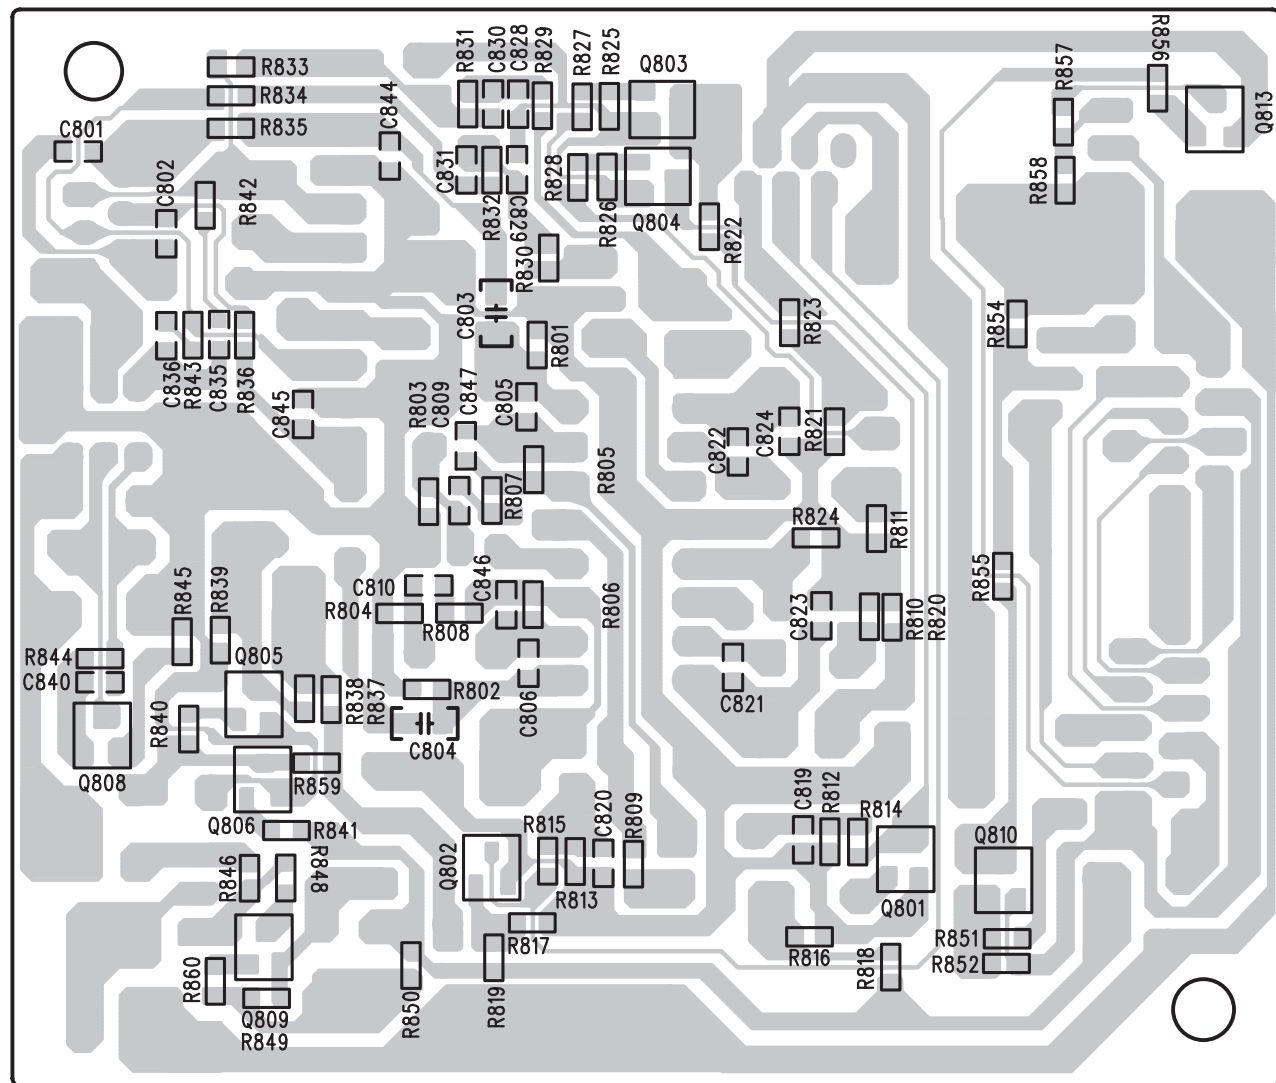

CIRCUIT DIAGRAM - COMBI BOARD PART 1

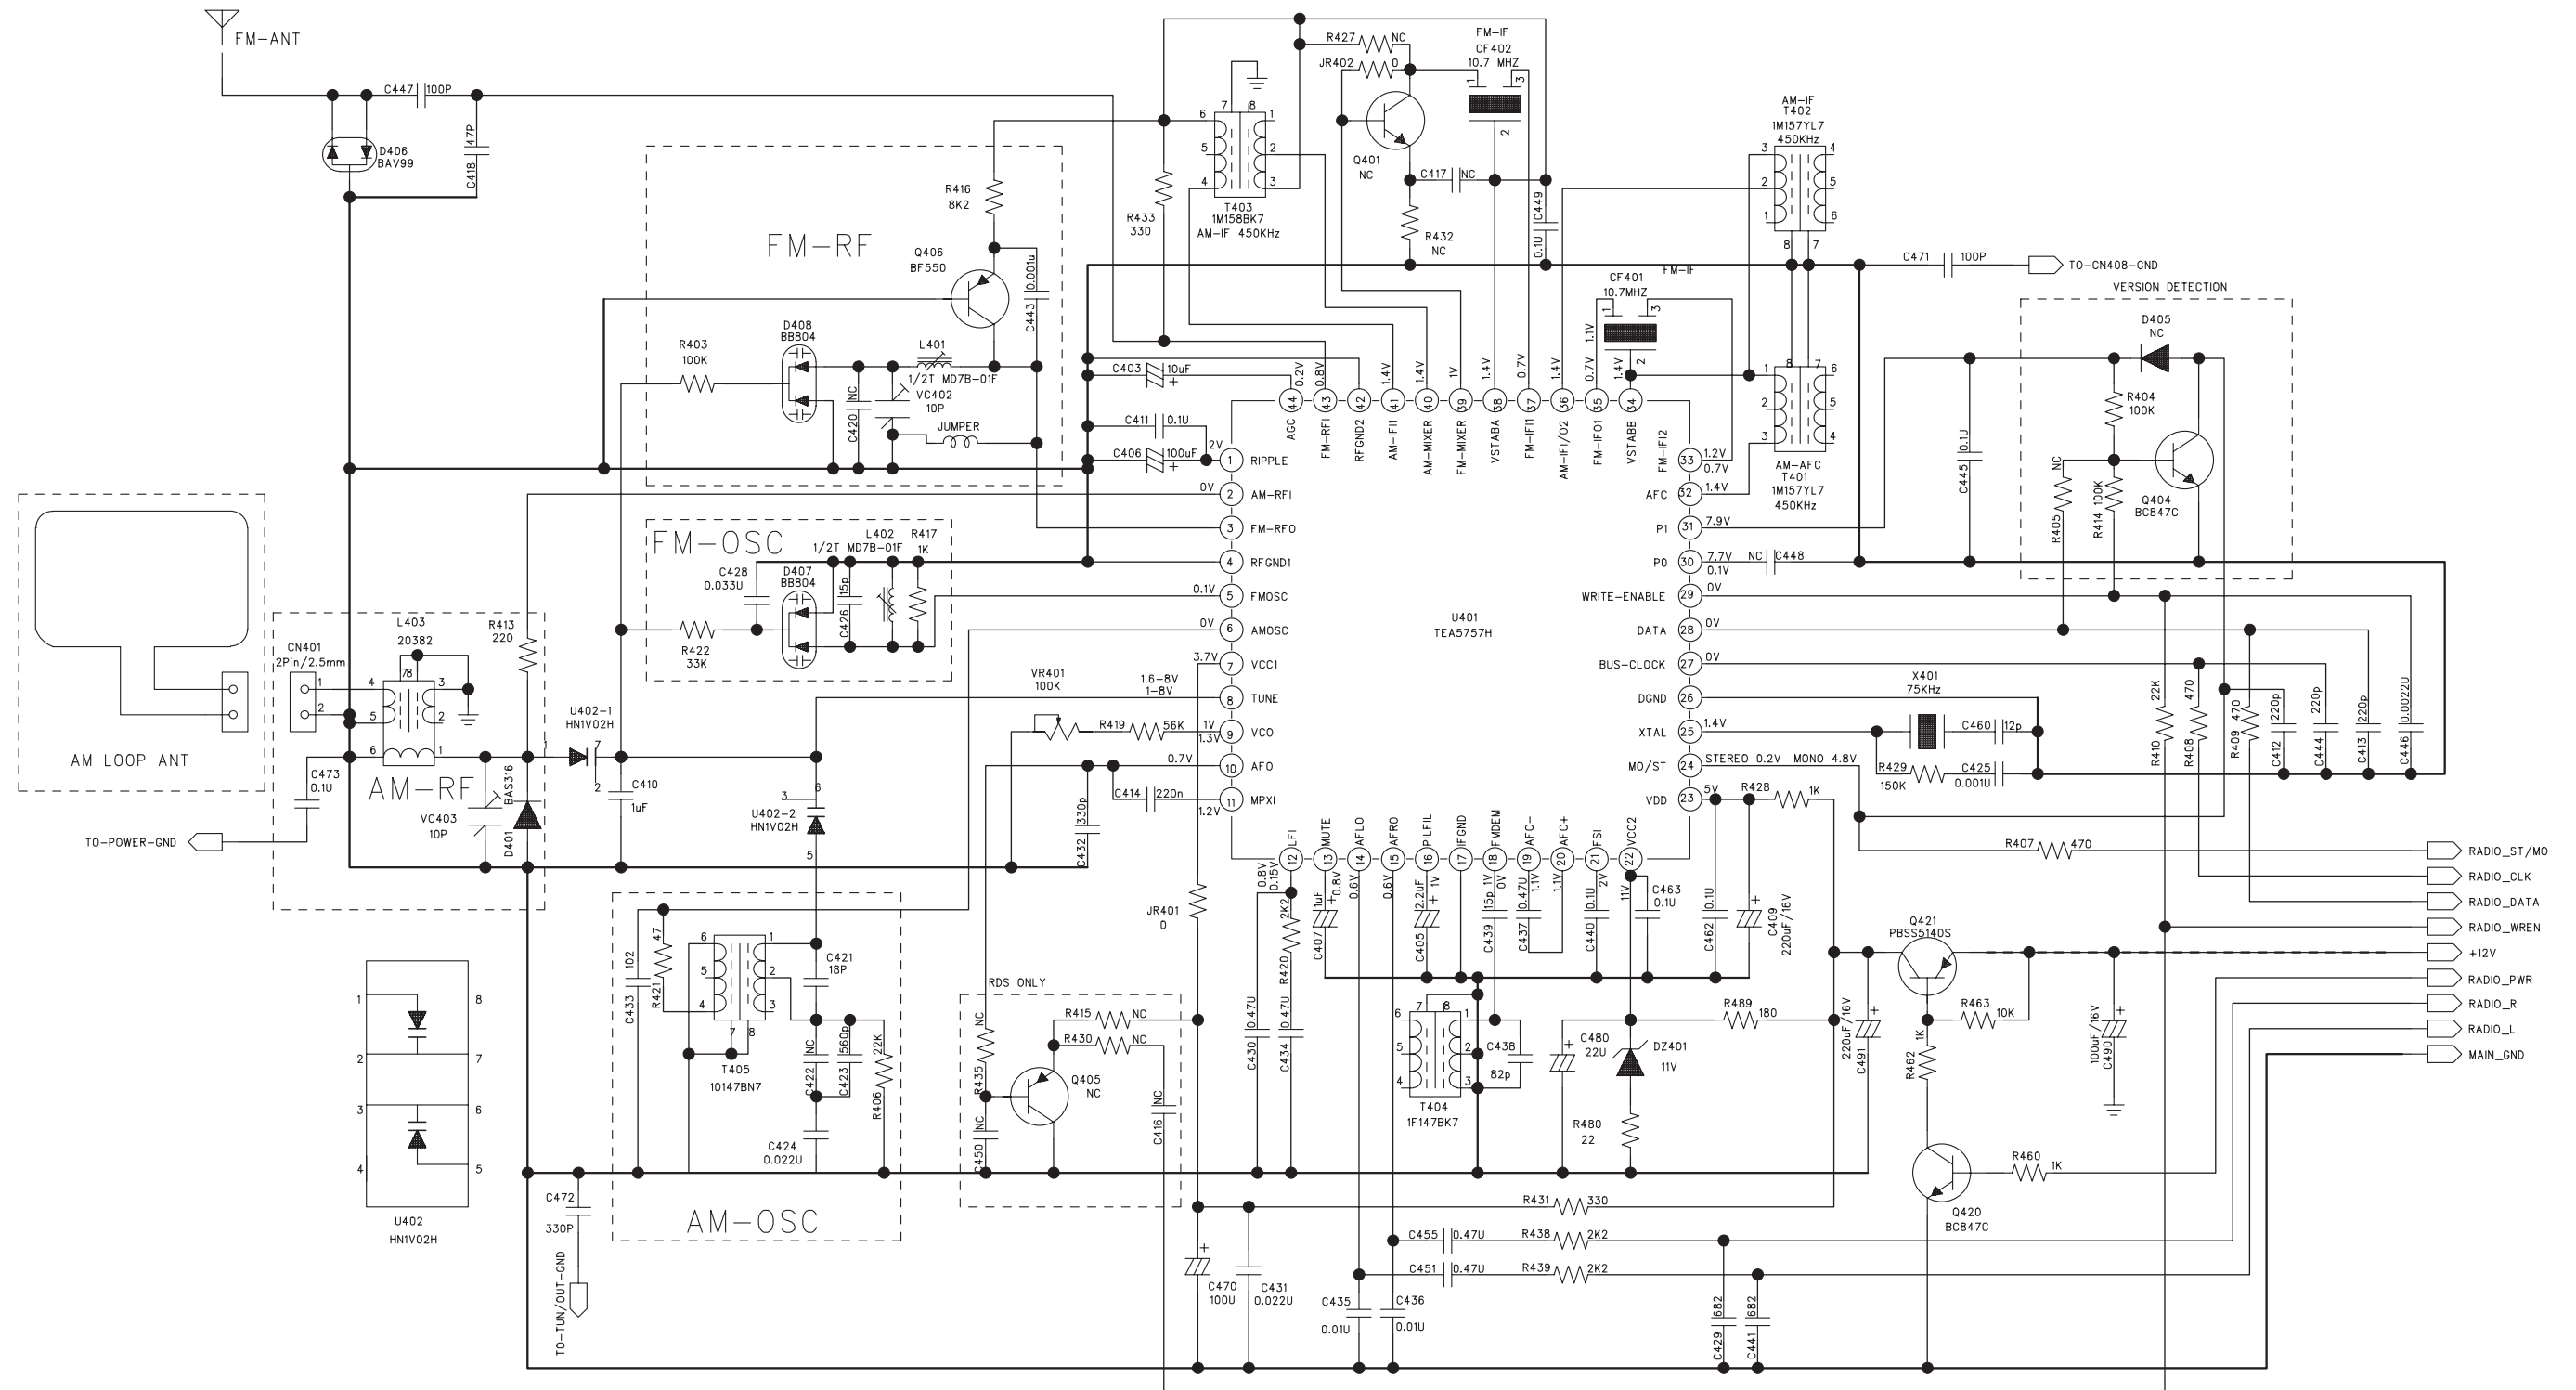


LAYOUT DIAGRAM - COMBI BOARD

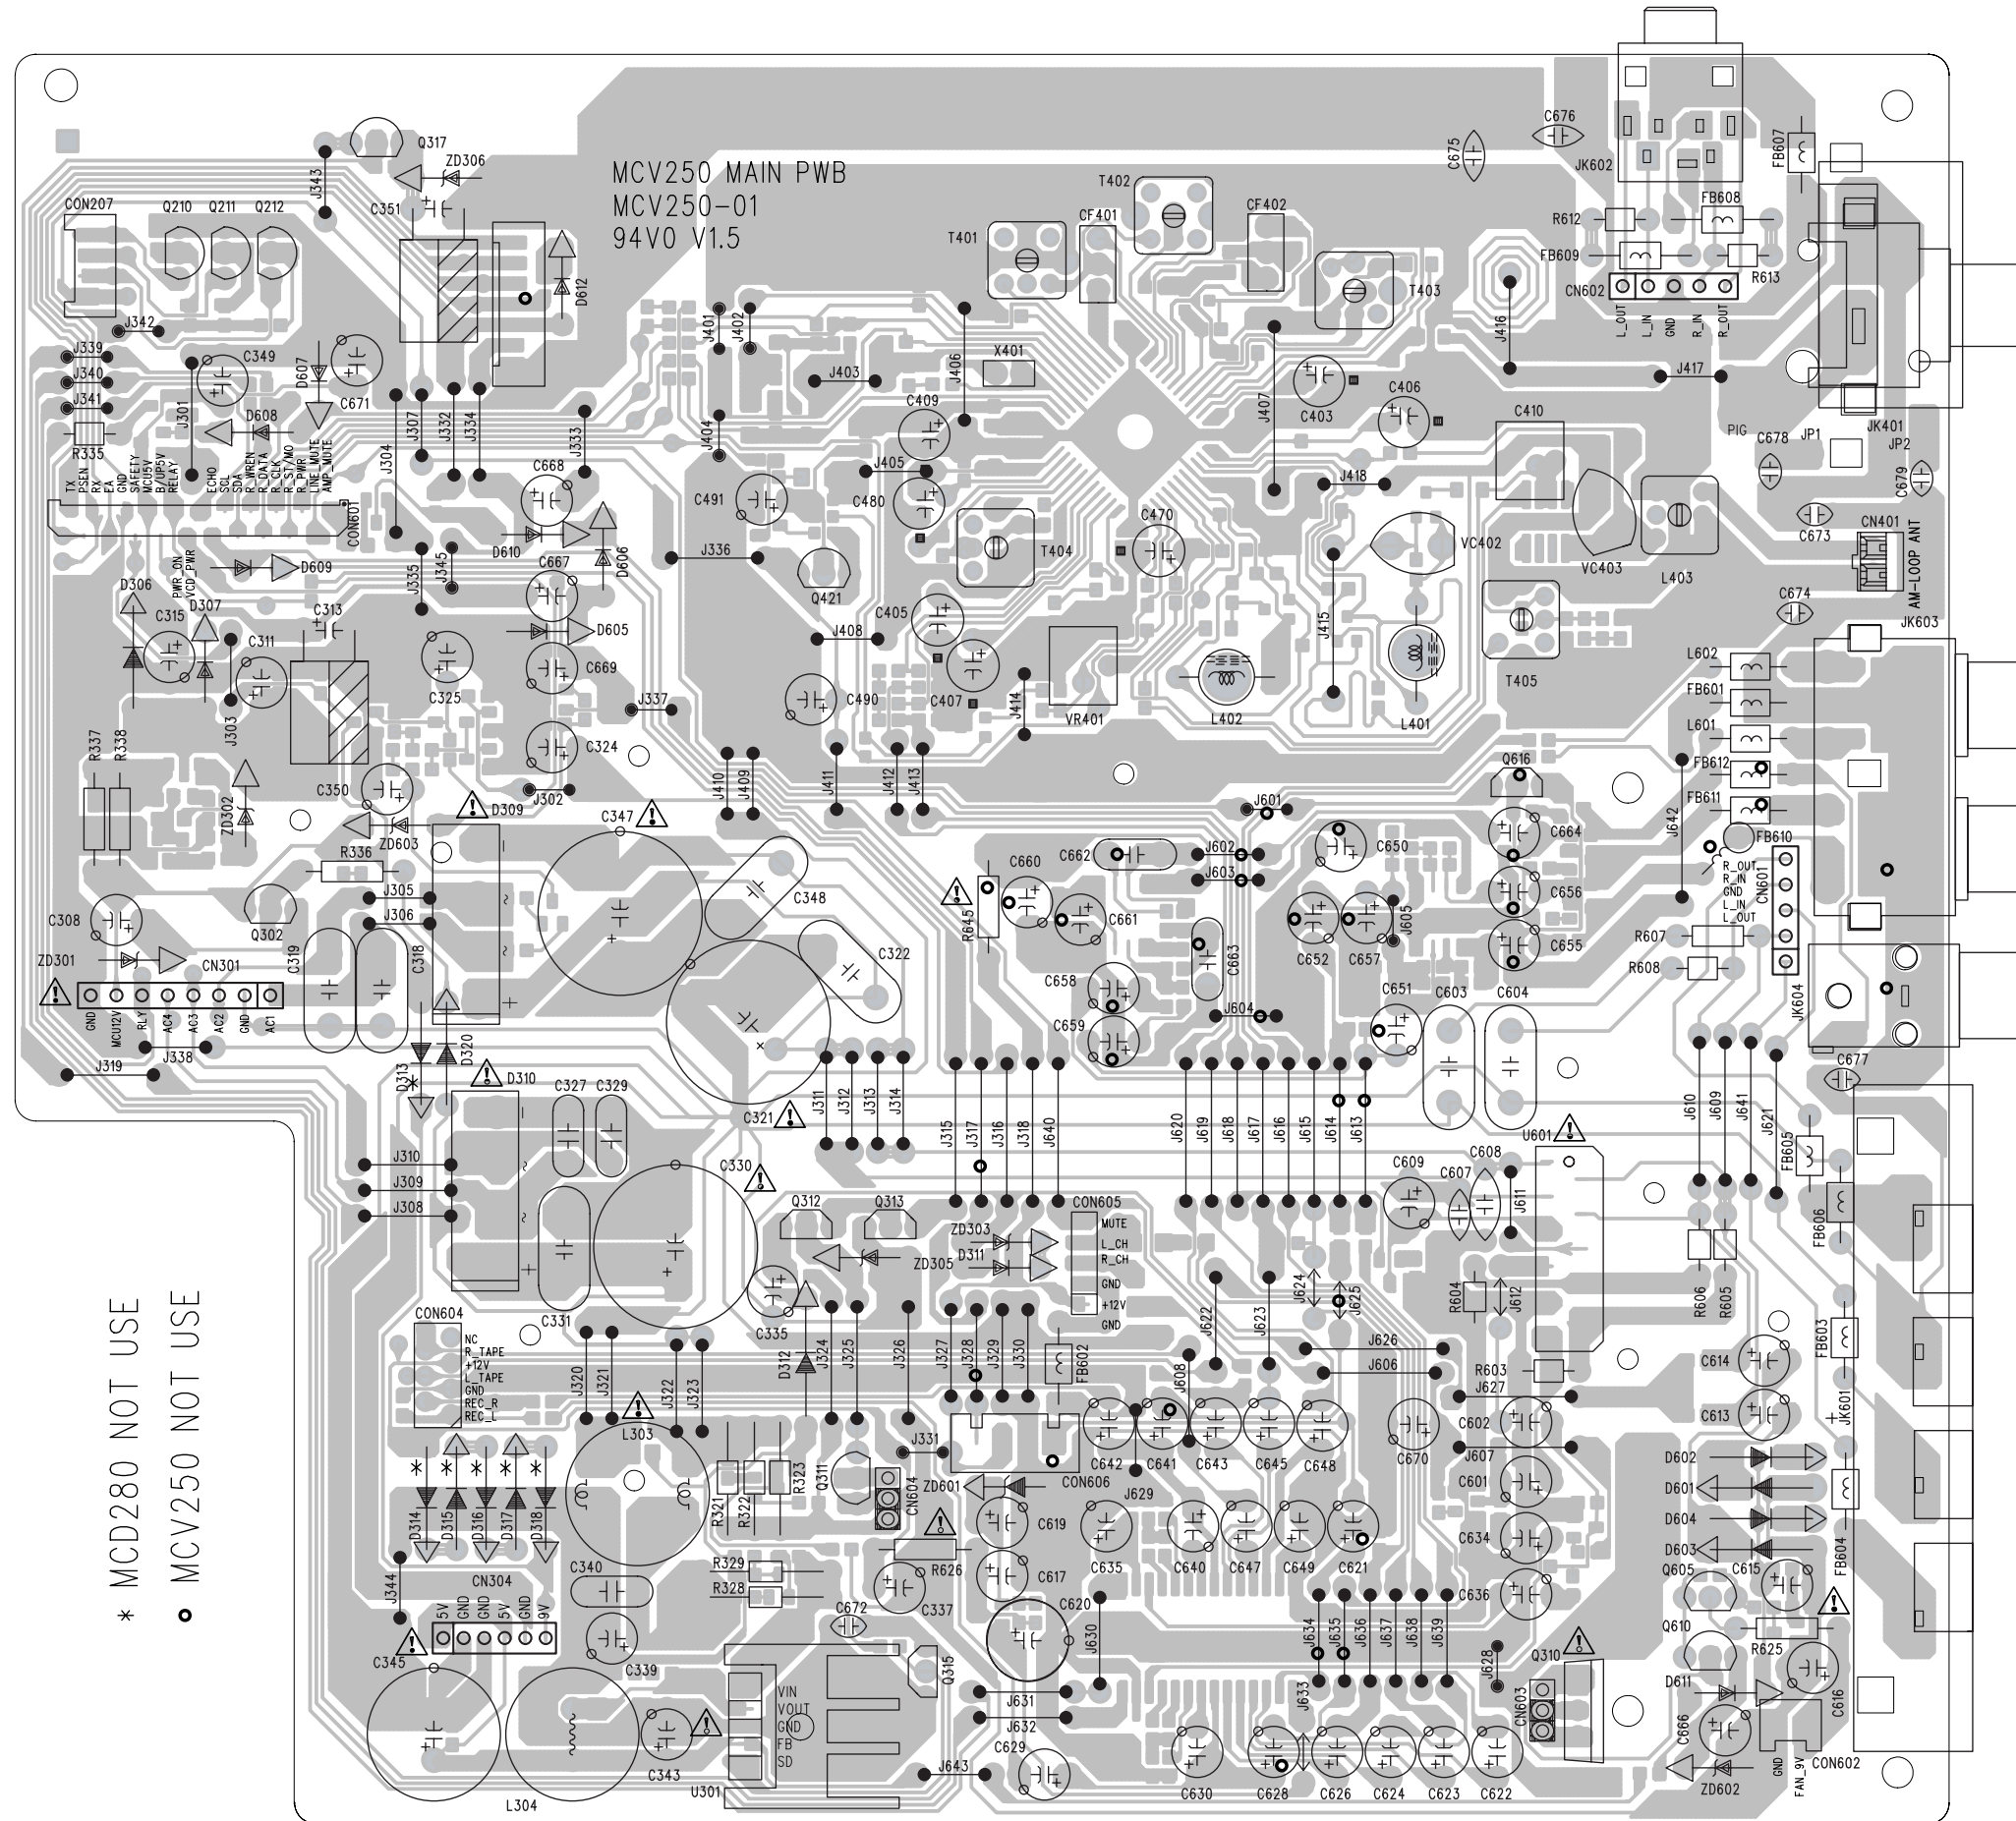

* MCD280 NOT USE
 o MCV250 NOT USE

SCREW LIST

- ①. T2 x 10
- ②. T2.5 x 12
- ③. T3 x 6
- ④. T3 x 8
- ⑤. T3 x10
- ⑥. T3 x12
- ⑦. P/W C2.5 x 10
- ⑧. P/W T3 x 6
- ⑨. P/W T3 x 10

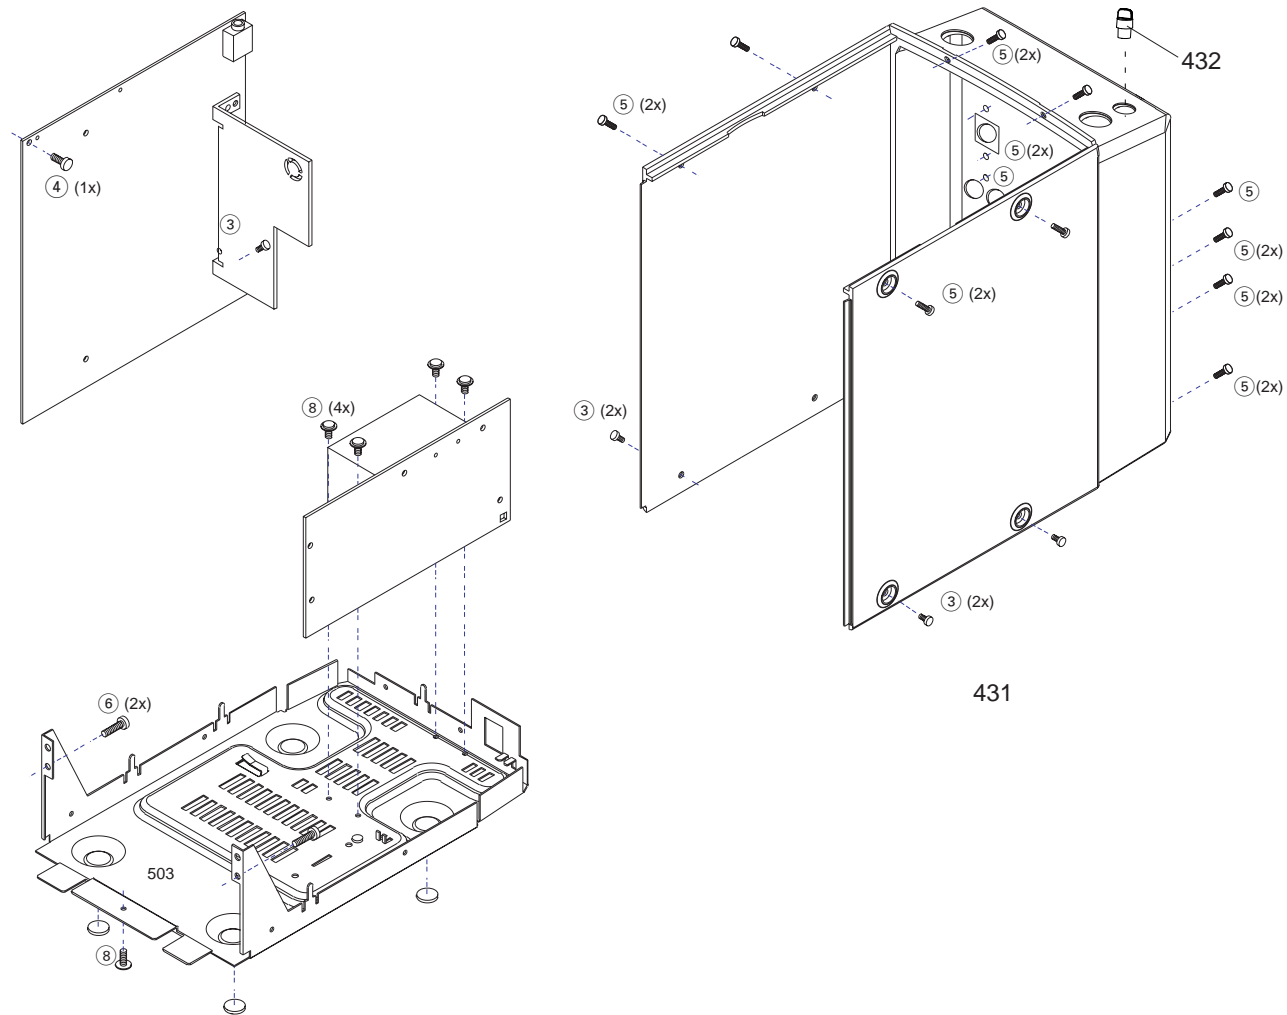

MECHANICAL PARTSLIST

401	9940 000 00668	CASSETTE DOOR ASSY
402	9940 000 00669	DOOR CASS
403	9940 000 00659	SPRING PLATE
404	9940 000 00657	PANEL FRONT ASSY
406	9940 000 00666	SPRING COMPRESSION
407	4822 529 10322	DAMPER ASSY
408	9940 000 00658	SPRING CASSETTE
409	9940 000 00661	BRACKET RIGHT
410	9940 000 00663	WINDOW LCD
411	9940 000 00665	PUSH CATCH
412	9940 000 00662	BUTTON POWER
413	9940 000 00664	BUTTON SET CONTROL
414	9940 000 00656	BRACKET LCD
415	9940 000 00643	DISPLAY PC BOARD ASSEMBLY
416	3139 118 79220	TAPE DECK CFL 4217
417	9940 000 00506	CD DAMPER 658 TB 40
418	9940 000 00505	CD DAMPER 658 TA 30
419	9940 000 00632	VCD PICK UP KSM213VSCM
420	9940 000 00629	VCD PC BOARD ASSEMBLY
421	4822 529 10322	DAMPER ASSY
422	9940 000 00652	TRAY CD
423	9940 000 00379	CD DOOR SW DLS-02-W-1
424	9940 000 00655	CHUCK PLATE ASSY
426	9940 000 00671	SPRING CD DOOR
427	9940 000 00667	CD DOOR ASSY
427	2422 549 45067	ANT AM LOOP LAN-006 B
429	9940 000 00675	SPEAKER BOX 4" 8OHM 30W
431	9940 000 00651	REAR CABINET
432	9940 000 00653	MIC KNOB
	9940 000 00674	REMOTE CONTROL UNIT
	4822 303 50063	FM AERIAL (not for -/22)

Note: Only these parts mentioned in the list are normal service parts.

ELECTRICAL PARTSLIST

- MISCELLANEOUS -

JK601	9940 000 00621	SPEAKER JACK WP4-19
JK602	9940 000 00386	HP JACK MSJ-2000
JK603	9940 000 00623	JACK AV2-8.4-13P
JK401	9940 000 00628	JACK FM ANT
JR1	9940 000 00631	CONNECTOR
T801	9940 000 00648	IFT 049K10668 TYPE 7CDA
JK701	9940 000 00635	MICRO PHONE JACK
FS301	⚠ 9940 000 00637	FUSE PTU 1A 250V
FS303	⚠ 9940 000 00638	FUSE PTU2.5A 250V
	9940 000 00633	FFC CABLE 16P
SW301	9940 000 00636	VOLTAGE SELECTOR SWITCH (not for -/22)
SW501	9940 000 00568	TACT SWITCH
SW502	9940 000 00568	TACT SWITCH
SW503	9940 000 00568	TACT SWITCH
SW504	9940 000 00568	TACT SWITCH
SW505	9940 000 00568	TACT SWITCH
SW506	9940 000 00568	TACT SWITCH
SW507	9940 000 00568	TACT SWITCH
SW508	9940 000 00568	TACT SWITCH
SW509	9940 000 00568	TACT SWITCH
SW510	9940 000 00568	TACT SWITCH
SW512	9940 000 00568	TACT SWITCH
SW513	9940 000 00568	TACT SWITCH
VR701	9940 000 00634	RESISTOR 50K
VR401	9940 000 00627	SEMI-FIXED RES 100K
LED511	9940 000 00644	LED ORANGE 3MM
LED502	9940 000 00644	LED ORANGE 3MM
LED503	9940 000 00644	LED ORANGE 3MM
LED504	9940 000 00644	LED ORANGE 3MM
LED505	9940 000 00644	LED ORANGE 3MM
LED506	9940 000 00644	LED ORANGE 3MM
LED507	9940 000 00644	LED ORANGE 3MM
LED508	9940 000 00644	LED ORANGE 3MM
LED509	9940 000 00644	LED ORANGE 3MM
LED510	9940 000 00644	LED ORANGE 3MM
	⚠ 9940 000 00382	POWER AC WIRE VDE 230V
T301	⚠ 9940 000 00641	TRANSFORMER EI66 (-/21/21M)
T302	⚠ 9940 000 00642	TRANSFORMER EI28 (-/21/21M)
T301	⚠ 9940 000 00736	TRANSFORMER EI66 (-/22)
T302	⚠ 9940 000 00737	TRANSFORMER EI28 (-/22)
LCD1	9940 000 00645	LCD G892TT-P
U802	4822 209 30188	BA3126N
U801	4822 209 32082	TA8142AP
U301	9940 000 00619	IC,AP1501-50T5 150KHZ
U601	9940 000 00624	AMPLIFIER IC TDA7269ASA
U602	9322 150 74668	IC SM TDA7468D
U401	9351 740 80557	IC SM TEA5757H/V1

Note: Only these parts mentioned in the list are normal service parts.