

Service Service Service

FR994/17



Service Manual

For repair information Receiver please refer to Service Manual of FR975/00/01C/17 & MX980D/37
(service code number = 3104 215 50060)
For repair information Powered Subwoofer please refer to Service Manual of SW970/17
(service code number = 3139 785 30046)



MX977/37 is equal to MX980D/37 except the following:
FR994/17 is equal to FR975/17 except the following:

Miscellaneous

9965 000 11856	FRONT SPK BLACK MX999FS/17
9965 000 11857	CENTER SPK BLACK MX999CS/17
9965 000 11858	REAR SPK BLACK MX999RS/17
9965 000 11855	KEYHOLE BRACKET, MOUNTING
3104 219 04460	REMOTE CONTROL
3104 217 06780	MDM 2000 V2 module

Electrical:

Led 6401,6421 are deleted

Led 6407,6408,6409,6410,6412,6413,6415,6416,6417,6418 red colour led
is changed into orange colour led code number : 4822 130 11589

Item 7415 changed into TMP87CS71F - MX970	code number : 3139 110 53180
Item 1301 changed into 1304	code number : 4822 265 11607
Item 2371 changed into 2317 4n7	code number : 5322 126 10223
Item 2372 changed into 2322 100p	code number : 5322 122 32531
Item 2373 changed into 2328 4n7	code number : 5322 126 10223
Item 2374 changed into 2331 100p	code number : 5322 122 32531
Item 2375 changed into 2335 4n7	code number : 5322 126 10223
Item 2376 changed into 2339 100p	code number : 5322 122 32531

Mainstrafo 5001for FR994/17changed into code number : 3104 218 31040

Mains Outlet 1052 added in FR994/17 code number : 4822 265 11605
Mains Outlet 1054 are deleted in FR994/17

Copyright 2003 Philips Consumer Electronics B.V. Eindhoven, The Netherlands
All rights reserved. No part of this publication may be reproduced, stored in a retrieval
system or transmitted, in any form or by any means, electronic, mechanical, photocopying,
or otherwise without the prior permission of Philips.



PHILIPS

Mechanical: the following items are changed into:

Item Code number Description

200 3104 217 53370 FRONT ASSY FR994/17
201 3141 014 24480 CAP END LEFT FR994/17
202 3141 014 24490 CAP END RIGHT FR994/17
203 3141 017 74280 BUTTONS SURR. FR994/17
205 3141 017 74290 BUTTONS TUNER FR994/17

206 3141 017 74300 BUTTONS MENU FR994/17
207 3141 017 74580 BUTTONS BASS FR994/17
208 3141 017 74320 BUTTONS EASY LINK FR994/17
209 3141 014 24660 RING SURR. FR994/17
210 3141 014 24200 LIGHT GUIDE VIRTUAL/HALL

211 3141 014 24210 LIGHT GUIDE SELECTOR
212 3141 014 24650 LENS IR FR994/17
213 3141 014 24630 RING KNOB VOLUME FR994/17
214 3141 014 24640 RING KNOB SOURCE SEL. FR994/17
215 3141 017 74900 WINDOW DISPLAY ASSY FR994/17

222 3141 017 74360 KNOB VOLUME FR994/17
223 3141 017 74370 KNOB SOURCE SEL. FR994/17
224 3141 017 74380 KNOB MENU NAV FR994/17
228 3139 247 50570 LEG SILVER
230 3139 247 50560 LEG BLACK

282 4822 535 10638 POWER ROD
283 3141 017 74390 POWER CAP FR994/17
287 4822 442 01817 COVER PLATE BLACK FR994/17

EXPLODED VIEW

