

Service Service Service



Service Manual

TABLE OF CONTENTS

	Chapter
Technical Specification	1
Safety Instructions	2
Instruction for Use	3
Mechanical Instructions	4
Troubleshooting & Service tips	5
Overall block diagram	6
Overall wiring diagram	7
Electrical diagram	8
Component layout	9
Service part list	10
Revision list	11

©Copyright 2005 Philips Consumer Electronics B.V. Eindhoven, The Netherlands
All rights reserved. No part of this publication may be reproduced, stored in a
retrieval system or transmitted, in any form or by any means, electronic,
mechanical, photocopying, or otherwise without the prior permission of Philips

3141 785 30574

1.0 TECHNICAL SPECIFICATION and SERVICE HINT

General

Dimensions (WxLxH): 22 x 15.5 x 2.9 cm

Weight: 1kg / 2.2 lb

Power supply: DC 9V 2.2A

Power consumption: ≤20W

Operating temp. range: 0 - 50°C (32 ~ 122°F)

Laser wavelength: 650nm

Video system: NTSC / PAL / AUTO

Frequency response: 20Hz ~ 20KHz ± 1dB

Signal/noise ratio: ≥85dB

Audio distortion + noise: ≤-80(1KHz)

Channel separation: ≥85dB

Dynamic range: ≥80dB

Output

Audio out (analog audio): Output level: 2V ± 10%

Load impedance: 10KΩ

Video out Output level: 1Vp - p ± 20%

Load impedance: 75Ω

Current consumption

DC-IN SUPPLY (9.0V)	
Battery Charging Current	1.2A typ.
BATT. SUPPLY (7.2V)	
Power Off	0A
Playback with TFT on	<1.2A typ.
Playback without TFT on	<600mA
Battery playtime	>2.5hrs

Headphone out (headphone output load 2x16ohm)

Maximum output power: >10mW

Frequency response: 20Hz - 20kHz

SNR (A-wght): 80dB typ.

THD (1kHz): <1%

Left-Right Channel Separation:

Left-Right Channel Balance:

Supported disc type

DVD video discs:



Video CD:



Audio CD:



In addition, this unit can play DVD+R & DVD+RW and CD-R & CD-RW that contains audio titles or MP3 or JPEG files.

You cannot play disc other than the above listed.
(CVD, CD-ROM, CD-Extra, CD-G and CD-I discs cannot be played on this DVD player)

Software upgrades

For the best performance of your DVD Portable. Check www.philips.com/support for latest software upgrades available.

To check the software version of your DVD Portable.

1. Press the SETUP key to enter the setup menu.
2. Press RETURN and then press 1, 2 and 3 on the remote control.
3. The display will show the software version as the date of which the software was built on the bottom of the screen. E.g. 050303

Procedure on how to upgrade the software of the DVD Portable

1. Download the latest software from the Philips support site.
2. Unzipped the files and then burn it onto a CD ROM then playback the CD ROM on the DVD Portable.

Pixel specification

<= 6 (max. 2 bright dots and 4 dark dots)

2.0 SAFETY INSTRUCTIONS

GB WARNING

All ICs and many other semi-conductors are susceptible to electrostatic discharges (ESD). Careless handling during repair can reduce life drastically. When repairing, make sure that you are connected with the same potential as the mass of the set via a wrist wrap with resistance. Keep components and tools also at this potential.

ESD



NL WAARSCHUWING

Alle IC's en vele andere halfgeleiders zijn gevoelig voor electrostatische ontladingen (ESD). Onzorgvuldig behandelen tijdens reparatie kan de levensduur drastisch doen verminderen. Zorg ervoor dat u tijdens reparatie via een polsband met weerstand verbonden bent met hetzelfde potentiaal als de massa van het apparaat. Houd componenten en hulpmiddelen ook op ditzelfde potentiaal.

F ATTENTION

Tous les IC et beaucoup d'autres semi-conducteurs sont sensibles aux décharges statiques (ESD). Leur longévité pourrait être considérablement écourtée par le fait qu'aucune précaution n'est prise à leur manipulation. Lors de réparations, s'assurer de bien être relié au même potentiel que la masse de l'appareil et enfiler le bracelet serti d'une résistance de sécurité. Veiller à ce que les composants ainsi que les outils que l'on utilise soient également à ce potentiel.

D WARNUNG

Alle ICs und viele andere Halbleiter sind empfindlich gegenüber elektrostatischen Entladungen (ESD). Unsorgfältige Behandlung im Reparaturfall kann die Lebensdauer drastisch reduzieren. Veranlassen Sie, dass Sie im Reparaturfall über ein Pulsarmband mit Widerstand verbunden sind mit dem gleichen Potential wie die Masse des Gerätes. Bauteile und Hilfsmittel auch auf dieses gleiche Potential halten.

I AVVERTIMENTO

Tutti IC e parecchi semi-conduttori sono sensibili alle scariche statiche (ESD). La loro longevità potrebbe essere fortemente ridotta in caso di non osservazione della più grande cauzione alla loro manipolazione. Durante le riparazioni occorre quindi essere collegato allo stesso potenziale che quello della massa dell'apparecchio tramite un braccialetto a resistenza. Assicurarsi che i componenti e anche gli utensili con quali si lavora siano anche a questo potenziale.

GB

Safety regulations require that the set be restored to its original condition and that parts which are identical with those specified, be used.

"Pour votre sécurité, ces documents doivent être utilisés par des spécialistes agréés, seuls habilités à réparer votre appareil en panne".

NL

Veiligheidsbepalingen vereisen, dat het apparaat bij reparatie in zijn oorspronkelijke toestand wordt teruggebracht en dat onderdelen, identiek aan de gespecificeerde, worden toegepast.



F

Les normes de sécurité exigent que l'appareil soit remis à l'état d'origine et que soient utilisées les pièces de rechange identiques à celles spécifiées.

GB Warning !

Invisible laser radiation when open.
Avoid direct exposure to beam.

S Varning !

Osynlig laserstrålning när apparaten är öppnad och spärren är urkopplad. Betrakta ej strålen.

SF Varoitus !

Avatussa laitteessa ja suojalukituksen ohittaaessa olet alittina näkymättömälle laserisäteilylle. Älä katso sääteenseen!

DK Advarse !

Usynlig laserstrålning ved åbning når sikkerhedsafbrydere er ude af funktion. Undgå udsættelse for stråling.

I

Le norme di sicurezza esigono che l'apparecchio venga rimesso nelle condizioni originali e che siano utilizzati i pezzi di ricambio identici a quelli specificati.

"After servicing and before returning set to customer perform a leakage current measurement test from all exposed metal parts to earth ground to assure no shock hazard exist. The leakage current must not exceed 0.5mA."

2.1 ESD PROTECTION

- レンズには絶対に触れないでください。
- DO NOT TOUCH THE LENS.
- LINSE NICHT BRÜHREN.
- NE PAS TOUCHER LA LENTILLE.


When the power supply is being turned on, you may not remove this laser cautions label. If it removes, radiation of laser may be received.

PREPARATION OF SERVICING

Pickup Head consists of a laser diode that is very susceptible to external static electricity.

Although it operates properly after replacement, if it was subject to electrostatic discharge during replacement, its life might be shortened. When replacing, use a conductive mat, soldering iron with ground wire,etc. to protect the laser diode from damage by static electricity.

And also, the LSI and IC are same as above.

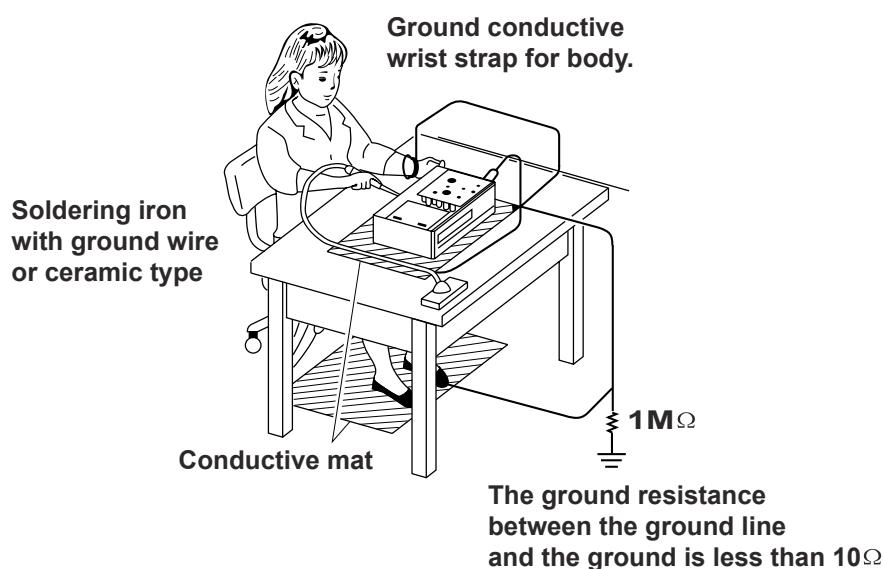

SAFTY NOTICE


SAFTY PRECAUTIONS

LEAKAGE CURRENT CHECK

Plug the AC line cord directly into a 120V AC outlet (do not use an isolation transformer for this check). Use an AC voltmeter, having 5000Ω per volt or more sensitivity. Connect a 1500Ω 10W resistor, paralleled by a $0.15\mu F$ 150V AC capacitor between a known good earth ground (water pipe, conduit, etc.) and all exposed metal parts of cabinet (antennas, handle bracket, metal cabinet screwheads, metal overlays, control shafts, etc.).

Measure the AC voltage across the 1500Ω resistor. The test must be conducted with the AC switch on and then repeated with the AC switch off. The AC voltage indicated by the meter may not exceed 0.3V. A reading exceeding 0.3V indicates that a dangerous potential exists, the fault must be located and corrected. Repeat the above test with the DVD VIDEO PLAYER power plug reversed. NEVER RETURN A DVD VIDEO PLAYER TO THE CUSTOMER WITHOUT TAKING NECESSARY CORRECTIVE ACTION.

READING SHOULD NOT EXCEED 0.3V

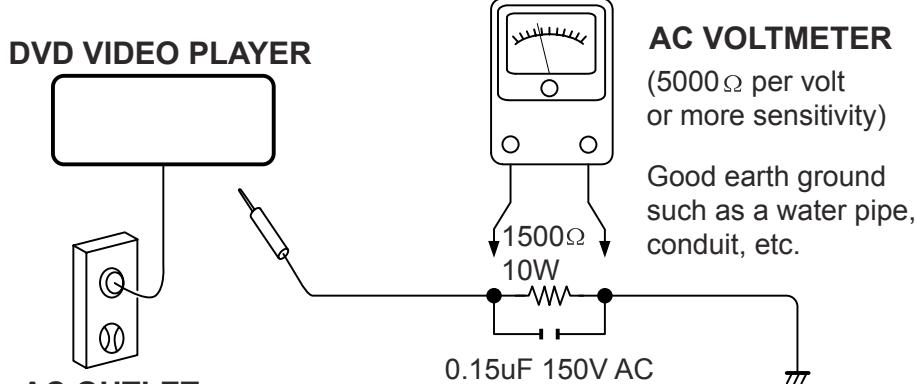

The lightning flash with arrowhead symbol, within an equilateral triangle, is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.




The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.


3.0 INSTRUCTIONS FOR USE

English


Front of player

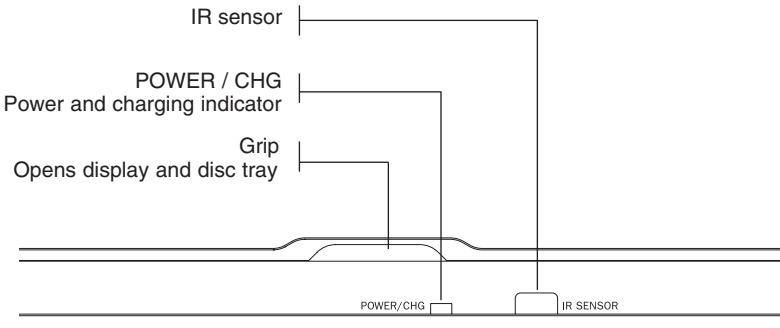


Left of player

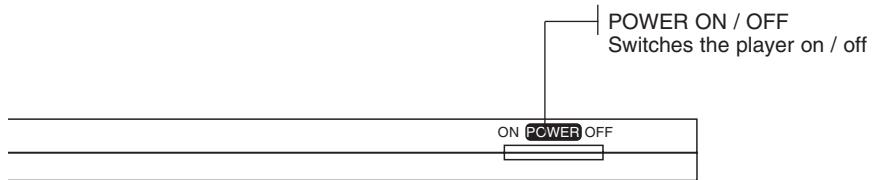


Right of player

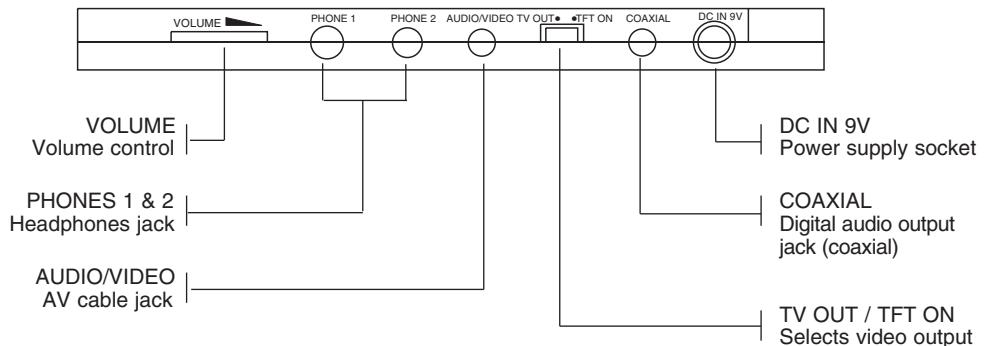

Disc tray

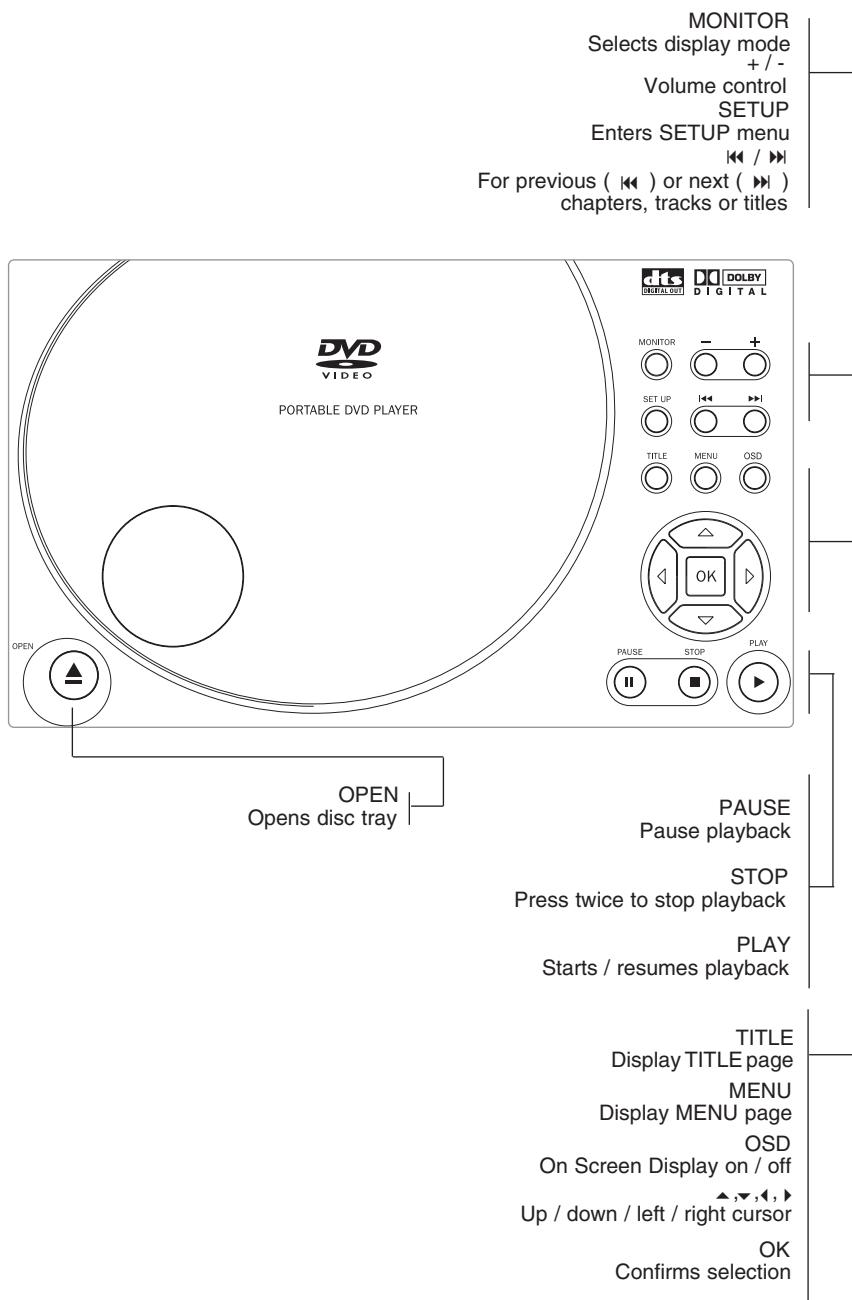

Remote control

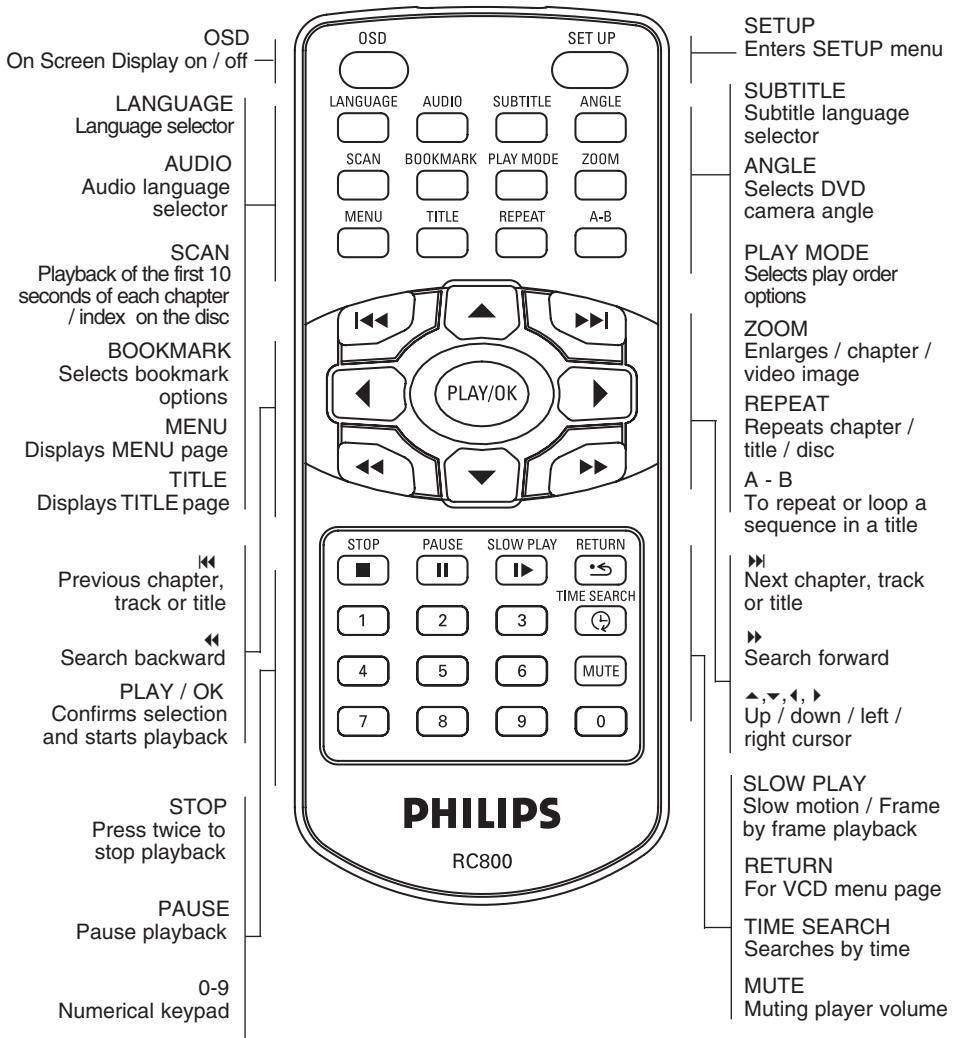

4.0 Mechanical instructions

1. Back View as Fig.1

Remove screws to disassemble the base

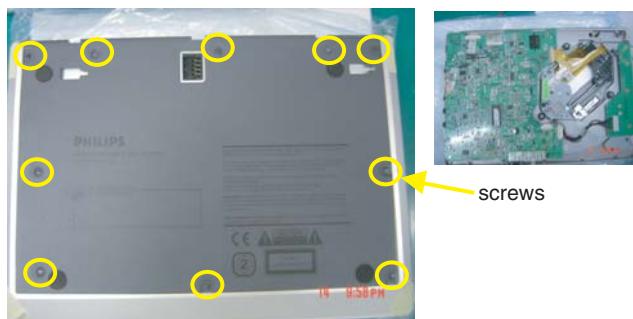


Fig.1

2. Soldered short pattern for laser diode as Fig.2



Fig.2

3. Disassemble the DVD drive and main board as Fig.3,4

Disconnect the DVD drive and main board



Fig.3

Take out the key board and other parts



Fig.4

5. Remove top cover as Fig.5

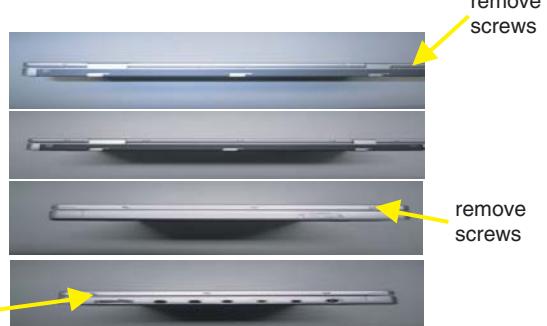


Fig.5

6. Disassemble the HV board as Fig.6



Fig.6

7. Detach the LCD TFT as Fig.7

Remove screw to detach the LCD TFT



Fig.7

5.0 TROUBLESHOOTING & SERVICE TIPS

5.1 Procedure to change regioncode

1. Power on player and open DVD Door.
2. Press <Set Up> at Remote Control. In <Set Up Menu> select <Preferences> and press <OK>.
3. For PET800 - Press successively 2 1 2 2 2 5.◀.▼.
4. Display will show <Region Code 2> for Europe:
5. Press key to input preference region code (see below table).
6. Switch off and re-switch on the product.
7. Verify Region code change done.

Region Code	Region
1	USA
2	EUROPE
3	ASIA PACIFIC
4	AUSTRALIA, NEW ZEALAND, LATAM
5	RUSSIA, INDIA
6	CHINA


REMARKS:

1. Password is CONFIDENTIAL.
2. Region code is printed on product type plate. Due to DVD legislation region codes different to assigned region may not be released.

5.0 TROUBLESHOOTING & SERVICE TIPS

5.2 Identification Method on Sharp and Panasonic TFT LCD (For PET800)

- Sharp panel - data cable jack is under the TFT and left side, the jack is 32pin

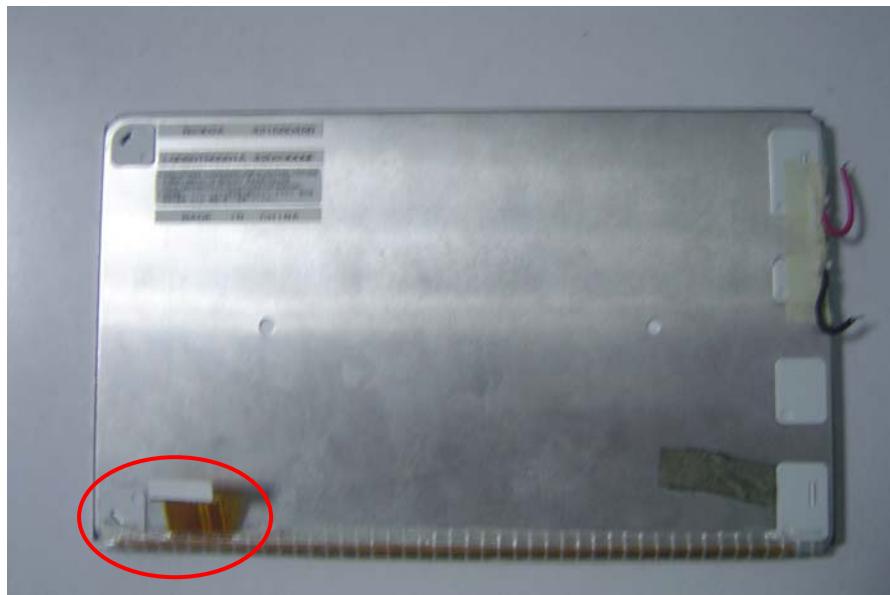


- Panasonic panel - data cable jack is under the TFT and middle side, the jack is 30pin




5.0 TROUBLESHOOTING & SERVICE TIPS

SYMPTOM: NO POWER, NO GREEN LED

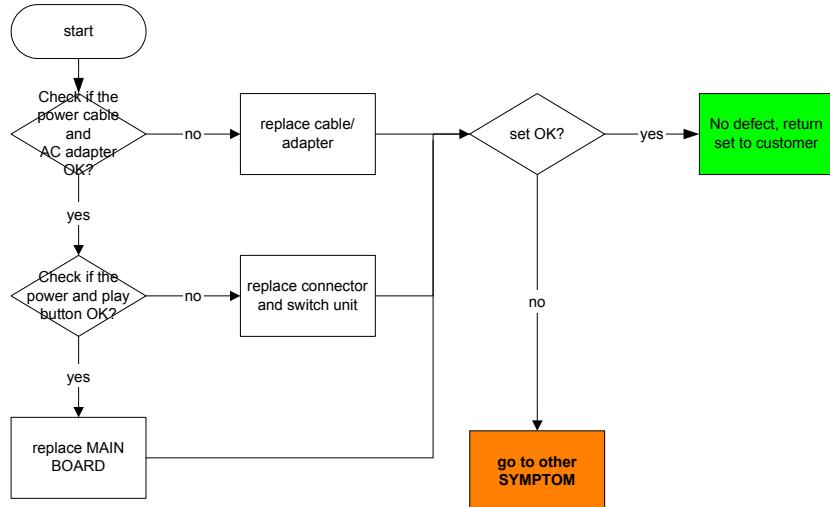


SYMPTOM: NO IMAGE OR SOUND COMES OUT FROM THE EXTERNAL OUTPUT

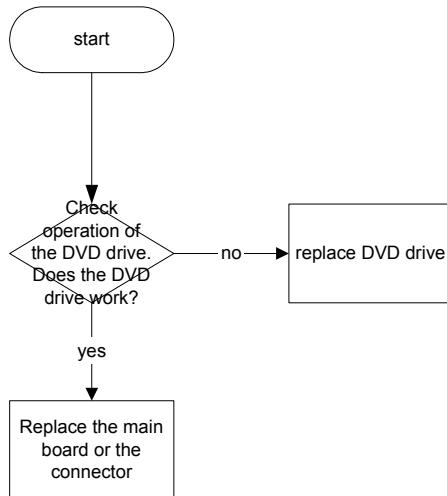


5.0 TROUBLESHOOTING & SERVICE TIPS

SYMPTOM: THE INITIAL SCREEN IS NOT DISPLAYED ON THE LCD

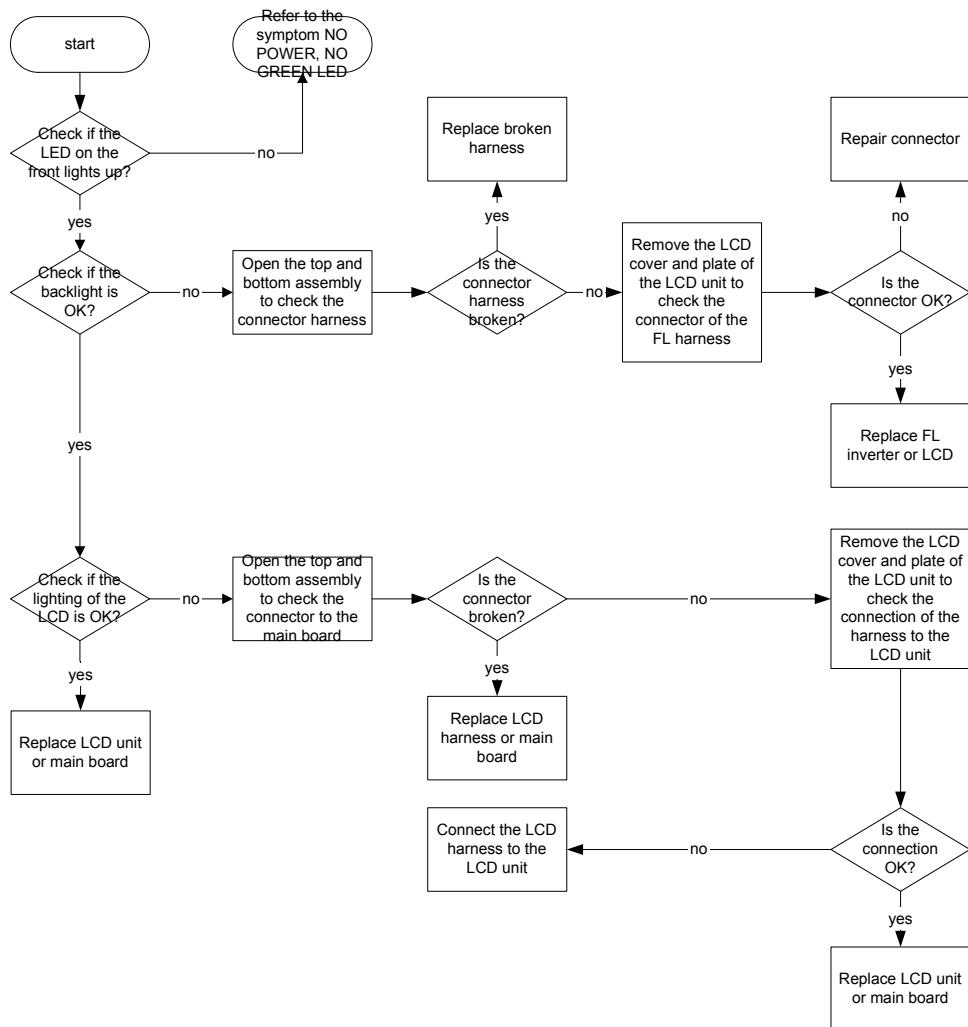


SYMPTOM: NO IMAGE OR SOUND COMES OUT FROM THE EXTERNAL INPUT

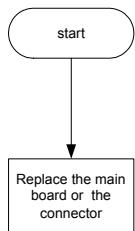


5.0 TROUBLESHOOTING & SERVICE TIPS

SYMPTOM: THE DVD DRIVE DOES NOT WORK

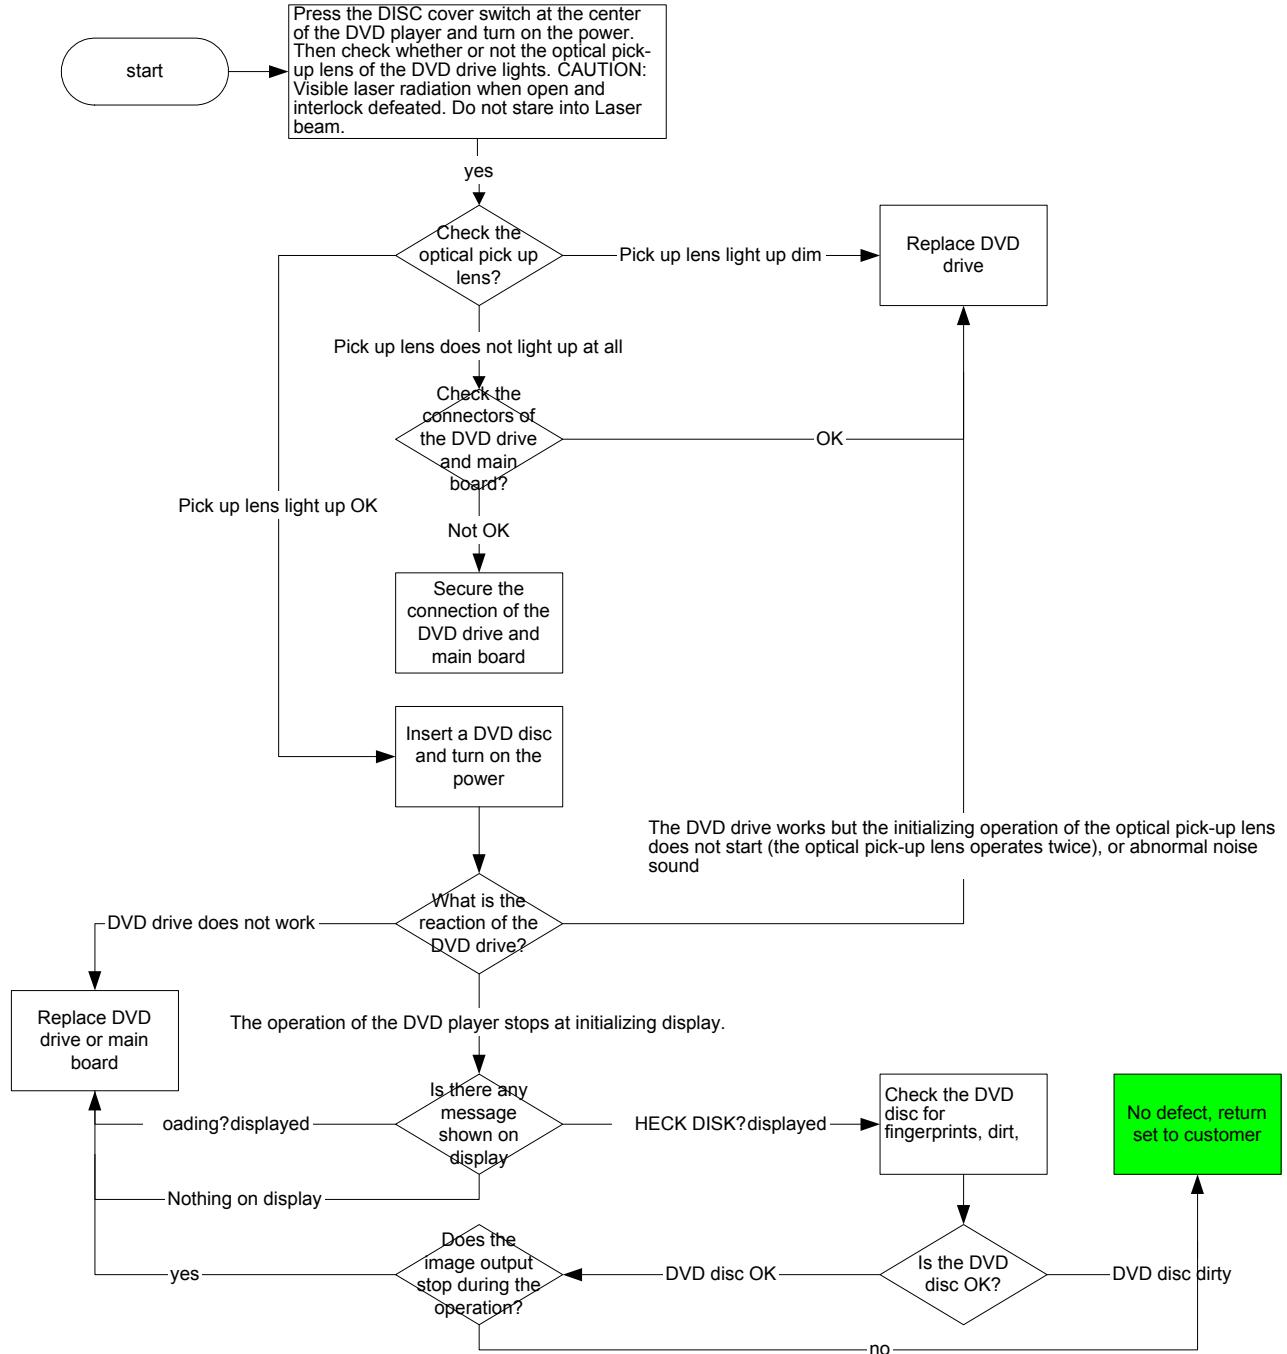


5.0 TROUBLESHOOTING & SERVICE TIPS

SYMPTOM: THE DVD DRIVE DOES NOT OPERATE WITH BATTERY

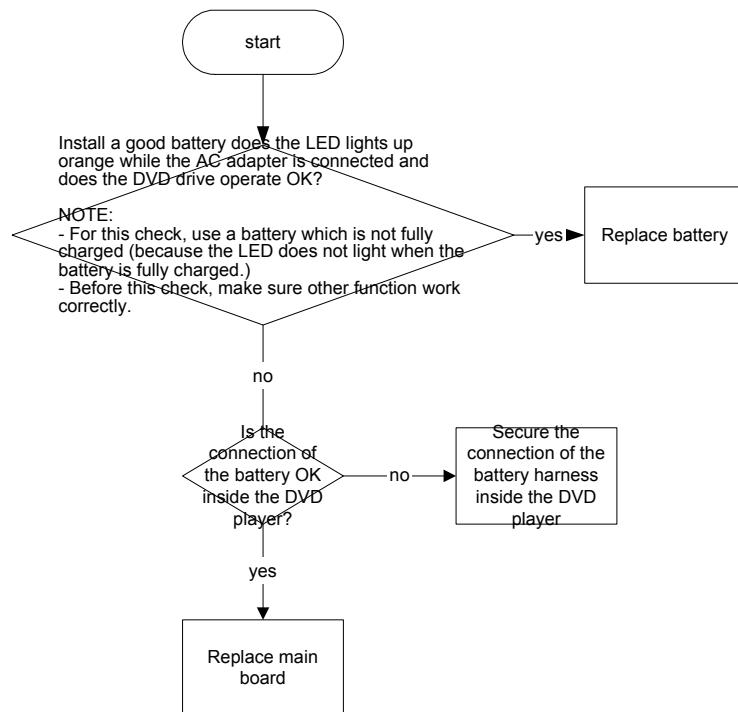


SYMPTOM: NO SOUND COMES FROM THE HEADPHONES

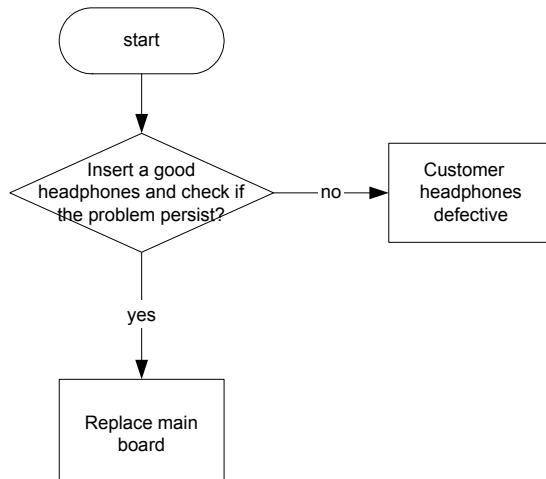


5.0 TROUBLESHOOTING & SERVICE TIPS


SYMPTOM: NO SOUND COMES FROM THE HEADPHONES

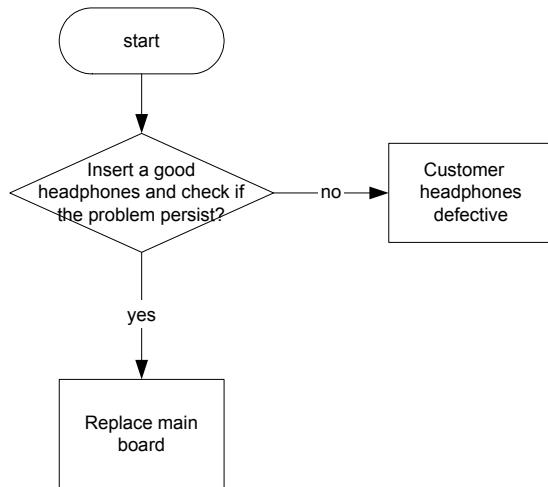

6.0 OVERALL BLOCK DIAGRAM

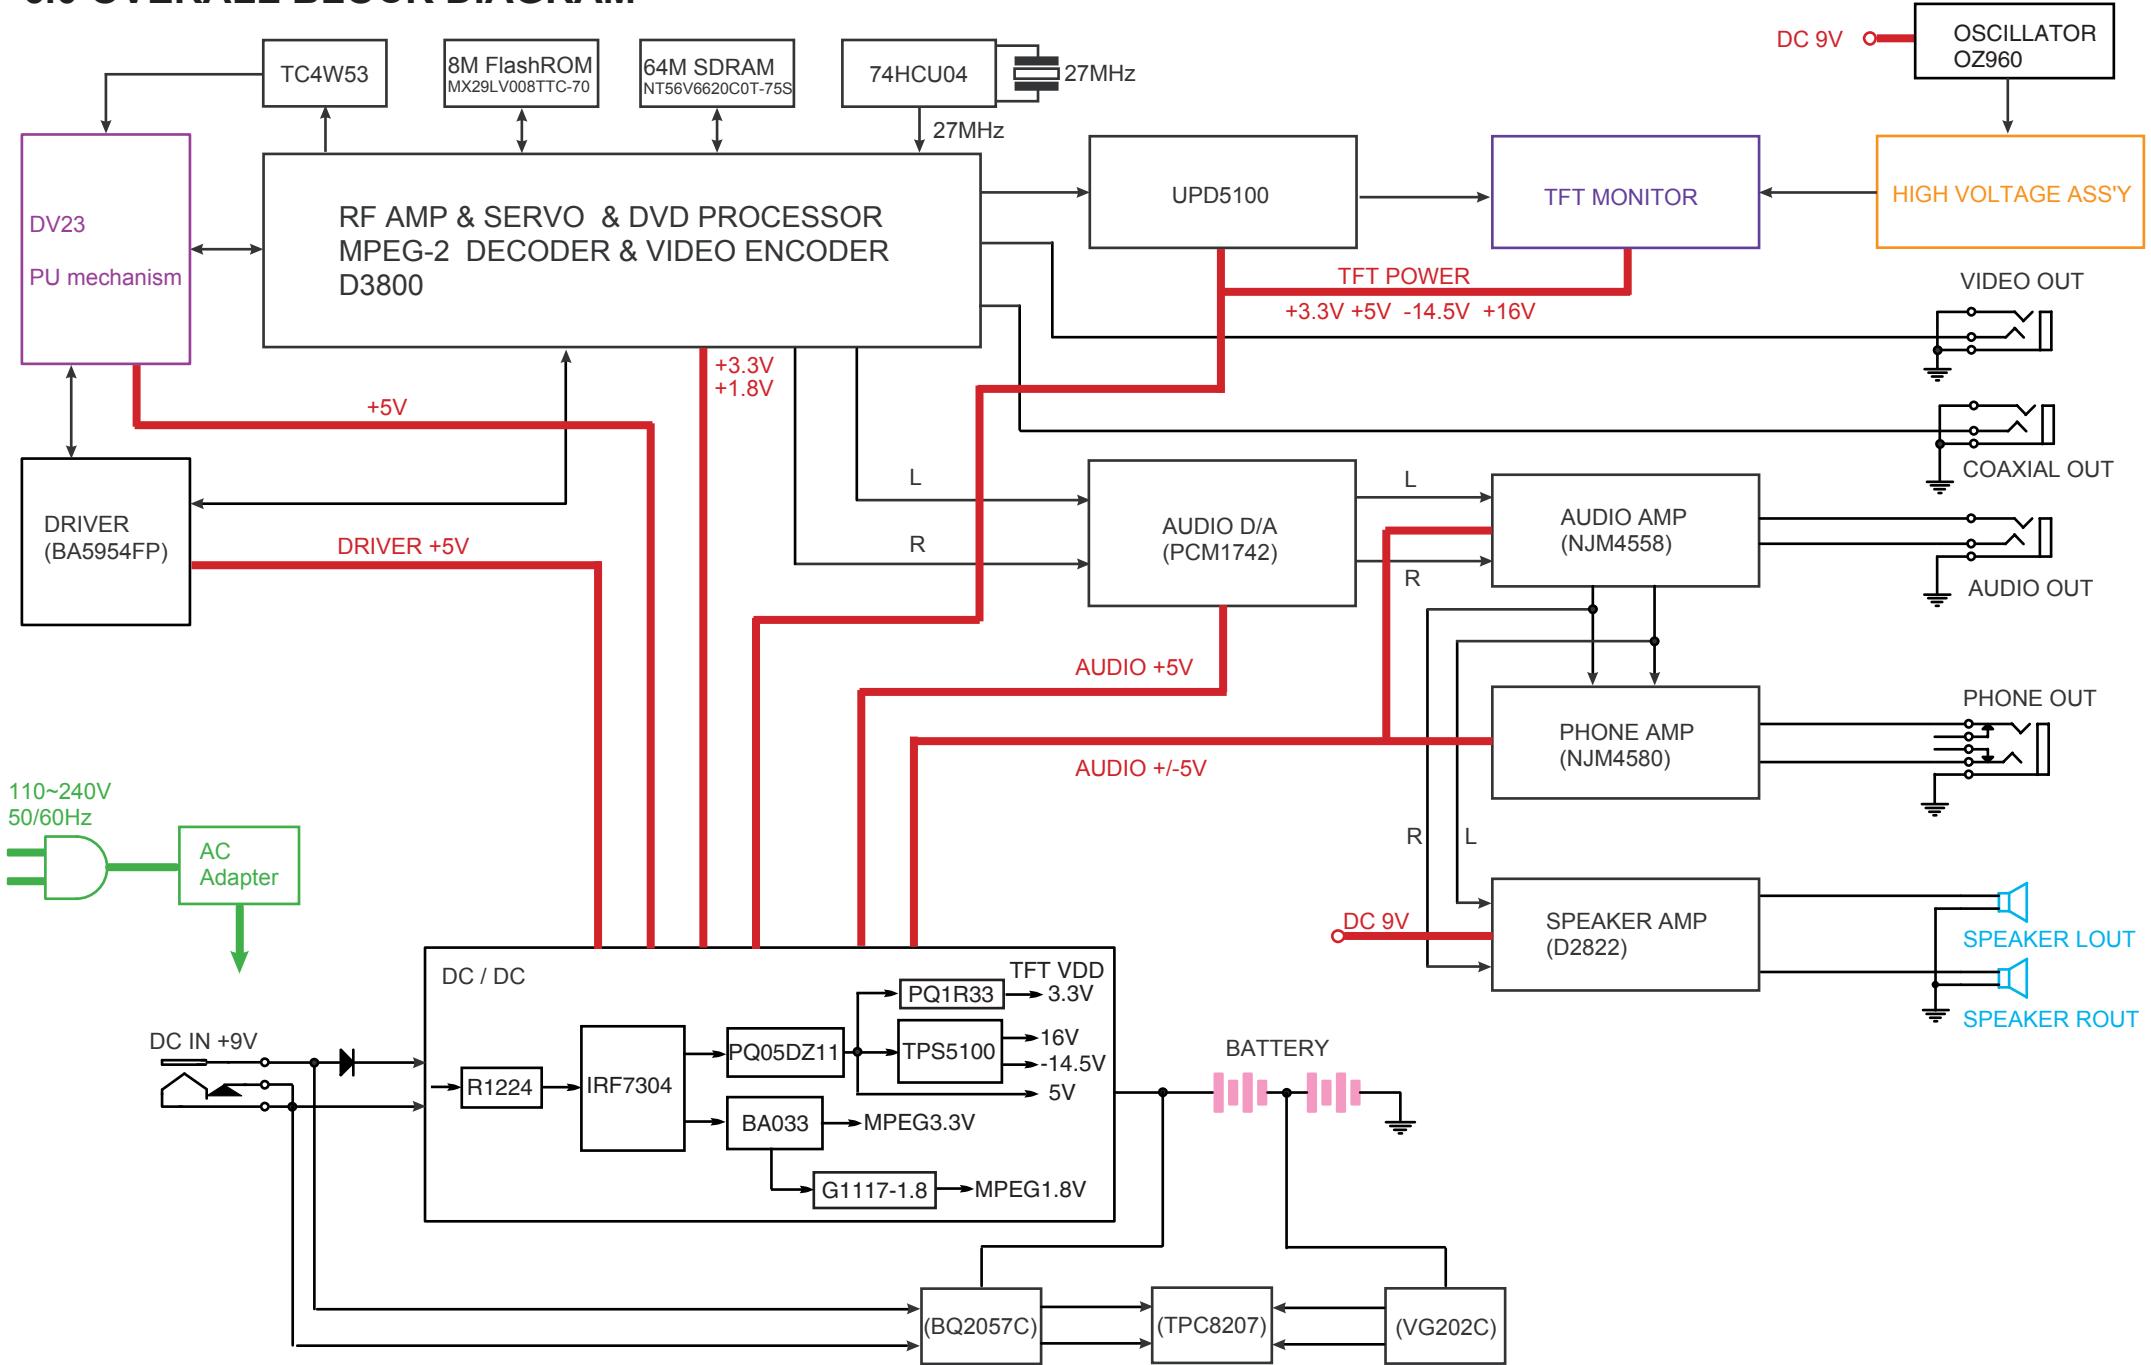


7.0 OVERALL WIRING DAIGRAM

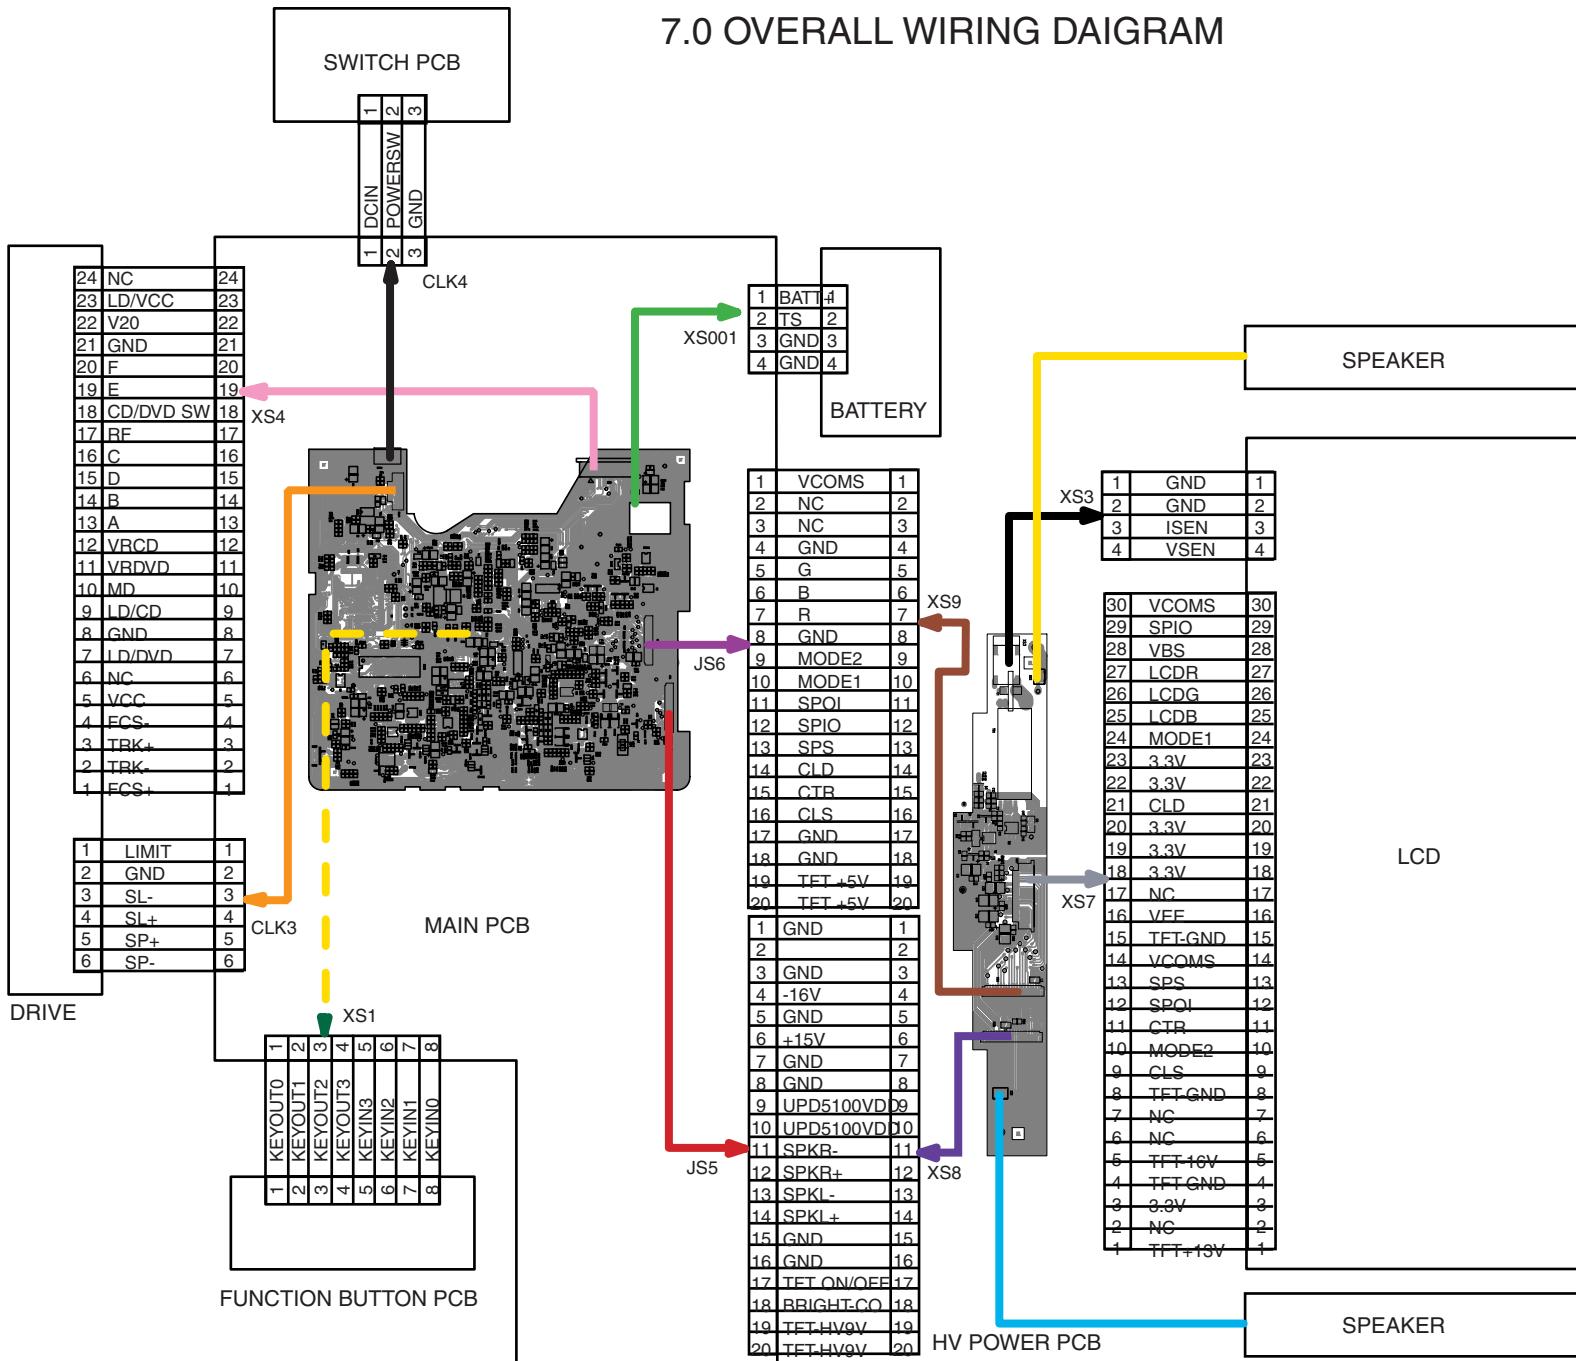

1 2 3 4 5 6 7 8 9 10

A 8.0 ELECTRICAL DIAGRAM MAIN BOARD CIRCUIT DIAGRAM (POWER CIRCUIT DIAGRAM)

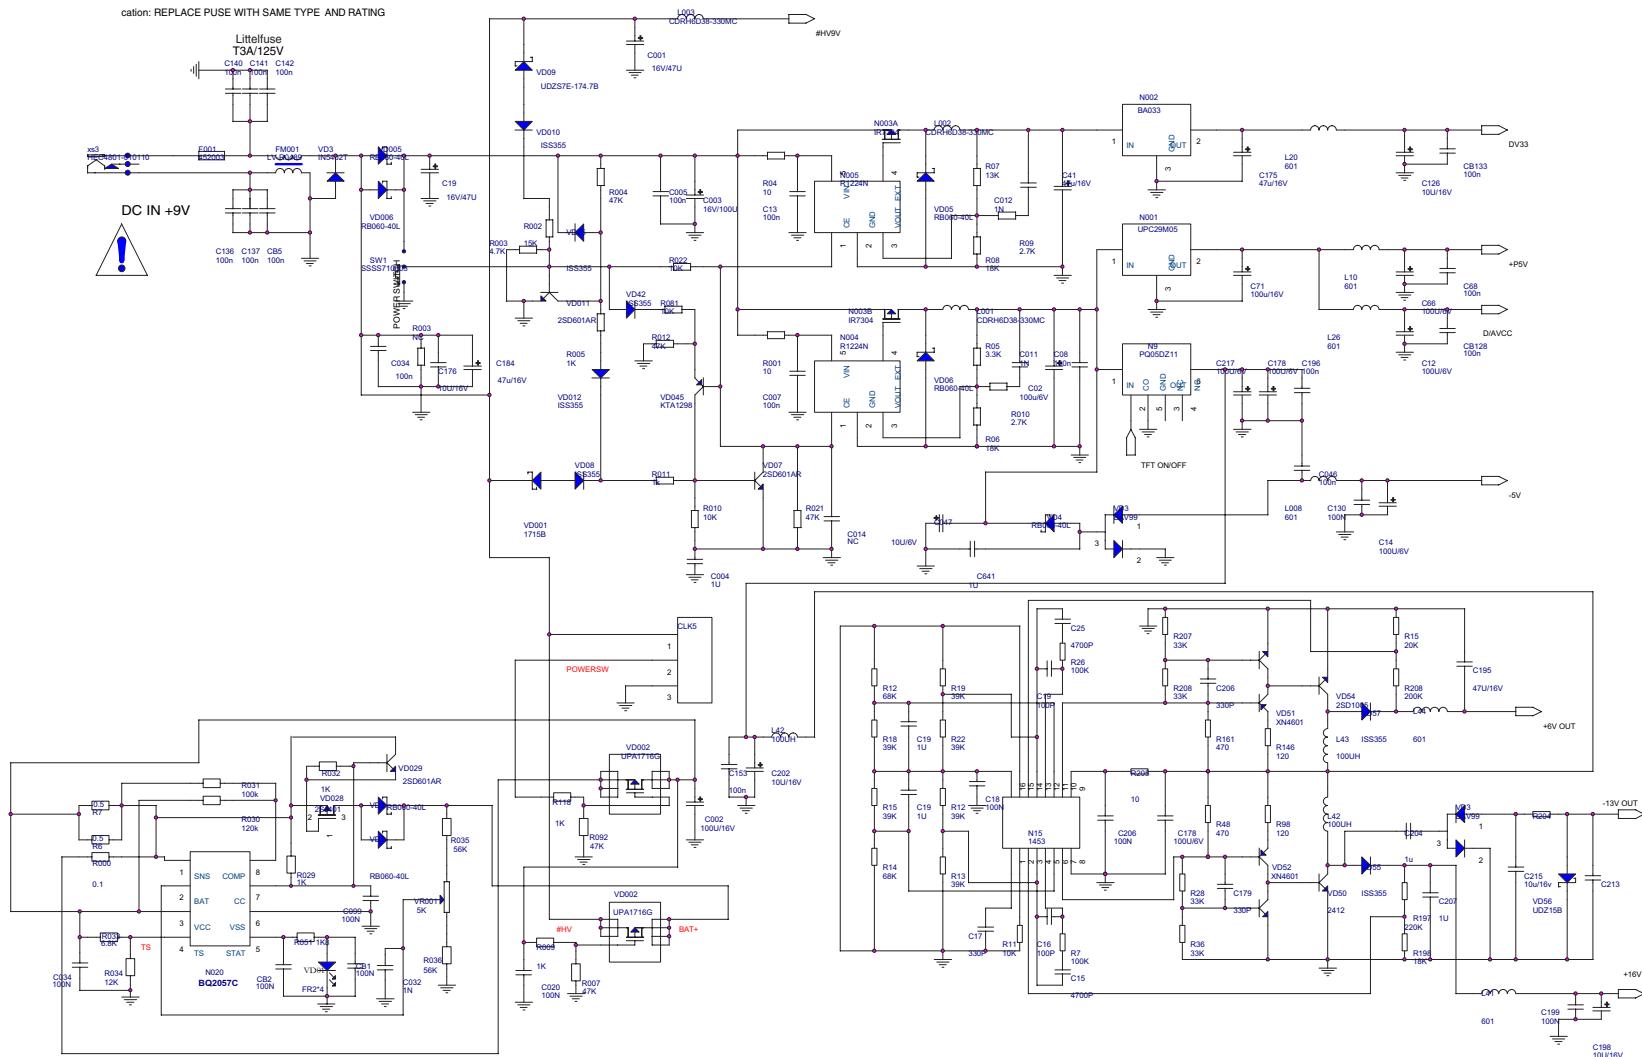

1 2 3 4 5 6 7 8 9 10

MAIN BOARD CIRCUIT DIAGRAM (TFT CIRCUIT DIAGRAM)

A

B

C


D


E

F

G

H

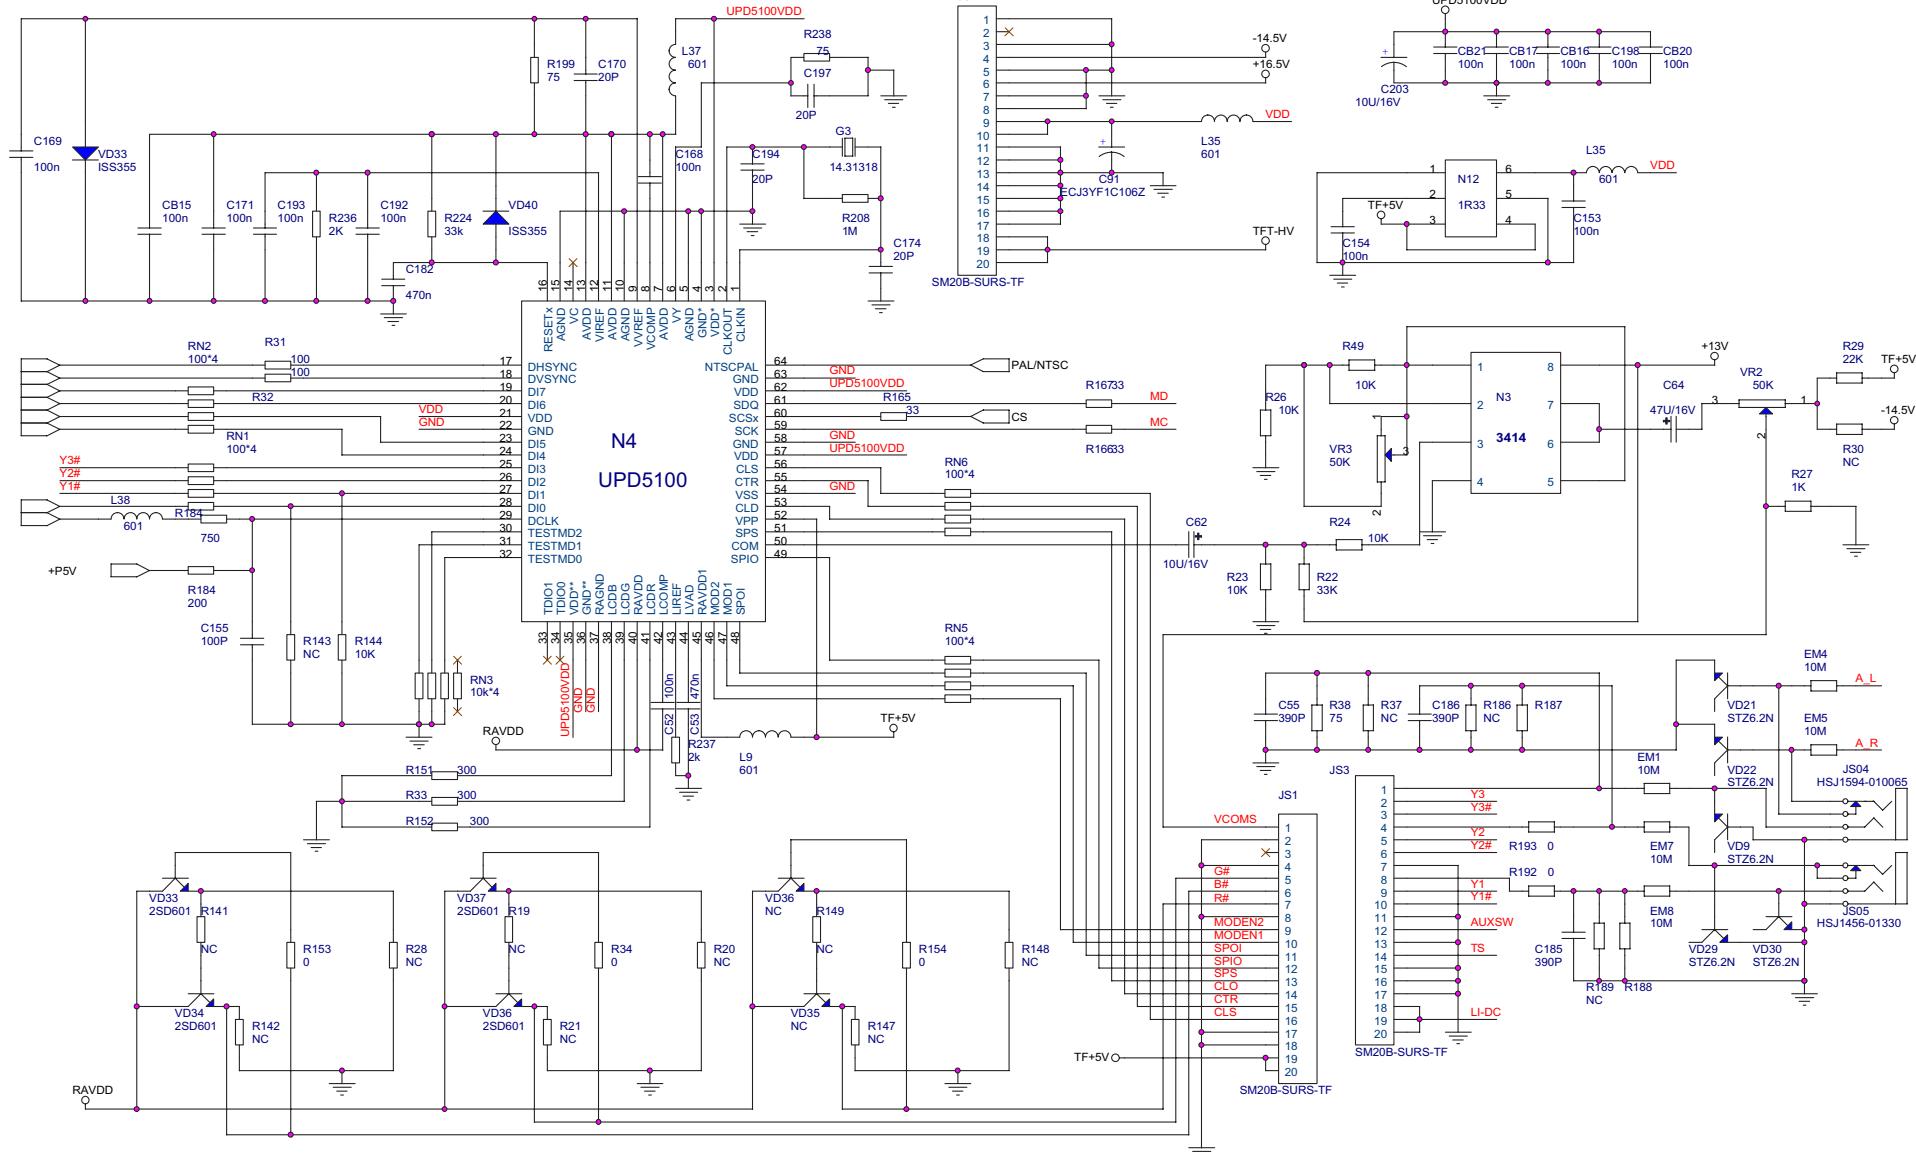


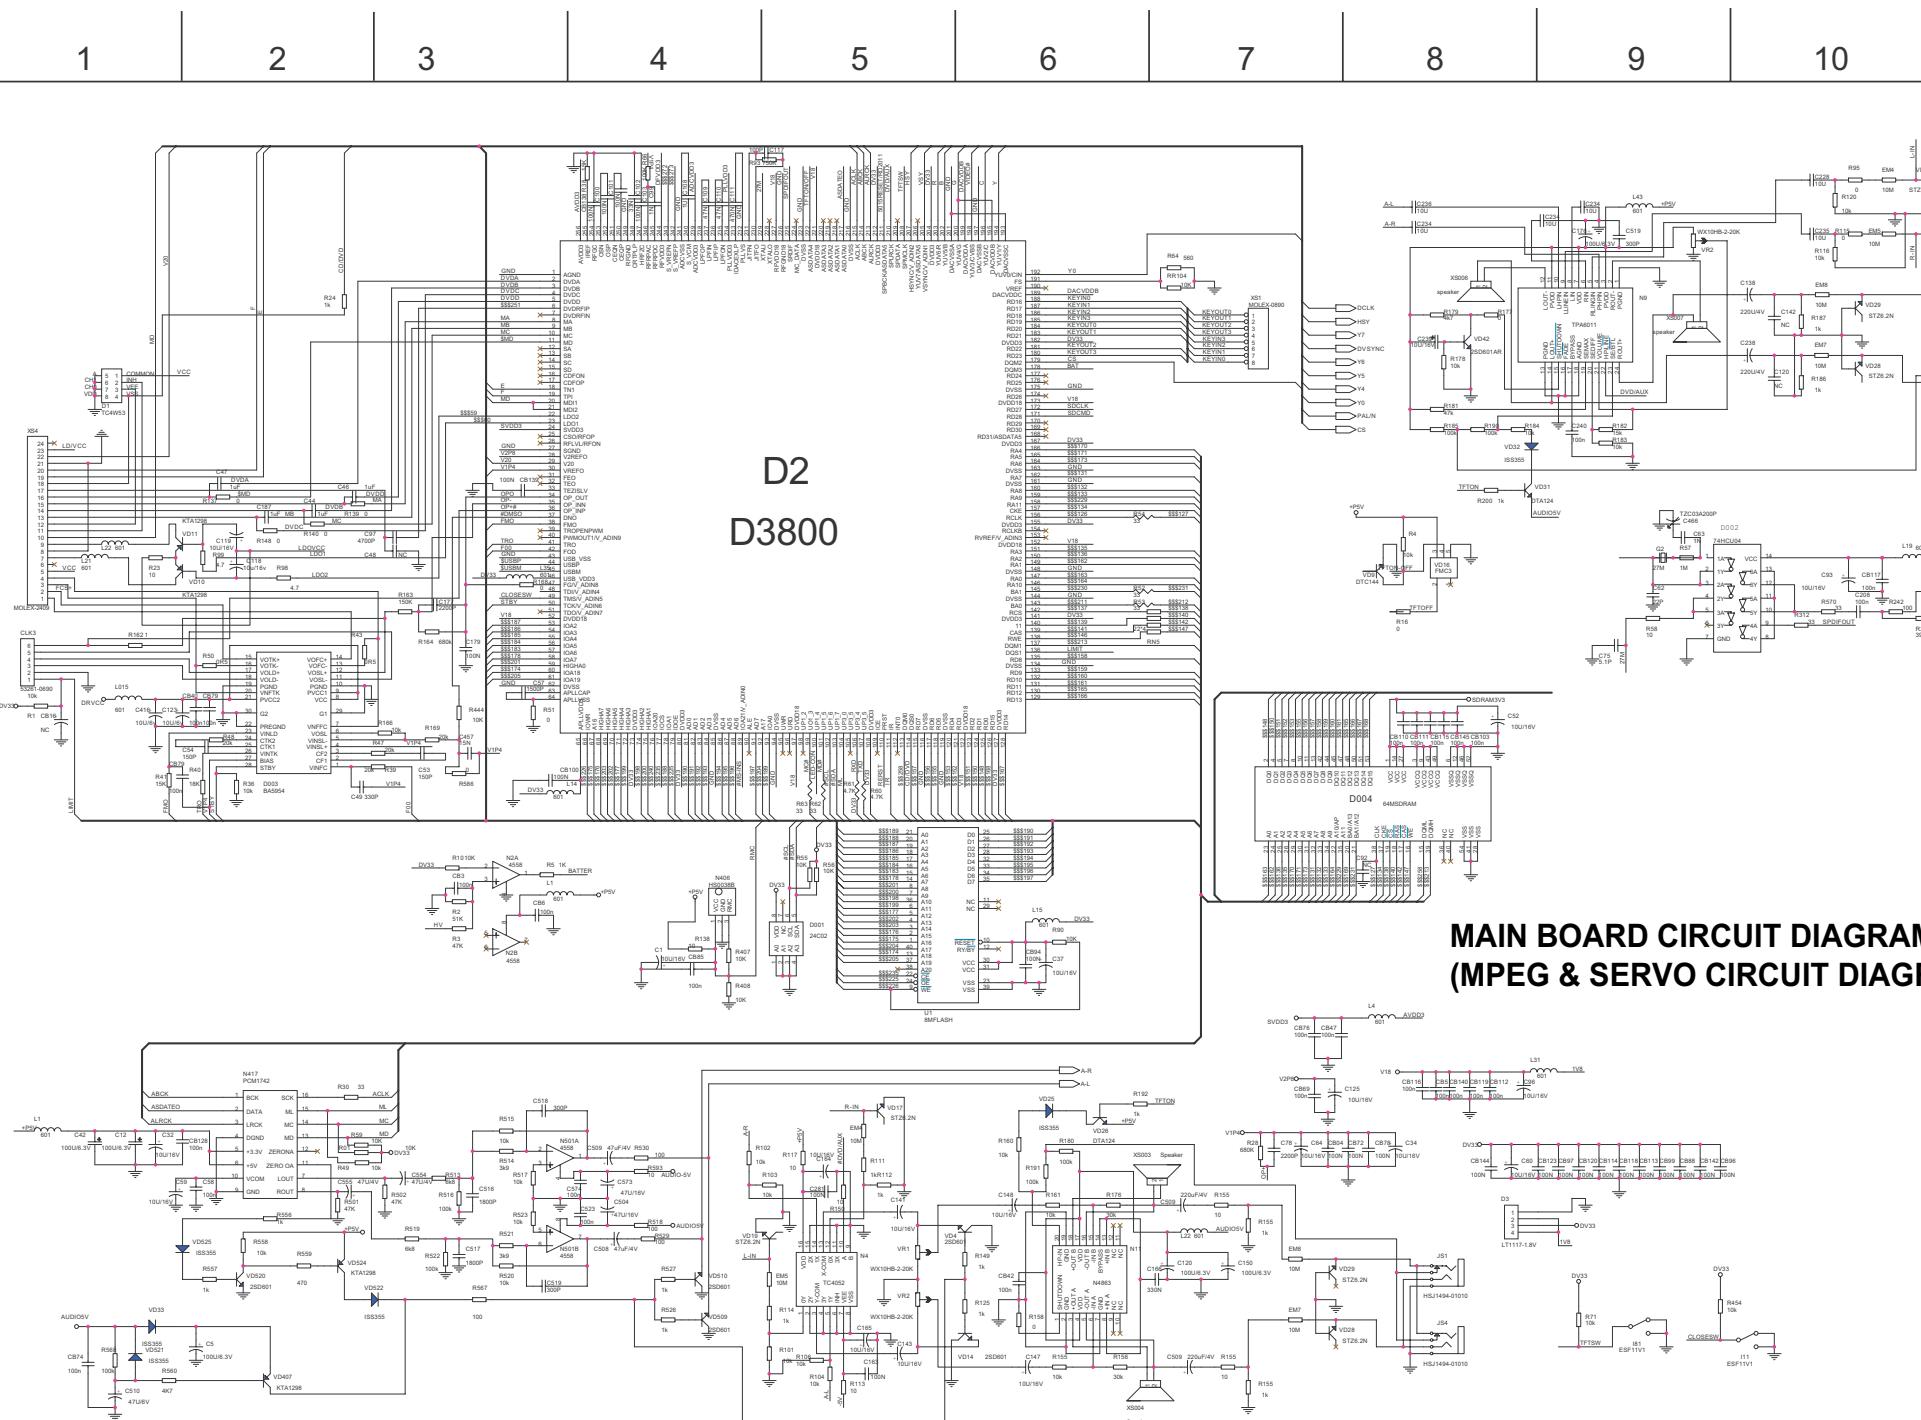



**MAIN BOARD CIRCUIT DIAGRAM
(MPEG & SERVO CIRCUIT DIAGRAM)**

1 2 3 4 5 6 7 8 9 10


HIGH VOLTAGE BOARD CIRCUIT DIAGRAM

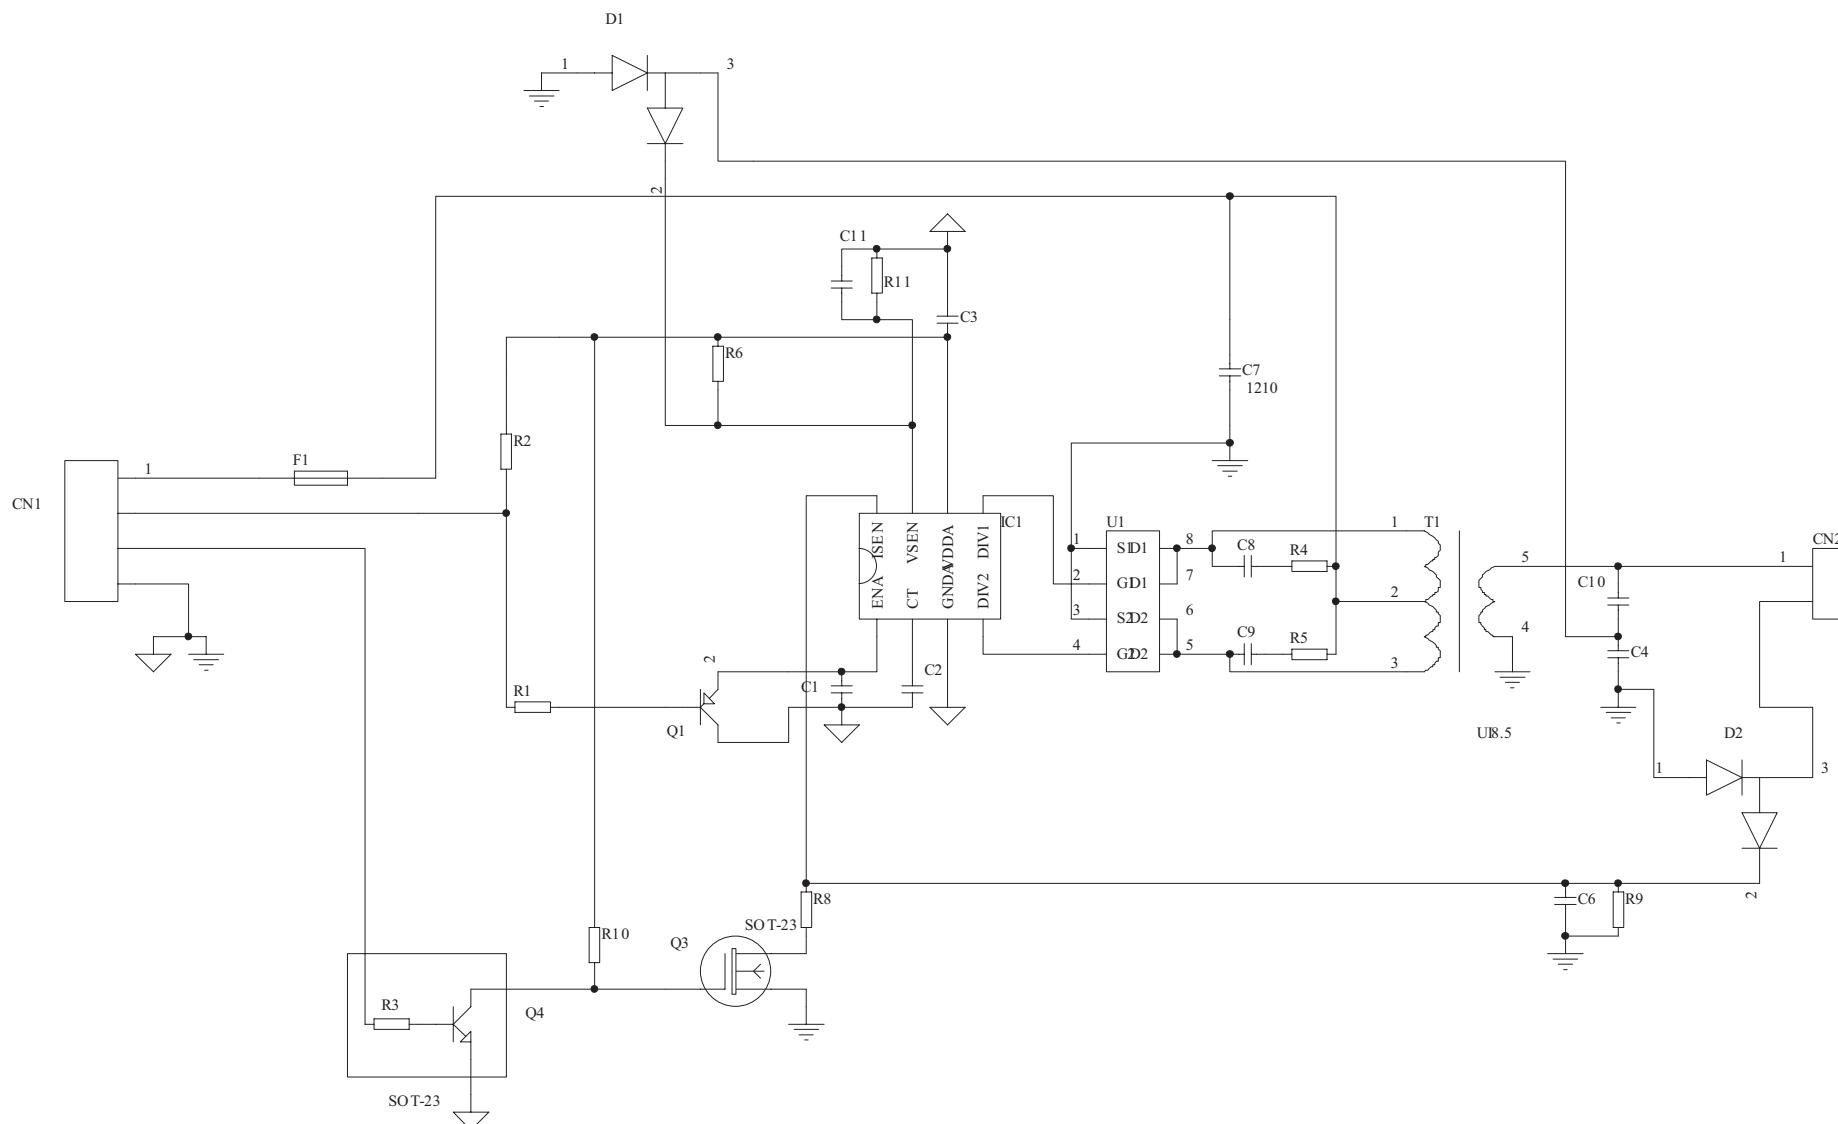

9.0 COMPONENT LAYOUT

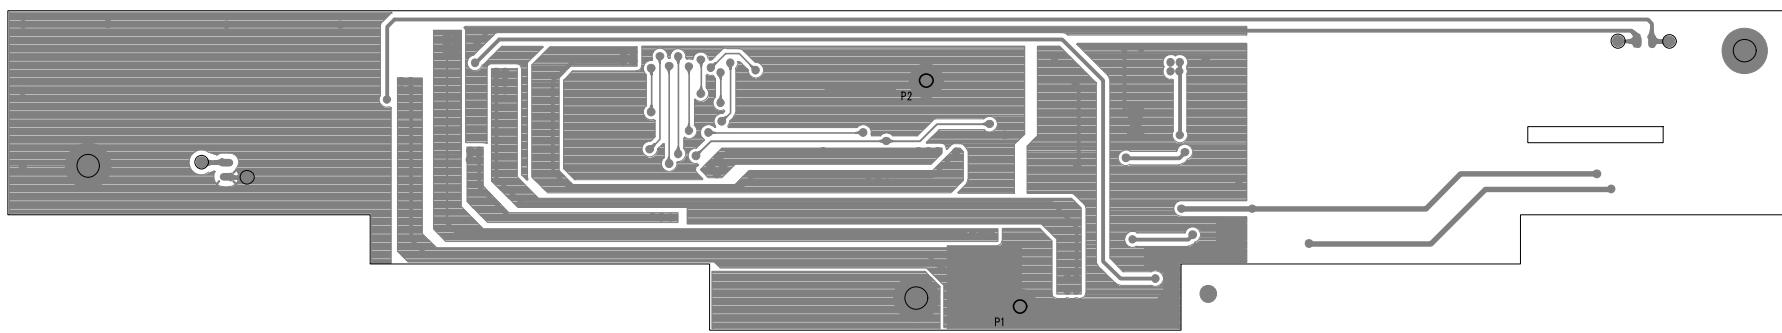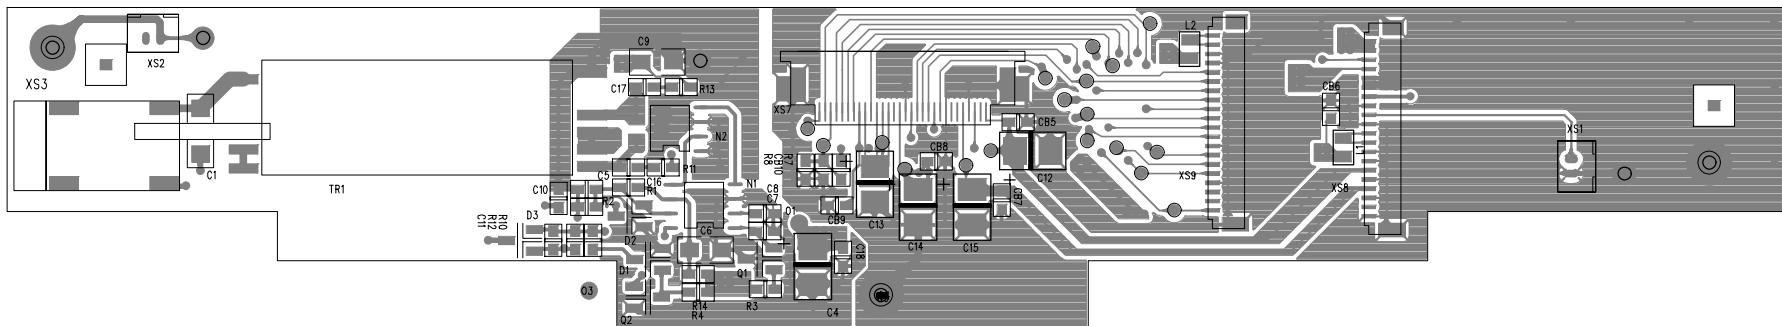

PET800 HV POWER BOARD DIAGRAM

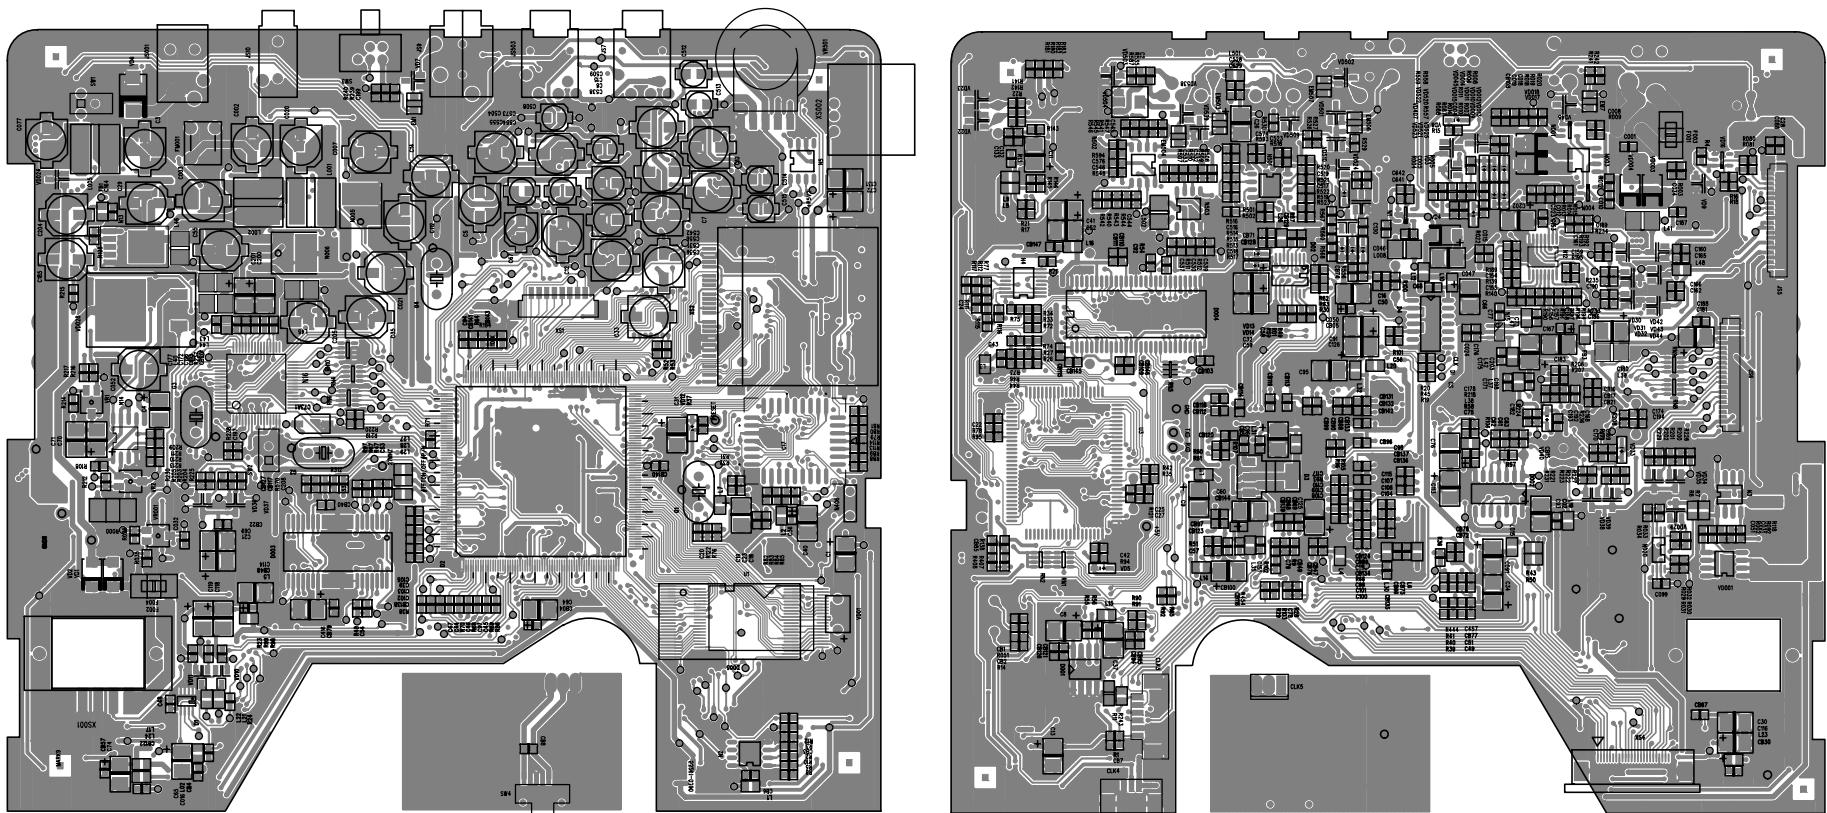

PET800 MAIN BOARD DIAGRAM


10.0 SERVICE PARTS LIST

Service 12NC	Model #	Accessory description	Location Code	Photos
994000001907	PET800	Battery pack	BATTERY	
994000001898	PET800/00	AC/DC adapter /00	ACADAPTOR	
994000003524	PET800/05	AC/DC adapter /05	ACADAPTOR	
994000002896	PET800/55	AC/DC adapter /55	ACADAPTOR	
994000000732	PET800/93	AC/DC adapter /93	ACADAPTOR	
994000000724	PET800	Remote control	RC	
994000001902	PET800	Car cigarette adapter	CARADAPTOR	
994000000726	PET800	AV cable	AVCABLE	
994000000731	PET800	Travel Bag	BAG	

10.0 SERVICE PARTS LIST

994000002899	PET800	PET800 MAIN PCBA for Panasonic module	100	
994000004213	PET800	PET800 MAIN PCBA for Sharp module	100	
994000002904	PET800	IF PCB ASS'Y for Sharp module (Not applicable for Panasonic module)	110	
994000002901	PET800	PET800 HV PCBA for Panasonic module	120	
994000004214	PET800	PET800 HV PCBA for Sharp module	120	
994000002902	PET800	PET800 FUNCTION PCB ASS'Y for both Panasonic and Sharp module	130	
994000002892	PET800	20 PIN HARNESS (LE140)	144	
994000002141	PET800	8" Screen-TFT "LQ080T5GG01S" for Panasonic module	200	
994000004426	PET800	TFT for Sharp module	200	
994000002228	PET800	DV23 LOADING ASS'Y	210	
994000002908	PET800	SPEAKER	220	
994000002903	PET800	TOP COVER ASSY	300	

10.0 SERVICE PARTS LIST

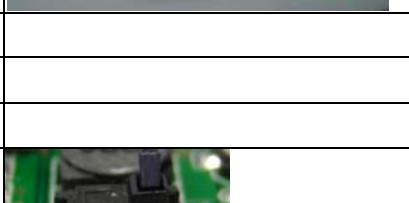994000002335	PET800	DISPLAY FRAME	310	
994000002906	PET800	MIDDLE CABINET	320	
994000002907	PET800	BOTTOM CABINET/00/05/55	330	
994000002337	PET800	BASE COVER	331	
994000002989	PET800	CONTROL KEY PAD	350	
994000002911	PET800	DOOR	360	
994000002338	PET800	DOOR SPRING	410	
994000002341	PET800	OPEN BUTTON SPRING	430	
996500039079	PET800	ON/OFF SWITCH	OFSWITCH	
996500041639	PET800	SWITCH SW1	SW1	

11.0 REVISION LIST

Version 1.0 (3141 785 30570)

Initial release PET800/00/05/55/93

Version 1.1 (3141 785 30571)

Chapter 10:

Service parts list adapted with new parts and revised 12NC as listed below

- Added photo on speaker (994000002908)
- Added the new parts control key pad (994000002989)

Version 1.2 (3141 785 30575)

Chapter 5:

Identification method for Panasonic and Sharp TFT LCD

Chapter 10:

Service parts list adapted with new parts and revised 12NC as listed below

- Changed adaptor/00 from 9940 000 00723 to 9940 000 01898
- Changed adaptor/05 from 9940 000 00728 to 9940 000 02229
- Changed DV23 loader from 9940 000 02894 to 9940 000 02228
- Added the new parts door spring (994000002892)
- Added the new parts open button spring (994000003523)
- Separated the spare parts for Panasonic and Sharp module

Version 1.3 (3141 785 30573)

Chapter 10:

- Added 12NC of new spare part ON/OFF SWITCH (996500039079)
- Changed 12NC of open button spring from 994000003523 to 994000002341
- Changed 12NC of door spring from 994000002892 to 994000002338

Version 1.4 (3141 785 30574)

Chapter 10:

- Added 12NC of new spare part SWITCH SW1 (996500041639)
- Added location code on spare parts