


# Operating Instructions

## STEREO AMPLIFIER

# A-201 A-101

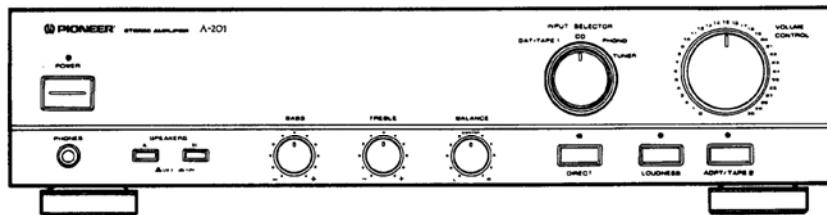

The illustration shows model A-201.

Thank you for buying this PIONEER product.

Please read through these operating instructions so you will know how to operate your model properly. After you have finished reading the instructions, put them away in a safe place for future reference.

In some countries or regions, the shape of the power plug and power outlet may sometimes differ from that shown in the explanatory drawings. However, the method of connecting and operating the unit is the same.

**WARNING:** TO PREVENT FIRE OR SHOCK HAZARD, DO NOT EXPOSE THIS APPLIANCE TO RAIN OR MOISTURE.

### LINE VOLTAGE SELECTOR SWITCH


Only multi-voltage models are provided with this switch. U.S., Canadian, European, U.K., and Australian models are not provided with this switch.

Mains voltage in Saudi Arabia are 127V and 220V only. Never use this model with 110V setting in Saudi Arabia.

The line voltage selector switch is on the rear panel. Before your model is shipped from the factory, this switch is set to the power requirements of the destination. Check that it is set properly before plugging the power cord into the AC wall socket. If the voltage is not properly set or if you move to an area where the voltage requirements differ, adjust the selector switch as follows.

1. Use a medium-size screwdriver.
2. Insert the screwdriver into the groove on the voltage selector, and adjust so that the tip of the arrow points to the voltage value of your area.

### VOLTAGE SELECTOR

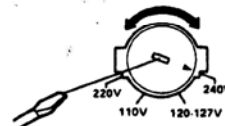

Medium-size screwdriver

 **PIONEER**  
The Art of Entertainment

## IMPORTANT



The lightning flash with arrowhead, within an equilateral triangle, is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.



**CAUTION:**  
TO PREVENT THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK). NO USER-SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

## IMPORTANT

If the apparatus is fitted with AC mains power outlet(s), see REAR PANEL FACILITIES for convenient connection of additional Hi-Fi component(s). Make all connections to the AC outlet(s) and the signal terminals first. Connect the plug to the wall socket last (make sure that the power switch is off.)

## FOR USE IN THE UNITED KINGDOM

The wires in this mains lead are coloured in accordance with the following code:

Blue: Neutral  
Brown: Live

As the colours of the wires in the mains lead of this apparatus may not correspond with the coloured marking identifying the terminals in your plug proceed as follows:

The wire which is coloured blue must be connected to the terminal which is marked with the letter N or coloured black.

The wire which is coloured brown must be connected to the terminal which is marked with the letter L or coloured red.

Do not connect either wire to the earth terminal of a three pin plug.

Equipment sold in the U.K. is not supplied with a power plug.

# SAFETY INSTRUCTIONS

**READ INSTRUCTIONS** — All the safety and operating instructions should be read before the appliance is operated.

**RETAIN INSTRUCTIONS** — The safety and operating instructions should be retained for future reference.

**HEED WARNING** — All warnings on the appliance and in the operating instructions should be adhered to.

**FOLLOW INSTRUCTIONS** — All operating and use instructions should be followed.

**WATER AND MOISTURE** — The appliance should not be used near water — for example, near a bathtub, washbowl, kitchen sink, laundry tub, in a wet basement, or near a swimming pool, etc.

**LOCATION** — The appliance should be installed in a stable location.

**WALL OR CEILING MOUNTING** — The appliance should not be mounted to a wall or ceiling.

**VENTILATION** — The appliance should be situated so that its location or position does not interfere with its proper ventilation. For example, the appliance should not be situated on a bed, sofa, rug, or similar surface that may block the ventilation openings; or, placed in a built-in installation, such as a bookcase or cabinet that may impede the flow of air through the ventilation openings.

**HEAT** — The appliance should be situated away from heat sources such as radiators, heat registers, stoves, or other appliances (including amplifiers) that produce heat.

**POWER SOURCES** — The appliance should be connected to a power supply only of the type described in the operating instructions or as marked on the appliance.

**POWER-CORD PROTECTION** — Power-supply cords should be routed so that they are not likely to be walked on or pinched by items placed upon or against them. Pay particular attention to cords at plugs, convenience receptacles, and the point where they exit from the appliance.

**POLARIZATION** — If your purchased product is provided with a polarized power plug, please read the following instructions. This product is equipped with a polarized alternating current line plug (a plug having one blade wider than the other). This plug will fit into the power outlet only one way. This is a safety feature. If you are unable to insert the plug fully into the outlet, try reversing the plug. If the plug should still fail to fit, contact your electrician to replace your obsolete outlet. Do not defeat the safety purpose of the polarized plug.

**CLEANING** — The appliance should be cleaned only with a polishing cloth or a soft dry cloth. Never clean with furniture wax, benzene, insecticides or other volatile liquids since they may corrode the cabinet.

**POWERLINES** — An outdoor antenna should be located away from power lines.

**NONUSE PERIODS** — The power cord of the appliance should be unplugged from the outlet when left unused for a long period of time.

**OBJECT AND LIQUID ENTRY** — Care should be taken so that objects do not fall and liquids are not spilled into the enclosure through openings.

**DAMAGE REQUIRING SERVICE** — The appliance should be serviced by a Pioneer authorized service center or qualified service personnel when:

- The power-supply cord or the plug has been damaged.
- Objects have fallen, or liquid has been spilled into the appliance.
- The appliance has been exposed to rain.
- The appliance does not appear to operate normally or exhibits a marked change in performance.
- The appliance has been dropped or the enclosure damaged.

**SERVICING** — The user should not attempt to service the appliance beyond that described in the operating instructions. All other servicing should be referred to qualified service personnel.

**OUTDOOR ANTENNA GROUNDING** — If an outside antenna is connected to the antenna terminal, be sure the antenna system is grounded so as to provide some protection against voltage surges and built-up static charges.

In the U.S.A. section 810 of the National Electrical Code, ANSI/NFPA 70, provides information with respect to proper grounding of the mast and supporting structure, grounding of the lead-in wire to an antenna discharge unit, size of grounding conductors, location of antenna discharge unit, connection to grounding electrodes, and requirements for the grounding electrode. See Fig. A.

**CART** — An appliance and cart combination should be moved with care. Quick stops, excessive force, and uneven surfaces may cause the appliance and cart combination to overturn.



NEC — NATIONAL ELECTRIC CODE

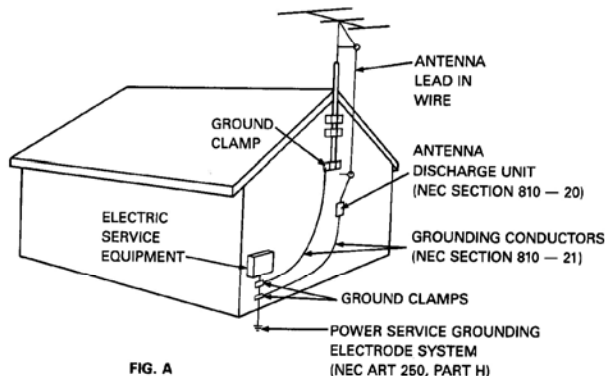


FIG. A

## CONTENTS

FEATURES .....	3	OPERATIONS .....	9
INSTALLATION .....	3	TROUBLESHOOTING .....	10
CONNECTIONS .....	4	SPECIFICATIONS .....	11
PANEL FACILITIES .....	6		

*"This product complies with the Radio Interference requirements of the EC (European Community) Directive 87/308/EEC."*

## FEATURES

- High-power Output of 50 W + 50 W/4  $\Omega$  (DIN), 40 W + 40 W/8  $\Omega$  (DIN)  
[model A-101 ..... 30 W + 30 W/8  $\Omega$  (DIN)]
- The use of a DIRECT circuit ensures high fidelity playback of consistent frequency characteristics, with maximum clarity. (A-201 only)
- Bi-directional dubbing is possible by using two cassette decks.
- Speaker terminals for two speakers systems are provided. (A-201 only)

## INSTALLATION

### LOCATION

**Install the amplifier in a well-ventilated location where it will not be exposed to high temperature or humidity.**

Do not install the amplifier in a location which is exposed to direct rays of the sun, or near to hot appliances or radiators. Excessive heat can adversely affect the cabinet and internal components. Installation of the amplifier in a damp or dusty environment may result in malfunction or accident. (Also avoid installation near cookers etc., where the amplifier may be exposed to smoke from oil, steam or heat.)




### POWER-CORD CAUTION

Handle the power cord by the plug. Do not pull out the plug by tugging the cord and never touch the power cord when your hands are wet as this could cause a short circuit or electric shock. Do not place the unit, a piece of furniture, etc., on the power cord, or pinch the cord. Never make a knot in the cord or tie it with other cords. The power cords should be routed in such a way that they are not likely to be stepped on. A damaged power cord can cause fire or give you an electrical shock. Check the power cord regularly. When you find it damaged, ask your nearest PIONEER authorized service center or your dealer for a replacement.

### MAINTENANCE OF EXTERNAL SURFACES

- Use a polishing cloth or dry cloth to wipe off dust and dirt.
- When the surfaces are very dirty, wipe with a soft cloth dipped in some neutral cleanser diluted five or six times with water, and wrung out well, and then wipe again with a dry cloth. Do not use furniture wax or cleaners.
- Never use thinners, benzene, insecticide sprays and other chemicals on or near this unit, since these will corrode the surfaces.


# CONNECTIONS

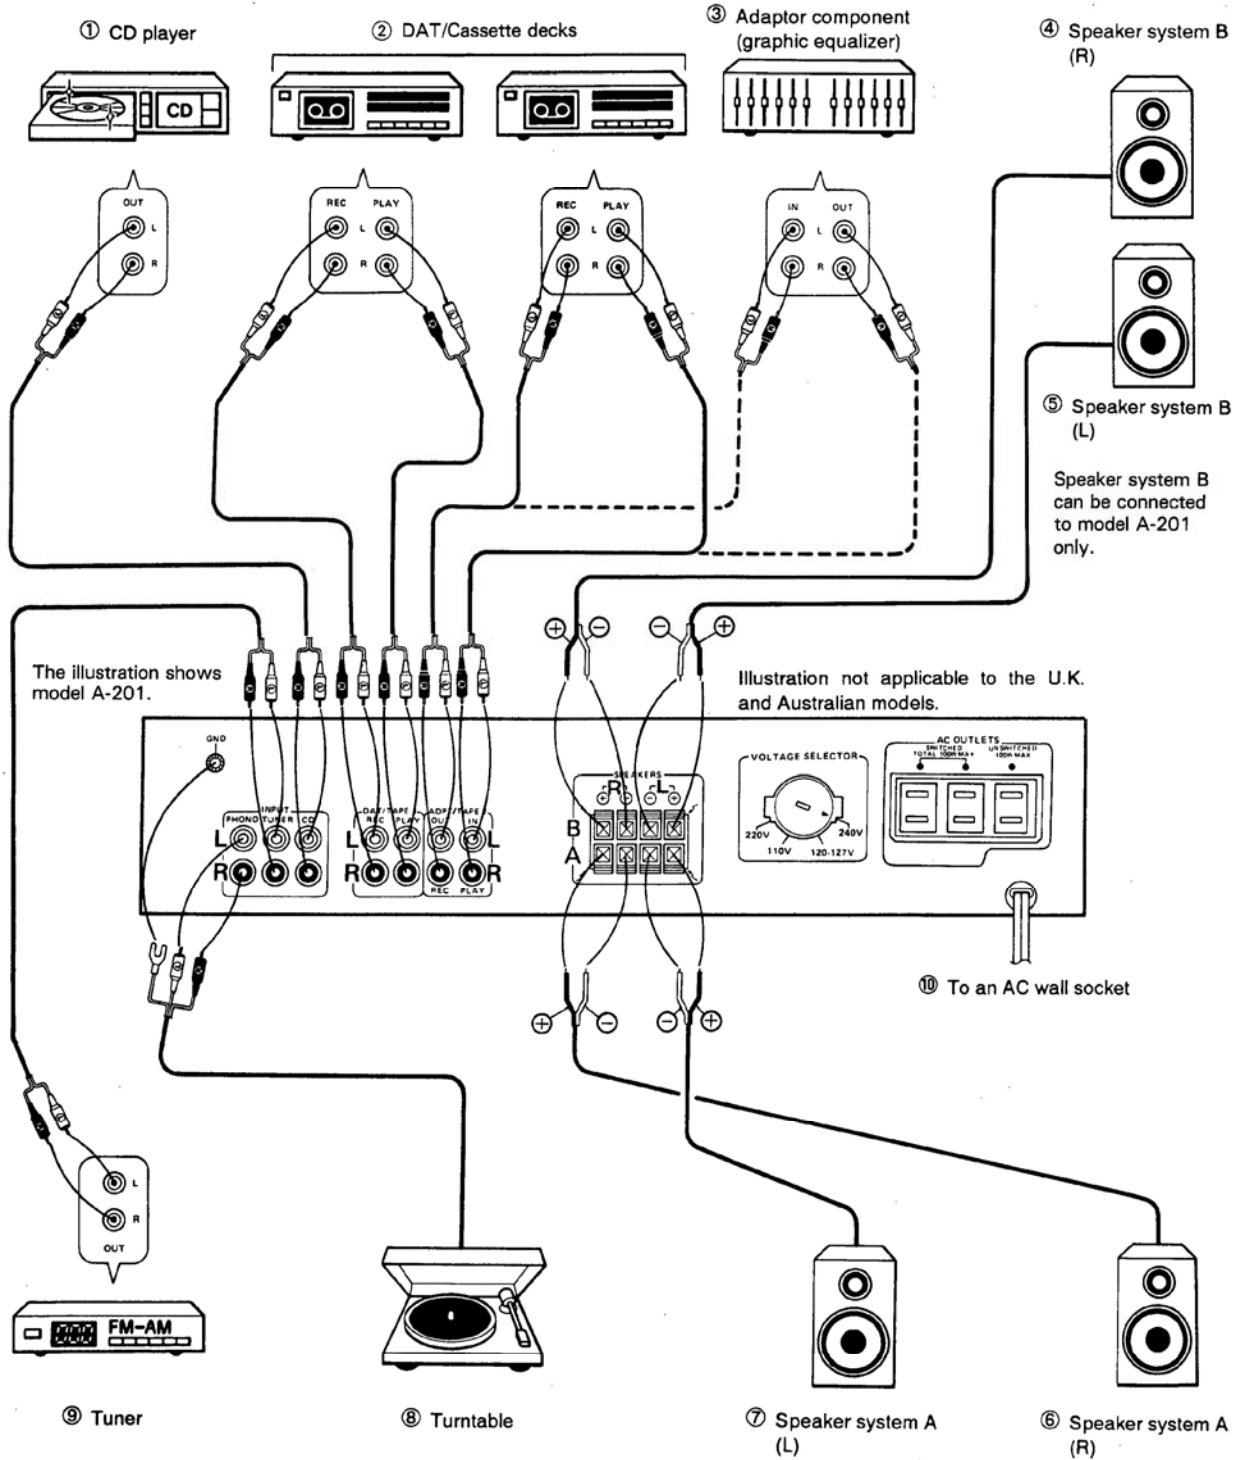


- ① CD player
- ② DAT/Cassette decks
- ③ Adaptor component (graphic equalizer)
- ④ Speaker system B (R)
- ⑤ Speaker system B (L)
- ⑥ Speaker system A (R)
- ⑦ Speaker system A (L)
- ⑧ Turntable
- ⑨ Tuner
- ⑩ To an AC wall socket.

### CONNECTING THE SPEAKER CORDS

 1. Strip off the vinyl covering and twist the tip of the wire core.



2. Raise the lever in the direction of the arrow and insert the exposed conductor into the hole.
3. Now return the lever to its original position to secure the cord.

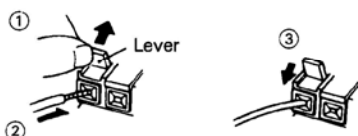

**NOTE:**

Do not allow any of the cord conductors to protrude from the terminals or touch any other conductors. Malfunctioning or breakdowns may occur when conductors come into contact with each other.

[U.K., models only]

Model A-201 can be placed on another component with less depth by changing the position of the rear feet. (However, a minimum depth of 200 mm is required.)

**Change the position of the rear feet as follows:**

1. Remove the AC plugs, connection cords etc., connected to the amplifier, and turn the unit upside down.
2. Remove the screws holding the rear feet using a (+) screwdriver.
3. Move the rear feet to the holes located towards the center of the unit (see the arrows in the diagram).
4. Secure the feet by tightening the screws removed in step 2 with a (+) screwdriver.

### Speaker Impedance

[Model A-201]


- When speaker systems are connected to only SPEAKERS A or SPEAKERS B terminals, such speakers should have rated impedance in the range of 4-16  $\Omega$ .
- When speakers are connected to both the A and B terminals, they should have a rated impedance in the range of 8-32  $\Omega$ .

[Model A-101]


- The speaker systems used should have a rated impedance in the range of 6-16  $\Omega$ .

### CONNECTING THE INPUT/OUTPUT CORDS

Connect the white plug to the L (left) side, and the red plug to the R (right) side. Be sure to push the plugs securely.

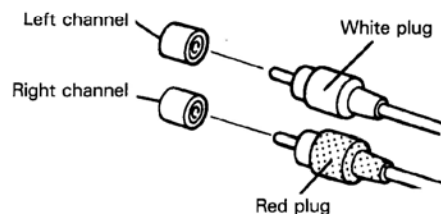

The INPUT/OUTPUT jacks of this unit are dull tinplated, for high audio quality.

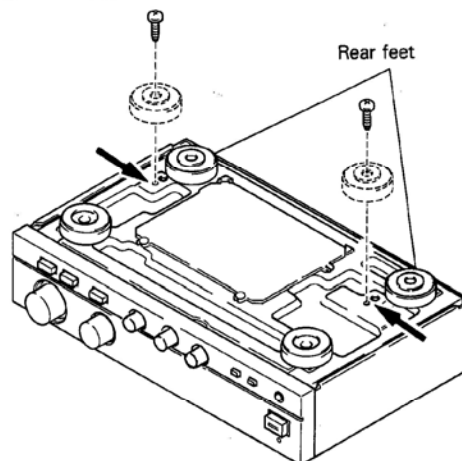


The illustration shows model A-201.

## PANEL FACILITIES

### [FRONT PANEL]

The illustration shows model A-201.  
Model A-101 is not equipped with ⑧, ⑩ and ⑪.

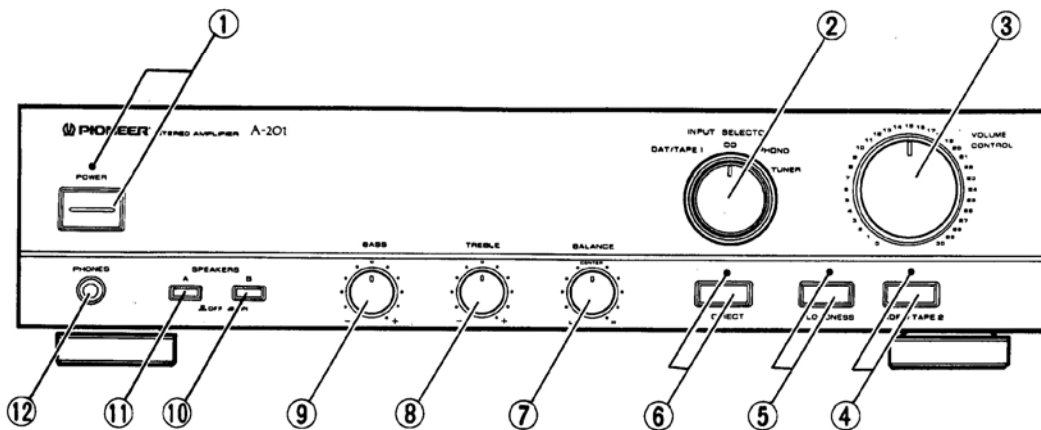

#### ① POWER switch/indicator

Press to turn power to the unit ON and OFF.

##### ON:

Indicator lights.

##### OFF:

Indicator goes out.

#### ② INPUT SELECTOR switch

Use to select the playback source.

##### TUNER:

For AM or FM broadcast reception with a tuner.

##### PHONO:

For record playback with a turntable.

##### CD:

For compact disc playback with a CD player.

##### DAT/TAPE 1:

For playback with a cassette deck or digital audio tape deck connected to the DAT/TAPE 1 terminals.

#### ③ VOLUME CONTROL

Use to adjust the volume level.

#### ④ ADPT/TAPE 2 monitor switch/indicator

Use when there is an adaptor component (graphic equalizer, etc.) or cassette deck connected to the ADPT/TAPE 2 terminals.

##### OFF:

Indicator goes out when not in use.

##### ON:

Indicator lights when using the adaptor component or listening to the cassette deck.

##### NOTE:

- When no connections are made to the ADPT/TAPE 2 terminals, or when they are not in use, be sure to set to this switch to the OFF position. (No sound will be heard if it is set to ON position)
- When the DIRECT switch is set to ON, the input to be reproduced is always selected with the INPUT SELECTOR, regardless of whether the ADPT/TAPE 2 indicator lights or not. Furthermore, when the ADPT/TAPE 2 indicator is ON, signals input through ADPT/TAPE 2 are output at DAT/TAPE 1 REC OUT. (A-201 only)

⑤ **LOUDNESS switch/indicator**

Use when listening at low volume levels.

**ON:**

The indicator lights: Boosts low and high frequencies to give added punch to playback even at low volume levels.

**OFF:**

The indicator goes off: Should normally be left in this position.

⑥ **DIRECT switch/indicator**  
(A-201 only)

Use this switch when you do not wish to pass the output from input terminal equipment through the various frequency adjusting circuits (BASS, TREBLE, BALANCE.)

**ON:**

The indicator lights: The signals input through the input terminals are reproduced without passing through the various frequency adjusting circuits. This results in flat, pure sound which is a more faithful reproduction of the input source.

**OFF:**

The indicator goes out: The signal passes through the various frequency adjusting circuits.

⑦ **BALANCE control**

Should normally be left in the center position. Adjust the balance if the sound is louder from one of the speakers. If the right side is louder, turn toward the L (left) position and if the left side is louder, turn toward the R (right) position.

**NOTE:**

*This control does not operate when the DIRECT switch is in the ON position. (A-201 only)*

⑧ **TREBLE tone control**

Use to adjust the high-frequency tone. The center position is the flat (normal) position. When turned to the right, high-frequency tone is emphasized; when turned to the left, high-frequency tone is de-emphasized.

**NOTE:**

*This control does not operate when the DIRECT switch is in the ON position. (A-201 only)*

⑨ **BASS tone control**

Use to adjust the low-frequency tone. The center position is the flat (normal) position. When turned to the right, low-frequency tone is emphasized; when turned to the left, low-frequency tone is de-emphasized.

**NOTE:**

*This control does not operate when the DIRECT switch is in the ON position. (A-201 only)*

⑩ **SPEAKERS B selector switch**  
(A-201 only)

Use this switch to listen to the speaker systems connected to the SPEAKERS B terminals.

**ON (▲):**

Depressed position: Sound is heard from the speaker systems.

**OFF (■):**

Released position: No sound is heard from the speaker systems. Set to this position when listening with headphones.

⑪ **SPEAKERS A selector switch**  
(A-201 only)

Use this switch to listen to the speaker systems connected to the SPEAKERS A terminals.

**ON (▲):**

Depressed position: Sound is heard from the speaker systems.

**OFF (■):**

Released position: No sound is heard from the speaker systems. Set to this position when listening with headphones.

⑫ **PHONES jack**


When using headphones, insert the plug into this jack. With model A-101 the output to the speakers is cut automatically when connecting headphones.

## PANEL FACILITIES

### [REAR PANEL]

The illustration shows model A-201.  
Model A-101 is not equipped with ⑳ ㉑ ㉔ and ㉕.

The U.K. and Australian models (A-201 and A-101)  
are not equipped with ㉒ and ㉓.

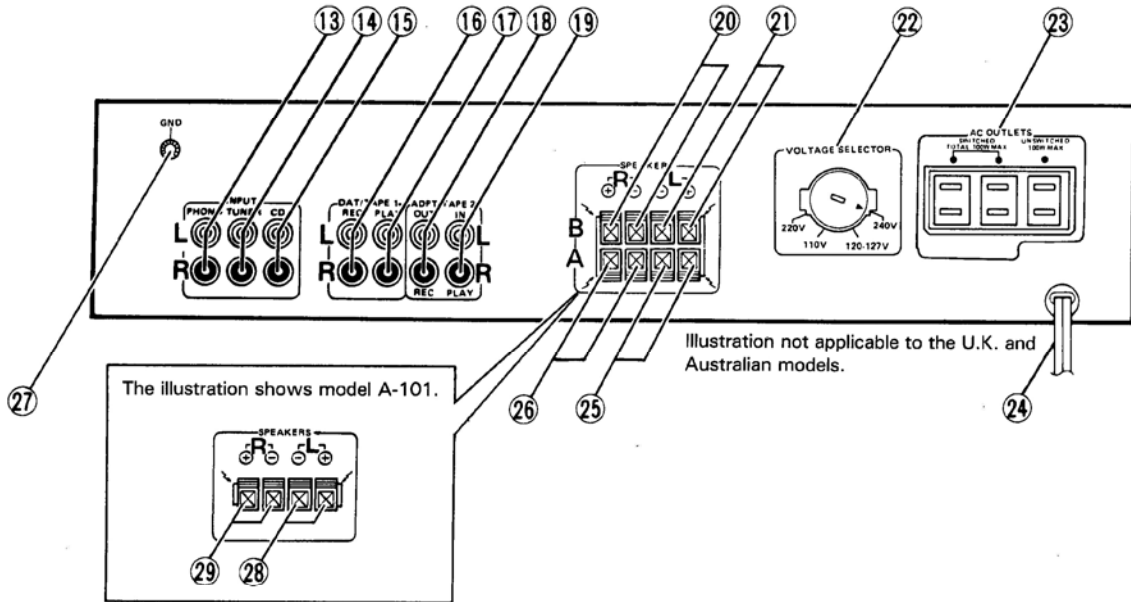

- ⑬ PHONO terminals
- ⑭ TUNER terminals
- ⑮ CD terminals
- ⑯ DAT/TAPE 1 REC terminals
- ⑰ DAT/TAPE 1 PLAY terminals
- ⑱ ADPT/TAPE 2 OUT (REC) terminals
- ⑲ ADPT/TAPE 2 IN (PLAY) terminals
- ⑳ SPEAKERS B terminals (right channel)  
(A-201 only)
- ㉑ SPEAKERS B terminals (left channel)  
(A-201 only)
- ㉒ VOLTAGE SELECTOR  
(Not provided on the models for U.K. and Australia.)

- ㉓ AC OUTLETS  
(Not provided on the models for U.K. and Australia.)

#### AC OUTLETS (SWITCHED)

Power supplied through these outlets is turned on and off by the amplifier's POWER switch. Total electrical power consumption of connected equipment should not exceed 100 W.

#### AC OUTLET (UNSWITCHED)

Power flows continuously to this outlet, regardless of whether the amplifier is switched ON or OFF. Electrical power consumption of the connected equipment should not exceed 100 W. The equipment should be disconnected by removing the power plug from the wall socket when not in regular use, e.g., when on vacation.

#### NOTE:

Do not connect appliances with high power consumption such as heaters, irons, or television sets to the AC OUTLETS in order to avoid overheating or fire risk.

- ㉔ Power cord  
Connect this cord to an AC wall socket, or the AC outlet of an audio timer.
- ㉕ SPEAKERS A terminals (left channel)  
(A-201 only)
- ㉖ SPEAKERS A terminals (right channel)  
(A-201 only)
- ㉗ Turntable ground terminal (GND)
- ㉘ SPEAKERS terminals (left channel)  
(A-101 only)
- ㉙ SPEAKERS terminals (right channel)  
(A-101 only)



## OPERATIONS

Switch numbers used in the following explanations refer to the numbers appearing in the illustration on page 6.

### BEFORE BEGINNING OPERATIONS

Set the controls and switches as follows: See page 6.

1. Set **POWER** switch ① to **ON**.
2. Press the **SPEAKERS A** selector switch ⑪, **SPEAKERS B** selector switch ⑩, or both switches. (A-201 only)
3. Set the **BALANCE** control ⑦ to the center position.
4. Set the **DIRECT** switch ⑥ to **OFF**. (A-201 only)
5. Set the **ADPT/TAPE 2 monitor** switch ④ to **OFF**.

### PLAYBACK PROCEDURES

1. Set the **INPUT SELECTOR** switch ② to the desired playback source.
  - For reception of an AM/FM broadcast: Set to [TUNER].
  - For playback of a record: Set to [PHONO].
  - For playback of a compact disc: Set to [CD].
  - For playback of a tape: Set to [DAT/TAPE 1].
2. Operate the equipment to begin playback.
3. Adjust playback volume with **VOLUME CONTROL** ③ on this unit.

### RECORDING TAPES:

1. Select the recording equipment with **INPUT SELECTOR** switch ②.
2. Begin recording by operating the recording equipment and cassette deck.
  - Refer to the operating instructions for your cassette deck for proper operating procedures.

### COPYING TAPES:

When two decks are used (or when using double cassette deck), you can record the sounds from one deck onto the other.

#### Application examples:

- To make a tape copy with contents identical to the original tape.
- To edit a recording of an FM broadcast in order to cut out unwanted commercials, recording only desired material onto another tape.

### When using two cassette decks

1. Load tapes for playback (prerecorded tape) and recording (blank tape) into the respective cassette decks.
2. Select the copying direction with the **INPUT SELECTOR** switch ② and **ADPT/TAPE 2 monitor** switch ④.

- When copying from the cassette deck of the DAT/TAPE 1 terminals to the cassette deck of the ADPT/TAPE 2 terminals: Set the **INPUT SELECTOR** switch to DAT/TAPE 1 and **ADPT/TAPE 2 monitor** switch to **OFF**.
- When copying from the cassette deck of the ADPT/TAPE 2 terminals to the cassette deck of the DAT/TAPE 1 terminals: Set the **ADPT/TAPE 2 monitor** switch to **ON** and the **INPUT SELECTOR** to a position other than DAT/TAPE 1.

### 3. Operate the cassette decks to begin copying.

Set the cassette deck with the original (playback) tape to the playback mode, and set the cassette deck with the blank tape to the recording mode.

### TO USE THE COMPONENT CONNECTED TO THE ADPT/TAPE 2 TERMINALS:

#### [For an adaptor component]

By connecting a graphic equalizer, source sounds (from records, tapes, AM/FM broadcasts, etc.) can be heard with added sound and tone compensation.

Sounds compensated via the adaptor component can be recorded.

#### NOTE:

When the **DIRECT** switch ⑥ is **ON**, the adaptor component cannot be used to modify the source sounds. (A-201 only)

1. Set the **ADPT/TAPE 2 monitor** switch ④ to **ON**.
2. Play back the source.
3. Operate the adaptor component.

#### [For a cassette deck]

A cassette deck connected here can be operated in the same way (recording and playback) as a deck connected to the DAT/TAPE 1 terminals.

Also, if two decks are used, you can copy tapes from one deck onto the other (see the section "Copying Tapes")

#### NOTE:

To play a tape with the cassette deck connected to the ADPT/TAPE 2 terminals the **DIRECT** switch must be set to **OFF** (A-201 only)

1. Set the **ADPT/TAPE 2 monitor** switch ④ to **ON**.
2. Operate the cassette deck to perform playback (or recording).

## TROUBLESHOOTING

Incorrect operations are often mistaken for trouble and malfunctions. If you think that there is something wrong with this component, check the points below. Sometimes the trouble may lie in another component. Investigate the other components and electrical appliances being used. If the trouble cannot be rectified even after exercising the checks listed below, ask your nearest PIONEER authorized service center or your dealer to carry out repair work.

Symptom	Cause	Remedy
No power supplied to unit.	<ul style="list-style-type: none"> <li>Power plug is disconnected from outlet.</li> <li>The component power plug has been plugged into another component power outlet (e.g. timer, etc.) but power to that unit is disconnected.</li> </ul>	<ul style="list-style-type: none"> <li>Insert plug securely into outlet.</li> <li>Turn on power to the other component.</li> </ul>
No sound.	<ul style="list-style-type: none"> <li>Connecting cords are disconnected from terminals, or connected incorrectly.</li> <li>Terminals, or connecting cords pin plugs are dirty.</li> <li>The ADPT/TAPE 2 monitor switch ④ is set to ON (except when using an adaptor component).</li> <li>The cassette deck for playback connected to ADPT/TAPE 2 and the DIRECT switch ⑥ is set to ON (A-201 only).</li> <li>Operation of other components is incorrect.</li> <li>Both SPEAKERS selector switches are set to "OFF" (A-201 only).</li> <li>The position of the INPUT SELECTOR ② does not match the component to be played back.</li> </ul>	<ul style="list-style-type: none"> <li>Connect securely.</li> <li>Clean terminals and plugs.</li> <li>Set switch ④ to OFF.</li> <li>Set the DIRECT switch ⑥ to OFF.</li> <li>Consult the operating instructions for the other components.</li> <li>Set one switch or both switches to "ON".</li> <li>Set the switch ② correctly (CD, PHONO, TUNER, DAT/TAPE 1).</li> </ul>
No sound from one speaker.	<ul style="list-style-type: none"> <li>Connecting cords or speaker cords are disconnected on that side.</li> <li>BALANCE control is set to one side.</li> </ul>	<ul style="list-style-type: none"> <li>Connect securely.</li> <li>Set BALANCE control to center position.</li> </ul>
Cannot record tapes.	<ul style="list-style-type: none"> <li>Connections are incorrect.</li> <li>Operation of cassette deck is incorrect.</li> <li>The ADPT/TAPE 2 monitor switch ④ is set to ON.</li> </ul>	<ul style="list-style-type: none"> <li>Reconnect properly.</li> <li>Consult the operating instructions for the cassette deck.</li> <li>Set the ADPT/TAPE 2 monitor switch ④ to OFF.</li> </ul>
Cannot perform tape copying.	<ul style="list-style-type: none"> <li>The positions of the INPUT SELECTOR switch ② and ADPT/TAPE 2 monitor switch ④ are incorrect (when using 2 cassette decks).</li> <li>Operation of cassette decks is incorrect.</li> </ul>	<ul style="list-style-type: none"> <li>Set switches correctly (See section COPYING TAPES).</li> <li>Consult the operating instructions for the cassette decks.</li> </ul>

## SPECIFICATIONS

### [A-201]

#### Amplifier Section

Continuous power output (both channels driven at 20 Hz to 20 kHz)**	
T.H.D. 0.07 %, 8 Ω	35 W + 35 W*
DIN Continuous power output (both channels driven at 1 kHz)	
T.H.D. 1.0 %, 8 Ω	40 W + 40 W
T.H.D. 1.0 %, 4 Ω	50 W + 50 W
Dynamic power output (E.I.A. test signal)	
4 Ω	66 W
Total harmonic distortion**	
20 Hz to 20 kHz, 35 W, 8 Ω	0.07 %*
Input sensitivity/impedance	
PHONO (MM)	2.5 mV/50 kΩ
CD, TUNER, DAT/TAPE 1, ADPT/TAPE 2	150 mV/50 kΩ
PHONO overload level	
1 kHz, T.H.D. 0.1 % (MM)	150 mV
Output level/impedance	
TAPE REC, ADAPTOR OUTPUT	150 mV/2.2 kΩ
Frequency response	
PHONO (MM), 20 Hz to 20 kHz	± 0.5 dB
CD, TUNER, DAT/TAPE 1, ADPT/TAPE 2, 10 Hz to 50 kHz	± 1/2 dB*
Tone control (volume control set at -30 dB position)	
BASS	± 8 dB (100 Hz)
TREBLE	± 8 dB (10 kHz)
Loudness control (volume control set at -30 dB position)	
	+6 dB (100 Hz)/+3 dB (10 kHz)
Signal-to-Noise ratio (IHF short circuit, A network)	
PHONO (MM, 5 mV input)	77 dB*
CD, TUNER, DAT/TAPE 1, ADPT/TAPE 2	100 dB*
Signal-to-Noise ratio (DIN, continuous power/50 mW)	
PHONO (MM)	67 dB/61 dB*
CD, TUNER, DAT/TAPE 1, ADPT/TAPE 2	83 dB/63 dB*

#### Power Supply/Miscellaneous

Power requirements	
U.K. model	a.c. 240 Volts, 50/60 Hz
Other destination models	
	AC 110V/120 ~ 127V/220V/240V (switchable), 50/60 Hz
Power Construction	330 W
Dimensions (including knobs and other protruding parts)	
	420 (W) x 282 (D) x 103 (H) mm
Weight (without package)	5.6 kg

#### Accessories

Operating instructions	1
------------------------	---

#### NOTE:

Specifications and design subject to possible modification without notice, due to improvements.

- \* Measured with DIRECT switch set to ON.  
For ADPT/TAPE 2, however, measured with the DIRECT switch set to OFF and the tone and balance controls in center position.
- \*\* Measured by Audio Spectrum Analyzer.

### [A-101]

#### Amplifier Section

Continuous power output (both channels driven at 30 Hz to 20 kHz)**	
T.H.D. 0.2 %, 8 Ω	25 W + 25 W*
DIN Continuous power output (both channels driven at 1 kHz)	
T.H.D. 1.0 %, 8 Ω	30 W + 30 W
Total harmonic distortion**	
30 Hz to 20 kHz, 25 W, 8 Ω	0.2 %*
Input sensitivity/impedance	
PHONO (MM)	2.5 mV/50 kΩ
CD, TUNER, DAT/TAPE 1, ADPT/TAPE 2	150 mV/50 kΩ
PHONO overload level	
1 kHz, T.H.D. 0.1 % (MM)	150 mV
Output level/impedance	
TAPE REC, ADAPTOR OUTPUT	150 mV/2.2 kΩ
Frequency response	
PHONO (MM), 30 Hz to 20 kHz	± 0.5 dB
CD, TUNER, DAT/TAPE 1, ADPT/TAPE 2, 10 Hz to 50 kHz	± 1/2 dB*
Tone control (volume control set at -30 dB position)	
BASS	± 8 dB (100 Hz)
TREBLE	± 8 dB (10 kHz)
Loudness control (volume control set at -30 dB position)	
	+6 dB (100 Hz)/+3 dB (10 kHz)
Signal-to-Noise ratio (IHF short circuit, A network)	
PHONO (MM, 5 mV input)	77 dB*
CD, TUNER, DAT/TAPE 1, ADPT/TAPE 2	95 dB*
Signal-to-Noise ratio (DIN, continuous power/50 mW)	
PHONO (MM)	63 dB/60 dB*
CD, TUNER, DAT/TAPE 1, ADPT/TAPE 2	81 dB/62 dB*

#### Power Supply/Miscellaneous

Power requirements	
Australian model	a.c. 240 V, 50/60 Hz
Other destination models	
	AC 110V/120 ~ 127V/220V/240V (switchable) 50/60 Hz
Power Construction	210 W
Dimensions (including knobs and other protruding parts)	
Australian and other destination models	
	420 (W) x 282 (D) x 98 (H) mm
Weight (without package)	4.6 kg

#### Accessories

Operating instructions	1
------------------------	---

#### NOTE:

Specifications and design subject to possible modification without notice, due to improvements.

- \* Measured with tone and balance controls set to center position.
- \*\* Measured by Audio Spectrum Analyzer.

Published by Pioneer Electronic Corporation.  
Copyright © 1992 Pioneer Electronic Corporation.  
All rights reserved.

---

**PIONEER ELECTRONIC CORPORATION** 4-1, Meguro 1-Chome, Meguro-ku, Tokyo 153, Japan  
**PIONEER ELECTRONICS [USA] INC.** 2265 East 220th Street, Long Beach, California 90810, U.S.A.  
P.O. BOX 1720, Long Beach, California 90801, U.S.A.  
**PIONEER ELECTRONICS OF CANADA, INC.** 300 Allstate Parkway Markham, Ontario, L3R 0P2, Canada  
**PIONEER ELECTRONIC [EUROPE] N.V.** Haven 1087 Keetberglaan 1, 9120 Melsele, Belgium, TEL: 03/750.05.11  
**PIONEER ELECTRONICS AUSTRALIA PTY. LTD.** 178-184 Boundary Road, Braeside, Victoria 3195, Australia, TEL: [03] 580-9911