

AVIC-Z1

Quick Start Guide

This guide is intended to guide you through the basic functions of this navigation system. For details, please refer to the Operation Manual and Hardware Manual provided with the product.

Hardware buttons



(1) OPEN CLOSE button

Press to access the DVD loading slot. Press and hold to display the angle adjustment screen.

(2) V button

Press to enter the PICTURE ADJUSTMENT mode.

(3) VOL (▼/▲) button

You can adjust the volume of Audio source.

(4) AV button

Press to switch the screen to the audio operation screen. If you press the AV button again, the audio source switches.

(5) MENU button

Press to display a navigation menu.

(6) MAP button

Press to view the navigation map screen or press to switch view mode.

(7) TRK (◀/▶) button

Pressing this button when the built-in DVD drive source is selected skips a track or a chapter. Press and hold to fast forward/fast reverse a track or a chapter.

(8) P.LIST (▼/▲) button

Switches preset channels during the Radio operation.

(9) T button*

Preset button for XM Instant Traffic and SIRIUS traffic channel. Hold down to assign preset and you can recall that later.

*: XM satellite radio tuner (GEX-P10XMT or GEX-P920XM) or SIRIUS satellite radio tuner (SIR-PNR2) is required, together with an active subscription separately.

Switching the screen



 
AV screen

Navigation map

Search function overview

This navigation system has multiple methods for entering your destination.

Press the **MENU** button to display the navigation menu.

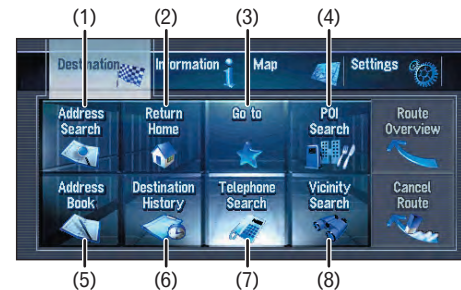

- Search by address
- Shortcut key for home address
- Shortcut key for favorite destination
- Search for POIs in the database
- Select a destination from your registered point
- Select a previously routed destination
- Search destination by business telephone number
- Search for POIs in your vicinity

Search result list for vicinity search



POI.....Restaurants, Hotels, Gas Stations, and other stores and businesses

Searching your destination by address

1 Press the **MENU** button and then touch "Address Search".

 
2 Select state or province by **OK** and then input the house number and touch "OK".



3 Input the street name.



4 Select the street name from list. After some steps for narrowing down your destination, the route calculation carried out and the route confirmation screen appears.

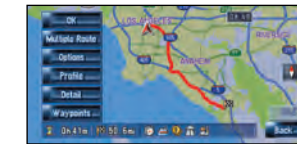

If you want to get another recommended route, by "Multiple route" and choose the best one.

5 Touch "OK" to decide your route, and then the navigation starts.

6 Begin driving in accordance with navigation guidance.



 
This navigation systems gives you route guidance both visually and by voice.

Setting the voice guidance volume



Press or touch in the following order.
MENU button → **Settings** tab
 → **Volume**

Basic operation on the map screen

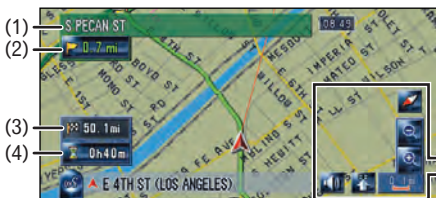

Mute the navigation voice
 Touch

Short-cut Menu
 Touch

Zoom in or zoom out
 Touch or

Scrolling the map

Touch where you would like to scroll to on the map screen.

- (1) Next street
- (2) Distance to the next guidance point
- (3) Distance to your destination
- (4) Estimated time of arrival (in default)

Traffic information on the map

Traffic conditions can be overlaid on the map. GEX-P10XMT XM Digital Satellite Data & Audio Receiver (sold separately) is required, together with an active subscription for the XM NavTraffic service.



(1) Traffic event

- Stopped traffic
- Stop and go traffic
- Closed/blocked roads
- Other event (e.g., accident)

(2) Traffic flow

- 5-15 mph (8-24 km/h)
- 20-40 mph (32-64 km/h)
- 45 mph or faster (72 km/h or faster)

The icon indicates that the average speed of the road is over 45 mph (72 km/h).

Changing the AV source

1 Touch the source icon.



 
2 Touch the desired AV source.



- (1) You can switch the AV source for rear display in the following order.
“MIRROR” (Same as front) – **“DVD”** (DVD drive) – **“AV”** (AV input)

Operation of Music Library


First, you need to play a CD for recording into the built-in hard disk drive. (The recording is carried out by 4 times speed in parallel with playing that CD.) After the recording, you can find and select the song easily from a playlist.

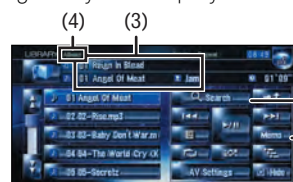

- (1) Search a song by album name, artist name, genre, customized playlist.
- (2) Touch and hold to memorize that song as “My Mix” playlist.
- (3) Information of current song
- (4) “Group” playing now.

Operation of XM Satellite Radio

 You can use the navigation system to control a XM satellite digital tuner. GEX-P10XMT (sold separately) is required, together with an active subscription.

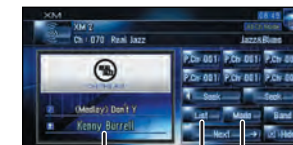


- (1)
- (3)
- (2)

- (1) Shows detailed information of current broadcast.
- (2) Use to change the channel select mode.
- (3) Each touch allows you to change the left screen in the following order:
 Detail information display – Ch Name List – Song Title List – Artist Name List

Operation of your Apple iPod®

 You can control your iPod with Dock connector via the touch screen when it is connected to this navigation system via Pioneer iPod adapter (sold separately).

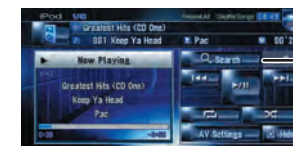

Touch to display the search categories.