



- SWITCHES:
- S1 : POWER SWITCH (OFF POSITION)
  - S2-1-8 : REC-PLAY SWITCH (PLAY POSITION)
  - S2-1-9 : EQ SWITCH (CHROME POSITION)
  - S2-1-10 : BIAS SWITCH (CHROME POSITION)
  - S2-1-11 : LIMITER SWITCH (OFF POSITION)
  - S2-1-12 : DOLBY SWITCH (OFF POSITION)
  - S2-1-13 : CHROME TAPE DETECTOR (NO HOLE POSITION)
  - S2-1-14 : MPX FILTER SWITCH (OFF POSITION)
  - S2-1-15 : MEMORY SWITCH (OFF POSITION)
  - S2-1-16 : PLAY SWITCH (OFF POSITION)
  - S2-1-17 : REW FORWARD SWITCH (OFF POSITION)
  - S2-1-18 : FAST FORWARD SWITCH (OFF POSITION)
  - S2-1-19 : REC SWITCH (OFF POSITION)
  - S2-1-20 : CASSETTE DETECTOR SWITCH (NO HALF POSITION)
  - S2-1-21 : SENSING SWITCH
  - S2-1-22 : COUNTER SWITCH
  - S2-1-23 : PAUSE SWITCH (OFF POSITION)
  - S2-1-24 : ERASE PREVENT DETECTOR SWITCH (NOT RECORDING POSITION)

RESISTORS  
IN OHM, 1/4W, ±5% TOLERANCE UNLESS  
OTHERWISE NOTED. K: KΩ, M: MΩ

CAPACITORS  
μF UNLESS OTHERWISE NOTED. P: pF