



CX-7000

HG

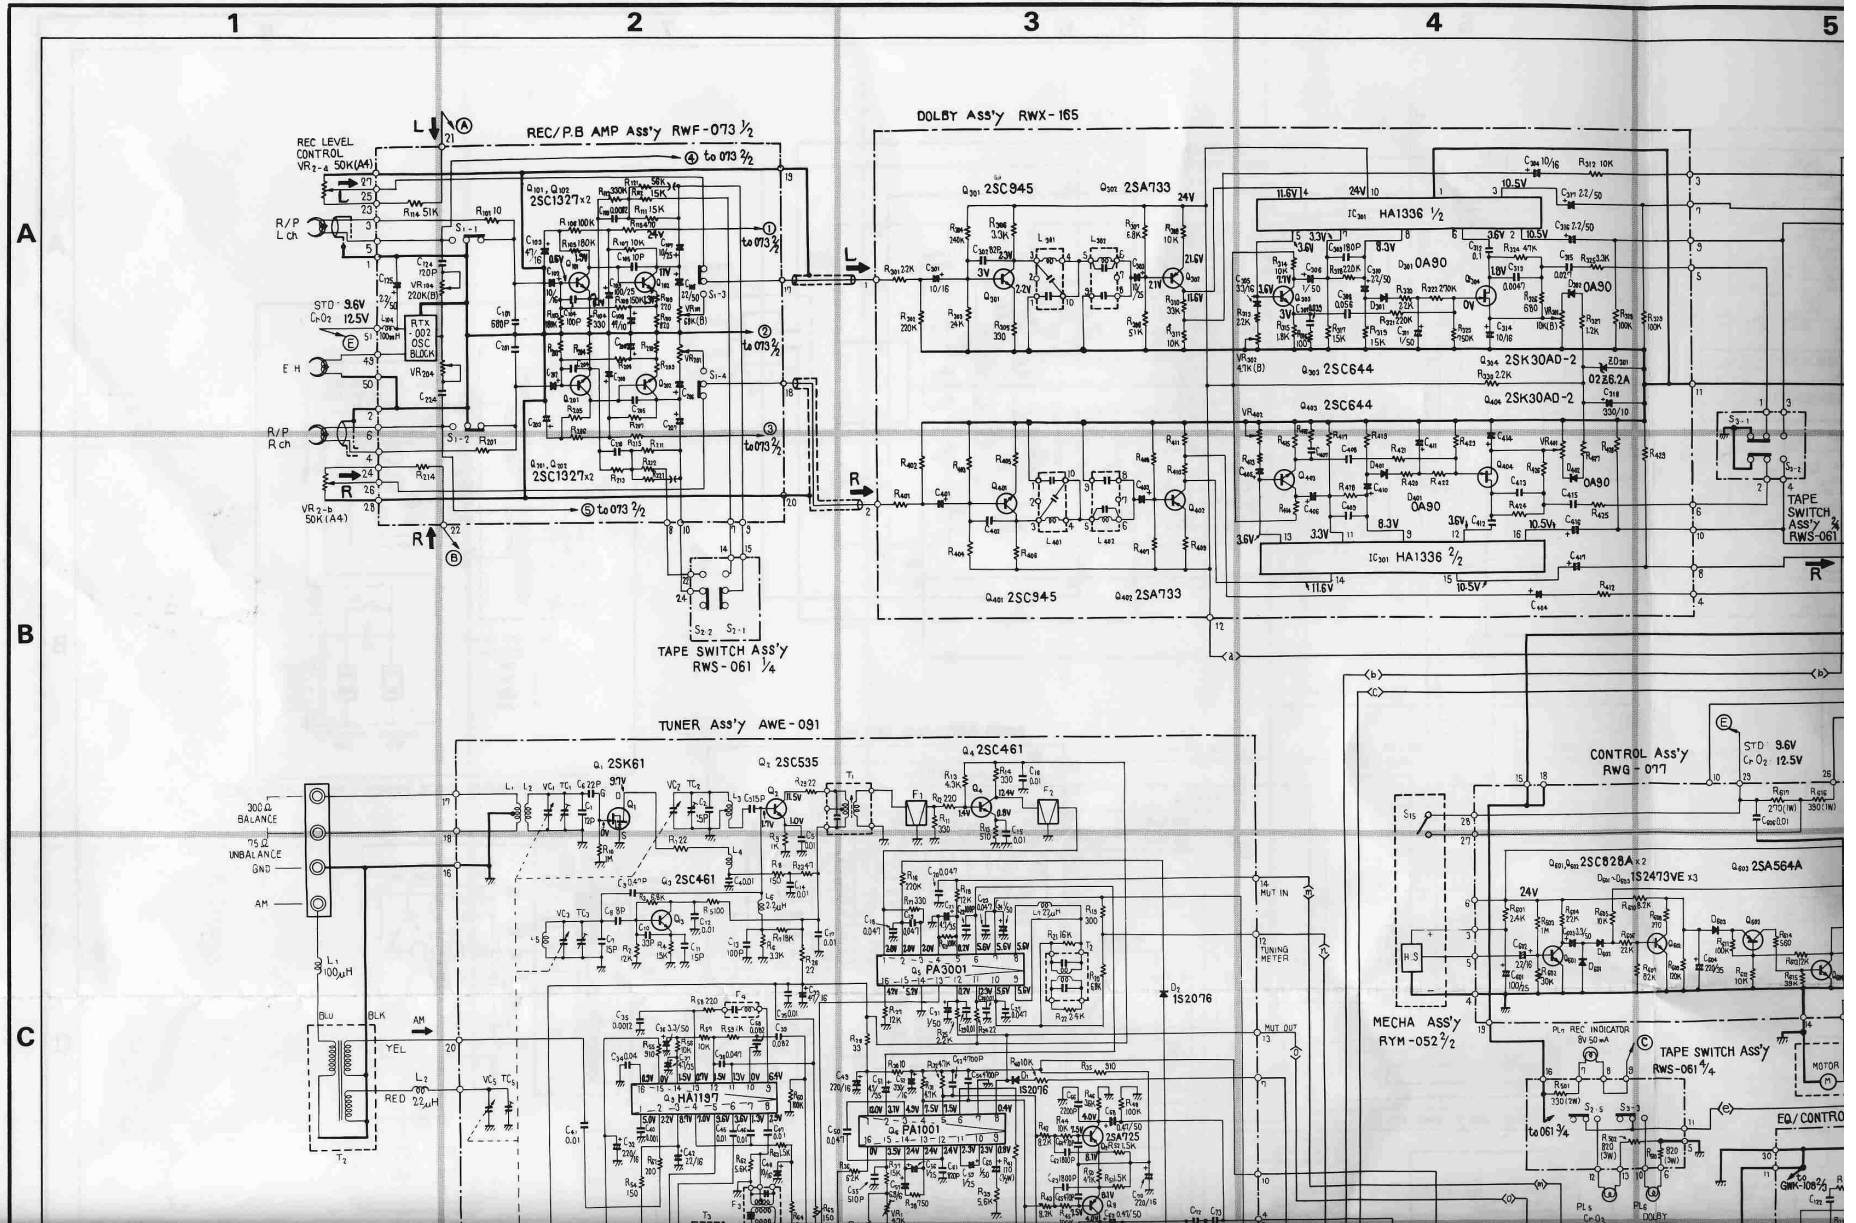


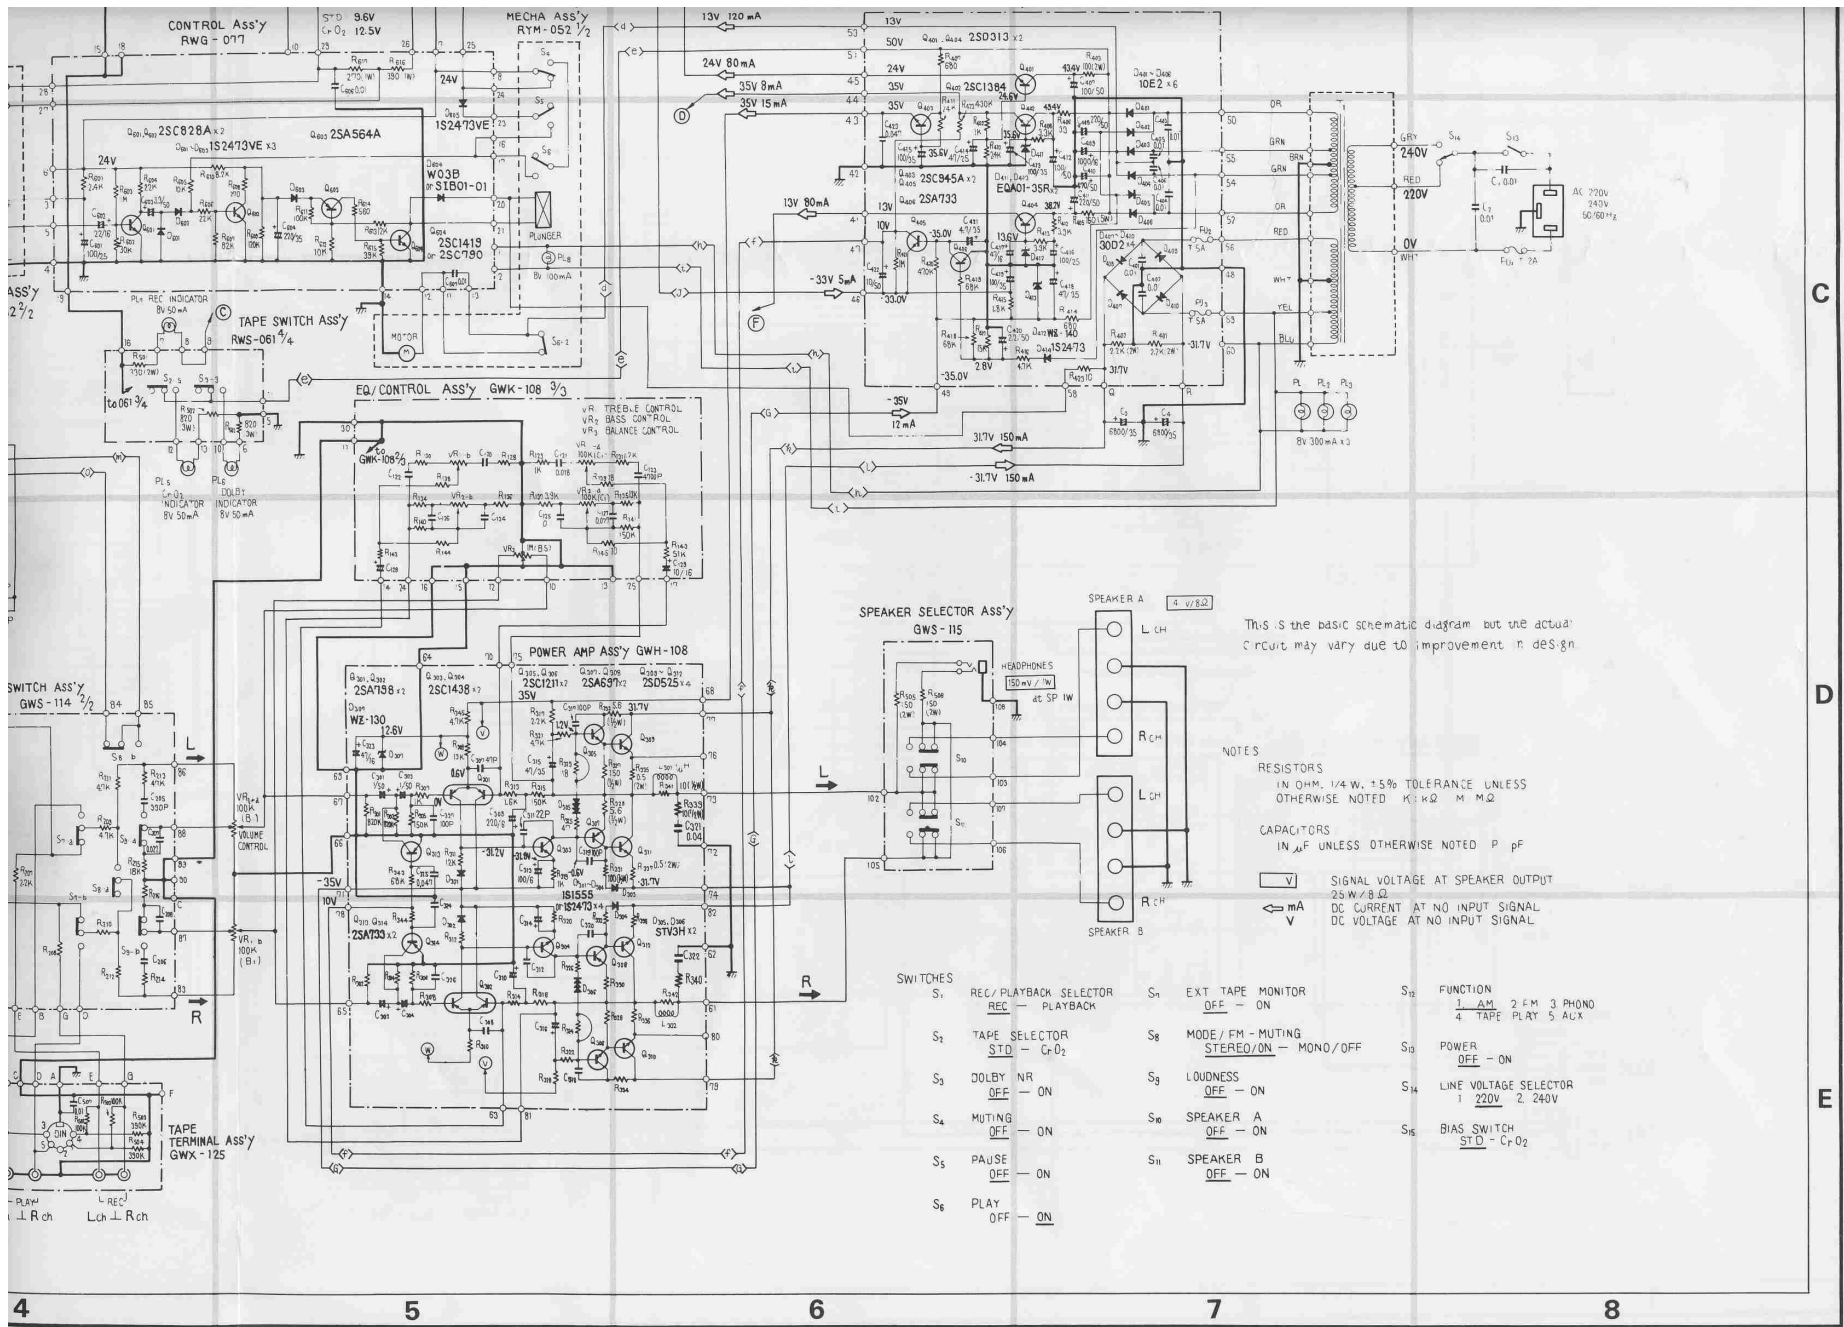

This is the basic schematic diagram but the actual circuit may vary due to improvement in design.

NOTES
 RESISTORS
 IN OHM, 1/4 W, ±5% TOLERANCE UNLESS OTHERWISE NOTED K, KΩ, M, MΩ
 CAPACITORS
 IN μF UNLESS OTHERWISE NOTED P, pF
 V SIGNAL VOLTAGE AT SPEAKER OUTPUT 25 W/8Ω
 mA DC CURRENT AT NO INPUT SIGNAL
 V DC VOLTAGE AT NO INPUT SIGNAL

SWITCHES	FUNCTION
S ₁	REC./PLAYBACK SELECTOR REC - PLAYBACK
S ₂	TAPE SELECTOR STD - Cr D ₂
S ₃	DOLBY NR OFF - ON
S ₄	MUTING OFF - ON
S ₅	PAUSE OFF - ON
S ₆	PLAY OFF - ON
S ₇	EXT. TAPE MONITOR OFF - ON
S ₈	MODE/FM - MUTING STEREO/ON - MONO/OFF
S ₉	LOUDNESS OFF - ON
S ₁₀	SPEAKER A OFF - ON
S ₁₁	SPEAKER B OFF - ON
S ₁₂	FUNCTION 1. AM 2. FM 3. PHONO 4. TAPE PLAY 5. AUX
S ₁₃	POWER OFF - ON
S ₁₄	LINE VOLTAGE SELECTOR 1. 220V 2. 240V
S ₁₅	BIAS SWITCH STD - Cr D ₂

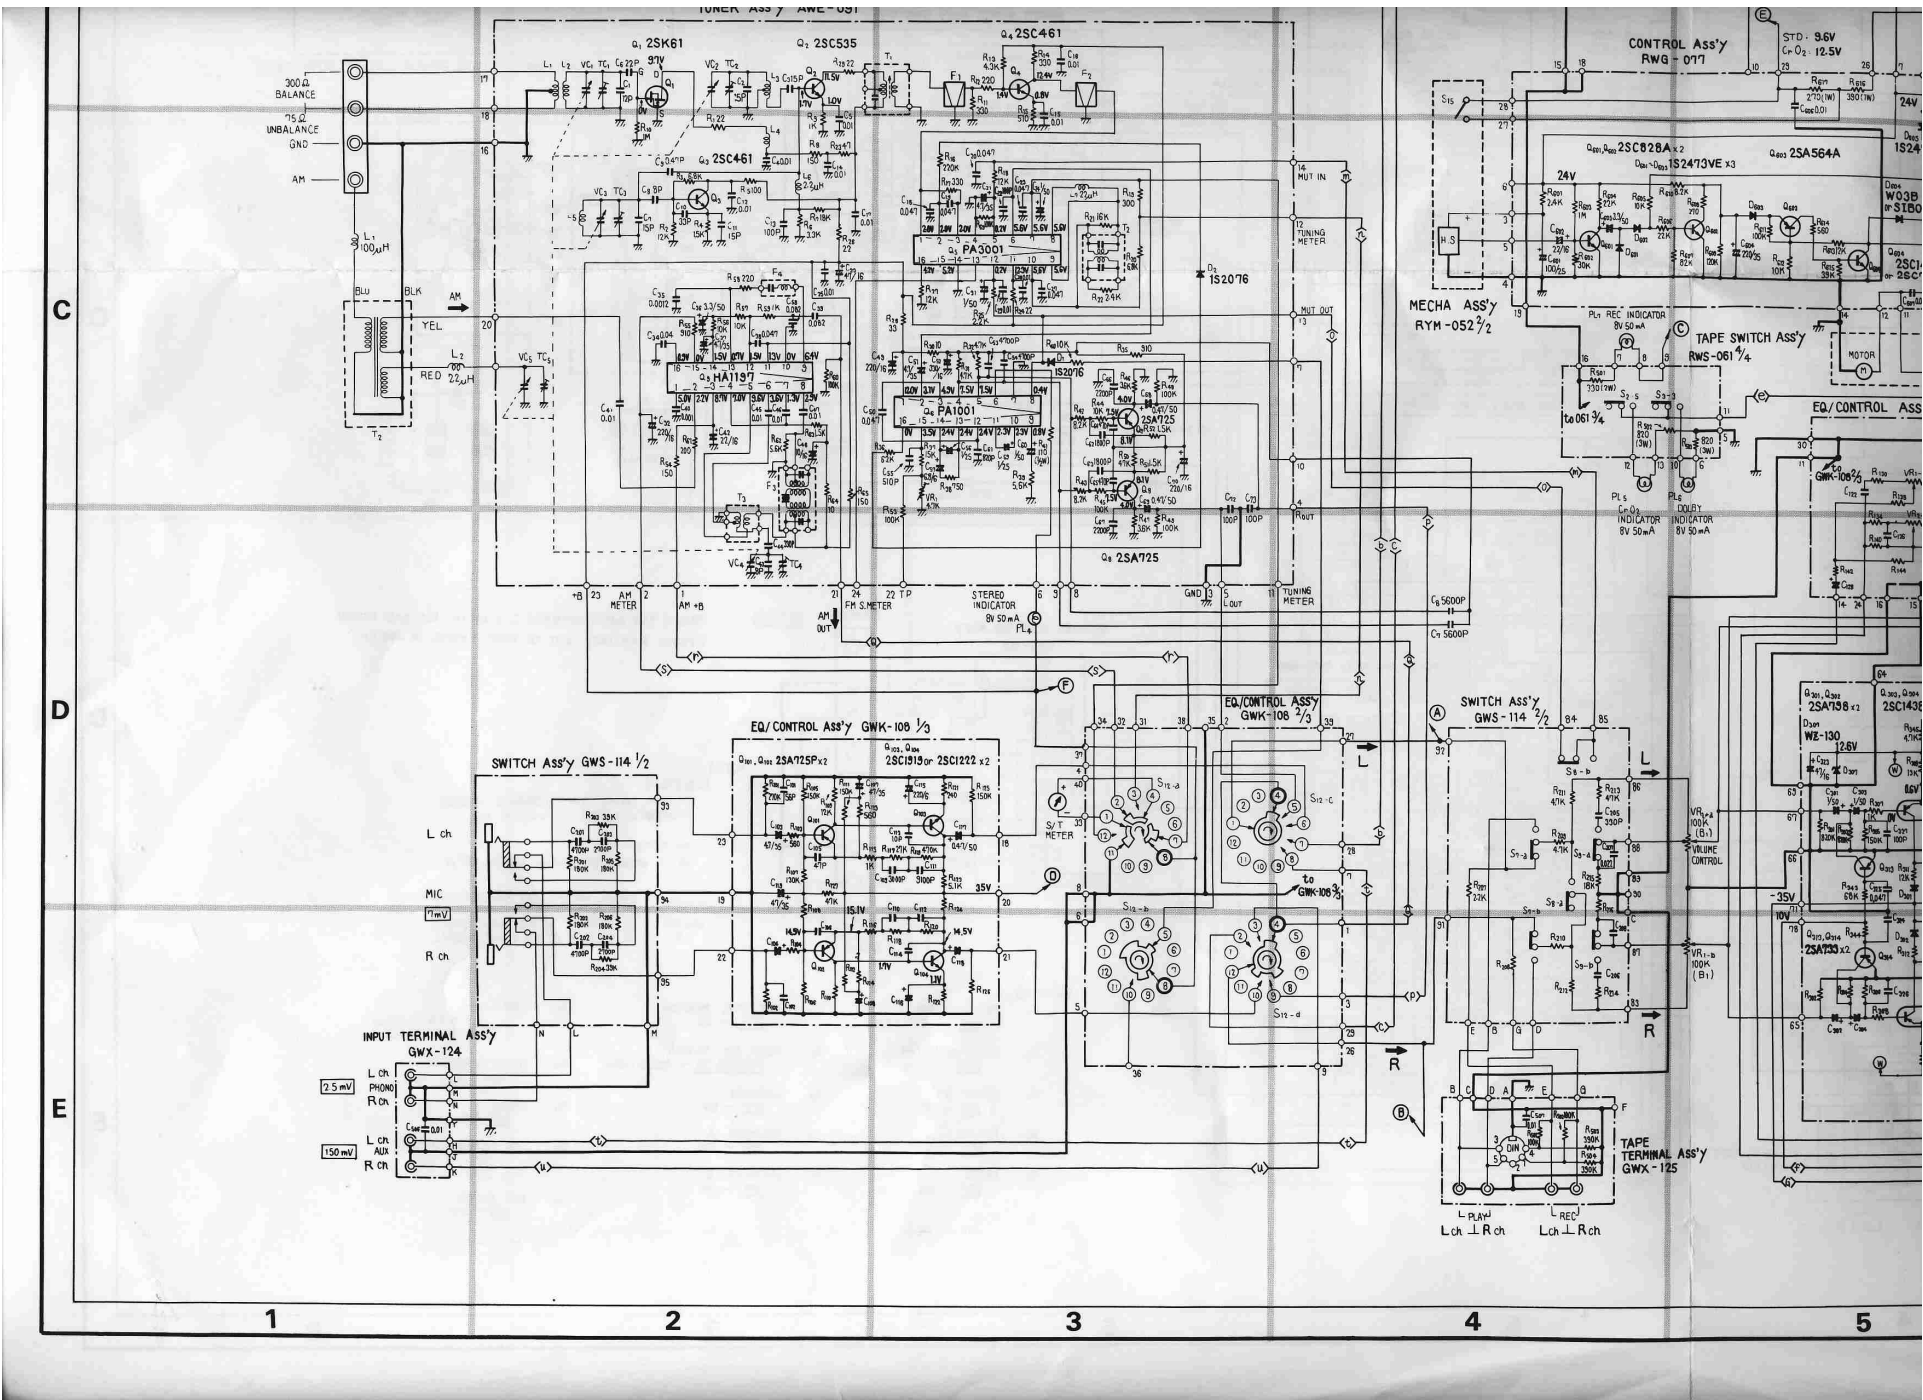

C

D

E

1

2

3

4

5