

DV-3022V/DV-3020V DV-2022/DV-2020

Operating Instructions



English on top side. Italiano sul lato opposto.

Thank you for buying this Pioneer product. Please read through these operating instructions...

Table of contents - Upper half: 1 Before you start, 2 Part names and functions, 3 Convenient functions

Table of contents - Lower half: 4 Changing the settings, 5 Playable discs and files, 6 Troubleshooting, 7 Additional information

Discover the benefits of registering your product online at http://www.pioneer.co.uk

PIONEER CORPORATION 1-1, Shin-ogura, Saitai-ku, Kawasaki-shi, Kanagawa 212-0031, Japan

2 Part names and functions

Remote control diagram with numbered buttons 1-22. Includes sections for TOP MENU, HOME MENU, AUDIO, SUBTITLE, OPEN/CLOSE, ZOOM, DVD/USB, STOP, PAUSE, PLAY, REVERSE, NEXT, PREVIOUS, and STILL buttons.

4 Changing the settings

Initial Settings parameters: Audio Settings, Digital Audio Out settings, Digital Out, DTS, 96 kHz PCM, Video output settings, TV Screen, HDMI Resolution, HDMI Control, Deep Color.

6 Troubleshooting

Troubleshooting section with various error messages and solutions: Disc cannot be played, Folder or file names not displayed, Picture is stretched, Picture is dark, Difference in volume, Disc cannot be played, Picture is stretched, Picture is dark, Difference in volume, Disc cannot be played, Picture is stretched, Picture is dark, Difference in volume.

Safety cautions

IMPORTANT: Risk of electric shock. CAUTION: Do not touch the AC outlet. WARNING: Do not use for other than household purposes. Operating Environment: Temperature and humidity.

WARNING: To prevent a fire hazard, do not place any naked flame sources such as a lit candle on the equipment.

WARNING: Before plugging in for the first time, read the following section carefully. The voltage of the available power supply differs according to country or region.

WARNING: The power cord of this unit must not be used as a power supply for other electrical equipment.

POWER-CORD CAUTION: Handle the power cord by the plug. Do not pull out the plug by tugging the cord.

VENTILATION CAUTION: Do not block the ventilation holes. Do not use this unit in a poorly ventilated area.

WARNING: Warnings and openings in the cabinet are provided for ventilation to ensure reliable operation of the product.

Specifications

Power requirements: AC 220V to 240V, 50 Hz/60 Hz. External dimensions: 380 mm (W) x 42 mm (H) x 200 mm (D). AV connector (21-pin connector assignment): Video out, Audio L/R, Digital audio output.

Information for users on collection and disposal of old equipment and used batteries. For general treatment, recovery and recycling of old products and used batteries, please take them to their applicable collection points.

By disposing of these products and batteries correctly, you will help to save valuable resources and prevent any potential negative effects on human health and the environment.

For more information about collection and recycling of old products and batteries, please contact your local municipality, your waste disposal service or the point of sale where you purchased the items.

These symbols are only valid in the European Union. For countries outside the European Union, if you wish to discard these items, please contact your local authorities or dealer and ask for the correct method of disposal.

Recycling symbols: Symbol for equipment, Symbol for batteries. Text: Please do not dispose of these products and batteries in the general waste stream.

3 Convenient functions

Playing in the desired order (Programmed Play)

- 1 Display the Play Mode screen. 2 Select Program. 3 Select Create/Edit. 4 Select the title, chapter, track or file. 5 Start playback.

- 1 Switch to USB mode. 2 Connect the USB device. 3 Start copying. 4 Select the file. 5 Start copying.

5 Playable discs and files

Playable discs: DVD-Video, DVD-R/RW, DVD-RAM, Video CDs, DivX Video, MPEG files, WMA files, MP3 files. Discs that cannot be played: Blu-ray, HD DVD, AVCHD, DVD-RAM, SACDs, CD-G. About region numbers: DVD-Video discs carry a region mark (number) on the case.

7 Additional information

Setting the TV system: PAL vs NTSC. Cautions on use: Do not place objects on top, Do not obstruct the ventilation holes, Do not use the player on shaggy rugs. Cleaning the player: Clean the lens, Clean the disc tray. Handling discs: Storing, Cleaning. About trademarks: HDMI, Dolby Digital. Language Code Table: Lists language names and codes for various countries.

Before you start

Loading the batteries in the remote control. Notes: Do not use or store batteries in direct sunlight or other excessively hot places. Notes for DV-3022/DV-3020: Signals can be transferred to an HDMI-compatible TV.

Player's rear panel: Shows connections for SCART AV cable, TV or AV receiver, and Audio/Video cable. Notes: There are three different ways to connect to this device: using an audio/video cable, HDMI cable, or a SCART AV cable.

Copying files on to USB devices (DV-3022/DV-2022). Steps: 1 Display the Disc Navigator screen. 2 Select the file. 3 Start copying.

6 Playable discs and files

Supported audio file formats: JPEG, DivX, WMA, MP3. Supported video file formats: DivX. Playable discs and files: DVD-Video, DVD-R/RW, DVD-RAM, Video CDs, DivX Video, MPEG files, WMA files, MP3 files.

Discs that cannot be played: Blu-ray, HD DVD, AVCHD, DVD-RAM, SACDs, CD-G. About region numbers: DVD-Video discs carry a region mark (number) on the case. The diagram below shows the various DVD regions of the world.

Supported audio file formats: JPEG, DivX, WMA, MP3. Supported video file formats: DivX. Playable discs and files: DVD-Video, DVD-R/RW, DVD-RAM, Video CDs, DivX Video, MPEG files, WMA files, MP3 files.

Language Code Table: Lists language names and codes for various countries. Country/Area Code Table: Lists country names and codes. About trademarks: HDMI, Dolby Digital.

