




QUADRAPHONIC AMPLIFIER


QA-800A

FVW KLW


Volume ass'y AWX-001

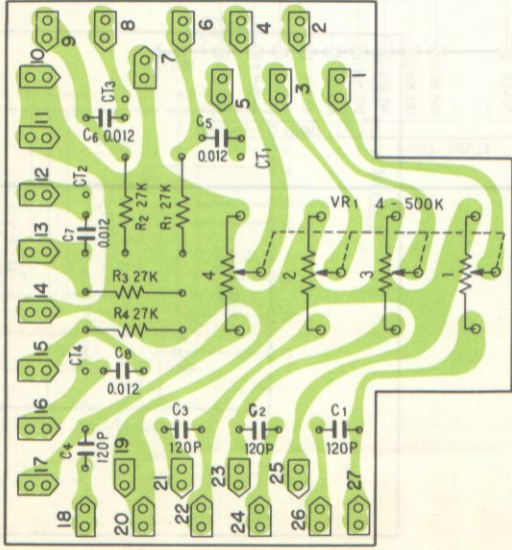

Volume ass'y AWX-001

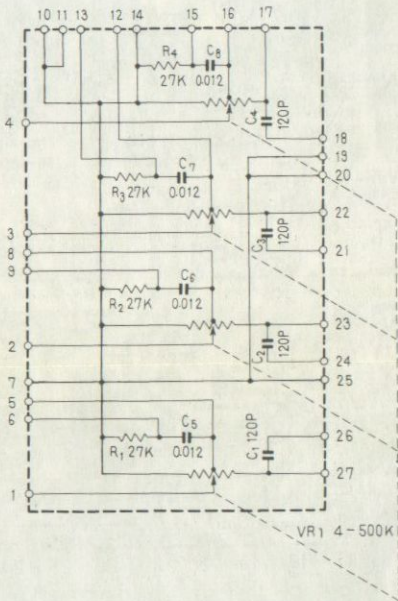


R ass'y AWX-005

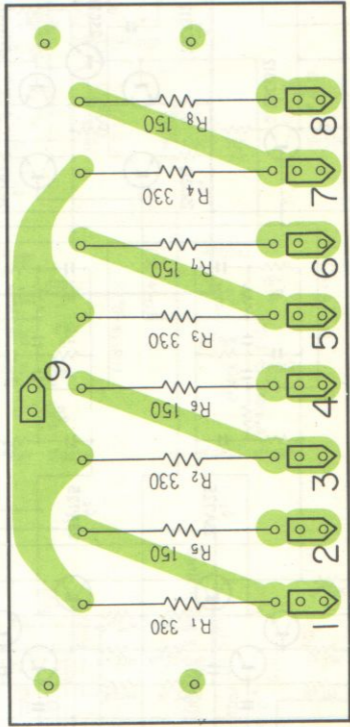


545 1345 826 713


R ass'y AWX-005

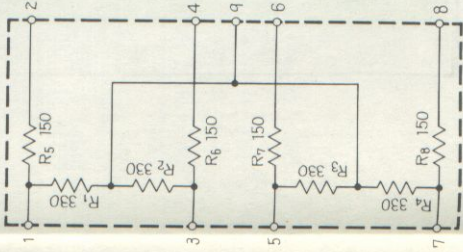


Head amp ass'y W15-032

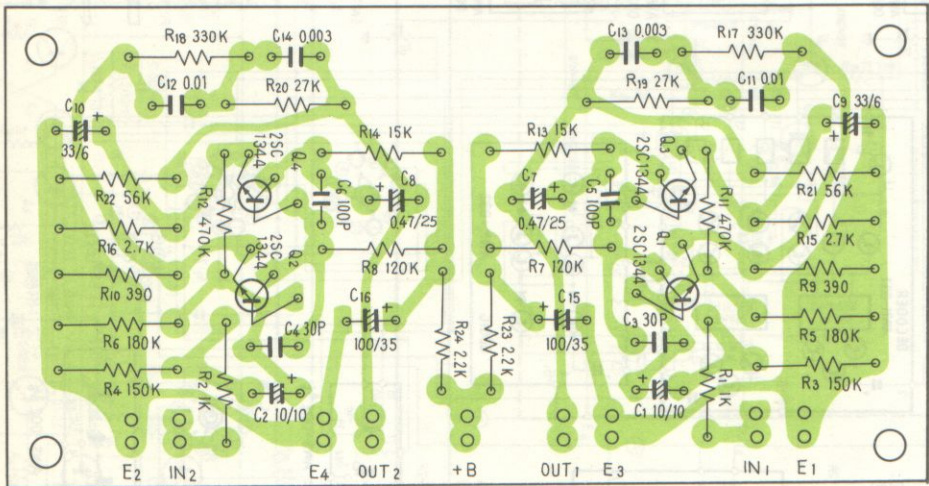


Head amp ass'y W15-032

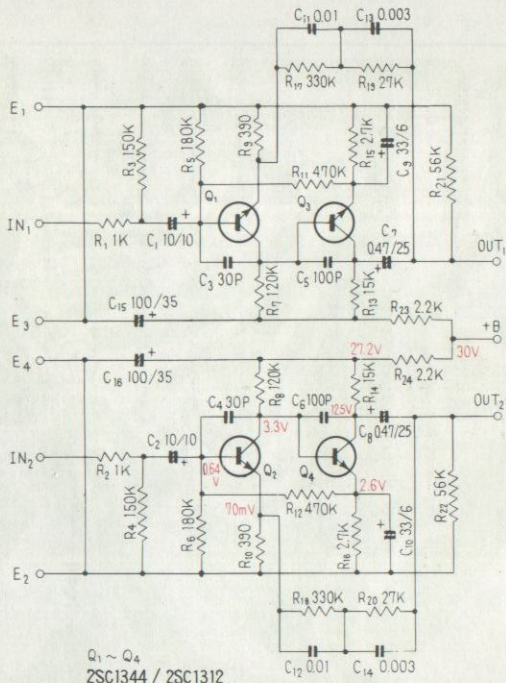


Control amp ass'y AWG-001

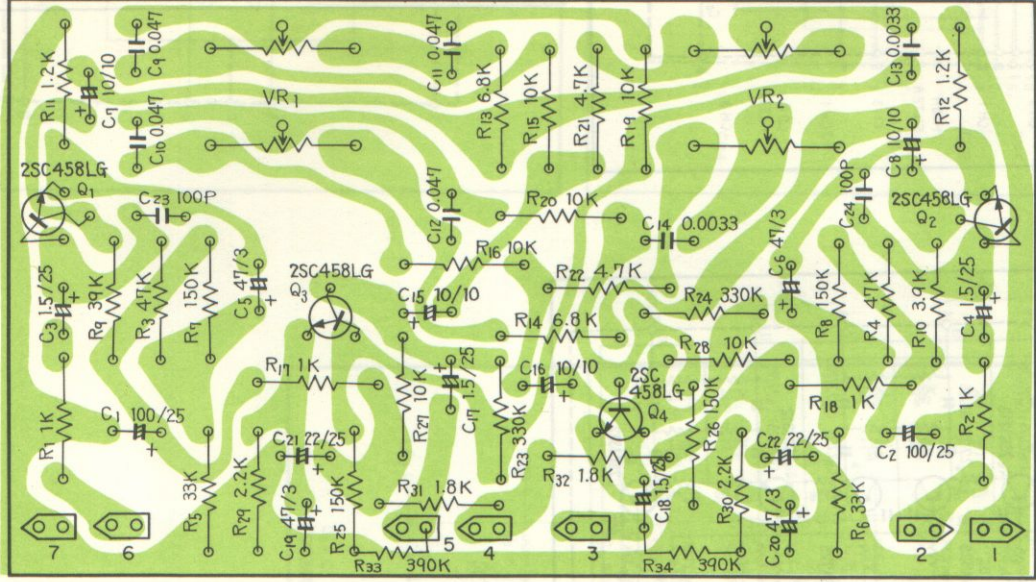


Control amp ass'y AWG-001

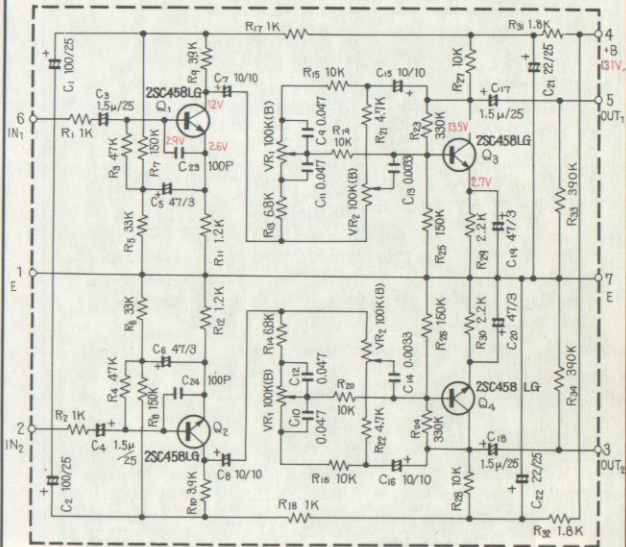


Main amp ass'y AWH-002

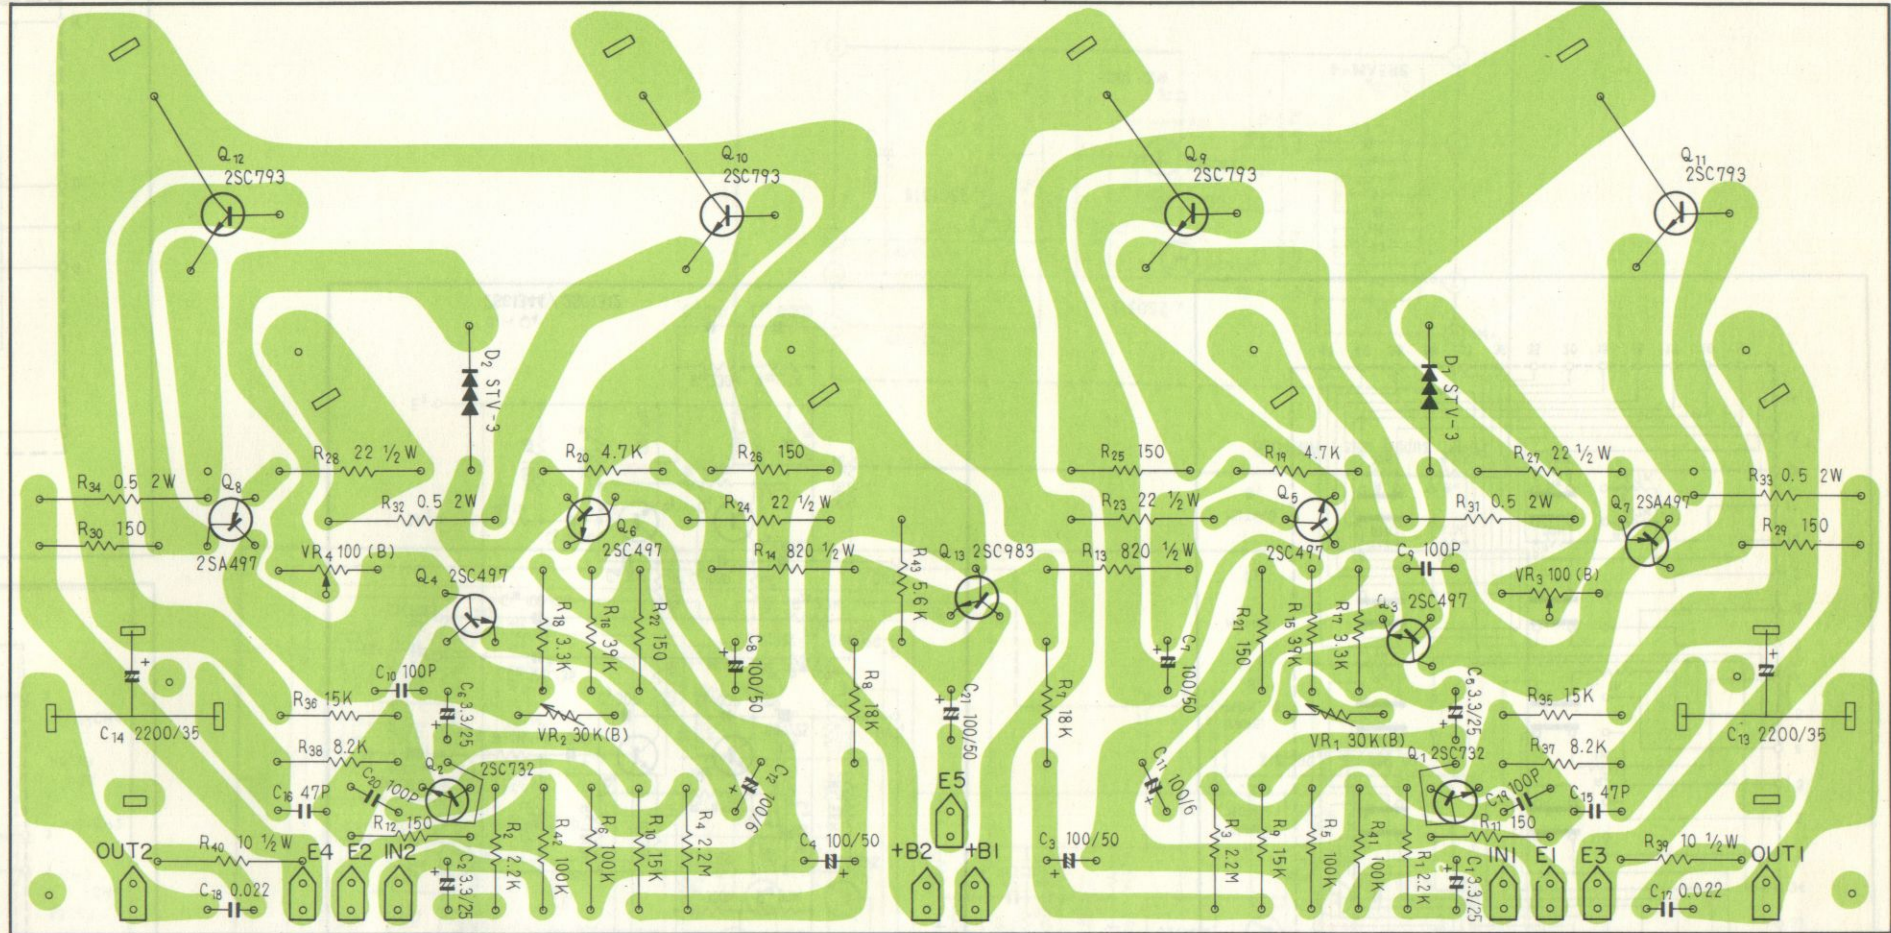


Main amp ass'y AWH-002

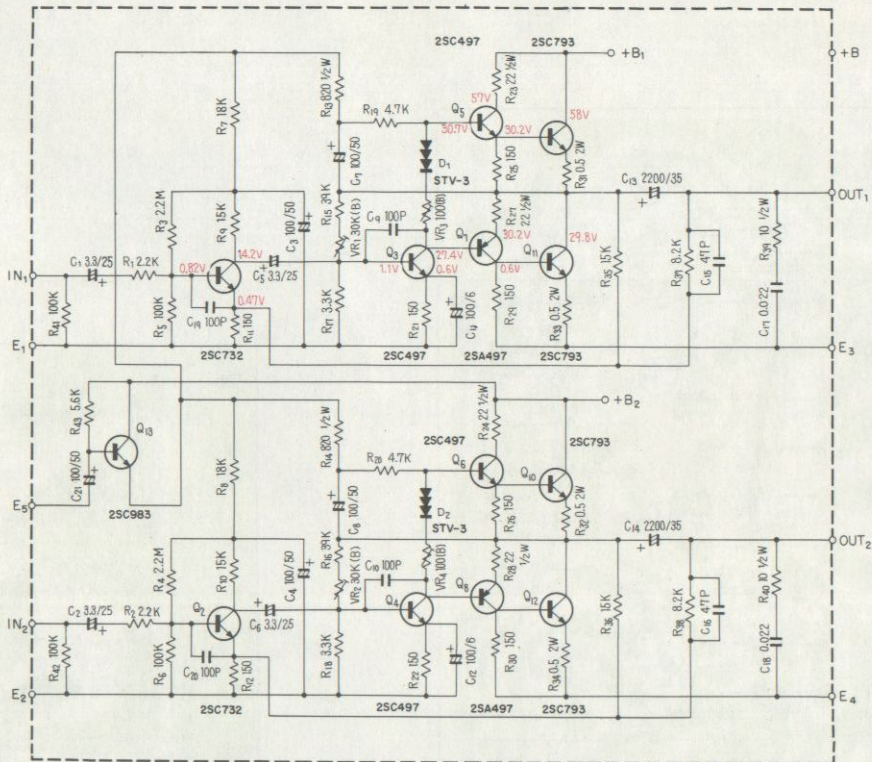


Decoder ass'y AWM-031

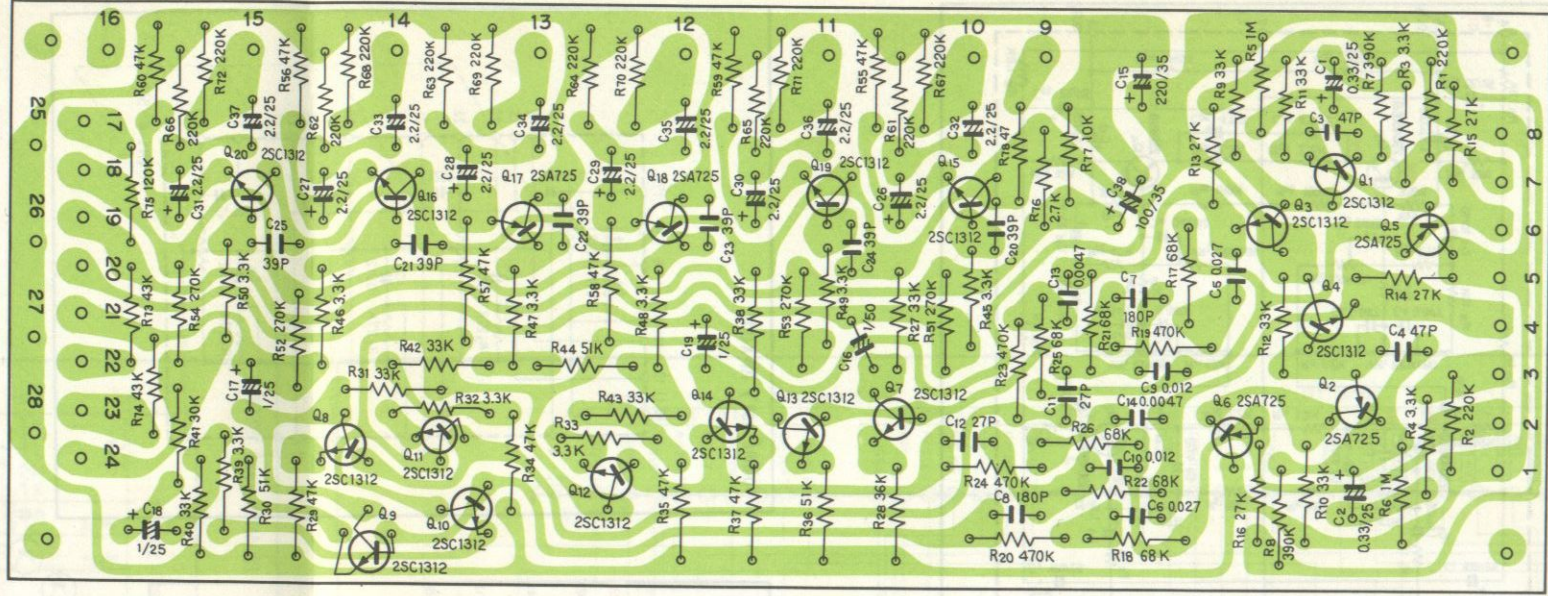


Decoder ass'y AWM-031

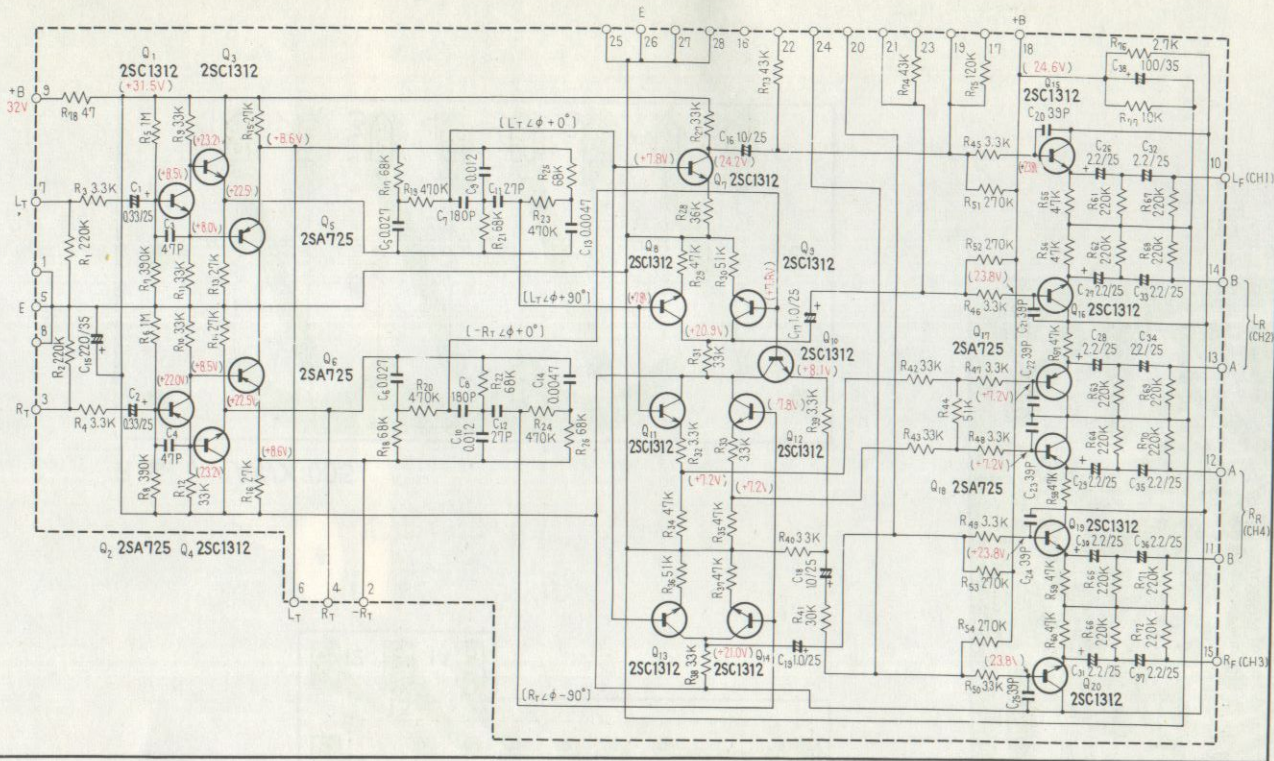


Power supply ass'y AWR-018

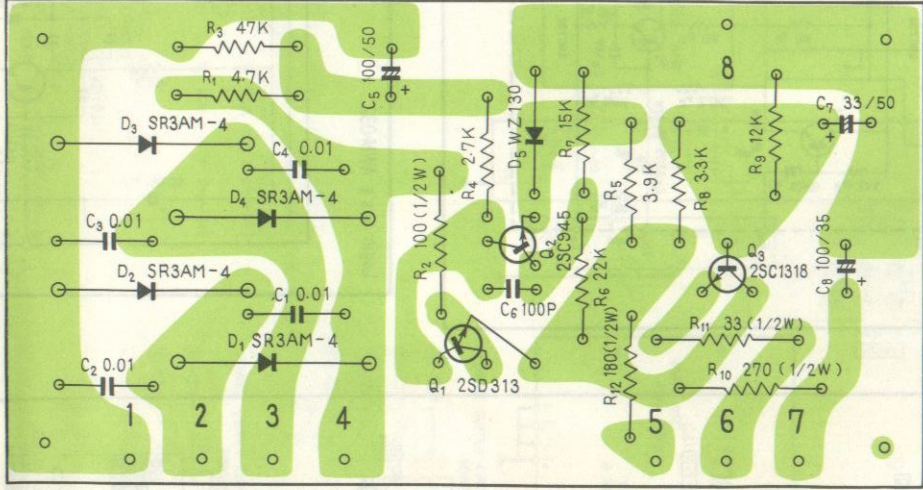


Power supply ass'y AWR-018

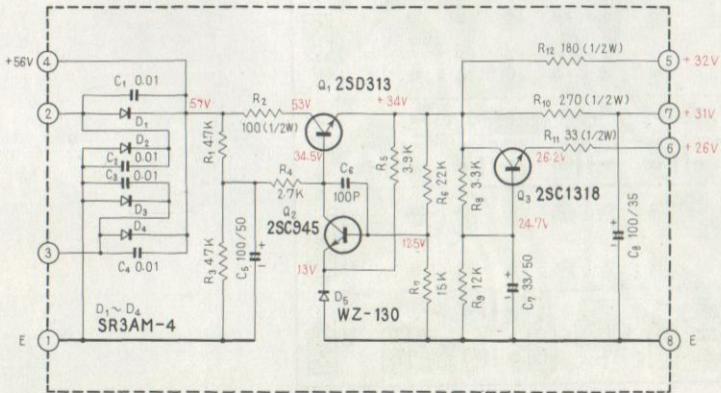


Switch ass'y AWS-002

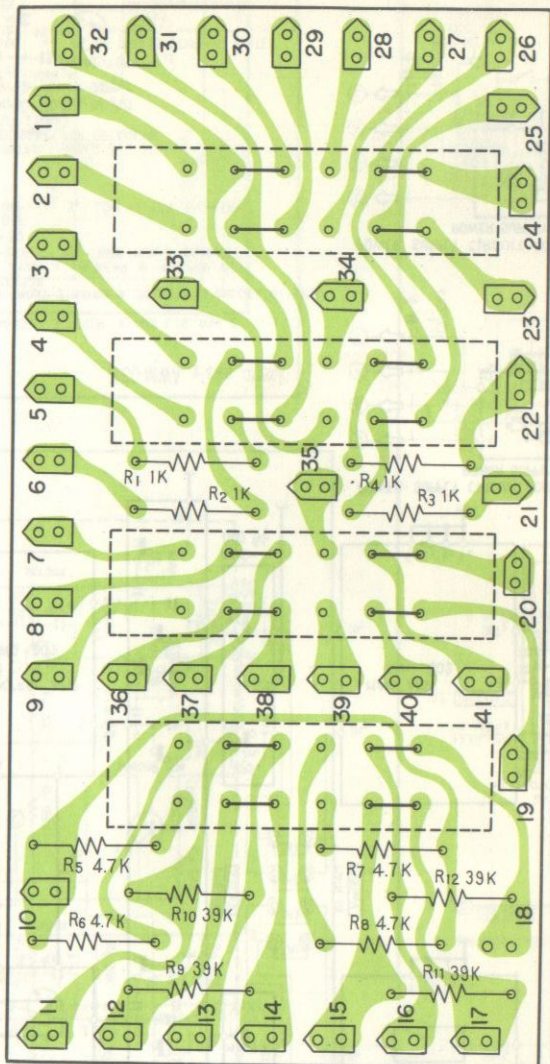

Switch ass'y AWS-002

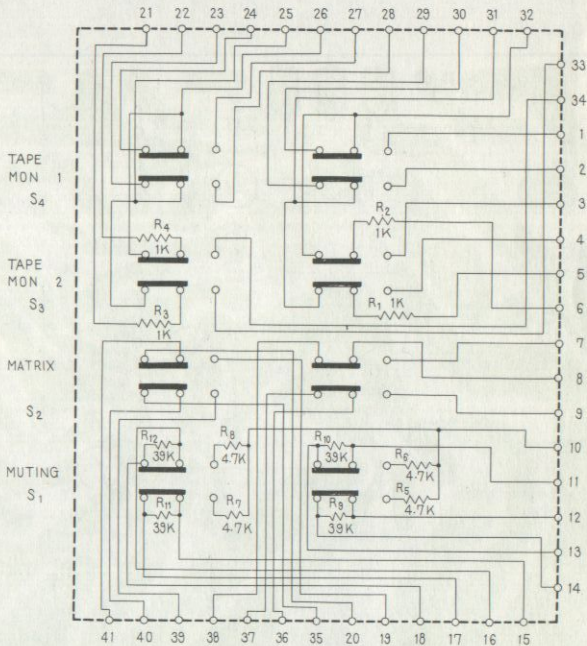

Switch ass'y AWS-003

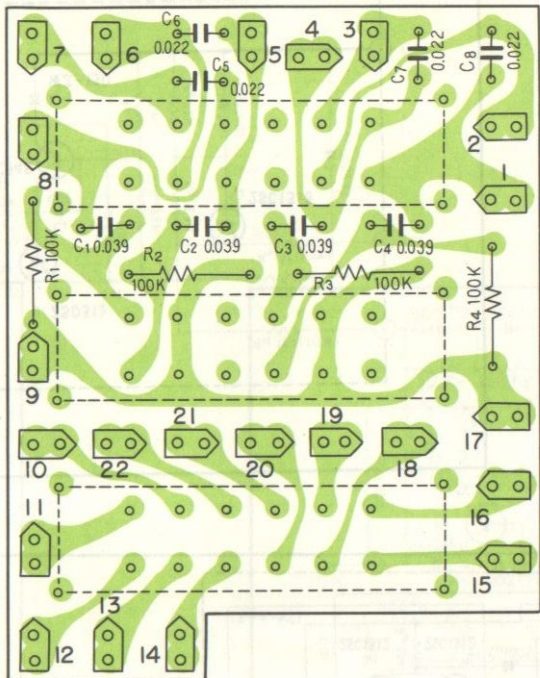

Switch ass'y AWS-003

