



NOTES:

SWITCHES
 S₁: FUNCTION (AM position)
 1) AM 2) FM MONO 3) FM AUTO
 4) PHONO 5) AUX
 S₂: MODE SELECTOR (2CH position)
 1) 2CH 2) CD-4 3) RM 4) SQ
 S₃: 2CH POWER BOOSTING SWITCH
 S₄: POWER SWITCH
 S₅: RELAY
 S₆: MICRO-SWITCH

POTENTIOMETERS
 VR₁: BALANCE V.R.
 VR₂: MAIN V.R.
 VR₃: CD-4 CHANNEL SEPARATION
 VR₄: CD-4 CARRIER LEVEL CONTROL

RESISTORS
 IN OHM, $\frac{1}{2}W$, $\pm 5\%$ TOLERANCE UNLESS OTHERWISE NOTED.
 K: 1K, M: 1M

CAPACITORS
 IN μF UNLESS OTHERWISE NOTED.
 P: pF

V : SIGNAL VOLTAGE NECESSARY FOR OBTAINING 34W/8 Ω OUTPUT POWER (1kHz), S₁ SET AT 4CH
 V : SIGNAL VOLTAGE NECESSARY FOR OBTAINING 54W/8 Ω OUTPUT POWER (1kHz), S₁ SET AT 2CH
 V : DC VOLTAGE AT NO INPUT SIGNAL, S₁ SET AT 4CH
 A : DC CURRENT AT 34W/8 Ω OUTPUT POWER
 V : DC VOLTAGE AT NO INPUT SIGNAL, S₁ SET AT 2CH
 A : DC CURRENT AT NO INPUT SIGNAL, S₁ SET AT 2CH

