

SWITCHES

- S₁: FUNCTION SWITCH
 1. PHONO
 2. TUNER
 3. AUX
- S₂: TAPE MONITOR 1
SOURCE → TAPE P.B.
- S₃: TAPE MONITOR 2
SOURCE → TAPE P.B.
- S₄: TONE SWITCH
OFF → ON

- S₅: LOUDNESS
OFF → ON
- S₆: SPEAKER SELECTOR
 1. SP OFF
 2. SP A
 3. SP B
 4. SP A + B
- S₇: POWER SWITCH
OFF → ON
- S₈: RELAY
ON → OFF

RESISTORS


IN OHM, 1/4W, ±5% TOLERANCE UNLESS OTHERWISE NOTED K:KΩ M:MΩ

CAPACITORS


IN μF UNLESS OTHERWISE NOTED P: pF

NOTES

- : SIGNAL VOLTAGE NECESSARY FOR OBTAINING 37W/8Ω OUTPUT POWER (1K Hz).
- V : DC VOLTAGE AT NO INPUT SIGNAL.
- V : DC VOLTAGE AT 37 WATTS x2 OUTPUTS.
- ↑ A : DC CURRENT AT NO INPUT SIGNAL.

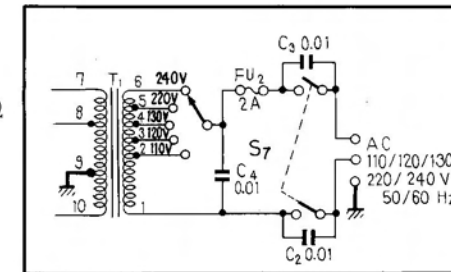

MANUFACTURED FOR ENGLAND OR AUSTRALIA

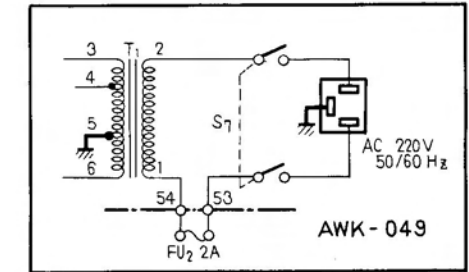

POWER SUPPLY (220V only model)

