


AM/FM STEREO RECEIVER

SX-1050


KCU

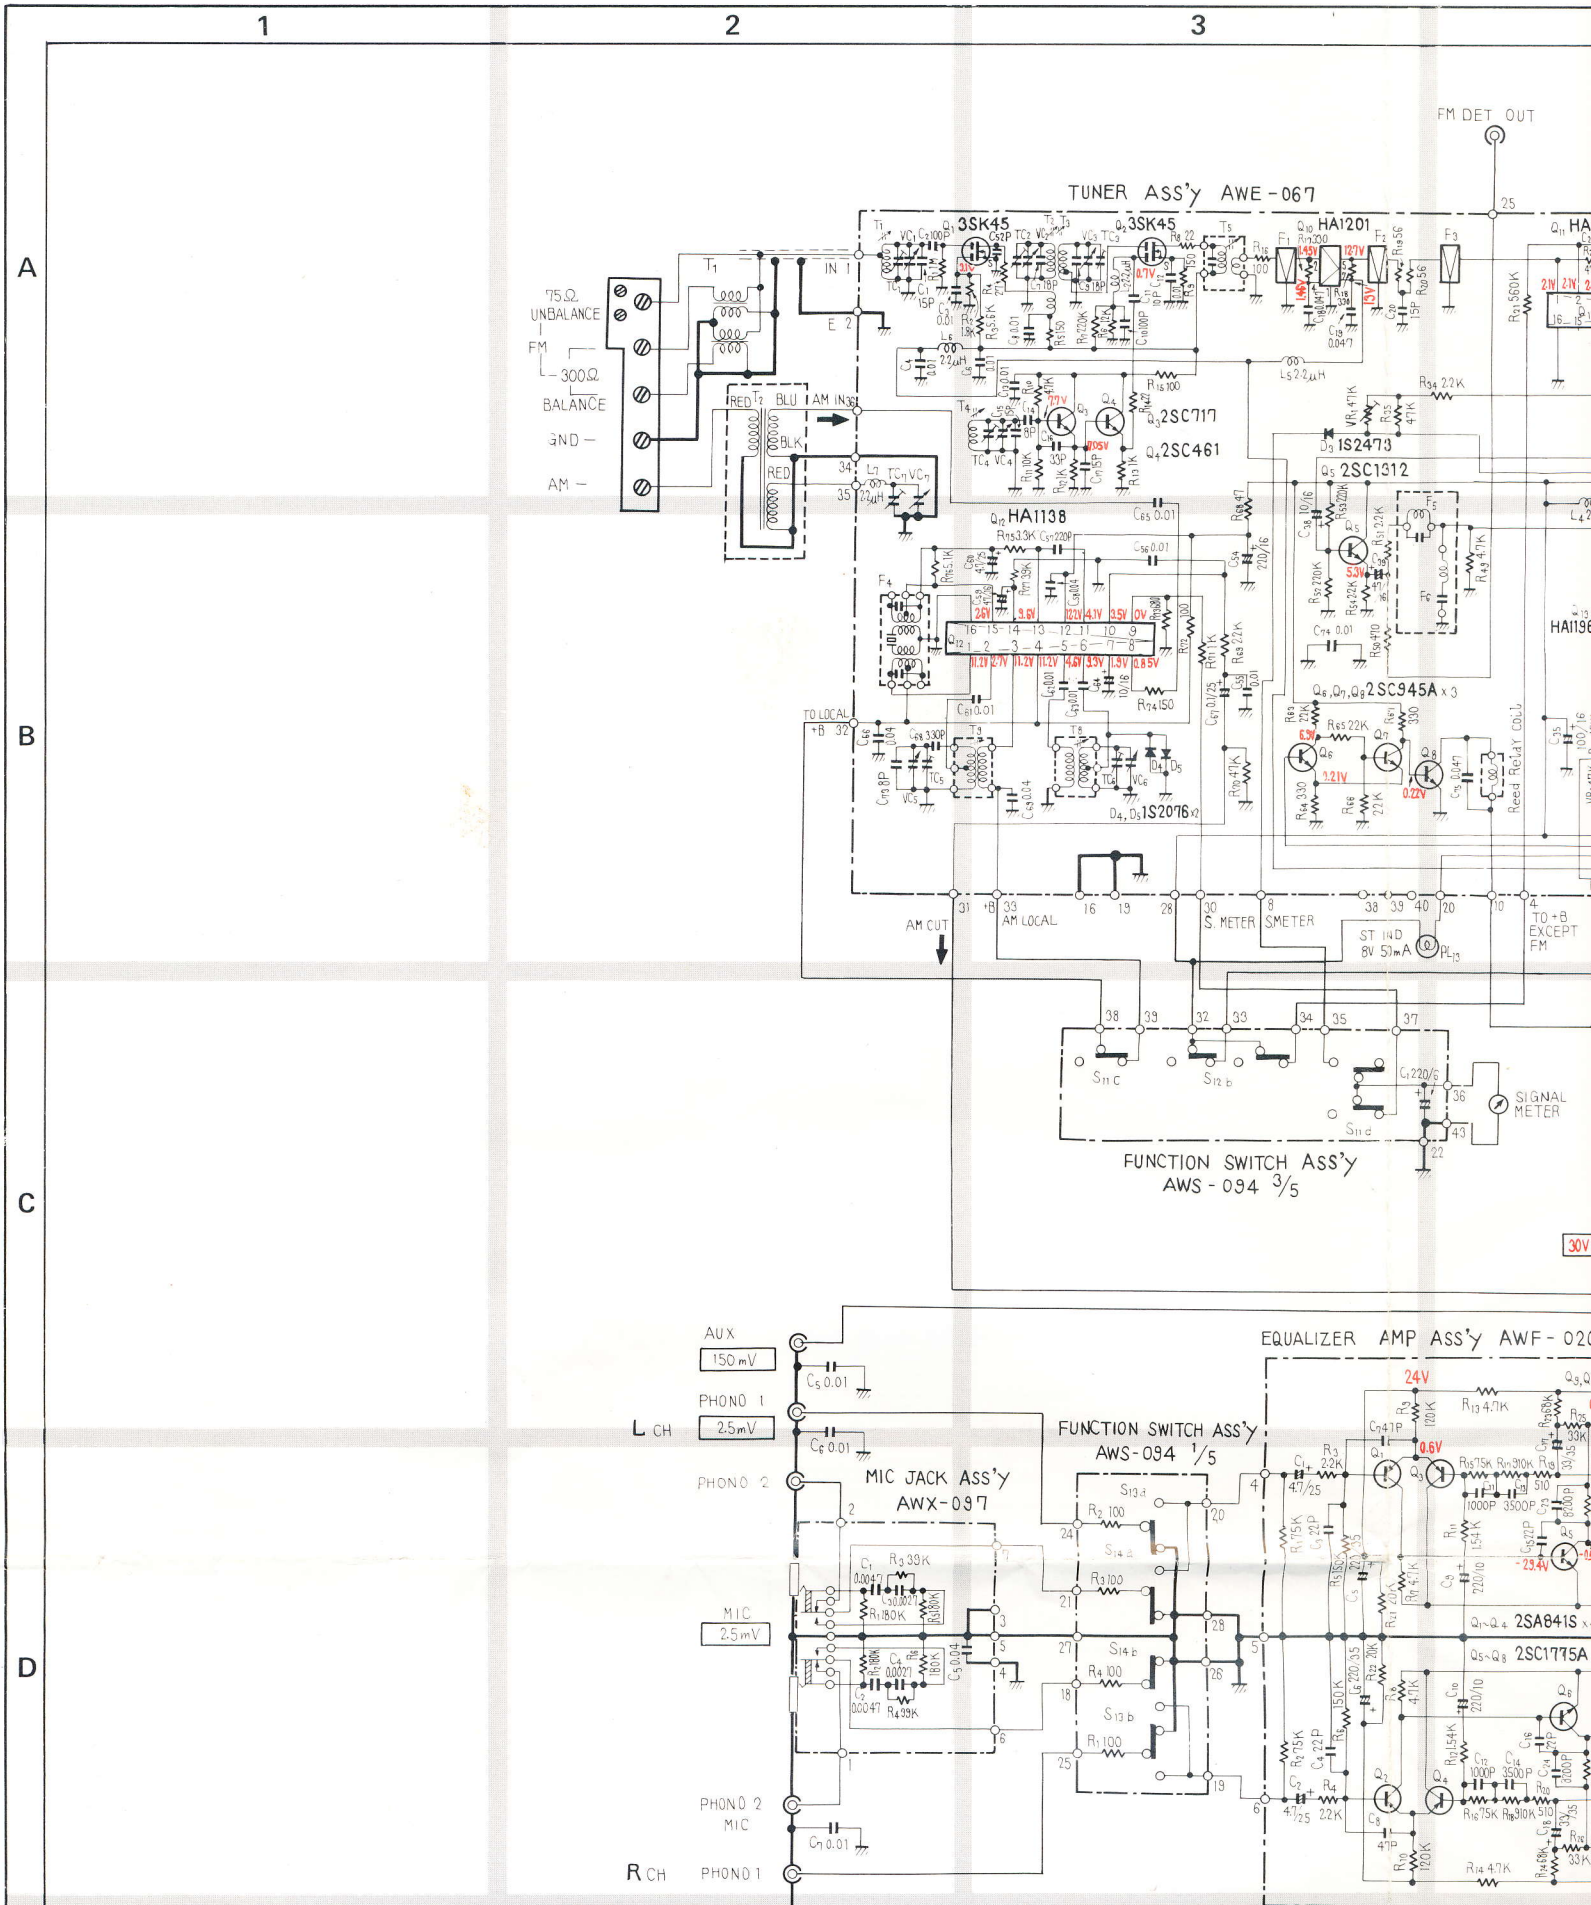


DET OUT

FUNCTION SWITCH ASS'y AWS-094 5/5

TUNING METER

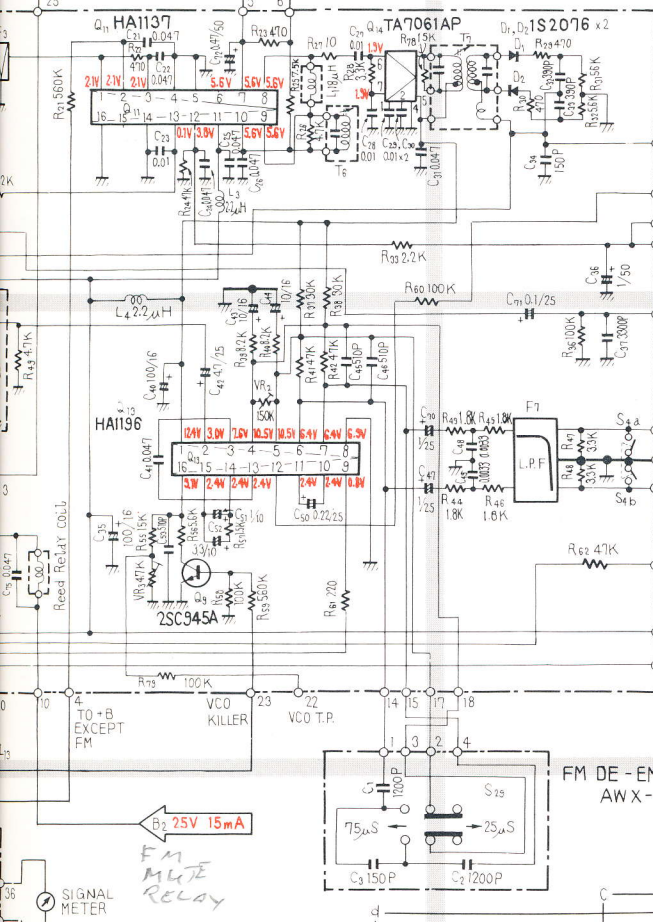


FILTER AMP ASS'y AWM-089 2/2

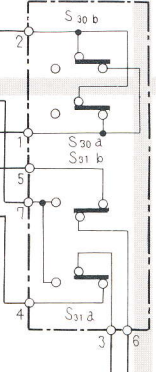


FM DE-EMPHASIS ASS'y AWX-099




FUNCTION SWITCH ASS'y AWS-094 4/5

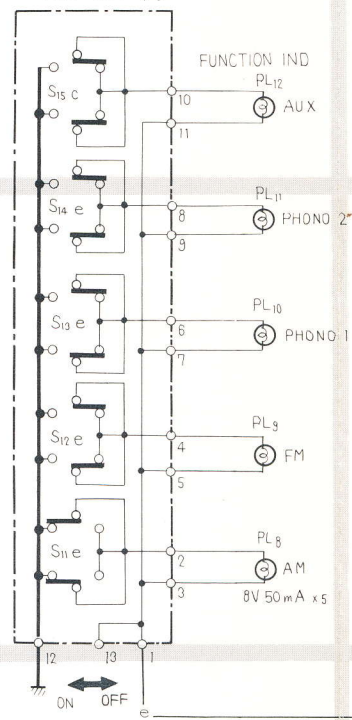


SPEAKER SWITCH AWS-095

 


FUNCTION SWITCH ASS'y AWS-094 2/5

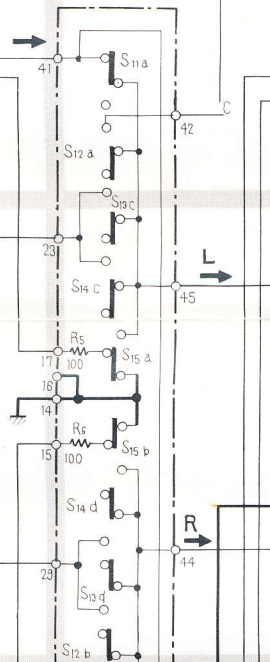


FLAT AMP ASS'y AWG-040

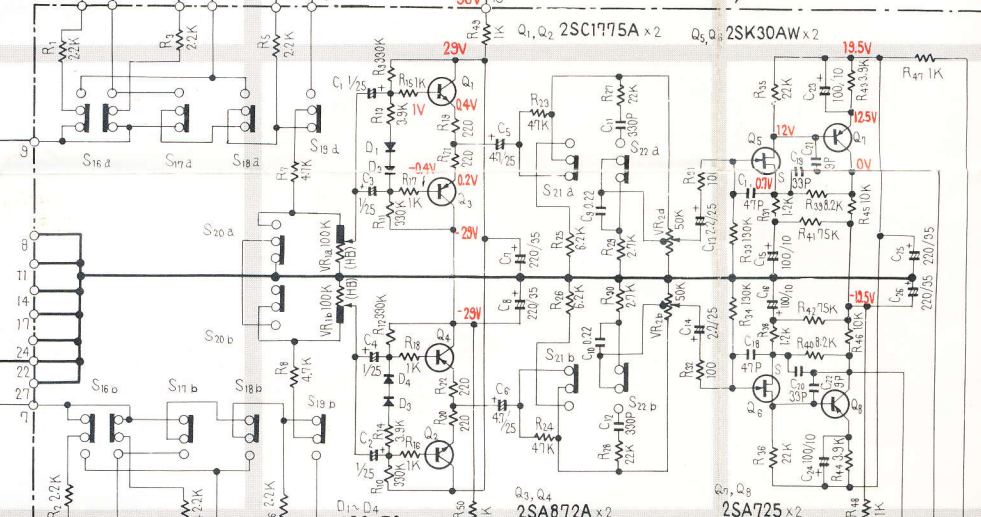

ss'y AWF-020

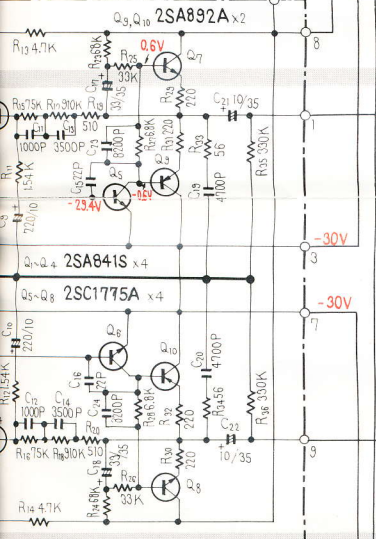

DIN A
AWX-

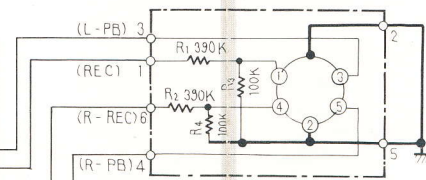

30V 8mA B1

30V 4mA

30V 8mA B1

-30V

-30V

-30V

-30V

-30V

-30V

-30V

-30V

-30V

-30V

-30V

-30V

-30V

-30V

-30V

-30V

-30V

-30V

-30V

-30V

-30V

-30V

-30V

-30V

-30V

-30V

-30V

-30V

-30V

-30V

-30V

-30V

-30V

-30V

-30V

-30V

-30V

-30V

-30V

-30V

-30V

-30V

-30V

-30V

-30V

-30V

-30V

-30V

-30V

-30V

-30V

-30V

-30V

-30V

-30V

-30V

-30V

-30V

-30V

-30V

-30V

-30V

-30V

-30V

-30V

-30V

-30V

-30V

-30V

-30V

-30V

-30V

-30V

-30V

-30V

-30V

-30V

-30V

-30V

-30V

-30V

-30V

-30V

-30V

-30V

-30V

-30V

-30V

-30V

-30V

-30V

-30V

-30V

-30V

-30V

-30V

-30V

-30V

-30V

-30V

-30V

-30V

-30V

-30V

-30V

-30V

-30V

-30V

-30V

-30V

-30V

-30V

-30V

-30V

-30V

-30V

-30V

-30V

-30V

-30V

-30V

-30V

-30V

-30V

-30V

-30V

-30V

-30V

-30V

-30V

-30V

-30V

-30V

-30V

-30V

-30V

-30V

-30V

-30V

-30V

-30V

-30V

-30V

-30V

-30V

-30V

-30V

-30V

-30V

-30V

-30V

-30V

-30V

-30V

-30V

-30V

-30V

-30V

-30V

-30V

-30V

-30V

-30V

-30V

-30V

-30V

-30V

-30V

-30V

-30V

-30V

-30V

-30V

-30V

-30V

-30V

-30V

-30V

-30V

-30V

-30V

-30V

-30V

-30V

-30V

-30V

-30V

-30V

-30V

-30V

-30V

-30V

-30V

-30V

-30V

-30V

-30V

<

SWITCHES :

- S₁ POWER OFF — ON
- S₂ RELAY
- S₃ RELAY
- S₄ REED RELAY

- S₁₁ AM OFF — ON
- S₁₂ FM OFF — ON
- S₁₃ PHONO 1 OFF — ON
- S₁₄ PHONO 2/MIC OFF — ON
- S₁₅ AUX OFF — ON
- S₁₆ DUPLICATE OFF — ON
- S₁₇ TAPE MONITOR 1 OFF — ON
- S₁₈ TAPE MONITOR 2 OFF — ON
- S₁₉ ADAPTOR OFF — ON
- S₂₀ MODE STEREO — MONO
- S₂₁ MUTING OFF — -20dB
- S₂₂ LOUDNESS OFF — ON
- S₂₃ TONE OFF — ON
- S₂₄ HIGH FILTER OFF — 8 KHz
- S₂₅ LOW FILTER OFF — 30 Hz
- S₂₆ SPEAKER A OFF — ON
- S₂₇ SPEAKER B OFF — ON
- S₂₈ SPEAKER C OFF — ON
- S₂₉ FM DE-EMPHASIS 25 μ S — 75 μ S
- S₃₀ FM MUTING OFF — ON
- S₃₁ MULTIPATH OFF — ON

 


RESISTOR :

IN OHM, 1/4W, $\pm 5\%$ TOLERANCE UNLESS OTHERWISE NOTED.

CAPACITORS


IN μ F UNLESS OTHERWISE NOTED

NOTES :

-  SIGNAL VOLTAGE AT SPEAKER
-  DC CURRENT AT NO INPUT
-  DC VOLTAGE AT NO INPUT


SPEAKER SWITCH ASS'y

AWS-095 2/2

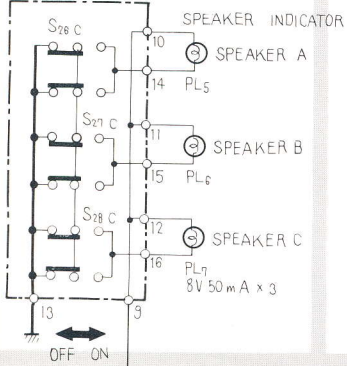


DIN ASS'y

AWX-062

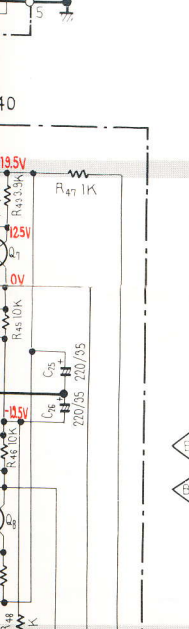


POWER SUPPLY ASS'y (A) AWR-103

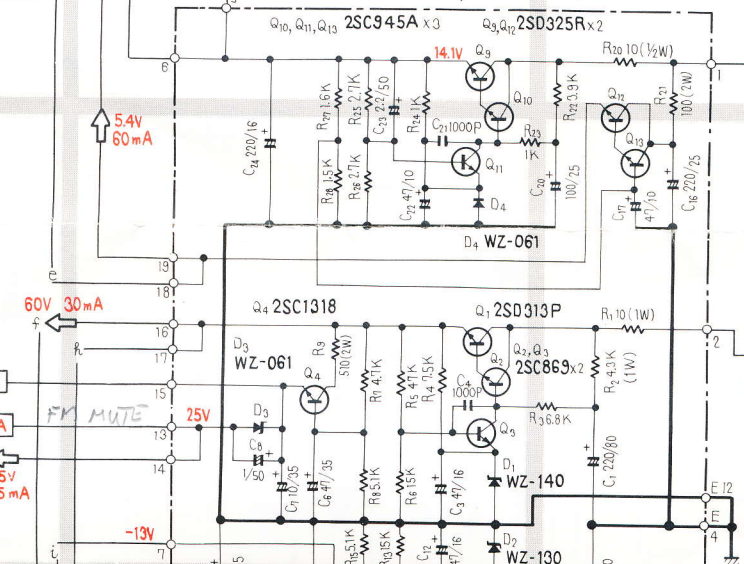


LAMP ASS'y

AWX-096

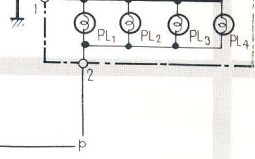

POWER SUPPLY ASS'y (B) AWR-104

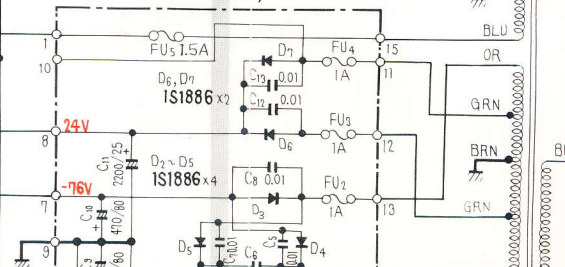


RESISTOR :
IN OHM, 1/4W, ±5% TOLERANCE UNLESS
OTHERWISE NOTED.

CAPACITORS
IN μF UNLESS OTHERWISE NOTED P: pF


NOTES :

- V SIGNAL VOLTAGE AT SPEAKER OUT 30.3V/8Ω (1KHz)
- DC CURRENT AT NO INPUT SIGNAL
- V DC VOLTAGE AT NO INPUT SIGNAL


LAMP Ass'y AWX-096






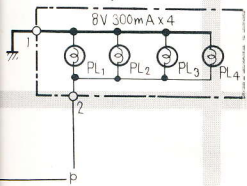





SURGE KILLER Ass'y AWX-098

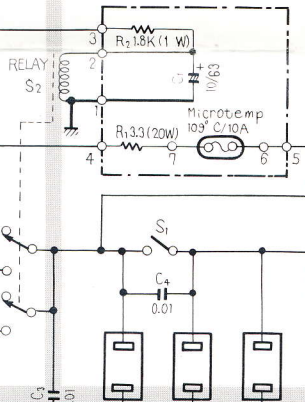

POWER SUPPLY ASS'y(B) AWR-104

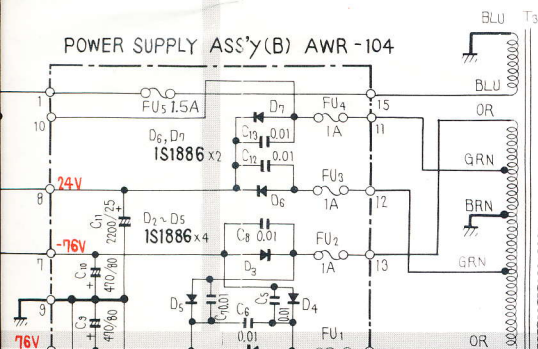

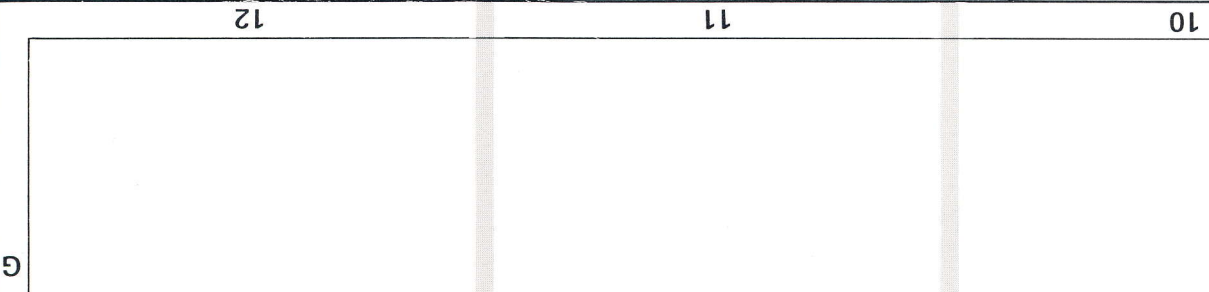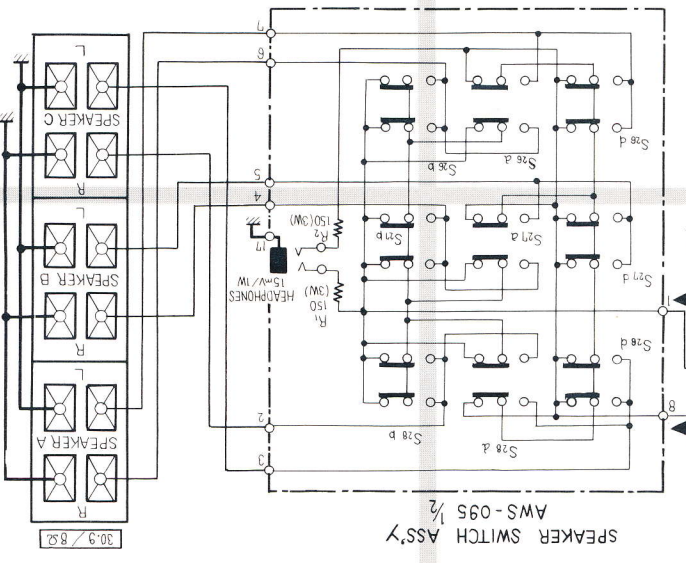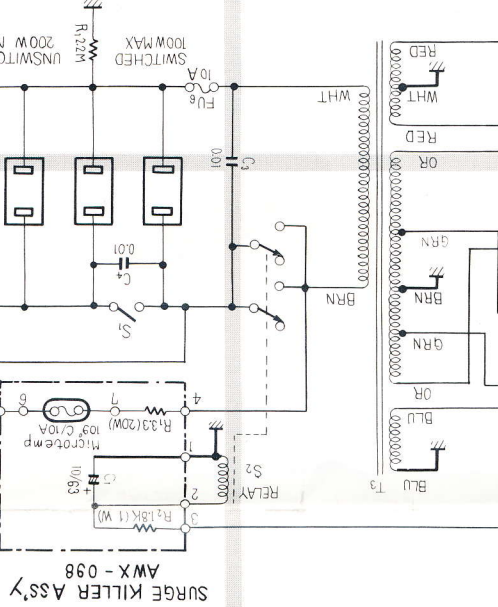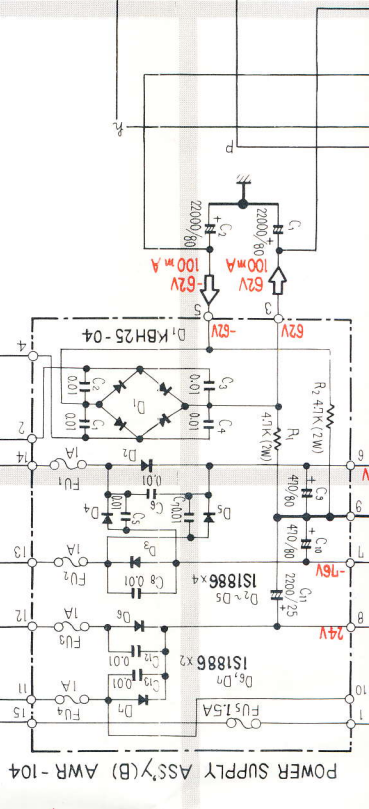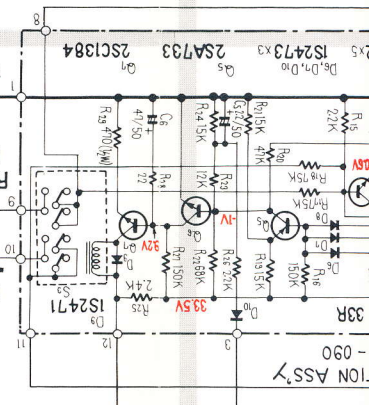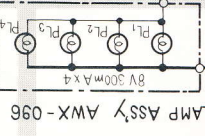

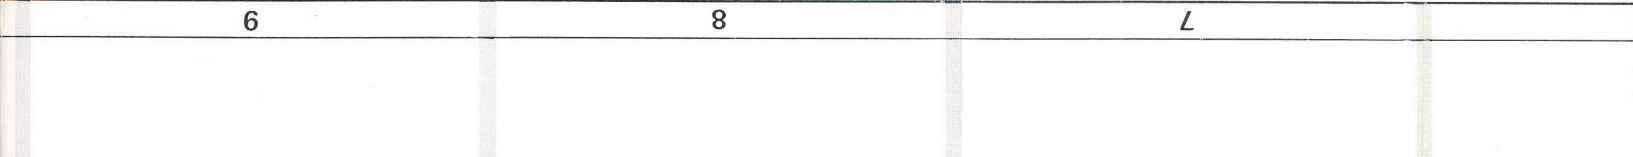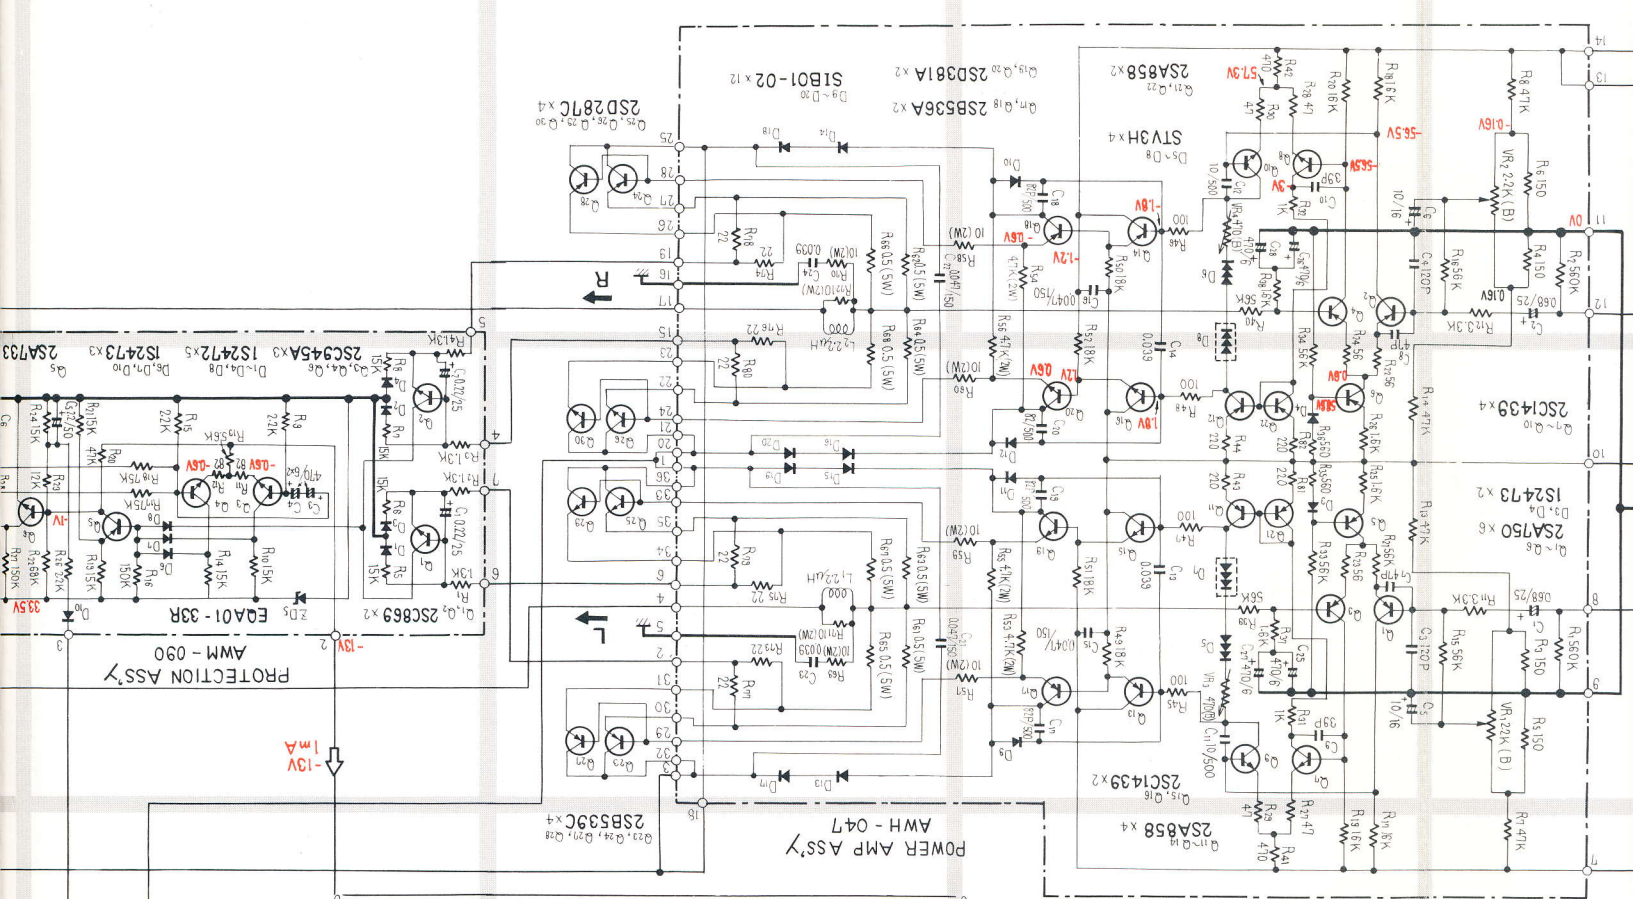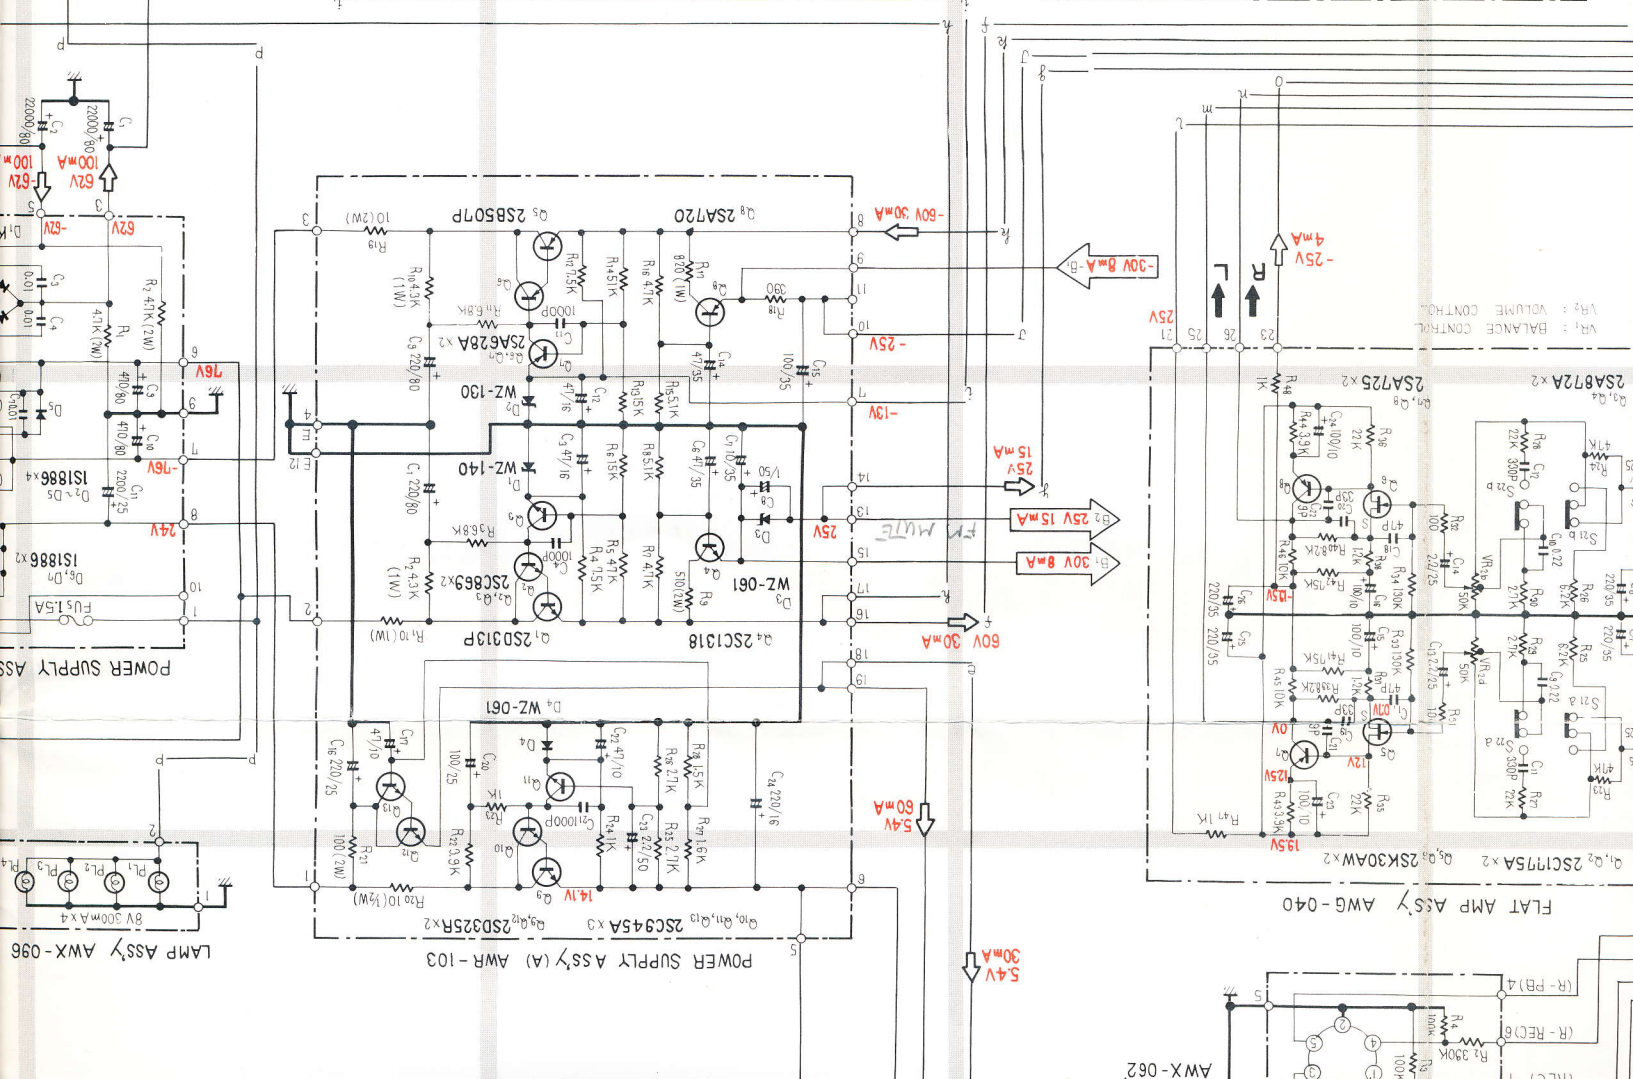

9

8

7

