



SX - 6000

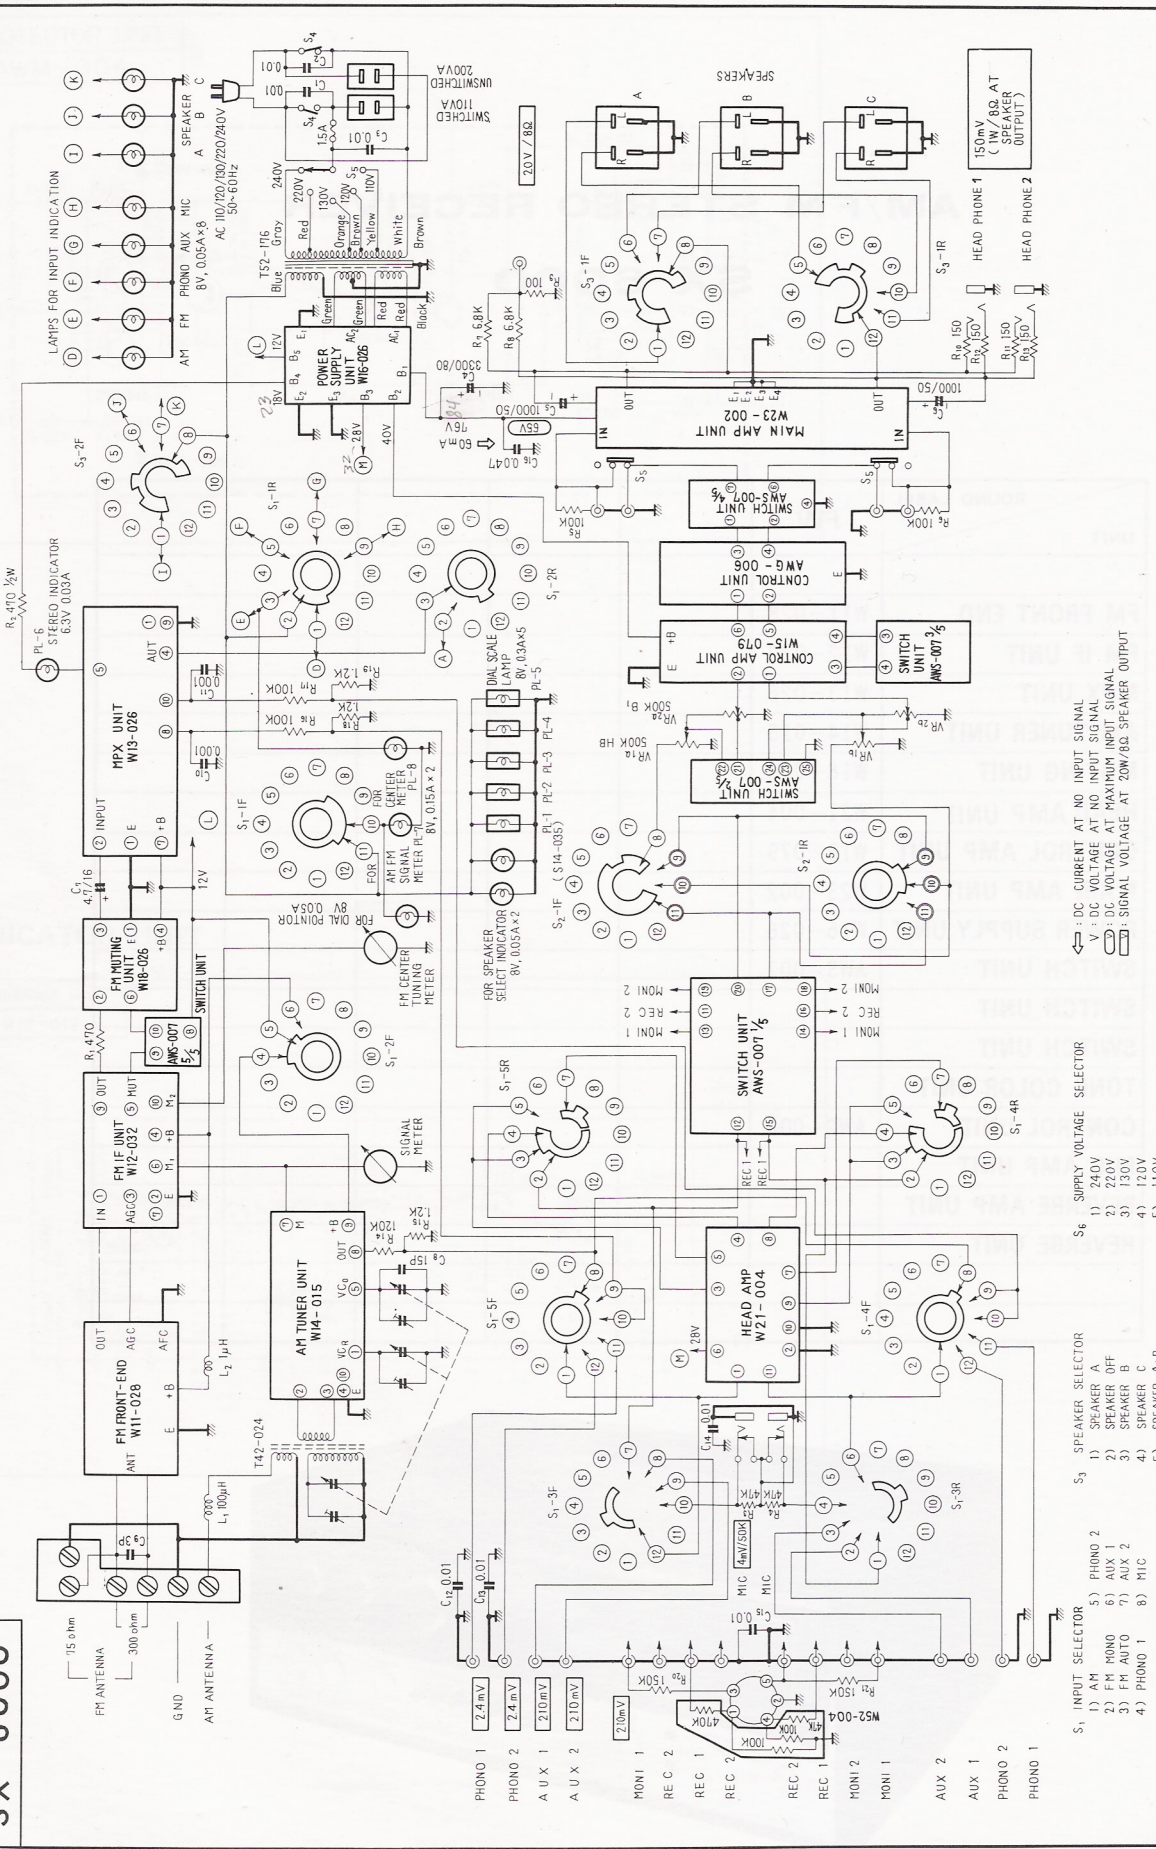


- S1, INPUT SELECTOR**
- 1) AM
 - 2) FM MONO
 - 3) FM AUTO
 - 4) PHONO 1
 - 5) PHONO 2
- S2, MODE SELECTOR**
- 1) STEREO REVERSE
 - 2) STEREO NORMAL
 - 3) MONO L
 - 4) MONO R
 - 5) MONO L+R
- S3, SPEAKER SELECTOR**
- 1) SPEAKER OFF
 - 2) SPEAKER B
 - 3) SPEAKER C
 - 4) SPEAKER A+B
 - 5) SPEAKER A+B+C
 - 6) SPEAKER B+C
- S4, POWER SWITCH**
- 1) INTERCOUPLED
 - 2) SEPARATED
- S5, PRE & MAIN SELECTOR**
- 1) INTERCOUPLED
 - 2) SEPARATED
- S6, SUPPLY VOLTAGE SELECTOR**
- 1) 400V
 - 2) 240V
 - 3) 120V
 - 4) 120V
 - 5) 110V
- Legend:**
- ← DC CURRENT AT NO. INPUT SIGNAL
 - V DC VOLTAGE AT NO. INPUT SIGNAL
 - V DC VOLTAGE AT MAXIMUM INPUT SIGNAL
 - ⊖ DC VOLTAGE AT 20W/8Ω SPEAKER OUTPUT

FM FRONT END

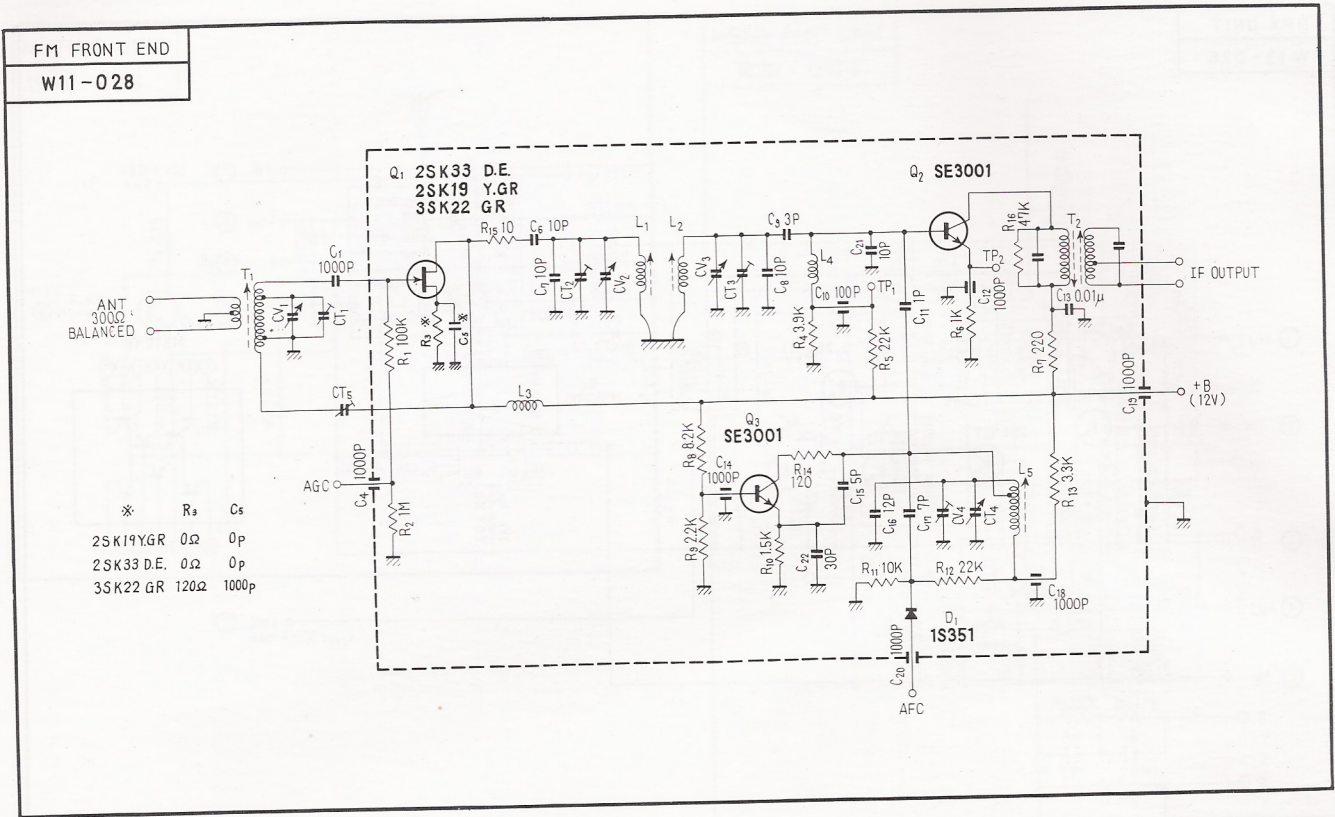


FM IF UNIT

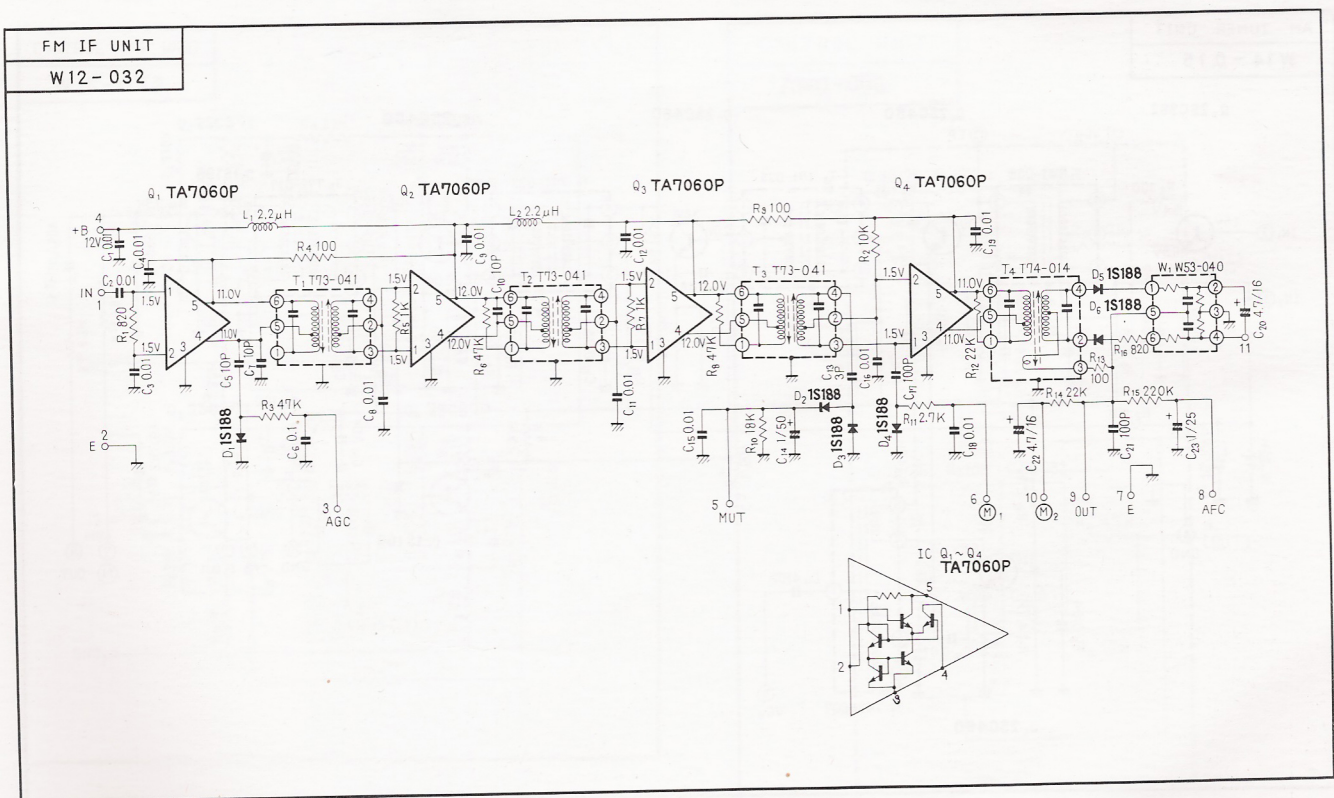


MPX UNIT

MPX UNIT
W 13 - 026

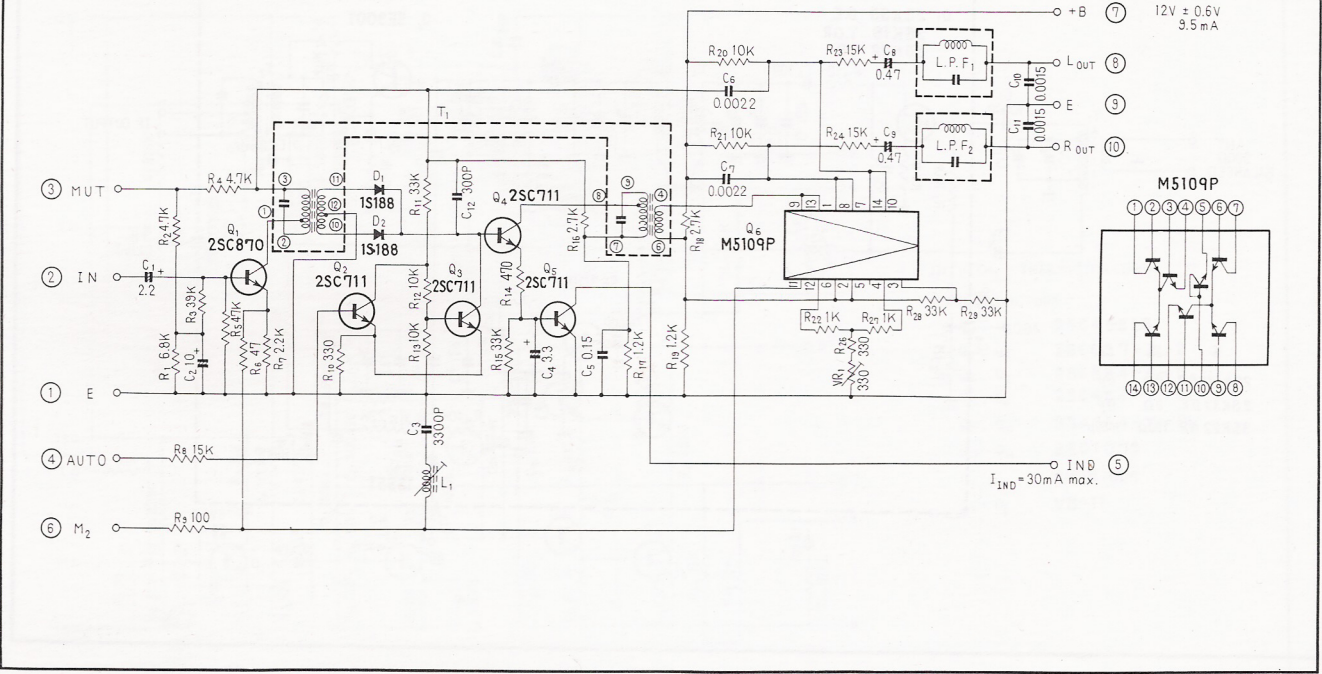


AM TUNER UNIT


AM TUNER UNIT
W 14 - 015

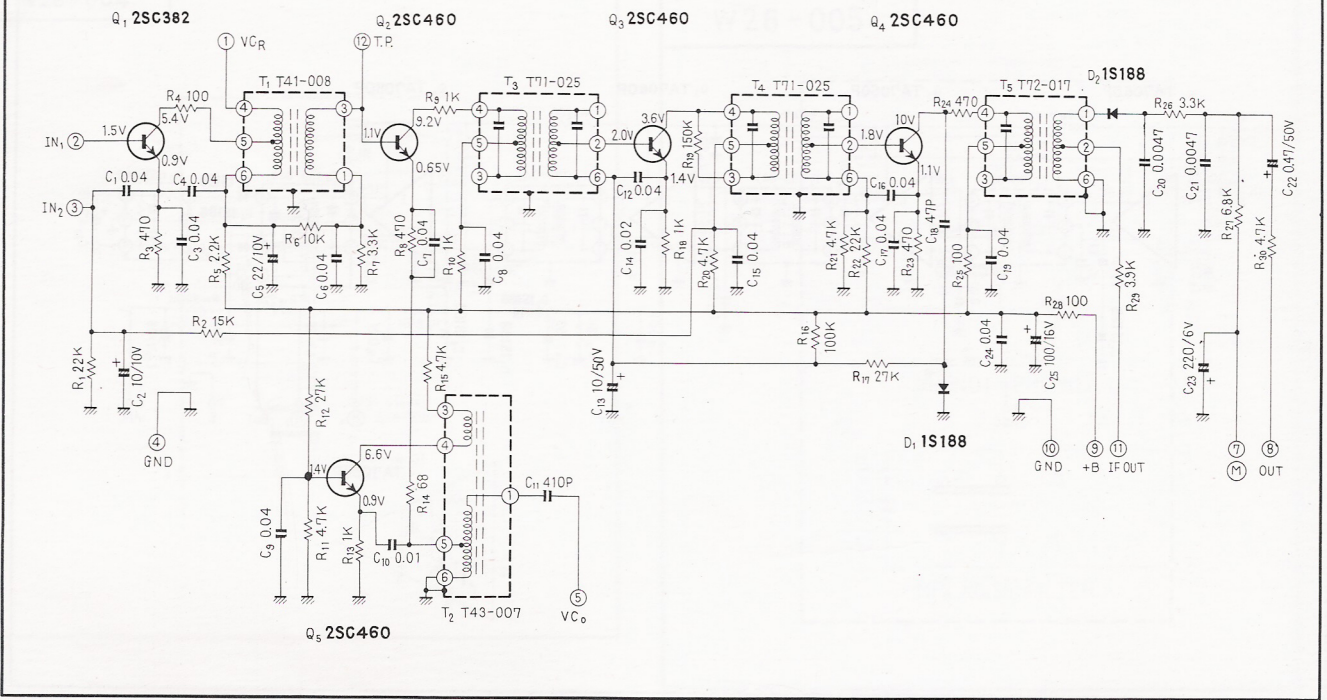


MUTING UNIT

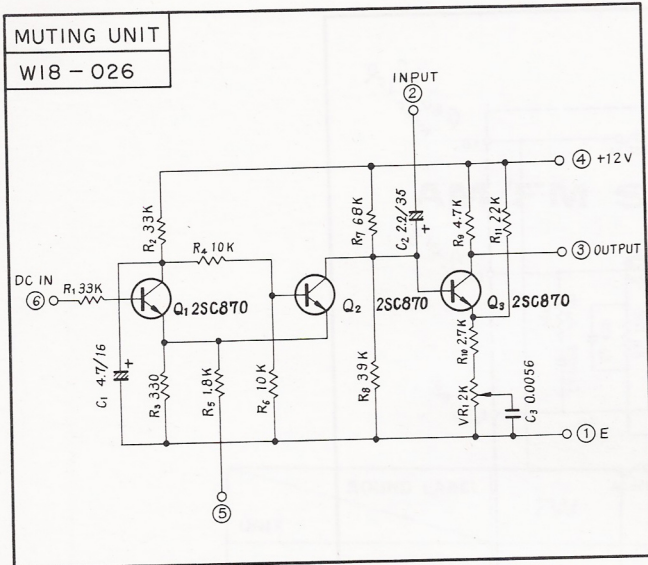


HEAD AMP UNIT

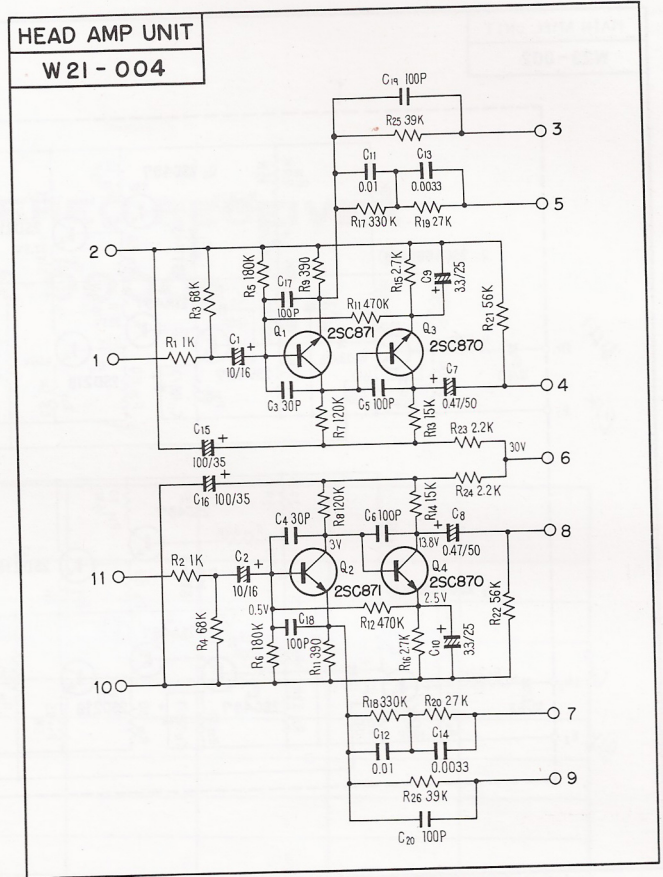


CONTROL AMP UNIT

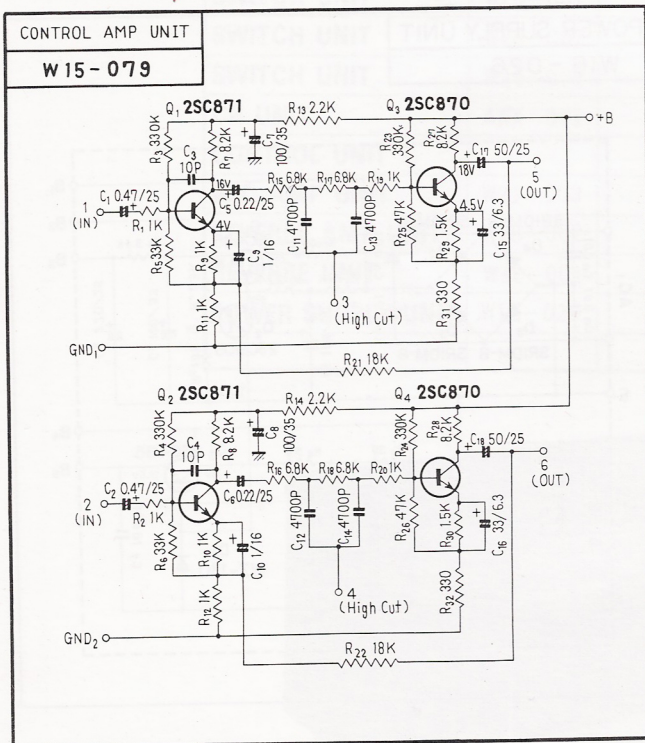


CONTROL UNIT

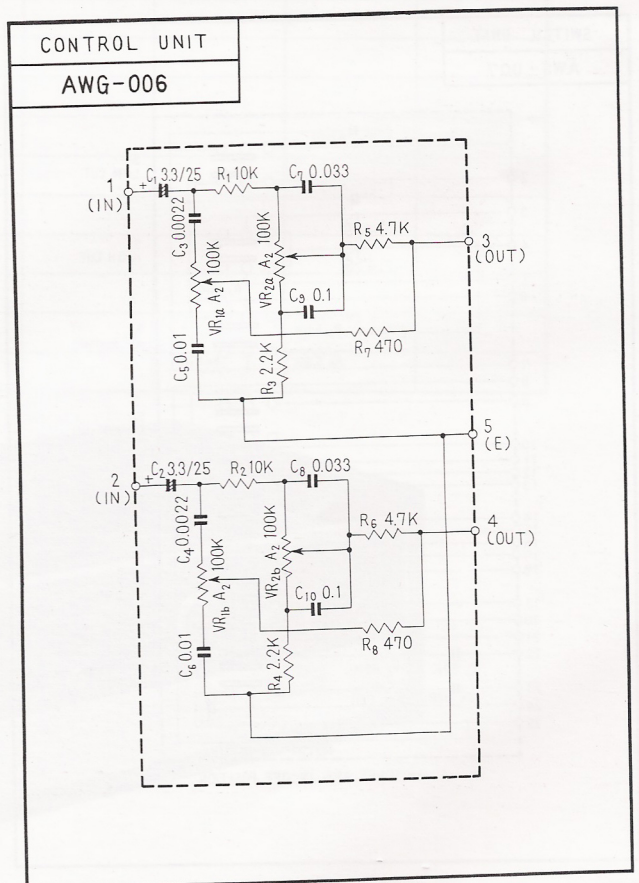

MAIN AMP UNIT

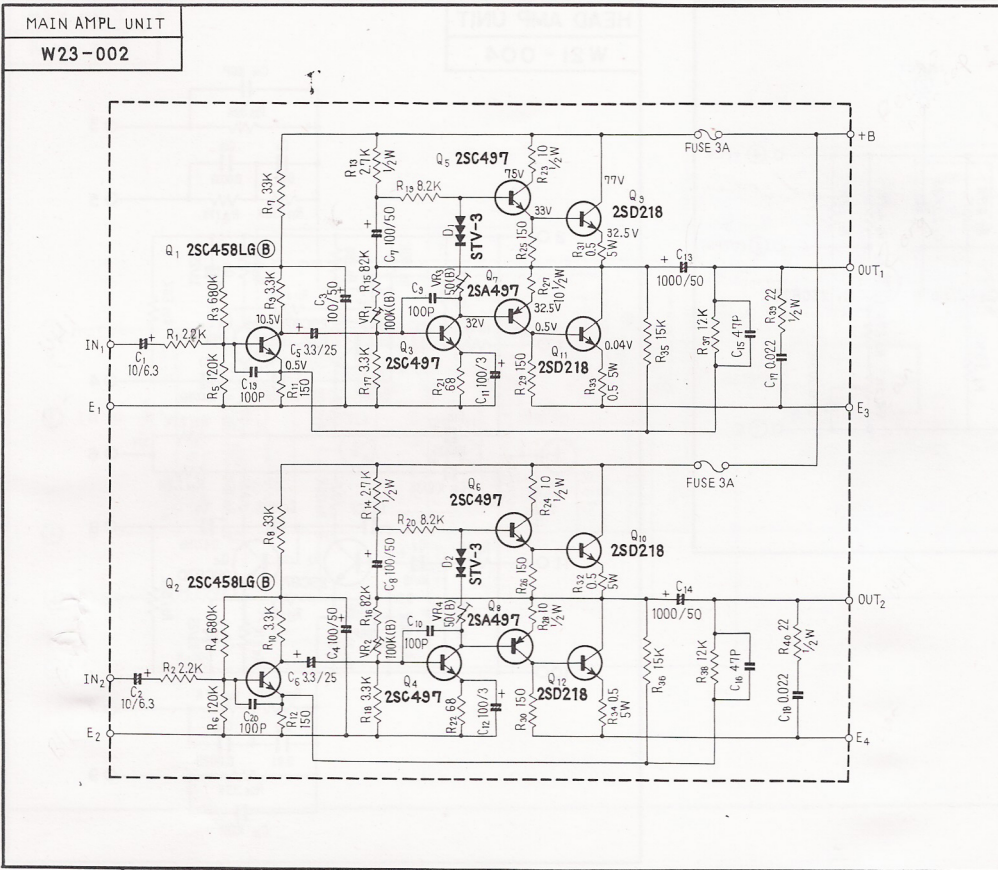

SWITCH UNIT

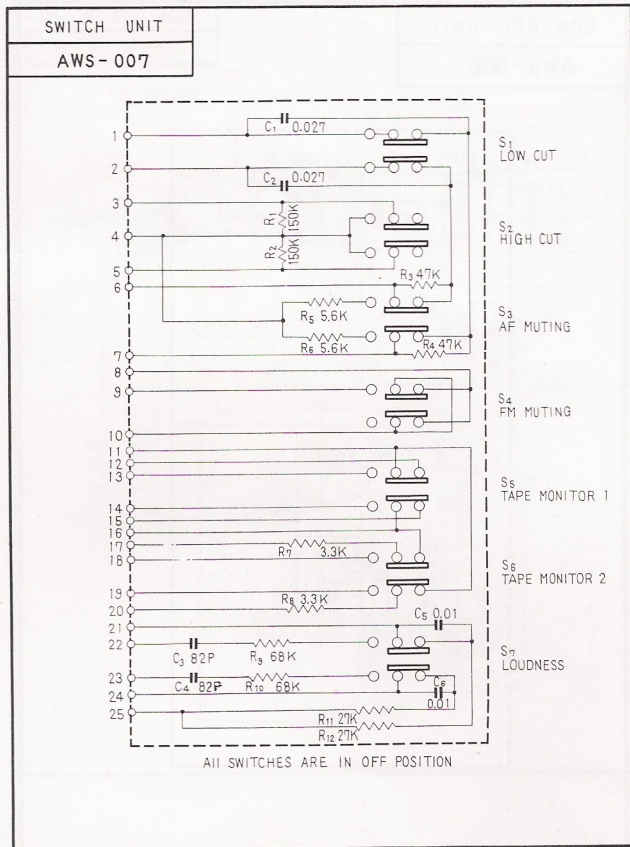

POWER SUPPLY UNIT

